



Intellect

Suprema Integration Module Settings Guide

1. Suprema Integration Module Settings Guide	3
1.1 Introduction into Suprema Integration Module Settings Guide	3
1.2 Supported hardware and licensing of the Suprema integration module	3
1.3 Configuration of the Suprema integration module	4
1.3.1 How to configure the Supreme integration module	4
1.3.2 Activate the Suprema Biometrical ACS integration module	4
1.3.3 Writing users to all Suprema controllers	4
1.3.4 Configure the Suprema Host Controller object	5
1.3.5 Configure the Suprema Host Controller Input object	6
1.3.6 Configure the Suprema Secure IO object	7
1.3.7 Configure the Suprema Secure IO Input object	8
1.3.8 Configure the Suprema Secure IO Relay object	9
1.3.9 Configure the Suprema Slave Controller object	10
1.3.10 Configure the Suprema Slave Controller Door object	11
1.3.11 Configure the Suprema Slave Controller Input object	12
1.3.12 Configure the templates	13
1.3.13 Reading of users and events from Suprema database to the ACFA Intellect software	15
1.4 Working with the Suprema Module	17
1.4.1 Managing the Suprema Host Controller	17
1.4.2 Managing the Suprema Secure IO Relay	17
1.4.3 Managing the Suprema Slave Controller Door	18

Suprema Integration Module Settings Guide

Introduction into Suprema Integration Module Settings Guide

On the page:

- Purpose of the document
- General information about the Suprema integration module

Purpose of the document

This *Suprema Module Settings Guide* is a reference manual designed for *Suprema* Module configuration technicians. This module is part of an access control system (ACS) built on the *ACFA Intellect* Software System.

This Guide presents the following materials:

1. general information about the *Suprema Biometrical ACS* module;
2. configuration of the *Suprema Biometrical ACS* module;
3. working with the *Suprema Biometrical ACS* module.

General information about the Suprema integration module

The *Suprema* Module is a component of an ACS built on the *ACFA Intellect* Software System. It was designed to perform the following functions:

1. Configuration of the *Suprema Biometrical ACS* (manufactured by Suprema Inc.);
2. Interaction between the *Suprema Biometrical ACS* and the *ACFA Intellect* Software System (monitoring, control).



Note:

Detailed information about the Suprema Biometrical ACS is presented in the official documentation for that system.

Before configuring the *Suprema* Module, the following actions must be performed:

1. Install the *Suprema Biometrical ACS* hardware on the protected territory (see the *Suprema* reference documentation).
2. Connect the *Suprema* ACS hardware to the Server.
3. Install *BioStar 1_8* onto the Server (available on the official website of the manufacturer of *Suprema* ACS).
4. Configure the connection of *Suprema* ACS to the *BioStar 1_8* Server (see the reference documentation for the configuration utility of the *BioStar 1_8*).

Supported hardware and licensing of the Suprema integration module

Manufacturer	Suprema 17F Parkview Office Tower, Jeongja, Bundang, Seongnam, Gyeonggi, 463-863 Republic of Korea www.supremainc.com
Integration type	SDK
Equipment connection	Ethernet

Supported equipment

Equipment	Function	Features
XPass	Controller	Max. number of users: 40000 Inputs: 2 Relay: 1 Ethernet interface

X-Station		Max. number of users: 200000 Inputs: 2 Relay: 1
BioEntry Plus	Fingerprint scanner	Max. number of users: 5000 Inputs: 4 Relay: 1 Ethernet interface
SecureIO		

Protection

Parent object and controllers.

Configuration of the Suprema integration module


How to configure the Suprema integration module

The *Suprema* module is configured in the following order:

1. Activate the *Suprema Biometrical ACS* integration module.
2. Configure the *Suprema Host Controller* object.
3. Configure the *Suprema Host Controller Input* object.
4. Configure the *Suprema Secure IO* object.
5. Configure the *Suprema Secure IO Input* object.
6. Configure the *Suprema Secure IO Relay* object.
7. Configure the *Suprema Slave Controller* object.
8. Configure the *Suprema Slave Controller Door* object.
9. Configure the *Suprema Slave Controller Input* object.
10. Configure the template.


Activate the Suprema Biometrical ACS integration module

To activate the *Suprema Biometrical ACS* integration module, a **Suprema Biometrical ACS** object must be created based on a **Computer** object on the **Hardware** tab of the **System Settings** dialog.

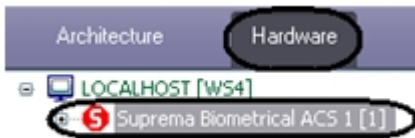

Writing users to all Suprema controllers

To write users to all controllers click the **Write Users** button on the **Suprema Biometrical ACS** object's settings panel.

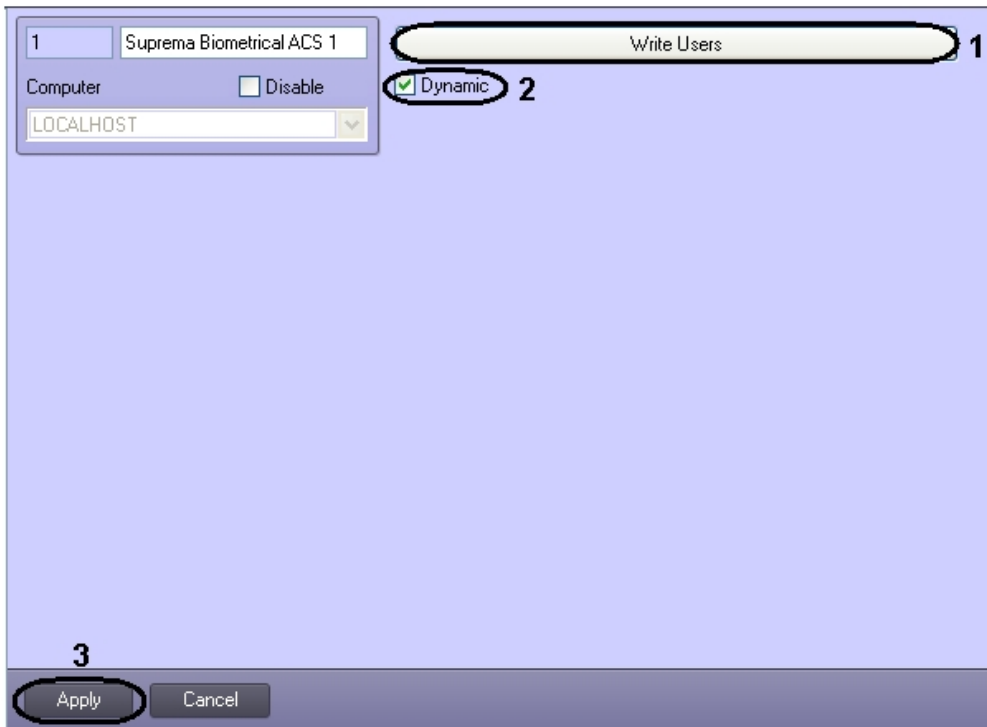


To enable the dynamical sending of users set the **Dynamic** checkbox (2).

To save changes click the **Apply** button (3).

Configure the Suprema Host Controller object

The *Suprema Host Controller* object is configured on the **Suprema Host Controller** object's settings panel. This object is created based on a **Suprema Biometrical ACS** object on the **Hardware** tab of the **System Settings** dialog.

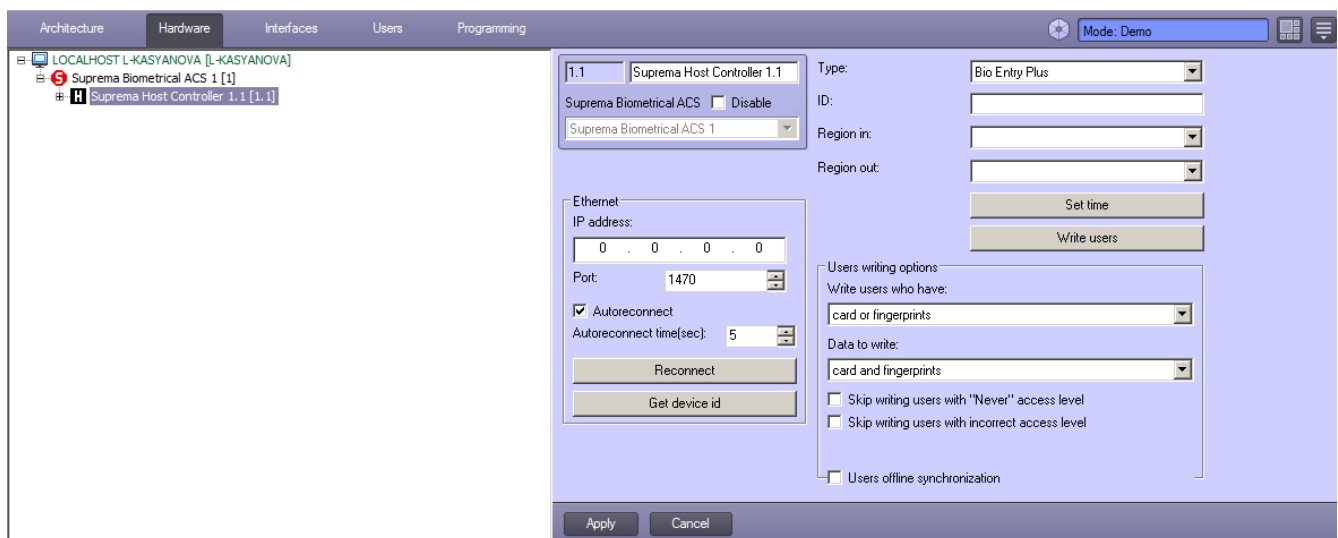

To configure the *Suprema Host Controller* do the following:

1. Go to the **Suprema Host controller** object's settings panel.

2. Enter the controller's IP address in the **IP-address:** field (1).
3. Enter the controller's connection port in the **Port** field (2).



Attention!

If connection with the Suprema Host Controller is lost the Intellect software package won't reconnect to it automatically. It is required to open the Intellect software package settings, select a host controller and click the **Reconnect** button. Also you can send the **Reconnect** command from the **Map** interface object.

Check the **Autoreconnect** box that enables automatic reconnect if the connection with the controller is lost in the time period specified in the **Autoreconnect time** field (3).

4. Click the **Reconnect** button to reconnect controller by Ethernet (4).
5. To get the ID of controller connected via Ethernet click the **Get device id** button (5).
6. From the **Type:** drop-down list select the type of the controller (6). The following types are available:
 - a. Bio Entry Plus – finger and card can be used;
 - b. XPass – only card can be used;
 - c. X-station – card and password can be used.
7. Enter the hardware address of a connected controller in the **ID:** field (7).
8. From the **Region In:** drop-down list select the Area located in the site of exit through this reader (8).
9. From the **Region Out:** drop-down list select the Area located in the site of entry through this reader (9).



Note.


Region In and **Region Out** fields must be filled if the *Time and Attendance* interface module is used. Otherwise, leave these fields empty.

10. Click the **Set time** button to set time to the controller (10).
11. Click the **Write Users** button to write users to the controller (11).
12. Specify options of users writing:
 - a. From the **Write users who have:** drop-down list select a parameter by which users for writing will be selected (12).
 - b. From the **Data to write:** drop-down list select data which will be written (13).
 - c. Set the **Skip writing users with "Never" access level** checkbox to write users with the "Never" access level (14).
 - d. Set the **Skip writing users with incorrect access level** checkbox to write users with invalid or missed access level (15).
 - e. Set the **Offline synchronization** checkbox to maintain the current information about users in controller in spite of breaking the connection (16).
13. To save changes click the **Apply** button (17).

This completes the configuration of the *Suprema Host Controller* object.


Configure the Suprema Host Controller Input object

The *Suprema Host Controller Input* object is configured on the **Suprema Host Controller Input** object's settings panel. This object is created based on a **Suprema Host Controller** object on the **Hardware** tab of the **System Settings** dialog.

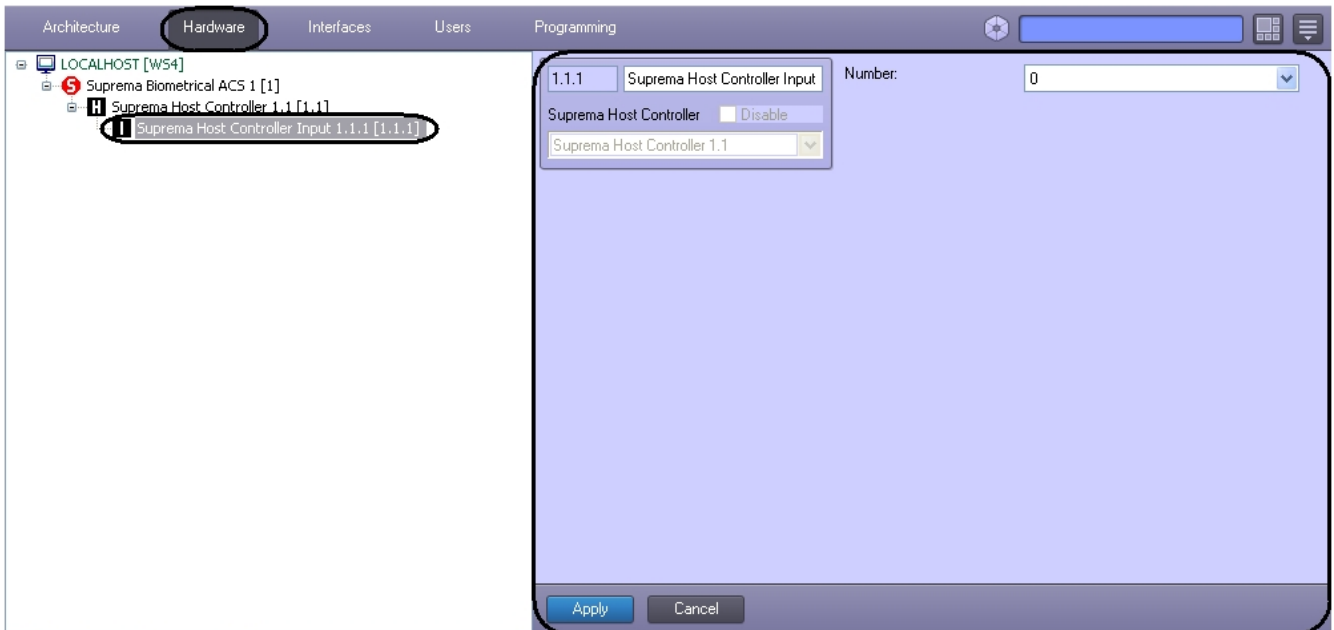

To configure the *Suprema Host Controller Input* do the following:

1. Go to the **Suprema Host Controller Input** object's settings panel.

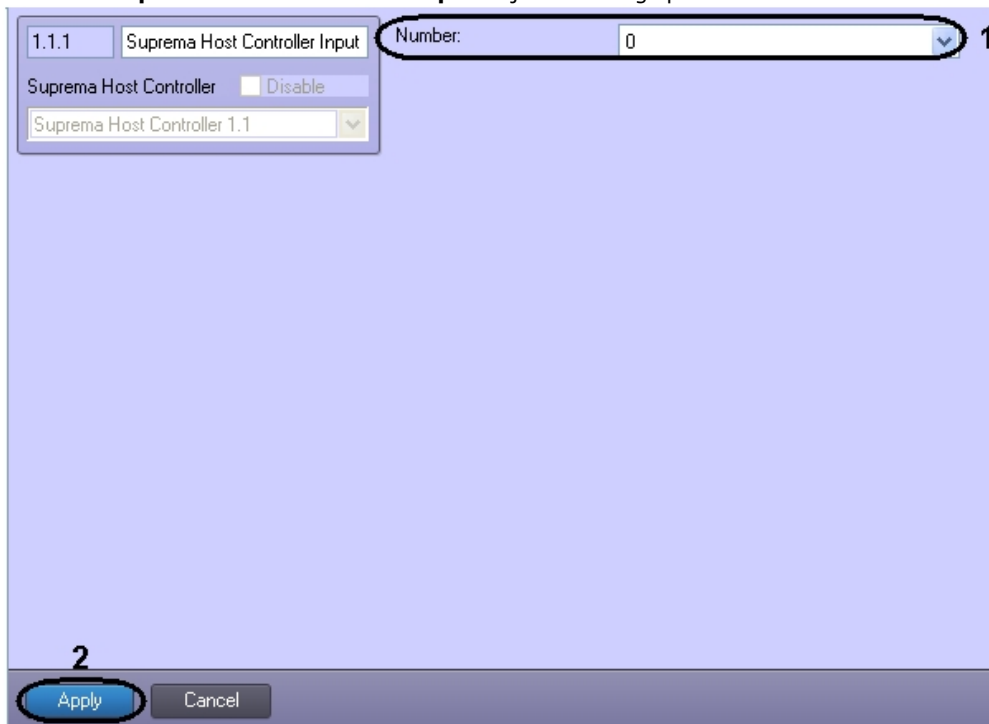

2. From the **Number:** drop-down list select the number of the controller input (1).
3. To save changes click the **Apply** button (2).

This completes the configuration of the *Suprema Host Controller Input* object.


Configure the Suprema Secure IO object

The *Suprema Secure IO* object is configured on the **Suprema Secure IO** object's settings panel. This object is created based on a **Suprema Host Controller** object on the **Hardware** tab of the **System Settings** dialog.



To configure the *Suprema Secure IO* do the following:

1. Go to the **Suprema Secure IO** object's settings panel.

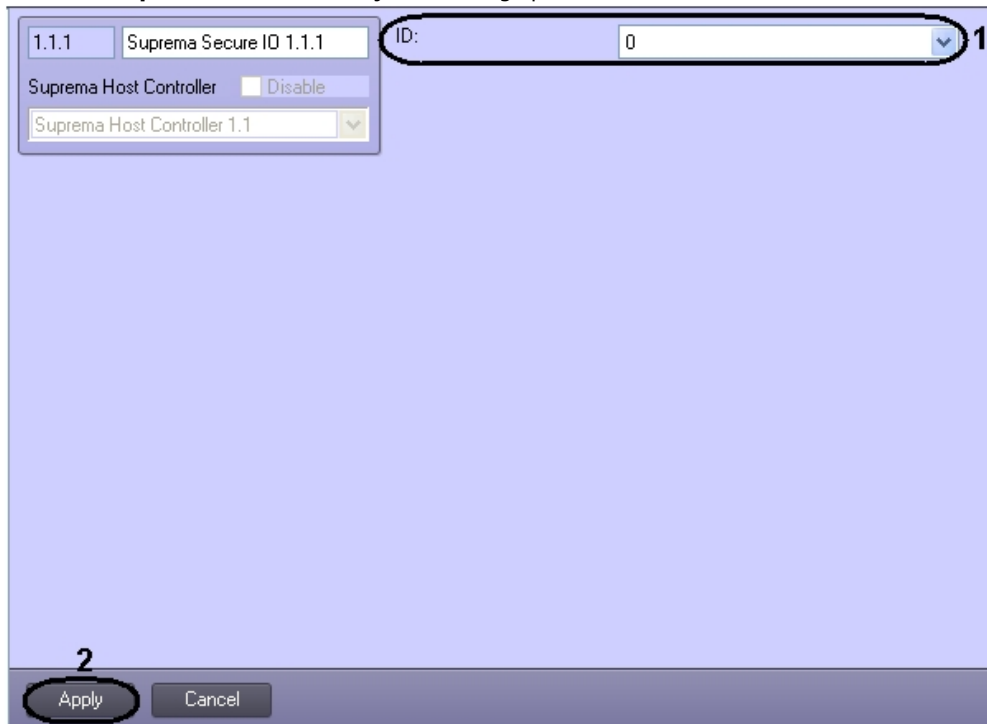


2. From the **Number:** drop-down list select the number of the controller (**1**).
3. To save changes click the **Apply** button (**2**).

This completes the configuration of the *Suprema Secure IO* object.


Configure the Suprema Secure IO Input object

The *Suprema Secure IO Input* object is configured on the **Suprema Secure IO Input** object's settings panel. This object is created based on a **Suprema Secure IO** object on the **Hardware** tab of the **System Settings** dialog.

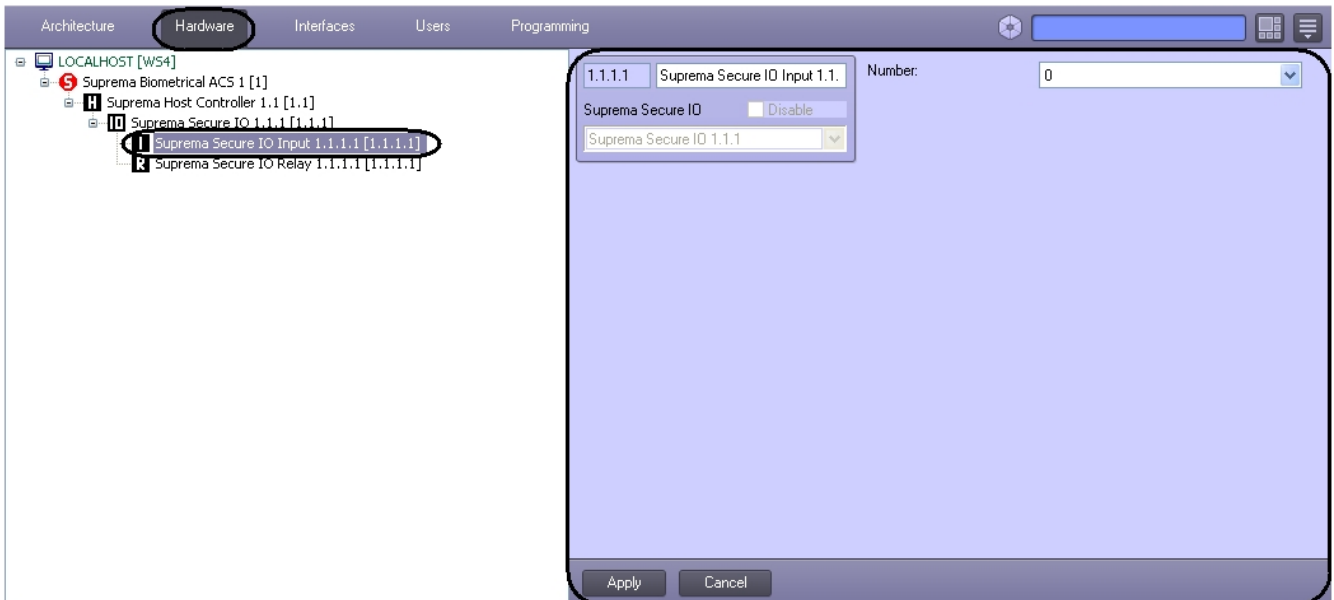

To configure the *Suprema Secure IO Input* do the following:

1. Go to the **Suprema Secure IO Input** object's settings panel.

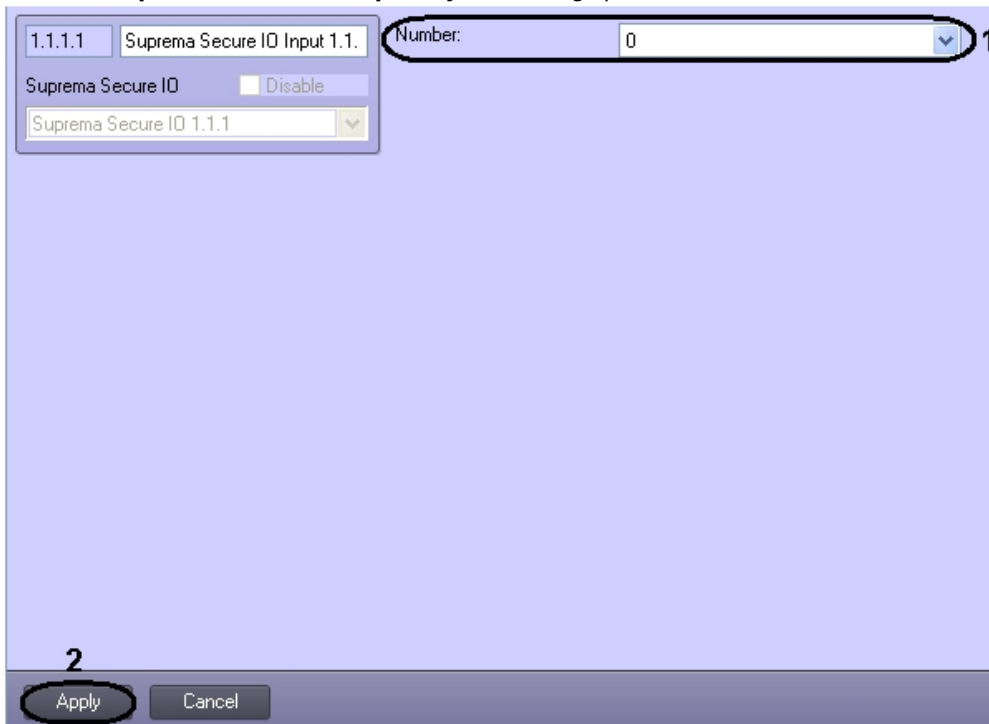


2. From the **Number:** drop-down list select the number of the controller input (1).
3. To save changes click the **Apply** button (2).

This completes the configuration of the *Suprema Secure IO Input* object.


Configure the Suprema Secure IO Relay object

The *Suprema Secure IO Relay* object is configured on the **Suprema Secure IO Relay** object's settings panel. This object is created based on a **Suprema Secure IO** object on the **Hardware** tab of the **System Settings** dialog.

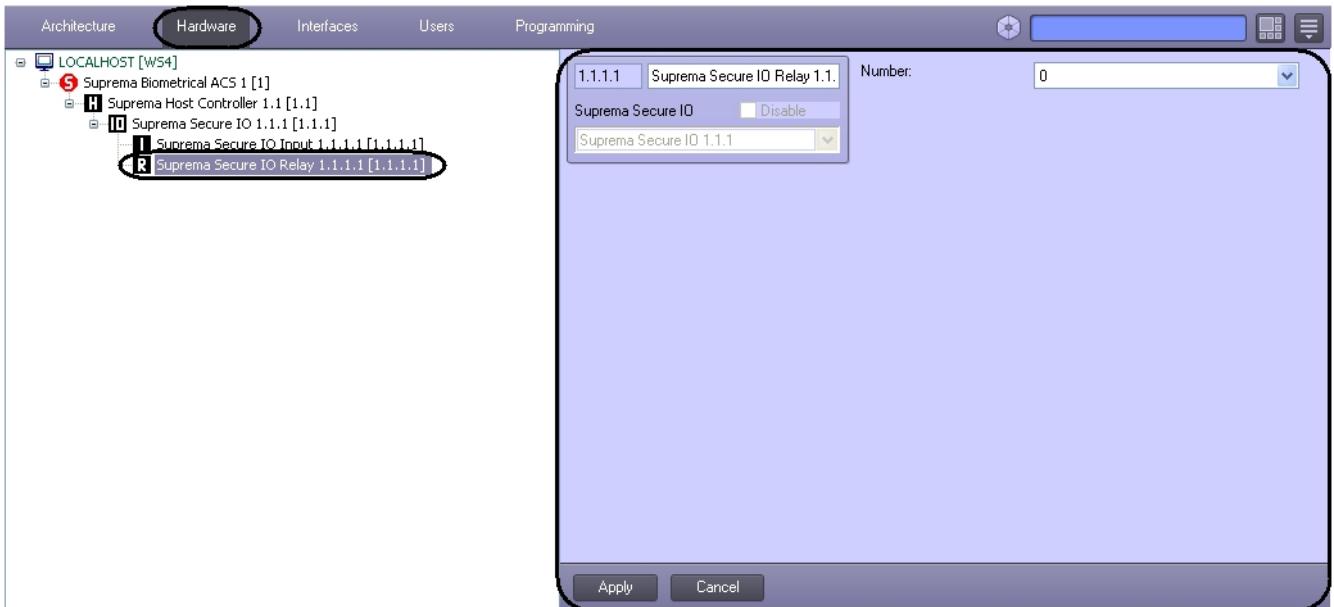

To configure the *Suprema Secure IO Relay* do the following:

1. Go to the **Suprema Secure IO Relay** object's settings panel.

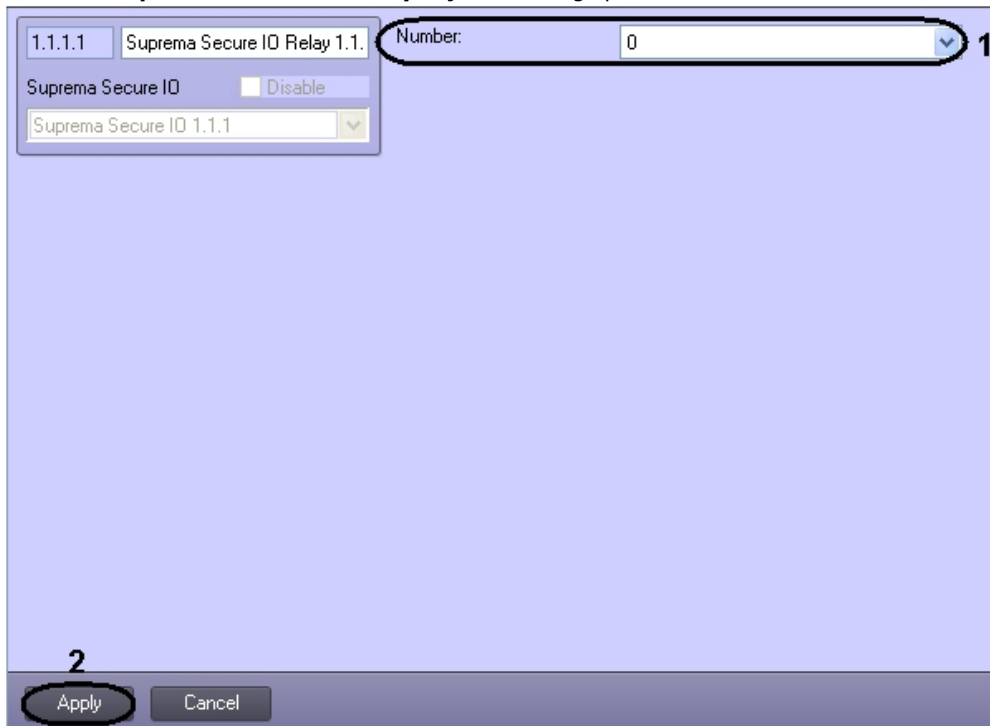

2. From the **Number:** drop-down list select the number of the controller input (1).
3. To save changes click the **Apply** button (2).

This completes the configuration of the *Suprema Secure IO Relay* object.


Configure the Suprema Slave Controller object

The *Suprema Slave Controller* object is configured on the **Suprema Slave Controller** object's settings panel. This object is created based on a **Suprema Host Controller** object on the **Hardware** tab of the **System Settings** dialog.



To configure the *Suprema Slave Controller* do the following:

1. Go to the **Suprema Slave controller** object's settings panel.

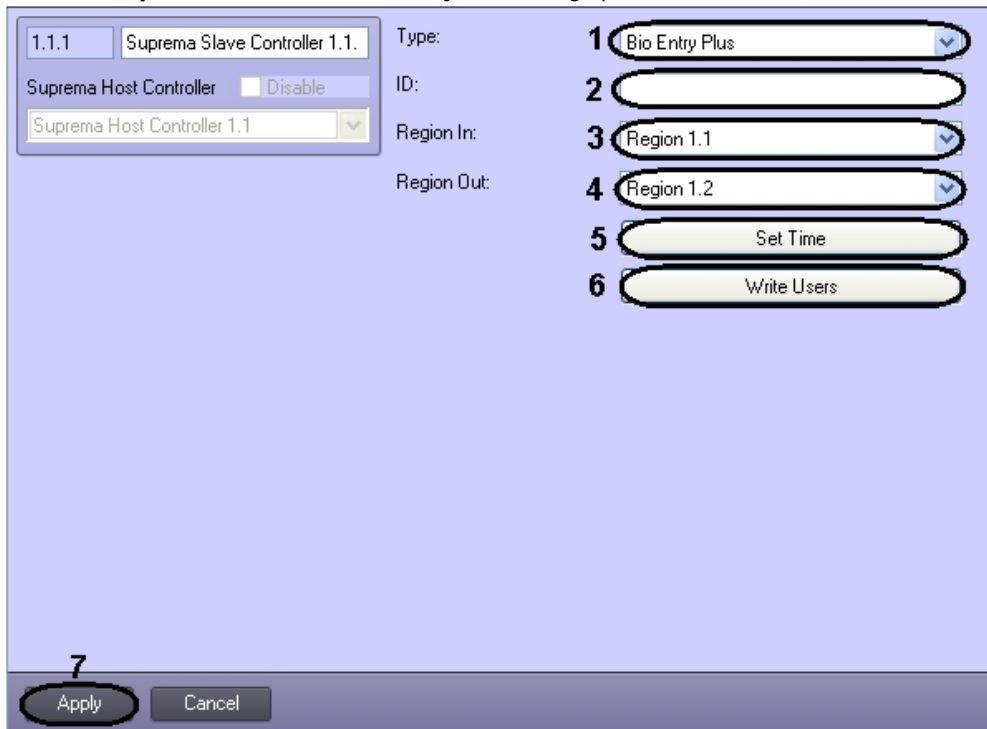


2. From the **Type:** drop-down list select the type of the controller (1). The following types are available:
 - a. Bio Entry Plus – finger and card can be used;
 - b. XPass – only card can be used
 - c. X-station – card and password can be used.
3. Enter the hardware address of a connected controller in the **ID:** field (2).
4. From the **Region In:** drop-down list select the Area located in the site of exit through this reader (3).
5. From the **Region Out:** drop-down list select the Area located in the site of entry through this reader (4).
6. Click the **Set time** button to set time to the controller (5).
7. Click the **Write Users** button to write users to the controller (9).
8. To save changes click the **Apply** button (10).

This completes the configuration of the *Suprema Slave Controller* object.


Configure the Suprema Slave Controller Door object

The *Suprema Slave Controller Door* object is configured on the **Suprema Slave Controller Door** object's settings panel. This object is created based on a **Suprema Slave Controller** object on the **Hardware** tab of the **System Settings** dialog

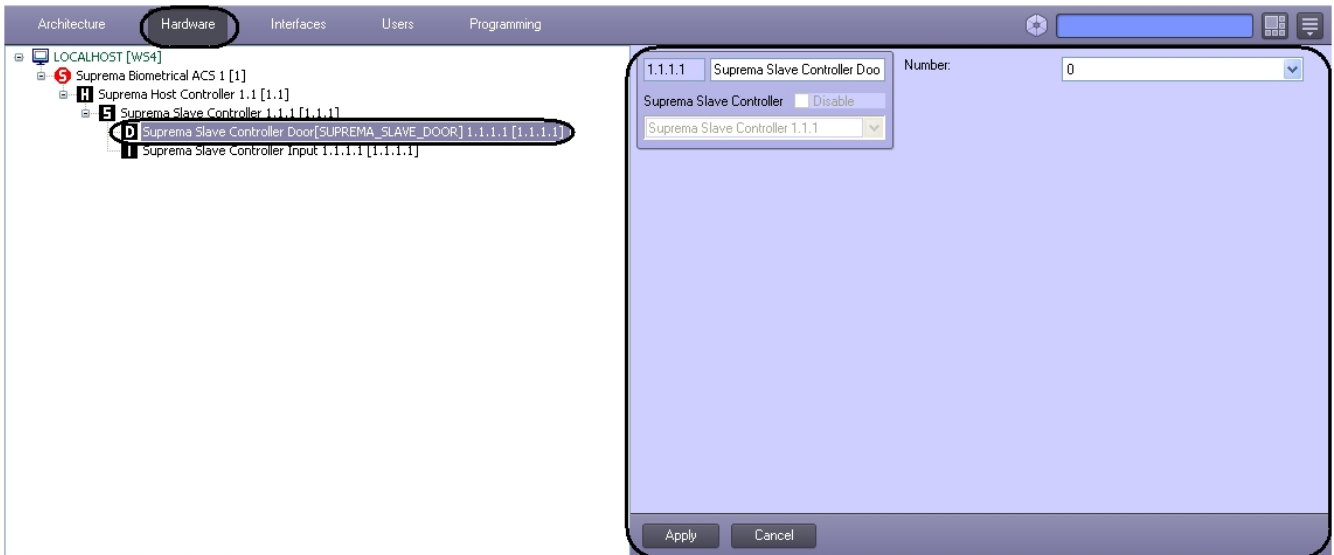

To configure the *Suprema Slave Controller Door* do the following:

1. Go to the **Suprema Slave Controller Door** object's settings panel.

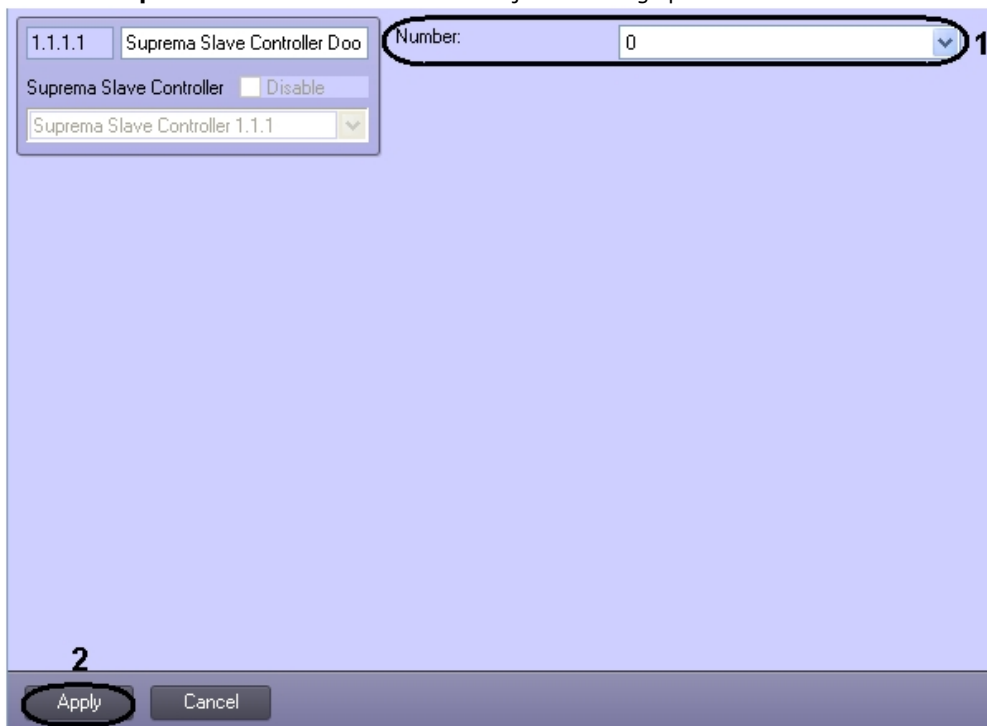


2. From the **Number:** drop-down list select the number of the door (1).
3. To save changes click the **Apply** button (2).

This completes the configuration of the *Suprema Slave Controller Door* object.


Configure the Suprema Slave Controller Input object

The *Suprema Slave Controller Input* object is configured on the **Suprema Slave Controller Input** object's settings panel. This object is created based on a **Suprema Slave Controller** object on the **Hardware** tab of the **System Settings** dialog

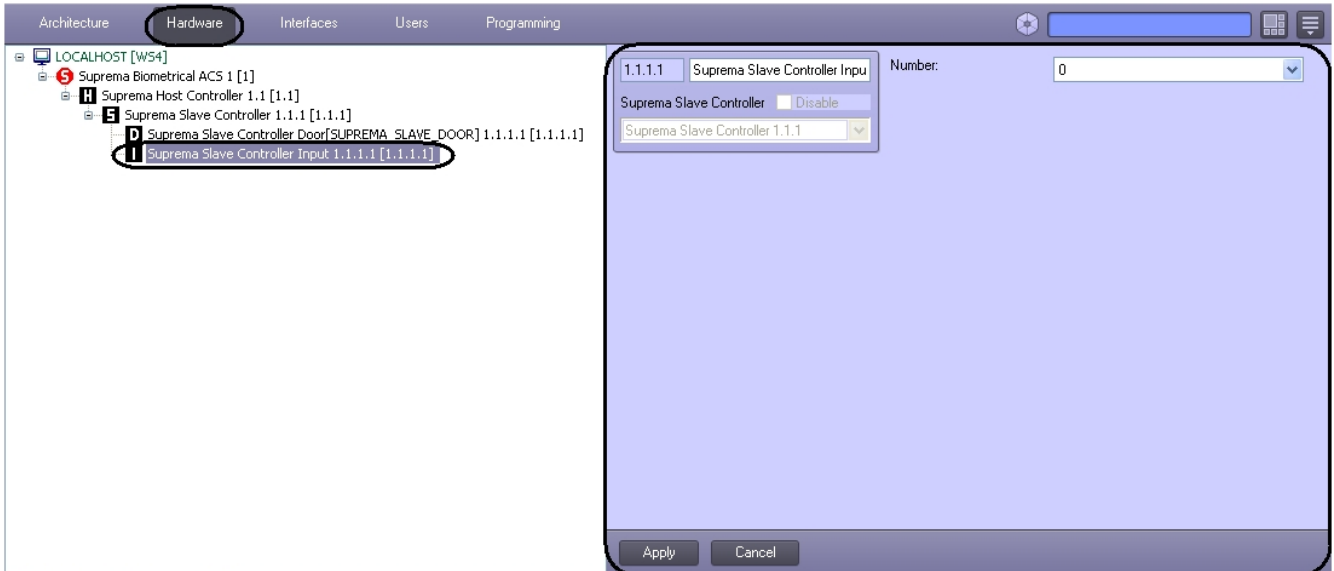

To configure the *Suprema Slave Controller Input* do the following:

1. Go to the **Suprema Slave Controller Input** object's settings panel.

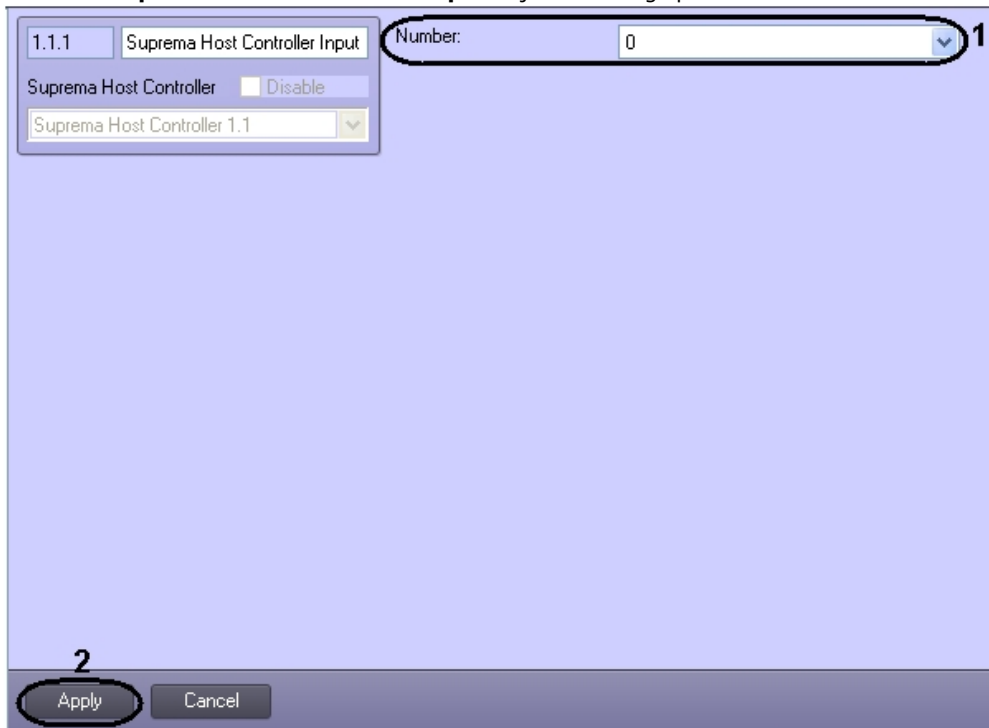


2. From the **Number:** drop-down list select the number of the controller input (**1**).
3. To save changes click the **Apply** button (**2**).

This completes the configuration of the *Suprema Slave Controller Input* object.


Configure the templates

The *Suprema Templates* object is configured on the **Suprema Templates** object's settings panel. This object is created based on a **Suprema Biometrical ACS** object on the **Hardware** tab of the **System Settings** dialog.

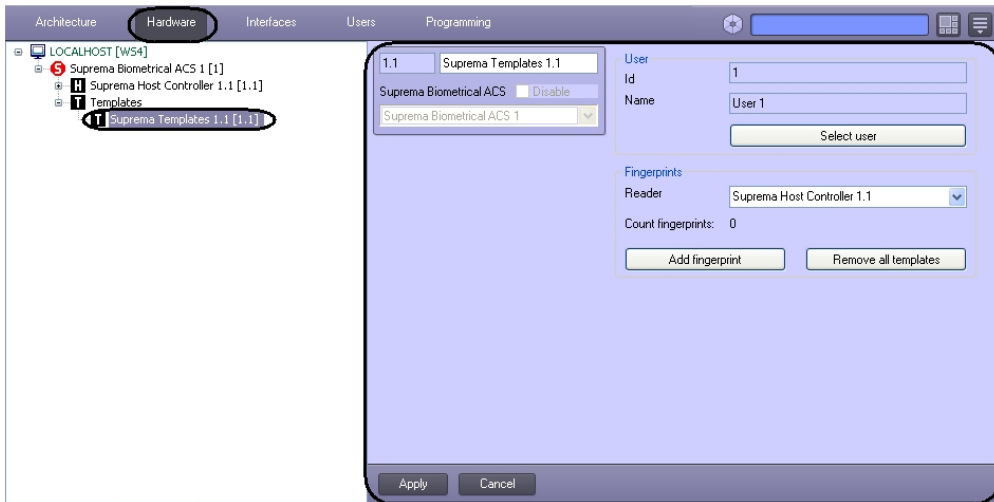


To configure the *Suprema Templates* do the following:

1. Go to the **Suprema Templates** object's settings panel.

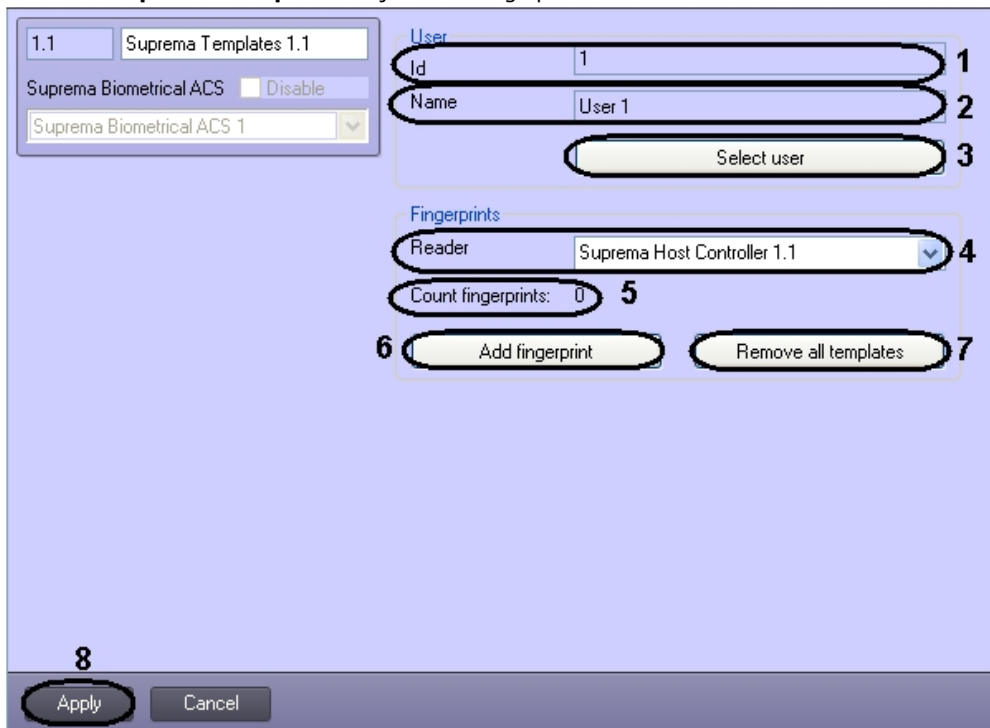

2. Click the **Select user** button to add a user. As a result the **Dialog** window will open. It is possible to search users by ID or name. Enter the user ID in the **Id:** field and click the **Search** button near the Id: field (1). When search is completed all users with such id will be displayed in the list (3). To search users by name enter the name in the **Name:** field and click the **Search** button near this field (2). When search is completed all users with such name will be displayed in the list (3).

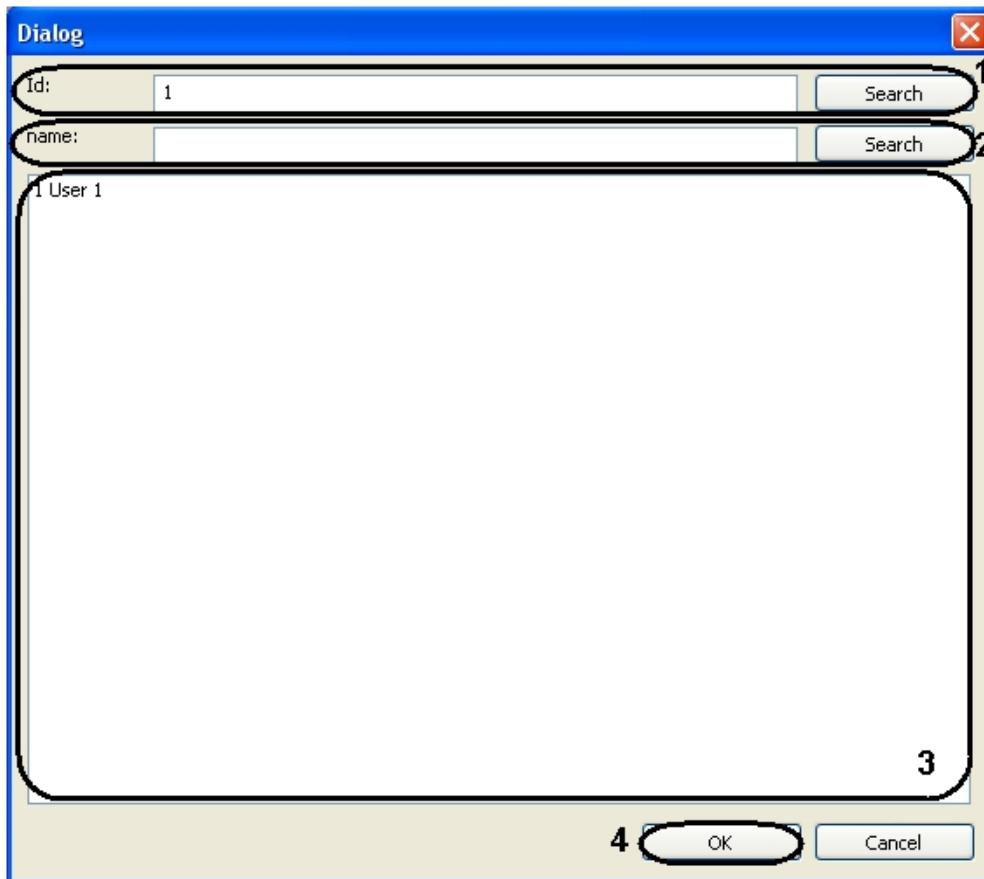

From the list of found users select the required user and click **OK** button.


As a result the ID and name of selected user will be displayed in the corresponding fields on the settings panel of the **Suprema Templates** object (1, 2).

3. From the **Reader** drop-down list select the controller by means of which the fingerprints adding will be performed (4).
4. In the **Count fingerprints:** field the number of added fingerprints is displayed (5).
5. Click the **Add fingerprint** button to save fingerprint to the database (6).
6. Click the **Remove all templates** to remove templates from the database (7).
7. To save changes click the **Apply** button (8).



Note

If the *Suprema* integration module is used together with the *Access Manager* module, the additional **Suprema Bypass Card** parameter (Yes/No) will be assigned to the user in *Access Manager* after the template is configured. This parameter corresponds to the *Bypass* flag of the *Card* tab in **Suprema Biometrical ACS** user settings. If this parameter is set to *Yes*, the user will be able to pass either by card, or by fingerprint. Otherwise, both the card and fingerprint will be required.

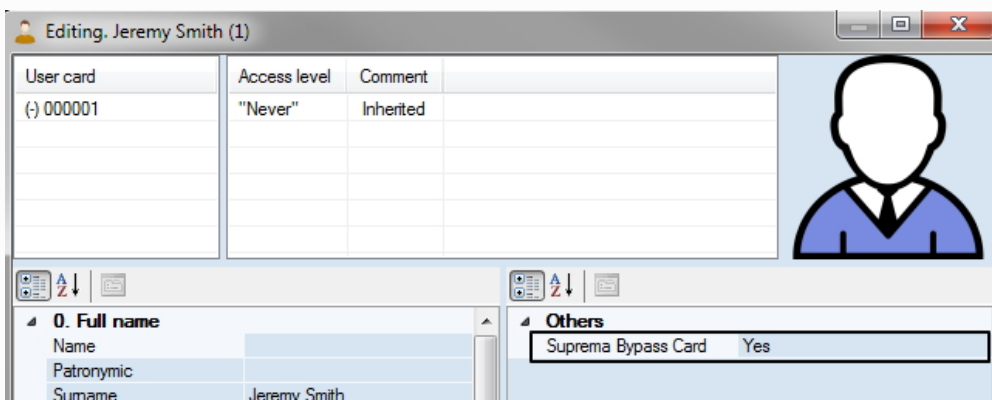


This completes the configuration of the *Suprema Templates* object.

Reading of users and events from Suprema database to the ACFA Intellect software


It's possible to import users and get events from the *Suprema* vendor software.

**Attention!**


Buttons for import of users and getting of events from the *Suprema* database are hidden on default. To display these buttons create the string parameter with the RabbitHole name and with value 1 in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\Suprema registry section.

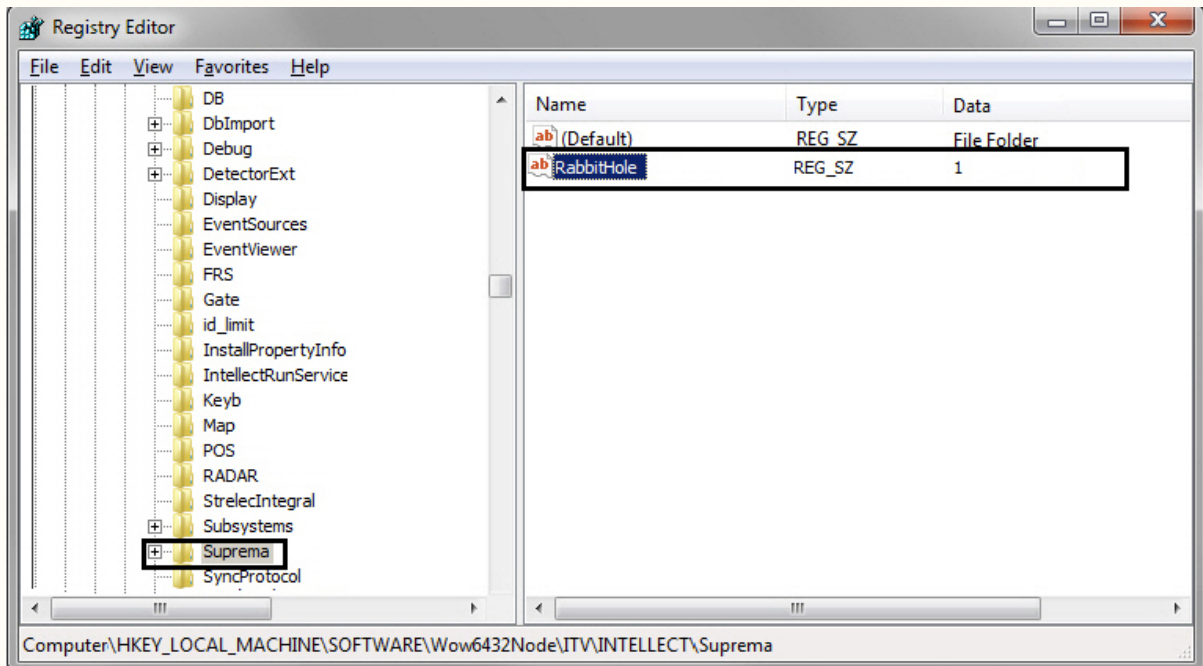


1. To import users from the *Suprema* database click the **Import users** button on the settings panel of the **Suprema Biometrical ACS** object (1).

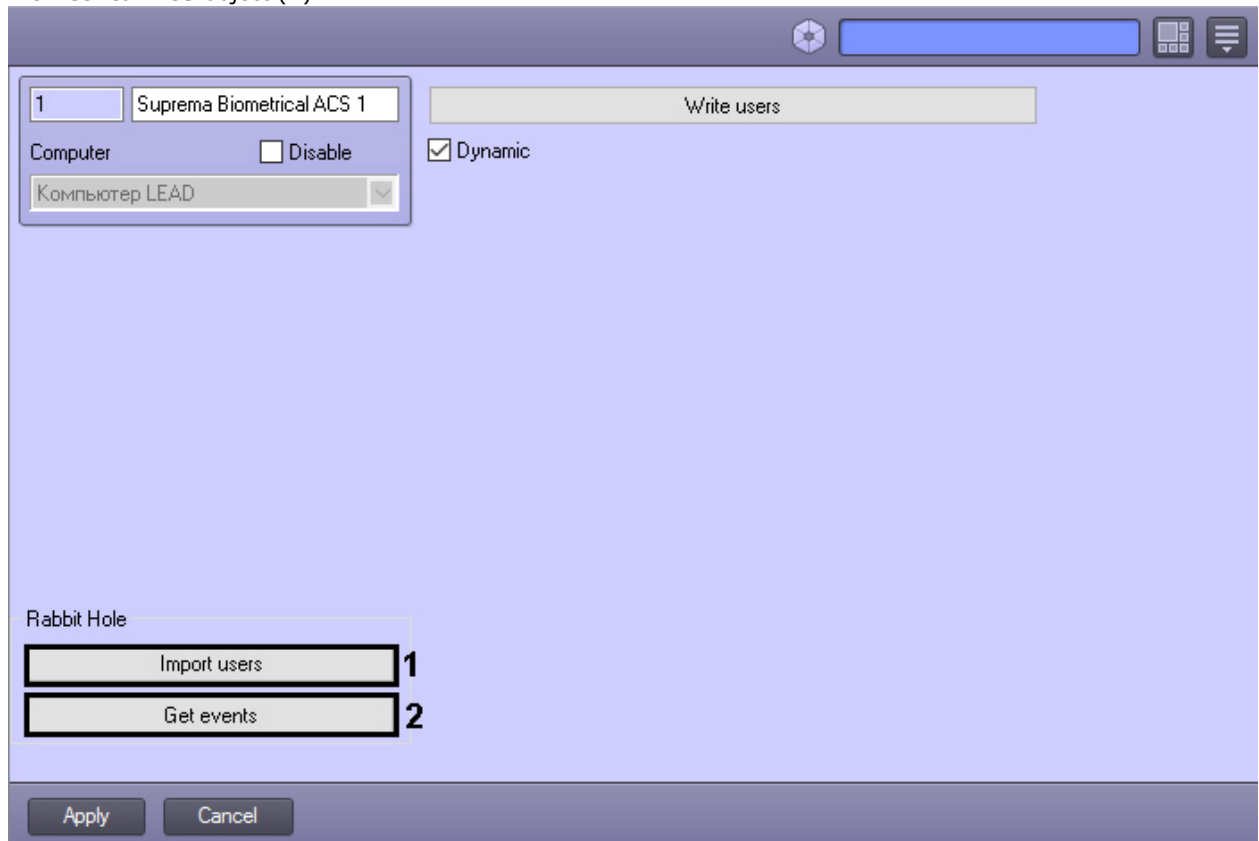

As a result the dialog window for specifying parameters of connection to the vendor software database will display

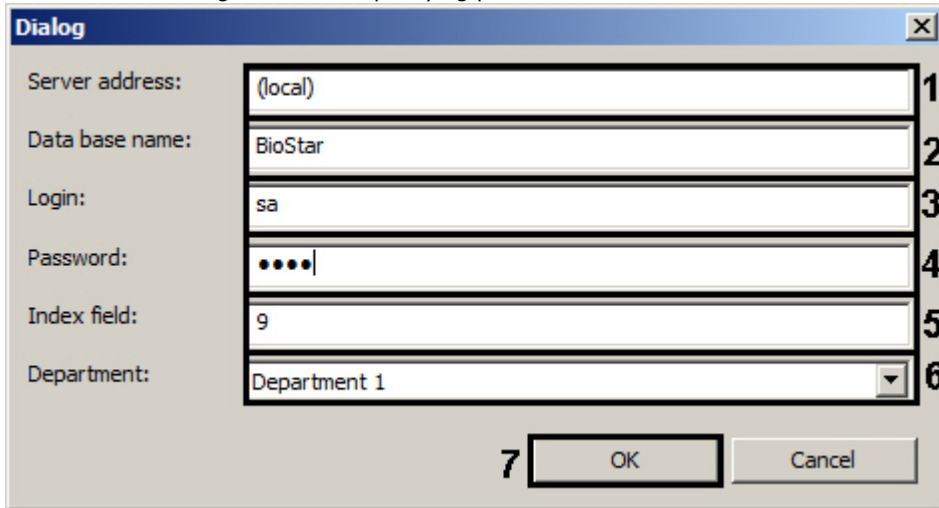

- a. In the **Server address:** field enter a server address of vendor software database (1).
 - b. In the **Database name:** field enter a database name from which users will be imported (2).
 - c. In the **Login:** field enter a login for connecting to database (3).
 - d. In the **Password:** field enter a password for connecting to database (4).
 - e. In the **Index field:** enter a number of additional database field of vendor software in which there is the *Intellect ID* parameter (5).
 - f. From the **Department:** drop-down list select a department in which imported users will be added (6).
 - g. Click the **OK** button (7).
2. To get events from the vendor software database click the **Get events** button on the settings panel of the **Suprema Biometrical ACS** object (2).

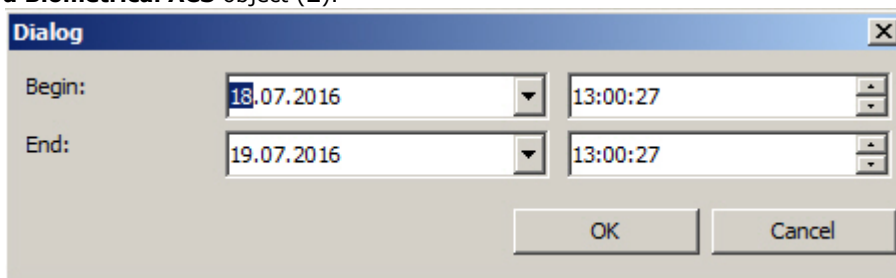

In the opened dialog window specify the time interval during which events are to be read. As a result of this operation all events from all controllers in the system for the specified time interval will be received. If it's required to get events from the specific controller, do actions described above from the settings panel of the corresponding object.

3. Click **Apply** to save changes.



Attention!

Careless using of these settings can result in loss of users or events in the system and further incorrect working of the system.

Working with the Suprema Module

The following interface objects are used to work with the *Suprema* Module.

1. **Map;**
2. **Event Log.**

Information about configuring these interface objects is presented in the [Intellect Software package: Administrator's Guide](#)

How to work with interface objects is described in detail in [Intellect Software package: Operator's Guide](#).

Managing the Suprema Host Controller

A *Suprema Host Controller* is managed in the interactive **Map** window using the corresponding object's menu:



Select the **Reconnect** item to reconnect the controller.

Managing the Suprema Secure IO Relay

A *Suprema Secure IO Relay* is managed in the interactive **Map** window using the corresponding object's menu:

Suprema Secure IO Relay 1.1.1.1[1.1.1]	
Relay On	
Relay Off	

Description of feature menu commands of **Suprema Secure IO Relay** object is given in the table.

Command of feature menu	Functionality
Relay Off	Turn Off relay
Relay On	Turn On relay

Managing the Suprema Slave Controller Door

A *Suprema Slave Controller Door* is managed in the interactive **Map** window using the corresponding object's menu:

Suprema Slave Controller Door 1.1.1[1.1.1]	
Relay On	
Relay Off	
Open	
Close	

Description of feature menu commands of **Suprema Slave Controller Door** object is given in the table.

Command of feature menu	Functionality
Relay Off	Turn Off relay
Relay On	Turn On relay
Open	Open the door
Close	Close the door