



Activation Guide

03/31/2023

Table of contents

1	Activating Axxon One	4
2	Generating license files via the licensing web server	4
3	Overview on licensing the Axxon One software system	5
4	Additional license utility actions	5
5	Activation Guide. Introduction	6
5.1	General information	6
5.2	Purpose of the document	6
6	Overview on licensing the Axxon One software system	7
6.1	Types of licenses	7
6.1.1	Disclaimer	12
6.2	Licensing methods for Axxon One	12
6.3	Axxon One Activation utility	13
7	Activating Axxon One Free	16
8	Activating Axxon One	21
8.1	Creating an activation request	21
8.2	Activation by applying license file	23
8.3	Activation with serial number	26
9	Upgrading Axxon One	31
10	Transferring a license to another computer while maintaining configuration	32
11	Deactivating a license	33
12	Additional license utility actions	36
12.1	Saving the license file	36
12.2	Changing the domain name	38
12.3	Excluding the Current Server from an domain	40
13	Generating license files via the licensing web server	43
13.1	Generating the Axxon One Free license file	43
13.2	Generating the Axxon One license file	43
14	Decoding the activated license	45

[Activation Guide. Introduction](#)(see page 6)

[Activating Axxon One Free](#)(see page 16)

[Upgrading Axxon One](#)(see page 31)

[Transferring a license to another computer while maintaining configuration](#)(see page 32)

[Deactivating a license](#)(see page 33)

[Decoding the activated license](#)(see page 45)

1 Activating Axxon One

To activate your *Axxon One*, do as follows:

1. Create an activation request file. Submit it to an AxxonSoft rep.
2. Payment and delivery of the license file or serial number.
3. License activation.

[Creating an activation request](#)(see page 21)

[Activation by applying license file](#)(see page 23)

[Activation with serial number](#)(see page 26)

2 Generating license files via the licensing web server

The license file can be obtained from an AxxonSoft representative, by sending him a request file, or may be self-generated on the license server.

To generate a license file via the licensing web server, a request file is needed for activation of the required licensing for *Axxon One*.

[Generating the Axxon One Free license file](#)(see page 43)

[Generating the Axxon One license file](#)(see page 43)

3 Overview on licensing the Axxon One software system

[Types of licenses](#)(see page 7)

[Licensing methods for Axxon One](#)(see page 12)

[Axxon One Activation utility](#)(see page 13)

4 Additional license utility actions

[Saving the license file](#)(see page 36)

[Changing the domain name](#)(see page 38)

[Excluding the Current Server from an domain](#)(see page 40)

5 Activation Guide. Introduction.

On page:
<ul style="list-style-type: none">• General information(see page 6)• Purpose of the document(see page 6)

5.1 General information

No part of this publication may be reproduced or transmitted in any way or in any form without the prior written consent of AxxonSoft.

The *Axxon One* brand is owned by AxxonSoft. All other trademarks mentioned herein are the property of their respective owners.

The document contains information that is current at the time of publication. The document may be changed by AxxonSoft without prior notice to other parties.

5.2 Purpose of the document

The [Axxon One software system Activation Manual](#)(see page 3) provides the information necessary for licensing the *Axxon One* software system.

The chapters titled [Activation Guide. Introduction](#)(see page 6) and [Overview on licensing the Axxon One software system](#)(see page 7) are intended as general guidance on the *Axxon One* licensing process.

The chapter [Activating Axxon One Free](#)(see page 16) contains instructions for activating your *Axxon One* Free license.

The chapter [Activating Axxon One](#)(see page 21) contains instructions for activating your paid license of *Axxon One*.

The chapter [Upgrading Axxon One](#)(see page 31) contains instructions for upgrading your paid license of *Axxon One*.

A description of additional actions that may be carried out with the license utility is provided in the [Additional license utility actions](#)(see page 36).







[Generating license files via the licensing web server](#)(see page 43) chapter provides instructions on generating license files.

6 Overview on licensing the Axxon One software system

6.1 Types of licenses

✔ [Creating an activation request](#)(see page 21)
✔ [Activating Axxon One Free](#)(see page 16)

There are 6 types of *Axxon One* license: **Axxon One Demo**, **Axxon One Free**, **Axxon One Start**, **Axxon One Professional**, **Axxon One Enterprise** and **Axxon One Unified**. Upon installation, the software will be launched in *Axxon One* Demo mode. You should activate *Axxon One* VMS to utilize the full feature set of the security software package. You can activate the software by distributing an activation key on the system. Data on all the types of *Axxon One* licenses is presented in the table below.

Functionality	Type of license	 Axxon One Demo (8:00-18:00) ¹	 Axxon One Free	 Axxon One Start	 Axxon One Professional	 Axxon One Enterprise	 Axxon One Unified
Maximum number of Servers in Axxon-domain ¹		Unlimited	1	1	30	30	Unlimited
Maximum number of channels in Axxon-domain ²		Unlimited	4	64	Unlimited	Unlimited	Unlimited
Free Software Updates(see page 31)		No	No	Yes	Yes	Yes	Yes
Real time analytics (Object Tracker) ³		Yes	Yes	Yes	Yes	Yes	Yes
Support for SD cards (edge storage, playback only) ⁴		Yes	No	Yes	Yes	Yes	Yes
Macros (event response wizard) ⁵		Yes	No	Yes	Yes	Yes	Yes
AxxonNet Reports ⁶		Yes	No	Yes	Yes	Yes	Yes
Scene analytics detection tools ⁷ (excluding Line crossing and Abandoned object detection)		Yes	No ²	No	Yes	Yes	Yes
Line crossing ⁸		No	No	No	Yes	Yes	Yes
Abandoned object detection ⁹		No	No	No	Yes	Yes	Yes

1 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Axxon+domains>

2 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Axxon+domains>

3 <https://docs.axxonsoft.com/confluence/display/one20en/Setting+up+Neural+Tracker-based+Scene+Analytics+detection+tools>

4 <https://docs.axxonsoft.com/confluence/display/one20en/The+Embedded+storage+object>

5 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Macros+and+Counters>

6 <https://docs.axxonsoft.com/confluence/display/onet/AxxonNet+Reports>

7 <https://docs.axxonsoft.com/confluence/display/one20en/Setting+general+parameters+of+Tracker-based+Scene+Analytics+detection+tools>

8 <https://docs.axxonsoft.com/confluence/display/one20en/Settings+specific+to+Cross+Line+Detection>

9 <https://docs.axxonsoft.com/confluence/display/one20en/Settings+specific+to+Abandoned+object+detection>

Time Compressor ¹⁰	No	No	No	Yes (country restriction)	Yes (country restriction)	Yes (country restriction)
Cross-System Client ¹¹	No	No	No	Yes	Yes	Yes
AI Features and Retail License Pack						
Advanced archive search: <ul style="list-style-type: none"> MomentQuest smart forensic search¹² Face search¹³⁶ LPR search¹⁴ 	Yes	No	No ³	Optional	Yes	Yes
Tag&Track multicamera object tracking ¹⁵	Yes	No	No	Optional	Yes	Yes
Retail Analytics: <ul style="list-style-type: none"> Visitors counter¹⁶ Queue detection¹⁷ Heat map¹⁸ 	Yes	No	No	Optional	Yes	Yes
Face Mask Detection ¹⁹	Yes	No	No	Optional	Yes	Yes
Neural Tracker ²⁰	Yes	No	No	Optional	Yes	Yes
Smoke and fire detection ²¹	Yes	No	No	Optional	Yes	Yes
Neural Counter ²²	Yes	No	No	Optional	Optional	Optional
Human Behavior Analytics						
Pose detection ²³⁶ includes: <ul style="list-style-type: none"> Man down Raised arms Crouched man Social distancing 	Yes	No	No	Optional	Optional	Optional
Personal Protective Equipment Detection						

10 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246486008>

11 <https://docs.axxonsoft.com/confluence/display/one20en/Cross-System+Client>

12 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246486171>

13 <https://docs.axxonsoft.com/confluence/display/one20en/Face+search>

14 <https://docs.axxonsoft.com/confluence/display/one20en/LPR+search>

15 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246485957>

16 <https://docs.axxonsoft.com/confluence/display/one20en/Retail+Analytics>

17 <https://docs.axxonsoft.com/confluence/display/one20en/Retail+Analytics>

18 <https://docs.axxonsoft.com/confluence/display/one20en/Building+a+Heat+Map>

19 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Masks+Detection>

20 <https://docs.axxonsoft.com/confluence/display/one20en/Setting+up+Neural+Tracker-based+Scene+Analytics+detection+tools>

21 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Fire+and+Smoke+Detection+Tools>

22 <https://docs.axxonsoft.com/confluence/display/one20en/Neural+Counter>

23 <https://docs.axxonsoft.com/confluence/display/one20en/Pose+detection+tools>

Personal protective equipment detection ²⁴ includes: <ul style="list-style-type: none"> • Helmets • Hi-viz vests • Protective Clothing 	Yes	No	No	Optional	Optional	Optional
Add-On Modules						
Integration With Access Control System	Yes	No	No	Up to 50 readers	Up to 100 readers	Optional
Integration With Fire and Security Alarms System	Yes	No	No	Optional	Optional	Optional
Integration Perimeter Intrusion Detection System	Yes	No	No	Optional	Optional	Optional
Events from external systems (POS terminals, ACFA) ²⁵	Yes	No	Optional	Optional	Optional	Optional
Custom AI Analytics	No	No	No	Optional	Optional	Optional
Water level detection ²⁶	Yes	No	No	Optional	Optional	Optional
Offline analytics. Smart search in imported video. ²⁷	No	No	No	No	No	Yes
Multicamera Tracking. Tracking follows objects across multiple camera FOVs based on appearance similarity ⁷	Yes	No	No	Optional	Optional	Yes
Similarity Search ⁷	Yes	No	No	No	Optional	Yes (country restriction)
Datacenter Domain Unification/Private Cloud	Yes	No	No	No	No	Yes
Real-time face recognition ²⁸	Yes	No	No	Optional	Optional	Optional
FaceCube external face recognition module ²⁹	No	No	No	Optional	Optional	Optional
Real-time vehicle license plate recognition ³⁰	Yes	No	No	Optional	Optional	Optional
Person-based privacy masking ³¹	Yes	Yes	Yes	Yes	Yes	Yes
Searching for LPR/ANPR numbers and faces on video from multiple cameras ³²	Yes	No	No	Optional	Yes	Yes

24 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246484901>

25 <https://docs.axxonsoft.com/confluence/display/one20en/Receiving+Events+from+External+Systems>

26 <https://docs.axxonsoft.com/confluence/display/one20en/Water+Level+Detection>

27 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246485428>

28 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+real-time+face+recognition>

29 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+FaceCube+integration>

30 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+real-time+vehicle+license+plate+recognition>

31 <https://docs.axxonsoft.com/confluence/display/one20en/Person-based+privacy+masking>

32 <https://docs.axxonsoft.com/confluence/display/one20en/Simultaneous+search+in+an+archive+of+several+video+cameras>

Data replication ³³	No	No	No	No	Yes	Yes
FailOver ³⁴	No	No	No	No	Yes	Yes
Video walls management ³⁵	Yes	No	No	No	Yes	Yes
LDAP authentication supported ³⁶	Yes	No	No	No	Yes	Yes
System features available for all licenses						
Hardware Control panels Security keyboards Joysticks I/O modules	Unlimited	Unlimited	Unlimited	Unlimited	Unlimited	Unlimited
AxxonNet cloud service ³⁷	Yes	No	Yes	Yes	Yes	Yes
Server ONVIF Profiles G, S, T ³⁸ H.265 support ³⁹ Edge analytics (metadata from IP devices) ⁴⁰ Configuration backup and restore ⁴¹ Mass configuration of cameras ⁴² Multicasting ⁴³ Hotkeys ⁴⁴	Yes	Yes	Yes	Yes	Yes	Yes

33 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+data+replication>

34 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Failover+VMS>

35 <https://docs.axxonsoft.com/confluence/display/one20en/Managing+monitors+on+remote+Clients+within+the+Axxon-domain>

36 <https://docs.axxonsoft.com/confluence/display/one20en/Connecting+to+an+LDAP+catalog>

37 <https://docs.axxonsoft.com/confluence/display/onet/AxxonNet+Setup+and+Operation>

38 <https://docs.axxonsoft.com/confluence/display/one20en/The+Video+Camera+Object>

39 <https://docs.axxonsoft.com/confluence/display/one20en/Specifications+of+the+Axxon+One+Software+Package>

40 <https://docs.axxonsoft.com/confluence/display/one20en/Embedded+Detection+Tools>

41 <https://docs.axxonsoft.com/confluence/display/one20en/Backup+and+Restore+Utility>

42 <https://docs.axxonsoft.com/confluence/display/one20en/Mass+configuration>

43 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+Cross-System+Client+and+autologon>

44 <https://docs.axxonsoft.com/confluence/display/one20en/Configuring+hot+keys>

<p>Recorded Video / Investigation</p> <p>Local and network archives⁴⁵</p> <p>Events search⁴⁶</p> <p>Time slice search (search by time intervals)⁴⁷</p> <p>Simultaneous search in an archive of several video cameras⁴⁸</p> <p>Video bookmarking (searchable text comments)⁴⁹</p>	Yes	Yes	Yes	Yes	Yes	Yes
<p>Live Monitoring</p> <p>Basic audio and video analytics⁵⁰</p> <p>Embedded detection tools⁵¹(except for Axis on-board tracker⁵²⁵)</p> <p>Interactive 3D map⁵³</p> <p>GreenStream adaptive bandwidth management⁵⁴</p> <p>Tag & Track Lite⁵⁵</p> <p>OnScreen PTZ mode⁵⁶</p> <p>Support for fisheye cameras and ImmerVision lenses⁵⁷</p> <p>Export of frames and video recordings to multiple formats⁵⁸</p> <p>Information boards⁵⁹</p>	Yes	Yes	Yes	Yes	Yes	Yes
<p>Remote clients</p> <p>Web-Client interface⁶⁰</p> <p>iOS app (including Apple TV)⁶¹</p> <p>Android app⁶²</p>	Yes	Yes	Yes	Yes	Yes	Yes

Note

Information about the type of license you are using is displayed in the Server properties in the **Product type** field. Users in the **admin** role get an informational message to renew the license 30 days or less before it expires.

45 <https://docs.axxonsoft.com/confluence/display/one20en/Creating+archives>
 46 <https://docs.axxonsoft.com/confluence/display/one20en/Events+search>
 47 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246486165>
 48 <https://docs.axxonsoft.com/confluence/display/one20en/Simultaneous+search+in+an+archive+of+several+video+cameras>
 49 <https://docs.axxonsoft.com/confluence/display/one20en/Searching+comments>
 50 <https://docs.axxonsoft.com/confluence/display/one20en/General+Information+on+Configuring+Detection>
 51 <https://docs.axxonsoft.com/confluence/display/one20en/Embedded+Detection+Tools>
 52 <https://docs.axxonsoft.com/confluence/display/one20en/AxonSoft+tracking+in+Axis+devices>
 53 <https://docs.axxonsoft.com/confluence/display/one20en/Working+with+the+Interactive+Map>
 54 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246485974>
 55 <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246485959>
 56 <https://docs.axxonsoft.com/confluence/display/one20en/Controlling+a+PTZ+Video+Camera+in+the+OnScreen+PTZ+Mode>
 57 <https://docs.axxonsoft.com/confluence/display/one20en/Working+with+fisheye+cameras>
 58 <https://docs.axxonsoft.com/confluence/display/one20en/Exporting+Frames+and+Video+Recordings>
 59 <https://docs.axxonsoft.com/confluence/display/one20en/Working+with+information+boards>
 60 <https://docs.axxonsoft.com/confluence/display/one20en/Working+with+Axon+One+Through+the+Web-Client>
 61 <https://docs.axxonsoft.com/confluence/display/ASmc/AxonNet+iOS+Mobile+Client+User+Guide>
 62 <https://docs.axxonsoft.com/confluence/display/ASmc/AxonNet+mobile+client+on+Android+OS.+User+Guide>

Note

- ¹ — the system will operate in demo mode from 8:00 AM to 6:00 PM.
- ² — all Scene analytics detection tools are available in *Axxon One* Free license based on the metadata from the base VMD, except for Line crossing and Abandoned objects tools.
- ³ — to use MomentQuest, you will need to request an additional free license.
- ⁴ — to use License plate recognition (VT), it is necessary to re-activate the updated license of the ANPR (see [Licensing of the software module for License plate recognition \(VT\)](#)⁶³).
- ⁵ — the module has to be purchased separately.
- ⁶ — with the license, you can use privacy masks based on data from the corresponding detection tools.
- ⁷ — to be released in the next version.

6.1.1 Disclaimer

AxxonSoft reserves the right to make changes to the specification and cost of software licenses without notice and without any obligation to make the same changes to the licenses already sold. Orders are processed in accordance with the price list valid at the time of placing the order. If a placed order contains incorrect prices or license specifications, regardless of the cause of such errors. AxxonSoft reserves the right to reject or cancel the order, even if it has already been processed.

6.2 Licensing methods for Axxon One

There are two licensing methods for *Axxon One*:

1. License file only.

The license file contains the data on basic hardware configuration (motherboard, CPU, hard disk, video adapter, RAM, and network card) of all Servers. If you change any two basic hardware components, your license will be invalid. For example, this is the case when you change both CPU and motherboard. However, changing a graphics card or upgrading RAM will not affect the license.

This is why, when working with *Axxon One*, consider the following:

- a. The activation request should be sent from the computer that will host the *Axxon One* Server.
- b. You can upgrade your license only if you saved the initial basic hardware configuration of all Servers.
- c. It is not possible to transfer a license from one computer to another.

2. License file and Guardant dongle.

This method allows replacing the Server hardware and transferring the license to another computer (see [Transferring a license to another computer while maintaining configuration](#)(see page 32)). To activate *Axxon One* via this method, contact AxxonSoft to receive a license file and Guardant dongle.

If you already have a Guardant dongle, you can perform activation yourself. To do this, connect the Guardant dongle to the computer that you wish to activate and perform the standard activation steps.

Attention!

You can use a Guardant Sign dongle only on Linux OS.

Note

If you install virtualization products such as VirtualBox, VmWare etc., you may lose the license. If you encounter this problem, it is recommended to remove all virtualization products from the computer hardware tree or get a new license file.

⁶³ <https://docs.axxonsoft.com/confluence/pages/viewpage.action?pagelId=246484823>

6.3 Axxon One Activation utility

You can activate the *Axxon One* license using the Activation utility.

The Activation utility is launched from the Windows **Start** menu: **Start** → **Programs** → **Axxon One** → **Utilities** → **Activation utility**.

Note

The Activation utility executable file LicenseTool.exe is located in the following directory: <*Axxon One* installation directory>\AxxonSoft\Axxon Smart\bin\.

Next, select the name of one of the Axxon Servers, which will provide the license file (this file is distributed to all Servers running at the time of activation of this domain), and login to the system using the *Axxon One* administrator name and password, to continue the activation process.



axxon ONE v.1.0.2.31


Server name or IP address: TEST >>

Username: root


Password: ●●●●

Connect Close

The download page will be displayed.

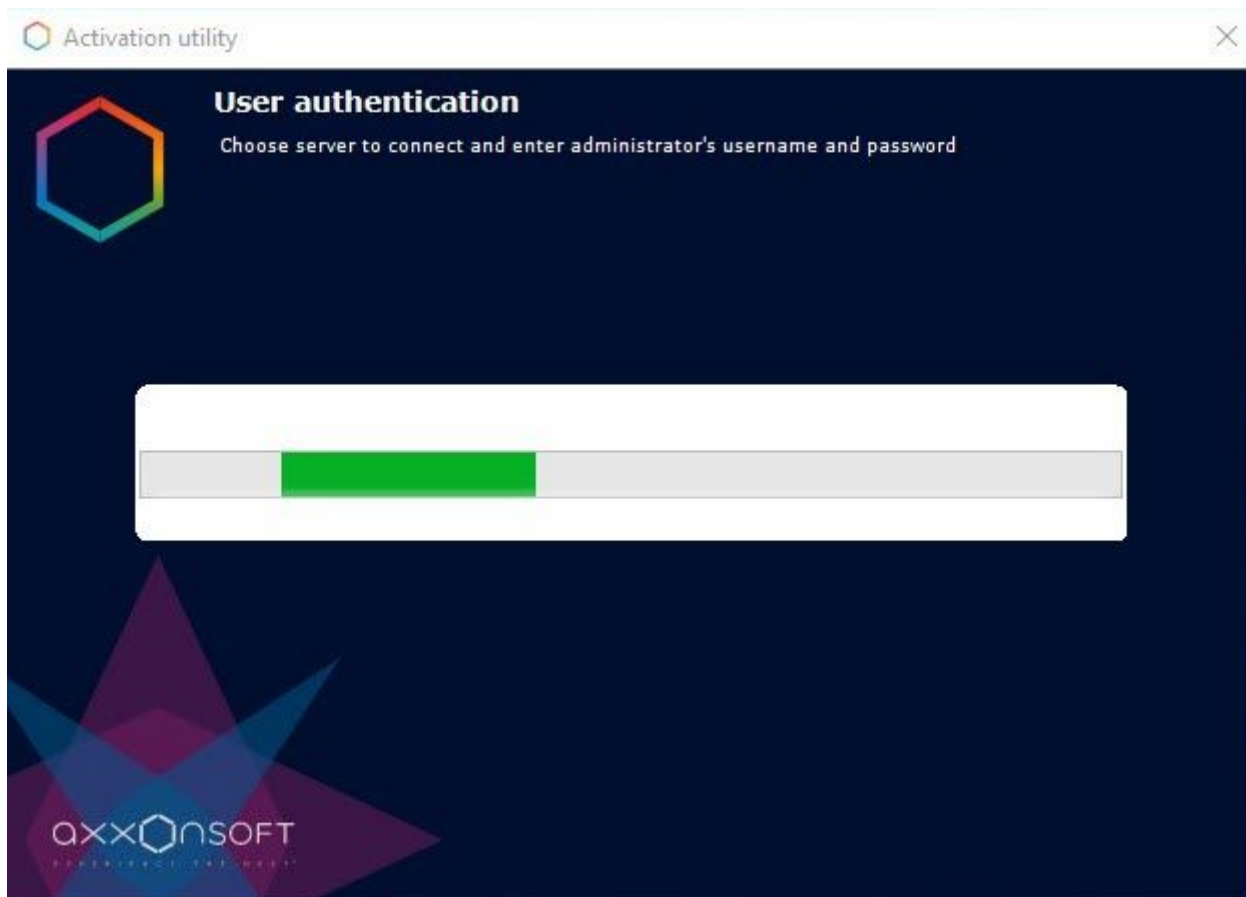

After the download is complete the main window of license utility will be displayed.

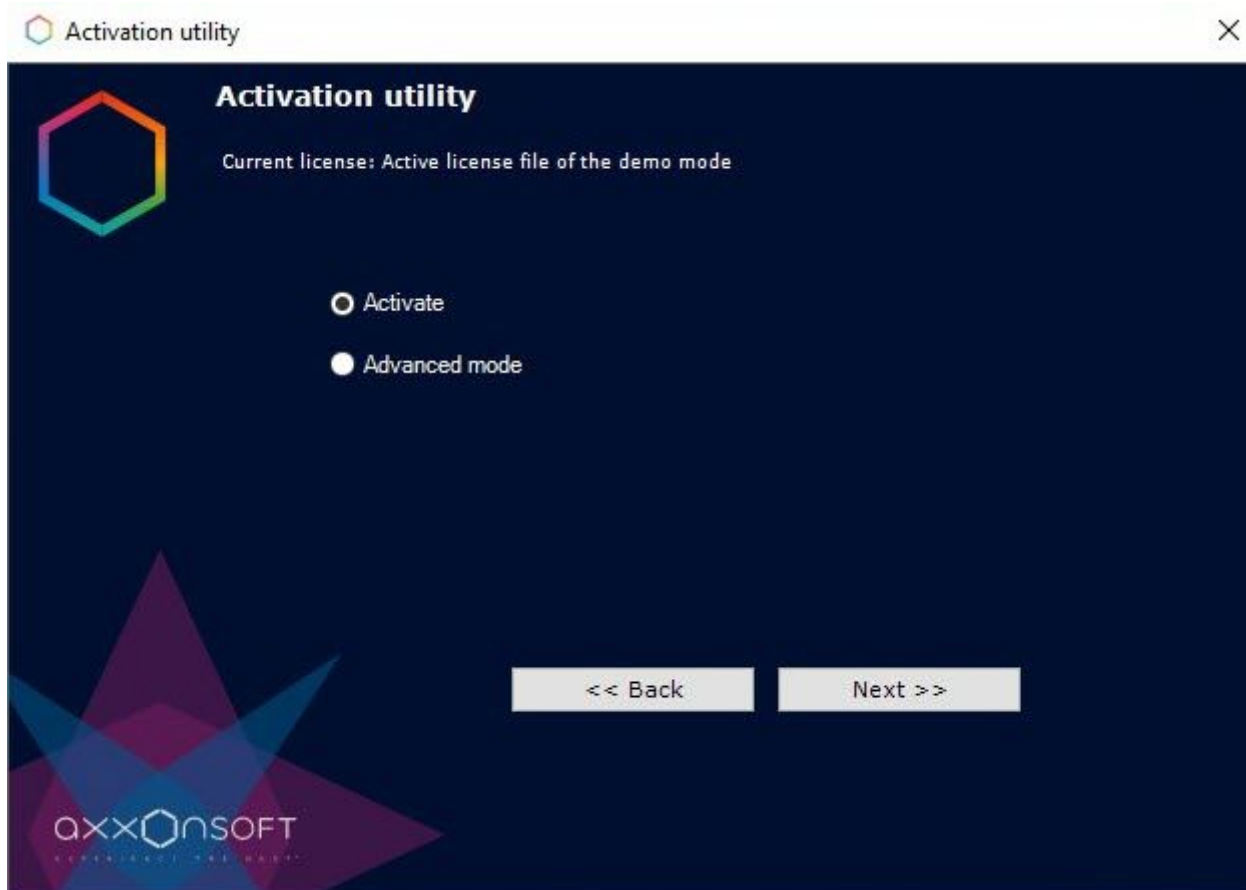


i Note

To activate *Axxon One*, connect to a Server in the domain. Otherwise, an error message appears.


7 Activating Axxon One Free

To activate *Axxon One Free*, do as follows:

1. On the main page of the activation utility, select **Activate** and click **Next**.

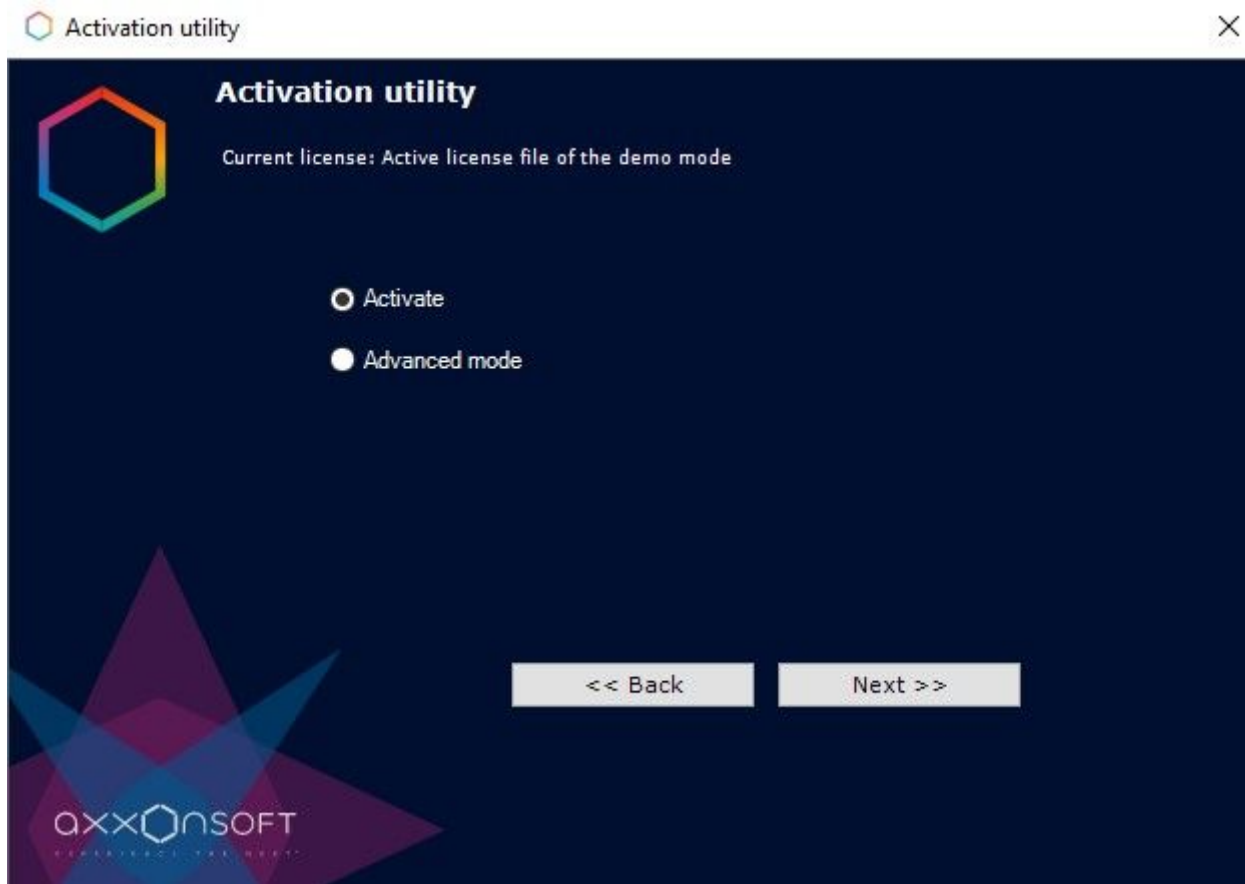


2. Select **Activate free version of the system** and click **Next**.

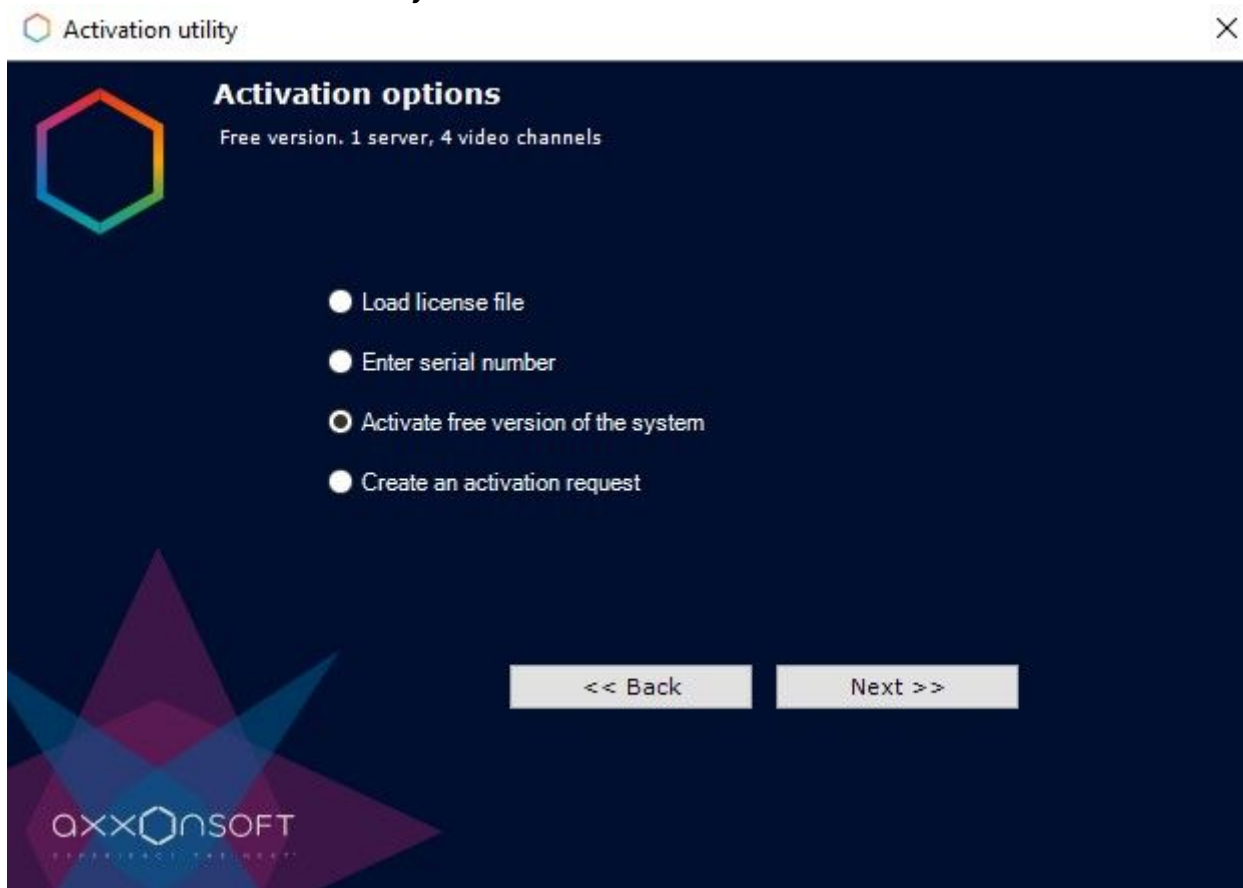

⚠ Attention!


You cannot activate VMS, if you have over 4 cameras set up in the system.

Your activation request will be sent online.

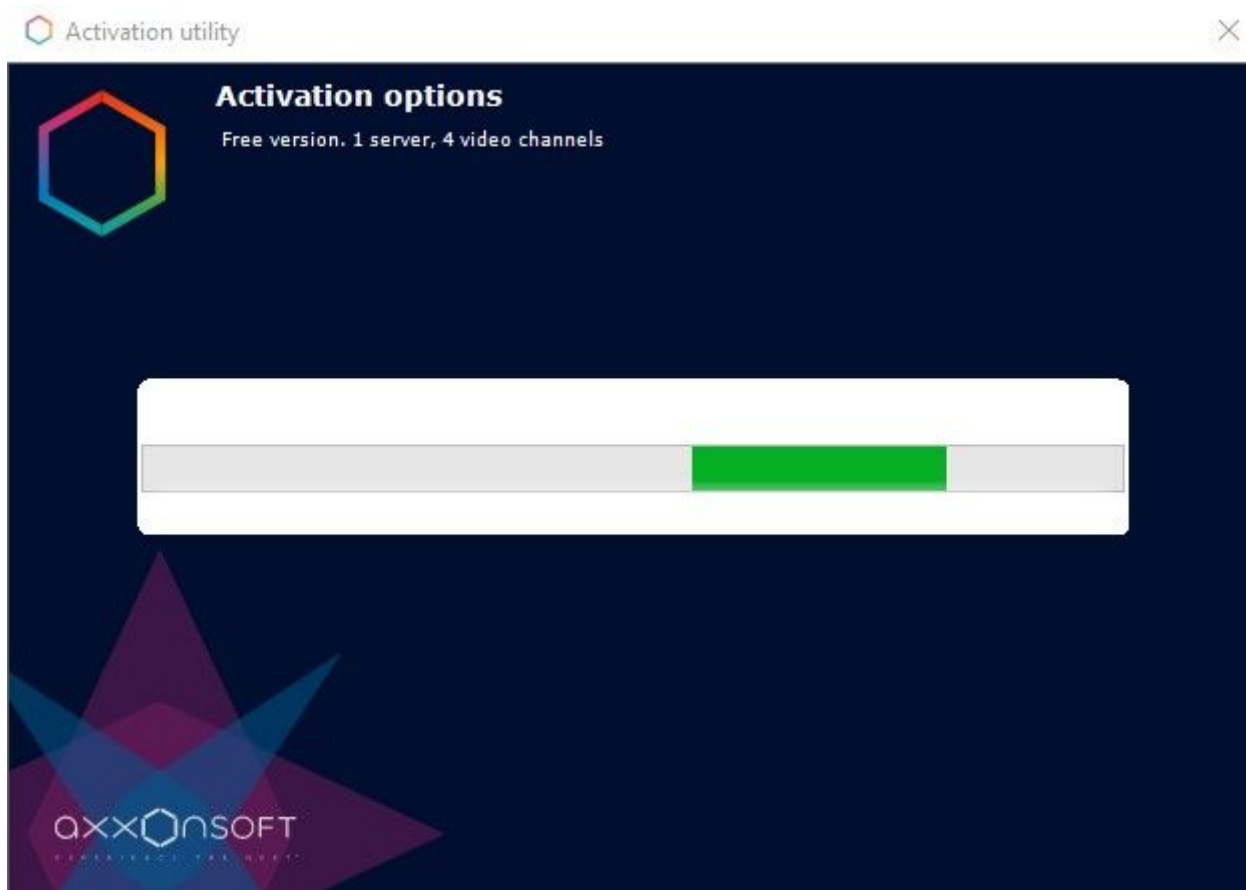

If activation is completed successfully on the licensing Server (<https://sale.axxonsoft.com/64>), the license file will be automatically downloaded and distributed within the system.

⁶⁴ <https://sale.axxonsoft.com/sale/>

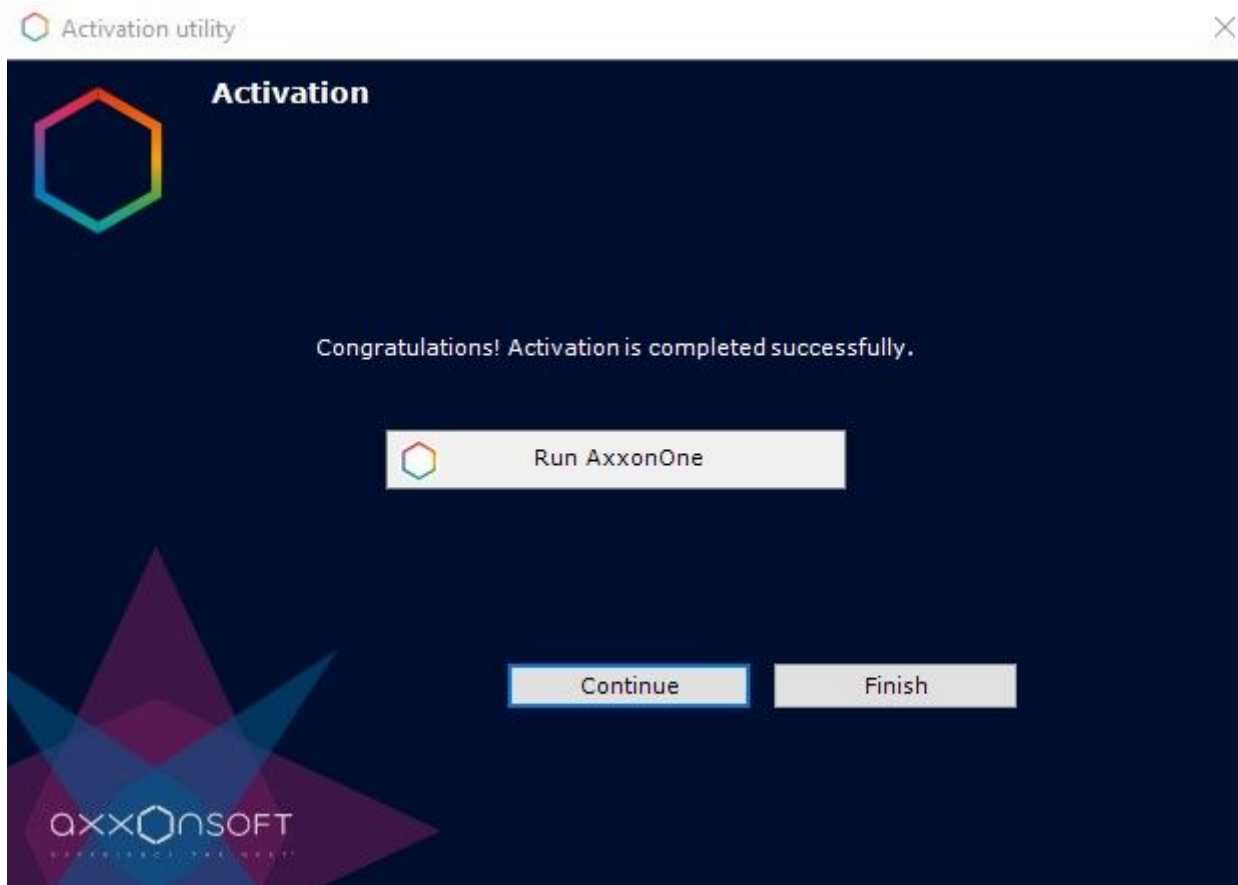



You have completed your *Axxon One* Free activation.

Note

Click **Continue** to return to the Activation utility home page. To exit, click **Finish**. To close the utility and start the *Axxon One* Client, click **Run Axxon One**.

If your computer is offline, you will be prompted to save the activation request file using any of the following methods:

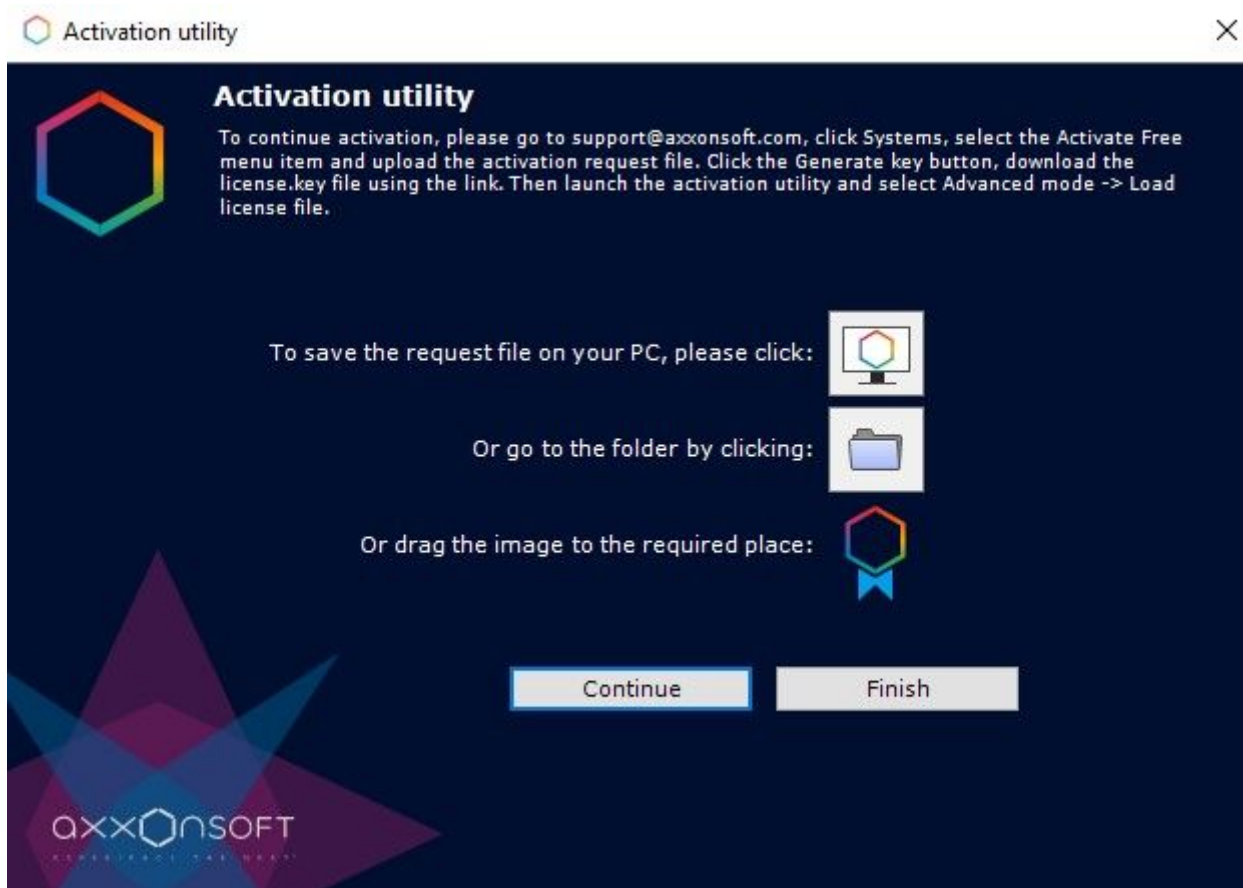

1. Click the  button in the standard Windows dialog box to browse for file location and enter the name.

2. Click the  button. The folder that contains the request file opens.

3. Drag and drop the  image to the destination folder.

Submit the request file to an AxxonSoft rep. You can also generate an activation key on your own through the licensing Servers Web-Interface (see [Generating the Axxon One Free license file](#)(see page 43)) and download the license file to the system (see [Activation by applying license file](#)(see page 23)).

⚠ Attention!

The *Axxon One* Server must be restarted after activation.

8 Activating Axxon One


To activate your *Axxon One*, do as follows:

1. Create an activation request file. Submit it to an AxxonSoft rep.
2. Payment and delivery of the license file or serial number.
3. License activation.


8.1 Creating an activation request

To create an activation request, do as follows:

1. In demo mode, you can add Servers to your Axxon domain, if you want to create a distributed system.
2. On the main page of the activation utility, select **Activate** and click the **Next** button.

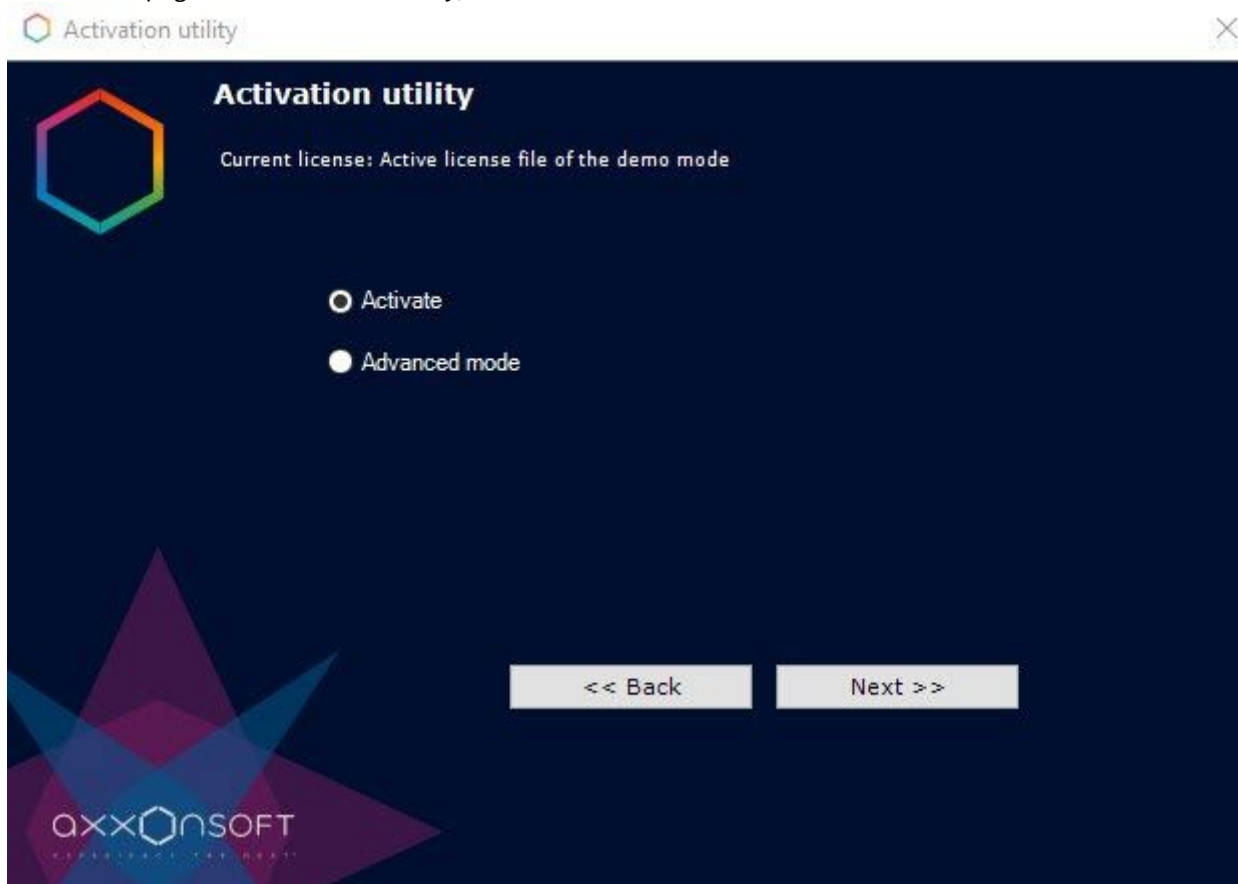


3. Select the **Create an activation request** and click the **Next** button.

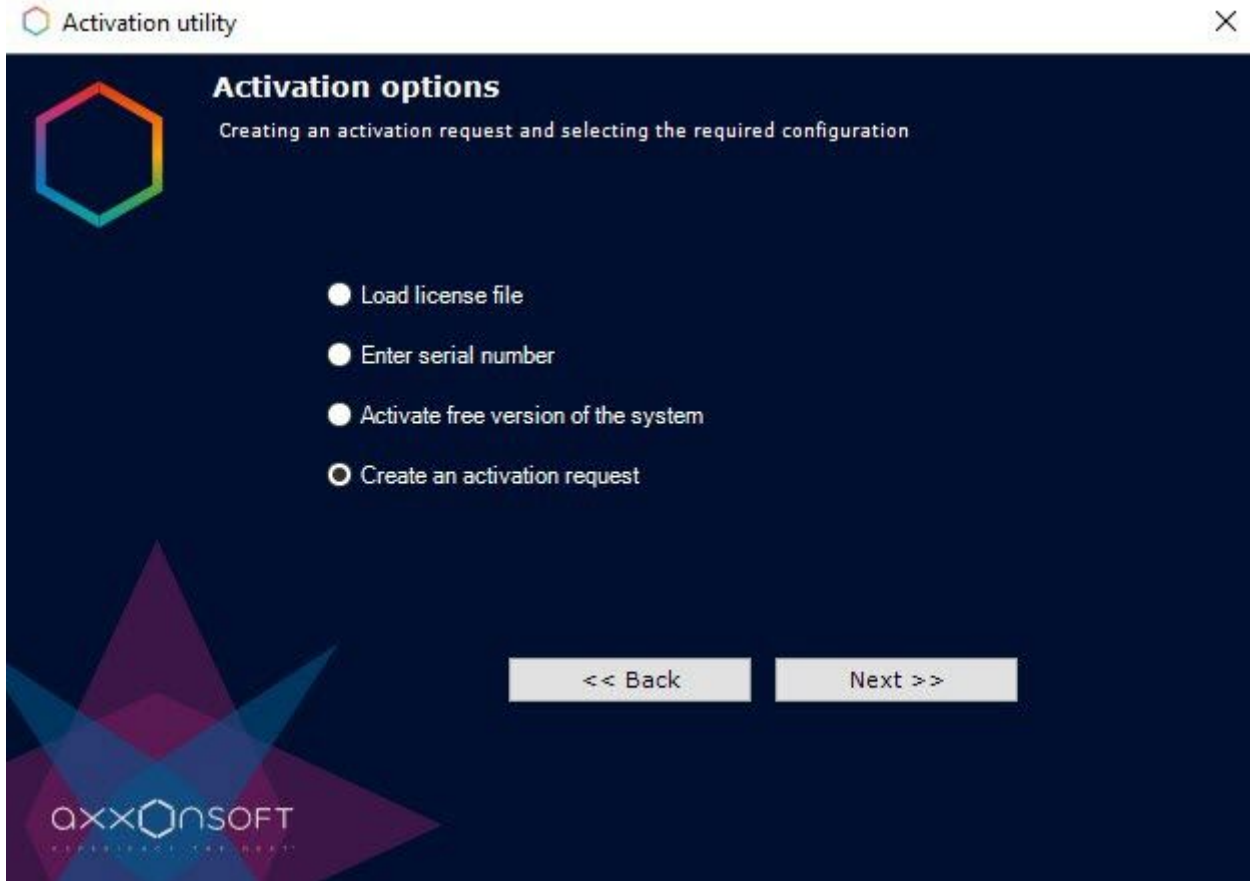




Note

When you create a request file, all Servers in the domain must be online. If the Server on which you are creating the request file, cannot connect to any selected Server, the request file cannot be created.

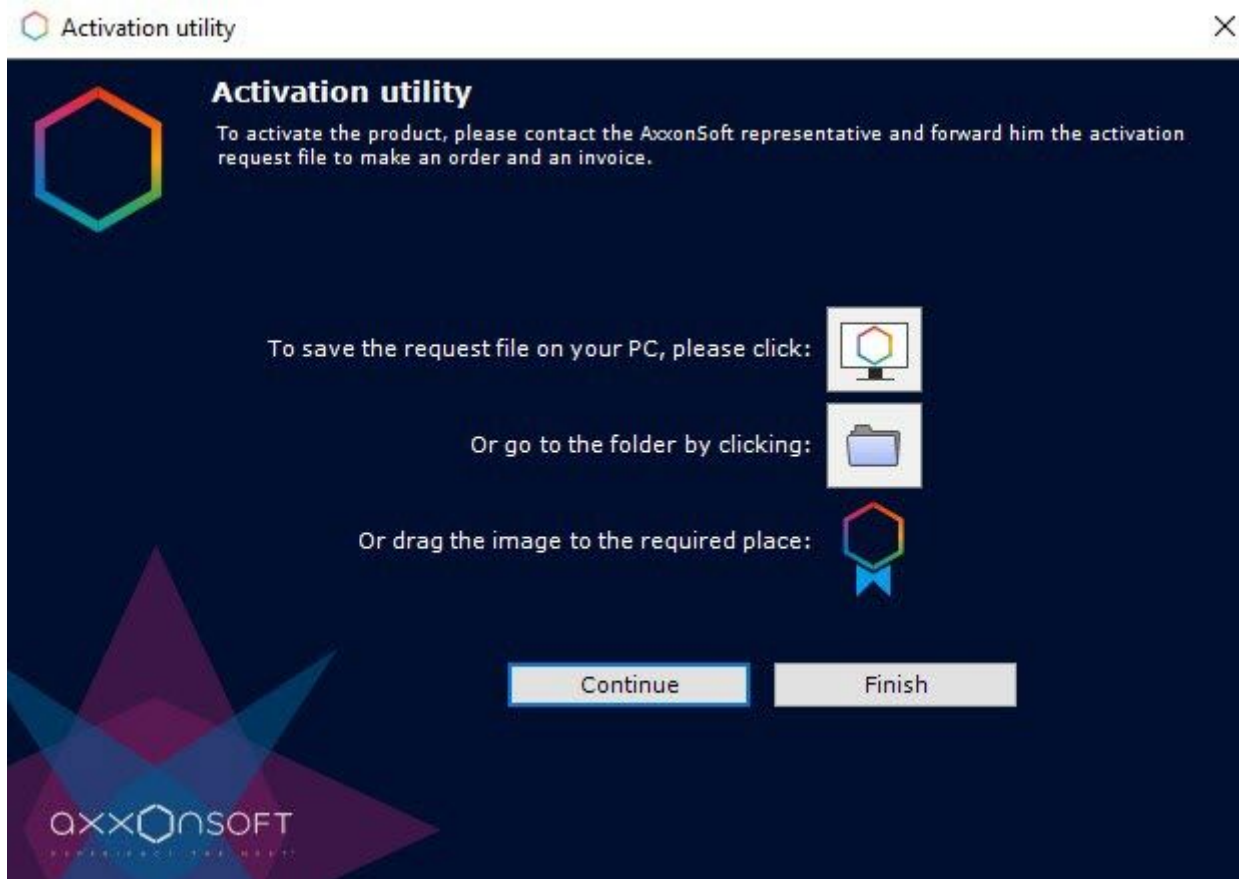4. Save the activation request file using any one of the following methods:




- a. Click the  button in the standard Windows dialog box to browse for file location and enter the name.
- b. Click the  button. The folder that contains the request file opens.
- c. Drag and drop the  image to the destination folder.

You have created an activation request file. To return to the home page of the activation utility, click **Continue**, to exit it – click **Finish**.


8.2 Activation by applying license file

You can apply your *Axxon One* license file as follows:


1. On the main page of the activation utility, select **Activate** and click **Next**.

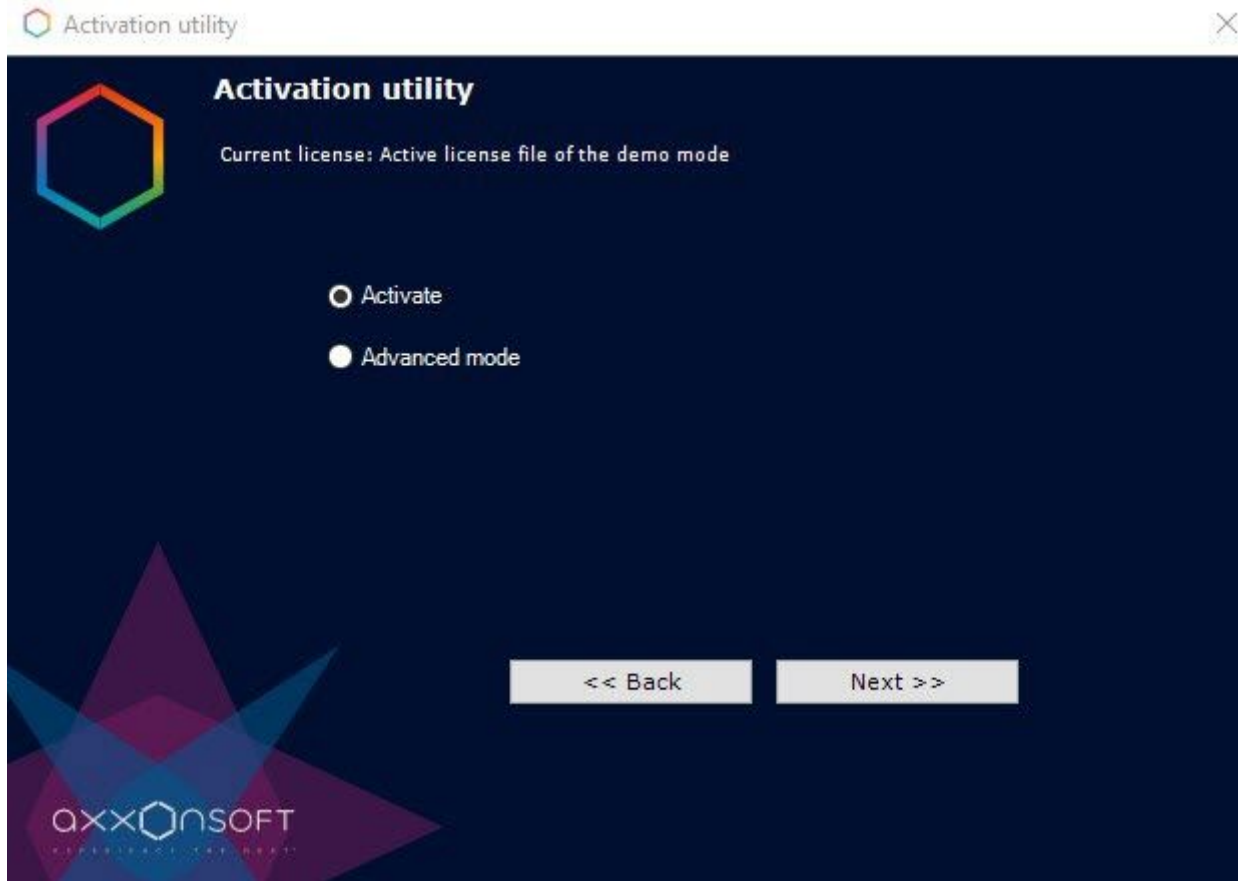

2. Select **Load license file** and click **Next**.

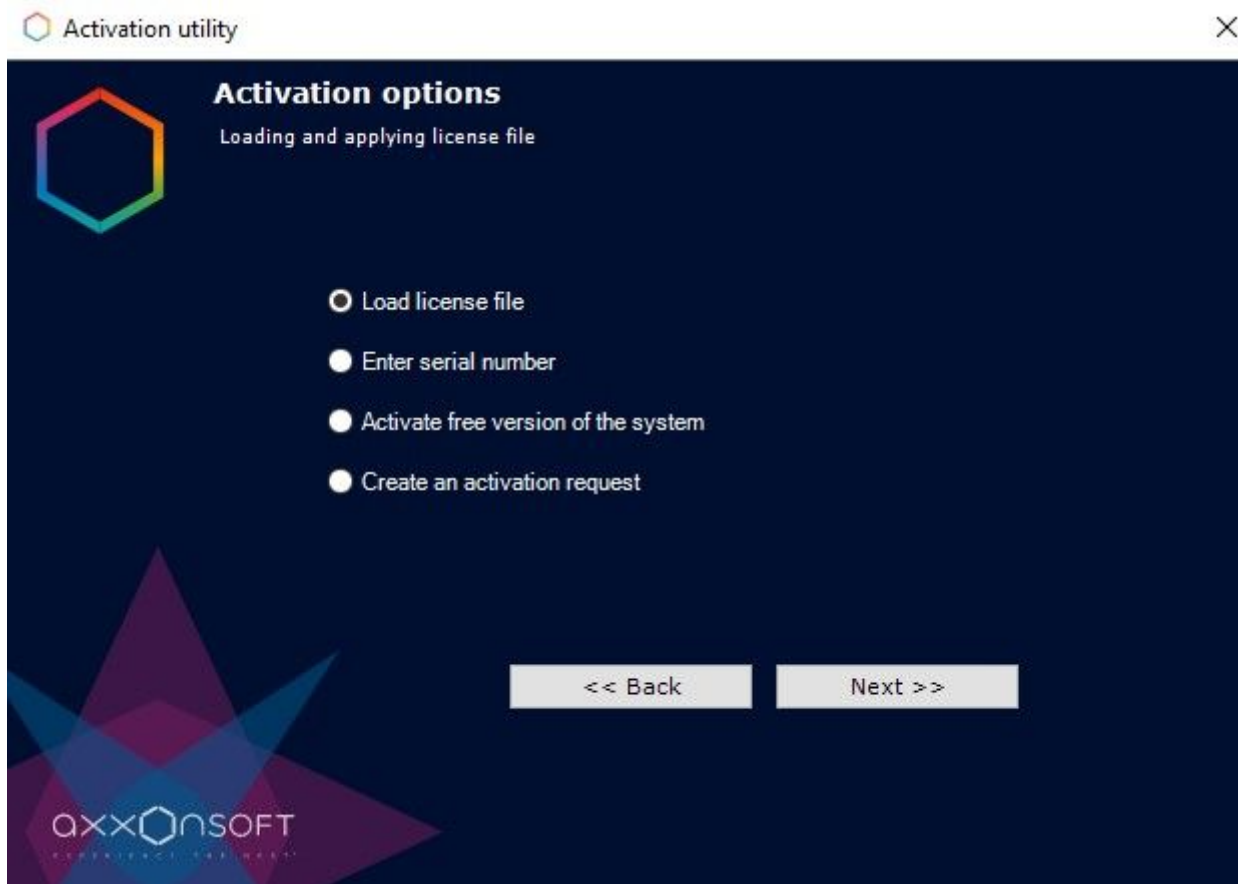

3. Load the license file using one of the following methods:

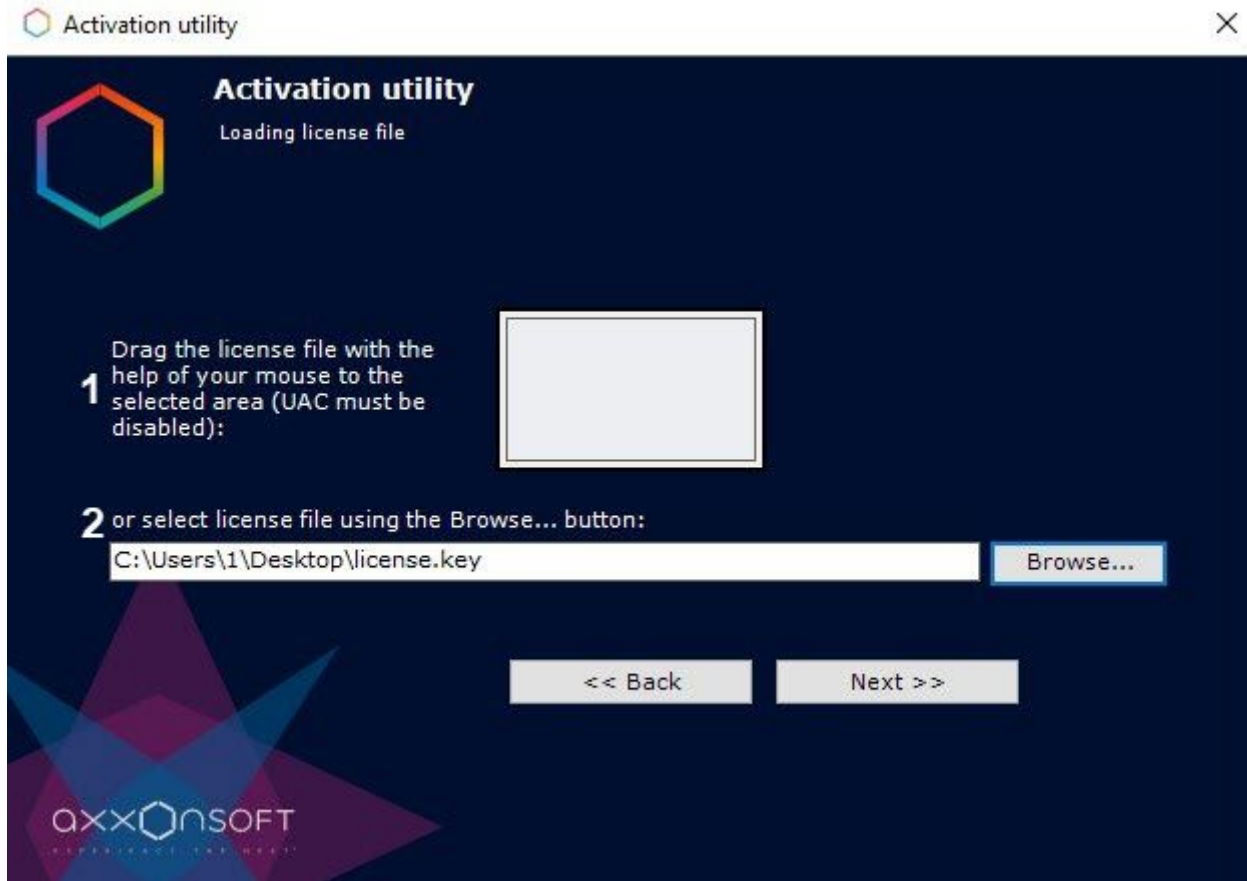


- a. drag and drop the license file to the selected area (1),
 - b. click the **Browse...** button and select a license file (2).
4. Click the **Next** button.

This will load the license file.

Attention!

The license file defines configuration of the system (the maximum number of servers, video channels and detection tools).

If completed successfully, a message is displayed.

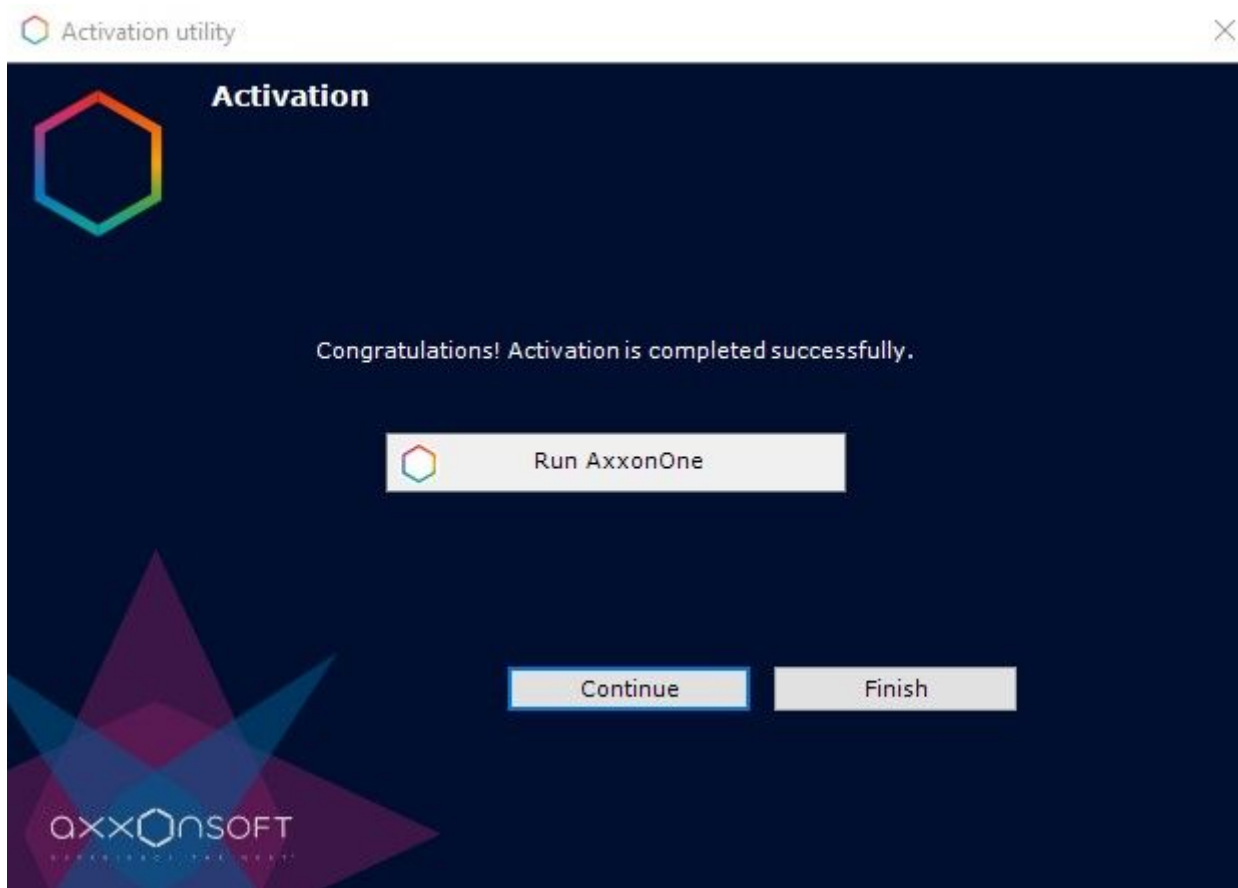

You have activated *Axxon One*.

⚠ Attention!

The *Axxon One* Server must be restarted after activation.


ℹ Note

Click **Continue** to return to the Activation utility home page. To exit, click **Finish**. To close the utility and start the *Axxon One* Client, click **Run Axxon One**.


8.3 Activation with serial number

If you have a serial number, you can activate *Axxon One* follows:


1. On the main page of the activation utility, select **Activate** and click **Next**.

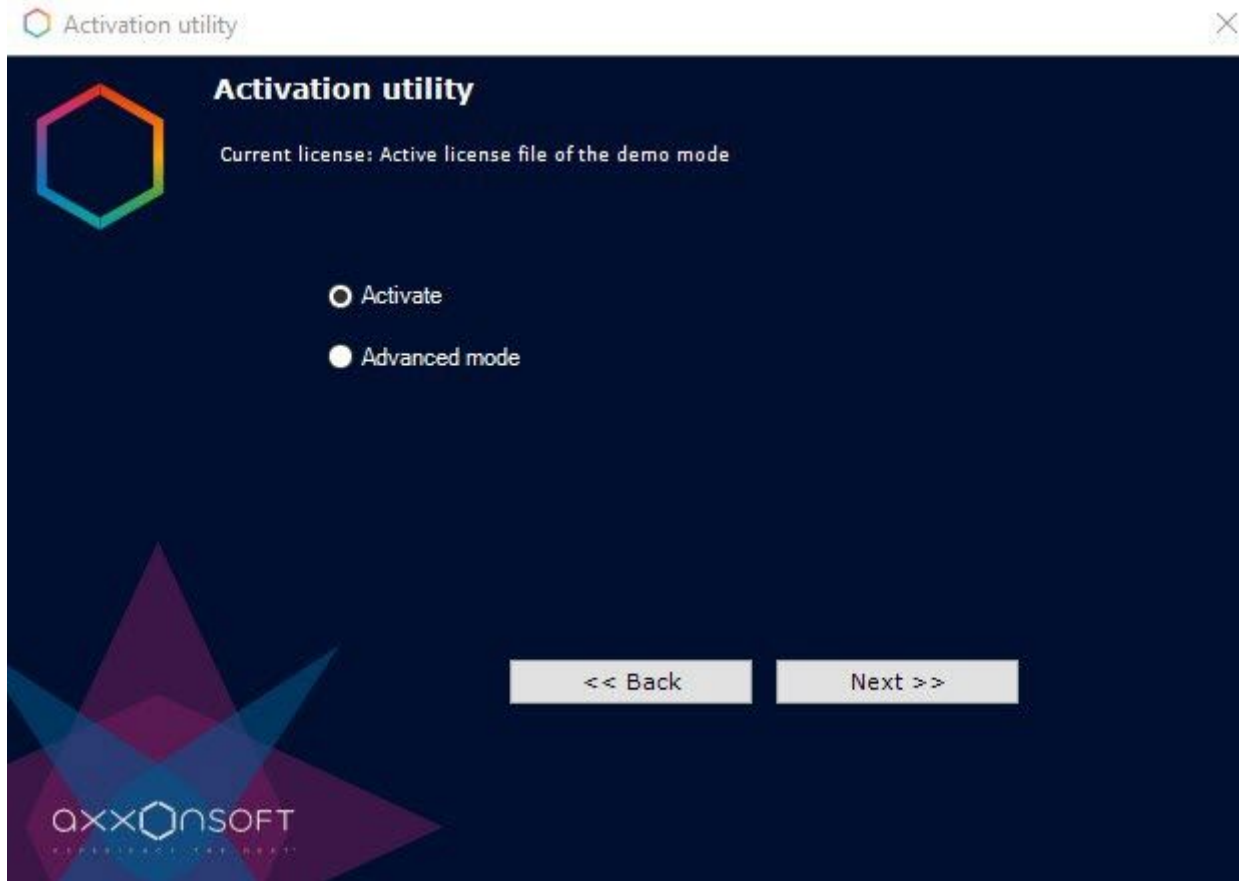

2. Select **Enter serial number** and click **Next**.

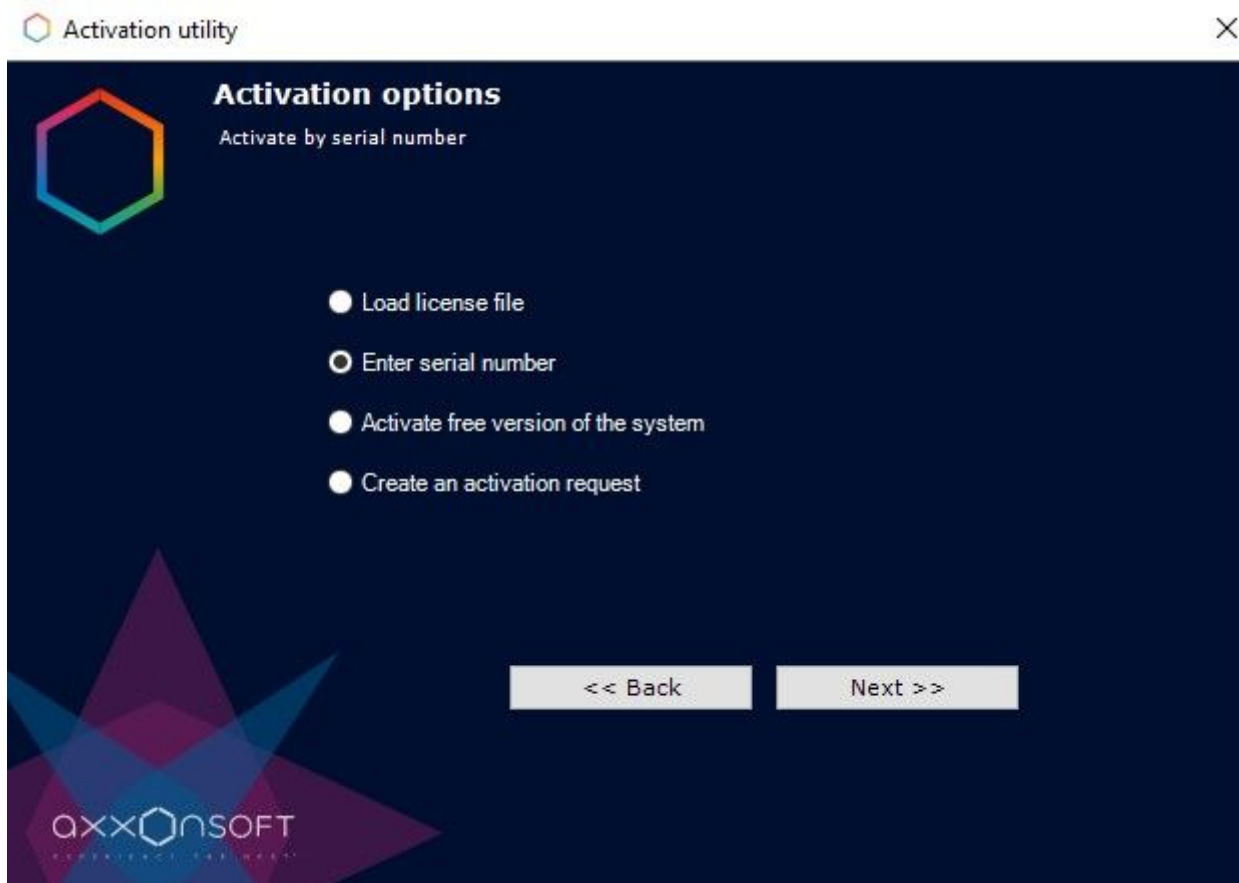

3. Enter serial number and click **Next**.

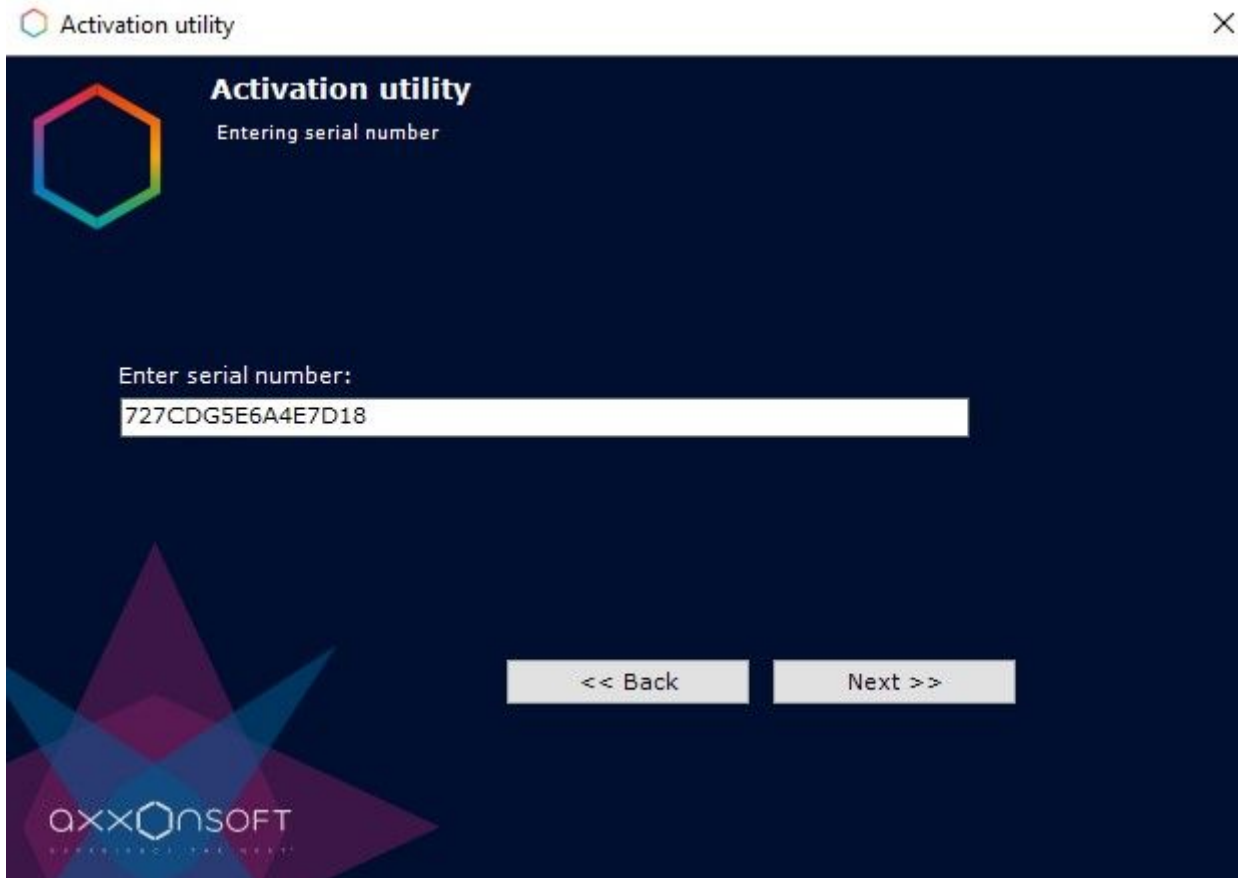

4. If there is more than one Server in the Axxon domain or in the license file, a window will open, that shows the maximum number of modules for activation. By default, the modules will be divided equally between the Servers.


Note

If there are multiple Servers in the configuration, the modules will be equally distributed among them.

5. Select the number of modules to activate and click **Next**.

Your activation request will be sent online.

If activation is completed successfully on the licensing Server (<https://sale.axxonsoft.com/>), the license file will be automatically downloaded and distributed within the system.

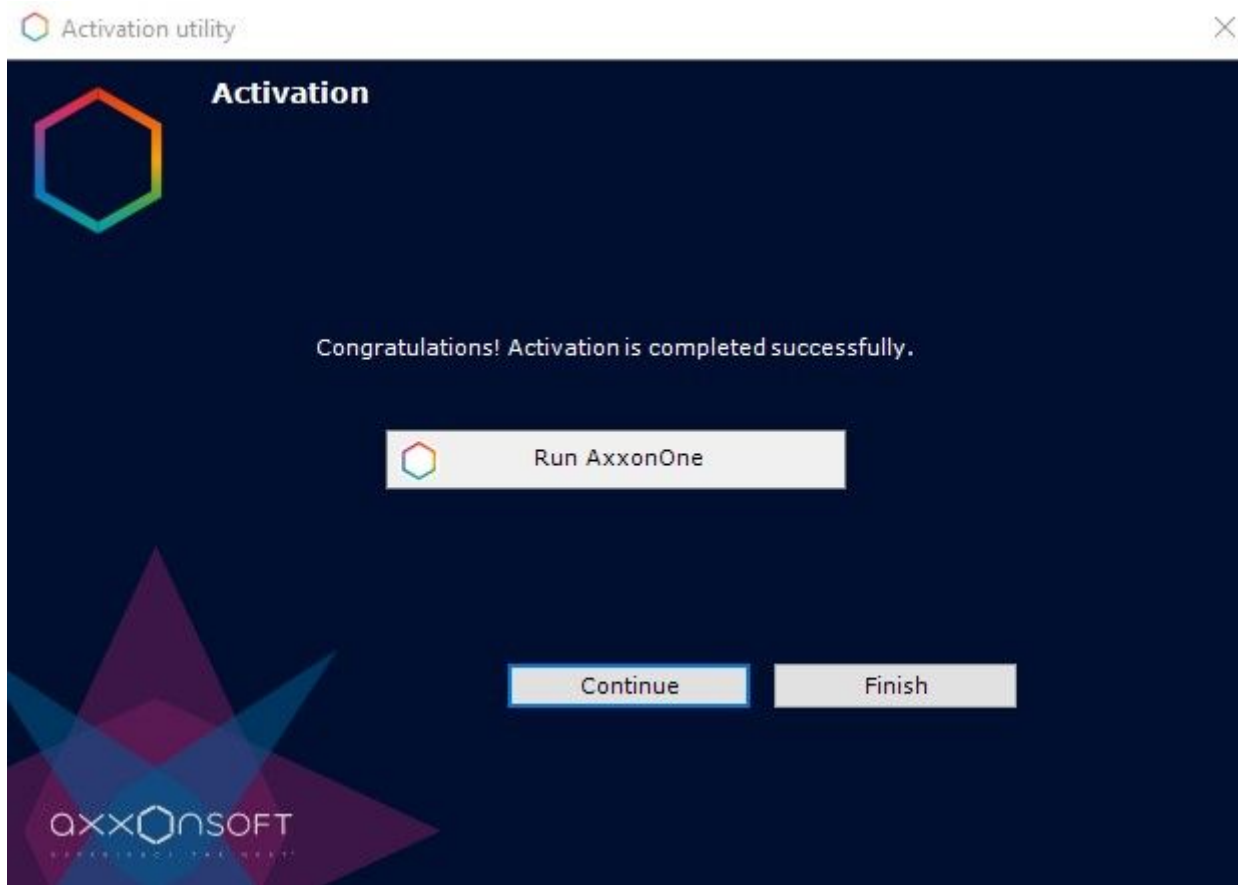



You have activated *Axxon One*.

Note

Click **Continue** to return to the Activation utility home page. To exit, click **Finish**. To close the utility and start the *Axxon One* Client, click **Run Axxon One**.

If your computer is offline, you will be prompted to save the activation request file using any of the following methods:

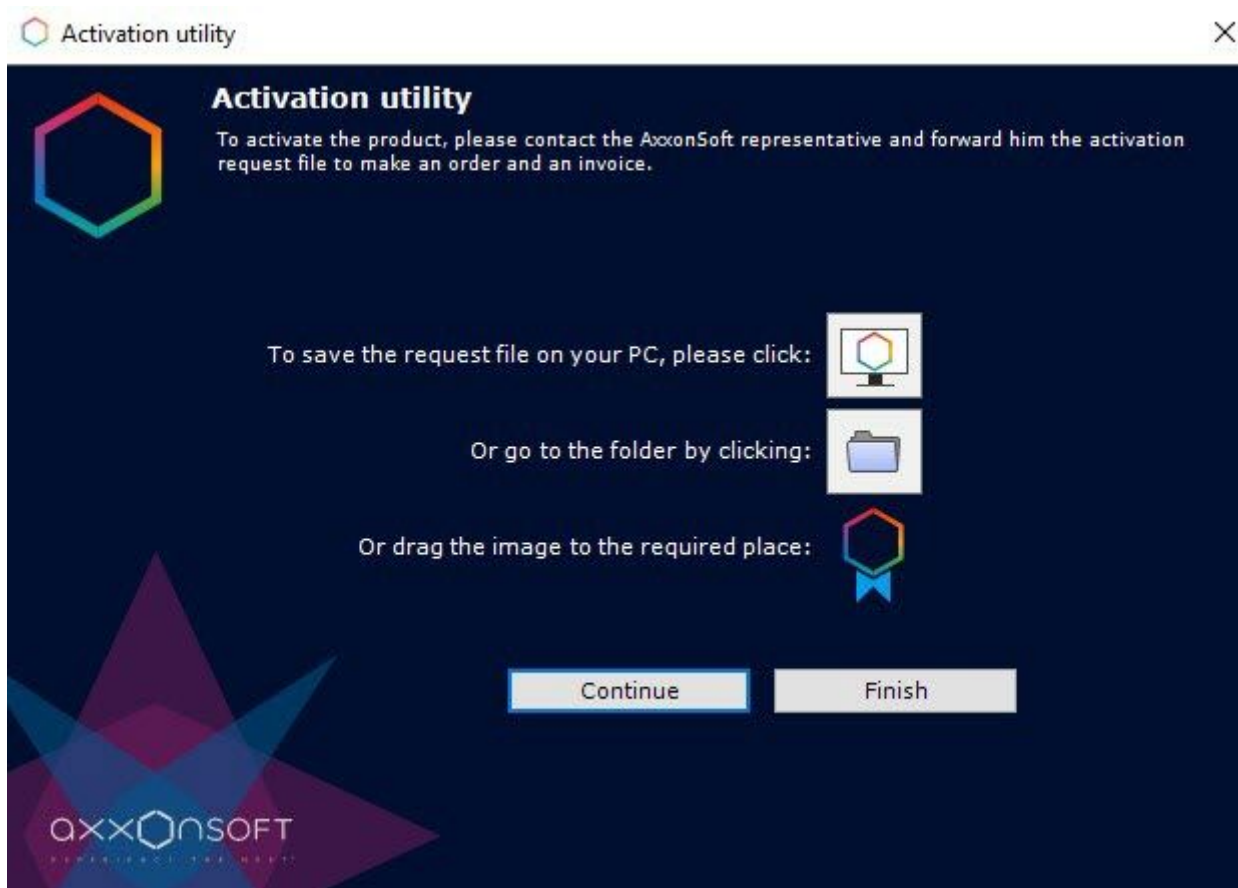

1. Click the  button in the standard Windows dialog box to browse for file location and enter the name.

2. Click the  button. The folder that contains the request file opens.

3. Drag and drop the  image to the destination folder.

Submit the request file to an AxxonSoft rep. You can also generate an activation key on your own through the licensing server's Web interface (see [Generating the Axxon One license file](#)(see page 43)) and download the license file to the system (see [Activation by applying license file](#)(see page 23)).

⚠ Attention!

The *Axxon One* Server must be restarted after activation.

9 Upgrading Axxon One

To upgrade *Axxon One*, do as follows:

1. Deactivate your license (see [Deactivating a license](#)(see page 33)).
2. Generate an activation request (see [Creating an activation request](#)(see page 21)). Proceed with payment.
3. Activate your purchased license (see [Activation by applying license file](#)(see page 23), [Activation with serial number](#)(see page 26)).

 **Note**

Skip the second step, if you activate a license for purchased configuration.

10 Transferring a license to another computer while maintaining configuration

You can transfer an *Axxon One* license to another computer while maintaining your existing configuration only if your license file and Guardant dongle are tied to each other and the network name of the new computer is the same as on the old one.

To transfer a license:

1. Save the license file (see [Saving the license file](#)(see page 36)).
2. Uninstall *Axxon One*, but save the configuration, on the old computer (see [Removal](#)⁶⁵).
3. Copy the configuration folder to a new computer (C:\ProgramData\AxxonSoft\AxxonOne by default).
4. Install *Axxon One* on the new computer.
5. Apply the license file (see [Activation by applying license file](#)(see page 23)) and insert the Guardant dongle.


Transfer of the *Axxon One* license while maintaining the previous configuration is now complete.

⁶⁵ <https://docs.axxonsoft.com/confluence/display/one20en/Removal>


11 Deactivating a license

To delete the license file from the system, follow these steps:


1. On the main page of the activation utility, select **Deactivate** and click **Next**.

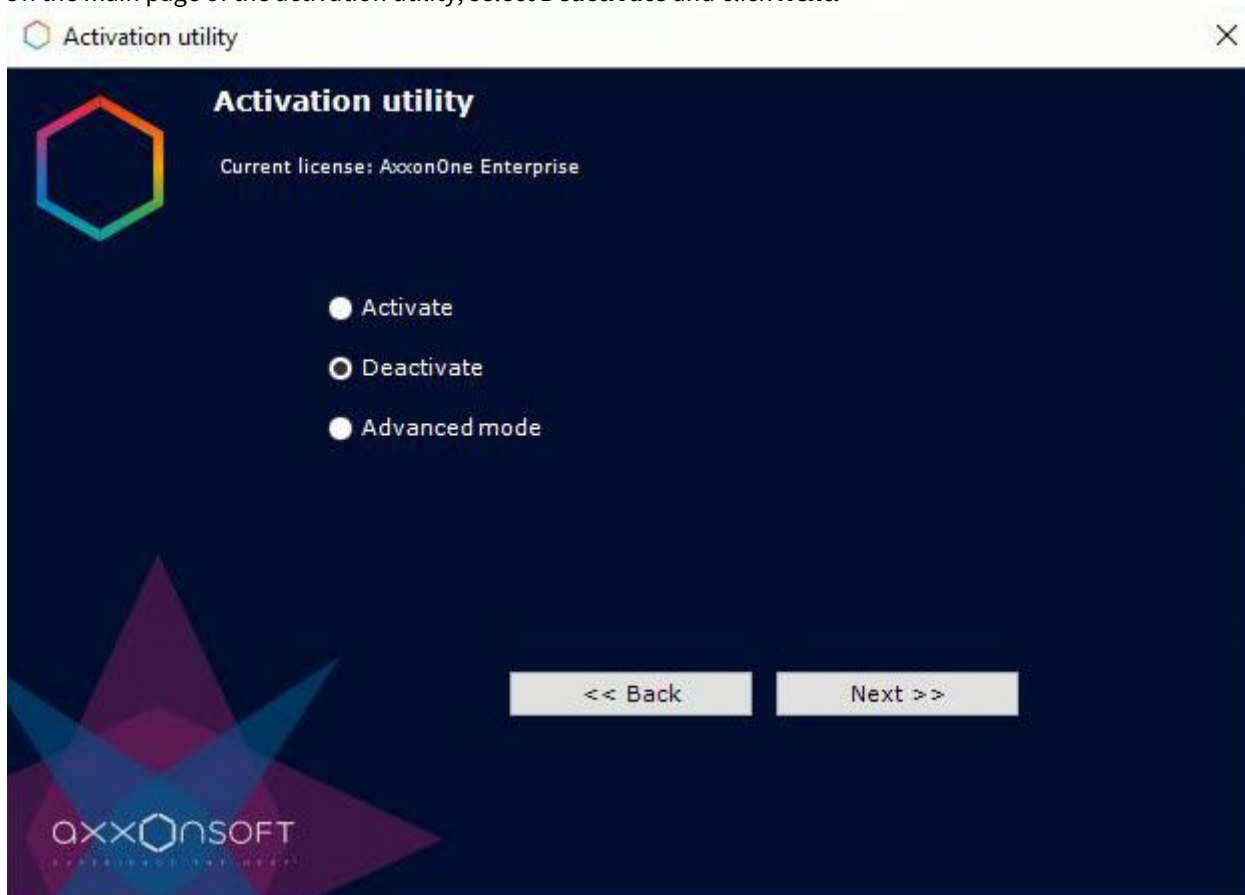


- 2. You can save the activation request file using any one of the methods prompted on the screen. Click the **Next** button.

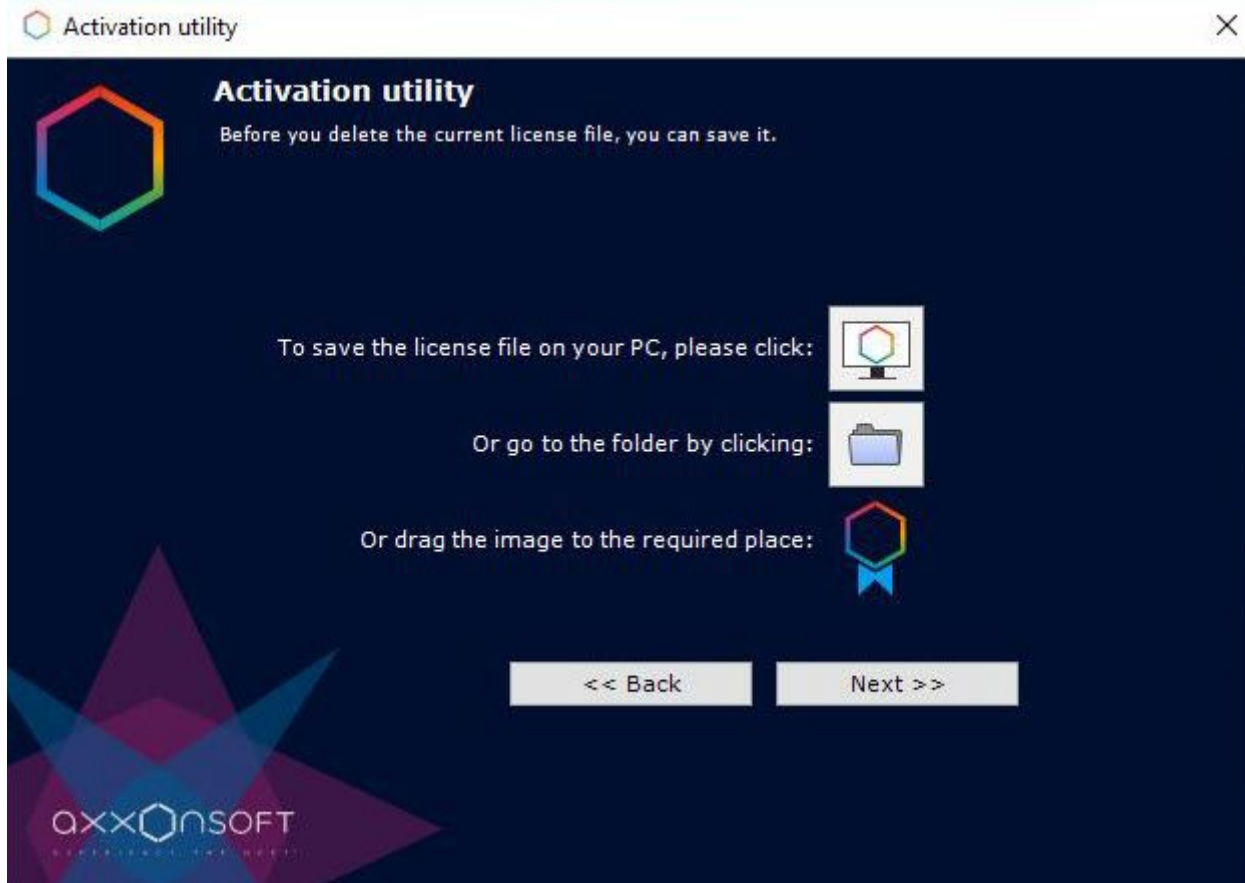

- 3. Confirm deleting a license file.

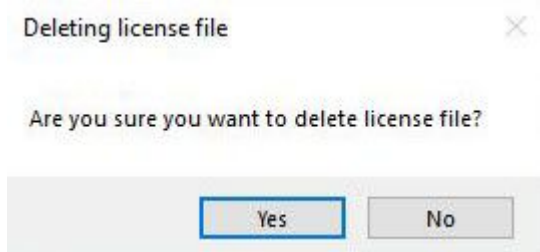

4. If the deleting completed successfully, a message is displayed.

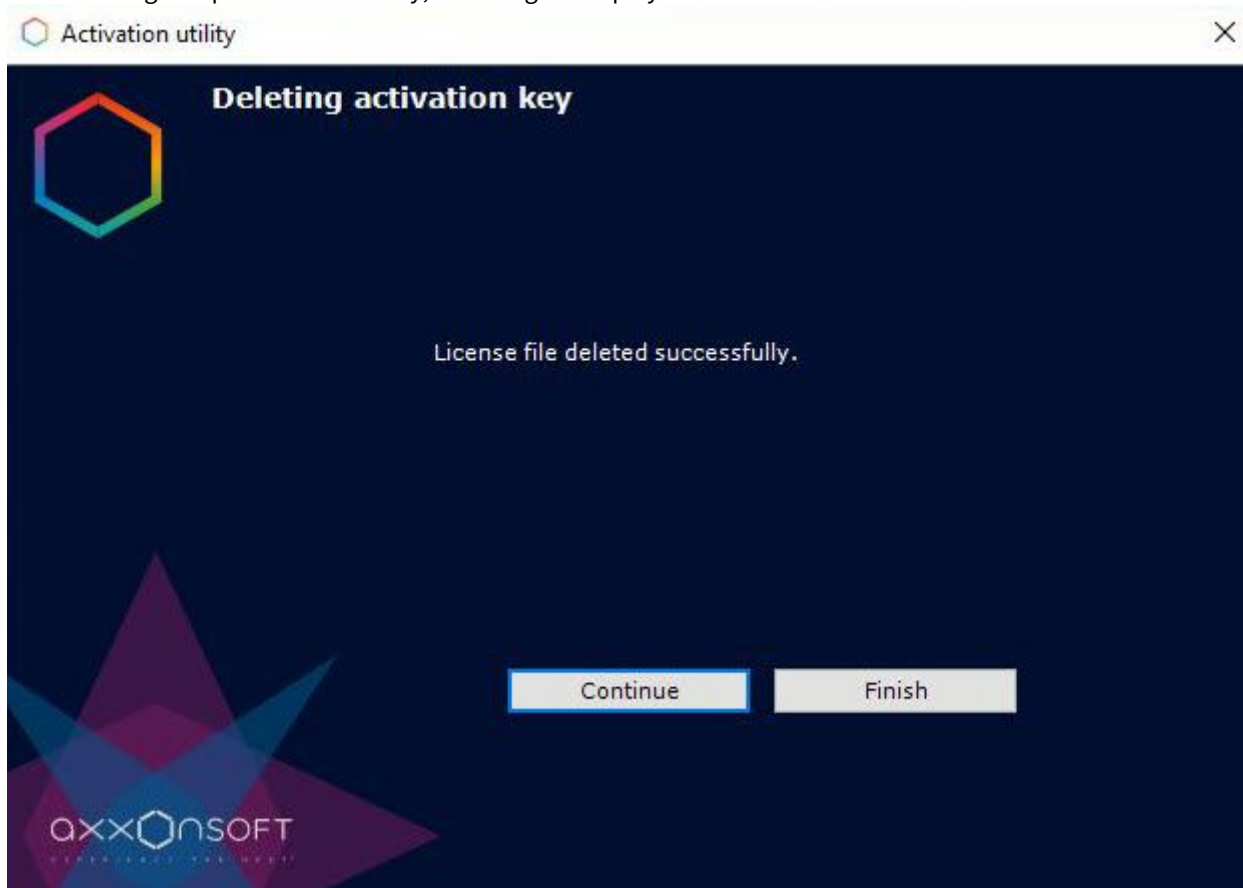

You have deleted a license file. Now your VMS runs in *Axxon One* Demo mode.

Note

To return to the Home page of the activation utility, click **Continue**, to exit it – click **Finish**.

Attention!


The *Axxon One* Server must be restarted after deactivation.

12 Additional license utility actions


12.1 Saving the license file

To save the license file, follow these steps:


1. On the main page of the activation utility, select **Advanced mode** and click the **Next** button.

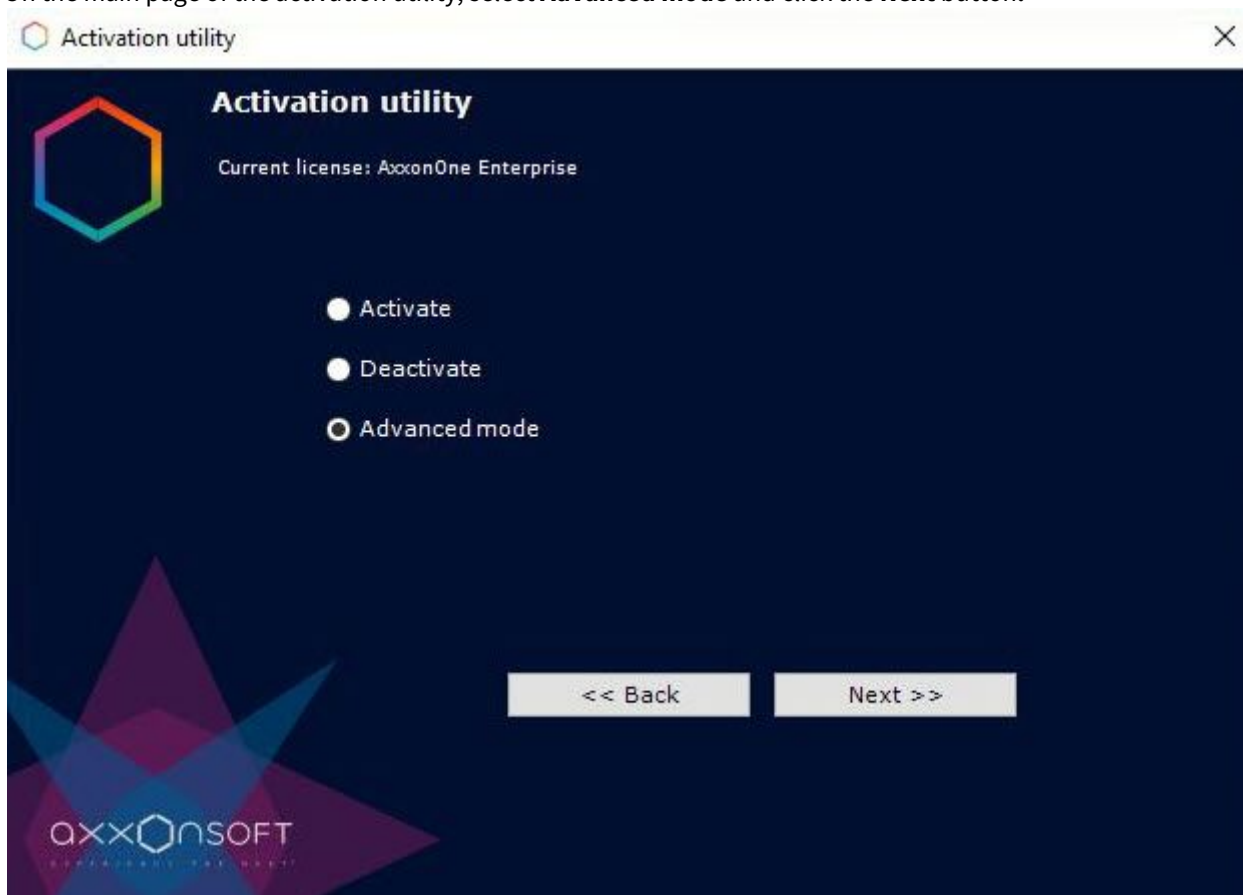

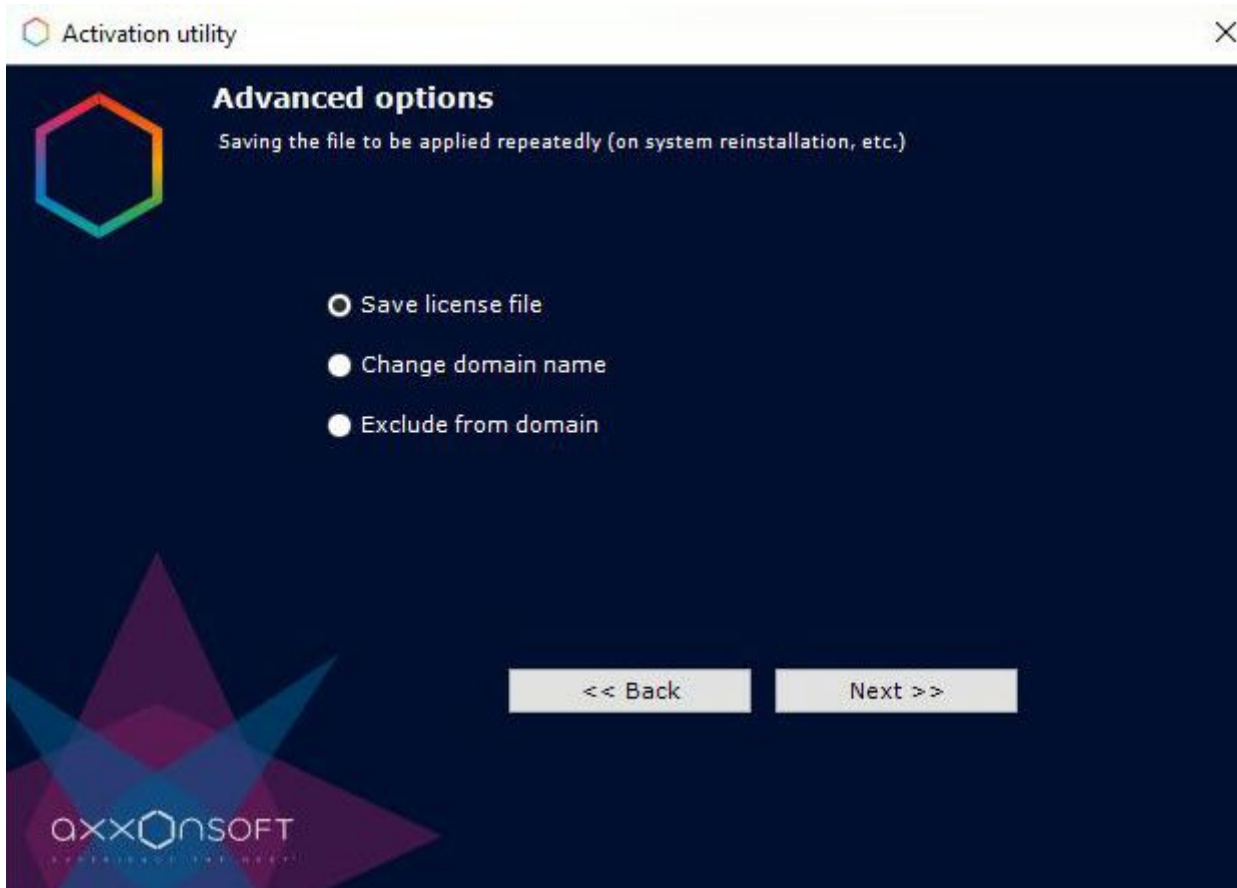


2. Select **Save license file** and click the **Next** button.

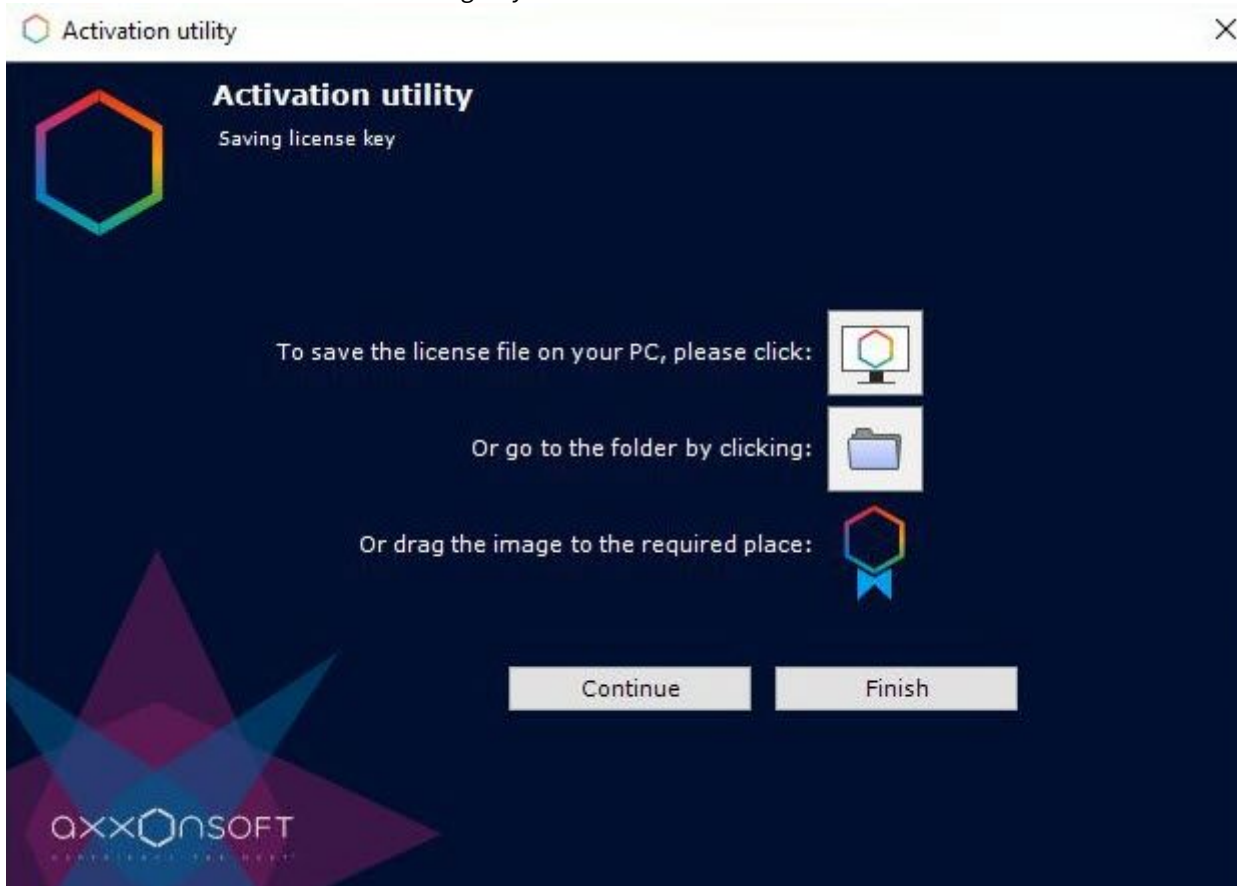

3. Save the license file in one of the following ways.



- a. Click the  button in the standard Windows dialog box to browse for file location and enter the name.
- b. Click the  button. The folder that contains the request file opens.
- c. Drag and drop the  image to the destination folder.


Saving the license file is complete.

To return to the license utility home screen, click **Continue**. To exit from the utility, click **Finish**.


12.2 Changing the domain name

To change the domain name from that given during the system installation, follow these steps:

1. On the main page of the activation utility, select **Advanced mode** and click the **Next** button.

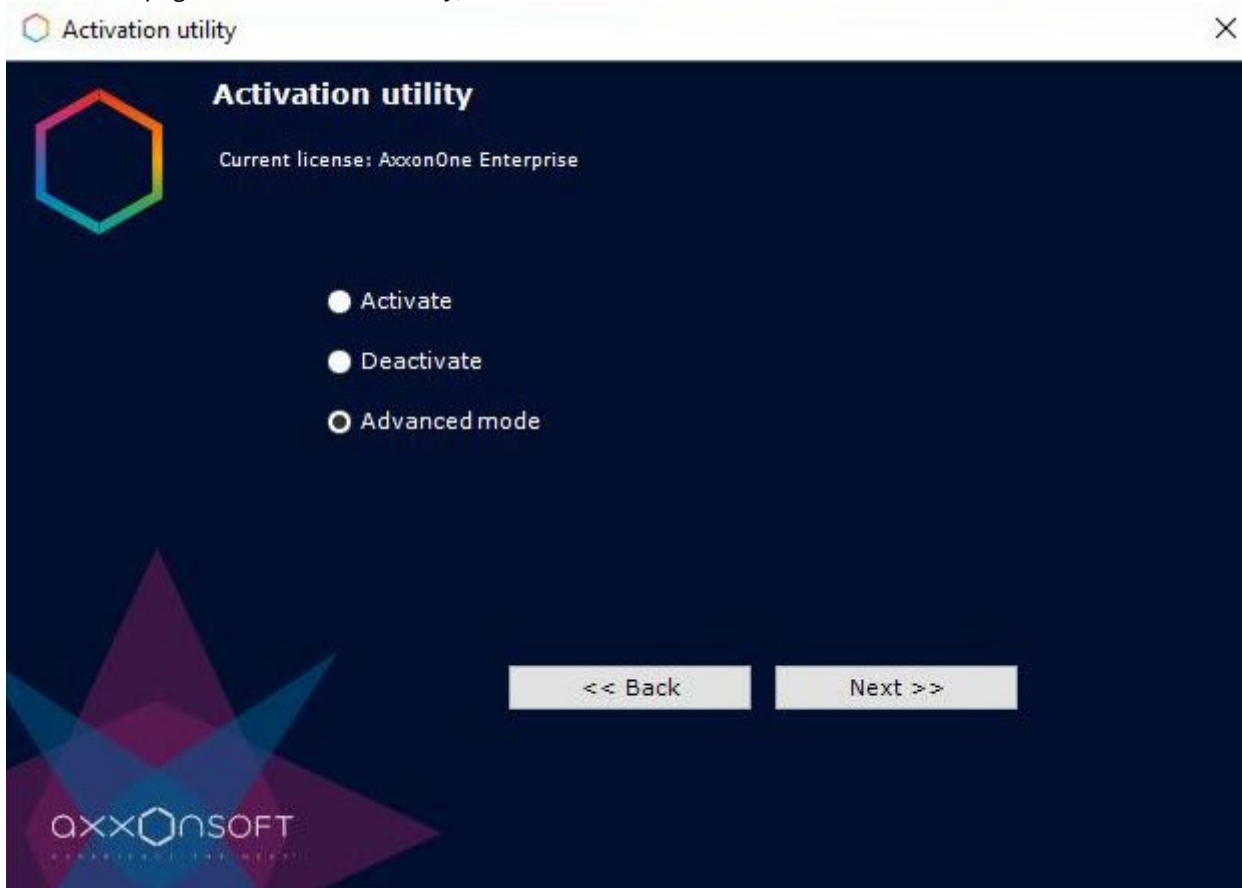

2. Select **Change domain name** and click the **Next** button.

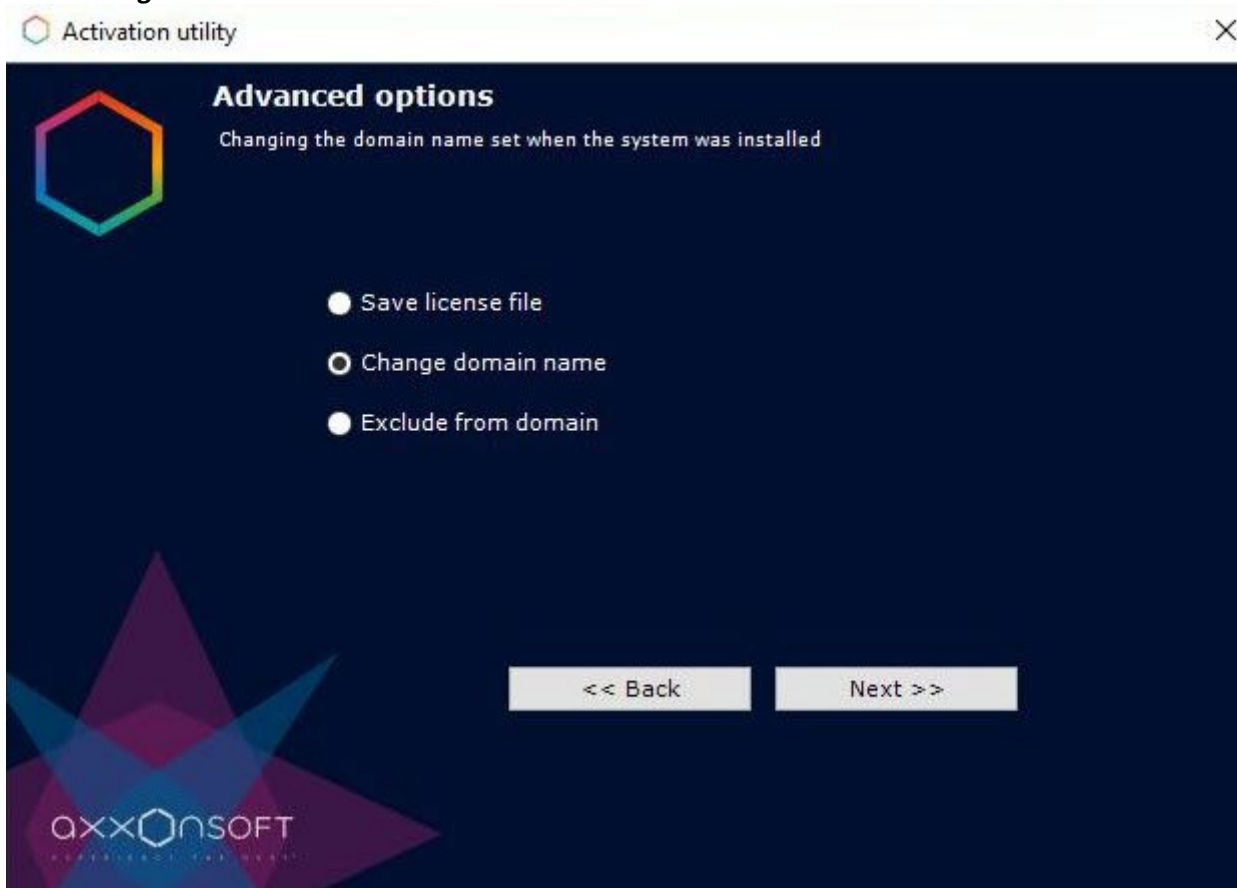


3. Specify the new domain name and click **Next**.



**Note.**

The domain name may only consist of letters-numeric characters and a dash (-). The dash not be the first or last character in the name.

On success a message will appear.

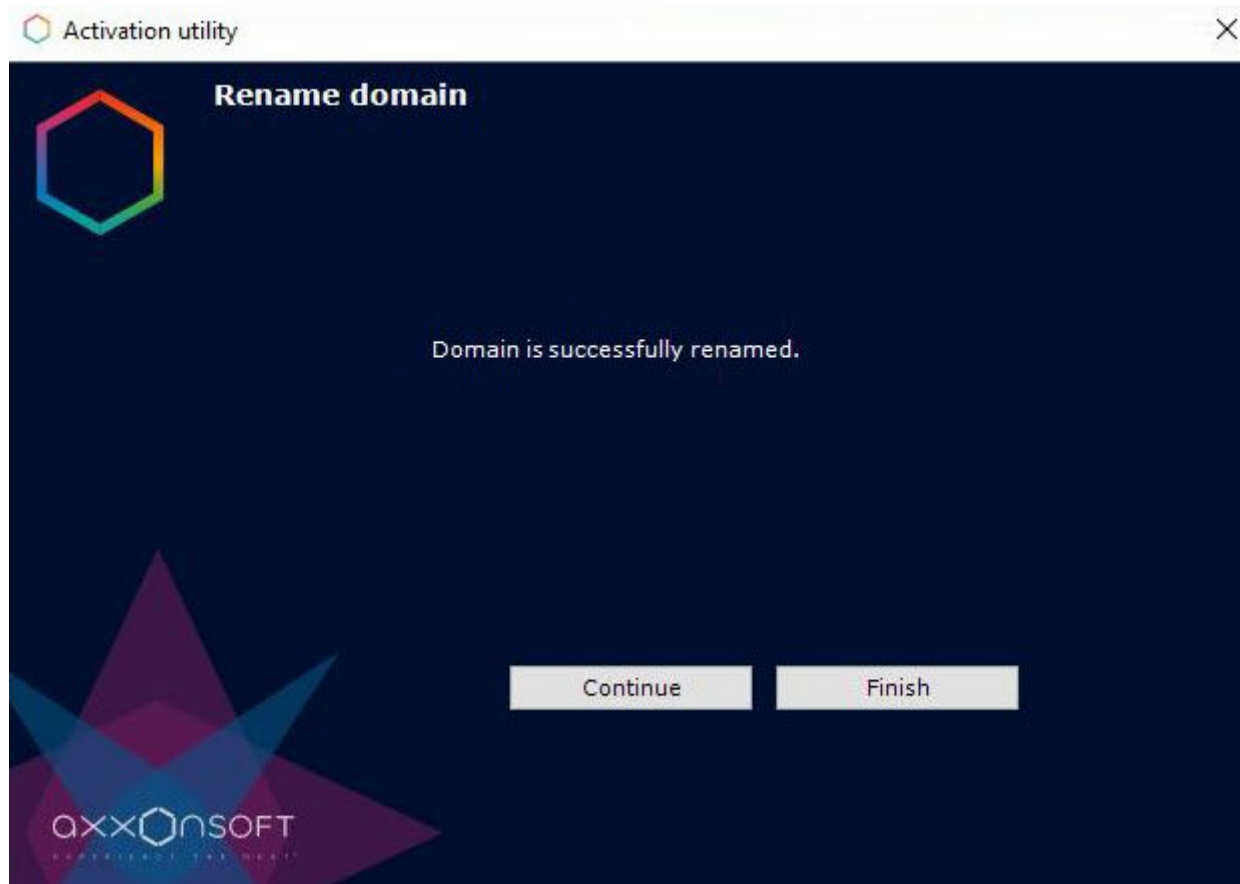


To return to the Home page of the activation utility, click **Continue**, to exit it – click **Finish**.


12.3 Excluding the Current Server from an domain

To exclude the Server currently connected to the activation utility from an domain, perform the following steps:


1. On the main page of the activation utility select **Advanced mode** and click **Next**.

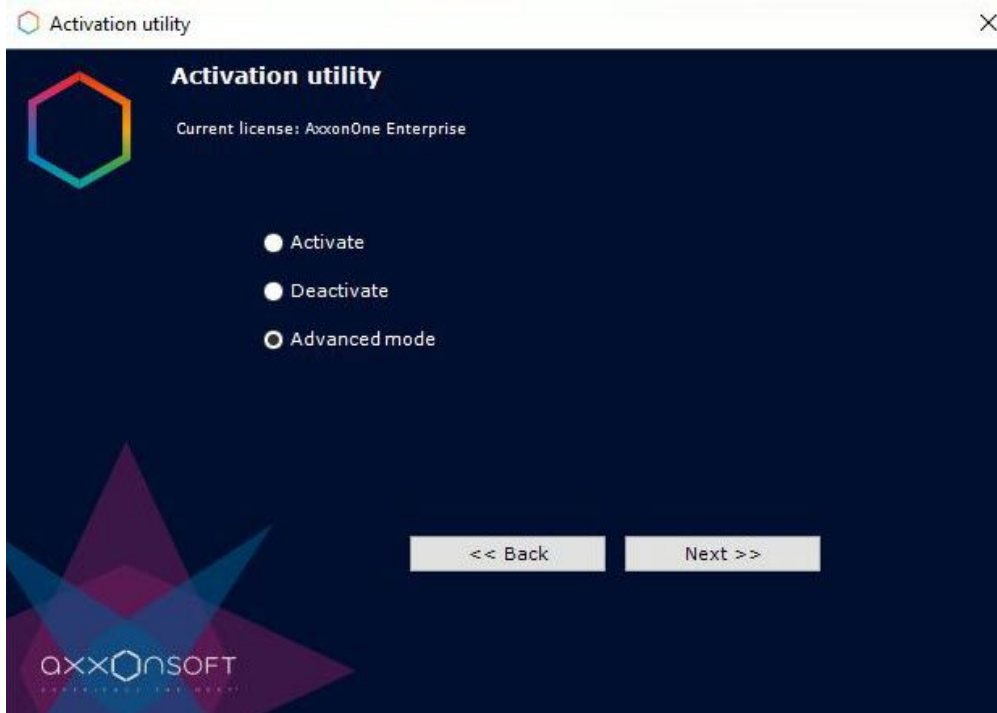

2. Select **Exclude from domain** and click **Next**.

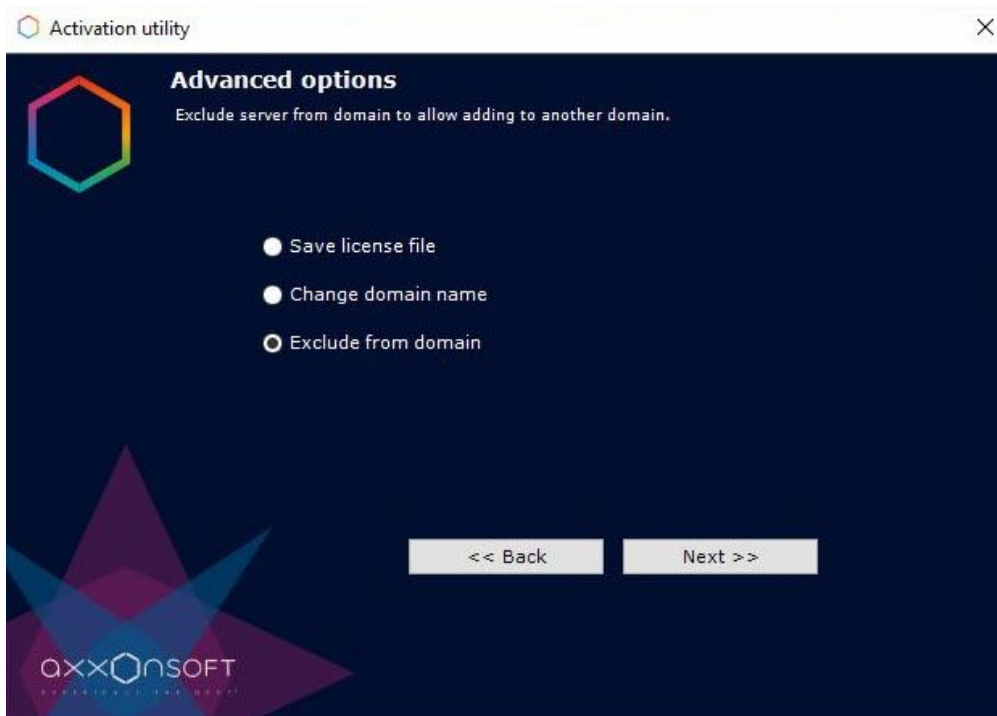

If the operation completes successfully, a notification message will appear.

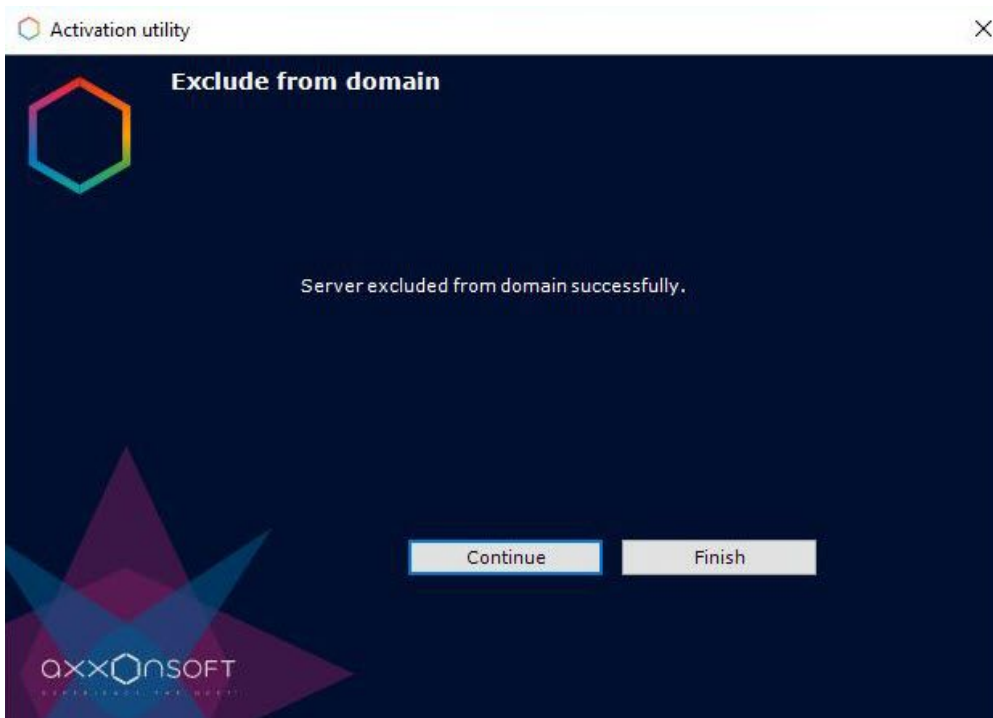

The Server has been excluded from the domain.

Note

To return to the Home page of the activation utility, click **Continue**, to exit it – click **Finish**.

13 Generating license files via the licensing web server

The license file can be obtained from an AxxonSoft representative, by sending him a request file, or may be self-generated on the license server.

To generate a license file via the licensing web server, a request file is needed for activation of the required licensing for *Axxon One*.


13.1 Generating the Axxon One Free license file

To generate the *Axxon One* Free license file, follow these steps:


1. Go to the web server at the following address: <https://sale.axxonsoft.com/sale/>.



2. Go to the link: **Activate Free**.
3. In the form that appears on the page, specify the path to the saved activation request file.

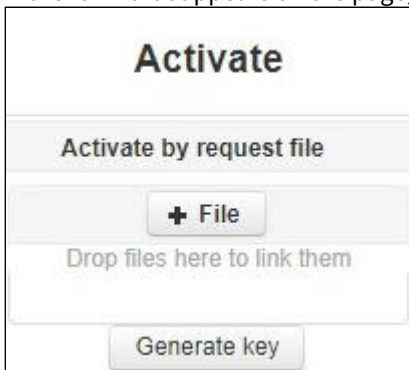

4. Click **Generate key**.
5. Download the license file **license.key**.

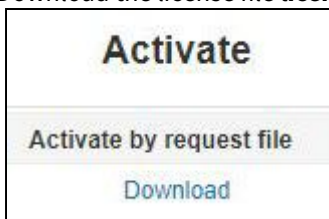

The generation of the *Axxon One* Free license file is complete.

13.2 Generating the Axxon One license file

The self-generated *Axxon One* license file is available only upon the request for the product serial number activation. The product serial number is available after payment.


To generate a license file:

1. Go to the web server at the following address: <https://sale.axxonsoft.com/sale/>.




2. Click **Activate**.
3. Click the **+ File** button and select an activation request file.

Key generate

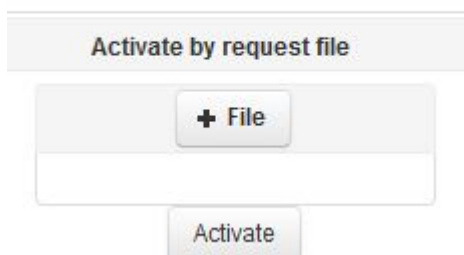

4. Click **Activate**.
5. Download the license file **license.key**.

 Key generate




The generation of the *Axxon One* license file is complete.

14 Decoding the activated license

With the help of decoding, you can find out the type and the expiration date of the license, as well as what objects are allowed to be used in the system and in what quantity.

For this, do the following:

1. Go to <https://sale.axxonsoft.com/sale/>.
2. Log into the website: click **Login** and enter your username and password.

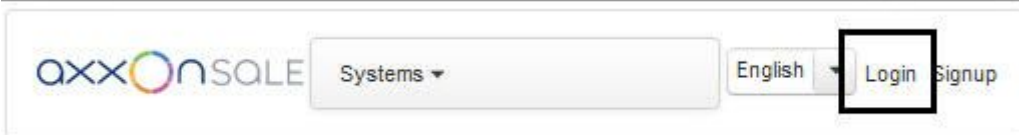


Note
Decoding is available to the registered users only. Click **Signup** to register.

3. Select **Systems** → **Decoding**.



4. Upload the license file into the **File** form.

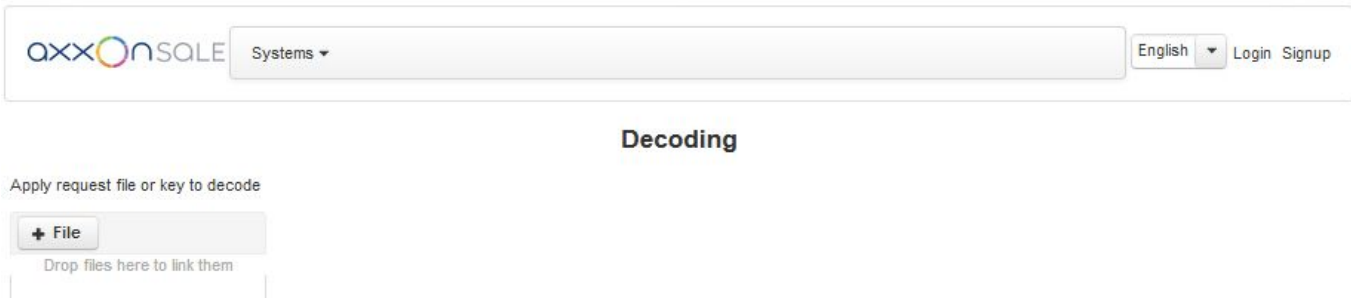

Note
The executable file of the LicenseTool.exe activation utility is located in the <Axxon One installation directory>\AxxonSoft\AxxonSmart\bin\ folder.

Decoding of the activated license is complete.

The information about the license type and expiration date, and the system features will be displayed on the website.

Decoding

System type: AxxonOne Enterprise
Duration license: From 16.06.2022 00:00 To 16.06.2122 00:00
Generator: ngp.axxonone
Serial number: [REDACTED]
Source systems: 1238884

Modules	
Name	Qty
Event Sources	0
Fire Detector	2
LPR detection	4
LPR detection (Any)	0
LPR detection RR for search in archive	2
LPR detection VT	2
Max size of archives	∞
Medical Mask Detector	2
NVR module	0
Neural networks based object filter	2
Neural networks based object tracker	2
Number of archives	∞
Offline Analytics for one video channel	0
People counting	2
Programming	1
Queue Length Estimation	2
Search in Archive	2
Situation Analysis Detection Tools (Situation Analysis)	∞
Smoke Detector	2
Tag&Track Pro	2
Video channel (Linux)	0
Video channels	2
Video channels (any)	2
VmdaChannelBindingLight	∞