



# Activation Guide

1. Activation Guide. Introduction. . . . .	3
2. Overview on licensing the Axxon Next software system . . . . .	3
2.1 Types of licenses . . . . .	3
2.2 Linking the license file to the computer hardware . . . . .	4
2.3 Product license utility . . . . .	5
3. Licensing Axxon Next Free Version . . . . .	6
3.1 Activating the Axxon Next Free Version license . . . . .	6
3.1.1 Automatic activation of the Axxon Next Free Version . . . . .	6
3.1.2 Manually sending a request and downloading the license file to the system (free version) . . . . .	8
3.2 Upgrading the Axxon Next Free Version license . . . . .	9
3.2.1 Upgrading the Axxon Next Free Version license by serial number (payment) . . . . .	9
3.2.1.1 Automatic upgrading of the Axxon Next Free Version license . . . . .	9
3.2.1.2 Upgrading the Axxon Next Free Version license manually . . . . .	12
3.2.2 Upgrading the license without a serial number (no payment) . . . . .	15
4. Licensing Axxon Next . . . . .	16
4.1 Activating the Axxon Next license . . . . .	16
4.1.1 Activating the Axxon Next license by serial number (payment) . . . . .	16
4.1.1.1 Automatic activation of the the Axxon Next license . . . . .	16
4.1.1.2 Manually sending a request and downloading the license file to the system . . . . .	19
4.1.2 Activating the Axxon Next license without a serial number (no payment) . . . . .	21
4.2 Upgrading the Axxon Next license . . . . .	23
4.2.1 Upgrading the Axxon Next license by serial number (payment) . . . . .	24
4.2.1.1 Automatic upgrading of the Axxon Next license . . . . .	24
4.2.1.2 Manually upgrading the license . . . . .	27
4.2.2 Upgrading the Axxon Next license without a serial number (no payment) . . . . .	29
5. Additional license utility actions . . . . .	30
5.1 Distributing the license file to the system . . . . .	30
5.2 Deleting the license file from the system . . . . .	32
5.3 Saving the license file . . . . .	34
5.4 Changing the Axxon-domain name . . . . .	36
6. Generating license files via the licensing web server . . . . .	38
6.1 Generating the Axxon Next Free Version license file . . . . .	38
6.2 Generating the Axxon Next license file . . . . .	39

# Activation Guide. Introduction.

## On page:

- [General information](#)
- [Purpose of the document](#)

## General information

No part of this publication may be reproduced or transmitted in any way or in any form without the prior written consent of *AxxonSoft*.

The *Axxon Next* brand is owned by *AxxonSoft*. All other trademarks mentioned herein are the property of their respective owners.

The document contains information that is current at the time of publication. The document may be changed by *AxxonSoft* without prior notice to other parties

## Purpose of the document

The [Axxon Next software system Activation Manual](#) provides the information necessary for licensing the *Axxon Next* software system.

The chapters titled [Activation Guide. Introduction.](#) and [Overview on licensing the Axxon Next software system](#) are intended as general guidance on the *Axxon Next* licensing process.

[Licensing Axxon Next Free Version](#) chapter contains instructions on how to activate and upgrade a free *Axxon Next Free Version* license.

[Licensing Axxon Next](#) chapter contains instructions on how to activate and upgrade an *Axxon Next* license.

A description of additional actions that may be carried out with the license utility is provided in the [Additional license utility actions](#).

[Generating license files via the licensing web server](#) chapter provides instructions on generating license files.

## Overview on licensing the Axxon Next software system

### Types of licenses

Immediately after installation or after propagation of the demo licenses in the system (see the section on [Deleting the license file from the system](#)), the software will run in demo mode. The working period of the system in demo mode is from 08:00 to 18:00. Other restrictions on the software, including functionality, when running in demo mode are not imposed.

The activation of the *Axxon Next* software system is needed for a full-featured security system. Activation of the software is done by the system propagation of the license file.

Information on all types of *Axxon Next* licenses is provided below.

Type of license	Number of servers in the system	Number of video channels in a single server	Archive volume	Intelligent archive search	Price
Demo mode (working period 08:00 - 18.00)	Unlimited	Unlimited	Unlimited (determined by the size of disk space)	Yes	Free
<i>Axxon Next Free Version</i>	1 (fixed)	16 (fixed)	1 Terabyte	No	Free
<i>Axxon Next</i>	Unlimited	Unlimited	Unlimited (determined by the size of disk space)	Yes (if necessary)	For software package pricing please contact with the company-distributor of <i>AxxonSoft</i> production

An *Axxon Next Free Version* license can be upgraded to *Axxon Next*. The upgraded license is a paid license. After the upgrade, it is possible to use unlimited backup. In addition to the upgrade it is possible to purchase additional video channels and servers, as well as activating forensic search ([Upgrading the Axxon Next Free Version license](#)).

In the case of an *Axxon Next* license, an upgrade may be purchased to increase the number of system servers and video channels, or to activate forensic search ([Upgrading the Axxon Next license](#)).

**i Note**

When you upgrade the *Axxon Next* license you may not reduce the number of server video channels.

Information on the current license type is displayed in the Server properties in the fields: **Type of product: Axxon Next Free Version** or **Axxon Next**.

## Linking the license file to the computer hardware

The license file contains information about all server components (motherboard, CPU, hard disk, graphics adapter, memory, network card). Changing any of the main server configuration components leads to the loss of the license. For example, the simultaneous replacement of the motherboard and processor will lead to the loss of the license. However, the replacement or addition of video memory will be without consequences for the license.

**i Note.**

Software that creates a virtual device (VirtualBox, VmWare, and others) may lead to the loss of the license. If you experience this problem it is recommended that all virtual devices be removed from computer hardware layout or for you to obtain a new license file.

For this reason, when operating *Axxon Next* consider the following features:

1. The activation request should be performed from the computer wherein the *Axxon Next* server will be located.
2. Upgrading the license is possible only when you have saved the basic configurations for all servers.
3. The transfer of the license from one computer to another is not possible.

## Product license utility

Activating an *Axxon Next* license is done through the product license utility.

The product license utility is launched from the *Windows Start* menu: **Start -> Programs -> Axxon Next -> Utilities -> Product Activation.**

**Note.**



The product license utility executable file `LicenseTool.exe` is located in the following directory: `<Axxon Next installation directory>\Axxon Next\bin\`.

Next, select the name of one of the *Axxon*-domain servers, which will provide the license file (this file is distributed to all servers running at the time of activation of this *Axxon*-domain), and login to the system using the *Axxon Next* administrator name and password, to continue the activation process.



The screenshot shows a Windows application window titled "Activation utility". The window contains a "User authentication" section with the instruction "Choose Server to connect and enter administrator's username and password". There are three input fields: "Server" (a dropdown menu showing "LOCALHOST"), "Username" (a text box with "root"), and "Password" (a text box with "\*\*\*\*"). A "Log in" button is positioned below the password field. The "EXPERIENCE THE next" logo is in the top right corner.

 After the download is complete the license utility will display the home screen.

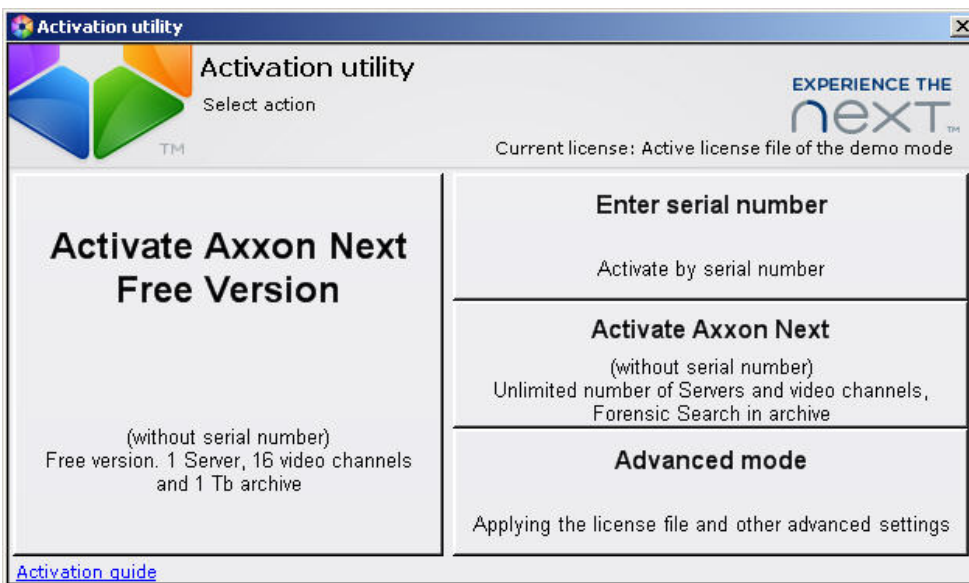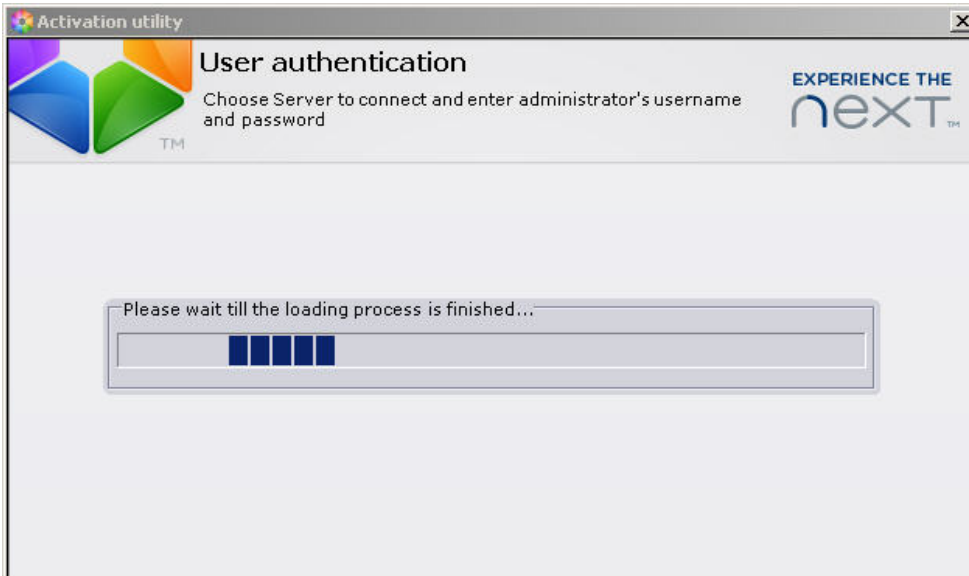


## Licensing Axxon Next Free Version

[Play corresponding video](#)

### Activating the Axxon Next Free Version license Automatic activation of the Axxon Next Free Version


**⚠ Attention!**  
Requires an Internet connection.

 To automatically activate the free *Axxon Next Free Version* license, go to the license utility home screen and click **Activate Axxon Next Free Version**.

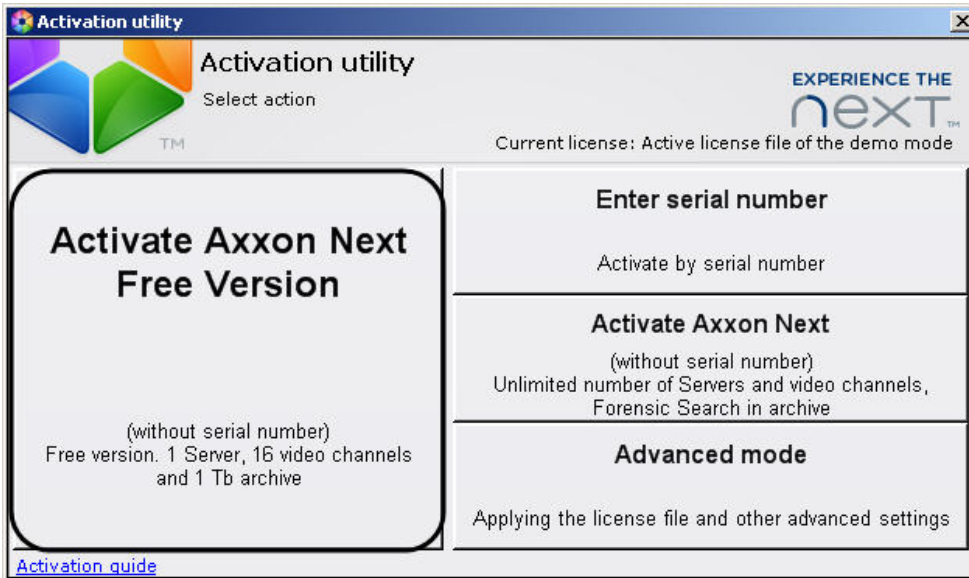


**⚠ Attention!**  
The number of cameras created in the system at the time of activation should not exceed 16.

 The activation request will be sent via the Internet.

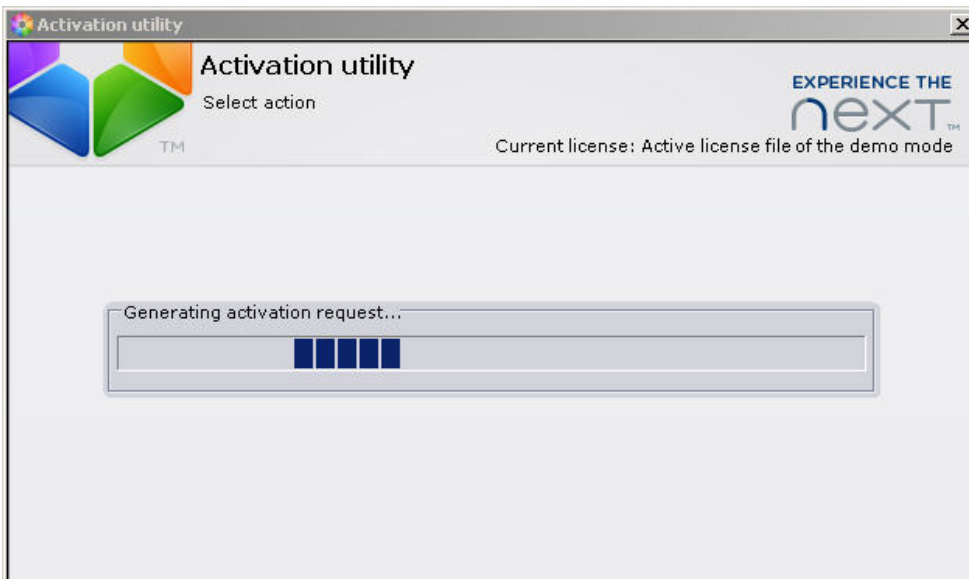

Upon successful activation on the license server (<https://sale.itv.ru>), the license file will automatically download and distribute on the system.

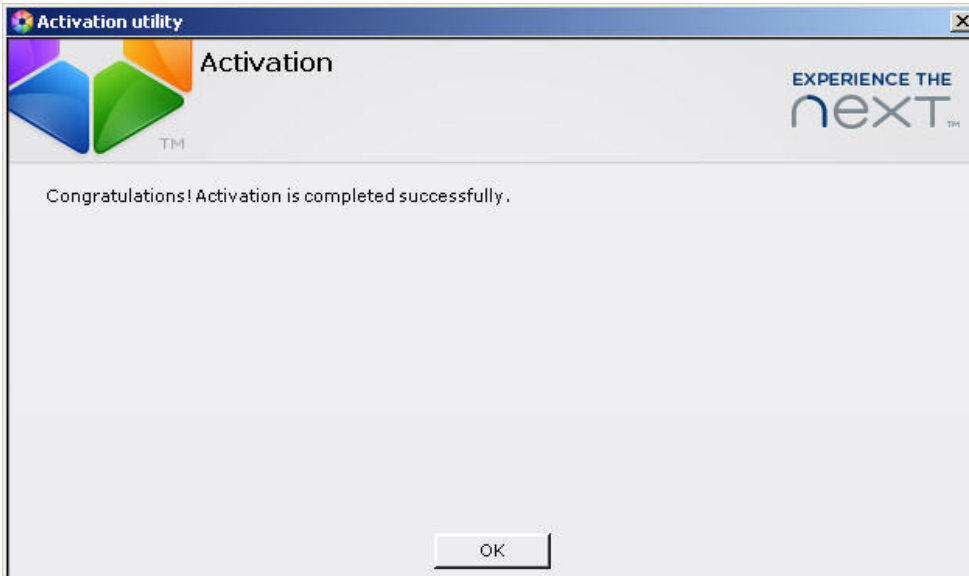

To return to the license utility home screen, click **OK**. To exit from the utility, click .


The activation of the free *Axxon Next Free Version* license is complete.

## Manually sending a request and downloading the license file to the system (free version)


This method is used if the computer running Axxon Next is not connected to the Internet.



To send a request to activate and download the license file to the system the following steps must be performed:

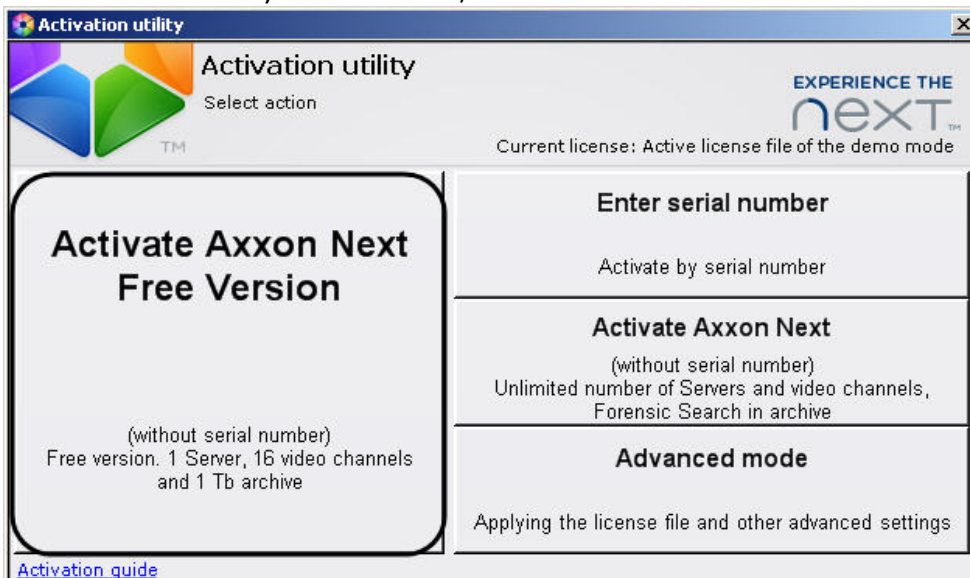 1. On the license utility home screen, click **Activate Axxon Next Free Version**.

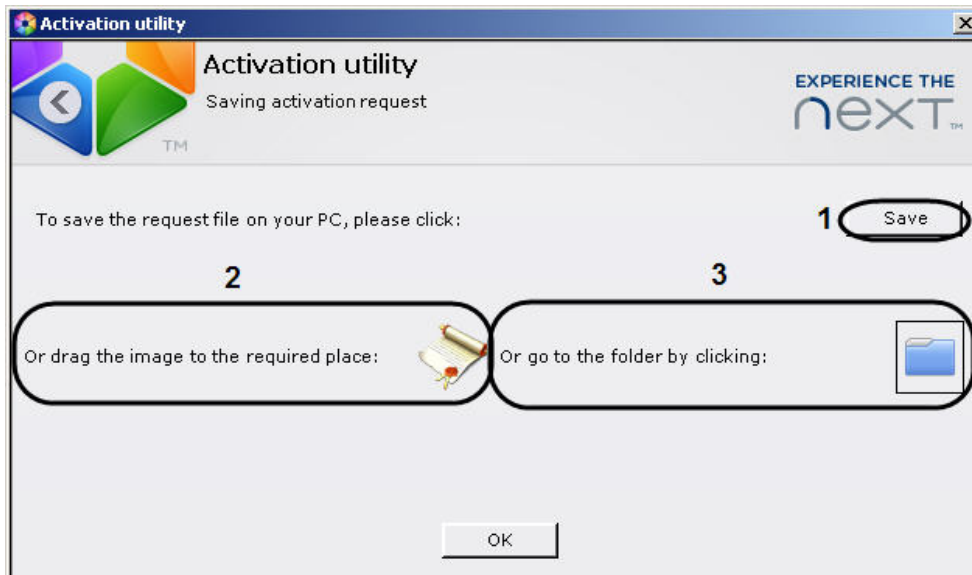

The saving activation request window will open.



2. You can save the activation request in one of the following ways:
  - a. Click **Save** (1), and enter the name and location in the standard *Windows* dialog box;
  - b. Use the mouse to drag the  image to the required folder (2);
  - c. Click , to open a folder in which to place the request file (3).

**⚠ Attention!**

The number of cameras created in the system at the time of activation should not exceed 16.

**ℹ Note.**

The request file can be created with any number of cameras, but if their number exceeds 16, the license server will refuse to generate a key.

3. Send the request file to an *AxxonSoft* representative or manually to generate a license file on the license server. The process to generate a license file is described in the section on [Generating the Axxon Next Free Version license file](#).
4. Download the license file to the system (see [Distributing the license file to the system](#)).

The activation of the *Axxon Next Free Version* license is complete.

## Upgrading the Axxon Next Free Version license

It is possible to upgrade the *Axxon Next Free Version* license to an *Axxon Next* license. The upgrade of the license is activated by purchasing additional components when the system already has a license file distribution. When upgrading the *Axxon Next Free Version* license you may not increase the number of servers in the system. To increase the number of servers you must delete the license file (see section on [Deleting the license file](#)), and activate an *Axxon Next* license for the required configuration (see section on [Activating an Axxon Next license](#)).

The process of upgrading the *Axxon Next Free Version* license is dependent on serial number availability.

**⚠ Attention!**

You must restart the Server for the correct operation of Axxon Next after its activation.

 
## Upgrading the Axxon Next Free Version license by serial number (payment)

## Automatic upgrading of the Axxon Next Free Version license


Note! Requires an Internet connection.

To automatically activate the *Axxon Next Free Version* license upgrade by serial number, follow these steps:


1. On the license utility home screen, click **Enter serial number**.

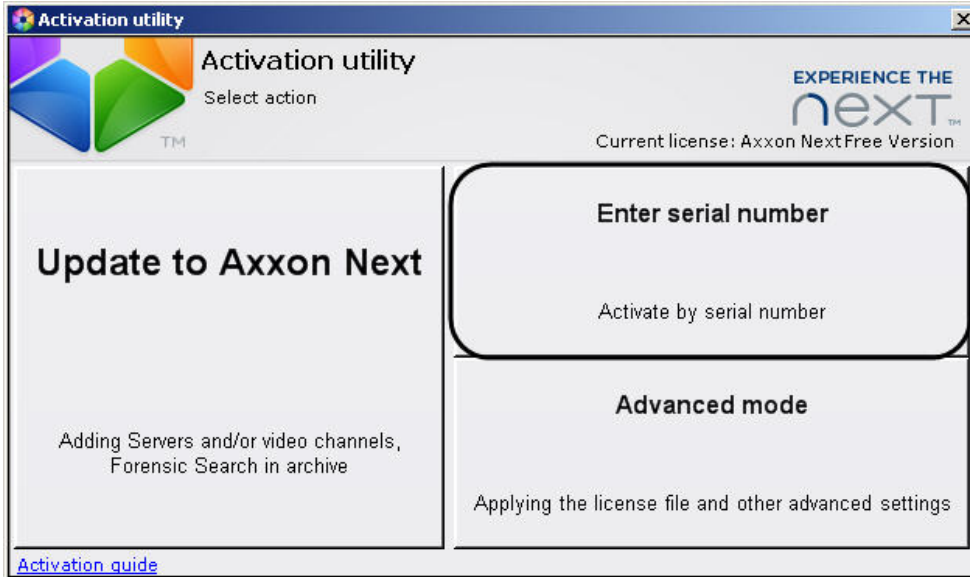

 2. Enter serial number and click **OK**.

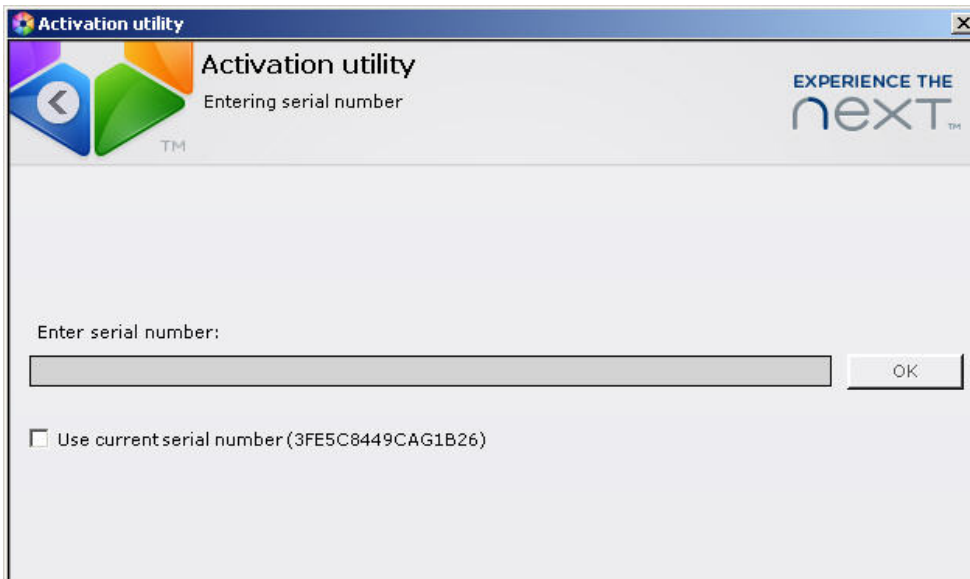


3. Select the method of obtaining the system configuration:
  - a. **Use current configuration** (for users who have already configured the system).
  - b. **Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it).  
If this method is selected, it will proceed to set up the required configuration.

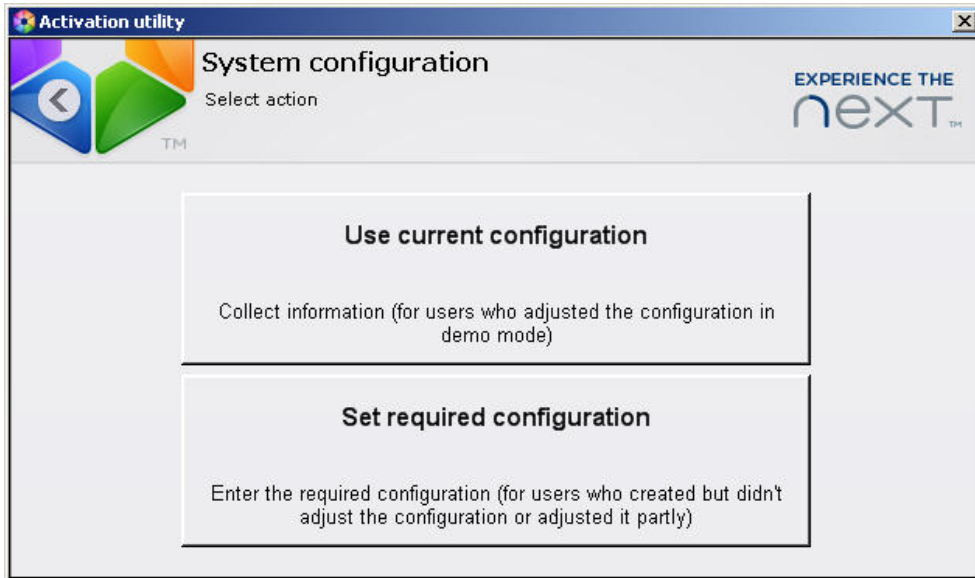


**⚠ Attention!**


The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the upgrade, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

4. If you select the method as being **Set required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and


whether forensic search is desired. Click  .

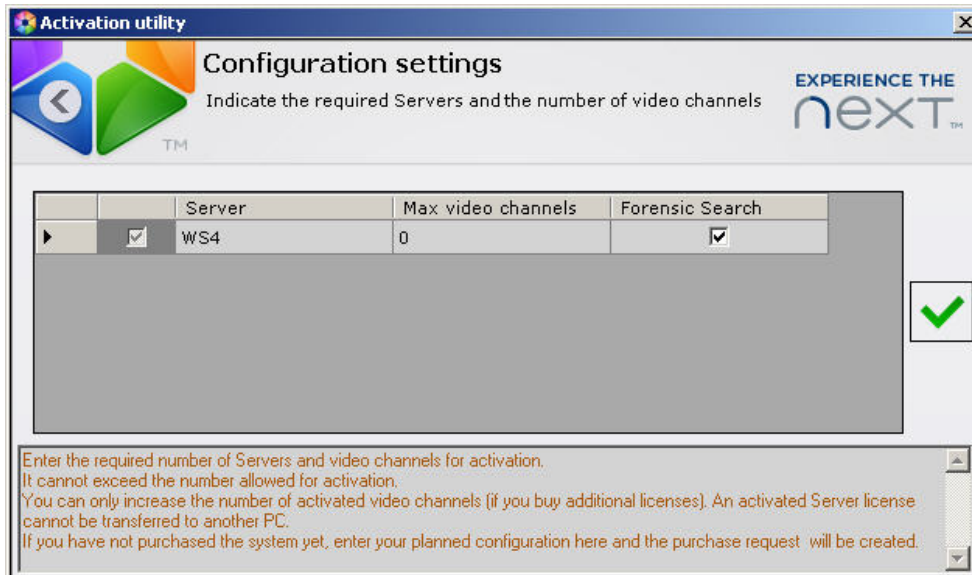

 5. This will launch the activation upgrade process.

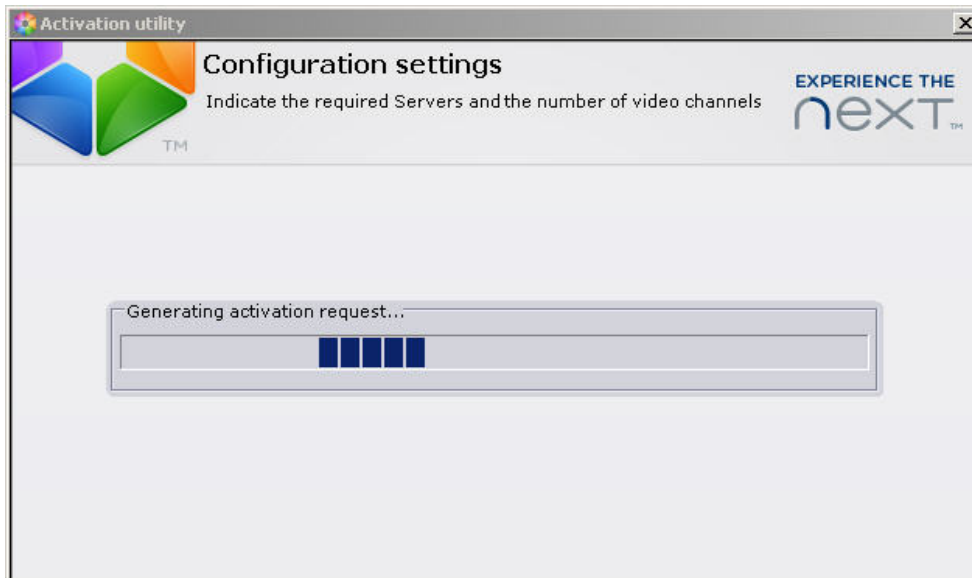

 6. Upon successful completion of the process a message will appear.

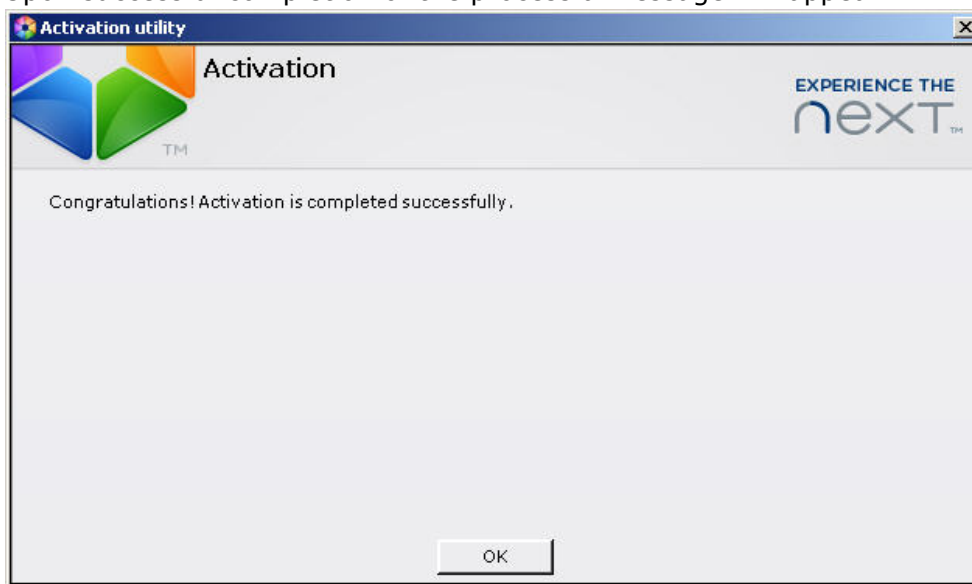

To return to the license utility home screen, click **OK**. To exit from the utility, click .


The upgrade of the *Axxon Next Free Version* license is complete.

### **Upgrading the Axxon Next Free Version license manually**

 
This method is used if the computer running Axxon Next is not connected to the Internet.

To manually activate the *Axxon Next Free Version* license by serial number, follow these steps:


1. On the license utility home screen, **Enter serial number**.

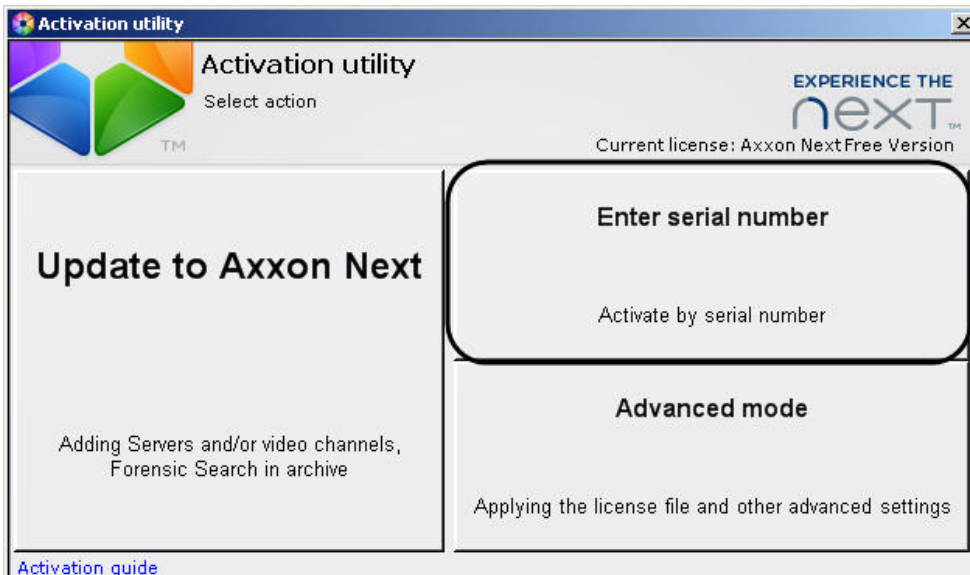

 2. Enter serial number and click **OK**.

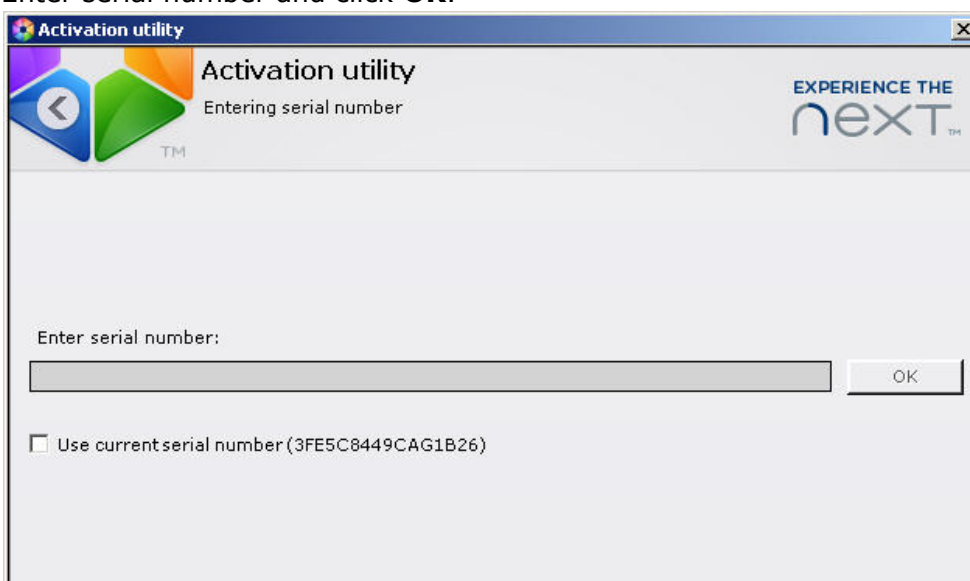


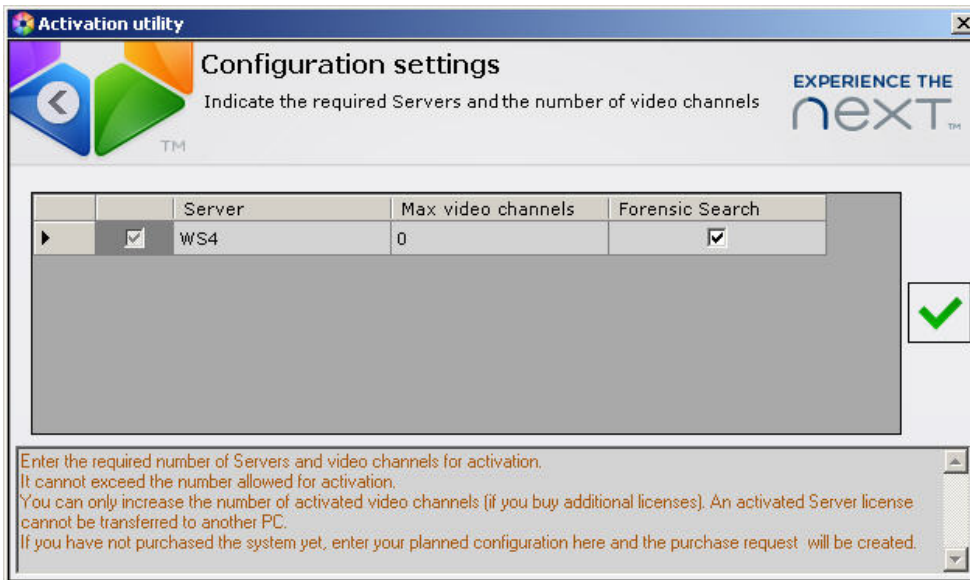
3. Selecting the method for obtaining system configuration:
- Use current configuration** (for users who have already configured the system).
  - Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it).
- If this method is selected, it will proceed to set up the required configuration.

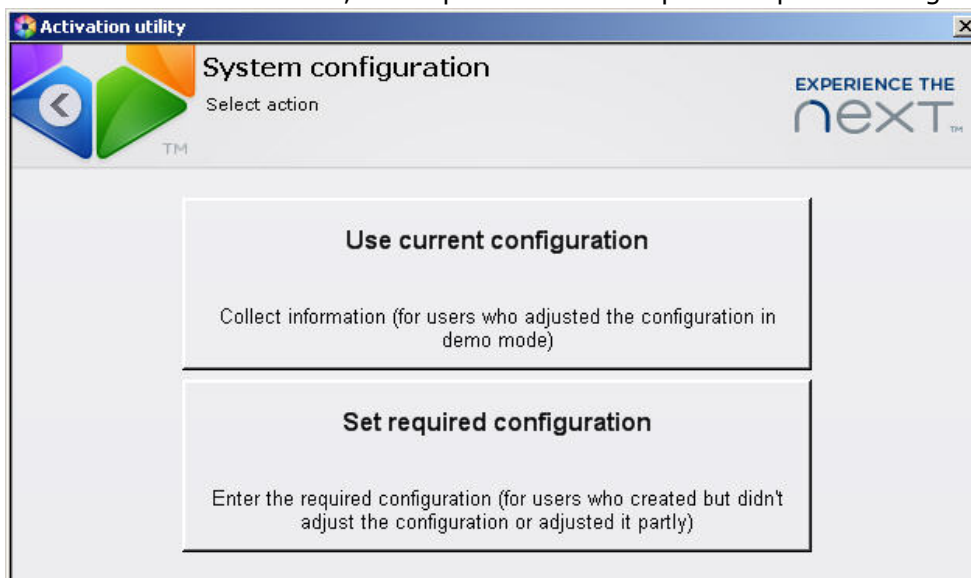




**Attention!**

The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the upgrade, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

4. If you select the method as being Set **required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and whether forensic search is desired. Click .



 5. Save the activation request in one of the following ways:
- Click **Save** (1), and enter the name and location in a standard *Windows* dialog box;
  - Use the mouse to drag the  image to the desired folder (2);
  - Click , to open a folder in which to place the request file (3).

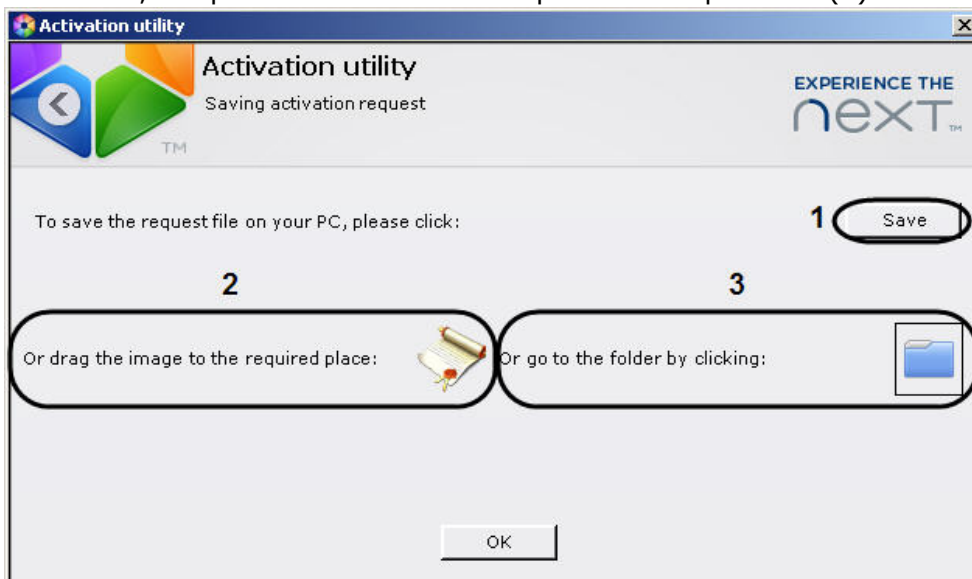


6. Send the request file to an *AxxonSoft* representative or manually to generate a license file on the license server. The process to generate a license file is described in the section on [Generating the Axxon Next Free Version license file](#).
7. Download the license file to the system (see [Distributing the license file to the system](#)).

The upgrade of the *Axxon Next Free Version* license is complete.


## Upgrading the license without a serial number (no payment)

To upgrade the *Axxon Next Free Version* license without a serial number, follow these steps:


1. On the license utility home screen, click **Update to Axxon Next** .

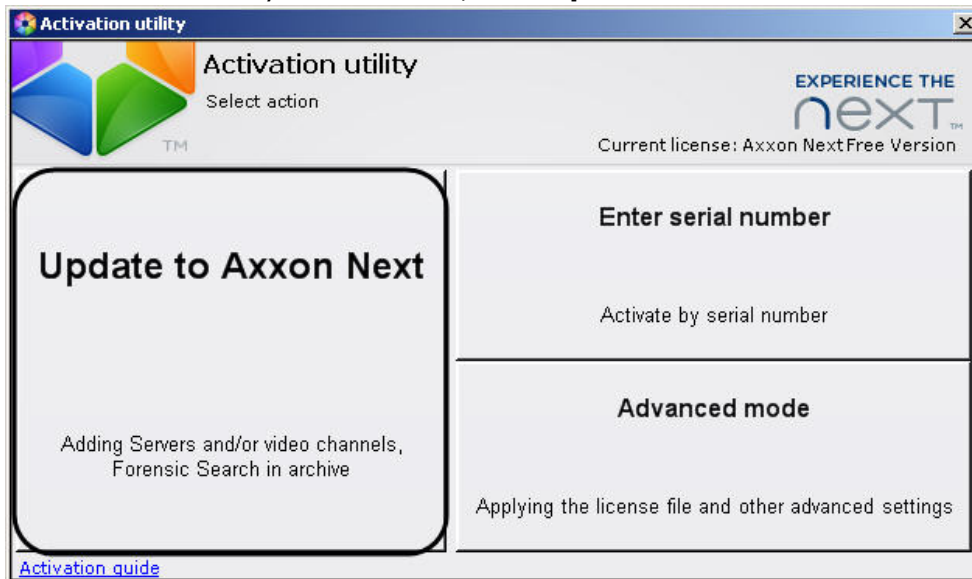

2. Set the required number of video channels and activate forensic search on your server. Click

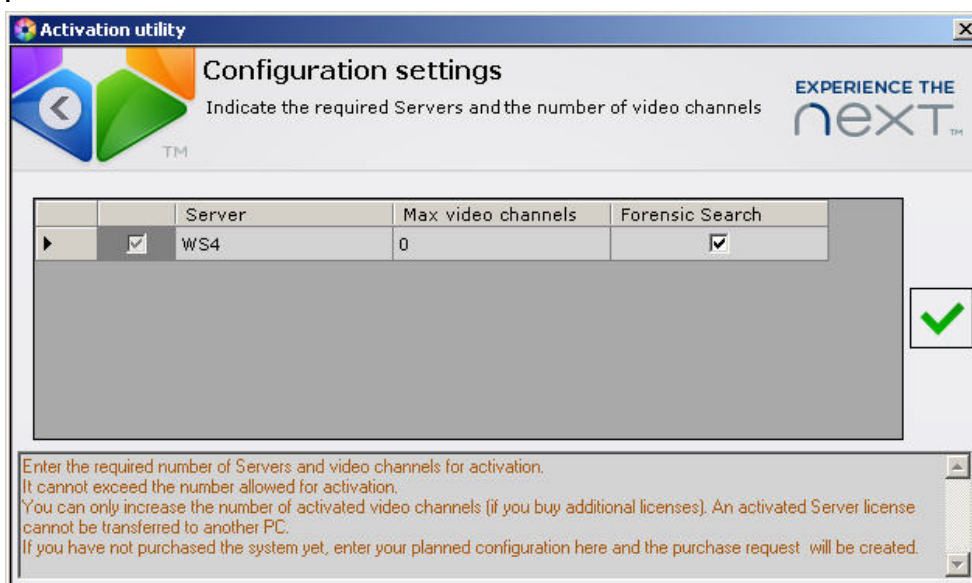

 3. Save the activation request in one of the following ways:
  - a. Click **Save** (1), and enter the name and location in a standard *Windows* dialog box;
  - b. Use the mouse to drag the image to the desired folder (2);
  - c. Click , to open a folder in which to place the request file (3).

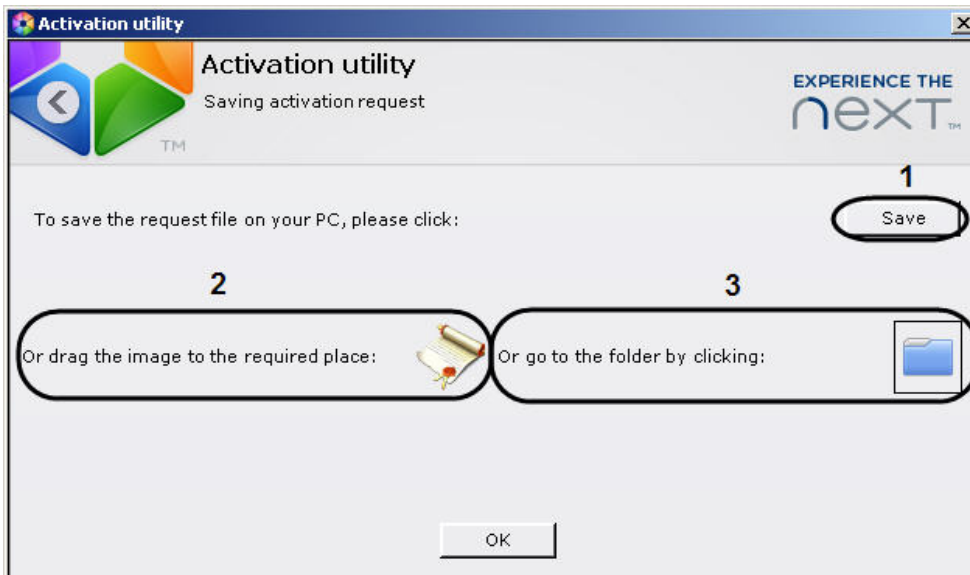

4. Send the request file to an *AxxonSoft* representative, which will initiate an invoice for payment. After payment is confirmed, the user will be sent the license file or a serial number.  
Download the license file to the system (see [Distributing the license file to the system](#)) or activate by serial number (see [Activating the Axxon Next license by serial number \(payment\)](#) ).

The upgrade of the *Axxon Next Free Version* license is complete.

## Licensing Axxon Next

[Play corresponding video](#)

### Activating the Axxon Next license

Before activating the *Axxon Next* you must configure the security system in demo mode: include the required number of Axxon-domain servers and create all video cameras.

 
### Activating the Axxon Next license by serial number (payment)

#### Automatic activation of the the Axxon Next license


**Note.**  
Requires an Internet connection

To activate the *Axxon Next* license automatically by serial number, follow these steps:


1. On the license utility home screen, click **Enter serial number**.

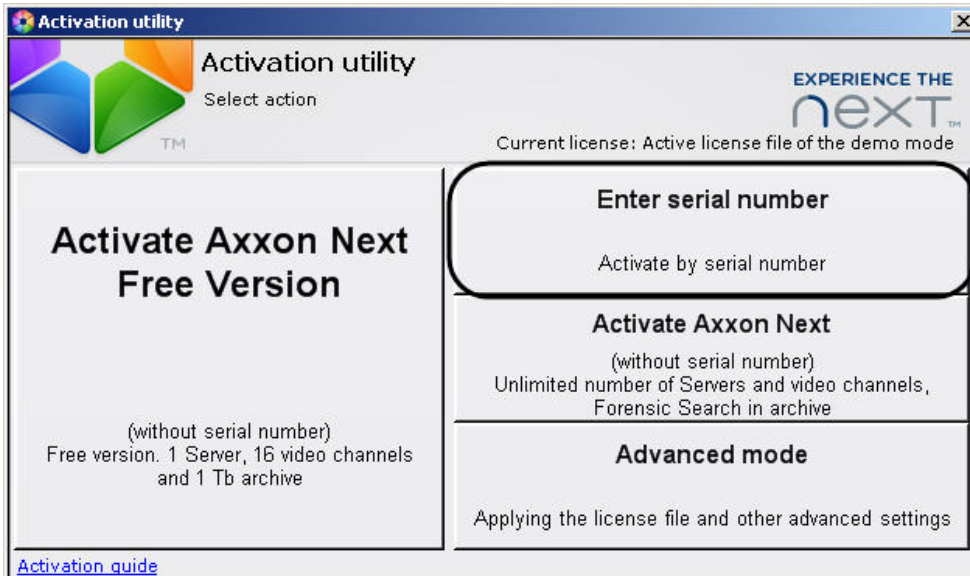

 2. Enter serial number and click **OK**.

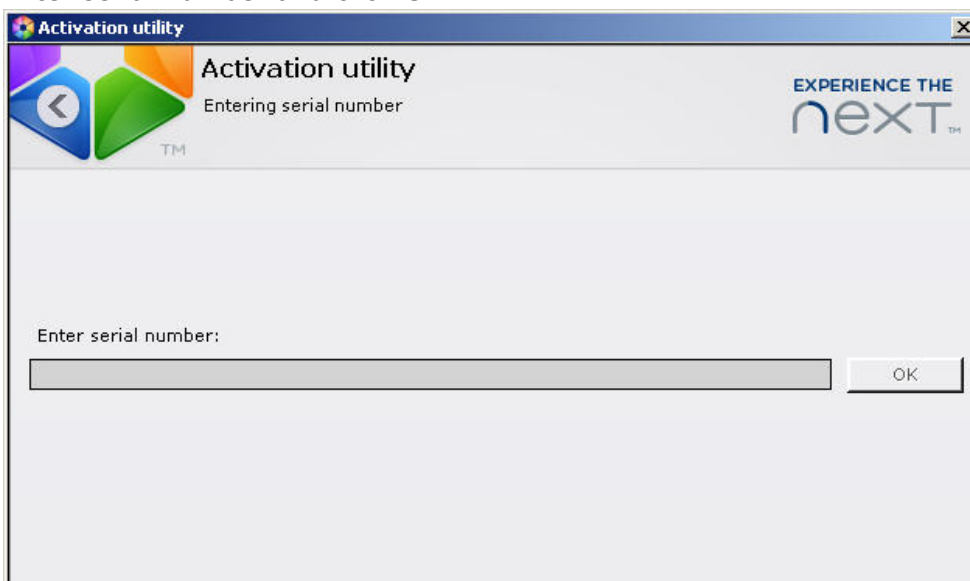

 
3. Select the method of obtaining the system configuration:
- Use current configuration** (for users who have already configured the system).
  - Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it). If this method is selected, it will proceed to set up the required configuration.

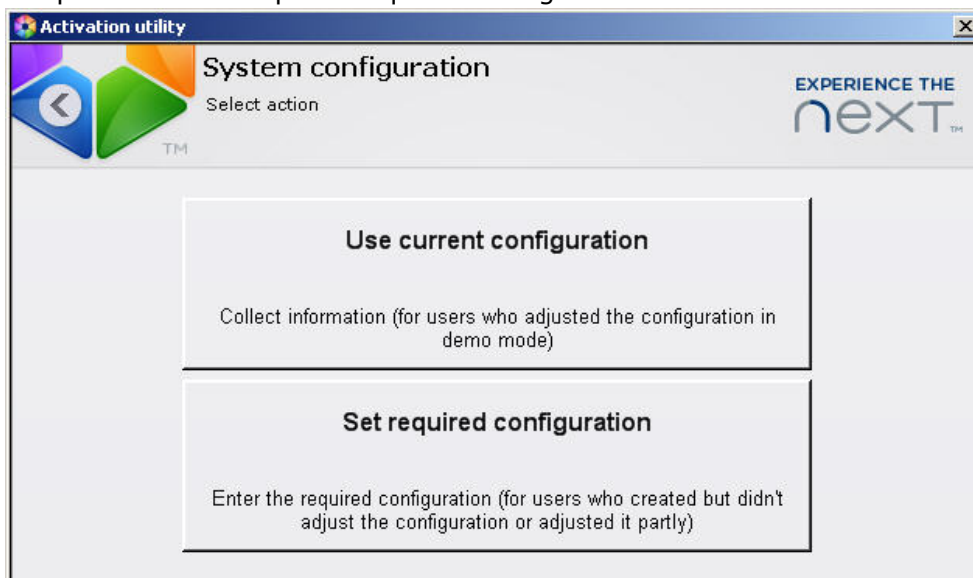


**Attention!**

The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the license, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

4. If you select the method as being **Set required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and

 whether forensic search is desired. Click  .

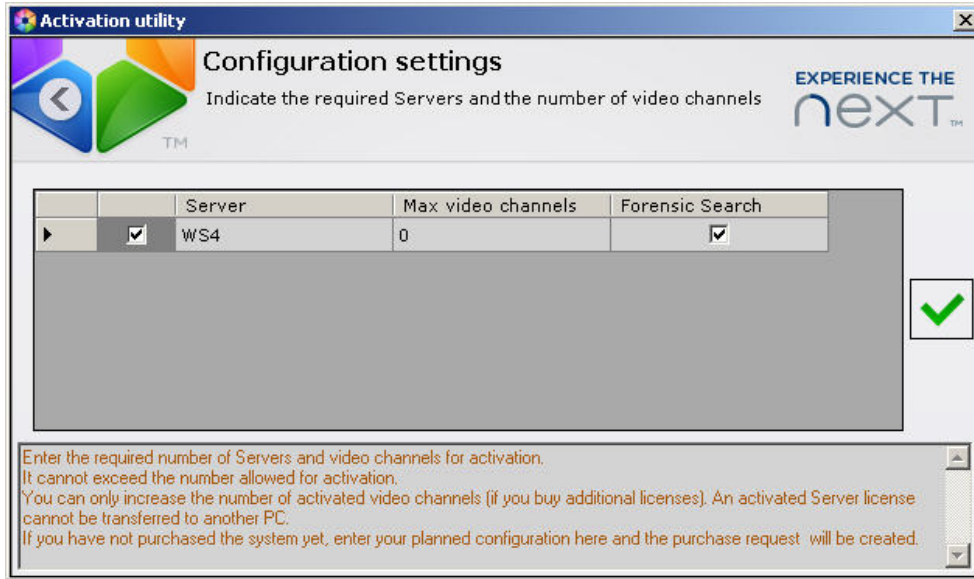


**Note.**

The list will only include the servers that are listed in the Axxon-domain.


**Note.**

At the time of activation, all server domains, for which keys have been created, should be included (i.e., be in the network). Activation will not occur if at least one of the selected servers is not available on the activation server.

 5. This will launch the activation process.

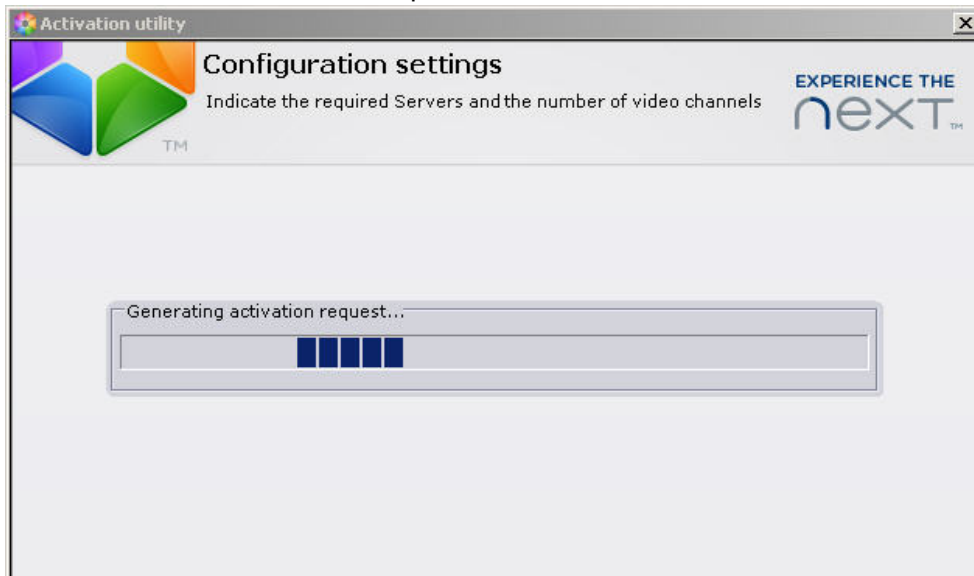

 Upon successful completion of the process a message will appear.

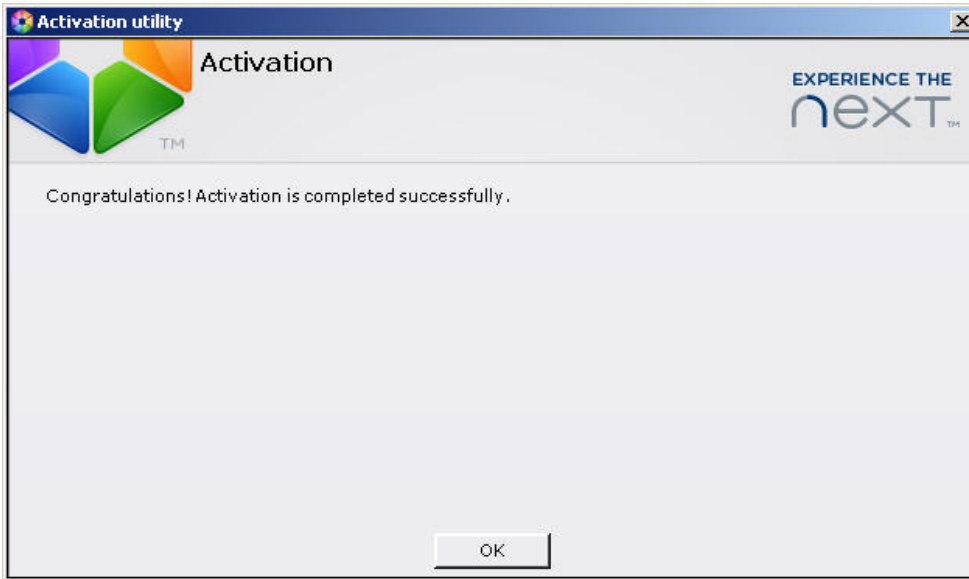

To return to the license utility home screen, click **OK**. To exit from the utility, click .


The activation of the *Axxon Next* license is complete.

## **Manually sending a request and downloading the license file to the system**

 
This method is used if the computer running Axxon Next is not connected to the Internet.

To manually activate the *Axxon Next* license by serial number, follow these steps:


1. On the license utility home screen, click **Enter serial number**.

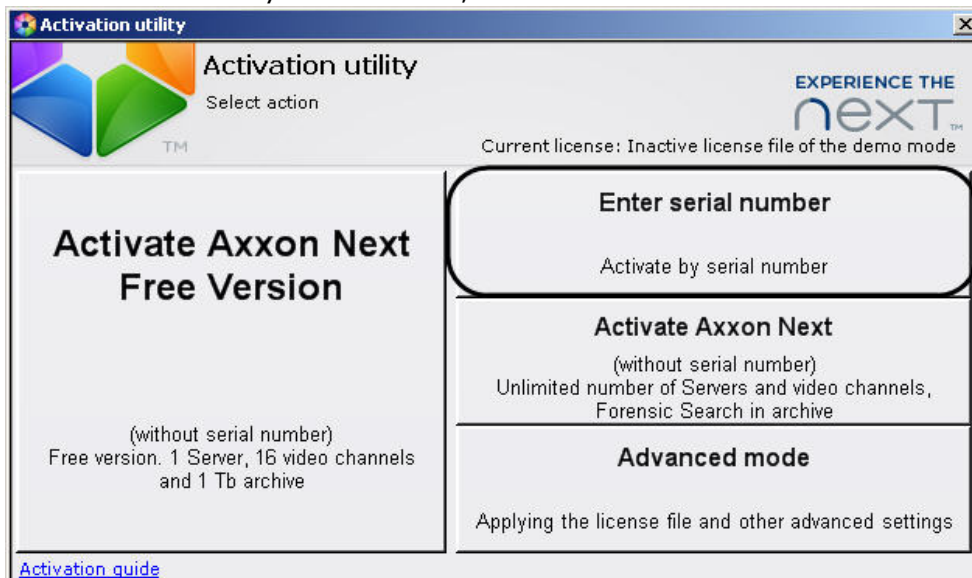

2. Enter serial number and click **OK**.

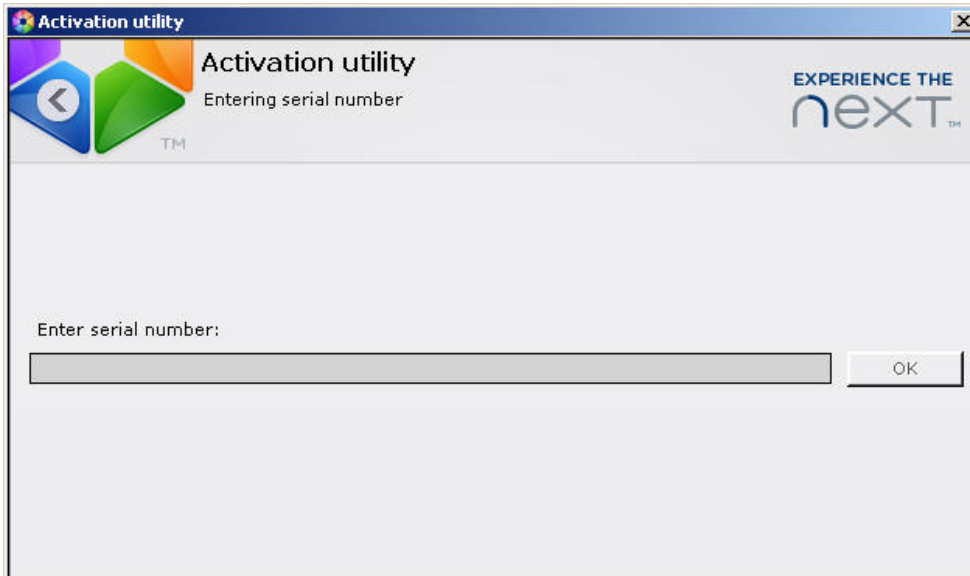


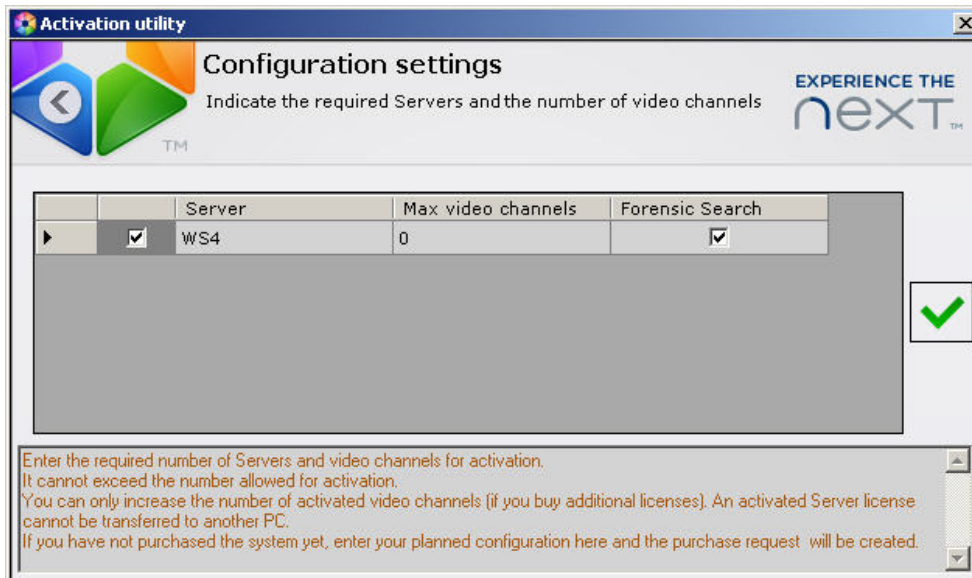
3. Select method of obtaining the system configuration:
    - a. **Use current configuration** (for users who have already configured the system).
    - b. **Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it).
- If this method is selected, it will proceed to set up the required configuration.

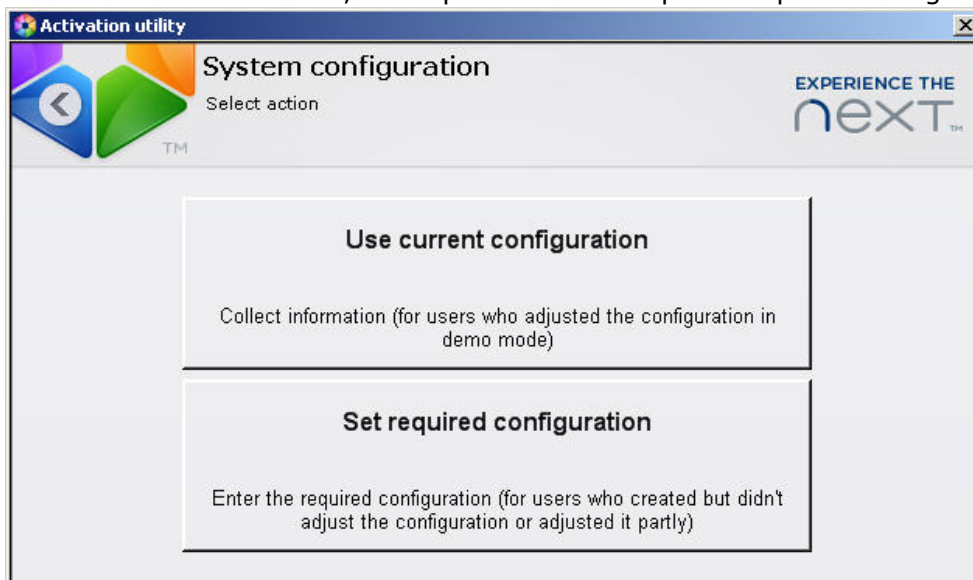

**⚠ Attention!**

The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the license, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

4. If you select the method as being **Set required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and whether forensic search is desired. Click  .



 
**Note.**

The list will only include the servers that are listed in the Axxon-domain.

**Note.**

When you create a request file all the server domains for which keys have been created, should be included (i.e., be in the network). The request file will not be created if at least one of the selected servers is not available on the request file server.

5. You can save the activation request in one of the following ways:
  - a. Click **Save** (1), and enter the name and location in the standard *Windows* dialog box;
  - b. Use the mouse to drag the image to the required folder (2);
  - c. Click , to open a folder in which to place the request file (3).

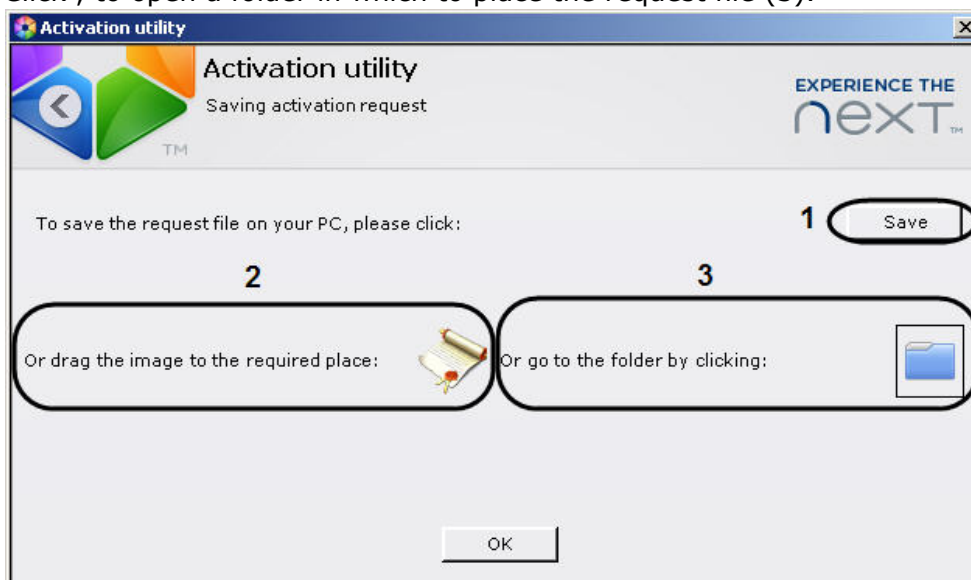


6. Send the request file to an AxxonSoft representative or manually to generate a license file on the license server. The process to generate a license file is described in the section on [Generating the Axxon Next Free Version license file](#) .
7. Download the license file to the system (see [Distributing the license file to the system](#)).

The activation of the *Axxon Next* license is complete.


## Activating the Axxon Next license without a serial number (no payment)

  
To activate the *Axxon Next* license without a serial number, follow these steps:


1. On the license utility home screen, click **Activate Axxon Next**.

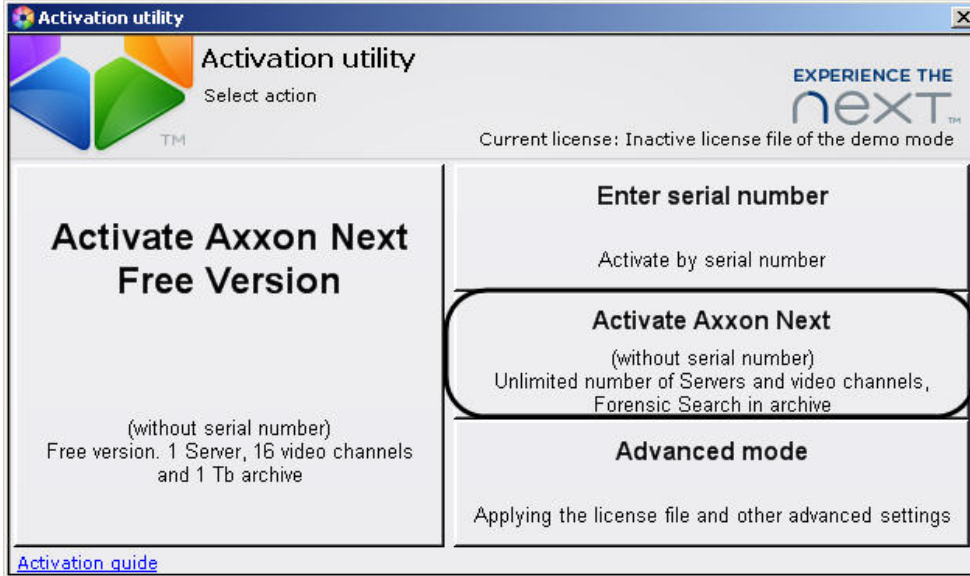

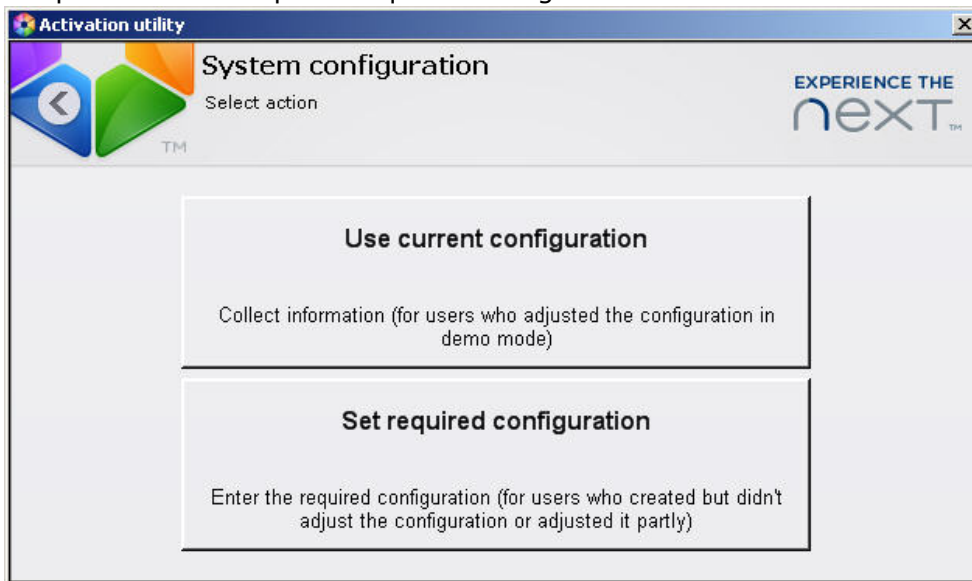

2. Select the method of obtaining the system configuration:
  - a. **Use current configuration** (for users who have already configured the system).
  - b. **Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it). If this method is selected, it will proceed to set up the required configuration.

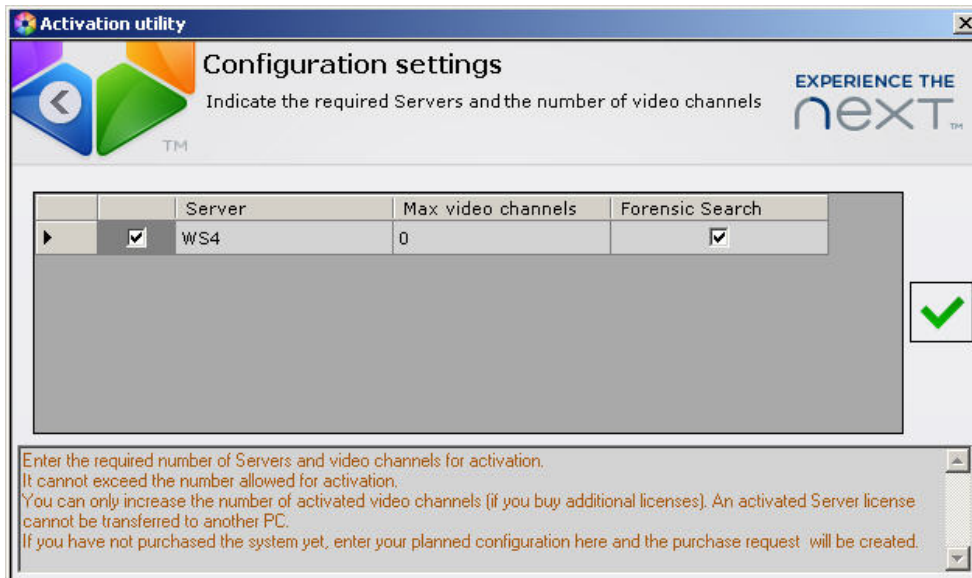


3. A **Configuration settings** window will appear, wherein you must enter the required number of video channels and whether forensic search is desired. Click 



**Note.**  
The list will only include the servers that are listed in the Axxon-domain.

 4. You can save the activation request in one of the following ways:
  - a. Click **Save** (1), and enter the name and location in the standard *Windows* dialog box;
  - b. Use the mouse to drag the  image to the required folder (2);
  - c. Click , to open a folder in which to place the request file (3).

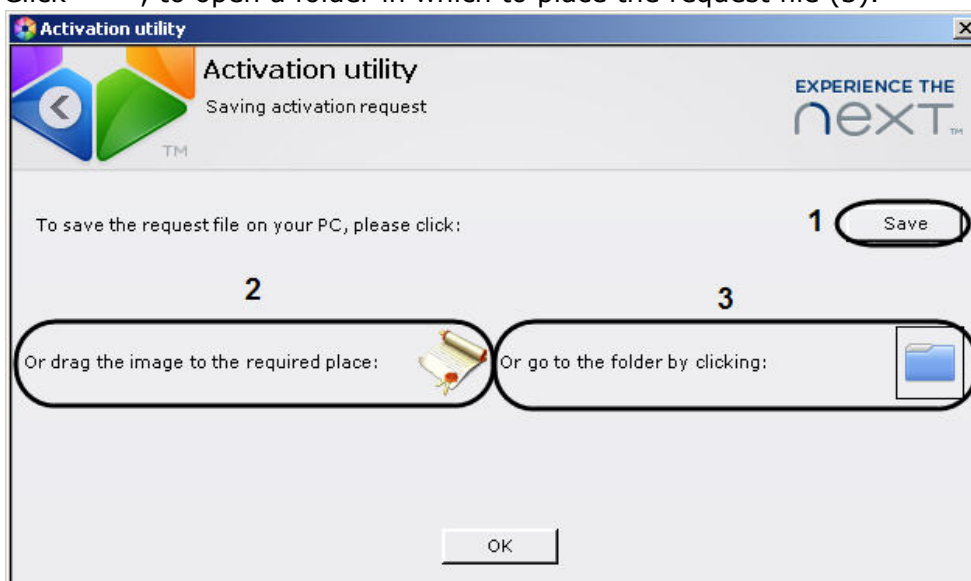

5. Send the request file to an *AxxonSoft* representative, which will initiate an invoice for payment. After payment is confirmed, the user will be sent the license file or a serial number.
6. Download the license file to the system (see [Distributing the license file to the system](#)) or activate by serial number (see [Activating the Axxon Next license by serial number \(payment\)](#)).

The activation of the *Axxon Next* license is complete.

## Upgrading the Axxon Next license

It is possible to upgrade the *Axxon Next* license. The upgrade of the licenses is activated by purchasing additional components when the system already has a license file distribution.

**Note.**

When you upgrade the Axxon Next license, you can reduce the number of video channels on the server.

The process of upgrading the *Axxon Next* license is dependent on serial number availability.

 
**Attention!**

You must restart the Server for the correct operation of Axxon Next after its activation.

## Upgrading the Axxon Next license by serial number (payment) Automatic upgrading of the Axxon Next license

To automatically activate the *Axxon Next Free Version* license upgrade by serial number, follow these steps:


1. On the license utility home screen, click **Enter serial number**.

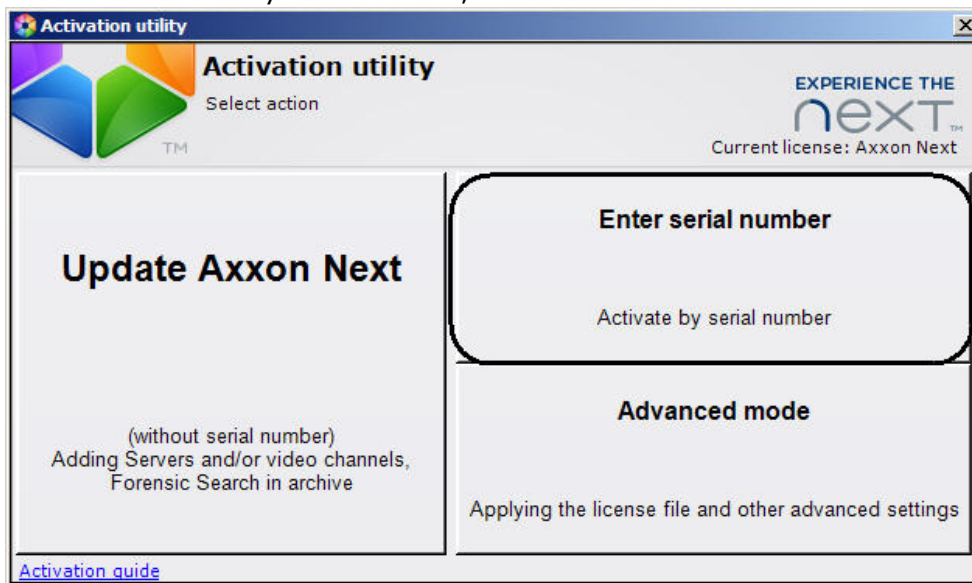


2. Enter serial number and click **OK**.

**Note.**

 To activate functionality that has been paid for, but not yet activated, you should check the **Use current serial number** box and click **OK**

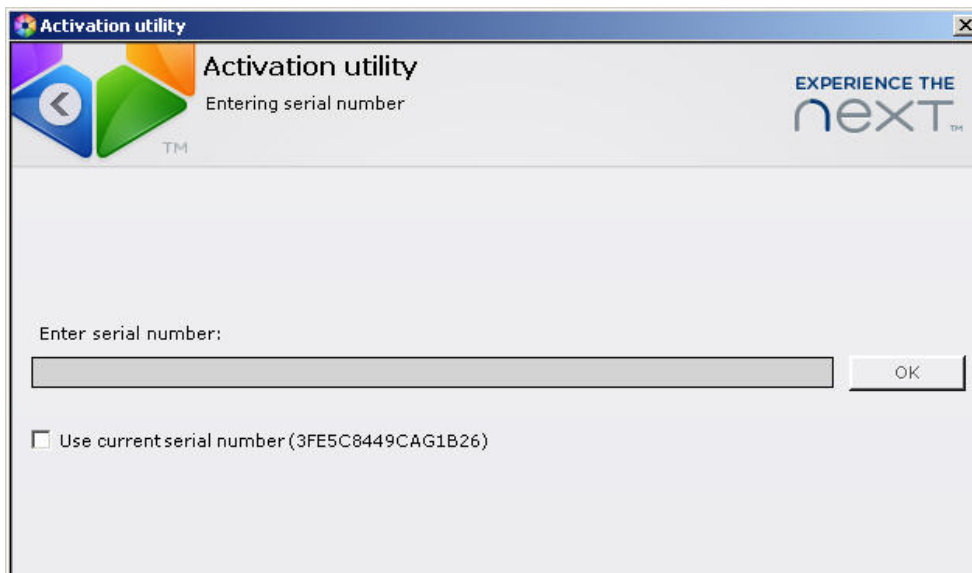

 
3. Select the method of obtaining the system configuration:
  - a. **Use current configuration** (for users who have already configured the system).
  - b. **Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it).If this method is selected, it will proceed to set up the required configuration.

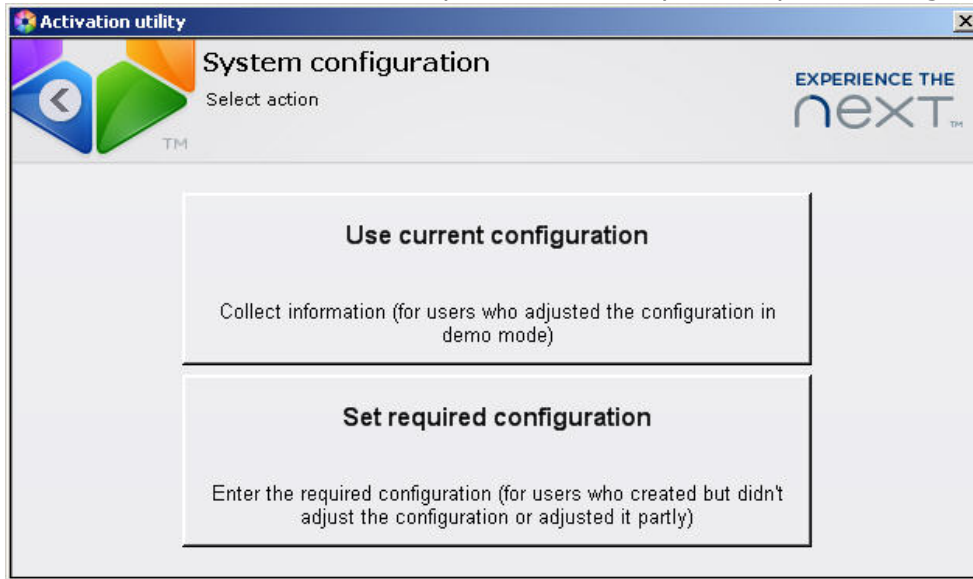

**⚠ Attention!**


The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the license, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

4. If you select the method as being **Set required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and


whether forensic search is desired. Click  .

**⚠ Attention!**


At the time of activation, all server domains, for which keys have been created, should be included (i.e., be in the network). Activation will not occur if at least one of the selected servers is not available on the activation server.

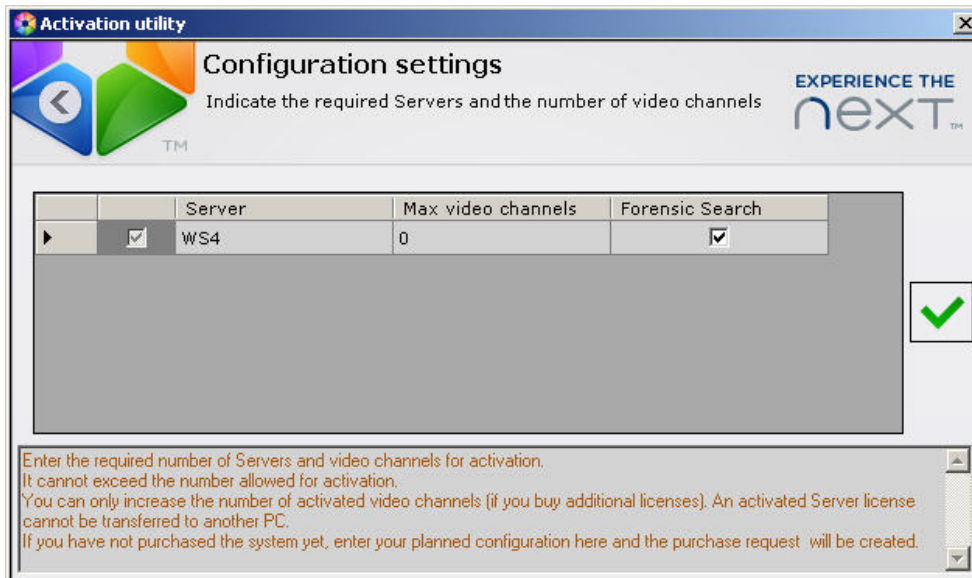

 5. This will launch the activation process.

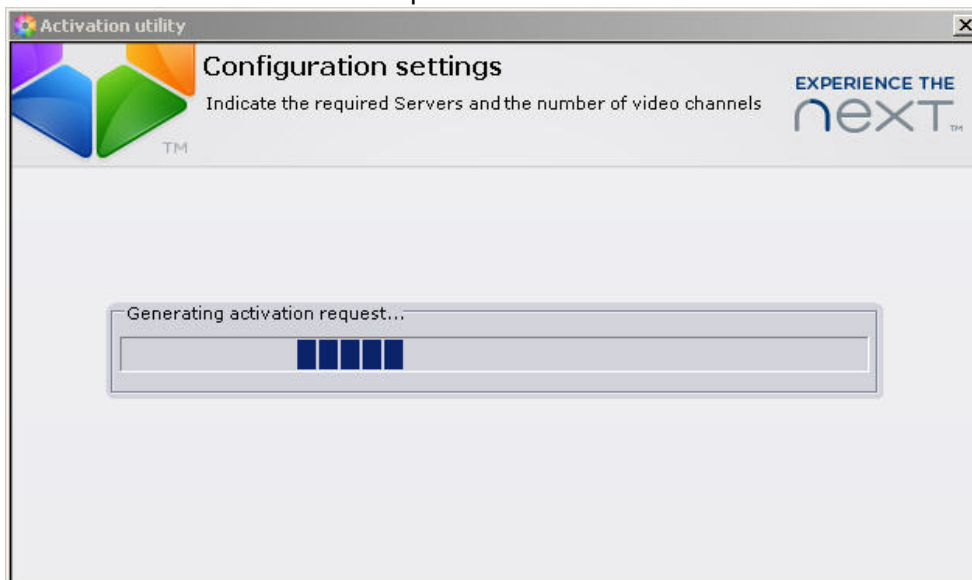

 6. Upon successful completion of the process a message will appear.

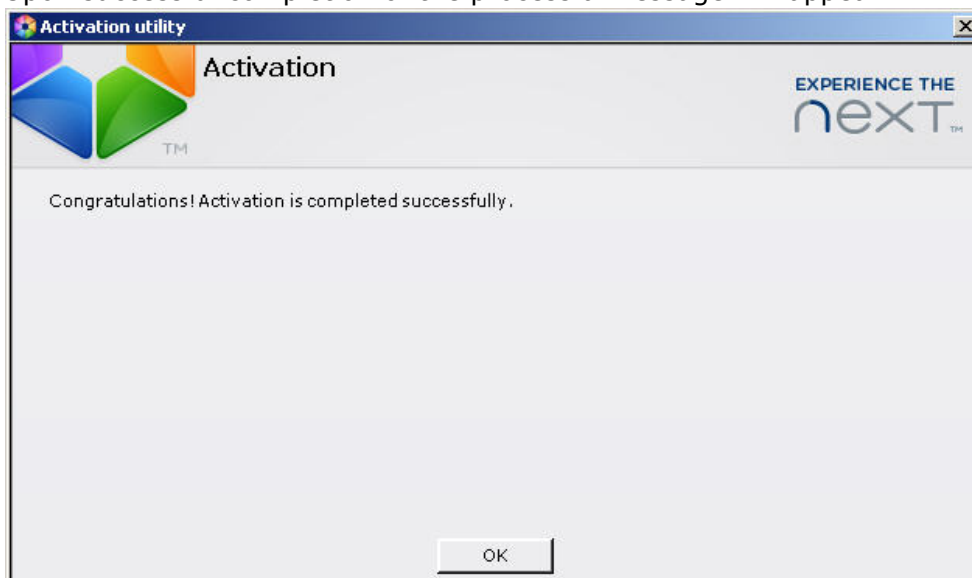

To return to the license utility home screen, click **OK**. To exit from the utility, click .


The upgrading of the *Axxon Next* license is complete.

## Manually upgrading the license

 This method is used if the computer running Axxon Next is not connected to the Internet.

To manually upgrade by serial number, follow these steps:


1. On the license utility home screen, click **Enter serial number**.

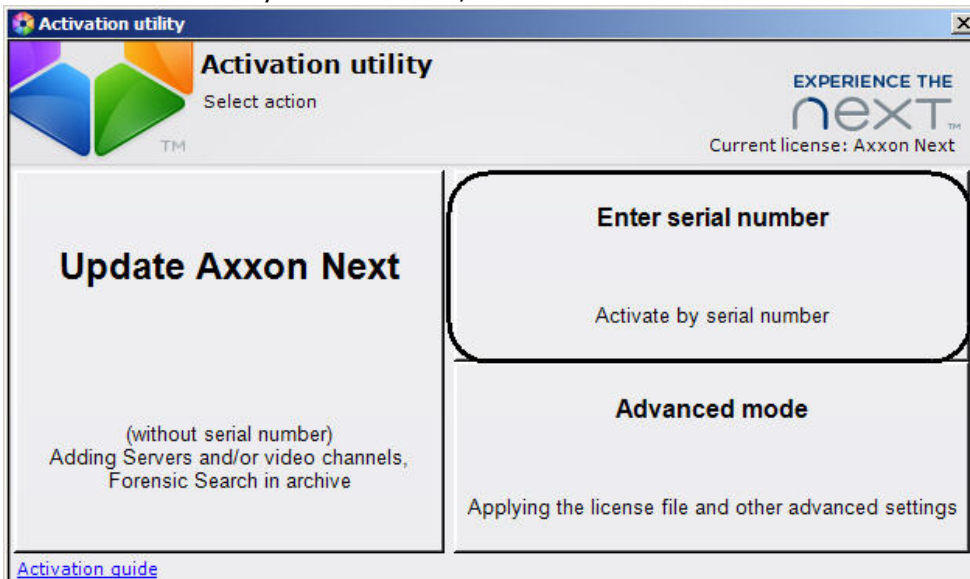


2. Enter serial number and click **OK**.

**Note.**

 To activate functionality that has been paid for, but not yet activated, you should check the **Use current serial number** box and click **OK**

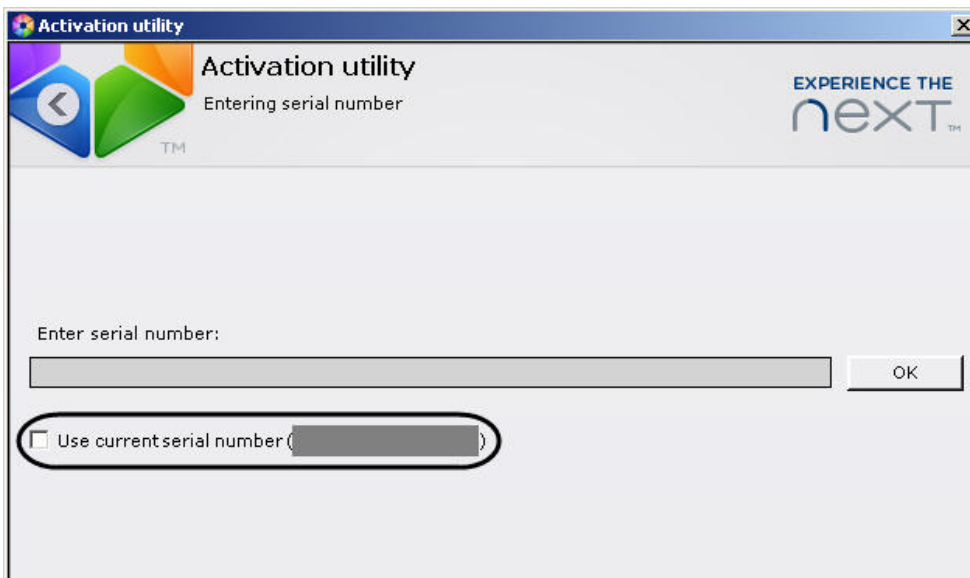

3. Select the method of obtaining the system configuration:
  - a. **Use current configuration** (for users who have already configured the system).
  - b. **Set required configuration** (for users who have planned but have not yet configured the system, or have partially configured it).  
If this method is selected, it will proceed to set up the required configuration.

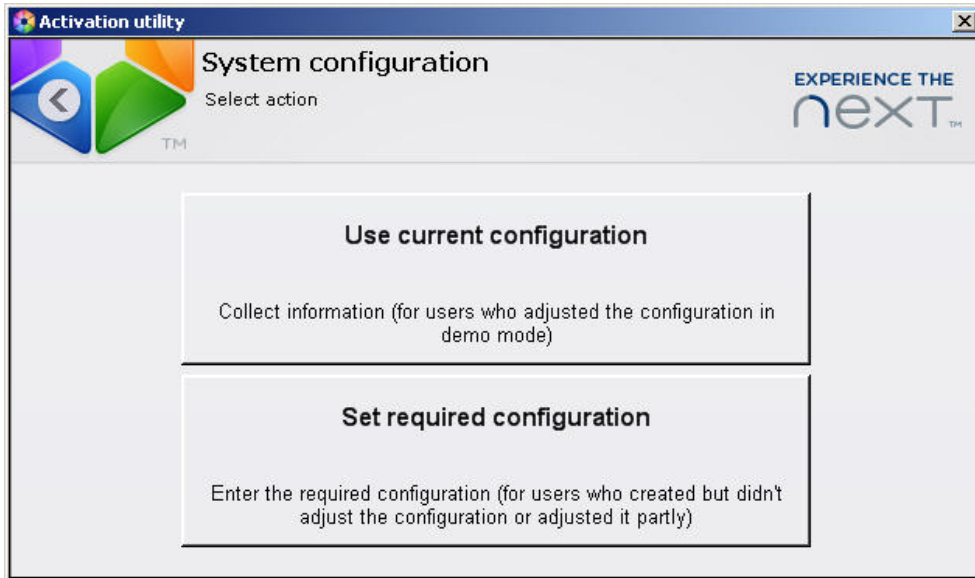

**⚠ Attention!**

The system configuration (number of servers, video channels, forensic search) must match exactly the functionality that has been paid. To activate the license, you must specify the correct configuration. If you activate the wrong configuration an error will be displayed.

 
4. If you select the method as being **Set required configuration** a **Configuration settings** window will appear, wherein you must enter the required number of video channels and




whether forensic search is desired. Click .

**⚠ Attention!**

At the time of activation, all server domains, for which keys have been created, should be included (i.e., be in the network). Activation will not occur if at least one of the selected servers is not available on the activation server

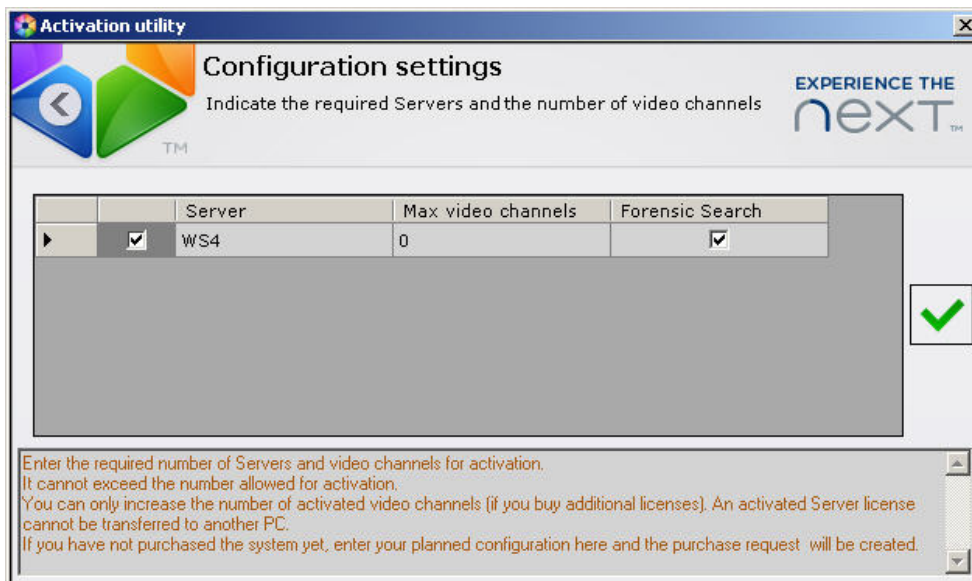

 5. You can save the activation request in one of the following ways:
- Click **Save** (1), and enter the name and location in the standard *Windows* dialog box;
  - Use the mouse to drag the image to the required folder (2);
  - Click , to open a folder in which to place the request file (3).

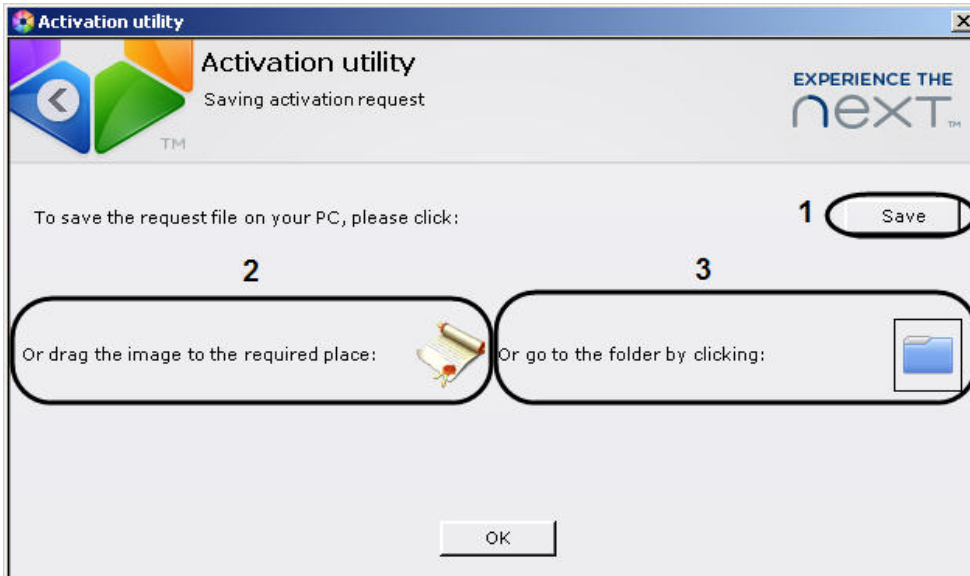


6. Send the request file to an *AxxonSoft* representative or manually to generate a license file on the license server. The process to generate a license file is described in the section on [Generating the Axxon Next license file](#).
7. Download the license file to the system (see [Distributing the license file to the system](#)).

The upgrade of the *Axxon Next* license is complete.

## Upgrading the Axxon Next license without a serial number (no payment)

 
If there is no serial number, follow these steps:

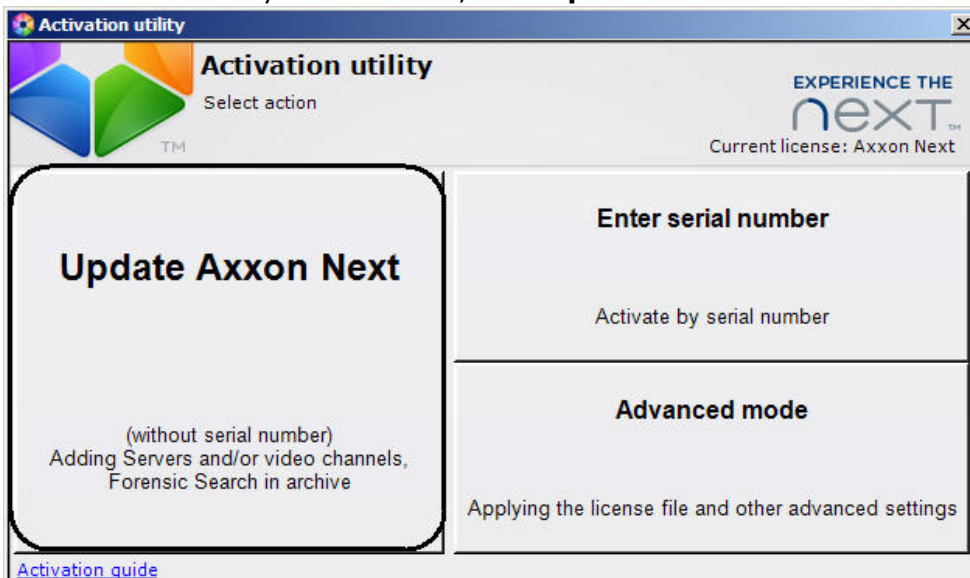

1. On the license utility home screen, click **Update Axxon Next**.




 2. Set the required number of video channels and activate forensic search on your server. Click

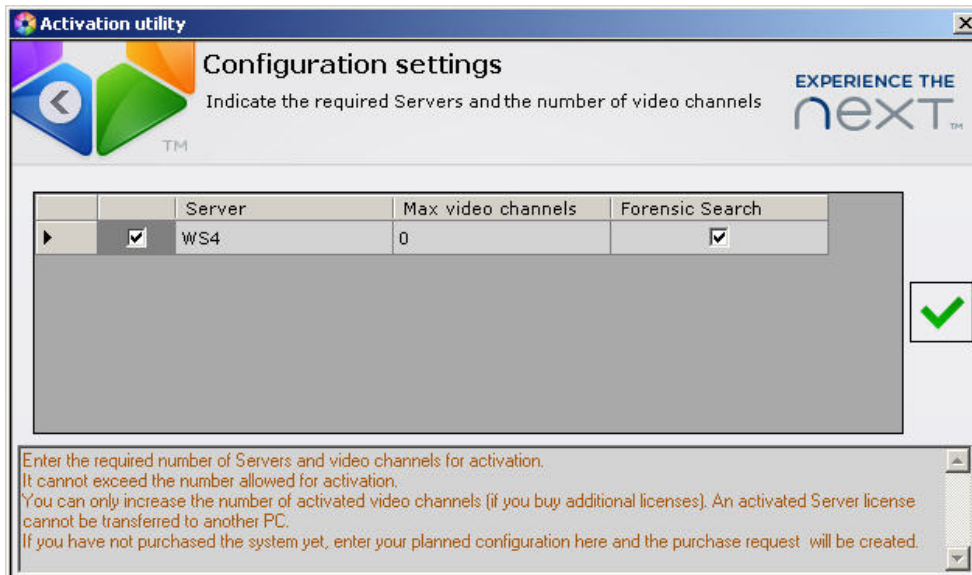



 3. Save the activation request in one of the following ways:
4. Click **Save** (1), and enter the name and location in a standard *Windows* dialog box;
5. Use the mouse to drag the  image to the desired folder (2);
6. Click , to open a folder in which to place the request file (3).

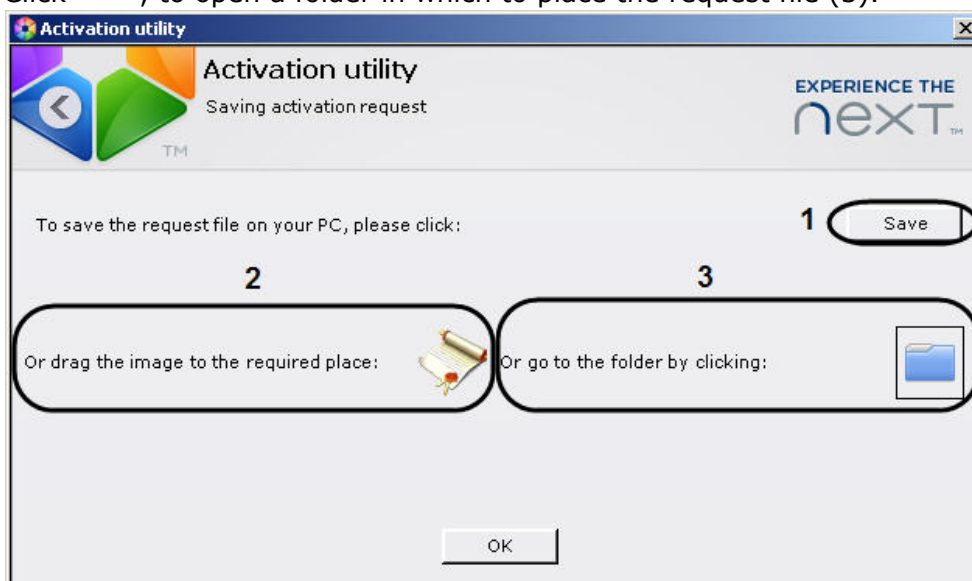

7. Send the request file to an *AxxonSoft* representative, which will initiate an invoice for payment. After payment is confirmed, the user will be sent the license file or a serial number.
8. Download the license file to the system (see [Distributing the license file to the system](#)) or activate by serial number (see [Activating the Axxon Next license by serial number \(payment\)](#)).


The upgrade of the *Axxon Next* license is complete.

## Additional license utility actions


### Distributing the license file to the system

To distribute the license file to the system, follow these steps:

1. On the license utility home screen, click **Advanced mode**.

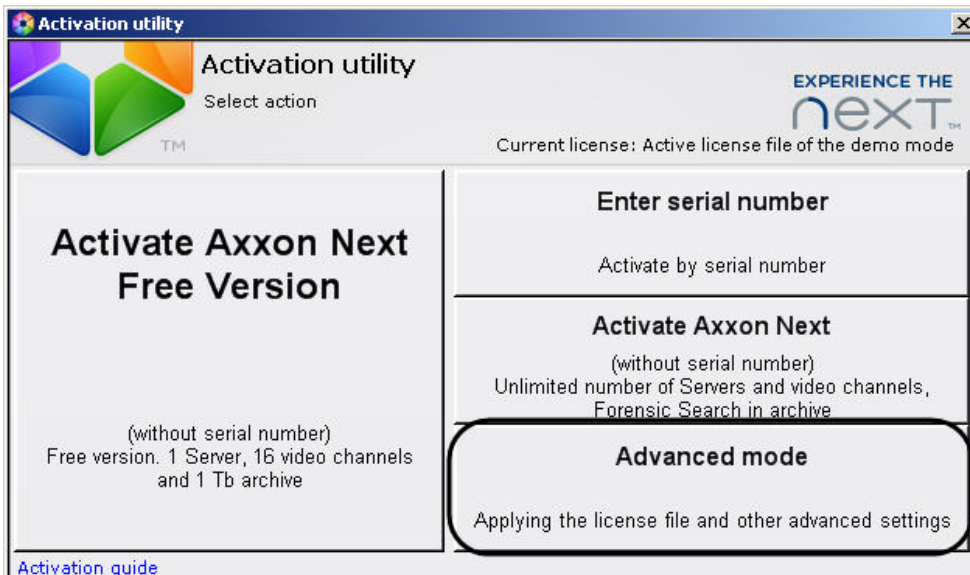

 2. Click **Load license file**.

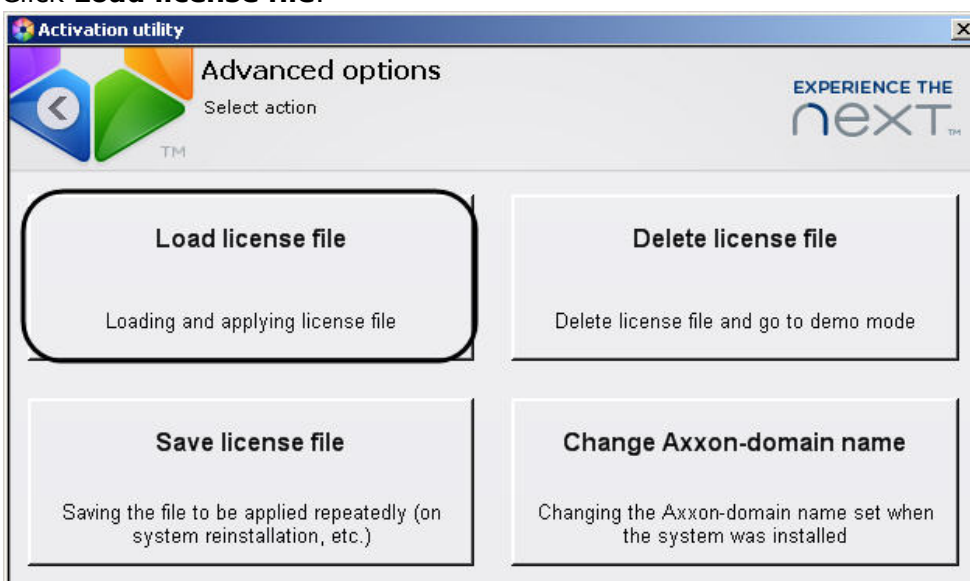


3. Download the license file in the following ways:
4. Drag the license file to the selected area (1).
5. Click **Browse...** and select the license file (2).





6. Click **Apply**.

The license file will be downloaded into the system.

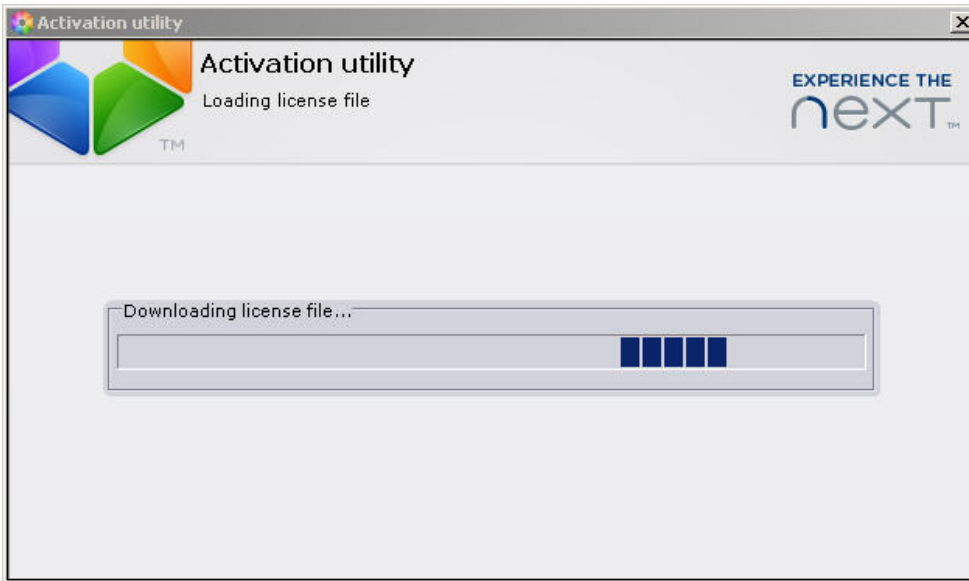

Upon successful completion of the process a message will appear.

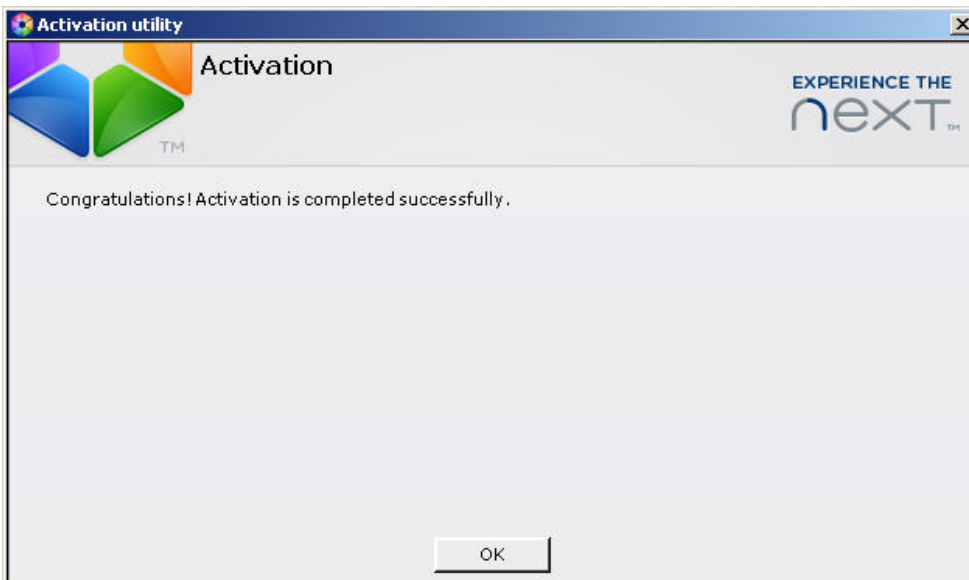


To return to the license utility home screen, click **OK**. To exit from the utility, click .

The distribution of the license file in the system is complete.


## Deleting the license file from the system

To delete the license file from the system, follow these steps:

1. On the license utility home screen, click **Advanced mode**.

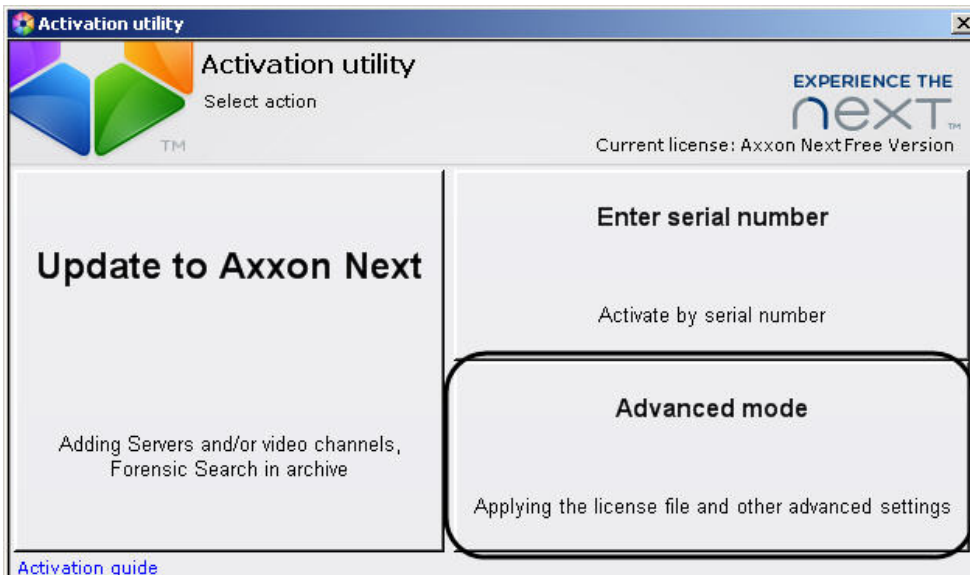


2. Click **Delete license file**.

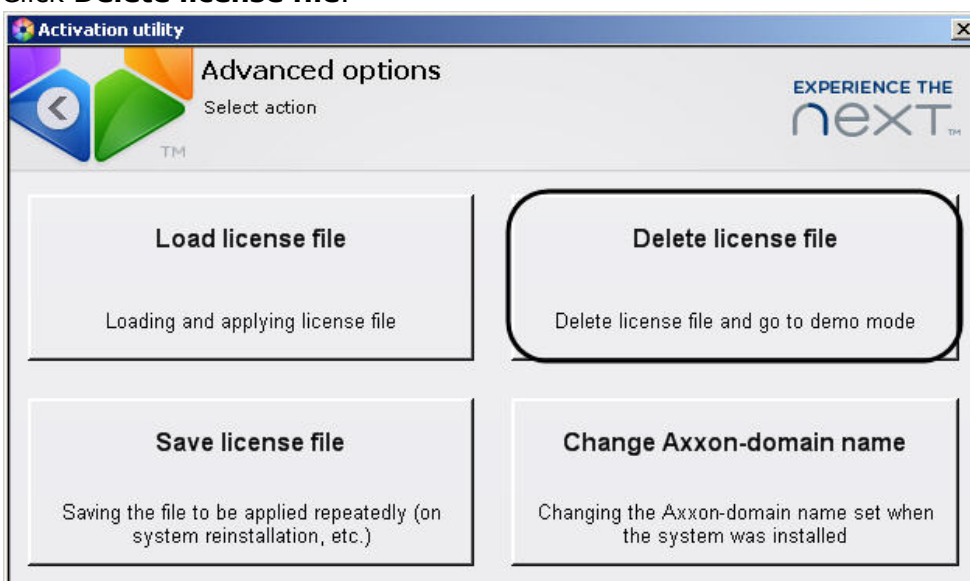


3. To delete the license file from the system, click **Delete**.


**Note.** Before deleting the licenses file from the system, it can be saved in one of the suggested ways.

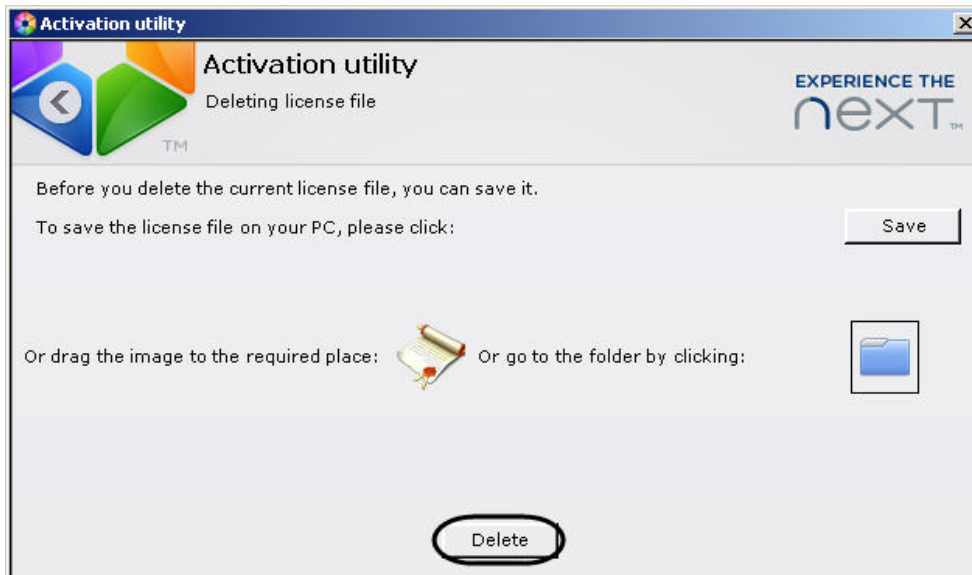

4. Confirm the deletion of the license file, click **Yes**.

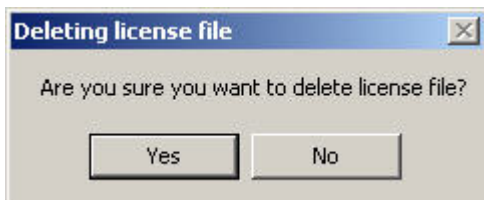

 5. If successful a message will appear.

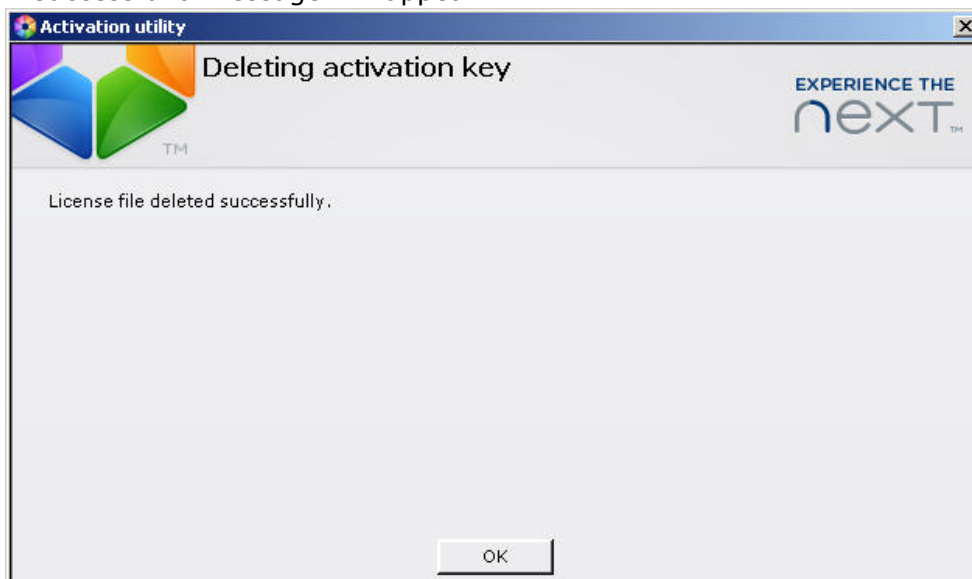


The deletion of the license file from the system is complete. After deleting the license file from the system, the demo license will activate.

To return to the license utility home screen, click **OK**. To exit from the utility, click **X**.


## Saving the license file



To save the license file, follow these steps:

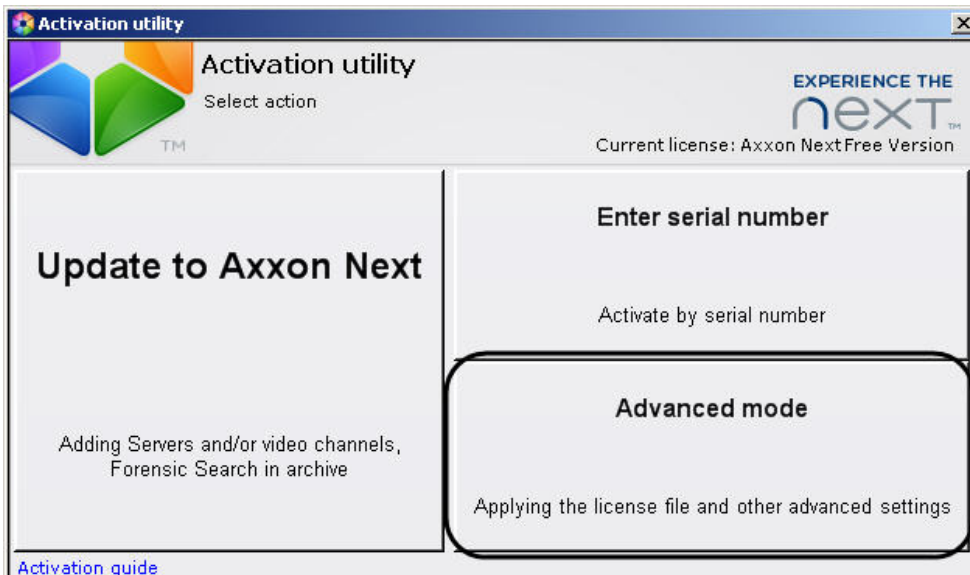 
1. On the license utility home screen click **Advanced mode**.

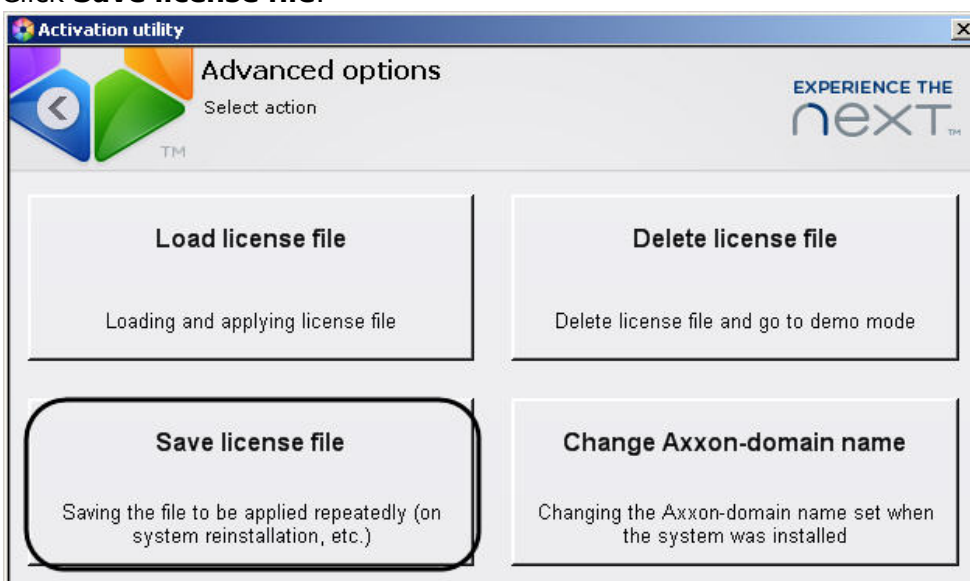

2. Click **Save license file**.



3. Save the license file in one of the following ways.
  - a. Click **Save** (1), and enter the name and location in a standard *Windows* dialog box;
  - b. Use the mouse to drag the  image to the desired folder (2);
  - c. Click , to open a folder in which to place the request file (3).

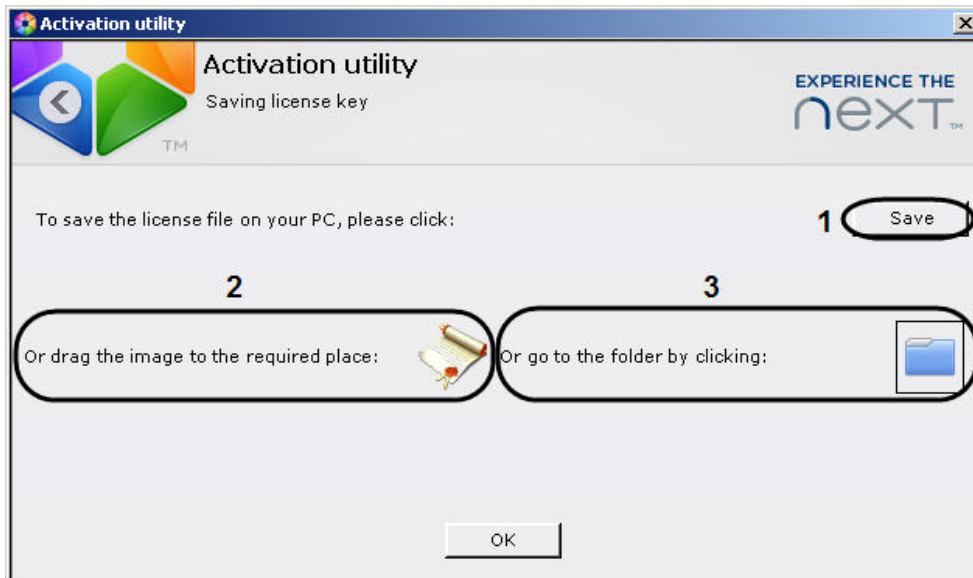


Saving the license file is complete.

To return to the license utility home screen, click **OK**. To exit from the utility, click **X**.


## Changing the Axxon-domain name

 To change the Axxon-domain name from that given during the system installation, follow these steps:

1. On the license utility home screen, click **Advanced mode**.

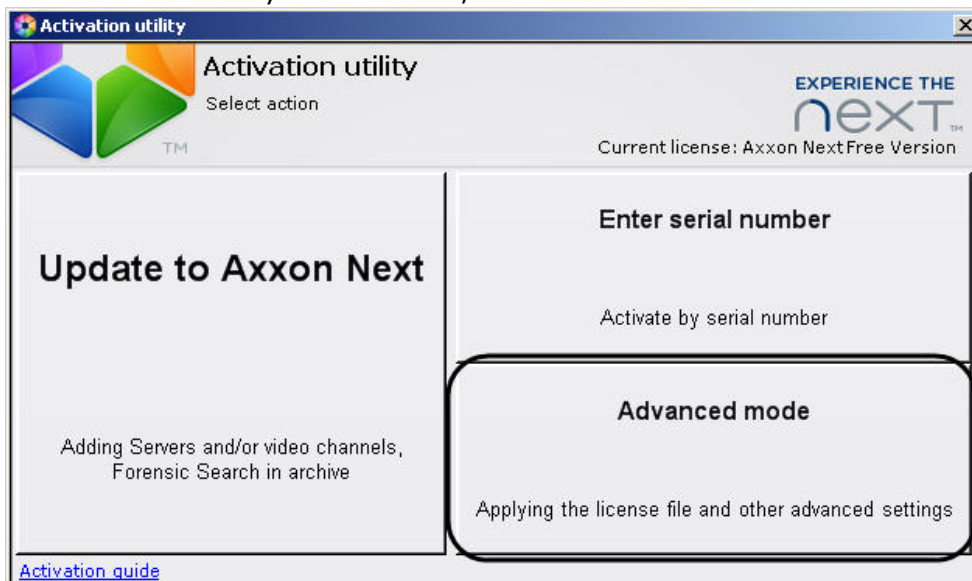


2. Click **Change Axxon-domain name**.

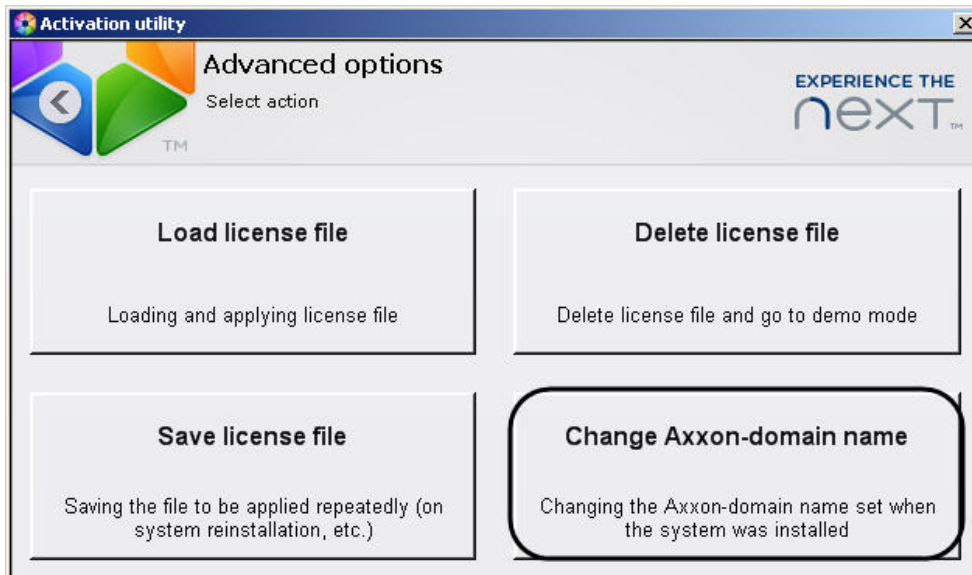


3. Specify the new Axxon-domain name and click **OK**.

**Note.**

The Axxon-domain name may only consist of letters-numeric characters and a dash (-). The dash not be the first or last character in the name.

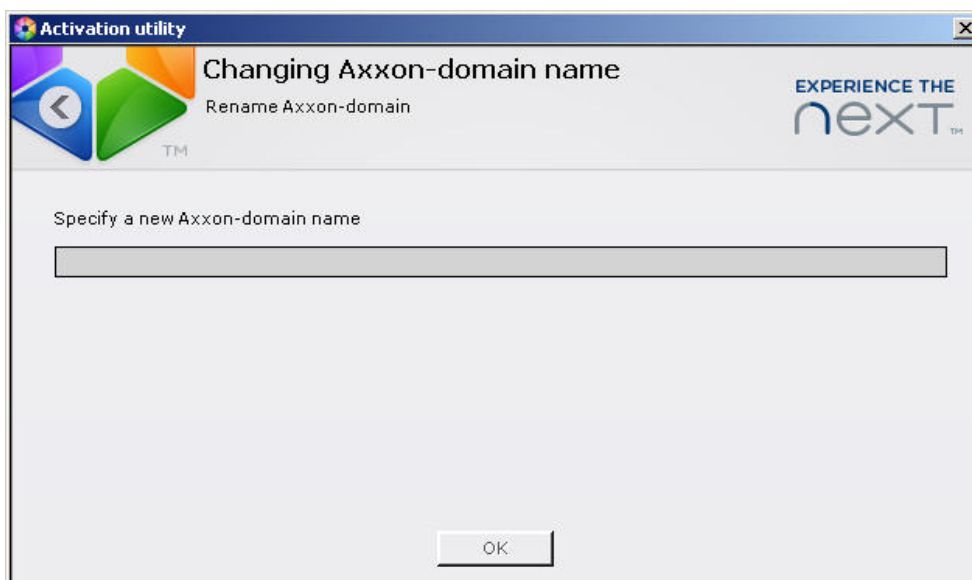

If successful a message will appear.

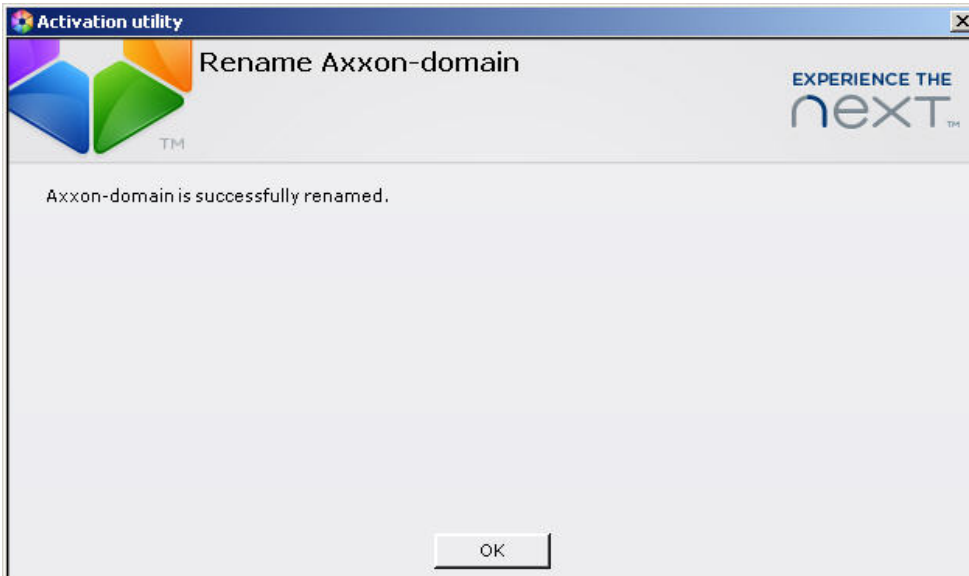 

To return to the license utility home screen, click **OK**. To exit from the utility, click **X**.

## Generating license files via the licensing web server

The license file can be obtained from an *AxxonSoft* representative, by sending him a request file, or may be self-generated on the license server.

 
To generate a license file via the licensing web server, a request file is needed for activation of the required licensing for *Axxon Next*.

[Play corresponding video](#)

## Generating the Axxon Next Free Version license file

To generate the *Axxon Next Free Version* license file, follow these steps:

1. Go to the web server at the following address: <https://sale.itv.ru>.

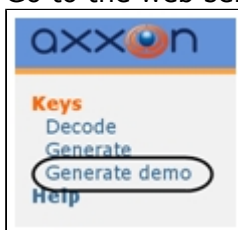


2. Go to the link: **Generate demo**.
3. In the form that appears on the page, specify the path to the saved activation request file. Download this file to the license server by clicking **Upload**.

**Generate key**

Upload request file

4. Click **Generate**.
5. Download the license file: **license.key**.

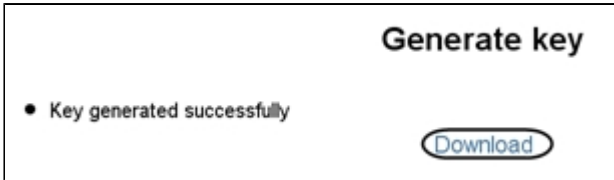


The generation of the *Axxon Next Free Version* license file is complete.

## Generating the Axxon Next license file

 The self-generated *Axxon Next* license file is available only upon the request for the product serial number activation. The product serial number is available after payment.

To generate the *Axxon Next* license file, follow these steps:


1. Go to the web server at the following address: <https://sale.itv.ru> .

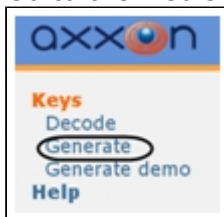

2. Go to the link: **Generate**.
3. In the form that appears on the page, specify the path to the paid license activation file. Download this file to the license server by clicking **Upload**.

A screenshot of the "Generate key" form. It has a text input field labeled "Upload request file" containing the path "D:\Keys\AxxonNext". To the right of the input are "Browse..." and "Upload" buttons. Below the input is a "Generate" button.

 4. Click **Generate**.
5. Download the license file: **license.key**.

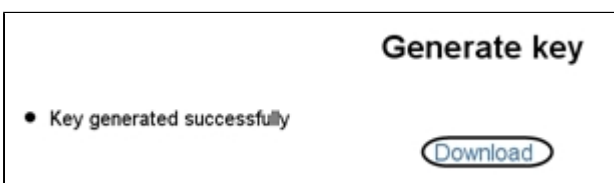

The generation of the *Axxon Next* license file is complete.