Administrator's Guide

1. Administrator’s Guide. INTRODUCTION 21
2. General description of the INTELLECT™ software 22
2.1 INTELLECT™ software functionality 22
2.2 Structure of the digital video surveillance and audio monitoring system based on INTELLECT™ software 25
2.2.1 Basic hardware components of the digital video surveillance system 27
2.2.2 Software 27
2.2.2.1 Operating system 27
2.2.2.2 Software kernels 27
2.2.2.3 Program modules 27
2.2.2.4 Interaction of basic modules with the Intellect kernel 27
2.2.2.5 Interaction of modules of other vendors with Intellect kernel 28
2.2.3 Internal video Server database 29
2.2.4 Communication environment 31
2.3 Intellect software package restrictions 31
2.4 Hashing procedure 32
2.5 Traffic encryption in the Intellect software 32
3. Requirements for the software and hardware platform 32
3.1 Requirements for base PCs 33
3.1.1 General requirements for PCs 33
3.1.2 Operating system requirements 34
3.1.3 Free disk space (video archive size) required 36
3.1.4 Defining disk space (audio archive size) 39
3.1.5 Define required disk space (size of event log database) 39
3.1.6 Define required disk space (VMDA metadata storage) 40
3.1.7 Intellect software working in virtual machines 40
3.2 Requirements for TCP/IP Network bandwidth 41
3.2.1 Requirements for TCP/IP Network bandwidth for video signal transferring 41
3.2.2 Requirements for TCP/IP network working of database synchronization functionality 42
3.3 Requirements for PTZ and control panels 42
3.4 Requirements for audio input units 42
3.5 Requirements for IP devices of audio and video input 42
3.6 Requirements for GSM Equipment 43
3.7 Requirements for voice modems 43
3.8 Requirements for software which is used while integrating 43
3.9 Requirements for anti-virus software 43
3.10 Requirements for BIOS 43
3.11 Requirements for video parameters to perform the forensic search in the archive 44
3.12 Requirements to video parameters while working with detection tools 44
3.13 Requirements to video parameters while using face detection tool 45

3.14 Video requirements to be met for abandoned object detection tool of the Tracker object operation . . . 45
4. Personnel skills requirements . . . 45
5. Installing and removing INTELLECT™ software . . . 45
5.1 Installing INTELLECT™ software . . . 46
5.1.1 Description of INTELLECT™ software distribution package . . . 46
5.1.2 Getting ready for Intellect installation . . . 46
5.1.3 Installation of INTELLECT™ software as a Server/Remote administrator workplace . . . 49
5.1.4 Installation of INTELLECT™ software to the Client . . . 69
5.1.5 Updating INTELLECT™ software . . . 83
5.1.6 Using the Product.msi and Redist.exe for INTELLECT™ software installation . . . 92
5.2 Repairing INTELLECT™ software . . . 93
5.3 Removing INTELLECT™ software . . . 97
5.3.1 Removing INTELLECT™ software from the Start menu . . . 97
5.3.2 Removing INTELLECT™ software from the OS Windows panel Add or Remove programs . . . 102
5.3.3 Removing INTELLECT™ software with the help of installation CD . . . 105
5.3.4 Removing INTELLECT™ software installed as a Service . . . 106
5.4 Installing INTELLECT™ software in a silent mode . . . 107
5.5 Remote installation, removal and update of Intellect software . . . 111
5.5.1 Remote installation of Intellect software . . . 112
5.5.2 Remote update of Intellect software . . . 113
5.5.3 Remote removal of Intellect software . . . 113
5.6 Configuring Cluster Service for Intellect . . . 113
5.6.1 Example. Combination of two Servers to the cluster and the Intellect software configuration . . . 114
6. License key . . . 117
6.1 Binding the license key to computer equipment . . . 117
6.2 Match search in the license key . . . 118
6.3 Features of the Intellect software operation when the object limit is exceeded . . . 118
6.4 Decoding license key . . . 120
7. Configuring system startup and shutdown . . . 121
7.1 Configuration of Intellect™ software startup . . . 121
7.1.1 Possible options for Intellect™ software startup . . . 121
7.1.2 Configuring Intellect™ system automatic startup from Windows OS Startup . . . 122
7.1.3 Configuring Intellect™ system automatic startup bypassing standard Windows OS . . . 123
7.2 Configuring Intellect™ system shutdown . . . 124
8. Working with the System settings dialog box . . . 125
8.1 General information about the System settings dialog box . . . 125
8.2 Startup and shutdown of the System settings dialog box . . . 125
8.2.1 Startup of the System settings dialog box . . . 125
8.2.2 Shutdown of the System settings dialog box . . . 127

8.3 Setting procedure for system objects . . . 127
9. INTELLECT™ software configuration and setup . . . 136
9.1 Configuration procedure for servers, clients and remote workstations . . . 136
9.1.1 Server settings . . . 136
9.1.1.1 Server hardware and software platform . . . 136
9.1.1.2 Setting up a Server . . . 136
9.1.2 Configuring a Remote Admin Workstation . . . 137
9.1.2.1 Remote Admin Workstation hardware and program platform . . . 137
9.1.2.2 Remote Admin Workstation configuration . . . 137
9.1.2.3 Videogate configuration . . . 138
9.1.2.4 Configuring backup archive server . . . 138
9.1.2.5 Configuring remote Web-server . . . 138
9.1.3 OS settings for correct operation of Remote Admin Workstation or Server . . . 139
9.1.4 Configuring Remote Clients (RC) . . . 139
9.1.4.1 Remote Client hardware and software platform . . . 139
9.1.4.2 Configuring Remote Client . . . 140
9.1.4.3 OS settings for correct operation of Remote Client . . . 140
9.2 Configuration of distributed architecture . . . 140
9.2.1 General principles of designing the digital video surveillance system with distributed architecture . . . 140
9.2.2 Configuring procedure for the distributed system . . . 140
9.2.3 Selecting the structure of the distributed system . . . 141
9.2.4 Synchronizing the databases of servers and remote workstations . . . 141
9.2.5 Registration of servers, clients and remote workstations on the administering server . . . 143
9.2.6 Configuring the interaction of distributed system components . . . 145
9.2.7 Configuring time synchronization in the distributed system . . . 148
9.2.8 Role-assignment in distributed system . . . 149
9.2.9 Features of distributed system operation using NAT . . . 150
9.3 Configuration of hardware . . . 150
9.3.1 Configuring video subsystem . . . 150
9.3.1.1 General information on configuring video subsystem . . . 150
9.3.1.1.1 Video subsystem components description . . . 150
9.3.1.1.2 Configuring video capture cards . . . 151
9.3.1.1.3 Configuring IP-devices . . . 151
9.3.1.1.4 Video signal compression and decompression . . . 152
9.3.1.1.5 How to record digitized video signals . . . 153
9.3.1.1.6 Digital video signal transmission to Remote Workplaces . . . 154
9.3.1.1.7 Video signal display . . . 154
9.3.1.2 Registrating Video Capture Devices and cameras in INTELLECT™ software . . . 154
9.3.1.3 Configuring the video signals processing mode while using video capture cards and analog video cameras . . . 154

9.3.1.3.1 Setting up format (PAL or NTSC) for the input analog video signal . . . 154
9.3.1.3.2 Frame rate settings . . . 155
9.3.1.3.3 Brightness, contrast, color depth and color rendition format settings . . . 170
9.3.1.3.4 Configuring video compression . . . 175
9.3.1.4 Creating and configuring a virtual Video Capture Device . . . 179
9.3.1.5 Configuring video archiving . . . 182
9.3.1.5.1 General information on video archiving . . . 182
9.3.1.5.2 Video archiving procedure . . . 185
9.3.1.5.3 Selecting the disks for video archive storage . . . 185
9.3.1.5.4 Using network disks . . . 186
9.3.1.5.5 Disabling automatic recording upon alarm registration . . . 188
9.3.1.5.6 Configuring video frame rate . . . 189
9.3.1.5.7 Configuring video in the Hot record mode . . . 189
9.3.1.5.8 Configuring video in the Pre-alarm record mode . . . 191
9.3.1.5.9 Configuring video in the Post-alarm record mode . . . 193
9.3.1.5.10 Configuring audio and video synchro recording . . . 194
9.3.1.5.11 Selecting current disk for recording . . . 195
9.3.1.5.12 Viewing current disk for recording . . . 197
9.3.1.5.13 Configuring video camera archive depth . . . 198
9.3.1.6 Additional information on camera . . . 199
9.3.1.7 Configuring video detection tools . . . 200
9.3.1.7.1 General description of Intellect software detection tools . . . 200
9.3.1.7.2 Enabling, configuring and disabling basic video detection tools . . . 200
9.3.1.7.3 Configuring smart video detection tools . . . 215
9.3.1.7.4 Embedded detectors . . . 231
9.3.1.7.5 Configuring Face detection tool . . . 236
9.3.1.8 Configuration of multistream video . . . 237
9.3.1.9 Configuring of using 64-bits modules . . . 239
9.3.1.10 Video record from computer monitor . . . 241
9.3.1.11 Configuring fisheye cameras . . . 248
9.3.2 Configuring audio subsystem . . . 249
9.3.2.1 General information on configuring audio subsystem . . . 249
9.3.2.1.1 Audio digitizing devices . . . 250
9.3.2.1.2 Configuring the digitization devices for audio signals . . . 251
9.3.2.1.3 Digitized audio signal recording . . . 251
9.3.2.1.4 Digital audio signal transmission to Remote Workstations and servers . . . 252
9.3.2.1.5 Audio signal playback . . . 252
9.3.2.2 Registration of audio cards and microphones in INTELLECT™ software . . . 252
9.3.2.3 Configuring audio signals digitization and processing . . . 252

9.3.2.3.1 Audio signals sample rate settings . . . 252
9.3.2.3.2 Setting up the audio signal volume amplification . . . 252
9.3.2.3.3 Setting up the Automatic Gain Control for sound cards of Olha line . . . 253
9.3.2.4 Configuring audio signals recording . . . 254
9.3.2.4.1 Audio signals recording modes . . . 254
9.3.2.4.2 Selecting the disks for audio archive storage . . . 255
9.3.2.4.3 Setting up the sound activated recording . . . 257
9.3.2.4.4 Setting up the audio and video synchro recording . . . 258
9.3.2.5 Configuring audio playback . . . 258
9.3.2.5.1 Creating and configuring the Audio playback card object . . . 259
9.3.2.5.2 Creating and configuring the Speaker object . . . 260
9.3.2.6 Features of standard sound card use . . . 262
9.3.2.6.1 General information on standard sound cards . . . 262
9.3.2.6.2 Features of standard sound card setup . . . 262
9.3.2.7 Using multi-channel audio capture devices . . . 264
9.3.2.7.1 General information on multi-channel audio capture devices . . . 264
9.3.2.7.2 Setting up multi-channel audio capture devices . . . 265
9.3.2.8 Using IP-devices . . . 265
9.3.2.8.1 General information on IP-devices . . . 265
9.3.2.8.2 Setting up the transmission of video signals to IP-devices . . . 266
9.3.2.8.3 Setting up the transmission of audio signals to IP-device Bosch . . . 267
9.3.2.8.4 Setting up the transmission of duplex audio signals to IP-devices . . . 270
9.3.3 Configuring events logging . . . 271
9.3.4 Configuring the Event Viewer databases synchronization . . . 272
9.3.4.1 General information on the Event Viewer databases synchronization . . . 272
9.3.4.2 Configuring the Event Viewer database synchronization . . . 272
9.3.4.3 Example of macro to start the Event Viewer databases synchronization . . . 274
9.3.5 Configuring telemetry . . . 274
9.3.6 Configuring operation of distributed architecture in the failover mode . . . 274
9.3.6.1 General information about Failover mode . . . 275
9.3.6.2 Configuring Failover mode . . . 280
9.3.6.3 Limiting number of failovers running simultaneously . . . 283
9.3.6.4 Configuring archive synchronization of main and backup Servers . . . 284
9.3.7 Configuring the access to the archive in edge storage . . . 285
9.3.7.1 General information on keeping video archive in edge storage . . . 285
9.3.7.2 Creating the Edge storage object . . . 286
9.3.7.3 Configuring the connection to edge storage . . . 286
9.3.7.4 Setting the list of cameras to access the edge storage . . . 287
9.3.7.5 Importing from edge storages . . . 288

9.3.8 Configuring the SNMP-service . . . 290
9.3.8.1 SNMP service setting order . . . 290
9.3.8.2 Creating the SNMP trap object . . . 291
9.3.8.3 Events selection for transmitting to SNMP manager . . . 294
9.3.8.4 Configuring the message conversion into SNMP format . . . 294
9.3.8.5 Setting up the trap with SNMP-message . . . 296
9.3.8.6 SNMP configuration for traps receiving on remote computer . . . 297
9.3.9 Setting up and connecting the special keyboard . . . 297
9.3.9.1 Connecting the special keyboard to the Workstations . . . 298
9.3.9.2 Setting up the layout of the special keyboard device . . . 300
9.3.9.2.1 Installing the software for programming the Special keyboard device . . . 300
9.3.9.2.2 Programming the Special keyboard device in Windows OS . . . 307
9.3.9.3 Setting up the Keyboard object in INTELLECT™ software . . . 312
9.3.9.4 Settings the interpretation rules of the Special keyboard layout by Intellect program complex . . . 313
9.3.9.4.1 The use of standard ini-file . . . 314
9.3.9.4.2 Setting up Intellect program software with the use of several Special keyboard devices . . . 316
9.3.9.4.3 Editing the standard ini-file(optionally) . . . 317
9.3.10 Configuring the System restart service . . . 318
9.3.10.1 General information on the System restart service module . . . 318
9.3.10.2 Activating the hardware control of workability . . . 319
9.3.10.3 Configuring the software control of workability . . . 320
9.3.10.4 Getting the information on memory consumption for processes . . . 322
9.3.11 Configuring long-term archiving . . . 322
9.3.11.1 Purpose and implementation of long-term archiving in the Intellect software . . . 322
9.3.11.2 Configuring the Long-term archive module . . . 323
9.3.11.2.1 Configuration procedure for the Long-term archive object . . . 323
9.3.11.2.2 Creating the Long-term archive object . . . 323
9.3.11.2.3 Selecting and configuring the cameras for the Long-term archive . . . 325
9.3.11.2.4 Selecting cameras as a group for the Long-term archive . . . 326
9.3.11.2.5 Setting the parameters of video archive transmission over LAN . . . 328
9.3.11.2.6 Selecting disks to store the archive of the Backup archive module . . . 328
9.3.11.2.7 Configuring the scaling of the video archive . . . 331
9.3.11.2.8 Configuring the schedule of the video archive copying . . . 332
9.3.11.2.9 Enabling cooperation of Long-term archive with Failover service . . . 333
9.3.11.3 Configuring the Long-term audio archive module . . . 334
9.3.12 Configuring the Videogate module . . . 337
9.3.12.1 General information on the videogate . . . 337
9.3.12.2 Order of setting up the Videogate object . . . 339
9.3.12.3 Creating the Videogate object . . . 339

9.3.12.4 Selecting and configuring the cameras for the Videogate module . . . 341
9.3.12.5 Selecting video cameras as a group for the Videogate module . . . 343
9.3.12.6 Selecting disks for storing the archive of the Videogate module . . . 345
9.3.12.7 Configuring the record of the Videogate module archive . . . 348
9.3.13 Notification services . . . 348
9.3.13.1 Setting up the Alarm Message window . . . 349
9.3.13.2 Setting up the Short Message Service (SMS) . . . 350
9.3.13.2.1 General description and usage details of the Short Message Service . . . 350
9.3.13.2.2 Creating and setting up the Short Message Service object . . . 351
9.3.13.2.3 Creating and setting up the short messages . . . 352
9.3.13.2.4 Creating and setting up the macro for sending the short message . . . 352
9.3.13.3 Setting up the Mail Message Service (E-mail) . . . 353
9.3.13.3.1 General description and usage details of the Mail Message Service . . . 353
9.3.13.3.2 Creating and setting up the Mail Message Service . . . 354
9.3.13.3.3 Creating e-mail messages . . . 355
9.3.13.3.4 Creating and setting up a macro for sending the e-mail message . . . 355
9.3.13.4 Setting up the Voice Message Service (V-dial) . . . 356
9.3.13.4.1 General information and usage details of the Voice Message Service . . . 356
9.3.13.4.2 Creating and setting up the Voice Message Service object . . . 357
9.3.13.4.3 Creating voice messages . . . 357
9.3.13.4.4 Creating and setting up the macro for sending the voice message . . . 358
9.3.13.5 Setting up the Voice Notification Service . . . 359
9.3.13.5.1 General description and usage details of the Voice Notification Service (VNS) . . . 359
9.3.13.5.2 Creating and setting up the Voice Notification Service object . . . 359
9.3.13.5.3 Creating and setting up the macro for sending the voice notification . . . 360
9.3.14 Replicating archive from unconnected servers using the removable storage . . . 361
9.3.14.1 Order of archive replication from unconnected servers . . . 361
9.3.14.2 Configuring the Data replication service object . . . 361
9.3.14.3 Configuring the Target objects tree for data replication . . . 363
9.3.14.4 Creating the query file . . . 364
9.3.14.5 Copying the archive from the Source . . . 364
9.3.14.6 Restoring the archive on the Target . . . 366
9.3.15 Configuring the Web-server module . . . 367
9.3.15.1 General description of the Web-server module . . . 367
9.3.15.2 System requirements . . . 368
9.3.15.3 Installing Java Runtime Environment . . . 368
9.3.15.4 Authorization on the Web-server home page . . . 369
9.3.15.5 Starting and setting up the Web-server module . . . 369
9.3.15.6 Configuring the videoserver to connect Clients via the Web-server module . . . 370

9.3.15.6.1 Creating the Web-server object . . . 370
9.3.15.6.2 Selecting and configuring cameras for the Web-server module . . . 372
9.3.15.6.3 Bulk selecting and configuring cameras for Web-server . . . 374
9.3.15.6.4 Setting the parameters of connecting Clients to the Web-server . . . 376
9.3.15.6.5 Setting the default user for the Web-server module . . . 377
9.3.15.6.6 Enabling the processing of ECHD requests and selecting rtsp server . . . 378
9.3.15.7 Configuring the server for the clients connection via the Web-server 2.0 module . . . 379
9.3.15.7.1 Creating the Web-server 2.0 object . . . 380
9.3.15.7.2 Configuring the Events filter for the Web-server 2.0 module . . . 380
9.3.15.7.3 Using the Web-server settings for the Web-server 2.0 module . . . 382
9.3.15.7.4 Converting maps . . . 382
9.3.15.7.5 Applying changes of the user rights . . . 383
9.3.15.8 Web-server home page template and Java applet settings . . . 384
9.3.15.9 Setting up the surveillance monitor interface of the Web-server module . . . 386
9.3.15.10 Setting up the display of the data for traffic estimation in the Web-server . . . 387
9.3.15.11 Setting up the Web-server module to act as a gate on a different HTTP-server . . . 387
9.3.15.12 Change of certificates of push-notifications for the Web-server 2.0 module . . . 388
9.3.16 Configuring RTSP Server module . . . 388
9.3.17 Counting the system events . . . 396
9.3.17.1 General Information on counting the system events . . . 396
9.3.17.2 Configuring the Event Counter . . . 396
9.3.17.3 Data output and counter control . . . 398
9.3.18 Configuring PS-RTP server . . . 400
9.3.19 Configuring interaction with Manitou software . . . 402
9.4 Configuration of interfaces . . . 405
9.4.1 Configuring the user interface . . . 405
9.4.1.1 The user interface in the Intellect software . . . 405
9.4.1.2 Setup procedure for the displays . . . 406
9.4.1.3 Creating a Display object . . . 406
9.4.1.4 Placing the interface components on the screen . . . 407
9.4.1.5 Assigning the screens to the operator workstations . . . 408
9.4.1.6 Examples of the user interface configuration . . . 410
9.4.2 Configuration of video display . . . 411
9.4.2.1 Video signal display settings . . . 411
9.4.2.1.1 General information on video signal displaying . . . 411
9.4.2.1.2 Video monitor setup sequence . . . 412
9.4.2.1.3 Creating the Monitor object . . . 412
9.4.2.1.4 Selecting the parameters of the Monitor interface box . . . 414
9.4.2.1.5 Selecting and configuring video cameras . . . 417

9.4.2.1.6 Selecting and configuring video cameras as a package . . . 420
9.4.2.1.7 Configuring an auto select of video stream for displaying . . . 422
9.4.2.1.8 Configuring the display mode for camera boxes . . . 423
9.4.2.1.9 Selecting the overlay mode . . . 425
9.4.2.1.10 Setting the Telemetry control priority using the Monitor object . . . 426
9.4.2.1.11 Configuring the captions showing . . . 427
9.4.2.1.12 Binding Audio player to the Monitor . . . 430
9.4.2.1.13 Configuring a rotation angle of video image . . . 431
9.4.2.2 Configuring object's panoramic view by means of the Scene object . . . 432
9.4.2.2.1 Creating the Scene object . . . 433
9.4.2.2.2 Setting the parameters of the Scene interface box . . . 433
9.4.2.2.3 Selecting and configuring cameras for the Scene object . . . 434
9.4.2.3 Configuring video transmission to Remote Workstations . . . 436
9.4.3 Configuration of audio . . . 437
9.4.3.1 Configuring audio signals playback using the video monitor . . . 437
9.4.3.2 Configuring audio signals playback using the Audio player object . . . 437
9.4.3.2.1 Audio player setup sequence . . . 437
9.4.3.2.2 Creating the Audio player object . . . 438
9.4.3.2.3 Setting the parameters of the Audio player interface box . . . 439
9.4.3.2.4 Setting up the recording and audio signals' playback . . . 440
9.4.3.3 Features of audio signals export using the video monitor . . . 441
9.4.3.4 Setting up the audio signal transmission to Remote Workstations and servers . . . 441
9.4.4 Configuring the interactive map for object state indication and controlling the objects . . . 442
9.4.4.1 General information on the structure of the interactive map of the guarded location . . . 442
9.4.4.2 Configuring the interactive map . . . 443
9.4.4.2.1 Setup procedure for the interactive map . . . 443
9.4.4.2.2 Setting up the location of the map on the screen . . . 443
9.4.4.2.3 Creating the layers of the interactive map . . . 444
9.4.4.2.4 Attaching objects to the layers of interactive map . . . 448
9.4.4.2.5 Operations with objects in the Map editor utility . . . 451
9.4.4.2.6 Linking the layers of the interactive map . . . 460
9.4.4.2.7 Cancelling the last action in Map editor . . . 463
9.4.4.2.8 Configuring object ID is displaying . . . 464
9.4.4.2.9 Editing object properties using the Properties panel . . . 464
9.4.4.2.10 Configuring viewing Map editor utility . . . 465
9.4.4.2.11 Searching object in the Map editor utility by its name and ID . . . 466
9.4.4.3 Setting up the display of the alarm signals on multilevel maps . . . 467
9.4.4.4 Configuring image caching on the map . . . 468
9.4.4.5 Configuring the order of reactions in the object menu . . . 469

9.4.4.6 Configuring number of events shown in the Map window . . . 470
9.4.5 Configuring the Long-term archive panel object . . . 471
9.4.6 Configuring the Operator protocol interface object . . . 471
9.4.6.1 Creating the Operator protocol object . . . 472
9.4.6.2 Configuring the Operator protocol object . . . 474
9.4.6.3 Configuring the database server connection in an online mode . . . 476
9.4.7 Configuring the Event Viewer interface object . . . 478
9.4.7.1 Order of configuring the Event Viewer interface object . . . 478
9.4.7.2 Configuring event filters for displaying in the Event viewer . . . 479
9.4.7.3 Event viewer parameters . . . 481
9.4.7.4 Parameters of displaying the Event Viewer interface box . . . 482
9.4.8 Setting up the sound switch . . . 483
9.4.8.1 Creating and configuring the Live sound switch object . . . 483
9.4.8.2 Using the Live sound switch object . . . 487
9.4.9 Setting up the Captions search window . . . 488
9.4.9.1 The Captions search window setup procedure . . . 488
9.4.9.2 Selecting the captioners . . . 488
9.4.9.3 Specifying the captions search criteria . . . 489
9.4.9.4 Setting up the Captions search window displaying . . . 491
9.4.10 Configuring HTML interface . . . 493
9.4.10.1 General description of HTML interface in Intellect software . . . 493
9.4.10.2 Procedure of HTML interface configuring . . . 493
9.4.10.3 Creating HTML interface object and setting its position . . . 494
9.4.10.4 Creating and configuring the HTML page object . . . 495
9.4.10.4.1 Creating the HTML page object . . . 495
9.4.10.4.2 Open web-page by URL . . . 496
9.4.10.4.3 Loading file from disk and saving to disk . . . 497
9.4.10.4.4 Link to the HTML page object . . . 498
9.4.10.5 Selecting start page for displaying in HTML interface . . . 499
9.4.10.6 Selecting objects to track their states . . . 499
9.4.11 Setting up the voice notification . . . 500
9.4.11.1 Setting up the voice notification using Audio player object . . . 501
9.4.11.2 Setting up the voice notification using Sound notification object . . . 501
9.4.12 Intellect Software System's interface language . . . 503
9.4.12.1 Installing the language . . . 503
9.4.12.2 Switching languages in the Intellect Software System . . . 505
9.5 Configuration of users and permissions . . . 506
9.5.1 Rights administration . . . 506
9.5.1.1 The users‘ rights . . . 506

9.5.1.2 User registration and removal . . . 507
9.5.1.2.1 General information about user registration in Intellect software . . . 507
9.5.1.2.2 User registration procedure . . . 507
9.5.1.2.3 Administrator password registration . . . 507
9.5.1.2.4 Department registration . . . 509
9.5.1.2.5 Registration of Operator accounts . . . 510
9.5.1.2.6 Removing user accounts . . . 511
9.5.1.3 Registration of users' rights . . . 511
9.5.1.3.1 Registration of operator rights . . . 512
9.5.1.3.2 General information on the limits to the administrative functions . . . 512
9.5.1.3.3 Limiting access to the tabs of the System Settings window . . . 513
9.5.1.3.4 Limiting access to the administration of the system objects, control and viewing functions . . . 513
9.5.1.3.5 Limiting access to shutting the system down . . . 515
9.5.1.3.6 Limiting the rights to hide the interface components . . . 516
9.5.1.3.7 Permissions for working with archives . . . 517
9.5.1.3.8 Assigning the rights and password to operators for authorization in the Intellect . . . 522
9.5.1.3.9 Setting up the default user . . . 525
9.5.1.3.10 Configuring session auto termination when user is inactive . . . 526
9.5.2 Configuration of the LDAP Service . . . 527
9.5.2.1 General information about the LDAP Service module . . . 527
9.5.2.2 Configuring the connection to the LDAP address book . . . 528
9.5.2.3 Configuration of correspondence between address attributes and Intellect DB fields . . . 530
9.5.2.4 Examples of LDAP Service configuration . . . 531
9.6 System settings (the Programming tab) . . . 534
9.6.1 Configuring internal synchronization . . . 534
9.6.2 Connection of objects with cameras . . . 535
9.6.3 Creating and configuring Macro events . . . 536
9.6.3.1 Configuring the macro events . . . 537
9.6.3.2 Example of macro event . . . 540
9.6.4 Creating and using macros . . . 541
9.6.4.1 Creating macros . . . 541
9.6.4.2 Examples of macros . . . 546
9.6.5 Creating and using the Timer object . . . 548
9.6.5.1 Creating and configuring the Timer object . . . 548
9.6.5.2 Using the Timer object . . . 551
9.6.6 Creating and using time zones . . . 554
9.6.6.1 Creating and configuring time zones . . . 554
9.6.6.2 Viewing time-zones states . . . 559
9.6.6.3 Examples of time zones usage . . . 560

9.6.7 Subdivision of the guarded location into areas and regions . . . 563
9.6.7.1 About areas and regions . . . 563
9.6.7.2 Creating areas . . . 563
9.6.7.3 Creating regions . . . 564
9.6.7.4 Creating rules of states transition . . . 566
9.6.7.5 Examples of using areas and regions . . . 569
10. The Report System . . . 570
10.1 General information on the Report System . . . 571
10.2 Starting and shutting-down the Report system . . . 571
10.2.1 Starting the Report system . . . 571
10.2.2 Shutting-down the Report system . . . 572
10.3 The Report window . . . 573
10.3.1 The OptionsForm window . . . 577
10.4 Connecting to databases . . . 578
10.4.1 Connecting to the main database of the Intellect system . . . 578
10.4.1.1 Selecting an Access database and setting up the connection . . . 579
10.4.1.2 Selecting an SQL database and setting up its parameters . . . 585
10.4.2 Connecting to the Events Log (PROTOCOL table) . . . 594
10.5 Manual loading of the configuration and registered events from the database . . . 596
10.6 Viewing the general information on the events in the database . . . 597
10.7 Creating the log of changes made to the system configuration . . . 599
10.8 Using the report templates in the Report system . . . 600
10.8.1 Recommendations for template creation . . . 600
10.8.2 Creating a report template . . . 601
10.8.3 Deleting the report templates . . . 603
10.9 Using screen and printed reports . . . 603
10.9.1 Creating a screen report . . . 604
10.9.1.1 Creating a screen report from the report template . . . 605
10.9.2 Creating a printed report . . . 606
10.9.2.1 Creating a printed report from a report template . . . 608
10.9.3 Printing the report . . . 610
10.9.4 Exporting the report to a file . . . 611
10.10 Video recording playback from the Report system . . . 614
10.10.1 Playback of the video recordings from the Report system . . . 614
10.10.2 Selecting the playback mode of video recordings . . . 615
10.11 Filtering the events in the screen report according to the additional information . . . 616
10.12 The keyboard shortcuts list . . . 617
11. Administrator’s Guide. Conclusion . . . 618
12. Appendices . . . 618

12.1 Appendix 1. Interface . . . 618
12.1.1 Description of the Main Control Panel Interface . . . 618
12.1.2 Description of the System settings dialog box . . . 619
12.1.2.1 Tabs panel . . . 619
12.1.2.2 Object tree . . . 619
12.1.2.3 Context menu of the system object . . . 620
12.1.2.3.1 The Create object function . . . 621
12.1.2.3.2 The Change parameter function . . . 622
12.1.2.3.3 The Camera discovery tool function . . . 623
12.1.2.3.4 The Delete object function . . . 623
12.1.2.3.5 The Create folder function . . . 624
12.1.2.3.6 The Move to folder function . . . 626
12.1.2.3.7 The Save function . . . 627
12.1.2.3.8 The Find function . . . 630
12.1.2.3.9 The Reconnect function . . . 632
12.1.2.3.10 The Send to all function . . . 633
12.1.2.3.11 The Send key function . . . 634
12.1.2.3.12 The Save configuration function . . . 635
12.1.2.3.13 The Load configuration function . . . 636
12.1.2.3.14 Collapsing the tree . . . 637
12.1.2.3.15 Expanding the tree . . . 638
12.1.2.4 The Object setting panel . . . 639
12.1.2.5 The Apply and Cancel buttons . . . 643
12.1.2.6 The elements of the System settings dialog box . . . 643
12.1.2.7 The Architecture tab . . . 645
12.1.2.8 The Hardware tab . . . 647
12.1.2.8.1 Hardware tab components . . . 647
12.1.2.8.2 The Settings panel of the Computer object . . . 647
12.1.2.8.3 The Settings panel of the Video Capture Device object . . . 653
12.1.2.8.4 The Settings panel of the Camera object . . . 656
12.1.2.8.5 The Settings panel of the Detection zone object . . . 665
12.1.2.8.6 The Settings panel of the Audio card object . . . 668
12.1.2.8.7 The Settings panel of the Microphone object . . . 669
12.1.2.8.8 The Settings panel of the Telemetry controller object . . . 672
12.1.2.8.9 The Settings panel of the PTZ device object . . . 673
12.1.2.8.10 The Settings panel of the Control panel object . . . 676
12.1.2.8.11 The Settings panel of the Long-term archive object . . . 677
12.1.2.8.12 The Settings panel of the Keyboard object . . . 680
12.1.2.8.13 The Settings panel of the System restart service object . . . 682

12.1.2.8.14 The Settings panel of the Voice Notification Service object . . . 684
12.1.2.8.15 The Settings panel of the Voice Message Service object . . . 686
12.1.2.8.16 The Settings panel of the Voice message object . . . 687
12.1.2.8.17 The Settings panel of the Short Message Service object . . . 689
12.1.2.8.18 The Settings panel of the Short Message object . . . 690
12.1.2.8.19 The Settings panel of the Mail Message Service object . . . 691
12.1.2.8.20 The Settings panel of the Mail Message object . . . 693
12.1.2.8.21 The Settings panel of the Web-server object . . . 695
12.1.2.8.22 The Settings panel of the rtsp Server object . . . 699
12.1.2.8.23 The Settings panel of the Operator query panel object . . . 701
12.1.2.8.24 The Settings panel of the Alarm Message Window object . . . 703
12.1.2.8.25 The Settings panel of the Videogate object . . . 704
12.1.2.8.26 The Settings panel of the Event Counter object . . . 707
12.1.2.8.27 The Settings panel of the Data replication service object . . . 711
12.1.2.8.28 The Settings panel of the Failover object . . . 711
12.1.2.8.29 The Settings panel of the Backup audio archive object . . . 713
12.1.2.8.30 The Settings panel of the Web Server 2.0 object . . . 713
12.1.2.8.31 The Settings panel of the Edge storage object . . . 715
12.1.2.8.32 The Settings panel of the RS-RTP server object . . . 717
12.1.2.9 The Interfaces tab . . . 721
12.1.2.9.1 Interfaces tab components . . . 721
12.1.2.9.2 The Settings panel of the Display object . . . 721
12.1.2.9.3 The Settings panel of the Monitor object . . . 722
12.1.2.9.4 The Settings panel of the Audio player object . . . 728
12.1.2.9.5 The Settings panel of the Telemetry control panel object . . . 730
12.1.2.9.6 The Settings panel of the Long-term archive panel object . . . 733
12.1.2.9.7 The Settings panel of the Map object . . . 735
12.1.2.9.8 The Settings panel of the Layer object . . . 737
12.1.2.9.9 The Settings panel of the Event viewer object . . . 739
12.1.2.9.10 The Settings panel of the Operator protocol object . . . 743
12.1.2.9.11 The Settings panel of the External window object . . . 748
12.1.2.9.12 The Settings panel of the Scene object . . . 749
12.1.2.9.13 The settings panel of the HTML Interface object . . . 751
12.1.2.9.14 The settings panel of the HTML page object . . . 752
12.1.2.10 The Programming tab . . . 754
12.1.2.10.1 The Settings panel of the Security zone object . . . 754
12.1.2.10.2 The Settings panel of the Macro object . . . 757
12.1.2.10.3 The Settings panel of the Program object . . . 760
12.1.2.10.4 The Settings panel of the Time zone object . . . 761

12.1.2.10.5 The Settings panel of the Script object . . . 763
12.1.2.10.6 The Settings panel of the Region object . . . 765
12.1.2.10.7 The Settings panel of the Rule of states transition object . . . 767
12.1.2.10.8 The Settings panel of the Macro event object . . . 768
12.1.2.11 The Users tab . . . 770
12.1.2.11.1 The Users tab components . . . 770
12.1.2.11.2 The Settings panel of the Department object . . . 770
12.1.2.11.3 The Settings panel of the User object . . . 771
12.1.2.11.4 The Settings panel of the User permissions object . . . 772
12.2 Appendix 2. Utilities . . . 775
12.2.1 The utility for reading video capture card code and dongle . . . 775
12.2.1.1 The purpose of the CodeReader.exe utility . . . 775
12.2.1.2 Starting and shutting-down the utility . . . 775
12.2.1.3 Using the CodeReader.exe utility . . . 777
12.2.2 Converter.exe utility for converting video and audio archives . . . 778
12.2.2.1 The purpose of the Converter.exe utility . . . 778
12.2.2.2 Starting and shutting-down the Converter.exe utility . . . 779
12.2.2.3 Converter.exe interface . . . 782
12.2.2.3.1 The Archive's Converter dialog box . . . 782
12.2.2.3.2 The Export Settings dialog box . . . 784
12.2.2.3.3 A dialog box for choosing the video codec . . . 787
12.2.2.3.4 A dialog box for choosing the audio format . . . 788
12.2.2.4 Using the Converter.exe utility . . . 789
12.2.2.4.1 General description of the Converter.exe utility . . . 789
12.2.2.4.2 Selecting an archive to be played or converted . . . 790
12.2.2.4.3 Searching for a video recording . . . 791
12.2.2.4.4 Recording playback . . . 792
12.2.2.4.5 Converting video and audio archives to AVI files . . . 793
12.2.2.4.6 Exporting recordings and frames . . . 793
12.2.2.4.7 Using a command prompt to work with the Converter.exe utility . . . 795
12.2.2.4.8 Printing a frame . . . 797
12.2.2.4.9 Exporting video with titles . . . 797
12.2.3 Tweaki.exe utility for advanced setup of the Intellect software system . . . 799
12.2.3.1 The purpose of tweaki.exe utility . . . 799
12.2.3.2 Starting and shutting-down the Tweaki.exe utility . . . 799
12.2.3.3 Interface of the Tweaki.exe utility . . . 800
12.2.3.3.1 The Settings panel of the Windows section . . . 801
12.2.3.3.2 The Settings panel of the Intellect section . . . 803
12.2.3.3.3 The Settings panel of the DNS section . . . 806

12.2.3.3.4 The Settings panel of the Visitor management system section . . . 807
12.2.3.3.5 The Settings panel of the Distributed configuration section . . . 808
12.2.3.3.6 The Settings panel of the MSDE (MS SQL) configuration section . . . 810
12.2.3.3.7 The Settings panel of the Video subsystem section . . . 812
12.2.3.3.8 The Settings panel of the Testing video capture cards section . . . 814
12.2.3.3.9 The Settings panel of the PTZ section . . . 816
12.2.3.3.10 The Settings panel of the POS-Intellect section . . . 817
12.2.3.3.11 The Settings panel of the Face-Intellect section . . . 817
12.2.3.3.12 The Settings panel of the Version section . . . 817
12.2.3.4 Typical tasks concerning system extended settings . . . 818
12.2.3.4.1 Selecting and enabling the debug mode of Intellect software . . . 818
12.2.3.4.2 Extended setup of the distributed architecture . . . 821
12.2.3.4.3 Changing computer names and IP-addresses in the configuration database of the Intellect system . . . 822
12.2.3.4.4 Limiting memory usage by an MS SQL server . . . 824
12.2.3.4.5 Re-indexing the audio and video recordings archive . . . 826
12.2.3.4.6 Enabling the Pure video/CUDA hardware acceleration . . . 827
12.2.3.4.7 Testing video capture cards . . . 830
12.2.4 The utility for collecting configuration data on servers and RWS for the Technical Support . . . 832
12.2.4.1 The purpose of the Support.exe utility . . . 832
12.2.4.2 Starting and shutting-down the Support.exe utility . . . 832
12.2.4.3 The Support interface description . . . 833
12.2.4.4 Collecting information about videoservers and remote workstations using the Support.exe utility . . . 834
12.2.5 The Fps.exe utility for productivity estimation . . . 835
12.2.5.1 The purpose of the Fps.exe utility . . . 835
12.2.5.2 Starting and shutting-down the Fps.exe utility . . . 836
12.2.5.3 Using the Fps.exe utility . . . 836
12.2.6 The SignCheck.exe utility for checking the authenticity of exported frames and video recordings . . . 838
12.2.6.1 Starting and shutting-down the SignCheck.exe utility . . . 838
12.2.6.2 The purpose of the SignCheck.exe utility . . . 840
12.2.6.3 Using the SignCheck.exe utility . . . 840
12.2.7 The Convert.exe utility for correcting modification dates of video archives . . . 840
12.2.7.1 The purpose of the Convert.exe utility . . . 840
12.2.7.2 Starting and shutting-down the Convert.exe utility . . . 841
12.2.7.3 Restoring changed creation dates using the Convert.exe utility . . . 841
12.2.7.4 Working with the Convert.exe utility using the command prompt . . . 841
12.2.8 The ddi.exe utility for editing database templates and external settings files . . . 842
12.2.8.1 Editing intellect.dbi and intellect.ext.dbi database templates using the ddi.exe utility . . . 842
12.2.8.2 Editing the external setting file (intellect.ddi) using the ddi.exe utility . . . 843
12.2.8.2.1 General information on editing the external setting file . . . 844

12.2.8.2.2 The Names tab . . . 844
12.2.8.2.3 The Events tab . . . 845
12.2.8.2.4 The Reactions tab . . . 846
12.2.8.2.5 The Icons tab . . . 847
12.2.8.2.6 The States tab . . . 848
12.2.8.2.7 The Transition rules tab . . . 849
12.2.9 The Arpedit.exe utility for creating user dialog windows . . . 850
12.2.10 The idb.exe utility for converting databases, selecting database templates and making backup copies of databases . . . 850
12.2.10.1 The purpose of the idb.exe utility . . . 850
12.2.10.2 Running and shutting-down the utility . . . 851
12.2.10.3 Interface elements of the idb.exe window . . . 851
12.2.10.4 Using the idb.exe utility . . . 854
12.2.10.5 Working with idb.exe utility with the use of keys . . . 854
12.2.10.6 Extracting event protocol into an individual database . . . 858
12.2.10.7 Creating the database backup copy . . . 864
12.2.10.8 Restoring database from backup copy . . . 867
12.2.11 The HubSearch.exe utility for searching IP-devices . . . 868
12.2.11.1 The purpose of the HubSearch.exe utility . . . 868
12.2.11.2 Starting and shutting-down the HubSearch.exe utility . . . 868
12.2.11.3 Interface elements of HubSearch.exe utility window . . . 870
12.2.11.4 Using the HubSearch utility . . . 872
12.2.12 The MatrixCodeReader.exe utility . . . 873
12.2.12.1 The purpose of MatrixReader.exe utility . . . 873
12.2.12.2 Starting and shutting-down the MatrixCodeReader.exe utility . . . 873
12.2.12.3 Interface elements of the MatrixCodeReader.exe . . . 875
12.2.12.4 Using the MatrixCodeReader.exe . . . 877
12.2.13 The Boards.exe utility . . . 877
12.2.13.1 The purpose of the Boards.exe utility . . . 877
12.2.13.2 Starting and shutting-down the Boards.exe utility . . . 877
12.2.13.3 Interface elements of Boards.exe . . . 879
12.2.13.4 Using the Boards.exe . . . 879
12.2.14 Configuration check tool . . . 880
12.2.14.1 Starting and shutting down the Configuration check tool . . . 880
12.2.14.2 Configuration check tool interface description . . . 883
12.2.14.3 Using the Configuration check tool . . . 884
12.2.14.3.1 Creating a template . . . 885
12.2.14.3.2 Downloading and editing the template . . . 887
12.2.14.3.3 Verifying and correcting the configuration . . . 887
12.2.15 Index.exe utility for reindexing archive files . . . 889

12.2.15.1 The purpose of Index.exe utility . . . 889
12.2.15.2 Starting and shutting down the utility . . . 889
12.2.15.3 Using the Index.exe utility . . . 890
12.2.16 The shedule.exe utility for creating a replication query file . . . 891
12.2.16.1 The purpose of the shedule.exe utility . . . 891
12.2.16.2 Starting and shutting-down the schedule.exe utility . . . 891
12.2.16.3 Using the schedule.exe utility . . . 893
12.2.16.3.1 Creating the query file for replication . . . 894
12.2.16.3.2 Saving the query file . . . 895
12.2.16.3.3 Opening the query file . . . 895
12.2.17 The AxxonPlayer.exe utility for viewing and converting the video archive . . . 897
12.2.17.1 Purpose of the AxxonPlayer.exe utility. Hardware requirements . . . 897
12.2.17.2 Starting the AxxonPlayer.exe utility . . . 897
12.2.17.3 Opening video files . . . 898
12.2.17.3.1 Opening video files by specifying the path in the utility . . . 899
12.2.17.3.2 Opening video files using the command prompt . . . 902
12.2.17.4 Configuring the interface of the Axxon_Player.exe utility . . . 902
12.2.17.5 Viewing video using the AxxonPlayer.exe utility . . . 904
12.2.17.5.1 The Playback control panel . . . 904
12.2.17.5.2 Archive navigation using the calendar . . . 906
12.2.17.5.3 Archive navigation using the time scale . . . 908
12.2.17.5.4 Scaling the video image . . . 909
12.2.17.5.5 Saving the frame from the command prompt . . . 909
12.2.17.5.6 Watermarks . . . 910
12.2.17.6 Exporting the Intellect video archive using the AxxoPlayer.exe utility . . . 911
12.2.17.6.1 Order of video archive export . . . 911
12.2.17.6.2 Specifying the export folder . . . 911
12.2.17.6.3 Going to the export panel . . . 911
12.2.17.6.4 Creating the export task . . . 912
12.2.17.6.5 Running the archive export . . . 914
12.2.17.6.6 Setting the export parameters in the command prompt . . . 914
12.2.18 The Cam_title_updater.exe utility to convert titles database . . . 914
12.2.18.1 Purpose of the Cam_title_updater.exe utility . . . 915
12.2.18.2 Starting and quitting the Cam_title_updater.exe utility . . . 915
12.2.18.3 Updating titles database using the Cam_title_updater.exe utility . . . 915
12.3 Appendix 3. Relevant information on using Windows operating system . . . 916
12.3.1 Working with Windows OS registry . . . 916
12.3.1.1 General information about Windows OS registry . . . 916
12.3.1.2 Using the registry editor . . . 918

12.3.1.2.1 Starting and shutting-down the editor . . . 918
12.3.1.2.2 Interface elements of the registry editor . . . 920
12.3.1.2.3 Navigating the registry tree . . . 921
12.3.1.3 Adding string parameters to the registry . . . 922
12.3.1.4 Modifying the value of string parameters in Windows OS registry . . . 927
12.3.1.5 Deleting parameters from the Windows OS registry . . . 932
12.3.1.6 Configuring network drives visibility when UAC is enabled in Windows OS . . . 935
12.3.2 Connecting network disks in Windows Vista and Windows 7 OS . . . 937
12.3.3 Setting up serial (COM) ports in Windows . . . 938
12.3.4 Working with Windows OS services for operating Intellect™ installed as a Service . . . 939
12.3.4.1 General information on Intellect™ operation as a Service . . . 940
12.3.4.2 Configuring the restart of the ITV Intellect Core Server service . . . 940
12.3.4.3 Using network disks of INTELLECT™ installed as a Service . . . 941
12.3.4.4 Enabling INTELLECT™ as a Service startup . . . 942
12.3.4.5 Disabling INTELLECT™ as a Service startup . . . 942
12.3.5 The list of TCP ports used in INTELLECT™ . . . 943
12.3.6 Configuring Windows Firewall . . . 951
12.3.7 Disable the Data execution prevention (DEP) function for Intellect software package . . . 951
12.3.8 Configuring the best performance mode . . . 953
12.3.9 Limiting RAM for Elasticsearch service . . . 954
12.4 Appendix 4. INTELLECT™ software database management . . . 955
12.4.1 INTELLECT™ software database functions . . . 955
12.4.2 Guidelines on INTELLECT ™ system database use . . . 956
12.4.3 Converting the database from MS Access to MS SQL format . . . 956
12.4.4 INTELLECT™ software database connection . . . 963
12.4.5 Viewing INTELLECT™ software database . . . 969
12.4.6 Moving Intellect configuration database to the latest version of MS SQL Server . . . 975
12.4.7 Database synchronization setup . . . 979
12.4.8 Stored procedures for adding or deleting a large number of cameras . . . 983
12.5 Appendix 5. Updating Java time zones for proper operation with archive in iOS client . . . 985

Administrator’s Guide. INTRODUCTION

On the page:

- Purpose of the INTELLECT™ intelligent video surveillance system
- Setting up logical interrelations among objects in the Intellect software system
- Purpose and structure of the guide
- License method of the INTELLECT™ software

Purpose of the INTELLECT™ intelligent video surveillance system

INTELLECT™ software is designed for the deployment of industrial scalable, flexible (adjustable) integrated security systems, based on the digital video surveillance and audio monitoring systems.

INTELLECT™ software possesses the following basic features:

1. Integration of digital video surveillance and audio monitoring systems with the existing data systems, various security equipment, auxiliary software of other developers, using integrated open interfaces of the data exchange.
2. Compatibility with diverse security devices and data systems, in particular, with the fire and security alarm and access control systems, video surveillance cameras, data analysis systems and systems for recognition of objects (events) and identification by their images.
3. Single-source registration and processing of events, generation of notifications and controlling response in compliance with the flexibly modified logics.
4. Ultimately unlimited capabilities for scaling, solution—specific adjustments, re-distribution of resources with changes in the number or quality of tasks in monitoring guarded locations and operating various equipment.

Setting up logical interrelations among objects in the Intellect software system

Functional facilities of Intellect software complex are based on logical cooperation of objects. Common data about ways of setting up the logical interrelation is given in the table.

Ways of setting up the logical interrelation	Description	Realization	Example
Objects settings panels	Base setting of system objects interrelation	Is realized with the use of system objects functionality-see. Administrator’s Guide.	Setting up the video signal displaying in Monitor interface window
Macros	Setting up simple interrelations among objects which functionalities do not allow to carry out the required operations	Is realized with the use of Macros object functionality-see. Administrator’s Guide.	Setting of enabling the additional executive relay with ray closed
Program	Setting up complex interactions among objects, when **Macro** object functionality does not allow to carry out the required operations	Is realized on the basis of Program object as a code on the embedded Intellect program language-see. this guide	It is necessary to return the cameras to the reference position and make a frame
Script		Is realized on the basis of Script object as a code on embedded JScript language –see. Programming Guide (JScript).	

Purpose and structure of the guide

Documentation for the INTELLECT™ intelligent video surveillance system, Video surveillance and audio monitoring Administrator Guide is a reference and information handbook on programming on embedded Intellect software language, which is designed for system administrators, installation and configuration technicians, users with administrator rights to the digital video surveillance and audio monitoring systems, developed on the basis of INTELLECT™ software.

Programming in the INTELLECT™ enables system control by setting up complex logical interactions among objects. This guide contains the following materials:

1. Software programming;
2. Description of embedded program language syntax;
3. Examples of program on the embedded language.

License method of the INTELLECT™ software

Licensing of the INTELLECT™ software is performed by means of software and program protection.

The INTELLECT™ software protection is built on one of the following components:

1. dallas-codes of video capture cards' cryptochips (FS-5B, FS-6C, FS-8, FS-16(Exp), WS-7, WS-17);
2. dallas-codes of the electronic hardware security key «Guardant»;
3. codes of HID devices (hardware id).

The key file, connecting the software protection with program modules, belongs to the program protection part. A list of available for using functional program modules depends on the configuration of security system's delivery and is registered in the key file.

While extending the system configuration (for example while installing a new functional subsystem) for activating the program module functionality, corresponding to the installed subsystem, in the previous key file has to be changed by a new one, which the updated system functionality will be regulated with.

While using the distributed architecture a single key file is used for all the computers of the system.

Note!
If the video capture card is changed, its dallas-codes are changed too, so the previous key file should be respectively changed by a new one. While using the distributed architecture the key file should be changed on all the computers of the system.

General description of the INTELLECT™ software

INTELLECT™ software functionality

On the page:

- Video surveillance functionality
- Audio monitoring functionality
- Structuring guarded objects
- Event registration functionality
- Notification functionalities
- Functions of workability control
- Management functionality
- Integration of the distributed video surveillance and audio monitoring system

This section provides information on the main basic user functions of the distributed digital video and audio surveillance system based on the INTELLECT™ software.
The INTELLECT™ software provides the following basic user functions:

Video surveillance functionality

1. Multiple camera/video servers split screen image simultaneously displayed on a single PC monitor.
2. Priority-oriented automatic selection of displayed video images from alarm or active cameras to bring the required scenes into Operator focus (selection of images depending on set parameters).
3. Flexible split screen configuration including the number of sources observed.
4. Priority window magnification (surveillance windows), magnified surveillance windows slideshow option for a selected camera.
5. Color coding of surveillance window (camera) state: "armed", "alarm", "recording", etc.
6. Remote access to audiovisual streams from any workplace with both local and remote archive recording option.
7. Video recording can be performed:
    a. continuously;
    b. on schedule;
    c. on alarm with a pre-event recording option or by Operator's command.
8. Pre-event video recording.
9. Freeze frame by Operator's command selection and viewing, without interruption of the recording.
10. Image burn-in option.
    a. Current time;
    b. Current date;
    c. Camera No (ID).
11. Recording by Operator's command.
12. Real time viewing of images from video cameras.
13. Priority-oriented viewing of critical video stream based on alarm detection.
14. Web interface-based surveillance.
15. Audio- and video-archive management.
16. Viewing of recorded video with search and retrieve options (time/event type/camera ID criteria).
17. Synchro playback of footage recorded by several cameras.
18. Recorded time calculation.
19. Timestamp based footage search.
20. Image processing:
    a. Digital zooming;
    b. Contrast maximizing;
    c. Image sharpening;
    d. masking;
    e. Dynamic outlining.
21. Management of end devices using:
    a. the 3rd party programmable interface panel;
    b. the universal control panel for end devices;
    c. a PC mouse;
    d. a joystick.
22. Viewing video server footage from any system workplace using the TCP/IP communications environment.
23. Storage and exporting of single frames and video sequences.
24. Integrated use of various types of multi-zone detectors:
    a. main motion detector;
    b. motion;
    c. focus loss;
    d. video signal stability;

    e. changes in the image background;
    f. light-struck camera lens;
    g. closing camera lens;
    h. abandoned items;
    i. infra-red
25. Detector zone(s) masking.
26. Image de-interlacing.
27. Analog video-signal output.

Audio monitoring functionality

1. Audio monitoring.
2. Audio and video synchro recording.
3. Sound activated audio recording.
4. Audio recording by Operator's command.
5. Exporting audio recordings.

Structuring guarded objects

1. Virtual subdividing of guarded objects.
2. Multilevel hierarchical object mapping to obtain:
    a. Automatic switching and recursive structural event analysis possibility;
    b. Graphical representation of active objects on the map (on different levels) for simple device control via the shortcut menu.

Event registration functionality

1. Event log maintenance.

Notification functionalities

1. Automatic notification using:
    a. SMS (Short Message Service);
    b. email;
    c. V-dial auto dialing service;
    d. Audible/voice notification.

Functions of workability control

1. Software control of workability - the "Restarting system service" object.
2. Hardware control of workability - Watchdog

Management functionality

Macro commands programming of user specific functions.

Integration of the distributed video surveillance and audio monitoring system

1. Remote interaction of the software cores and automated replication of internal databases (containing system setup parameters and data about the events registered in the

system) between Servers and Remote workstations that are the components of the distributed digital video surveillance system.
2. Creating the integrated database of system setup parameters and registered events, followed by their processing in compliance with standards and specialized adjustable algorithms, including generation of notifications and system responses.
3. Software-rogrammable optimization of video data flows within the distributed digital video surveillance system when there is a lack of channel capacity (optional videogate functionality).

Structure of the digital video surveillance and audio monitoring system based on INTELLECT™ software

The versatile structure of the digital video surveillance and audio monitoring system based on INTELLECT™ software and standard hardware and software is shown in the figure below.

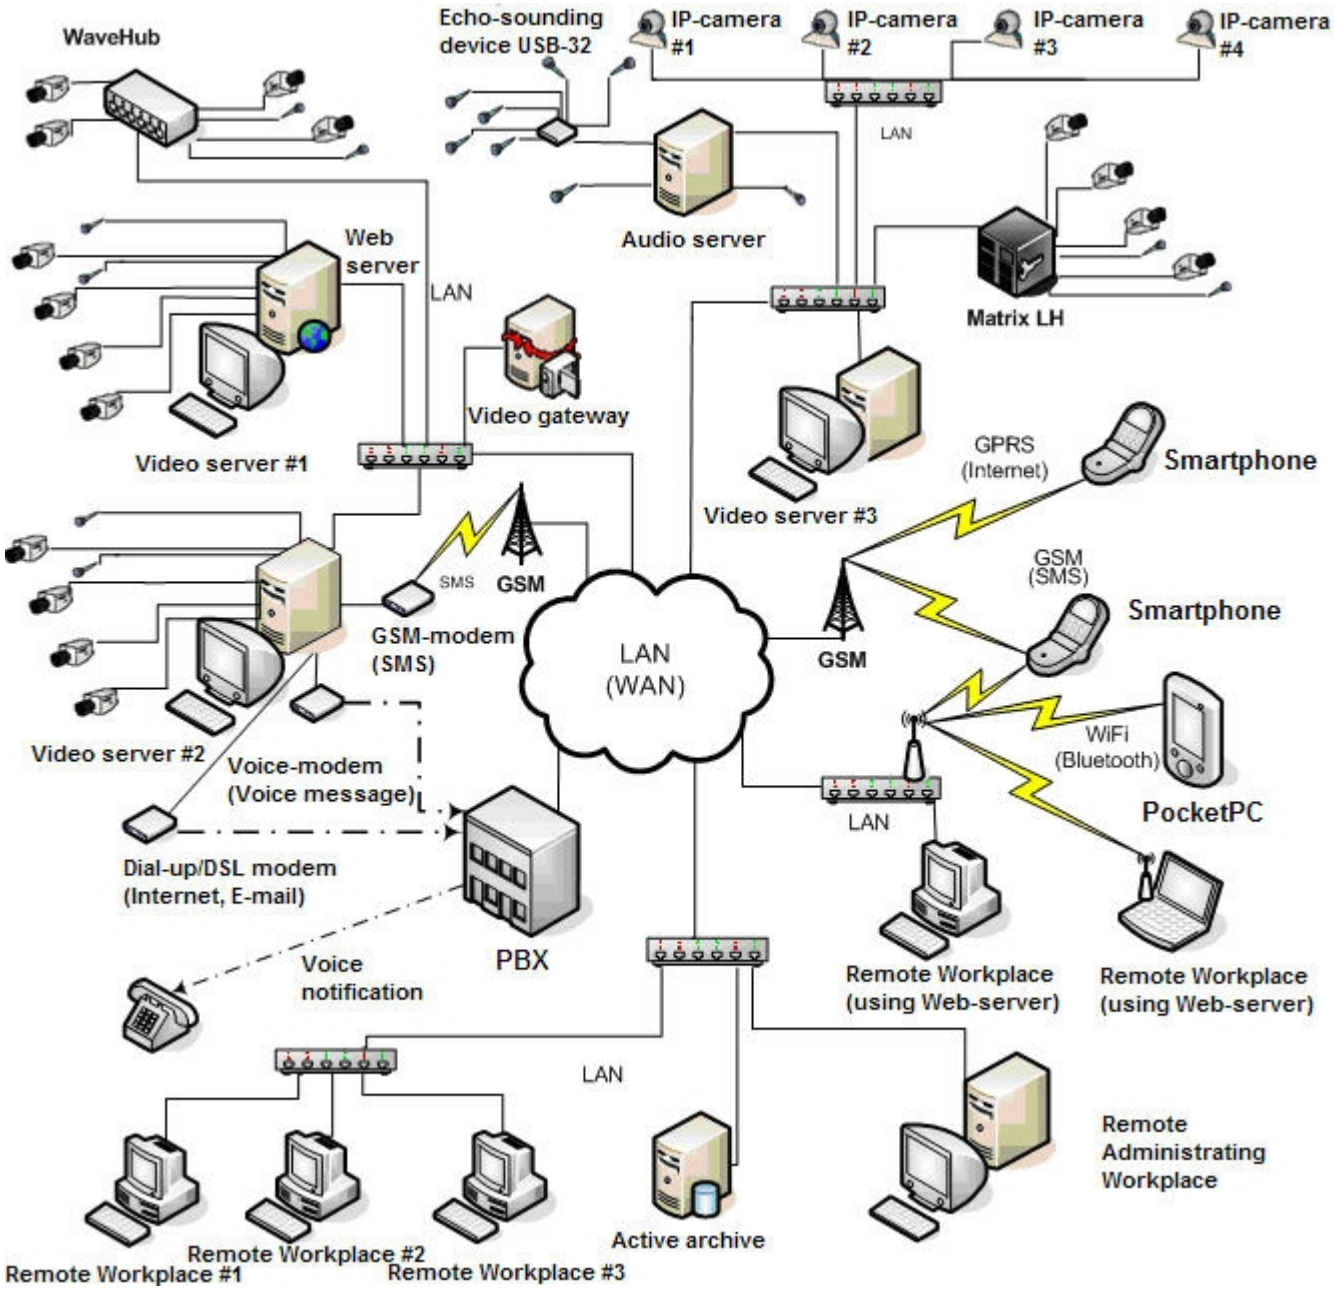
WaveHub
Echo-sounding device USB-32
IP-camera #1
IP-camera #2
IP-camera #3
IP-camera #4
LAN
Audio server
Web server
LAN
Matrix LH
Video gateway
Video server #1
Video server #3
GPRS (Internet)
Smartphone
SMS
GSM
GSM (SMS)
Smartphone
GSM-modem (SMS)
LAN (WAN)
GSM
Video server #2
Voice-modem (Voice message)
WiFi (Bluetooth)
PocketPC
LAN
Dial-up/DSL modem (Internet, E-mail)
PBX
Voice notification
Remote Workplace (using Web-server)
Remote Workplace (using Web-server)
LAN
Remote Administrating Workplace
Active archive
Remote Workplace #1
Remote Workplace #2
Remote Workplace #3

Basic hardware components of the digital video surveillance system

The distributed video surveillance and audio monitoring system based on the INTELLECT™ system may be deployed using the following basic hardware and software components:

1. Servers and Remote workstations based on PCs (IBM PC–based).
2. Network video hubs (WaveHub, Linux Hub, etc.).
3. Network video servers (Matrix, etc.).
4. Analog and IP video cameras.
5. Audio input devices.
6. TCP/IP communication.

Software

Operating system

Intellect software operates in Microsoft Windows family.(see Operating system requirements).

Software kernels

The Intellect™ system can be implemented in the following options (installation options):

1. Based on the full-featured INTELECT software kernel (this option corresponds to the intellect.exe software module) The full-featured software kernel ensures operation the video server, Administrator and Operator workstation.
2. Software kernel with minimized functionality supporting the Remote Operator Workstation functions (this option corresponds to the slave.exe software module).

Software of the Remote Operator Workstation does not support system administration (create, delete, set system objects, register users, user rights administration), as well as local database maintenance (operations with ROW use a remote database operated by the intellect.exe kernel and belonging to the video server or Remote Administrator Workstation).

Intellect.exe, the fully software kernel, is the central software component of the system. The system kernel interacts with the program modules, which form the software basis for the subsystems.

Integration of the distributed digital video surveillance and audio monitoring system is provided by the data exchange between software kernels.

Program modules

Program modules support direct interworking of the hardware, and also serve as a source of data about controllable objects. The software kernel of the system processes the incoming data from various program modules, providing their integration.

The list of the program modules available for the operations depends on the configuration option of the system. Executive files, corresponding to the subsystems are automatically launched by the kernel as the system is configured

For instance, if the **Camera** object is created and as soon as the relevant settings are confirmed, the video sub-system executive module (video.run executive file) will be launched.

Interaction of basic modules with the Intellect kernel

Basic modules interact with the Intellect kernel via the data exchange interface of the Intellect kernel, using module.mdl, a dynamic library.The program modules and Intellect kernel interaction scheme are shown in the figure.

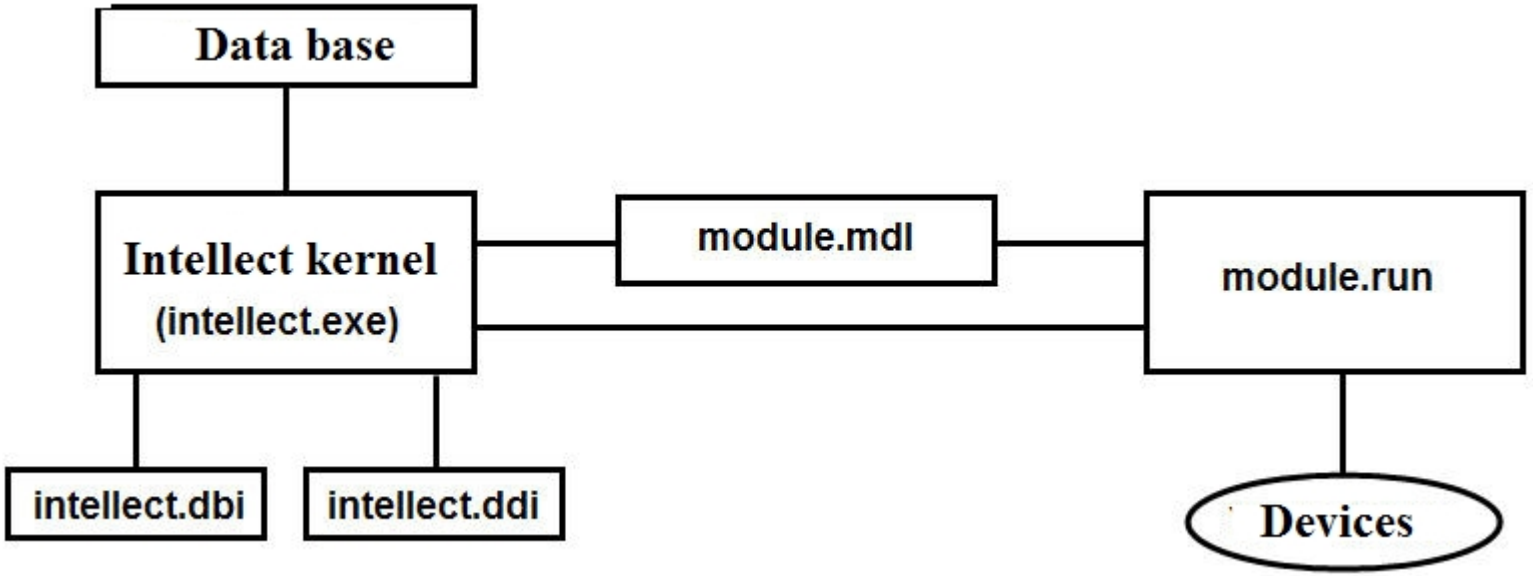

Intellect.dbi and intellect.ddi object setting files contain the information about integrated modules (objects) required to support operation of the Intellect kernel. System setting files are edited using ddi.exe, a specialized utility. At the object integration stage, the names and parameters of the integrated object and related system events and responses, used for this object, and the values thereof are recorded in the system setting files.

The module.mdl file supports operation with objects of the same type: creation, modification, deletion, changing object parameters at the configuration stage or during operation and saving updated parameters in the database, as well as certain special operations with the object. Apart from that, the module.mdl transmits parameters of the created or modified objects to the executive module.

The module.mdl file stores the configuration of the object setting panels.

The module.run execution file supports interworking with the units, transmits information about events to the kernel and also supports unit control.

Consequently, module.mdl supports two-way data exchange between the Intellect kernel and module. The responses and events, which are used, will be described in the system manuals of the appropriate object (in intellect.ddi file).

To simplify integration with the joint data systems, auxiliary software or extension modules, Intellect™ system offers an alternative interface for data exchange between modules and the Intellect kernel – IIDK.

Interaction of modules of other vendors with Intellect kernel

INTELLECT™ software architecture is designed for intertask communication between the *Intellect* kernel and modules (joint information systems) using the TCP/IP communication environment, requiring the following parameters to support connection:

1. port number;
2. IP address of the PC using the *Intellect* kernel;
3. ID, an identifier of the connectable object;

To enable the above mechanism, the **IIDK interface** object should be created in the Intellect software tree based on the **Computer** object at the stage of *Intellect* software

configuration.

Where the **IIDK interface** is used, setting panels for the integrated modules (of already existing software) are not created.

To enable interworking between modules and the *Intellect* kernel, one of the following prerequisites should be complied with:

1. Integrated software should be adjusted for TCP/IP data exchange in the *Intellect* kernel format.
2. An interface program module should be developed to support transmission of events and responses of the integrated software in the *Intellect* kernel format and interoperate with the kernel through TCP/IP. This option is used in cases where integrity of the integrated software (for instance, integration of ATM software) is especially important.

The *Intellect* kernel adjusts to the data exchange over the specified port, as soon as the **IIDK interface** is created in the program.

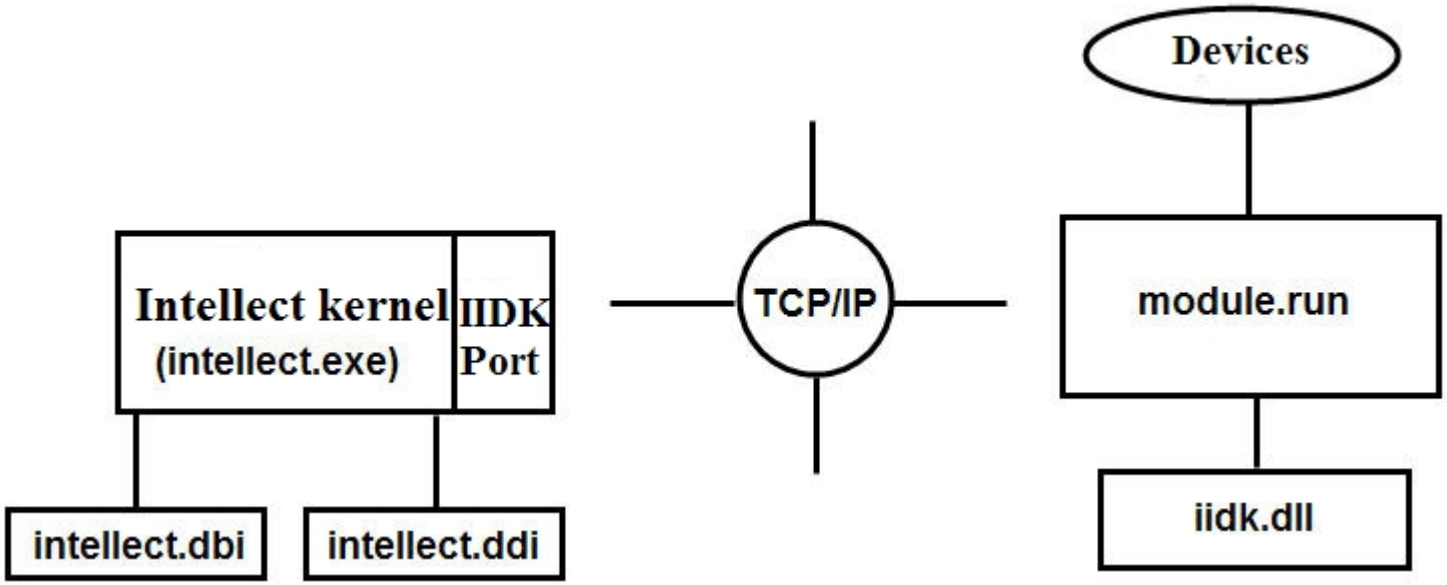

Being a module and hierarchy object-based structure, INTELLECT™ software ensures efficient extension of functionalities through the integration of modules supporting new equipment or new service functions. INTELLECT™ software offers IIDK (Intellect Integration Developer Kit) to the vendors, integrating proprietary security equipment with INTELLECT™ software.

The above kit includes the software tools required for the development of integrated modules (auxiliary software) or modification of existing software to process messages, events and responses in the *Intellect* kernel format.

Internal video Server database

The internal video Server database contains the following information:

1. system settings (objects created in the system, their attributes, users and user rights and other additional data);
2. events registered by the system within the period specified at the system configuration stage (event logs).

The internal video Server database is maintained in the MS SQL format. The list of MS SQL Server versions, supported by Intellect, is given in the table below.

MS SQL Server version	Supportes edition	Constraints

MS SQL Server 2008 R2 – see http://www.microsoft.com	Enterprise Edition (Restrictions– maximum number of processors and memory capacity, supported by OS)	
	Developer Edition (Restrictions– maximum number of processors and memory capacity, supported by OS)	
	Standard Edition (Restrictions - 4 supported processors; maximum memory capacity, supported by OS)	
	Express Edition (Restrictions- 1 supported processor, maximum database size -10 Gb)	
	Web Edition (Restrictions - 4 supported processors; maximum memory capacity, supported by OS)	
	Workgroup Edition (Restrictions - 2 supported processors; maximum memory capacity, supported by OS (32-bit version), or memory capacity – 4Gb (64- bit version)	
MS SQL Server 2012 - see http://www.microsoft.com	All	
MS SQL Server 2014 - see http://www.microsoft.com	All	
MS SQL Server 2016 - see http://www.microsoft.com	All	**List of supported operating systems:** Windows 10; Windows 8; Windows 8.1; Windows Server 2012; Windows Server 2012 R2; Windows Server 2016 When MS SQL Server 2016 is in use, **only x64** bit operating systems are supported. Maximum database size for Express edition – 10 Gb.
MS SQL Server 2017 - see http://www.microsoft.com	All	**List of supported operating systems:** Windows 8, Windows 8.1, Windows 10; Windows Server 2012, Windows Server2012 R2, Windows Server2016 For Web Edition, Enterprise Edition: Windows Server 2012, Windows Server 2012 R2, Windows Server 2016 When MS SQL Server 2017 is in use, **only x64** bit operating systems are supported.

Note.
Free of charge version MS SQL Server 2014 Express is installed with Intellect software on default.To get information about technical features and limitations of free version see http://www.microsoft.com.

Note.

If an error occurs while installing Microsoft SQL Server 2008 R2 Express it is necessary to create "Repair.bat" file, following the instructions, given at the site "http://support.microsoft.com/kb/958043".

Attention!
While exceeding maximum database memory capacity (when MS SQL Server edition with memory capacity is used) there is no guarantee of stable operation for INTELLECT™.

Information about the objects, settings of the digital video surveillance and audio monitoring system and event logs can be automatically replicated from the video Server database to the databases of all other video Servers of the system. Communication between full featured program kernels of INTELLECT system is supported by the TCP/IP environment (if the system configuration defines certain program kernels, between which communication is to be provided).

Information about system objects and their settings is initially stored to the database of the video Server where the objects belong to. Replication is initiated automatically whenever data is changed, the kernel is launched or communication is restored.

Replication is used to create a common event environment within the distributed digital video surveillance system. Replication is a hidden process for the user.

Communication environment

The communication facilities of INTELLECT™ software allows deployment of distributed digital video surveillance systems, which control lengthy and versatile objects. Remote system components interact automatically with each other forming a common security system.

Data exchange and communication between distributed digital video surveillance and the audio monitoring system is supported by the local access networks (LAN), Internet (WAN), telephone lines (Dial-Up) and leased communication channels, when TCP/IP telecommunications transportation protocol is used.

Intellect software package restrictions

The following restrictions are imposed in the *Intellect* software package when building video surveillance and audio control systems:

1. Maximum ptz devices (analog) which are in use on one computer is 64. For IP-devices, this number is limited by the Server hardware resources.
2. Maximum **Screen** objects assigned for one computer is 300.
3. Maximum number of video input channels for videosignal processing in the live video and/or multiplexing modes is limited by the Server hardware resources – processor power, RAM memory space, etc.
4. Maximum number of simultaneous output analog videosignals is limited by the number of video capture cards (with analog video outputs) in use on the Server.
5. Maximum number of remote workstations connected to the Server to receive videos is limited by the number and parameters of transmitted videosignals, video surveillance system architecture and network bandwidth.
6. Maximum number of Servers, videosignals from which are transmitted simultaneously to a remote workstation, is limited by the number and parameters of transmitted videosignals, video surveillance system architecture and network bandwidth.
7. Maximum number of simultaneous video images displayed on the screen of a remote work station is limited by video image parameters and network bandwidth.
8. Maximum video stream rate transmitted via a videogate is limited by the videogate hardware parameters and network bandwidth.
9. Maximum number of audio output channels (to the loudspeakers, earphones, etc.) depends on the audio card used for playback.
10. Enable 64-bit modules if more than 25 **Tracker** objects are to be used on one Server with video resolution higher than 800x600.
11. Not more than 10 Specialized keyboard devices can be connected to one computer with installed Intellect software.
12. Digitization bandwidth depends on the audio card parameters and software limitation from 0 to 48 000 Hz.
13. Do not set the bitrate value 8 or 12 kb/s when sampling frequency is 8 kHz for correct sound registration from Axis IP-cameras using the AAC codec; it is recommended to use the bitrate value equals to 16, 24, 32, 48 or 64 kb/s.
14. Use the G.711 audio codec instead of G.726 codec for correct sound registration from Sony IP cameras.
15. Different Servers are not allowed to be connected to one database. Use of remote database by Server is allowed but it can cause increased requirements to the network and others resources and may cause delays when sending events and states between cores that can affect the system.
16. Intellect software package of one version is to be installed on all components of distributed system.
17. It is recommended to leave **Decompressor** field empty on the settings panel of the **Camera** object or use the Motion Wavelet decompressor when using WS7 and WS17 video capture cards. Correct operation of Intellect software is not guaranteed if other decompressors are selected.

18. Partial decompression is possible when using MPEG4, MJPEG, MXPEG, Motion Wavelet and H264svc codecs. Partial decompression for H263, H264avc and Mpeg2 codecs is not supported. Fps decreasing only is supported by H264svc-t codec.
19. If the MPEG4 format of recording to archive is selected, the loss of video record part is possible (about 0.5 seconds from the video recording beginning).
20. If the **Recording frame rate** parameter (**Camera** object, **Basic settings** tab) is set to non-zero, regardless of its value of recording to the archive is performed only by anchor frames if H.264 codec is in use. If the **Hot record rate** parameter for H.264 codec is also in use, then the recording to the archive will be performed by anchor frames too. If the **Recording frame rate** parameter is set to 0 or not set, all frames are recorded to the archive.
21. If 64-bits modules are in use the following items are not supported:
    a. Point&Click through the Intellect algorithms.
    b. The **Scene** object.
22. It is recommended to set digitizing rate of audio signal over 16000Hz for correct operation of audio analytics. Digitizing rate is specified on the settings panel of the **Audio card** object. If the digitizing rate is lower, then audio analytics operation is not guaranteed.
23. Scaling on Videogate can be performed using MJPEG, Motion Wavelet, MPEG, H.264 and MxPeg codecs. If the scaling rate is 25 fps, then the first minute of video will be displayed at lower speed (~12 fps). For MXPeg codec the maximum allowed scaling rate is 12 fps.
24. Web server displays video only in MJPEG format. When transferring video to the Web server video stream is recompressed to MJPEG format.
25. It is required to add Web server address to the Java exceptions in order to Web server work with JRE 7u51 or later versions.
26. Video stream transferred via RTSP Server is to be compressed using H.264, MPEG4 or MJPEG codecs. Video with width and/or height more than 2048 pixels is not supported when MJPEG codec is in use.
27. Use of more than 100 scripts/programs on one computer may cause system instability.
28. Only files of .wav format can be in use as the **Play audio file** action parameter of the **Audio player** object. Otherwise, the **Play audio file** action is not performed.
29. The **External window** object is specialized on working with onebox applications. If the application contains several boxes, then all of them will be opened simultaneously when application is started.
30. PureVideo/CUDA technology in the Intellect software is applied only for video signals decompression in H.264 codec. PureVideo/CUDA technology is not used for video signal compression if resolution more than 1920x1088 is set in the camera.
31. It is required to set digitizing rate equals to 8000, 16000 or 32000 if channels from FS 5\6\16- boards will be in use when configuring the LinuxHub audio card. Otherwise, receiving of audio from FS5\6\16 cards is not guaranteed. Any other rate can be set when the audio is to be received only from the embedded audio card.
32. Recording to the archive is performed only in the color mode if SC590N4 video capture card with h.264 format of video signal compression is in use. The black-and-white mode is not supported.
33. Video displaying on Server using SC3B0N16 (WS216) and SC390N16 (WS16) cards is performed only with 352x288(PAL)/352x240(NTSC) resolution.
34. Only key frames are played back when the archive is played back fast in H264 and MPEG4 formats.
35. Video signals are not transferred to Intellect-based vertical modules using the Videogate module. These modules always receive video signal directly like other modules.
36. There is no sound transmission to the RMW via the Videogate if different subnets are in use.
37. Do not use the standby modes (sleep mode) while working with Intellect software package.
38. Intellect does not support NVIDIA® Mosaic™ multi-display technology.

Hashing procedure

The following hashing procedures are used in the *Intellect* software package:

1. The MD5 procedure is used for passwords hashing (hash length is 16 bits).
2. For digital signing of archive the following are used:
    a. RSA-256 encryption (key is 256 bits).
    b. SHA1 hashing (hash size is 20 bytes).

Traffic encryption in the Intellect software

A security and video surveillance system based on Intellect software should be built on a separate network that connects all the major components of the system without any connection to the main network. This significantly reduces the risk of being hacked and losing important data. If for some reason it is not possible to isolate the security system on a separate network, it is recommended that you secure access to it from external networks by using a VPN with dedicated ports and password protection.

Users can connect and work with Intellect software from their mobile devices or from a browser. In addition, the video signal can be transmitted over the secure HTTPS protocol.

In addition to encryption software, Intellect software supports hardware encryption of the channels between routers and all network nodes.

Requirements for the software and hardware platform

Requirements for base PCs

INTELLECT™ software is designed for use with IBM compatible PCs. Efficiency and performance of the Intellect system depends, in particular, on the technical parameters and performance of the PCs. Before you start system design, you should carefully study the requirements for the hardware components and check if they are able to support the target performance of the system.

General requirements for PCs

Requirements for PCs depend on Intellect software installation type. The following installation types are available:

1. Servers are designed for digitization, processing, recording, transmission and displaying the incoming video signals from the cameras of the video surveillance system.
2. Remote Administrator Workstations are designed for remote monitoring of video signals, for creating gateways and archives of video sequences, for logging the events registered by INTELLECT™ software and use as a web server for the transmission of video signals over HTTP (this protocol is used to transmit signals over the Internet and display them with standard Web-browsers). Configuration requirements for the Remote Administrator Workstation depend on the functions it is designed to perform.
3. Remote Clients are designed to playback incoming video and audio signals from video surveillance system servers and to control cameras, microphones, PTZ units, etc.

Minimal requirements for computer configuration are specified in the table.

Component	Server and RAW	Client	QTY per computer	Additional information
Tower	Any		1	-
Motherboard	Any type that supports required processor and has the necessary set of pins and slots.		1	Pay attention to the number of free PCI (-e) slots and the type of processor, which is installed.
Processor	Select the processor in accordance with the computer configuration using the on-line calculator: https://sale.axxonsoft.com/calc/calculator.jsf. Documentation on the calculator is available here.		1	It is recommended to use 64-bit OS (Windows 7 x64 Ultimate, Windows 7 x64 Professional or Windows Server 2008 R2 x64) when total number of cores is more than 8. Processor supporting AVX instructions is required for the Tevian capture and recognition (the most recent *Face-Intellect* documentation is available in AxxonSoft documentation repository).
Memory	At least 2 Gb.		-	Memory operating speed increase by using memory with greater frequency or using memory in the dual stream (or more) mode results in less CPU load and, consequently, greater *Intellect* performance.
Hard drive 1	Space required for installation of the OS + 10 Gb for installation of Intellect software + 20Gb for installation of MS SQL Server.	Space required for installation of the OS + 10 Gb for installation of Intellect software	1 (+1)	Mirroring can be used to improve the fault-tolerance.
Hard drive 2	To maintain video/audio archive compatible with the requirements for the archive depth.	-	-	External disk systems can be connected via SAS, SCSI, Fiber Channel interfaces. Will be installed in cases where video/audio archives are required.
DVD-RW	Any type of DVD-RW.		1	To write the archive to an external carrier, for fallback recovery (not compulsory).
Video card	Discrete: Nvidia GeForce GT520 1GB RAM or more productive. On-board: Intel HD Graphics 530 or more productive.		1	Not compulsory, if the image is not required to be displayed on a monitor.
Audio card	Standard audio cards, MidiMan Delta, Comart Hera and Olkha 9P.		1	Not compulsory, if audio surveillance is not required.

Power supply unit	Any matching the PC tower. Capacity depends on the hardware configuration.	1	Two fans are recommended: a suction fan and an induced draft fan. A redundant fan can also be installed.
FAN&Temp Control	Any temperature control module.	1	Not compulsory
OS	OS Windows supported versions (see Operating system requirements section).	1	Internet access is recommended to be switched off.
Architecture	x86, x64	-	-

Note.
The system clock on the server must be synchronized with the client's system clock, or run a couple of seconds ahead. Otherwise, problems during re-connecting (for example, on connection loss) may occur.

Operating system requirements

Intellect software is compatible both with 32 and 64 bit licensed versions of Microsoft Windows operating system. File system – NTFS.

Windows version	Supported architecture	Supported release	Note	
Windows Server 2008 R2 SP1 [3,4,5]	x64	Enterprise	OS edition, enabling to use all realized product features.	Full Installation type is supported.Server Core Installation type is not supported
		Datacenter	OS edition, enabling to use all realized product features.	
		Standard	OS edition, enabling to use all realized product features.	
		Web	OS edition, enabling to use all realized product features.	
		HPC	OS edition, enabling to use all realized product features.	
		Foundation	OS edition, enabling to use all realized product features.	
Windows 7 SP1 [4]	x86, x64	Starter (x64 edition does not exist)	Restrictions, posed by OS edition (2GB of main memory, 1 physical processor, 1 monitor) - see. http://www.microsoft.com	
		Home Basic	Restrictions, posed by OS edition (1 physical processor) - see http://www.microsoft.com	
		Home Premium	Restrictions, posed by OS edition (1 physical processor) – see http://www.microsoft.comhttp://www.microsoft.com/	
		Professional	OS edition, enabling to use all realized product features.	
		Enterprise	OS edition, enabling to use all realized product features.	
		Ultimate	OS edition, enabling to use all realized product features.	
Windows Storage Server 2008 R2 SP1 [3,5]	x64	Essentials	Restrictions, imposed by OS release (1 physical processor) – see. http://www.microsoft.com	Full Installation type is supported.Server Core Installation type is not supported
		Workgroup	OS edition, enabling to use all realized product features.	
		Standard	OS edition, enabling to use all realized product features.	
		Enterprise	OS edition, enabling to use all realized product features.	
Windows Small Business Server 2011 SP1[5]	x64	Standard	OS edition, enabling to use all realized product features.	Full Installation type is supported.Server Core Installation type is not supported

		Essentials	OS edition, enabling to use all realized product features.	
		Premium Add-on	OS edition, enabling to use all realized product features.	
Windows Home Server 2011 SP1[5]	x64	-	OS edition, enabling to use all realized product features.	Full Installation type is supported.Server Core Installation type is not supported
Windows Server 2012 [1,5]	x64	Foundation	Restrictions, posed by OS edition (1 physical processor) – see http://www.microsoft.com	Full Installation type is supported. Server Core Installation type is not supported.
		Essentials	Restrictions, posed by OS edition (2 physical processors) — see http://www.microsoft.com	
		Standard	OS edition, enabling to use all realized product features.	
		Datacenter	OS edition, enabling to use all realized product features.	
1 ***Attention!*** *The latest drivers are to be installed on video adapter for proper operation of interface objects in INTELLECT™ and vertical solutions in OS Windows Server 2012.*				
Windows 8 [4]	x86, x64	Windows 8 (Windows 8 Core)	OS edition, enabling to use all realized product features.	
		Windows 8 Pro	OS edition, enabling to use all realized product features.	
		Windows 8 Enterprise	OS edition, enabling to use all realized product features.	
Windows 8.1 [4]	x86, x64	Core	OS edition, enabling to use all realized product features.	
		Pro	OS edition, enabling to use all realized product features.	
		Enterprise	OS edition, enabling to use all realized product features.	
Windows Server 2012 R2 [1,5]	x64	Foundation	Restrictions, posed by OS edition (1 physical processor) – see http://www.microsoft.com	Full Installation type is supported. Server Core Installation type is not supported.
		Essentials	Restrictions, posed by OS edition (2 physical processors) — see http://www.microsoft.com	
		Standard	OS edition, enabling to use all realized product features.	
		Datacenter	OS edition, enabling to use all realized product features.	
1 ***Attention!*** *The latest drivers are to be installed on video adapter for proper operation of interface objects in INTELLECT™ and vertical solutions in OS Windows Server 2012 R2.*				
Windows 10	x86, x64	Home	OS edition, enabling to use all realized product features.	
		Pro	OS edition, enabling to use all realized product features.	
		Enterprise	OS edition, enabling to use all realized product features.	
Windows Server 2016[1,5]	x64	Essentials	OS edition, enabling to use all realized product features.	
		Standard	OS edition, enabling to use all realized product features.	Full Installation type is supported. Server Core and Nano Core Installation types are not supported.
		Datacenter	OS edition, enabling to use all realized product features.	
1 ***Attention!*** *The latest drivers are to be installed on video adapter for proper operation of interface objects in INTELLECT™ and vertical solutions in OS Windows Server 2016.*				

2 The *FACE-Intellect* is not compatible with this OS version

3 It's required to install the KB972397 updating for correct operation of *Intellect* software and vertical solutions installation program (https://support.microsoft.com/ru-ru/kb/972397).

4 Face capture and recognition using the Tevian and VisionLabs modules is not supported in operating systems released until the Windows 7 and in 32-bit operating systems.

5 In order to use SC590N4, SC3B0N16, SC390N16, SC300Q16 (FX-4) , SC300D16 (FX-8), SC310N16 (FX-16) , SC200Q4 Low profile (FS-115) , SC510N4 (FX HD4) video capture cards in Windows Server operating systems enable the *Desktop Experience*. Find information on how to work with this component at https://technet.microsoft.com/en-us/library/cc754314(v=ws.11).aspx

Note.
Before installation of the Intellect software on Windows 8 or Windows Server 2012 operation systems it is necessary to pre-install .Net 3.5. When the installation begins on these OS the corresponding message is displayed.

Attention!
For stable and proper *Intellect* operation, the swap file (the size is selected according to system requirements) is to be enabled in OS.

Note.
For proper operation of FX-4 and FX-8 cards in *Intellect* KB3033929 update is to be installed. Download this update at https://technet.microsoft.com/en-us/library/security/3033929

Note.
For correct start of the Elasticsearch service on 32-bit systems, one should limit RAM allocated to this service (see Limiting RAM for Elasticsearch service section).

Free disk space (video archive size) required

Intellect™ system allows saving the video recordings to the hard drives (maintain video recordings archive). Archived information can be saved to the hard drives of such types as SCSI, IDE, SATA, USB and also RAID arrays. SCSI disks and RAID arrays (in particular RAID-5) allow accelerating data search and recording.

The size of the redundant array defines the length (time based length) of the saved and archived video recording. The size of the redundant array is selected based on the required parameters of the video recording.

Attention!
For proper operation of video archive recording the disk space size must exceed «Ring» parameter, that has been stated in **Video Subsystem** section of advanced system settings utility (see The settings panel for the Video subsystem section).

To determine disk space required for storing archive from IP-cameras, please use the on-line calculator. Documentation on the calculator is available here .

Table below shows the average frame size of a PAL video signal depending on frame resolution, video signal compression, color grade of the image and frame resolution, frame chromaticity and motion level in the frame.

Video card type	Resolution	Colour	Frame size (Kb) with 50% of motion in the frame	Frame size (Kb) with 75% of motion in the frame	Frame size (Kb) with 100% of motion in the frame
SC390N16 (WS16)	704x576	colour	15	30	61
		black-and-white	10	22	42

	704x288	colour	6	10	30
		black-and-white	4	9	18
	352x288	colour	4	6	17
		black-and-white	2	5	10
SC3B0N16 (WS216)	704x576	colour	19	35	101
		black-and-white	11	33	65
	704x288	colour	8	12	49
		black-and-white	6	11	29
	352x288	colour	4	7	25
		black-and-white	3	6	15
FX416\MS416	To calculate required disk space for these cards, please use the on-line calculator.				
SL16-200 (FX116)					
SC310N16 (FX16)					
SC200Q4 (FS15)					
SC200Q4 LOW PROFILE (FS115)					
SC300Q16 (FX4)					
SC300D16 (FX8)					
SC230N4					
SC330Q16 (analogue of SC300Q16)					
SC330D16 (analogue of SC300D16)					
FS5\FS6\FS8\FS16	704x576	colour	26	59	103
		black-and-white	24	42	91
	704x288	colour	17	26	52
		black-and-white	16	24	47
	352x288	colour	11	15	39
		black-and-white	10	14	37

Note.
Table shows the examples of frames for video cameras with set frame frequency – 25 f\s.

Archive size will be calculated on the basis of frame resolution and compression, image color grade, rate of video signal frames per second, number of cameras, recording events continuously to the hard drives.

Archive size can be calculated from formula no. 1:

Archive size (days) = (1024 (Mb/Gb) * 1024 (Kb/Mb) * Hard drive size (Gb)) / (60 (sec/min) * 60 (min/hr) * 24 (hr/day) * Frame size (Kb) * Frame rate (frames/sec) * Number of cameras)

Comments relating to Formula no. 1. To estimate the archive size, the following should be performed: the size of hard drive in Kb (the rates for converting Gb into Kb are included into the numerator of Formula no. 1) divide by the frame size, defined in Table A as a function of video signal parameters, and by the frame rate per camera and the number of cameras, connected to the video server. Archive size in this case will be measured in seconds. Now, the archive size expressed in seconds should be converted to the number of days (the rates to convert seconds to days are given in the denominator of Formula no. 1).

Note.
Archive size can also be calculated from a simplified formula, where numerical conversion factors are reduced to a numerical value (Formula no 2).

Archive size (days) = 12 (Kb/Gb * day/sec) * Hard drive size (Gb) / (Frame size (Kb) * Frame rate (frames/sec) * Number of cameras)

Example. If the size of a hard drive, for instance, is 40 GB, 4 cameras are continuously recording PAL video signals with 10 frames per second and 150Kb frame size. Based on the formula, you work out:

Archive size (days) = 12 (Kb/Gb * day/sec) * 40 (Gb) / (150 (Kb) * 10 (frames/sec) * 4) = 0.08 (days)

The arithmetic calculation shows, that the video archive size in the particular case will be 0.08 days (about 1 hour 55 minutes).

For the purpose of calculations, frame size can be defined in the table above.

Note.
To calculate the size of a hard drive, the following specific features should be accounted for: 1) About 5-10% of the hard drive size is taken up by the filing subsystem data. To ensure that Windows OS is operating properly, at least 20% of free disk space is required. By default, Windows OS auxiliary files are assigned 1000Mb. To modify the above value, Windows OS catalogue should be updated, using Tweaki.exe utility, supplied together with the INTELLECT distribution software package.

Table below shows archive sizes calculated for hard drives of various sizes, based on a continuous incoming PAL video signal recording, from 1 camera with a frame rate of 25 f/sec.

Resolution	Hard drive size			
	80 GB	160 GB	400 GB	750 GB
352x288 b/w	2,1	4,3	10,7	20,0
352 x 288 color	1,9	3,8	9,6	18,0
704x288 b/w	1,6	3,2	8,0	15,0
704 x 288 color	1,5	3,1	7,7	14,4
704x576 b/w	1,2	2,3	5,8	10,9

704 x 576 color	1,1	2,3	5,6	10,6

Defining disk space (audio archive size)

Intellect software package allows storing audio archive (recorded with the video archive) on hard disks (see Setting up the audio and video synchro recording). So, it is necessary to provide space for storing not only video recordings, but also audio recordings recorded synchronously, on the hard disk. Information on how to calculate the required disk space for storing the video archive is given in Free disk space (video archive size) required section.

Below one can find information about required disk space for storing audio recordings from 1 audio channel (microphone) depending on the audio digitization rate.

Digitization rate	Audio recordings for 24 hours, GB	Audio recordings for 30 days, GB
8000	0.39	11
11025	0.49	15
22050	1	30
44100	1.8	54
48000	2	60
96000	4	120

The formula for calculating the depth of the video archive recorded synchronously with the audio archive is given below (to find info about frame size see Free disk space (video archive size) required):

Depth of video and audio archive (day) = Hard disk space (GB) / ((k (s/day* GB/Kb) * Frame size(Kb) * Frame rate (fps) * Number of cameras) + Volume of audio recording per day (GB/day) * Number of audio channels)

Here k is the unit conversion factor for the depth of the video archive, calculated like this:

*k = (60(s/min)*60 (min/h)*24(h/d))/(1024(Mb/GB)*1024(Kb/MB))~0.08*

Define required disk space (size of event log database)

The event log database can be stored with the Intellect configuration database or without it.

Disk space required for event log database storing is counted by formula:

Required disk space, Gb = N (pcs) * K (events/hour) * T (days) * 24 (h/day) * 1.2 (Kb) / 1024^2 (Kb/Gb)

where N – number of objects generated events.

K – average number of events per hour from one object. It is defined experimentally from real conditions. For example, to define the average number of events per hour for camera it is required to know how many times per hour motion appears in the camera field of view. Estimation from above: one event once per five seconds, on more frequently triggering detection haven't got enough time to disarm and events won't be record to the database.

T – the depth of events archive in days, specified at the system configuration.

1.2 – space required for storing one event in kilobytes.

Example. There are 250 objects, each of them generates one event per 5 seconds (i.e. 720 events per hour) with the archive depth of 20 days.

Required disk space, Gb = 250 (pcs) * 720 (events/hour) * 20 (days) * 24 (h/day) * 1.2 (Kb) / 1024^2 (Kb/Gb) = 98.9 Gb ~ 100Gb

Define required disk space (VMDA metadata storage)

When using the forensic search in an archive the VMDA metadata storage is creating and configuring (see Creating and configuring VMDA metadata storage section).

Size of VMDA metadata storage depends on resolution, frame frequency, minimal and maximal object size, tracker sensibility).

It's possible to use the following formula to count the disk space to save database of object trajectory if record is performed round the clock

DB VMDA (Gb) = 0,5Gb * (Number of cameras) * (Number of days)

Intellect software working in virtual machines

Intellect software package supports working in the following virtual machines:

Virtual machine	Client OS	Additional information
VMWare ESXi version 5.1.0	Client OS - Windows 7 x64 SP1.	USB-devices implementation to virtual machine via the virtual machines means is available. Working for Carmen-freeFlow, Carmen-parking, VIT, Auto-Uragan, Guardant is checked.
VMWare Workstation version 10.0.1	Client OS - Windows 7 x64 SP1.	USB-devices implementation to virtual machine via the virtual machines means is available. Working for Carmen-freeFlow, Carmen-parking, VIT, Auto-Uragan, Guardant is checked.
HyperV (Windows 8.1\Windows Server 2012 R2)	Client OS - Windows 7 x64 SP1.	It is possible to use external program, for example USBoverLAN to implement USB-devices in this virtual machine

Use general requirements for PCs in order to define the requirements for RAM, processor, etc. It should be taken into account that the performance of virtual systems is less than one of real systems, so the estimated number of cameras should be reduced accordingly. Get more details from the sales department in Moscow or your AxxonSoft branch or by contacting the technical consulting department at expert@itv.ru.

Note.
To implement other devices to the virtual machine see documentation of corresponding virtual machine.

Attention!
The following restrictions are imposed when *Intellect* software is working in virtual machines:

1. Using of video capture devices is not supported.
2. Working of *Intellect* interface objects, Report.exe utility and Converter.exe utility is not guaranteed in virtual machines.
3. Demo mode operation of the VIT module (part of *Auto-Intellect* software) is not allowed.

Requirements for TCP/IP Network bandwidth

Requirements for TCP/IP Network bandwidth for video signal transferring

Throughput capacity of the network refers to the factors restricting performance of the distributed network. Data exchange flow is primarily made up of image data. For instance, where surveillance cameras are used to monitor remote objects, likes ATMs, the data flow (image flow) is transmitted over communication links.

In order to calculate the required bandwidth of TCP/IP network for video transmission from IP devices and some video capture cards, it is recommended to use the Axxon platform calculator, available here (the **Summary stream from ip devices (Mbit/s)** parameter). For video capture cards that are not supported by the platform calculator, use the calculation data below.

Table below shows the maximum number of remote surveillance cameras as a function of the throughput capacity of various communication links. The frame rate of the image flow (reference format is PAL) for calculation purposes was accepted as equal to 1 frame per second.

Note.
In real conditions, the fluctuations of camera streams can be quite significant, depending on the scene illumination, the use of day/night mode, how much motion there is in the frame. To accurately calculate the required network bandwidth, it is necessary to measure the stream from cameras that are already installed on the secured site.

Communication mode	**Link capacity**	**Black and white image**			**Color image**		
		standard	high	full	standard	high	full
Dial-Up	56 Kb/sec	<1*	<1*	<1*	<1*	<1*	<1*
ADSL, Ethernet	128 Kb/sec	1	<1*	<1*	<1*	<1*	<1*
ADSL, Ethernet	256 Kb/sec	2	1	1	1	1	<1*
ADSL, Ethernet	512 Kb/sec	4	3	2	3	3	2
ADSL, Ethernet	1 Mb/sec	7	5	4	6	5	4
ADSL, Ethernet	1.5 Mb/sec	11	8	6	10	8	6
Ethernet	2 Mb/sec	14	11	8	13	10	8
Ethernet	10 Mb/sec	71	53	39	64	51	38
Ethernet	100 Mb/sec	711	533	388	640	512	376
Ethernet	1 Gb/sec	7282	5461	3972	6554	5243	3855

*max. one surveillance camera, provided that maximum compression and/or image flow gapping is supported.

To calculate the maximum number of remote cameras transmitting image flow to the network with a rate over 1 f/sec, the corresponding value shown in the table should be divided by the number of frames.

Example: To transmit live video, a 100 Mb/sec network should be used (25 frame/sec – PAL), video image – color; frame resolution – standard. As the table shows, the Mb/sec link can transmit the image flow at a rate of 1f/sec, specified color grade and resolution from max. 640 surveillance cameras. Consequently, if the image flow rate is 25 frames per second, the maximum number of cameras will decrease by 25 times and will be equal to: 640/25=25 cameras.

Note.
More often than not, video signal processing, transfer and recording requirements take up only a small proportion of the digital video surveillance system resources. While calculating performance of the video surveillance system, the proportion of resources, consumed by audio monitoring, may be neglected.

Requirements for TCP/IP network working of database synchronization functionality

If the Intellect software operates in the distributed environment where several Servers and/or Remote Admin Workstations are combined the Configuration databases synchronization is performing (see section).

The fulfilling of following minimal requirements for network is needed for correct synchronization of Configuration databases:

1. Minimal speed of data transferring by link channel (capacity) is 64 kbit/sec.
2. Maximal delay while packet transferring is 500 milliseconds.

With more badly parameters value the correct operation of databases synchronization functionality is not guaranteed.

Requirements for PTZ and control panels

INTELLECT™ software is compatible with PTZ units, control panels and tilt IP-cameras from such manufacturers as Panasonic, Samsung, Videotec, Sanyo, etc. You can find an updated list of PTZ units and control panels that are compatible with INTELLECT™ software on the sithe of AxxonSoft in the Integration section at: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php

Requirements for audio input units

Intellect software can use the following audio inputs:

1. FS/WS/FX/VRC video capture cards. These cards support simultaneous digitization of 1-16 audio signals, depending on the type of the card used. The list of video capture cards compatible with *Intellect* software and their features are given in the Installing and configuring security system components guide.
2. Standard sound cards, including cards, integrated with the motherboard. Standard sound cards, as a rule, support simultaneous digitization of up to 2 audio signals.
3. Multi-channel sound cards and converters for digitization of outgoing audio signals from microphones and telephone lines, software and hardware complex for the digital audio registration, etc. You can find an updated list of multi-channel audio inputs that are compatible with *Intellect* software on the AxxonSoft site in the Integration section at: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.
4. IP-units. You can find an updated list of IP-units for audio input that are compatible with *Intellect* software, as well as specific application features thereof on the AxxonSoft site in the Integration section at: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

Requirements for IP devices of audio and video input

Intellect software is compatible with IP devices of video and audio input of the following vendors: Axis, Panasonic, Sony, Arecont Vision and others.

Note.
The updated list of IP devices compitable with Intellect system and the range of IP device's functionalities supported by the *Intellect* system are at the company's site in the **Integration** section: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

Number of IP devices connected to one Server depends on TCP/IP network bandwidth (see Requirements for TCP/IP Network bandwidth for video signal transferring section) and functions performed on the basis of these devices. For instance, virtual memory consumption (for video.run process) increases when VMDA detectors are in use (see Configuring smart video detection tools section). One camera with configured VMDA detector can use 30-40 Mb (depending on camera resolution) of virtual memory. At most 2 Gb of virtual memory is allocated for the video.run process. Enable 64-bit modules if more than 25 **Tracker** objects are to be used on one Server with video resolution higher than 800x600 (see the Configuring of using 64-bits modules section).

In some cases it is necessary to enable the synchronization of the Server and IP device time (if the device supports this setting):

1. In some cases (for example, if there is no video from the device), when connecting the camera using the ONVIF protocol, it may be necessary to synchronize the time and the time zone between the Server and the device.
2. For the Intellect with embedded IP device storage, it is necessary to synchronize the time between the Server and the device.
3. If there is no time synchronization for some IP devices, events of the onboard analytics may work incorrectly in *Intellect*.

Specific application features of certain IP devices:

1. To ensure correct sound recording from Axis IP-cameras when AAC audio codec is used, avoid setting the audio stream bit rate at 8 or 12 Kb/s, if the digitizing rate is 8 kHz: the bite rate should be 16, 24, 32, 48 or 64 Kb.
2. To ensure correct sound recording from Sony IP cameras, avoid using G.726 audio codec: use G.711 codec instead.

Attention!
It is possible to install update drivers and codecs , taking into account the changed distributive structure, irrespective of the general Intellect version update.

Requirements for GSM Equipment

GSM equipment is used in the *Intellect* software to send SMS, whenever the program registers pre-defined events (detector alarms, Operator commands, etc.). The list of said GSM equipment includes GSM modems, GSM adapters or mobile phones supporting such standards as ETSI GSM 07.07 or ETSI GSM 07.05.

Requirements for voice modems

Voice modems are used in the *Intellect* software to automatically send out voice messages, whenever the program registers pre-defined events (detector alarms, Operator commands, etc.). *Intellect* software is compatible with the voice modems, which are not designed to code (compress) audio streams, or the voice modems, which support such audio stream coding standards as 4-bit Rockwell ADPCM 7200 Hz, 4-bit IMA ADPCM 4800 Hz, 4-bit IMA ADPCM 7200 Hz, 4-bit IMA ADPCM 8000 Hz, 8-bit unsigned linear PCM at 7200 Hz, 8-bit unsigned linear PCM at 8000 Hz, 4-bit Rockwell ADPCM 7200 Hz, 8 bit u-law (G.711) at 8000 Hz, 8 bit A-law (G.711) at 8000 Hz.

Requirements for software which is used while integrating

The *Intellect* software allows integrating with contiguous information systems, additional software or functional expansion modules.

Use InternetExplorer browser while working with Intellect software from browser through the CamMonitor Active X-object.

Requirements for anti-virus software

Correct working of some modules of the *Intellect* software package is not guaranteed if the anti-virus software installed on computer where the *Intellect* software package is installing analyses incoming/outgoing traffic.

Requirements for BIOS

Processor's operation frequency is important for the productivity of the *Intellect* software, especially for video decoding. The higher frequency, the higher productivity of the *Intellect* sof tware on this platform.

The energy saving mode is activated on default in BIOS on modern computers. Usage of this mode on multiprocessor system leads to partial load of CPU cores and reduces productivity of I/O subsystem.

So for more productivity of the *Intellect* software configure BIOS as follows:

1. Disable all Enhanced Intel SpeedStep (EIST) technologies.
2. Disable saving modes by customizing settings of maximum capacity.
3. Disable "green" technologies, such as Energy saving, Turbo boost, Smart throttling.

Note.
Different vendors of motherboards name such technologies the different way. So for each model of motherboard it's required to specify technology name in the corresponding documentation.

Requirements for video parameters to perform the forensic search in the archive

Video parameters are to be met the same requirements as while detection working when the forensic search in the archive is used (see the Requirements to video parameters while working with detection tools section).

Also, there is dependence between minimal and maximal available speed of objects motion on the video image from the camera frames:

1. Maximal speed depends on the object size. Dependence of maximally available speed from the frame frequency for typical objects –person and car is given in the table:

Frame frequency	Maximally available speed of a person	Maximally available speed of a car
6 fps	5 km/h	40 km/h
12 fps	10 km/h	85 km/h
25 fps	20 km/h	170 km/h

   So, for example, if it is required to recognize people moving with speed till 10 km/h, the frequency 12 fps is enough.
2. The minimal speed of object motion is to be such as the displacement of object image will be less than 1 pixel per frame. .

Requirements to video parameters while working with detection tools

For video analytics to work correctly, the following requirements must be met:

1. Camera requirements:
    a. Resolution:
        i. at least 640x480 pixels for smart video detection tools.
        ii. at leasr 320x240 pixels for other video detection tools.
    b. Framerate:
        i. at least 6 frames per second for smart video detection tools.
        ii. at least 1 frame per second for other video detection tools.
    a. Video analytics works with both black-and-white and color images.
    b. Camera shaking must not cause image shifting of more than 1% of the frame size.
2. Lighting requirements:
    a. Moderate lighting. Lighting that is too little (night) or too much (bright sunlight) may impact the quality of video analytics.
    b. No major fluctuations in lighting levels.
3. Scene and camera angle requirements:
    a. Moving objects must be visually separable from each other in the video.
    b. The background must be primarily static and not undergo sudden changes.
    c. Minimal obscuration of moving objects by static objects (columns, trees, etc.).
    d. Reflective surfaces and harsh shadows from moving objects can affect the quality of analytics.
    e. Long single-color objects may not be tracked properly.
4. Object requirements:
    a. An object must be visible on the image.
    b. There is no noise on the video image and there are no artifacts caused by the compression algorithm.
        i. The width and height of objects in the video should not be less than 1% of the frame size (at resolutions not less than 1920x1080 pixels) or 15 pixels (at lower

resolutions).
ii. The width and height of objects in the video should not be more than 75% of the frame size.
c. It is recommended that the linear measurements of objects in the frame do not exceed 75% of the frame size.
d. The speed of objects in the frame must be at least 1 pixel per second.
e. The object is to be visible at not less than 8 frames.
f. Within two adjacent frames the object cannot move in the movement direction for the distance that is longer than its size.
g. Quantity of simultaneously tracked objects on a frame – not more than 25.

Requirements to video parameters while using face detection tool

When a face detection tool is in use, the following requirements must be met:

1. Minimum linear dimensions of a face to be detected are 24 pixels.
2. Maximum speed of a face to be detected is not to be more than a half of linear dimensions in pixels per frame (i.e. face overlapping between two adjacent frames must be not less than half-width and half-height of face).
3. A detection tool needs 8 frames to confirm face detection – otherwise, a face detection message won't be sent.

Video requirements to be met for abandoned object detection tool of the Tracker object operation

1. Camera requirements:
    a. Resolution must be not less than 640x480 pixels.
    b. Analytics works both with color and monochromatic images.
    c. It is not allowed to the image shift be more than 1% from the frame size due to camera shake.
2. Lighting requirements:
    a. Moderate lighting. The quality of analytics performance can be lower in case of low lighting (night) or over lighting (overexposure).
    b. There must be no dramatic changes in lighting.
3. Scene and camera angle requirements:
    a. Background is mostly static and is not changed.
    b. Incorrect analytics performance can be caused by reflective surfaces.
    c. Abandoned objects are hidden by moving objects not longer than 10% of the time.
4. Abandoned object images requirements:
    a. An abandoned object must be visible on the image.
    b. There must be no noise on the video image and there must be no artifacts caused by the compression algorithm.
    c. Object dimensions on the video image must not be less than 1% of the frame size.
    d. The width and height of objects in the video should not be less than 1% of the frame size (at resolutions not less than 1920x1080 pixels) or 15 pixels (at lower resolutions).
    e. The width and height of objects in the video should not be more than 25% of the frame size.

If these requirements are met, the following performance indicators of the abandoned object detection tool are guaranteed:

- 92 of 100 abandoned objects are detected.
- Out of 100 detection tool triggerings, 80 will be caused by real abandoned objects, and 20 - by other changes in the scene under surveillance.

Personnel skills requirements

The Administrator of a digital video surveillance system based on *Intellect* software should possess the following qualifications:

1. Windows local network administrator (see Operating system requirements).
2. AxxonSoft product expert. The above qualifications can be obtained through authorized training in AxxonSoft Products in the AxxonSoft Training Centre.

Installing and removing INTELLECT™ software

Installing INTELLECT™ software

Description of INTELLECT™ software distribution package

INTELLECT™ software is offered as a software installation package (distribution package) on a compact disk.

The distribution disk (software bundle) contains all software components necessary for the installation of INTELLECT™ software on the base PC.

The software is made operable with the intellect.sec key file. The key file is a part of the software bundle and can be found in the Key folder on the CD. The key file defines the configuration of the INTELLECT™ software delivery package.

> **Note.**
> If there is no key file INTELLECT™ software will operate in demo mode within two month from the *i*ntellect.exe file creation date, from 8 a.m till 12 midnight.

To install and configure INTELLECT™ software, administrator rights are required.

Getting ready for Intellect installation

Before installing Intellect in any language with any configuration (Server, Client or RAW) make sure that appropriate language and regional options are set in the OS. Do the following:

1. Go to the **Start – Control Panel – Regional and Language Options** menu. The **Regional and Language Options** window is displayed.
2. Go to the **Formats** tab. Make sure that the language that is used for Intellect installation is selected in the **Format** drop-down list. If not, then change the parameter value.

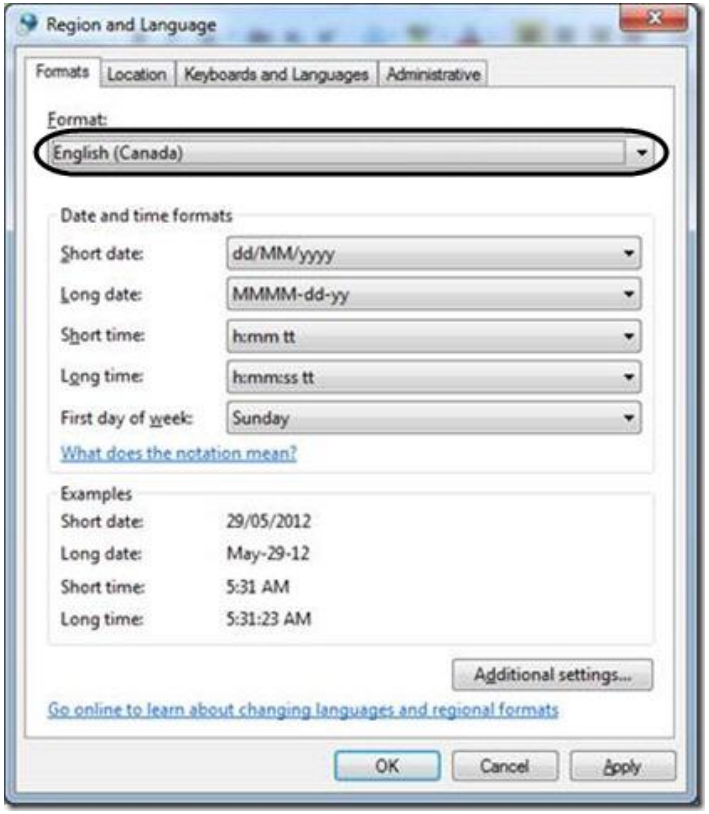

3. Go to the **Regional Options** tab. Make sure that the real computer location is selected in the **Current location** drop-down list. If not, then change the parameter value.

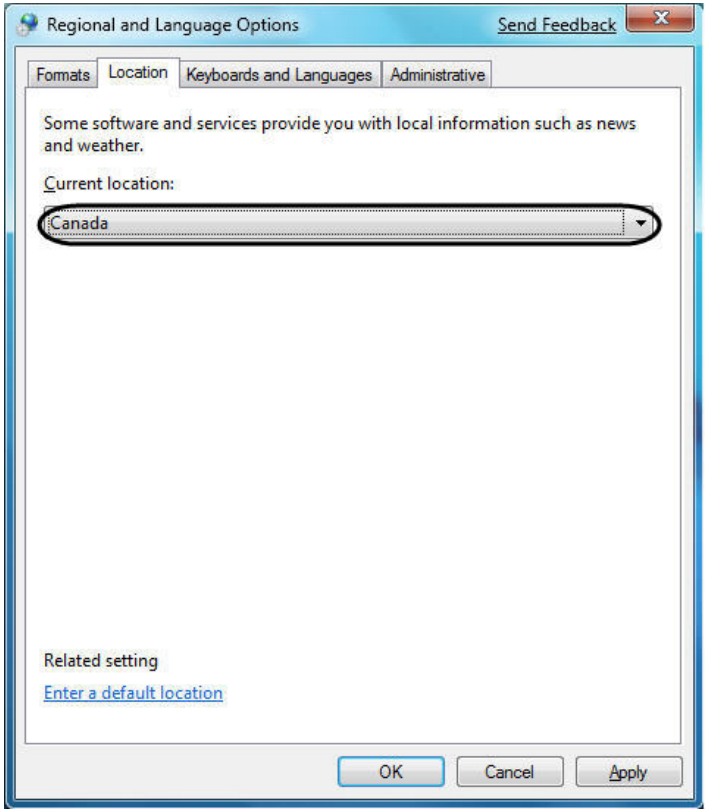

4. Go to the **Advanced** tab. Make sure that the language that is used for Intellect installation is specified in the **Current language for non-Unicode programs** field. If not, then change the parameter value using the **Change system locale...** button.

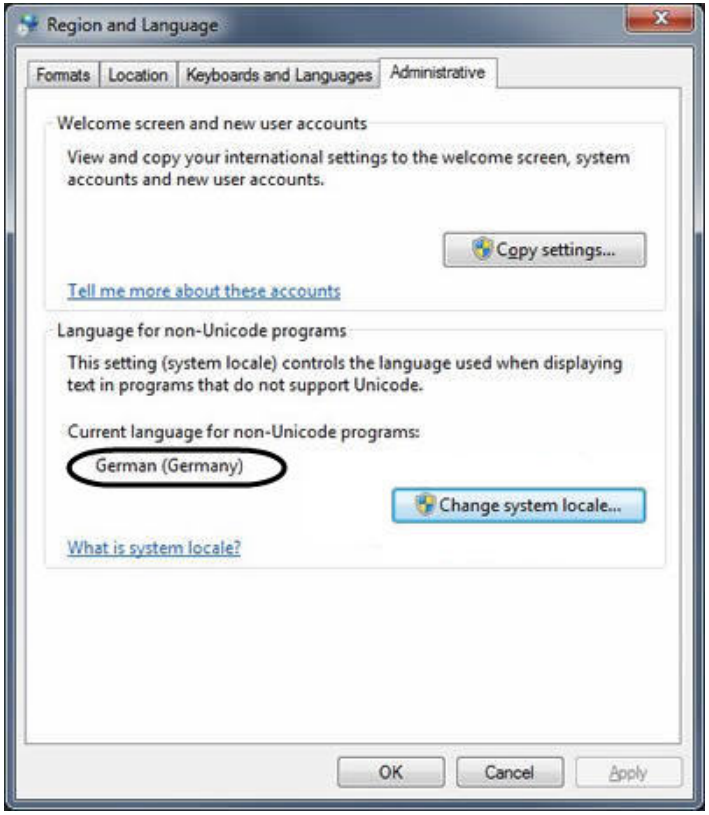

Installation of INTELLECT™ software as a Server/Remote administrator workplace

This section outlines a step-by-step instruction on how to install INTELLECT™ software as a “Server”.

Note
The following features are to be taken into account while installing INTELLECT™ software:

- INTELLECT™ software is to be installed on a “clean” Windows OS (see the Operating system requirements section).
- To install INTELLECT™ software, administrator rights are required.

To install INTELLECT™ software, do the following:

1. Insert INTELLECT installation disk in the CD-ROM drive, its contents will be displayed in a dialog box.

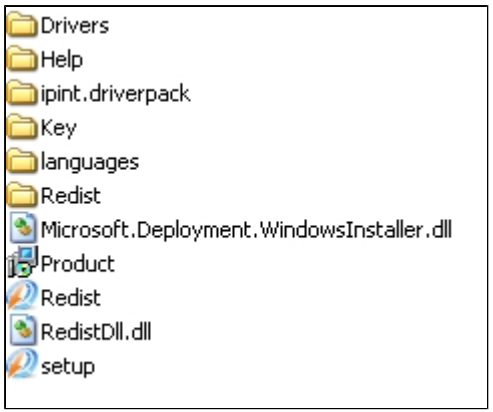

2. Run the setup.exe file to start the INTELLECT™ software installation procedure.
   As a result the dialog box of choosing language is displayed.

> **Note**
> The notification box is displayed if Microsoft.Net Framework 2.0 has not been installed.
>
> 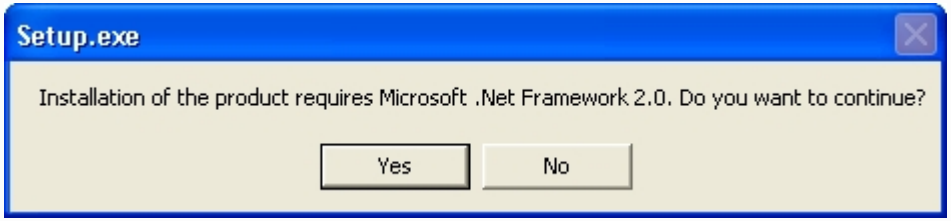
>
>
> Click **Yes** for Microsoft.Net Framework 2.0 auto installation.

> **Important!**
> When INTELLECT™ is installed on Windows 8 and Windows Server 2012 OS, the Microsoft.Net Framework 3.5 is to be installed. If the Microsoft.Net Framework 3.5 has not been installed, then the warning is displayed. In this case stop installing INTELLECT™ and install the Microsoft.Net Framework 3.5. You will find the instructions on how to install it at: http://msdn.microsoft.com/en-gb/library/hh506443.aspx

3. Choose the language of INTELLECT™ software installation and click **Install**.

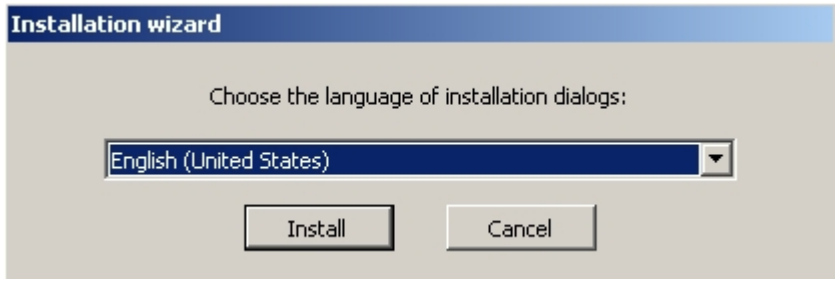

As a result the **Type of installation** dialog box is displayed.

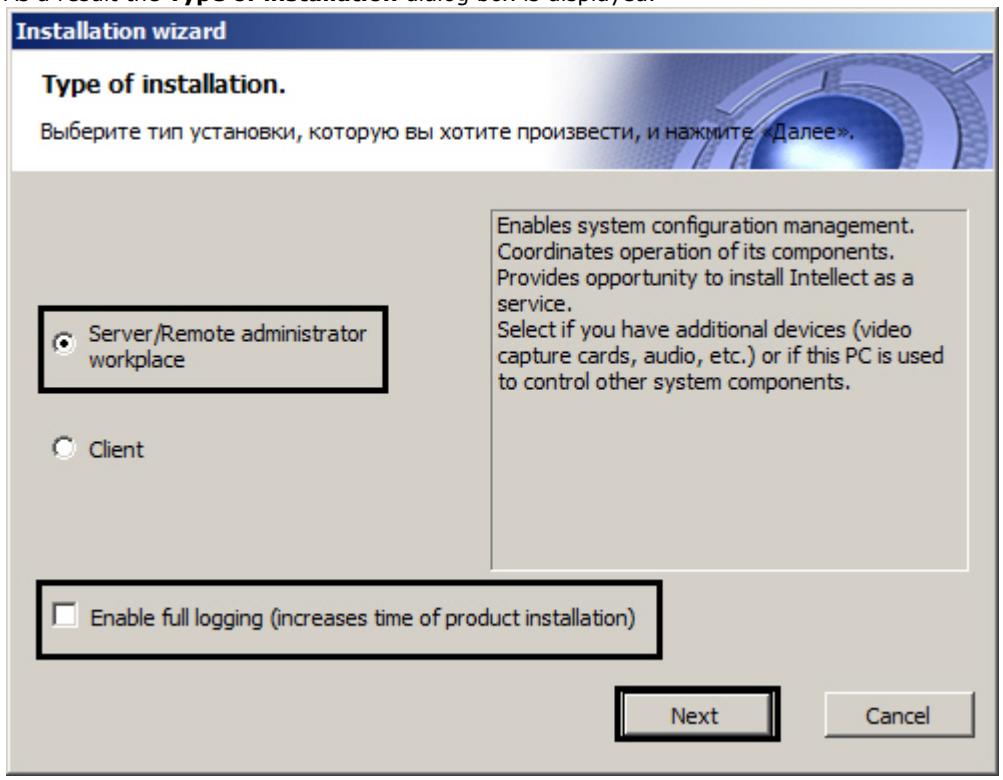

4. Select the **Server/Remote administrator workplace** type of installation.
5. To log all installation events, set the **Enable full logging (increases time of product installation)** checkbox.

> **Note**
> While installing and uninstalling the software events are logged to Intellect.log and Intellect uninstall.log correspondingly. To collect log-files, the "Support.exe" tool is to be used (see The utility for collecting configuration data on servers and RWS for the Technical Support section).

6. Click the **Next** button.
   The **Selecting components for installation** dialog box is displayed.

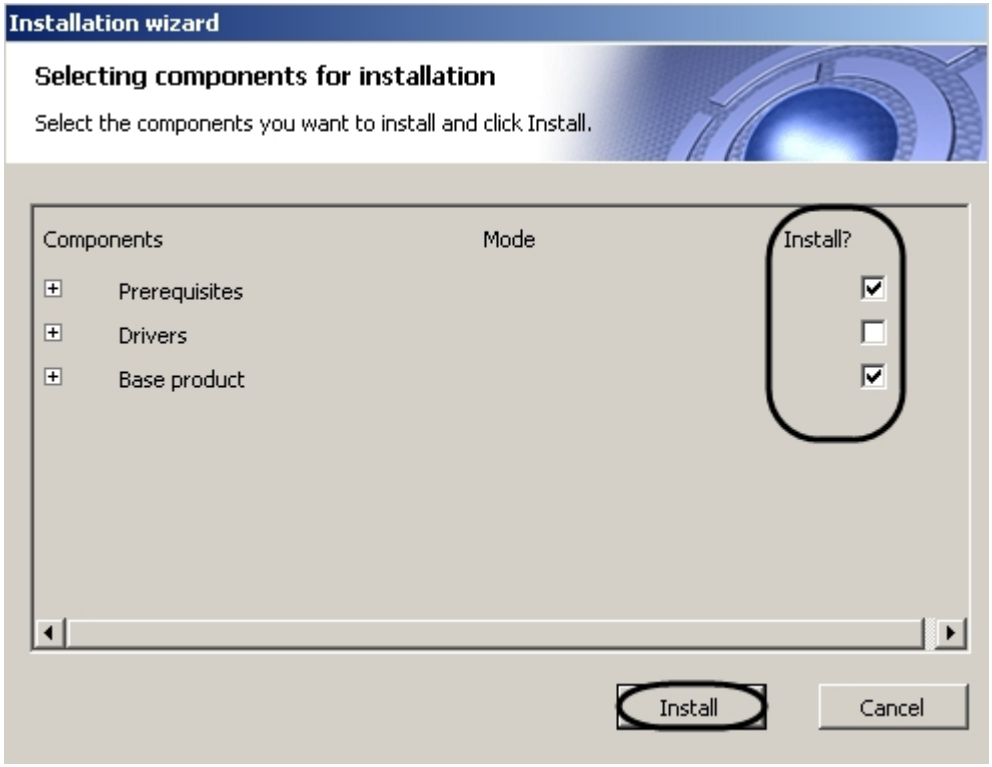

7. Set the checkboxes next to the components that are to be installed.

> **Note**
> All offered components are recommended to be installed.
>
> However, if installation is performed using the integrated software package (with vertical solutions modules), then there will be an option to select vertical solutions that are to be installed. Only those vertical solutions that will be in use are to be selected. There is no need to install all vertical solutions.
>
> Vertical solutions will be installed after installing Axxon Intellect Enterprise. Information on how to install vertical solutions can be found in the corresponding documentation.

> **Note**
> At this stage it is possible to deny installing MS SQL Express database server. In this case it will be required to configure connection to the remote database at step 16.
>
> When installation of *Intellect* is complete database connection parameters can be changed using the idb.exe utility – see INTELLECT™ software database connection.
>
> Pay attention that *Intellect* operation will be impossible without connection to any database source.

If you are not installing from a disk, you will also be able to select the languages to be installed. To do this, download the language pack from ITV's official website (http://www.itv.ru/) before beginning the installation and put the archive's files into the languages folder in the installer's directory. As a result, the **Selecting components for installation**

window will offer selection of languages to be installed.

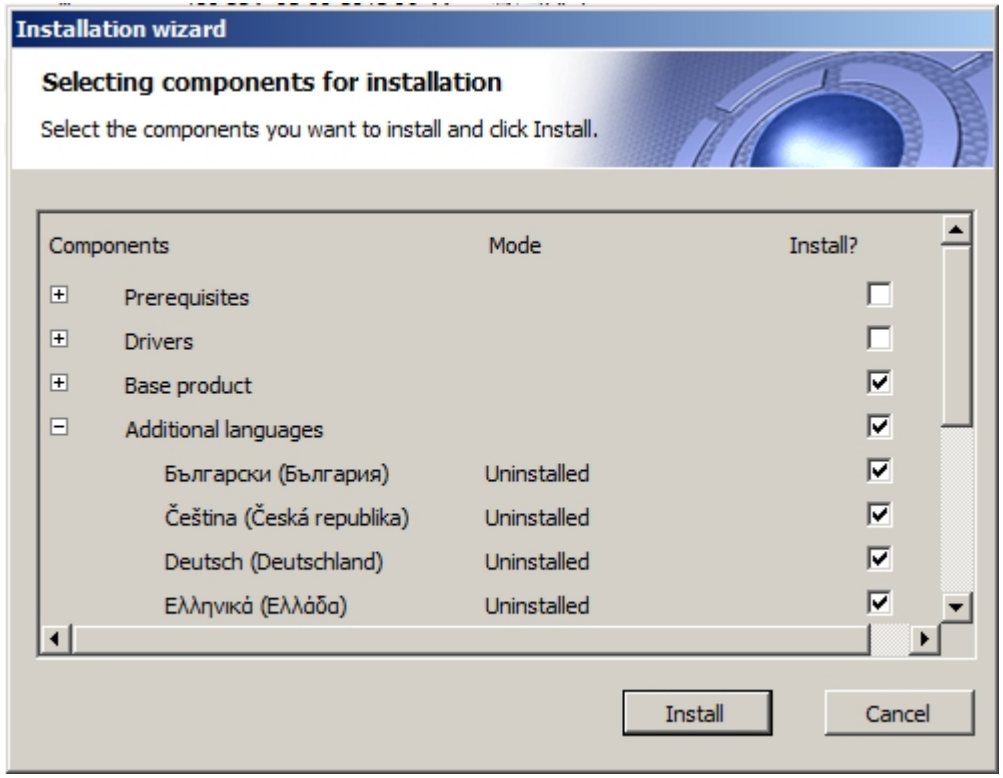

Note
If this method of installing languages is not suitable, each language may be installed individually (see Installing the language). After the installation, use the utility tweaki.exe to switch languages (see Switching languages in the Intellect Software System).

8. Click the **Install** button.

The selected components are automatically installed except Microsoft SQL Server Express 2014 database (necessary for work with INTELLECT™ databases), that is installed manually (see Microsoft documentation).

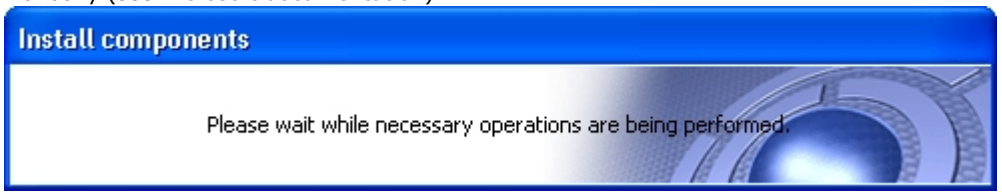

Important!

Auto installation of necessary prerequisites may take more than 10 minutes.

After this the **Welcome to the Intellect Setup Wizard** box is displayed.

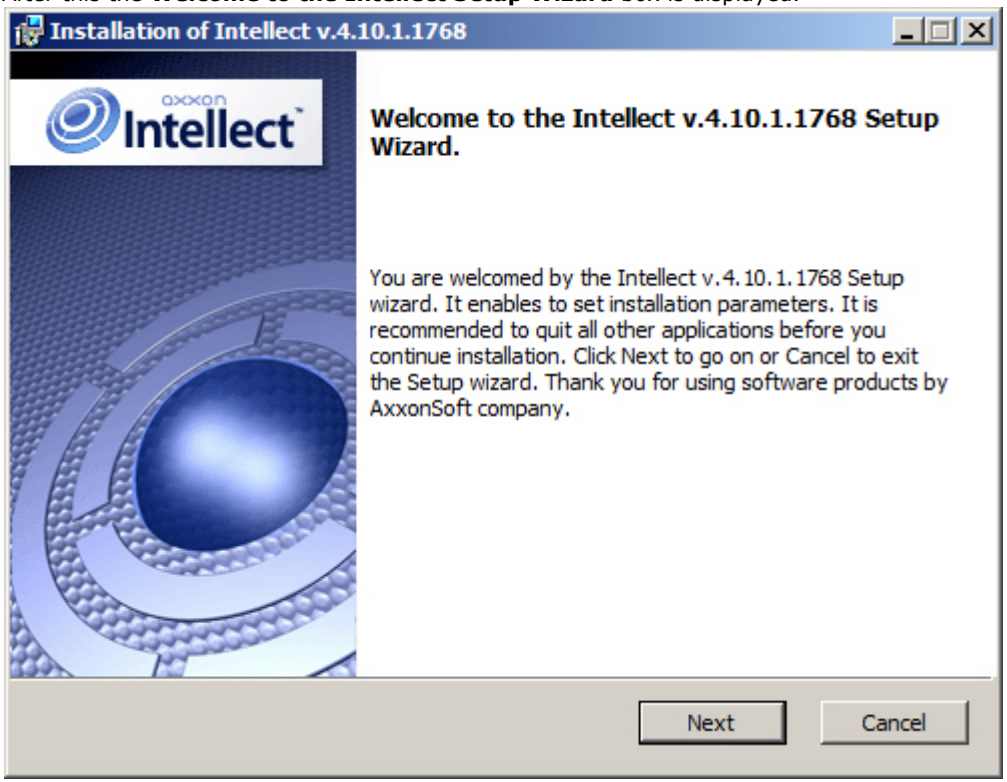

9. Click the **Next** button.
   The **License Agreement** dialog box is displayed.

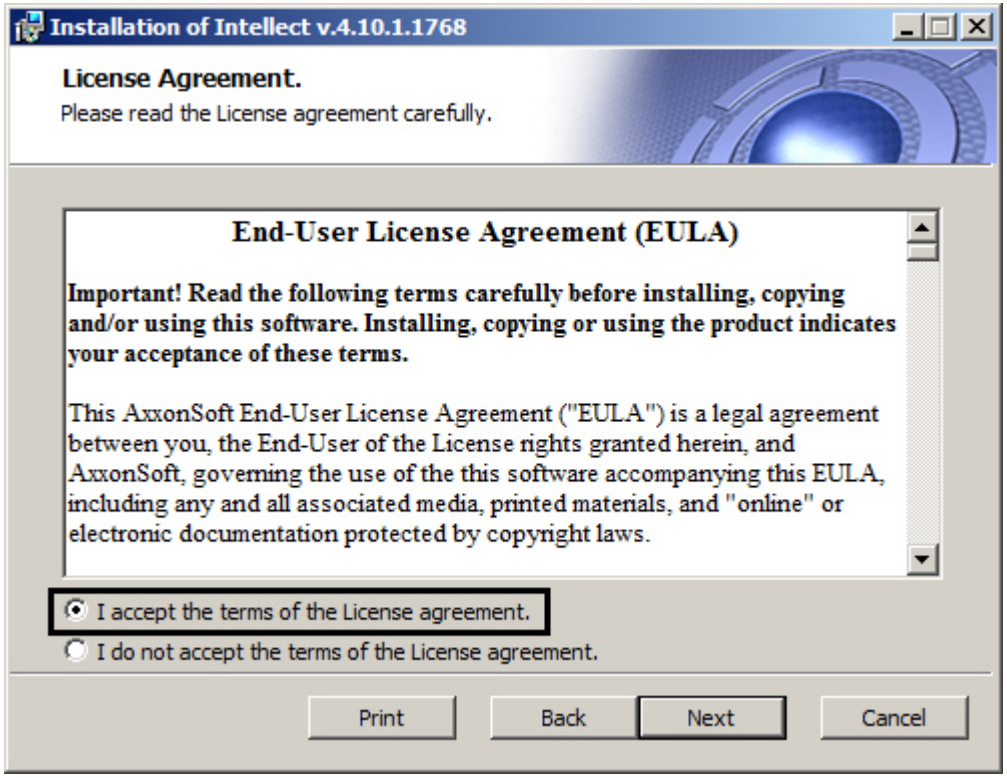

10. Read the License agreement and accept its terms by setting the switch into the **I accept the terms of the License agreement** position, otherwise the INTELLECT™ installation will be stopped.
11. Click the **Next** button.
    The dialog box of installation mode selection is displayed.

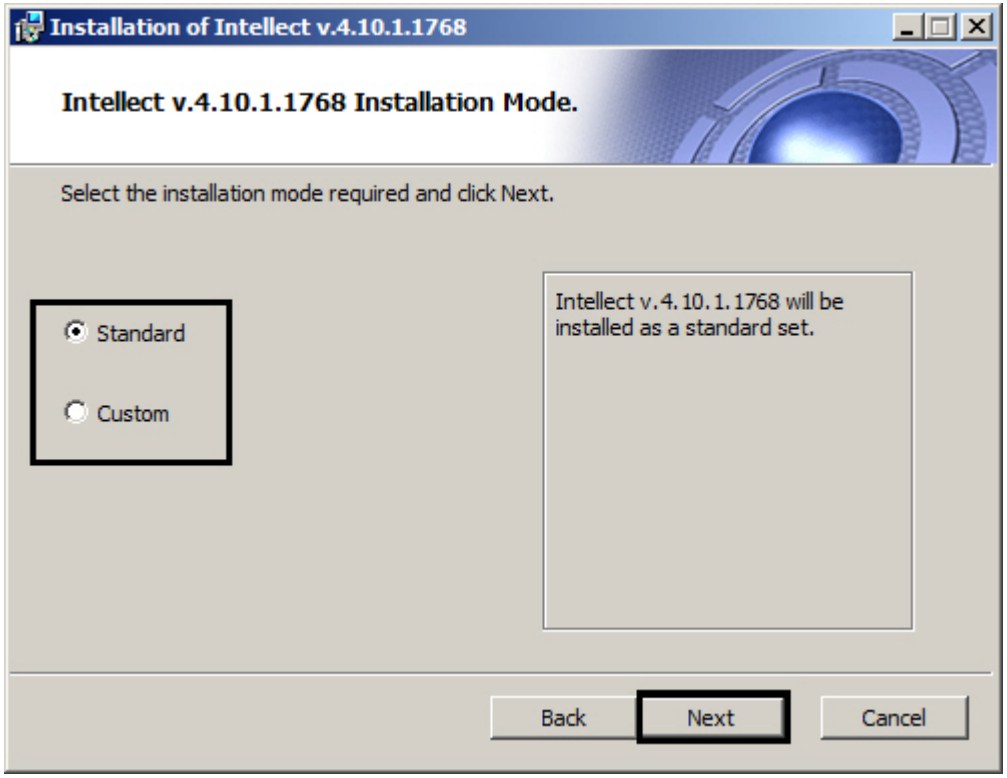

12. Select the installation mode.
13. Click the **Next** button.

When the **Custom** installation mode is selected, the dialog box of choosing the installation folder is displayed, and then the **Select components** dialog box is displayed. This step is omitted when the **Standard** installation mode is selected.

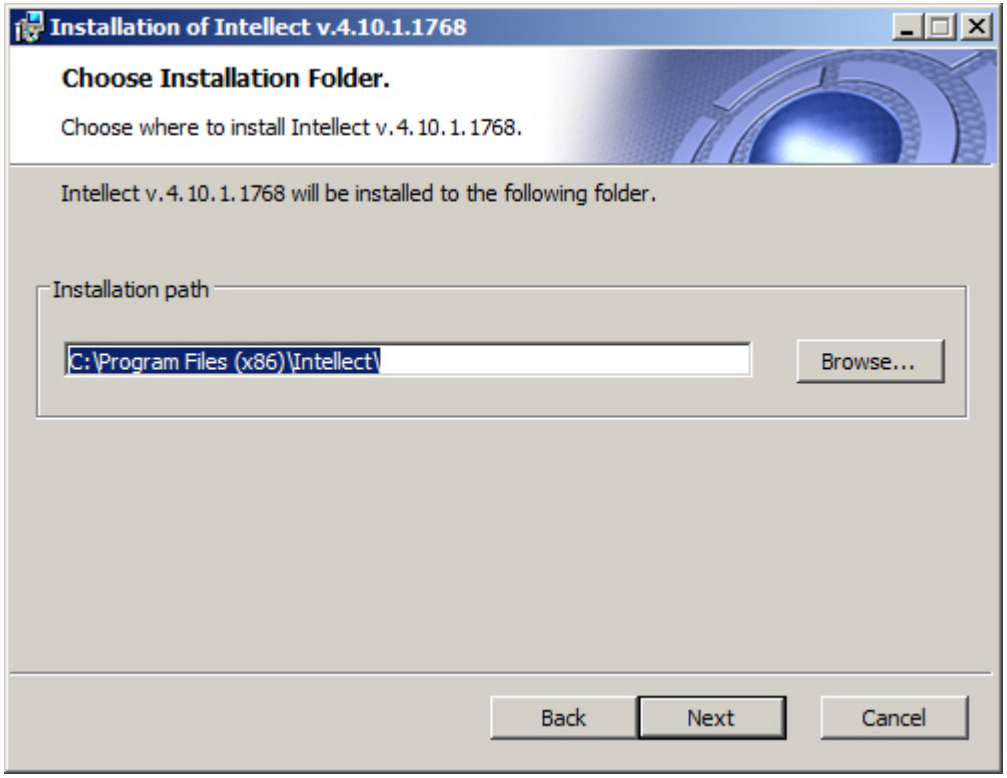
Installation of Intellect v.4.10.1.1768
Choose Installation Folder.
Choose where to install Intellect v.4.10.1.1768.
Intellect v.4.10.1.1768 will be installed to the following folder.
Installation path
C:\Program Files (x86)\Intellect\
Browse...
Back
Next
Cancel

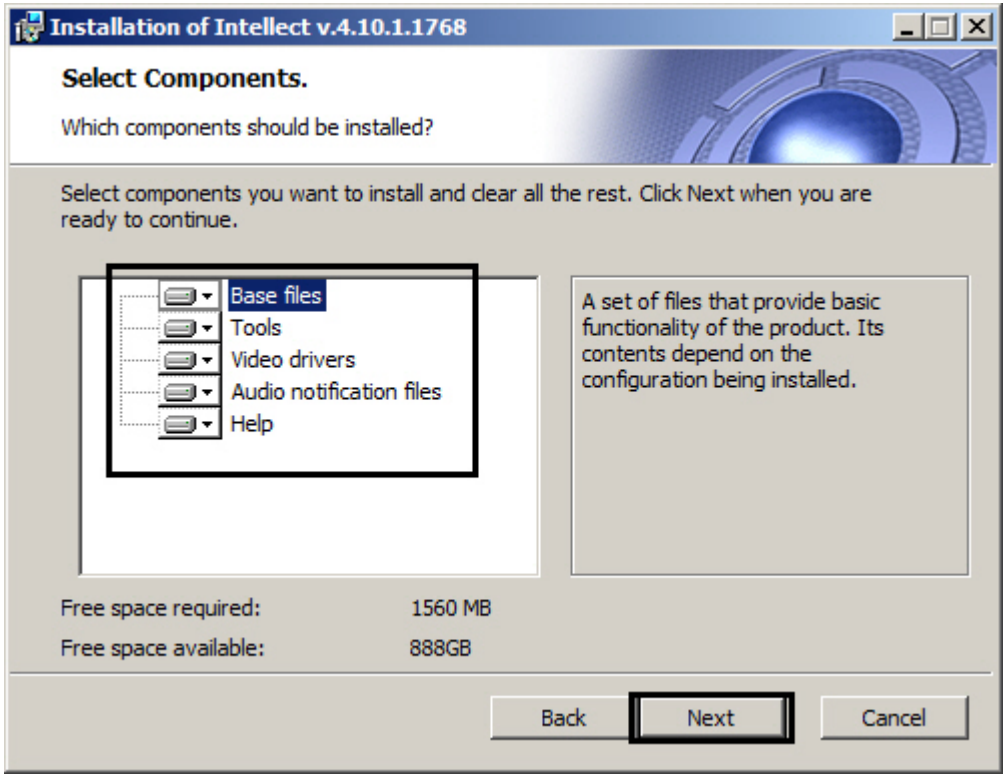

Note
The description of the component is displayed in the installation box when this component is selected.

The dialog box of specifying the path to the key file is displayed.

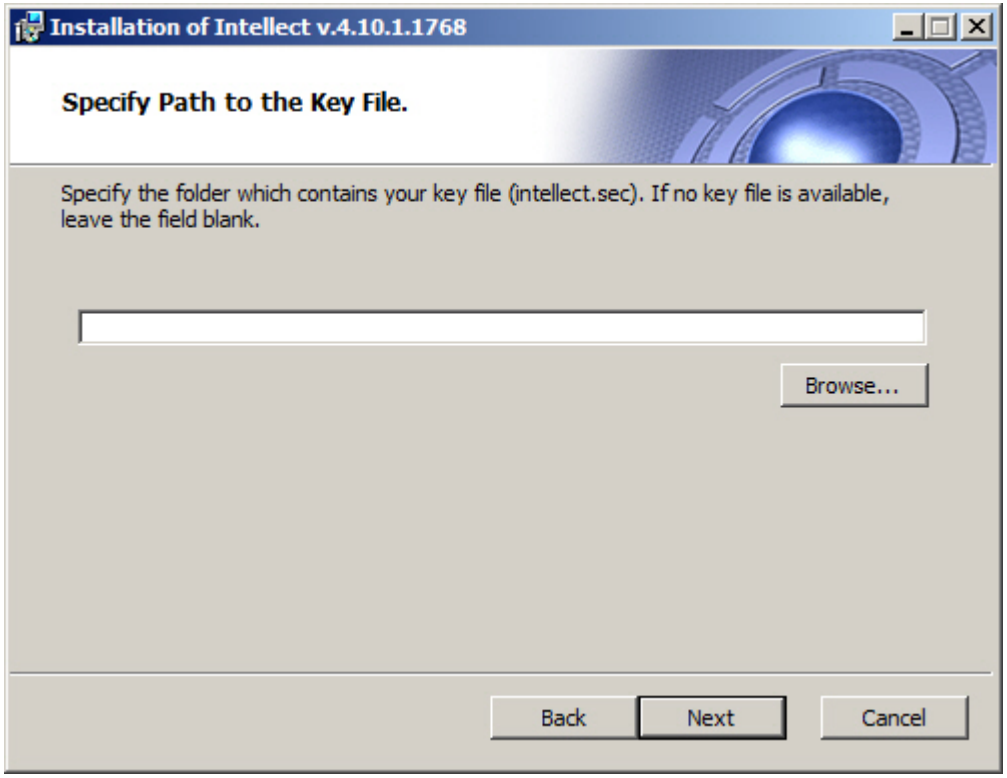

Note
Keep the field blank if the key file will be copied later.

14. Click the **Next** button.
The dialog box of installing Intellect as a service is displayed.

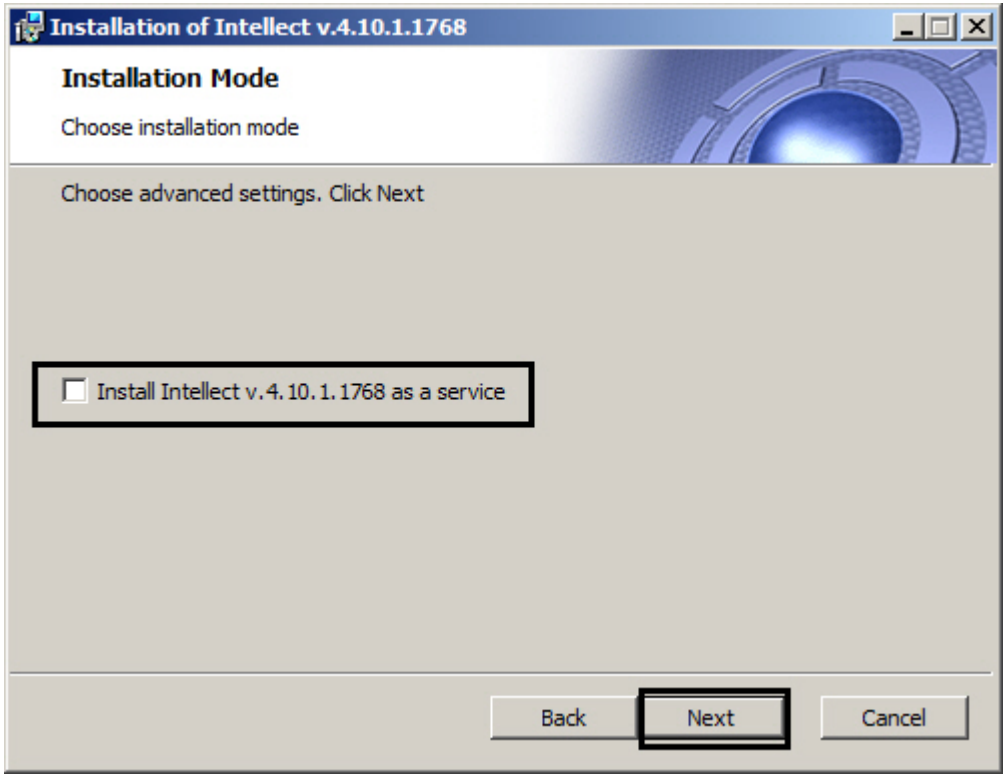

> **Note**
> The 64-bit version of *Intellect* is not available when installed as a service. If this checkbox is set checked, then 32-bit modules will be started after installing *Intellect* as a service.

15. Set the **Install Intellect as a service** checkbox if INTELLECT™ software is to be started before the user is authorized by the Windows OS and before Windows applications are started (including the Explorer application) that is used for starting Windows OS intrrfaces and various other applications installed on the Server (see Working with Windows OS services for operating Intellect™ installed as a Service section).
16. Click the **Next** button.
    The dialog box of MS SQL Server database server selection is displayed. Specify the authentication parameters to connect to it.

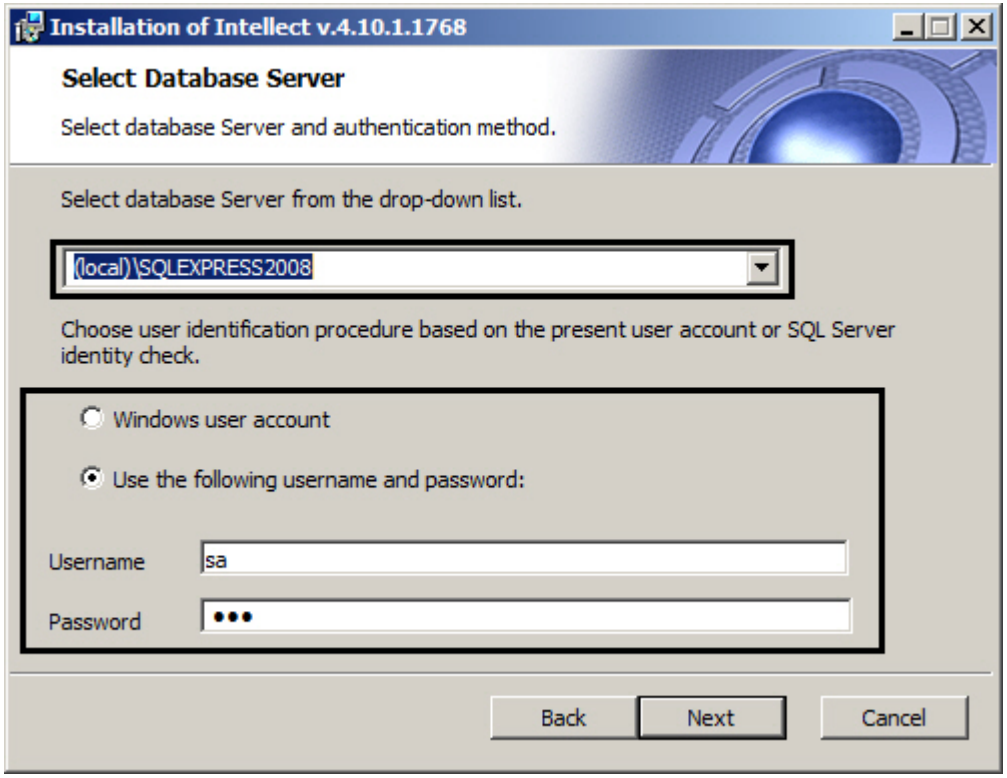

Important!
Access of some user to the database is impossible without additional settings of the idb.exe utility and knowing of the login and password of Administrator if installation of the *Intellect* software package is performed by Administrator and Windows account data are in use for SQL authentication. So it is highly recommended not to use such authentication method of the SQL server.

17. Select the SQL-server using the drop-down list.

Note
If there is necessity to use the SQL-server installed on this (local) computer, the "(local)\SQLEXPRESS2014" item (set by default) is to be selected.

Important!
You cannot connect different Servers to one database.
Server can use remote database, but requirements to network and other resources become higer and this can cause delays while transmitting events and states of cores.

18. Set the authorization parameters that will be used by INTELLECT™ while connecting to the SQL-server.

Note
If INTELLECT™ is installed as a service, select the SQL Server identity check, i.e. set the **Use the following username and password** checkbox and specify the username and password to login the Server database. If the database is to be connected via the Windows account, then for proper operation of INTELLECT™ any other the user is to have corresponding SQL Server permissions.

Ways of authorization performed in the dialog box.

Ways of authorization	Windows user account	Use the following username and password (recommended)
Usage	SQL Server from *Intellect* distributive (or from the distributive of the external vendor) and *Intellect* is installed on the same computer	SQL Server from *Intellect* distributive and *Intellect* are installed on the same computer. Meanwhile connection to SQL Server with the set username (login) and password may be performed from any remote computer that is in the same net domain of TCP/IP net with a computer, where SQL Server is being installed.
	SQL Server and *Intellect* are installed on different computers that are connected through TCP/IP net and are in the same net domain. Meanwhile the account for the user currently authorized in Windows OS on the computer, where *Intellect* is being installed is to be created in Windows OS on the computer with installed MS SQL Server.	SQL Server from *Intellect* distributive and *Intellect* are installed on different computers that are connected through TCP/IP net and are in the same net domain. Meanwhile the username (login) and password are to correspond to the username (login) and password used for access to SQL-server.
	Full-scale SQL Server (supplementary installed) and *Intellect* are installed on different computers, connected through TCP/IP net and are in the same net domain. Meanwhile the account for the user currently authorized in Windows OS on the computer, where *Intellect* is being installed is to be created on the remote SQL Server.	Full-scale SQL Server (supplementary installed) and *Intellect* are installed on the same or different computers that are connected through TCP/IP net and are in the same net domain. Meanwhile the username (login) and password are to correspond to the username (login) and password used for access to SQL-server.

Note
For SQL Server installed from *Intellect* distributive, the "sa" username and "*Intellect_default_DB_4*" password are used by default. While installing the *Microsoft SQL Server Express 2014* the password may be changed for any other.

19. To continue the installation, click the **Next** button.
The dialog box of selecting or setting names for databases is displayed.

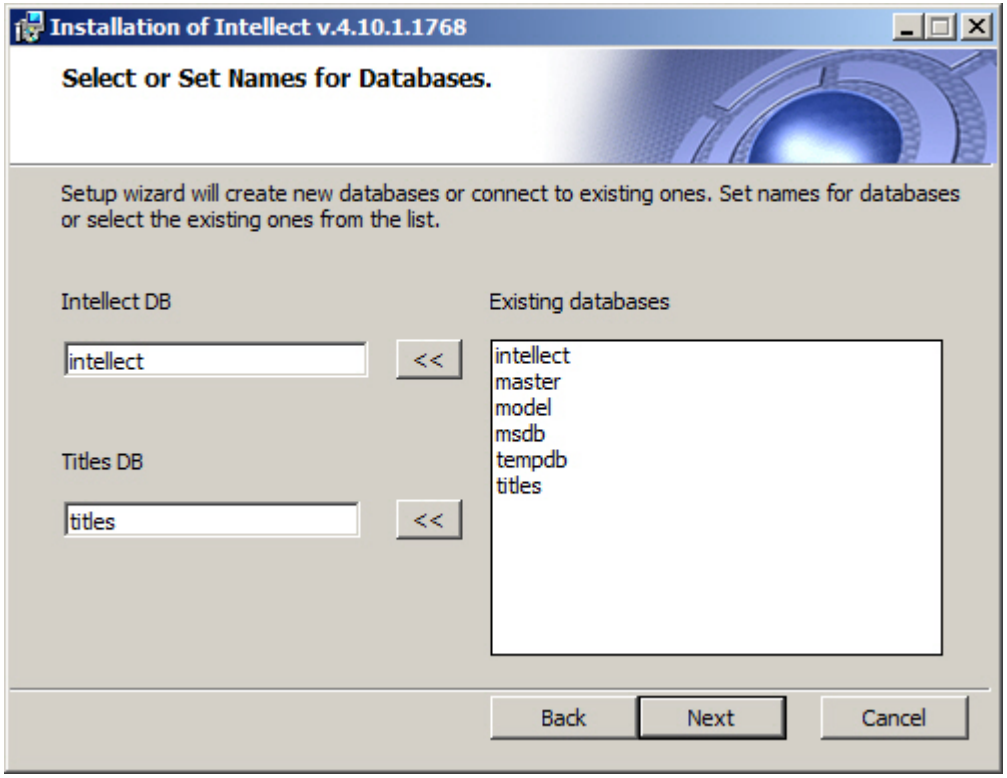

20. By default the *Intellect* database is in use as the main database. To set another database select the required database from the **Existing databases** list and click the <<button near the **Intellect DB** field.
21. By default the titles database is in use as a database of titles. To set another database select the required database from the **Existing databases** list and click the <<button near the **Titles DB** field.
22. Click the **Next** button.

> **Note**
> If the system while being installed displays the "Rights are required to create or edit databases" message, then the installation process must be stopped and then restarted again.

The **Advanced Settings** dialog box is displayed.

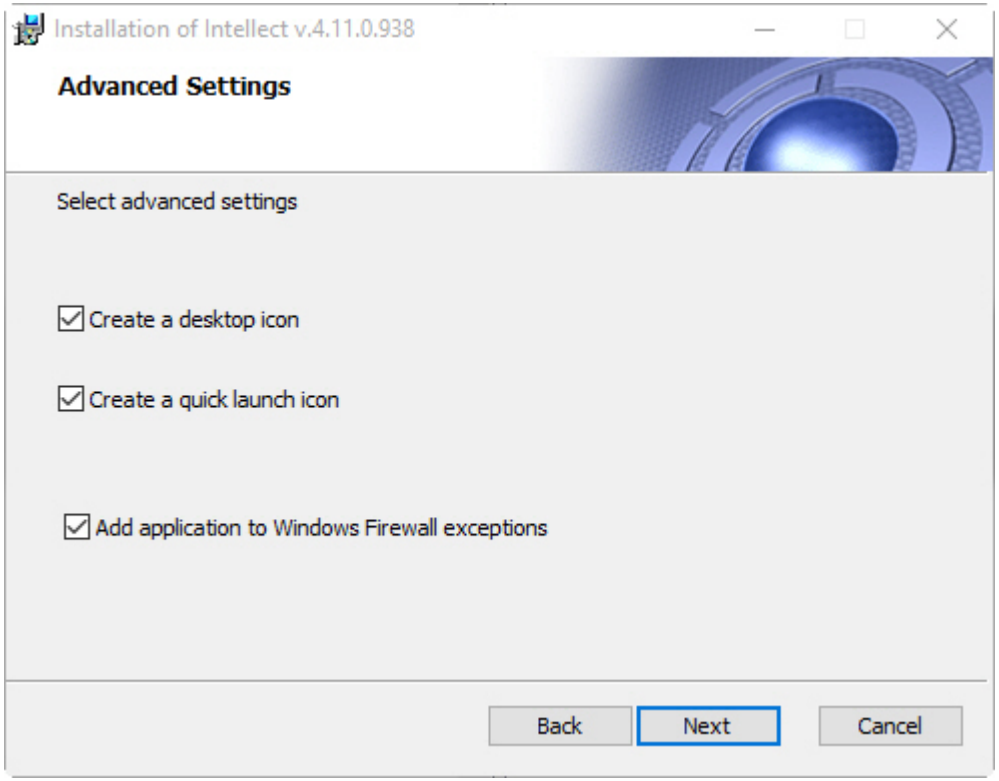

23. If a desktop icon is to be created, set the corresponding checkbox.
24. If a quick launch icon is to be created, set the corresponding checkbox.
25. If it is required to add *Intellect* and all its components to the Windows Firewall exceptions, set the corresponding checkbox.
26. Click the **Next** button.
27. The **Ready to install** dialog box is displayed.

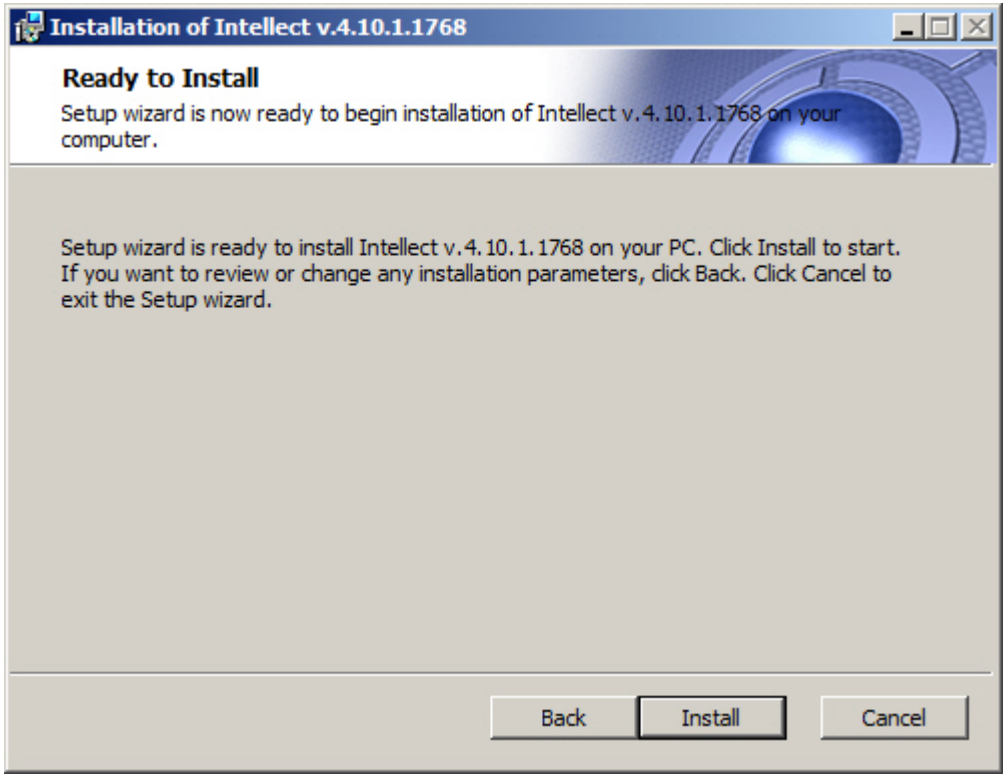

Note
To change the setting, click the **Back** button.

28. Click the **Install** button.
The **Installing Intellect** dialog box is displayed.

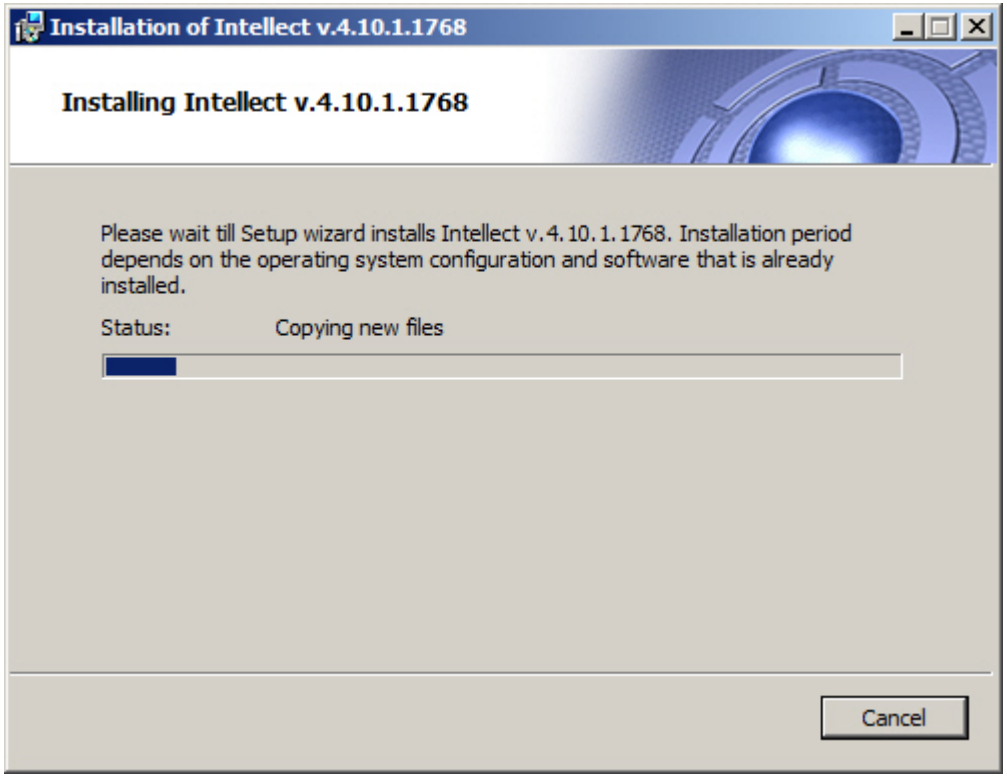

29. The **Software Installation** dialog box is displayed.

Note
Error of driver installation for the FX4 card can occur while the *Intellect* software installation on the Windows 7 SP1 operating system without Internet connection. To eliminate this error install the following missing Windows updates:

https://support.microsoft.com/en-us/kb/3004394

https://support.microsoft.com/en-us/kb/3033929

30. To continue the installation, click the **Continue Anyway** button.
The **Installation Complete** dialog box is displayed.

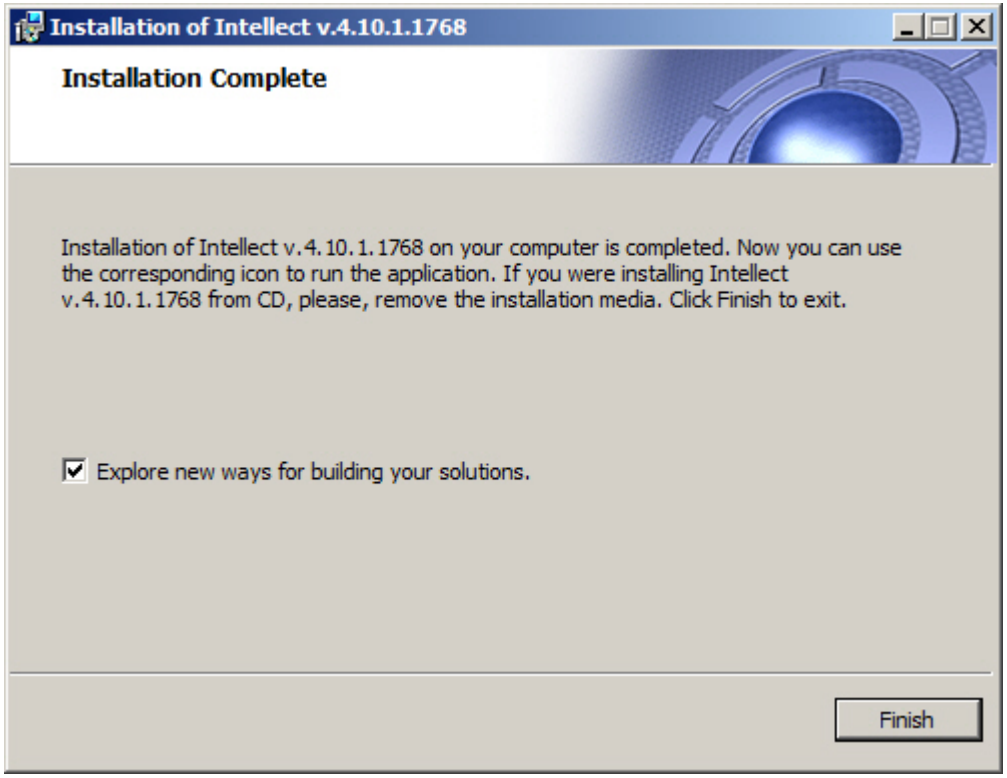

31. Set the **Explore new ways for building your solutions** checkbox, to view the document containing information about new features of the installed *Intellect*.
32. Click the **Finish** button.

> **Note**
> Then the Axxon Driver Pack will be installed.

Then the Installation wizard dialog box is displayed, containg the information on the mode (installed or not) of *Intellect* components.

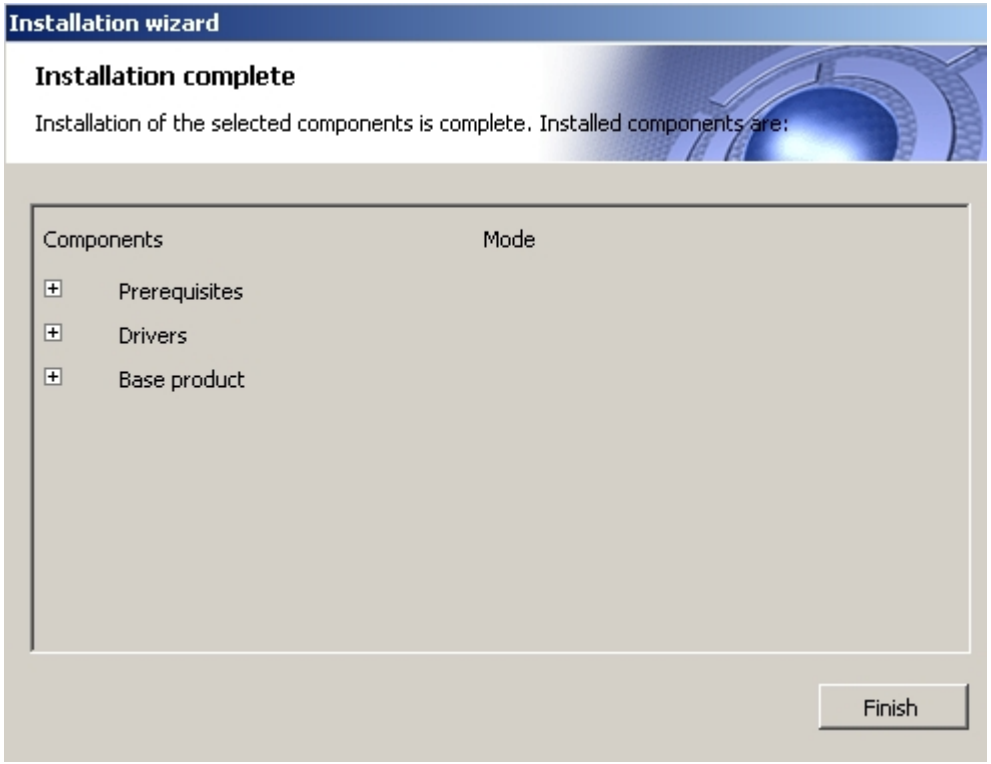

33. Click the **Finish** button.

The dialog box offering to restart the system is displayed.

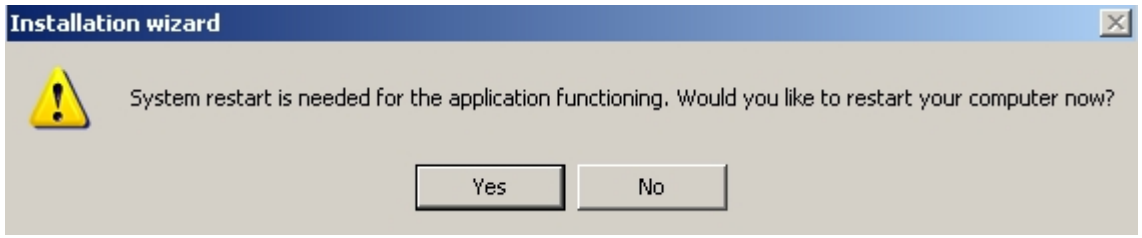

Note
The option with installation completion and system restarting is the most recommended.

The *Intellect* as a Server is now installed.

Installation of INTELLECT™ software to the Client

This section outlines a step-by-step instruction on how to install INTELLECT™ software onto a Client workstation.

Note.
The following features are to be taken into account while installing INTELLECT™ software:

INTELLECT™ software is to be installed on a "clean" Windows OS (see the Operating system requirements section).

To install INTELLECT™ software, administrator rights are required.

INTELLECT™ software is to be installed in the folder, which appears by default in the corresponding dialog box of the installation program (i.e., "C:\Program Files \ Intellect"). It is not recommended to change the names of the logical disk and folder for the installation.

To install INTELLECT™ softwareas a **Client**, do the following:

1. Insert INTELLECT installation disk in the CD-ROM drive, its contents will be displayed in a dialog box.

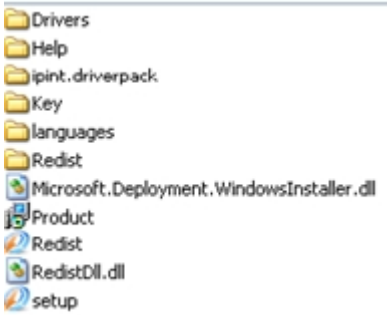

2. Run the setup.exe file to start the INTELLECT™ software installation procedure.
As a result the dialog box of choosing language is displayed.

Note.
The notification box is displayed if Microsoft.Net Framework 2.0 has not been installed.

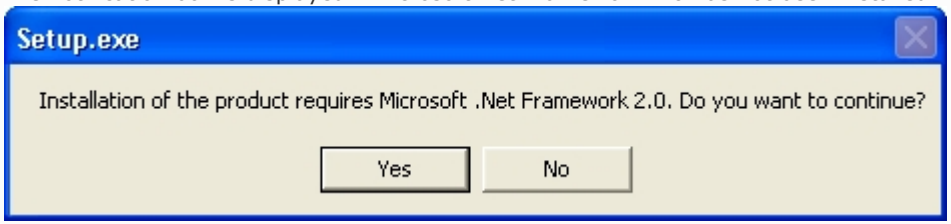

Click **Yes** for Microsoft.Net Framework 2.0 auto installation.

Attention!
When INTELLECT™ is installed on Windows 8 and Windows Server 2012 OS, the Microsoft.Net Framework 3.5 is to be installed. If the Microsoft.Net Framework 3.5 has not been installed, then the warning is displayed. In this case stop installing INTELLECT™ and install the Microsoft.Net Framework 3.5. You will find the instructions on how to install it at: http://msdn.microsoft.com/en-gb/library/hh506443.aspx

3. Choose the language of INTELLECT™ software installation and click **Install**.

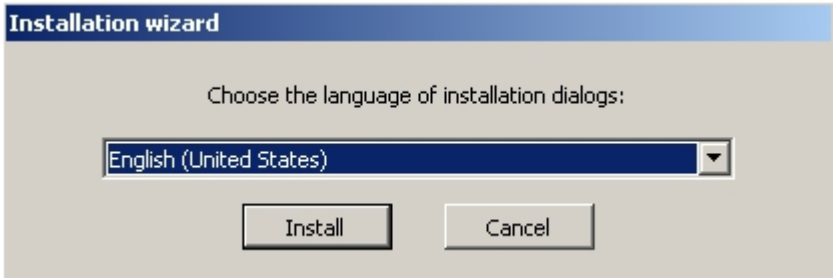

As a result the **Type of installation** dialog box is displayed.

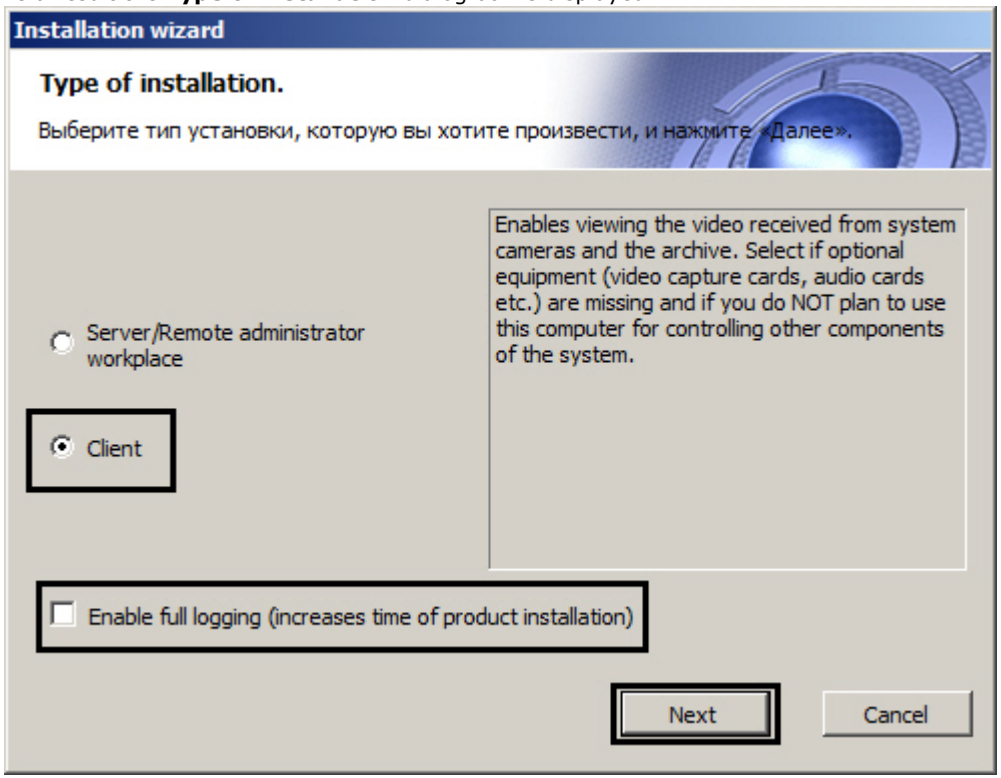

4. Select the **Client** type of installation.
5. To log all installation events, set the **Enable full installation log** checkbox.

> **Note.**
> While installing and uninstalling the software events are logged to Intellect.log and Intellect uninstall.log correspondingly. To collect log-files, the "Support.exe" tool is to be used (see The utility for collecting configuration data on servers and RWS for the Technical Support section).

6. Click the **Next** button.
   The **Selecting components for installation** dialog box is displayed.

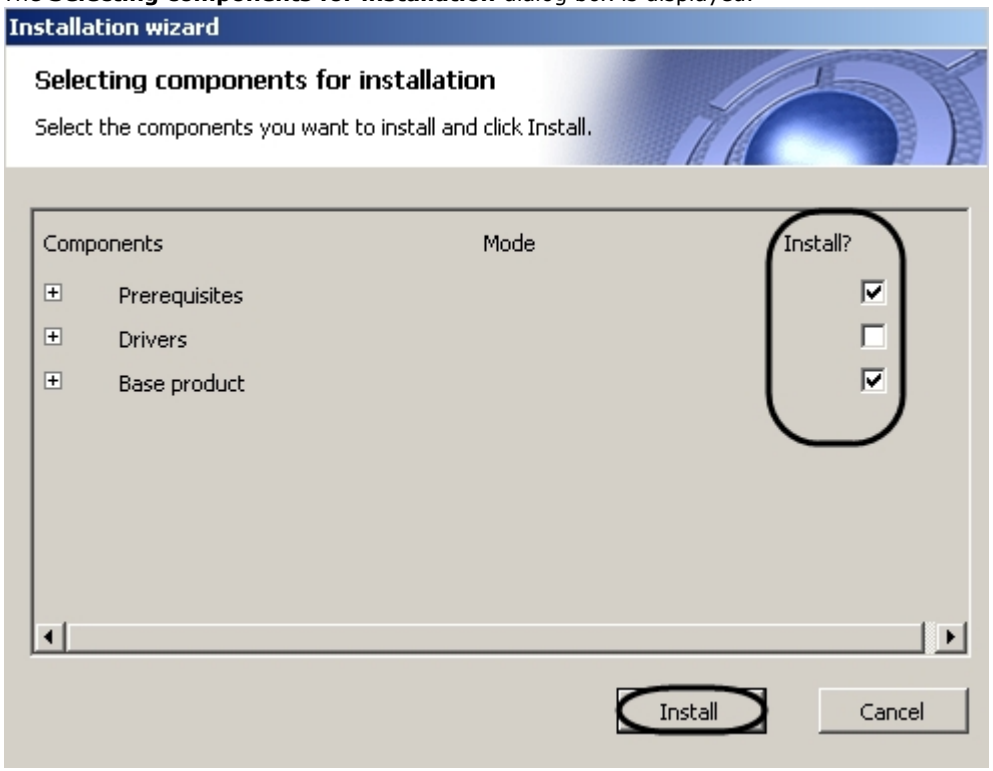

7. Set the checkboxes next to the components that are to be installed.

> **Note.**
> All offered components are recommended to be installed.

If you are not installing from a disk, you will also be able to select the languages to be installed. To do this, download the language pack from ITV's official website (http://www.itv.ru/) before beginning the installation and put the archive's files into the languages folder in the installer's directory.. As a result, the **Selecting components for installation** window will offer the ability to select the languages to be installed.

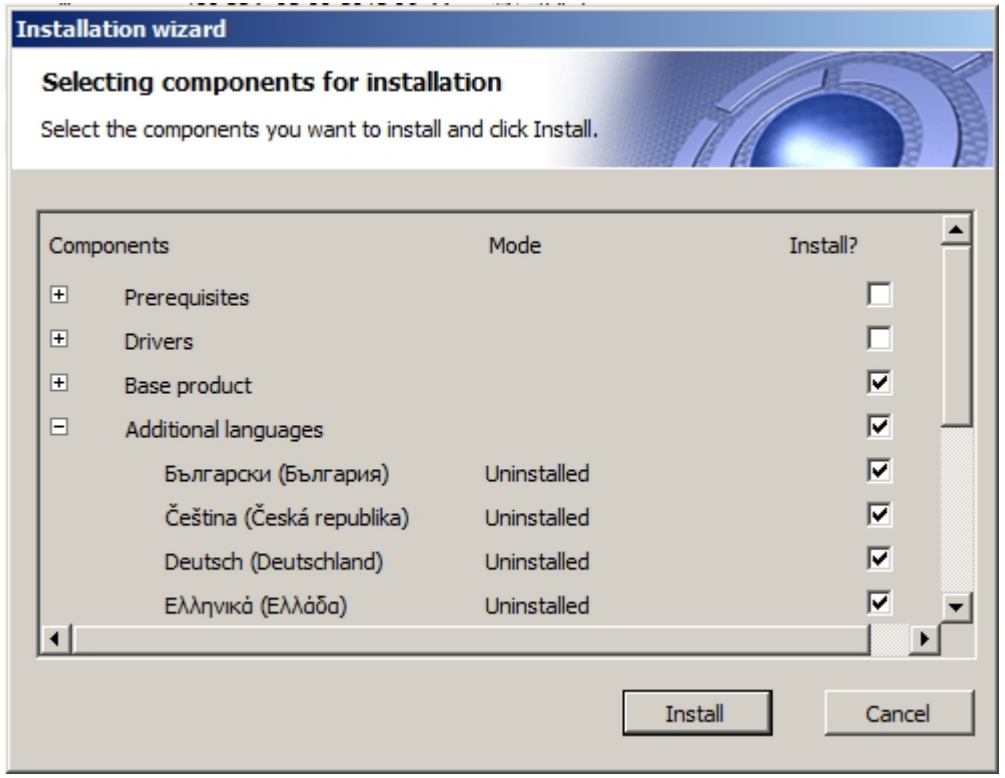

Note.
If this method of installing languages is not suitable, each language may be installed separately (see Installing the language). After the installation, use the utility tweaki.exe to switch languages (see Switching languages in the Intellect Software System).

Click the **Install** button.
Necessary prerequisites auto installation will be performed.

Attention!

Auto installation of necessary prerequisites may require more than 10 minutes.

After this the **Welcome to the Intellect Setup Wizard”** box is displayed.

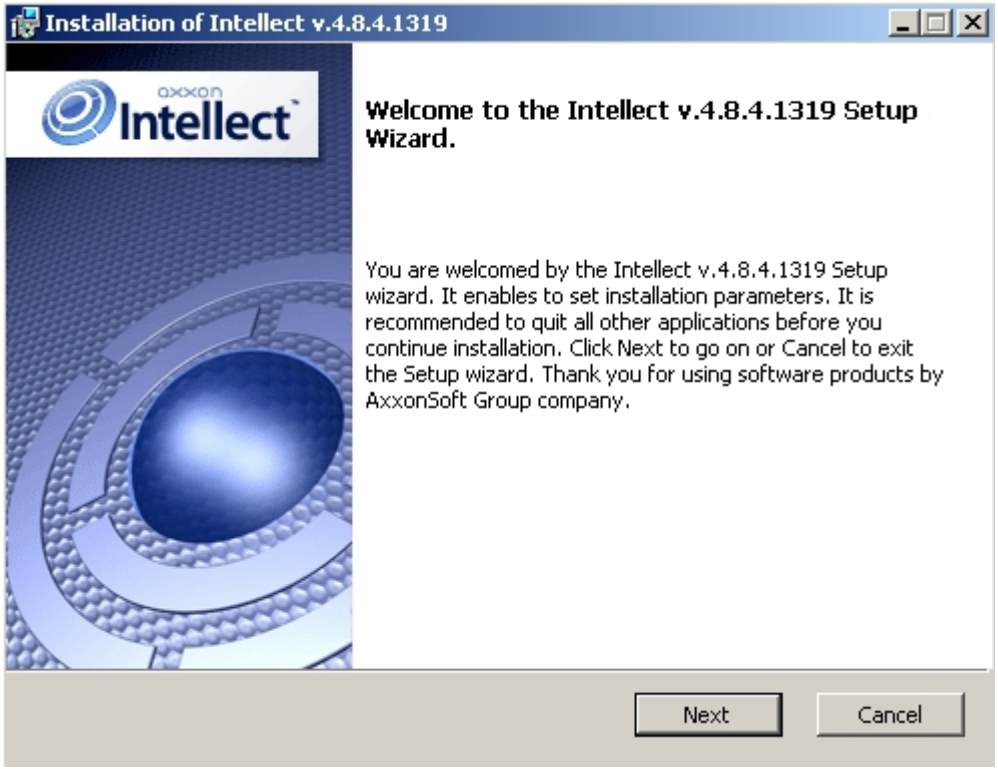

8. Click the **Next** button.
   The **License Agreement** dialog box is displayed.

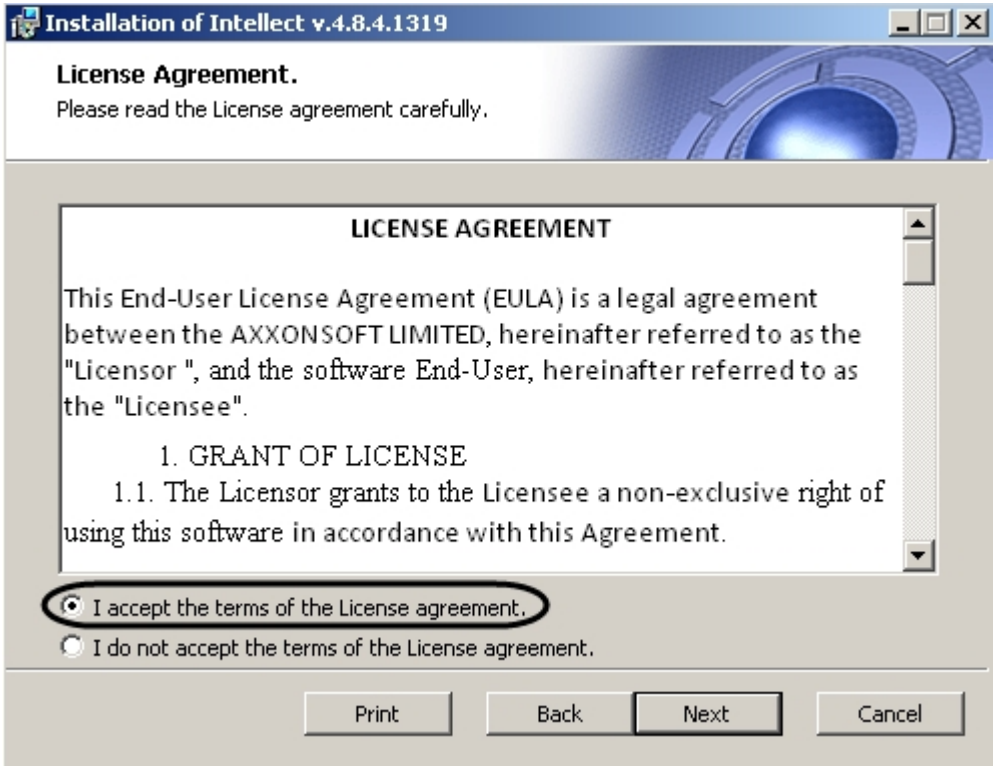

9. Read the License agreement and accept its terms by setting the switch into the **I accept the terms of the License agreement** position, otherwise the INTELLECT™ installation will be stopped.
10. Click the **Next** button.
    The dialog box of installation mode selection is displayed.

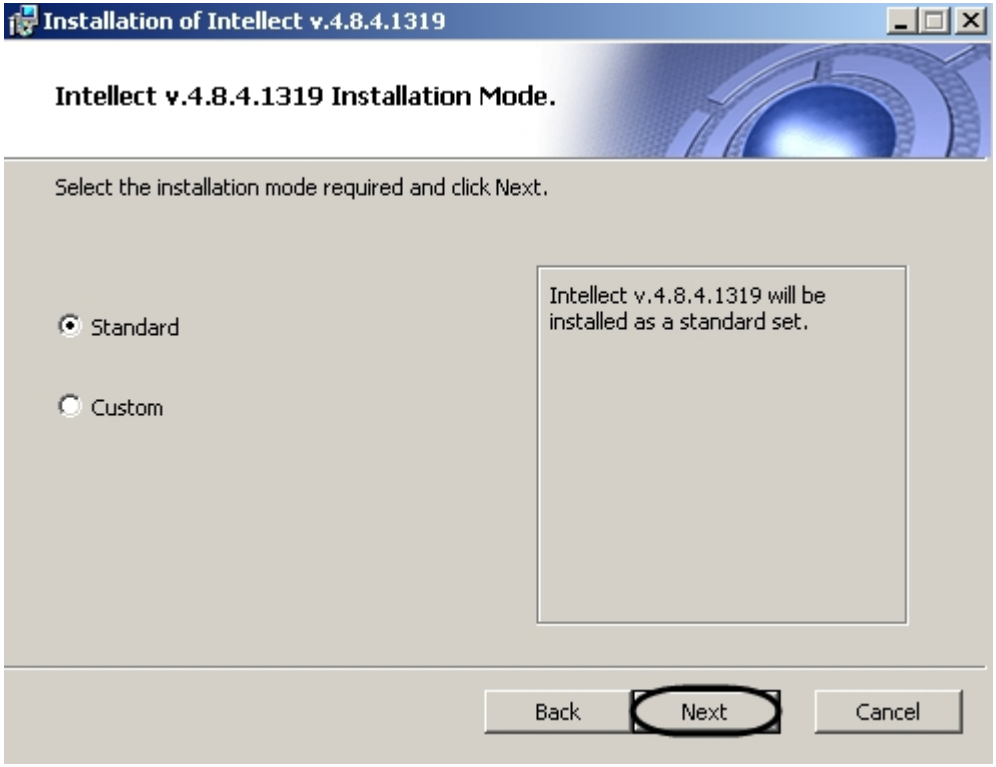

11. Select the installation mode.
12. Click the **Next** button.

    When the **Custom** installation mode is selected, the dialog box of choosing the installation folder is displayed. This step is omitted when the **Standard** installation mode is selected.

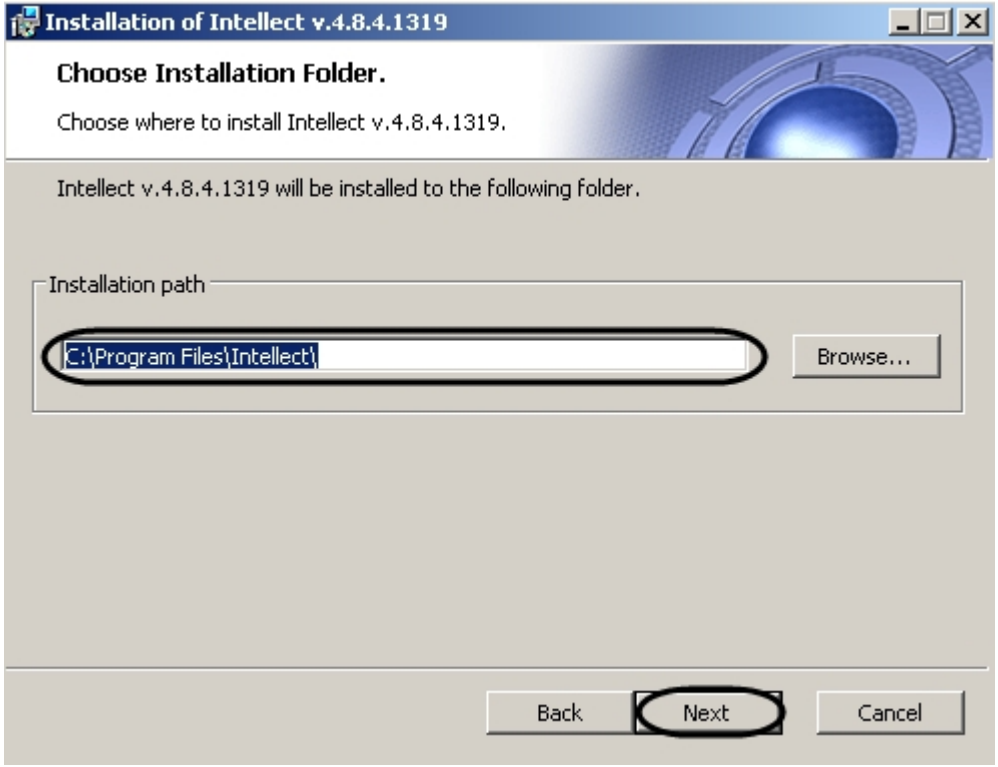

The **Advanced settings** dialog box is displayed.

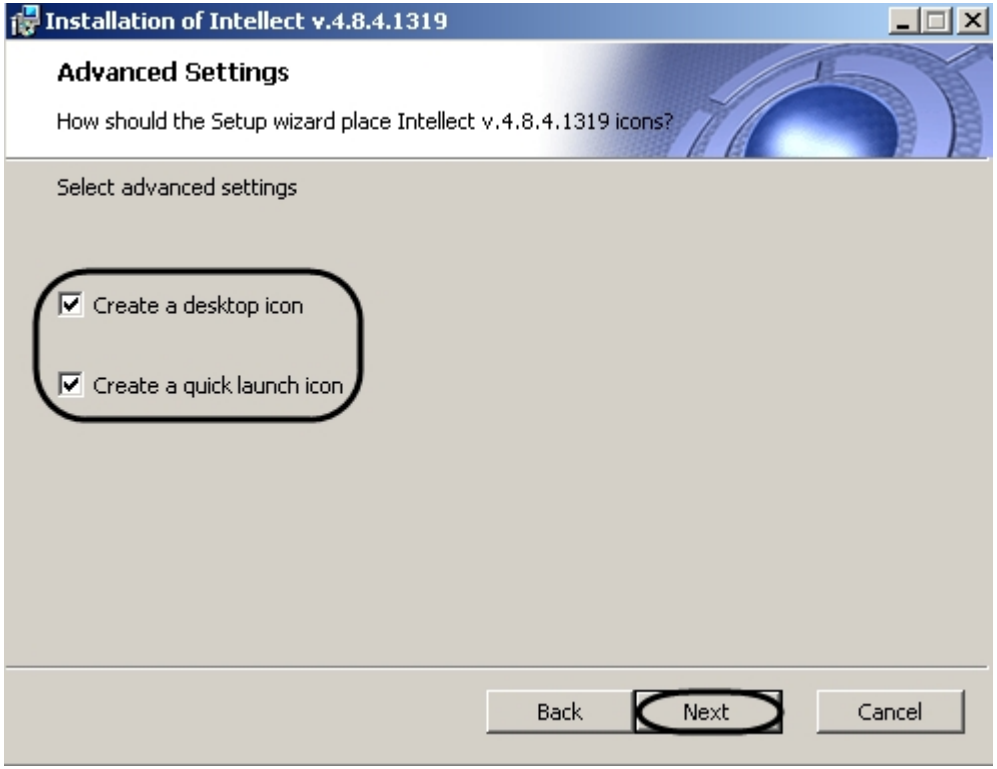

13. If a desktop icon is to be created, set the corresponding checkbox.
14. If a quick launch icon is to be created, set the corresponding checkbox.
15. Click the **Next** button.
    The **Ready to install** dialog box is displayed.

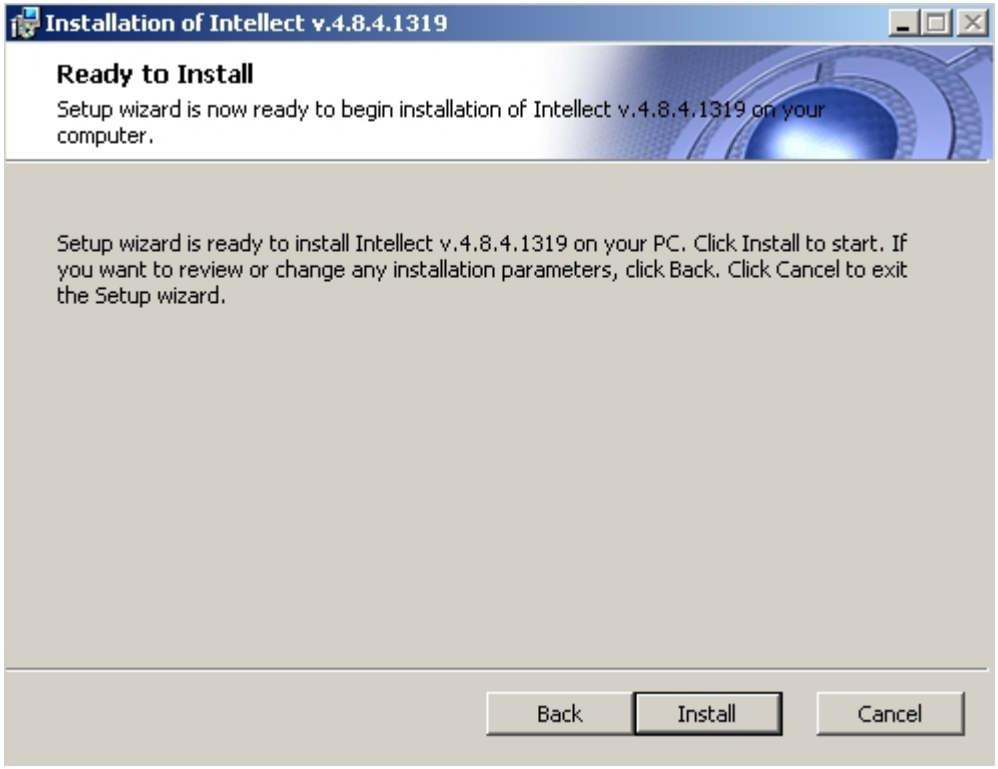

Note.
To change the setting, click the **Back** button.

16. Click the **Install** button.
The **Installing Intellect** dialog box is displayed.

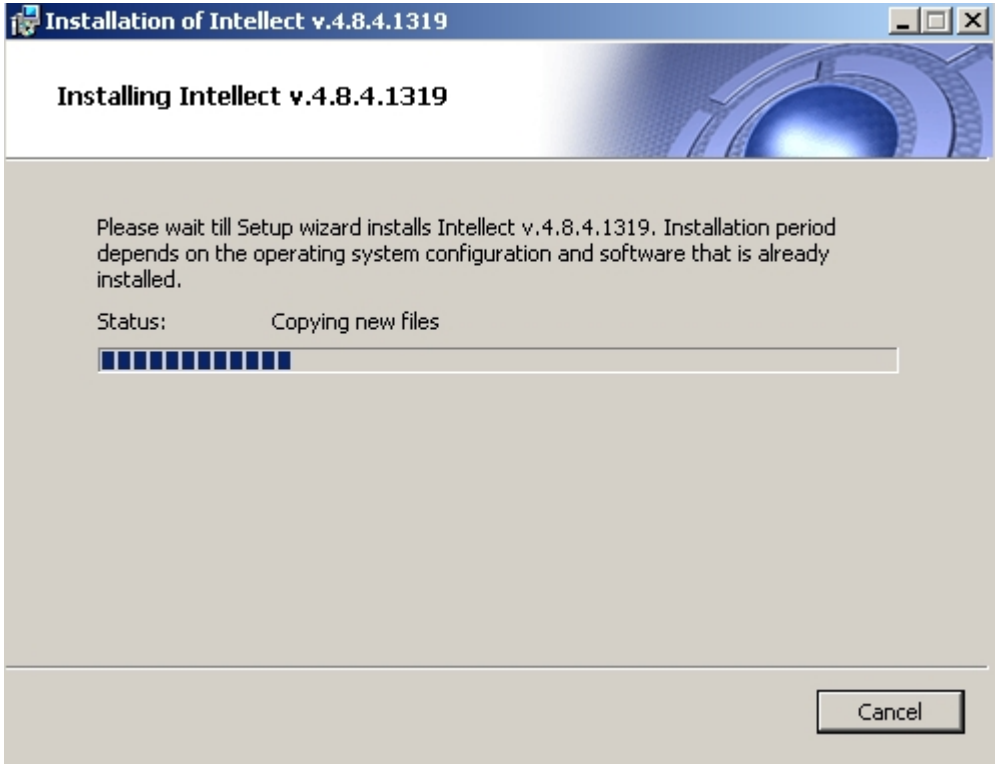

The **Software Installation** dialog box is displayed.

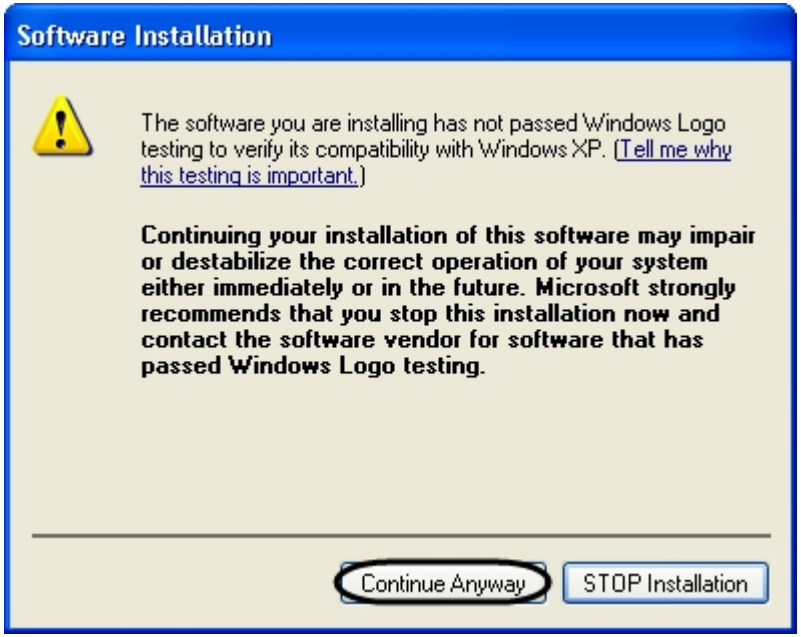

17. To continue the installation, click the **Continue Anyway** button.
    The I**nstallation Complete** dialog box is displayed.

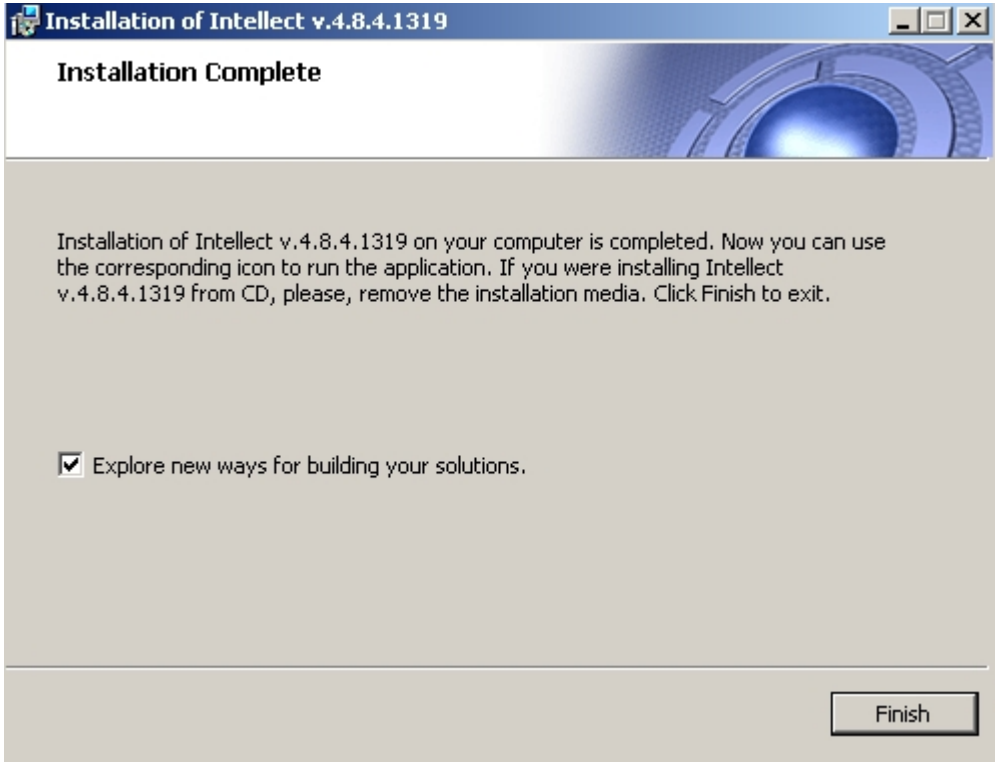

18. Set the **Explore new ways for building your solutions** checkbox, to view thw document containing information about new features of the installed *Intellect*.
19. Click the **Finish** button.
    Then the Installation wizard dialog box is displayed, containg the information on the mode (installed or not) of *Intellect* components.

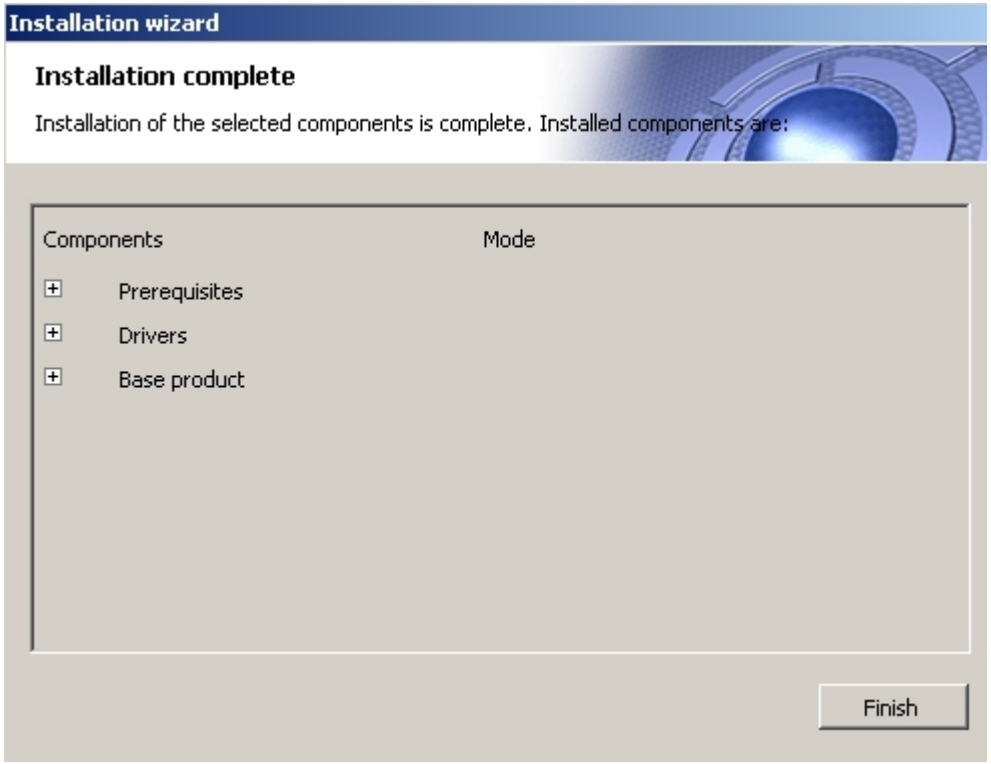

20. Click the **Finish** button.

The *Intellect* with the **Client** type of installation is now installed.

Updating INTELLECT™ software

If you install INTELLECT™ software on computer where an earlier version is used, then installation will be in the updating mode.

Note.
Update the *Intellect* software on Remote Clients while its updating on the Server or on Remote Admin Workstation.

The compatible versions of the *Intellect* software should be installed on Remote Clients and on Server/Remote Admin Workstation, i.e. the first two digits of version number should be the same (e.g. versions 4.8.2 and 4.9.2 are not compatible, but versions 4.9.3 and 4.9.7 are compatible).

Intellect since version 4.10.2 is not compatible with earlier versions in the distributed configuration.

To update INTELLECT™ software, do the following:

1. Insert INTELLECT installation disk in the CD-ROM drive, its contents will be displayed in a dialog box.

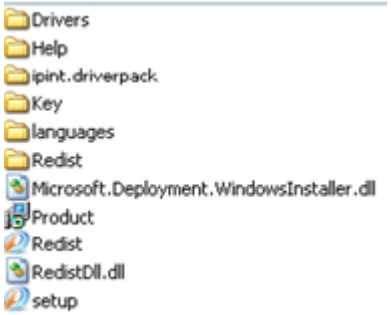

2. Run the setup.exe file to start the INTELLECT™ software installation procedure.
   As a result the dialog box of choosing language is displayed.
3. Choose the language of INTELLECT™ software installation and click **Install**.

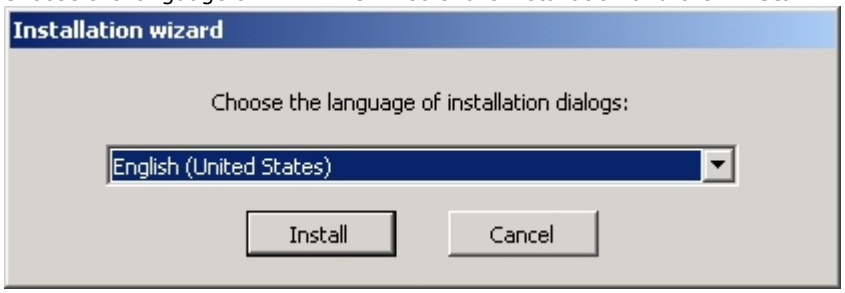

As a result the **Type of installation** dialog box is displayed.

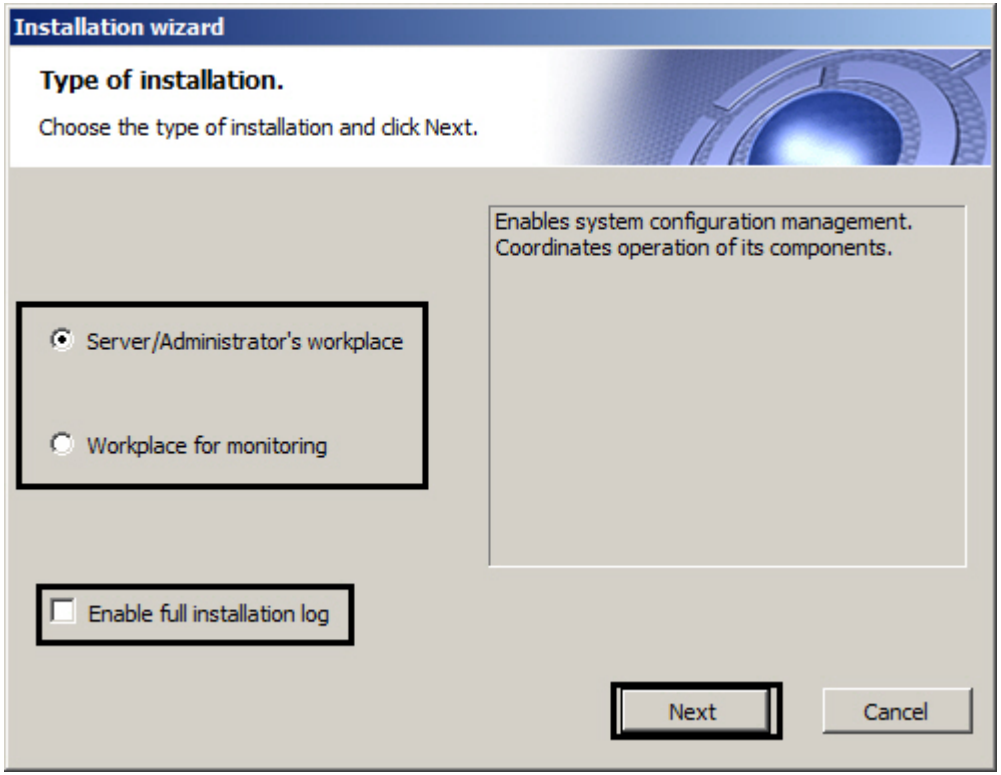

4. Choose the type of installation needed.
5. To log all installation events, set the **Enable full installation log** checkbox.

> **Note.**
> While installing and uninstalling the software events are logged to Intellect.log and Intellect uninstall.log correspondingly. To collect log-files, the "Support.exe" tool is to be used (see The utility for collecting configuration data on servers and RWS for the Technical Support *section).*

6. Click the **Next** button.
   The **Selecting components for installation** dialog box is displayed.

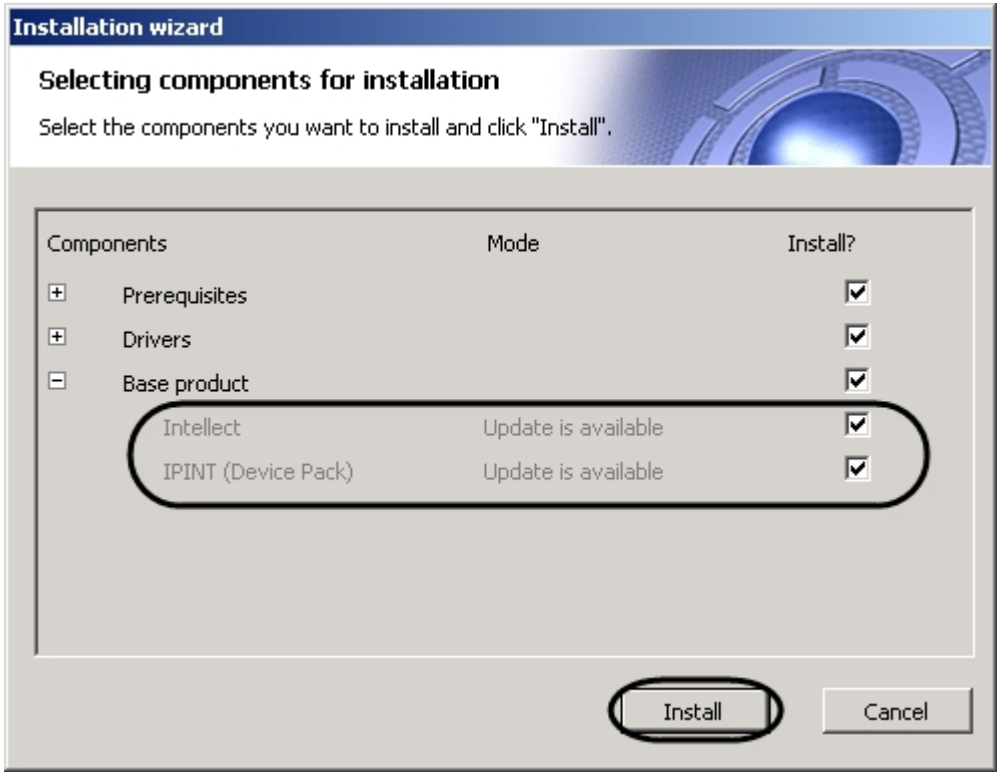

7. Set the checkboxes next to the components that are to be installed.

> **Note.**
> All offered components are recommended to be installed.

8. Click the **Install** button.
The selected prerequisites and drivers will be installed.

> **Attention!**
> If *Intellect* is updated to a version whose second number is larger than that of the currently installed version (for example, from version 4.8.8 to 4.9.0), compatibility is lost with industry-specific vertical solutions built for old versions. This is why, during the installation process, you are asked to remove industry-specific vertical solutions.

To remove industry-specific vertical solutions that are installed on the computer, select **Yes**. Otherwise, problems can occur when starting *Intellect* after update. *ACFA Intellect* modules are not removed such way. It is required to remove these modules manually before updating to avoid problems at start.

When prerequisites and drivers are installed, the dialog box of INTELLECT update is displayed.

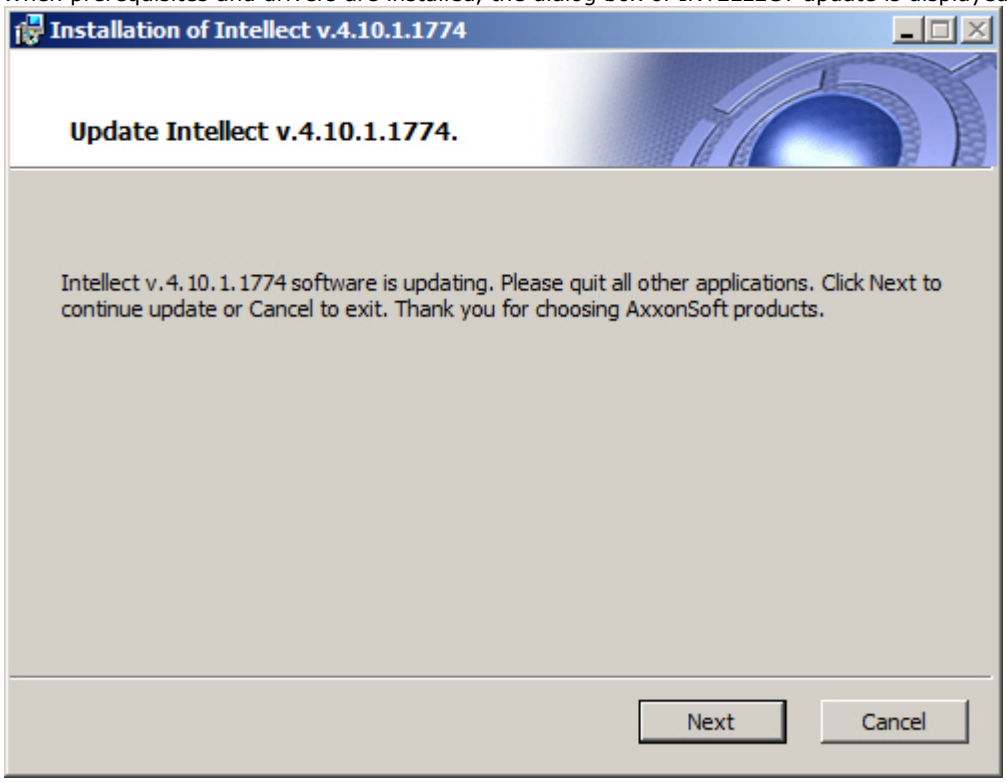

9. Click the **Next** button.
   The dialog box of the type of update is displayed.

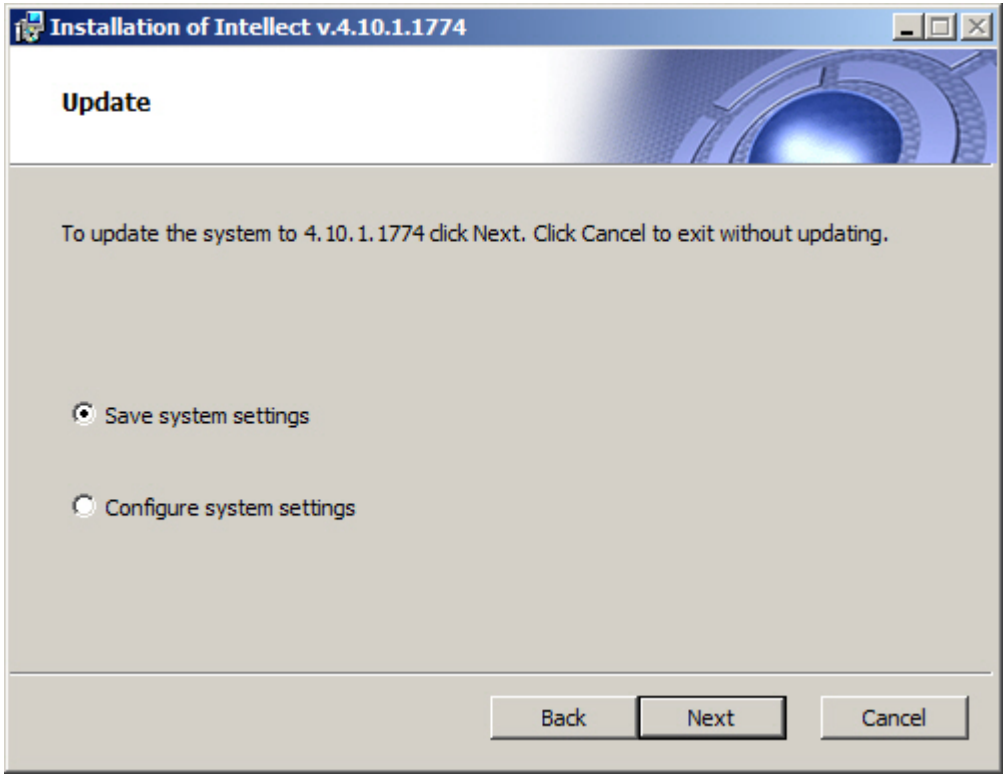

10. Select one of the offered types of update. The types of update are described in the table below

The types of update	**Description**
Save system settings	Use of settings chosen for installation of an earlier version
Configure system settings	Switch to step-by-step system configuration. Step-by-step configuration is described in "Installation of INTELLECT™ software as a Server" section.

11. Click the **Next** button.
When the system is configured, installation of INTELLECT™ software starts.

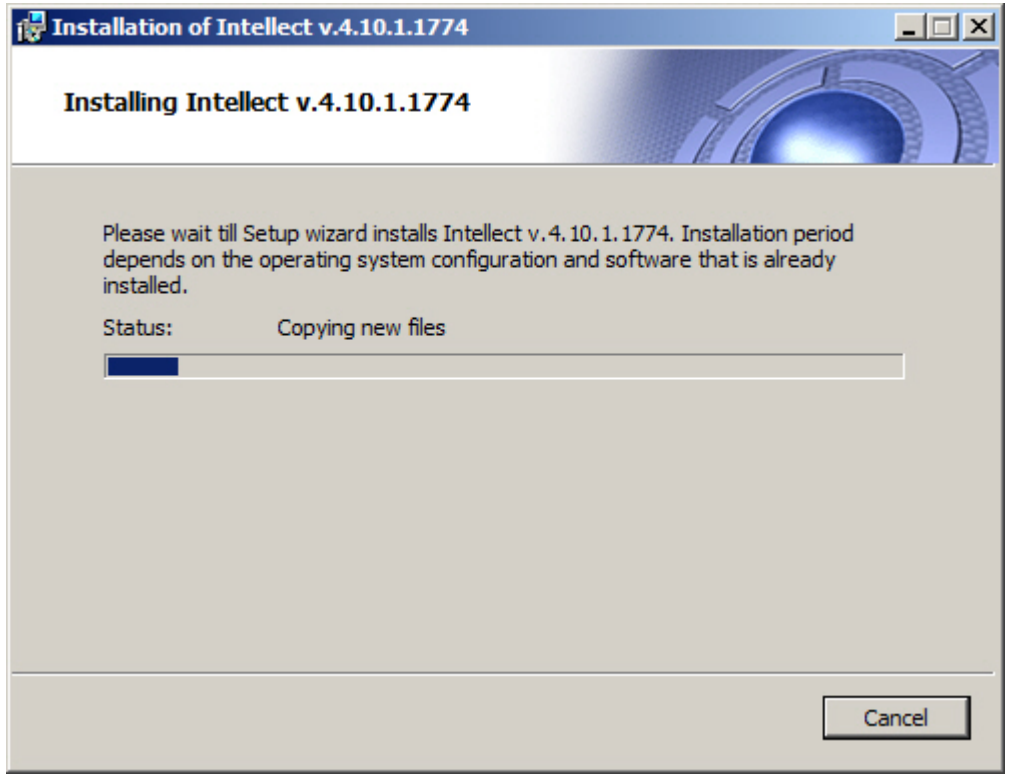

The **Software Installation** dialog box is displayed.

Note.
Error of driver installation for the FX4 card can occur while the *Intellect* software update on the Windows 7 SP1 operating system without Internet connection. To eliminate this error install the following missing Windows updates:

https://support.microsoft.com/en-us/kb/3004394

https://technet.microsoft.com/en-us/library/security/3033929

12. To continue installation, click the **Continue Anyway** button
As a result the **Update Complete** dialog box is displayed.

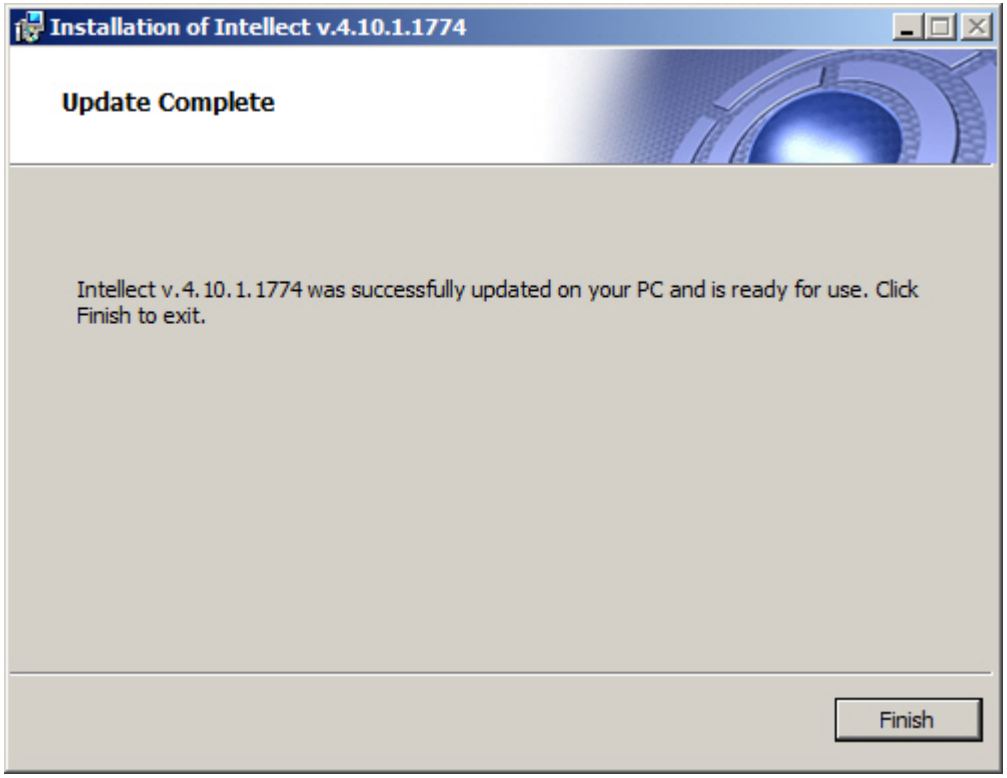

13. Click the **Finish** button.

> **Note.**
> Then the Axxon Driver Pack will be installed.

The **Installation complete** dialog box is displayed. It contains the information about INTELLECT components mode (installed or not).

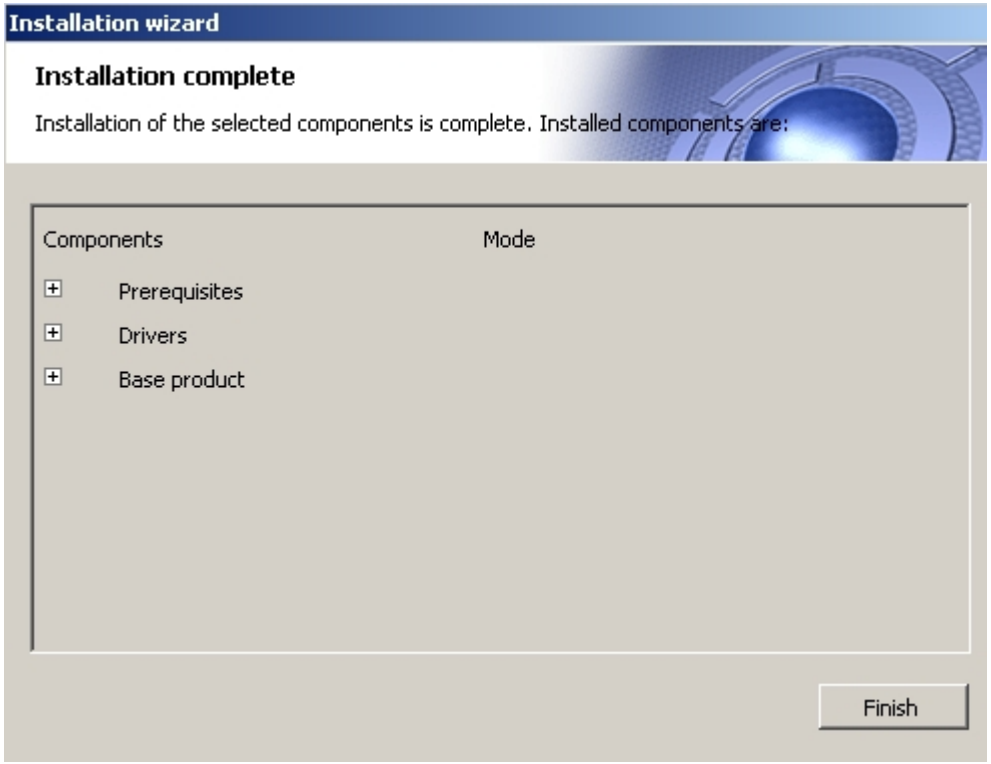

14. Click the **Finish** button.

The dialog box offering to restart the computer is displayed.

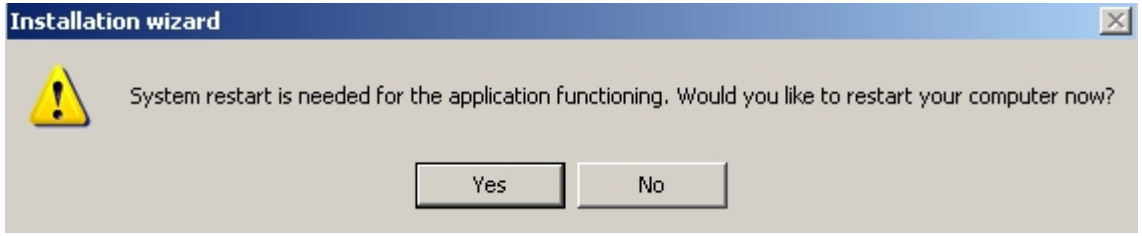

Note.
It is recommended to select the option of closing the program with computer restart.

INTELLECT software is now updated.

Using the Product.msi and Redist.exe for INTELLECT™ software installation

Besides running Setup.exe file for the the INTELLECT™ software installation, Product.msi and Redist.exe files can be used:

1. Product.msi is designed for INTELLECT™ software installation with step-by-step configuration of main parameters such as type of installation, installation directrory etc.

   Note.
   Product.msi is worth being used when all drivers, prerequisits and other components necessary for proper operation of INTELLECT™ being installed.

2. Redist.exe enables selection and installation of necessary components for INTELLECT™ operation (for example drivers, prerequisits and the very product).

The use of these files allows reducing installation time of INTELLECT™ software due to less steps during installation.

Repairing INTELLECT™ software

The repair mode is used to re-install all INTELLECT™ software components.

To launch repair mode, restart INTELLECT™ software installation from the installation CD, without deleting the previous version of the program.

Note.
To ensure that INTELLECT™ software is installed correctly all applications should be closed before the installation startup.

To repair INTELLECT™ software, do the following:

1. Insert the INTELLECT installation disk in the CD-ROM drive and display its contents in a separate window of your PC.

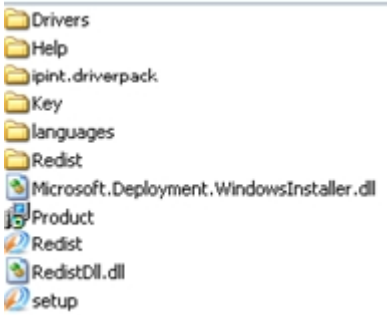

2. Run setup.exe file, designed for running the Intellect software install program.
   As a result the **Select Action** dialog box is displayed.

   Note.
   The following files may be run for repairing the Intellect software instead of *Setup.exe:*

   a. *Product.msi – to repair the INTELLECT™;*
   b. *Redist.exe – to install additional components.*

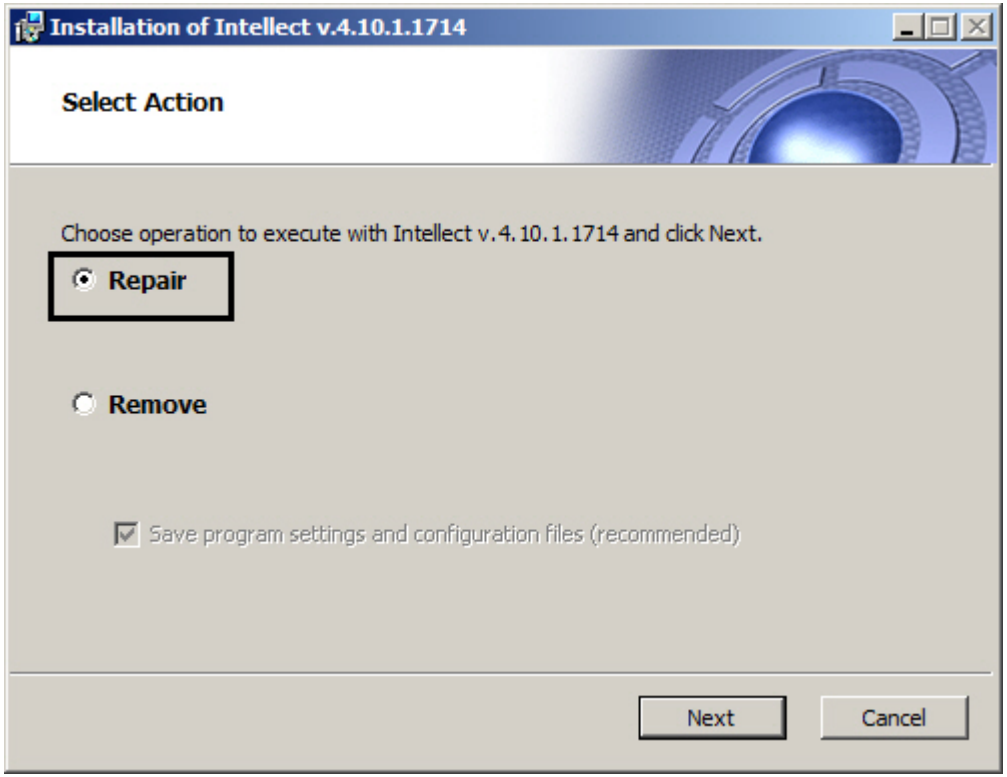

3. To select INTELLECT™ software components repair mode, select **Repair** installation type and click **Next**.
   The **Repairing Intellect** dialog box is displayed.

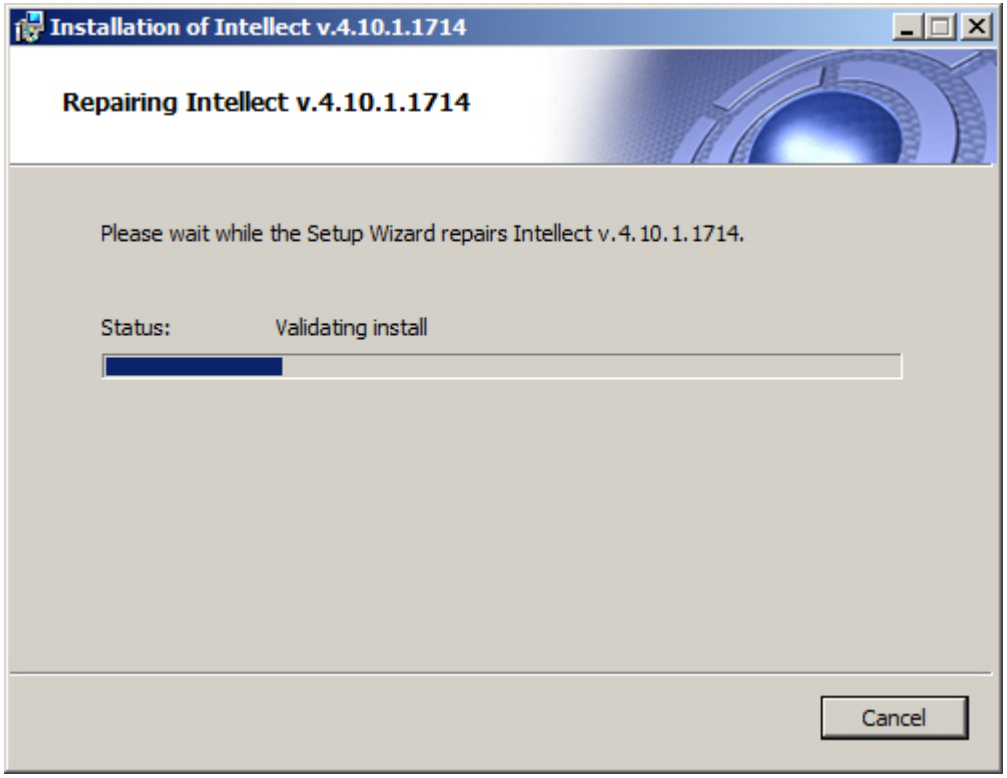

The **Software Installation** dialog box is displayed.

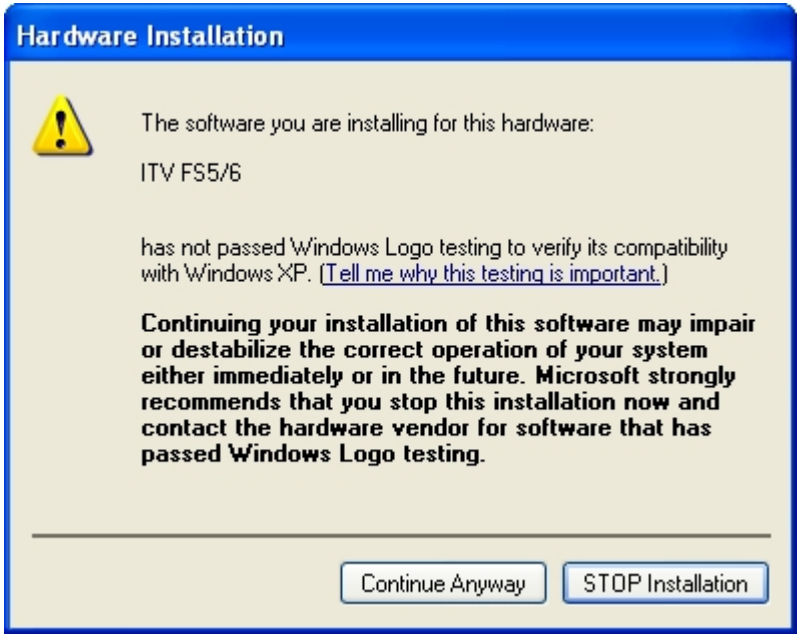

4. To continue INTELLECT™ software installation, click **Continue Anyway**.
   As soon as all files are copied, the **Repair Complete** dialog box is displayed.

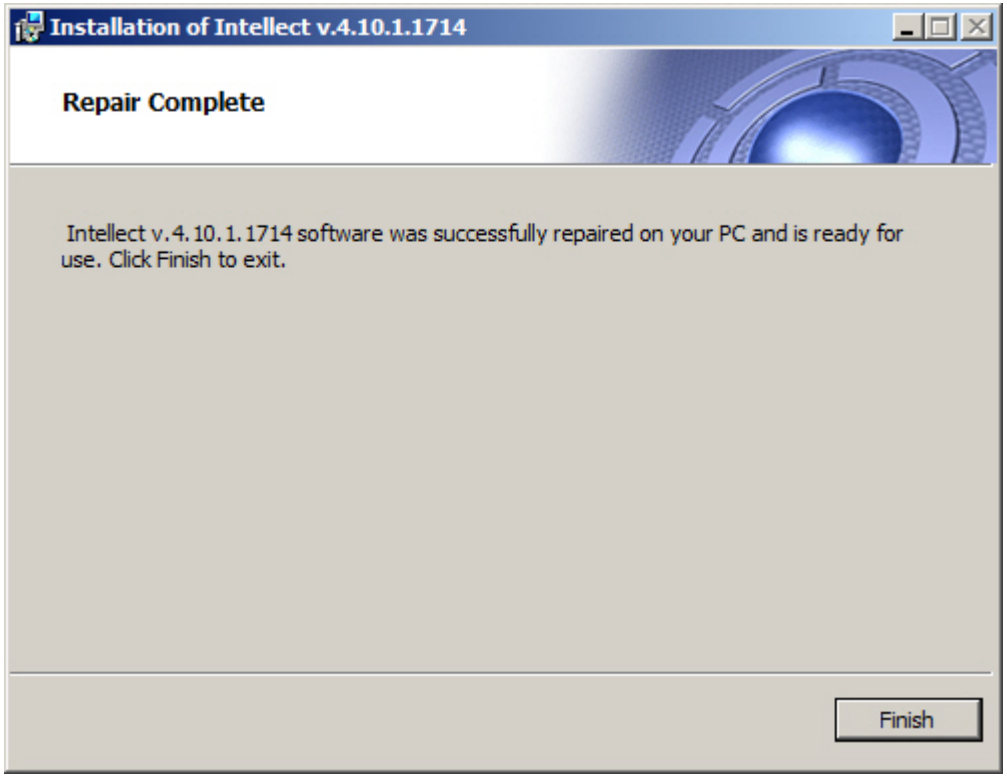

5. Click the **Finish** button.

INTELLECT™ software is now repaired.

Removing INTELLECT™ software

INTELLECT™ software installation program works in a deletion mode. This mode is required when all the components of the INTELLECT™ software should be deleted.

> **Note.**
> Before starting the deletion process of the *Intellect* software all the other applets should be closed on the computer.

The *Intellect* software removal process can be launched using one of the following ways:

1. Using the Start menu;
2. With the help of OS Windows panel «Add or remove programs»;
3. With the help of installation CD.

Removing INTELLECT™ software from the Start menu

To remove the Intellect software from the **Start** menu do the following:

1. In the command prompt select the following: **Start -> Programs -> Intellect** and then **Uninstall** in the drop down list, as shown in the figure.

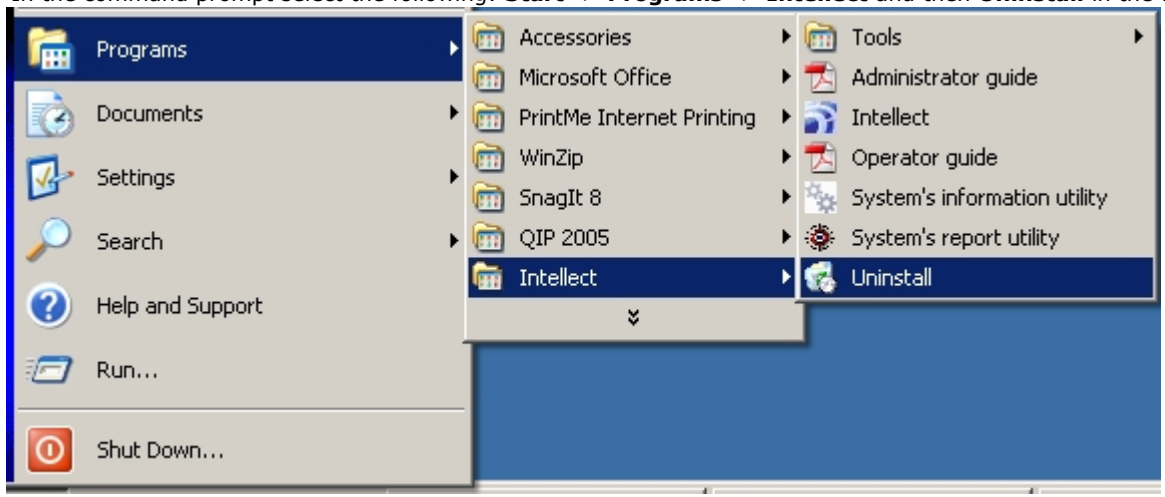

As a result the **Select Action** dialog box is displayed.

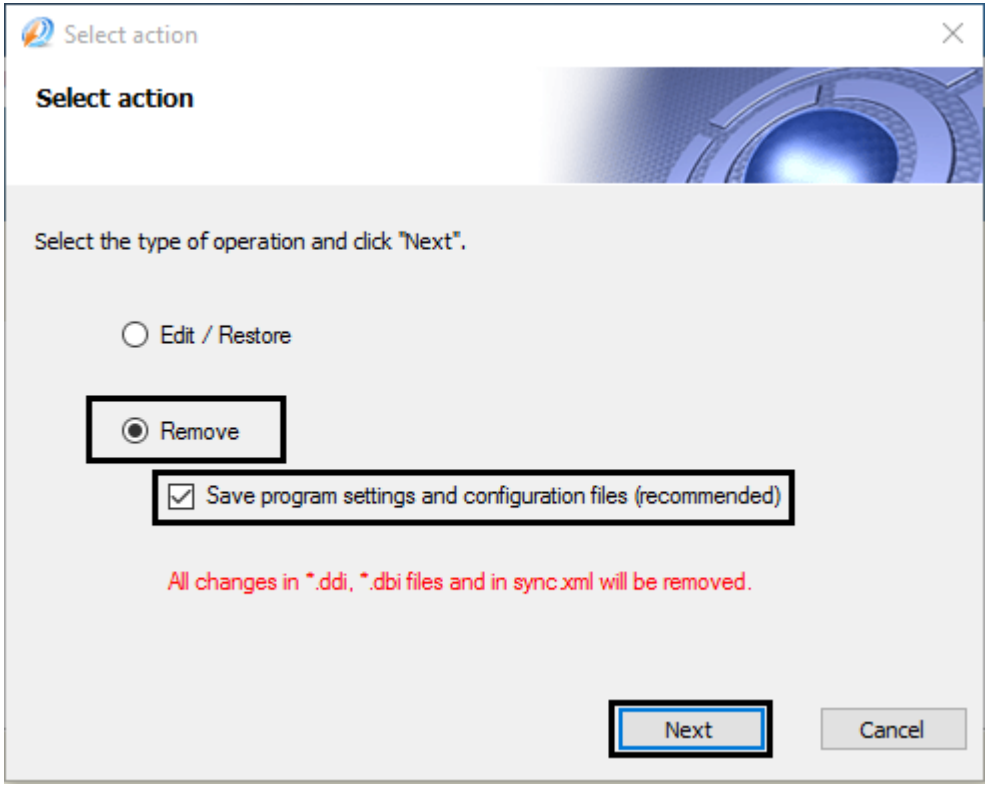

2. Select the **Remove** type.
3. If INTELLECT™ software settings are to be saved in the database, set the **Save program settings and configuration files (recommended)** checkbox.

> **Note.**
> If the "sync.xml" file was changed, then after removing with saving of the configuration it will not be deleted, but the next time you install INTELLECTTM software it will be overwritten.
> If using the ddi.exe utility the user has changed ddi or dbi files install along with *Intellect* software, then these files will be deleted when removing with saving of the configuration. If the user has created new ddi or dbi files, they will be saved.

4. Click the **Next** button.

> **Note.**
> Click the **Cancel** button to interrupt INTELLECT™ software removing.

The dialog window displaying the removing of INTELLECT™ software will be displayed.

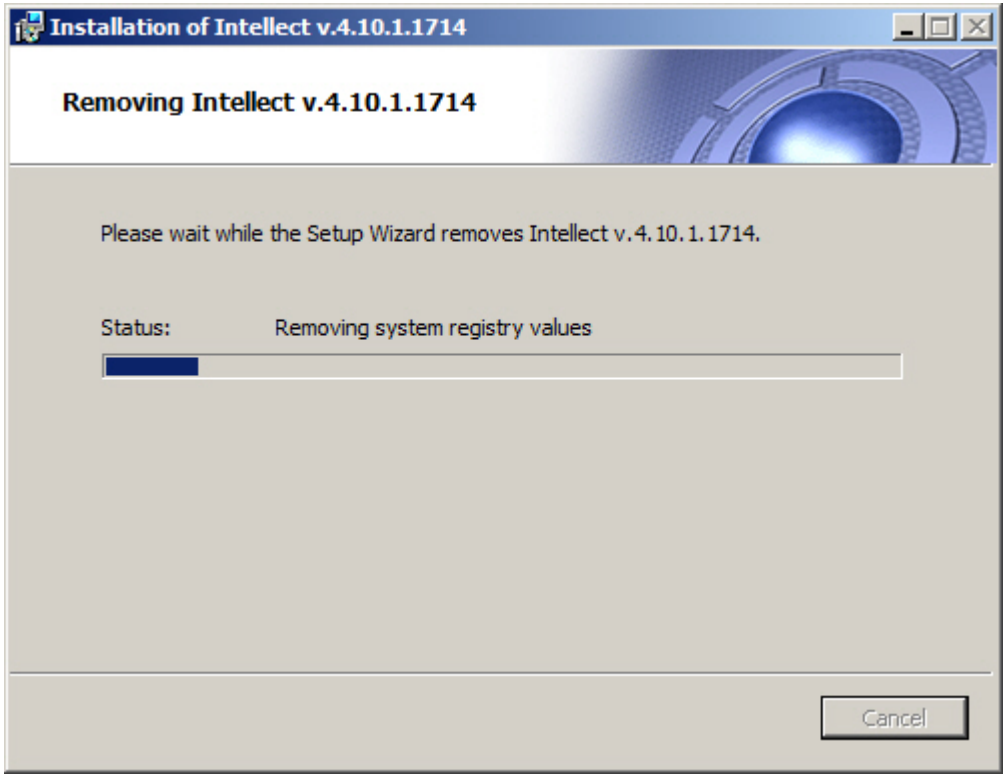

After removing the files, message, informing about the removing of INTELLECT^{TM} software will be displayed.

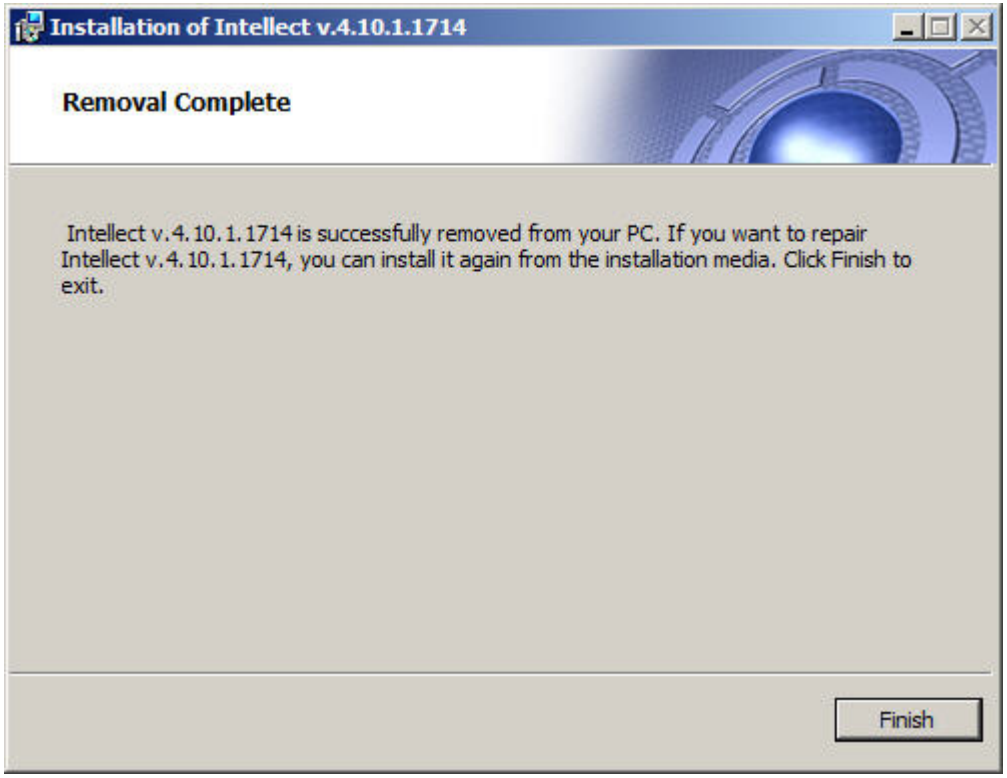

5. Click the **Finish** button.

Note.
For complete deletion of INTELLECT™ software files delete the installation catalog and all the created Video folders for storing the audio and video recordings manually.

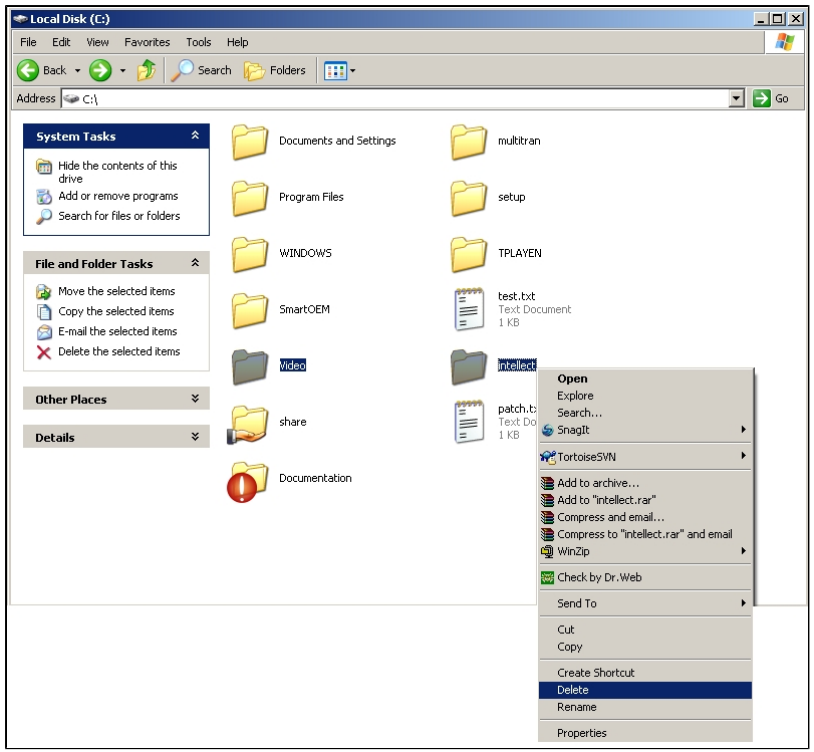

Note.
Please take into consideration, that the name of the INTELLECT™ software installation folder may differ from the default name (C:\Intellect).

Note.
In certain cases, Windows OS should be restarted before the INTELLECT™ software installation folder is deleted (for instance, Folders/Intellect).

Note.
We do not recommend deleting the INTELLECT™ software installation folder, if you need to re-install INTELLECT™ software. The folder contains:

1. folders with video records and frames of video records exported during INTELLECT™ software operation;
2. log files containing the information about INTELLECT™ software module operations;
3. backup copies of these files.

At this stage the deletion process of Intellect software from the **Start** menu is over.

Removing INTELLECT™ software from the OS Windows panel Add or Remove programs

To uninstall Intellect™ system using A**dd or Remove Programs** facility, follow the next steps:

1. Open the **Control Panel** window, selecting in the command prompt: **Start ->Settings ->Control Panel**.

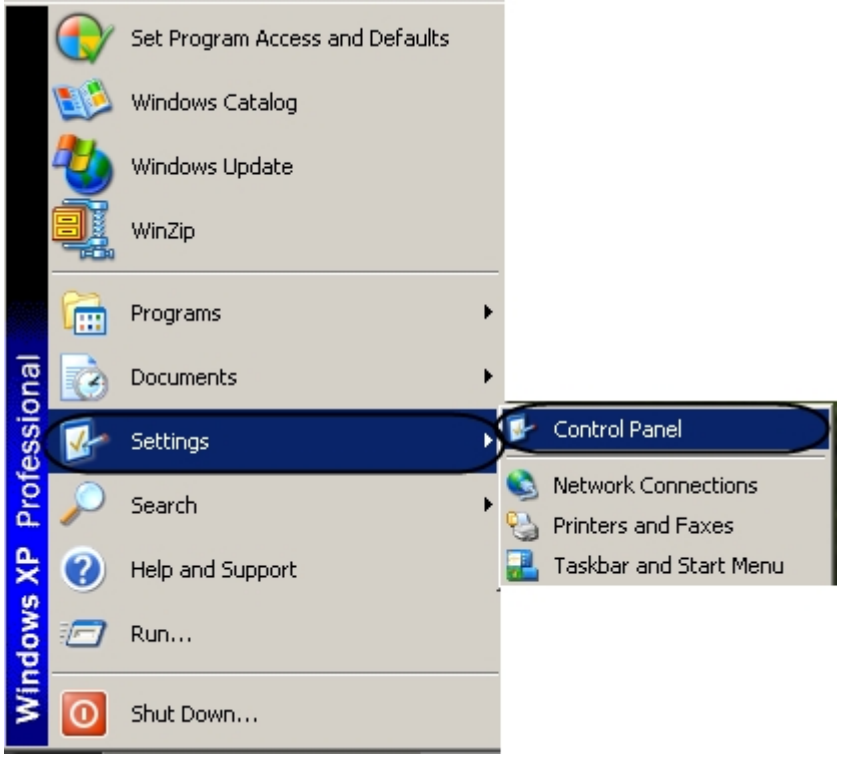

2. Control panel dialog window will be displayed.
3. Select **Add or Remove Programs** facility in the **Control Panel** window.

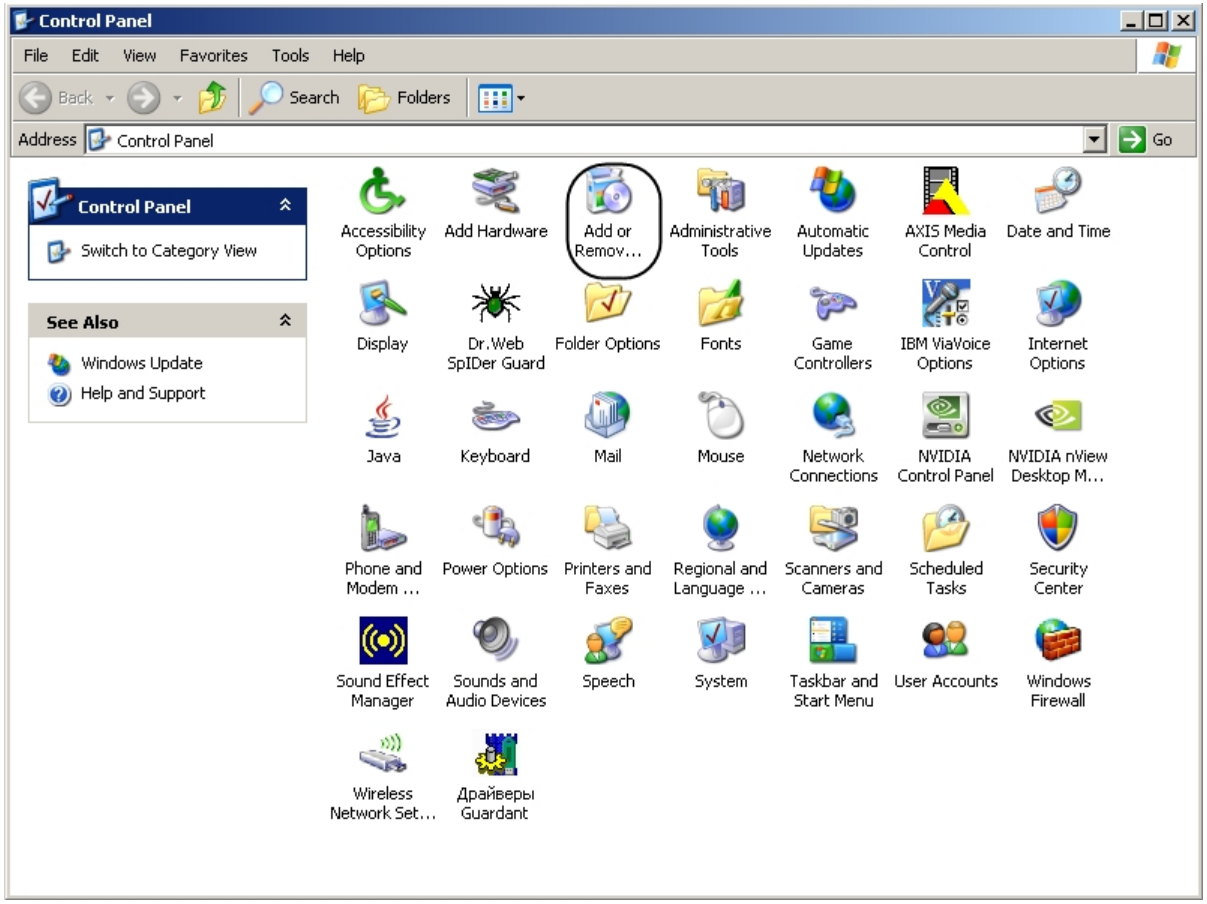

Find the *Intellect* in the **Add and Remove Programs** window.

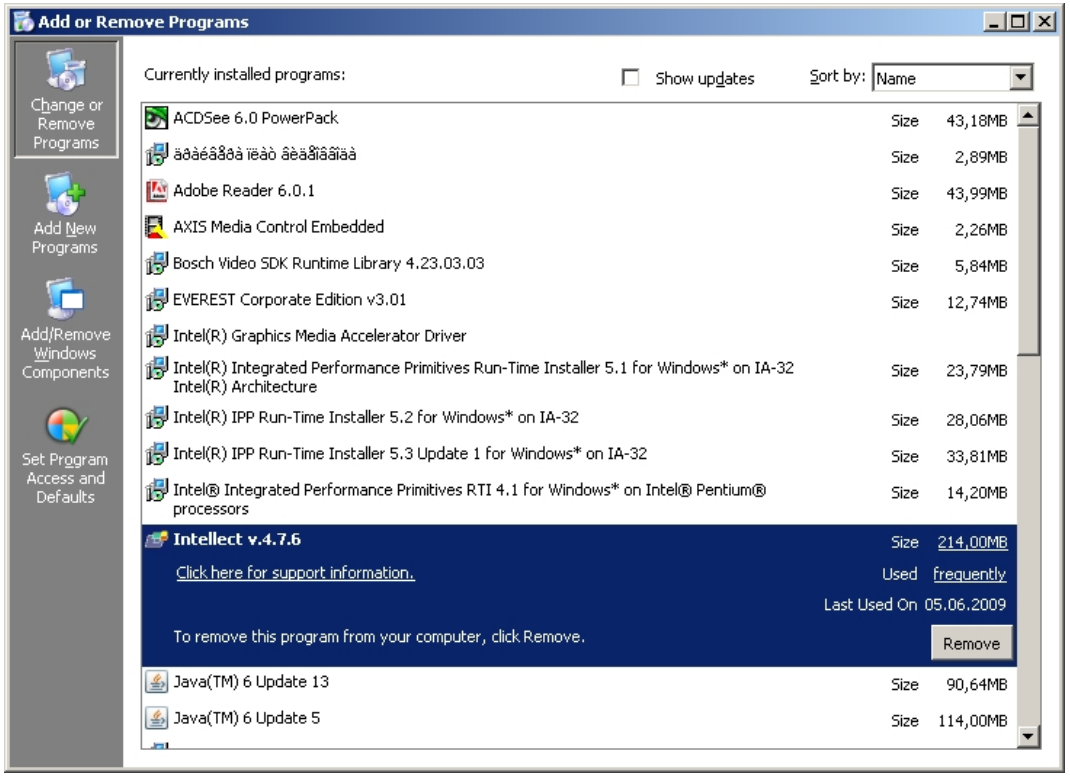

4. Click the **Remove** button next to the name of Intellect program.
   As a result the **Select Action** dialog box is displayed.
5. Follow steps 2-5 of the instruction in section Removing INTELLECT™ software from the Start menu.

At this stage the deletion process of Intellect software with the help of OS Windows **Add or Remove program** panel is over.

Removing INTELLECT™ software with the help of installation CD

Installation program *Intellect* works in a deletion mode. This mode is required when all the components of the *Intellect* software should be deleted.

Run the installation CD with *Intellect* software manually without removing the previous version to run installation program in a deletion mode.

> **Note.**
> Before starting the deletion process of the *Intellect* software all the other applets should be closed on the computer.

To delete Intellect software do the following:

1. Insert the INTELLECT installation disk in the CD-ROM drive and display its contents in a separate window of your PC.

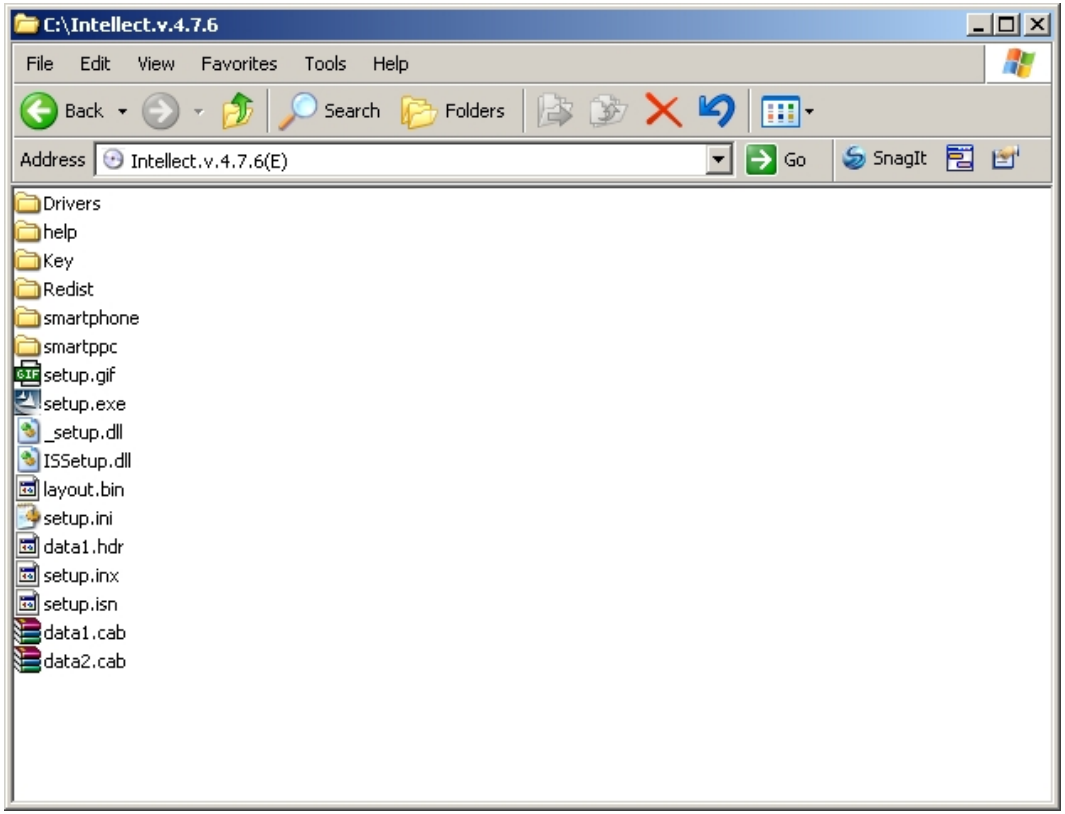

2. Launch the file Setup.exe
   As a result the **Select Action** dialog box is displayed.
3. Follow steps 2-5 of the instruction in section Removing INTELLECT™ software from the Start menu.

At this stage the deletion process of Intellect software with the help of installation CD is over.

Removing INTELLECT™ software installed as a Service

To remove *Intellect* software , installed as a Service, do the following:

1. Insert the INTELLECT installation CD in the CD-ROM drive and display its contents in a separate window of your PC.

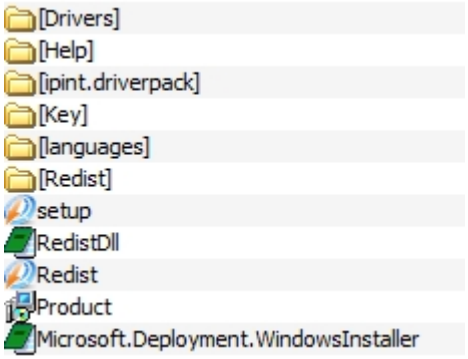

2. Run setup.exe .
   As a result the **Select Action** dialog box is displayed.
   When *Intellect* works it will be automatically logged off.

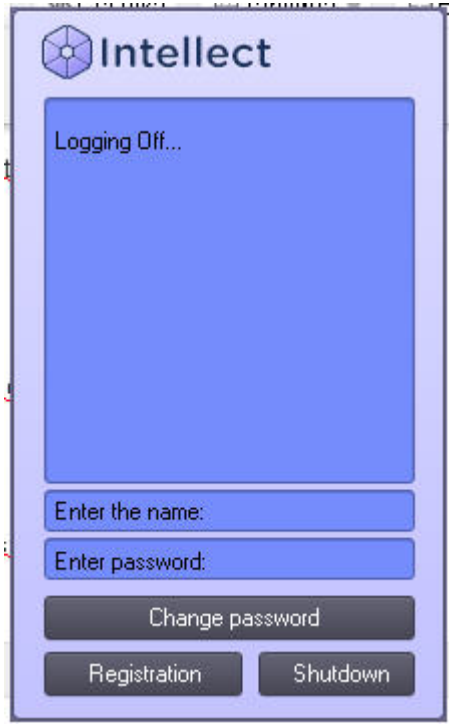

3. Follow steps 2-5 of the instruction in section Removing INTELLECT™ software from the Start menu

At this stage the deletion process of *Intellect* software, installed as a Service, with the help of installation CD is over.

Installing INTELLECT™ software in a silent mode

There is possibility to run the *Intellect* software in a silent mode (without user interface).

Note.
While installation program operation it may be required to restart the system. The installation will be continued automatically after the system is restart.

Note.
When installing in invisible mode on Windows 7 and Windows Server 2008 R2, all Windows Update updates are to be installed, then use HotFix available at link on the Microsoft website or here. As a result, there will be no messages about the unreliable publisher during the installation of drivers.

The redist.exe process finish in Windows task manager indicates that the program has been installed.

This installation type is performed by setting setup.exe install file parameters in the OS Windows command prompt. The install file parameters are given in the table below.

The install file parameter in the command prompt	Description
/?	Help window call
/help	Help window call
/x	The Intellect software deletion saving the configuration
/removeall	The Intellect software deletion without saving the configuration
/uninstall	The Intellect software deletion saving the configuration
/r	The Intellect software repair
/repair	The Intellect software repair
/qn	The Intellect software installation
/quiet	The Intellect software installation
/norestart	Disabling the auto restart of the system while it is being installed
/LANG=”ru”	Russian language selection of installation program
/LANG=”en”	English language selection of installation program
/INSTALLTYPE="Client"	Selecting the **Monitor workstation** installation type
/INSTALLTYPE="Server"	Selecting the **Server** installation type
/INSTALLTYPE="Admin"	Selecting the **Admin workstation** installation type
/ADD="[]"	A list of components necessary for installation. Is used if a component that is not installed by default is to be installed. Possible values are given in the next table.
/REMOVE="[]"	A list of components that are not to be installed. Possible values are given in the next table

/CMD="[commands]"	Values of functions for basic installation program. Where commands mean [Function] =\"[Value]\" or [Function] ='[Value]'. Available functions of installation program are given in the last table in the section.
/debug	Enable verbose logging.
/noOSCheck	Supress checking OS version
/dpcmd="INSTALL_BOSCH_VIDEOSDK=\"no\""	Installation of Bosch VideoSDK driver (see Note): no – do not install; yes – install.

Important!
In some cases **Bosch VideoSDK** installation results in displaying of the command prompt window which must be closed in order to proceed with the installation.

Note.
In the help window of installation program there are two examples identical in functional which differ by type of parameter's entering /CMD (table above, parameter's value /CMD).

Possible values of /ADD and /REMOVE parameters:

Architecture x86	Architecture x64
BaseIntellect	BaseIntellect
IPDriverPack_x86	IPDriverPack_x86
-	IPDriverPack_x64
Acrobat	Acrobat
dotnetfx35_x86	dotnetfx35_x86
JRE_x86	JRE_ amd64
MsXml	MsXml
Redist2005_x86	Redist2005_x86
SQLServer_x86	SQLServer_ amd64
WindowsInstaller_x86	WindowsInstaller_ amd64
WindowsPowerShell20_x86	WindowsPowerShell20_x amd64
Guardant_x86	Guardant_ amd64
Dotnet40	Dotnet40

Redist2010_x86	Redist2010_x86
-	Redist2010_x64
ReportViewer	ReportViewer

Installation program features:

Installation program features	Description
CREATE_QUICKLAUNCH_SHORTCUT='1'	Create quick launch shortcut (is used by default)
CREATE_QUICKLAUNCH_SHORTCUT='0'	Do not create quick launch shortcut
CREATE_DESKTOP_SHORTCUT='1'	Create shortcut on the desktop (is used by default)
CREATE_DESKTOP_SHORTCUT='0'	Do not create shortcut on the desktop
ADDLOCAL='[]'	A list of components for installation. Available values : 1) Utils – the utilities included in the Intellect system are installed 2) AxxonSoft VideoDrivers – drivers by AxxonSof company are installed; 3) Wav – sound notification files are installed. All the components are installed without ADDLOCAL='[]' command. Example. ADDLOCAL='Wav' – Intellect system and sound notification files are installed.
REMOVE='[]'	A list of components that are not to be installed. Available values: 1) Utils – the utilities included in the Intellect system are not installed; 2) AxxonSoft VideoDrivers – drivers by AxxonSoft company are not installed; 3) Wav – sound notification files are not installed. All the components are installed without REMOVE='[]' command. Example. REMOVE ='Utils' – Intellect, divers and sound notification files are installed. The utilities are not installed.
Functions of the “Server” and “Admin workstation” installation types	
INSTALL_AS_SERVICE='1'	Installation as a service
PATHTOKEYFILE='[%SourceDir%]'	Specify the path to the Key folder with license key
LANGUAGE='[en]'	Select the language of the Intellect system

SQL_AUTHTYPE='Windows'	Selecting the ”Windows accounts” user authentication method
SQL_AUTHTYPE='Sql'	Selecting the “SQL authentication” user authentication method
SQL_USERNAME='[sa]'	Setting the user name for the “SQL authentication” method
SQL_PASSWORD='[]'	Setting the password for the “SQL authentication” method
General functions:	
DB_INTELLECT_NAME='[intellect]'	Specifying the main database. It is not relevant when SQL_AUTHTYPE='Windows'
DB_TITLES_NAME='[titles]'	Specifying the titles database. It is not relevant when SQL_AUTHTYPE='Windows'
SQL_INSTANCE='[(local)\SQLEXPRESS]'	Specifying the database server. It is not relevant when SQL_AUTHTYPE='Windows'

Example of running the Intellect system installation program in a hidden mode:

setup.exe /quiet /LANG="ru" /INSTALLTYPE="Admin" /REMOVE="Acrobat Guardant_x86" /CMD="CREATE_QUICKLAUNCH_SHORTCUT=\"0\" INSTALL_AS_SERVICE=\"1\" LANGUAGE=\"de\" SQL_AUTHTYPE=\"Sql\" SQL_USERNAME=\"username\" SQL_PASSWORD=\"pass\" SQL_INSTANCE=\"(local)\SQLEXPRESS2014\" DB_INTELLECT_NAME=\"intellectNew\" DB_TITLES_NAME=\"titlesNew\" INSTALLDIR=\"%ProgramFiles%\IntellectNew\" REMOVE=\"Wav,Utils\""

In result the installation file setup.exe will be run with following parameters:

1. Installation program will install the Intellect software in a hidden mode (/quiet);
2. Installation program language– Russian(/LANG="ru");
3. Installation type – «Administrator workstation» (/INSTALLTYPE="Admin");
4. The following components are not installed: Adobe Acrobat, Guardant drivers. (/REMOVE="Acrobat Guardant_x86");
5. Installation is performed with following features (/CMD=):
    a. Without creating the quick launch shortcut (="CREATE_QUICKLAUNCH_SHORTCUT=\"0\");
    b. The Intellect software is installed as a service (INSTALL_AS_SERVICE=\"1\");
    c. Language of installed Intellect software is German (LANGUAGE=\"de\");
    d. Authentication method – «SQL authentication » (SQL_AUTHTYPE=\"Sql\");
    e. Login – username (SQL_USERNAME=\"username\");
    f. Password – pass (SQL_PASSWORD=\"pass\");
    g. Database server – (local)\SQLEXPRESS2014 (SQL_INSTANCE=\"(local)\SQLEXPRESS2014\");
    h. Main database– intellectNew (DB_INTELLECT_NAME=\"intellectNew\");
    i. Titles database – titlesNew (DB_TITLES_NAME=\"titlesNew\");
    j. Installation path - %ProgramFiles%\IntellectNew (INSTALLDIR=\"%ProgramFiles%\IntellectNew\");
    k. Utilities and voice notification files are not installed (REMOVE=\"Wav,Utils\").

Remote installation, removal and update of Intellect software

Remote installation, removal and update of *Intellect* software are performed using the wmic.exe utility of the command prompt. This utility is a part of Windows OS. Enter «wmic» without quotations in the Windows command prompt to run the utility.

Detailed information about this utility is presented in the http://msdn.microsoft.com reference web-site. At the time of writing this documentation the utility description is located on http://msdn.microsoft.com/ru-ru/library/aa394531.aspx.

Note.

The wmic.exe utility works incorrectly with VMWare virtual computers. The utility working with other virtual computers is not guaranteed.

It is required to disable UAC for wmic operation on the remote computer (instruction on disabling is presented in the OS settings for correct operation of Remote Admin Workstation or Server section).

The method of installation, removal and update described in this section is applicable for computers in the domain and for installation on computers outside the domain.

First copy the *Intellect* distributive to local disks of these computers.

For this use the following script of the command prompt:

xcopy %Path_to_folder_with_distributive% %Network_folder_on_target_PC% /e

Where:

%Path_to_folder_with_distributive% - path to the folder with distributives on the local computer.

%Network_folder_on_target_PC% - path to the folder on computer where the software installation is supposed. Access for writing is to be granted for it.

Attribute /e – causes the copying of all catalogues and their contents, including empty catalogues.

Note.
UNC-path is specified in the\\<server IP-address>\<General folder on this server>\... format.

Here dots define path from general folder to folder with distribution. If installation is performed on off-domain computers with specifying of server IP-address on which installation is performed. If installation is performed on computers in domain the address of server containing the folder with distribution available for all computers is specified.

Detailed information about working with the xcopy utility is presented on the Microsoft reference web-site. At the time of writing this documentation the utility description is located on http://technet.microsoft.com/en-gb/library/bb491035.aspx.

The method of installation described in this section allows installing and updating only basic product without prerequisites, drivers and other additional components.

Remote installation of Intellect software

To install the *Intellect* software on the remote computer, do the following command using the wmic.exe utility:

/NODE:"Computer_name" /USER:"User_name" /PASSWORD:"Password" productcallinstalltrue, "%installer parameters%", "%Path_to_folder_with_distributive%\Product.msi"

Where:

- /NODE –the target computer name on which the *Intellect* software is to be installed.

Note.
Instead of NODE list the text file in which names of target computers are listed in column can figure.

- /USER and /PASSWORD – login and password of user who has the corresponding rights for the *Intellect* software installation on the remote computer.
- "% Path_to_folder_with_distributive %\Product.msi" – path to the Product.msi installer file which is to be run, namely a local path to the folder in which the distributive was copied.
- %installer parameters% – installer options. The following parameters can be applied to the Product.msi:

1. which can be applied to all msi files (to get the reference execute the msiexec.exe /? command in the command line from the <WINDOWS>\system32\ directory).
2. parameters described in the setup.exe reference in the /CMD="[commands]" section (to get the reference execute the setup.exe /? command in the command line from the installer folder, all commands are described in the Installing INTELLECT™ software in a hidden mode section.
3. Parameters which are specified in the setup.exe while installation, i.e.:
    a. CMD_INSTALLTYPE – Client, Server, Admin.
    b. REMOVEALL (0, 1) – removing with/without configuration saving
    c. NOOSCHECK=1 – disable the check for compatibility with OS.

Note.
Working of specified parameters is not guaranteed if there is a thread in the registry:

- For x86 system: HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\InstallPropertyInfo
- For x86 system: HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ITV\INTELLECT\InstallPropertyInfo

It contains parameters of previous installation.

Example
Example of the line with installer parameters:

REBOOT=ReallySuppress LANGUAGE="ru" TRANSFORMS="%Path_to_folder_with_distributive%\Setup\ru\ru.mst" CMD_INSTALLTYPE="Server"

Where

REBOOT=ReallySuppress – cancel computer reboot when installation finished,

LANGUAGE="ru" – select the language of product. Default product language is English.

TRANSFORMS="% Path_to_folder_with_distributive %\Setup\ru\ru.mst" – specify path to the language mst-patch of installer (specify the installer language).

CMD_INSTALLTYPE="Server" specifies the type of the Intellect software package installation – Server. The “Admin” value is also available (if the Remote Administrator Workstation installation type is required) and “Client” (if the Remote Client installation type is required).

Remote update of Intellect software

For remote update of the Intellect software up to a newer version, install the new version as described in Remote installation of Intellect software section and specify the path to Product.msi for a newer version. In this case the old version will be automatically removed with configuration saving and the newer version will be installed.

Remote removal of Intellect software

For remote removal of the Intellect software, do the following command in the wmic.exe utility:

/NODE:"Computer_name" /USER:"User_name" /PASSWORD:"Password" product where name="Product_name" call uninstall

Where Product_name – name under which the Intellect software installed. It is usually «Intellect v.Build_number».

These names can be found in the catalogue in the HKEY_LOCAL_ MACHINE\Software\Microsoft\Windows\CurrentVersion\Uninstall section.

Configuring Cluster Service for Intellect

Cluster is a group of independent computers operating together as a whole system providing clients with a general set of services. Cluster enables expanding both accessibility of services and scalability and controllability of their OS.

To set up a cluster fot INTELLECT™, stick to the following rules:

1. INTELLECT™ is to be installed on all the computers forming the cluster;
2. INTELLECT™ configuration (paths to the installed INTELLECT™ software and video archive disks) is to be identical on all computers;
3. All computers, forming the cluster, are to be in one network domain;
4. All computers are to run one OS Windows Server;
5. If the Intellect software is installed as a service, the InheritServiceEnvironment registry key must be created and set to 1 (the key is created in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\IntellectRunService\ section for 32-bit and in the HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ITV\INTELLECT\IntellectRunService\ for 64-bit systems);
6. the specific name and password must be used for database connection.

Note.
Nets organization and setting up order are given in the Windows Server reference manual (see http://technet.microsoft.com/en-us/library/bb625087.aspx).

Example. Combination of two Servers to the cluster and the Intellect software configuration

On the page:

- Previous configuration of servers
- Combination of two Servers to the cluster and the Intellect software configuration

Previous configuration of servers

Before combination of Servers to the cluster, do the following:

1. Install the Windows Server of one of the following edition to both Servers:
   a. Windows Server 2008 R2 Enterpise
   b. Windows Server 2008 R2 Datacenter
   c. Windows Server 2012 R2 Standard
2. Add both servers to one domain.
3. Using the **Add Features Wizard** add the **Failover Clustering** feature to both servers.

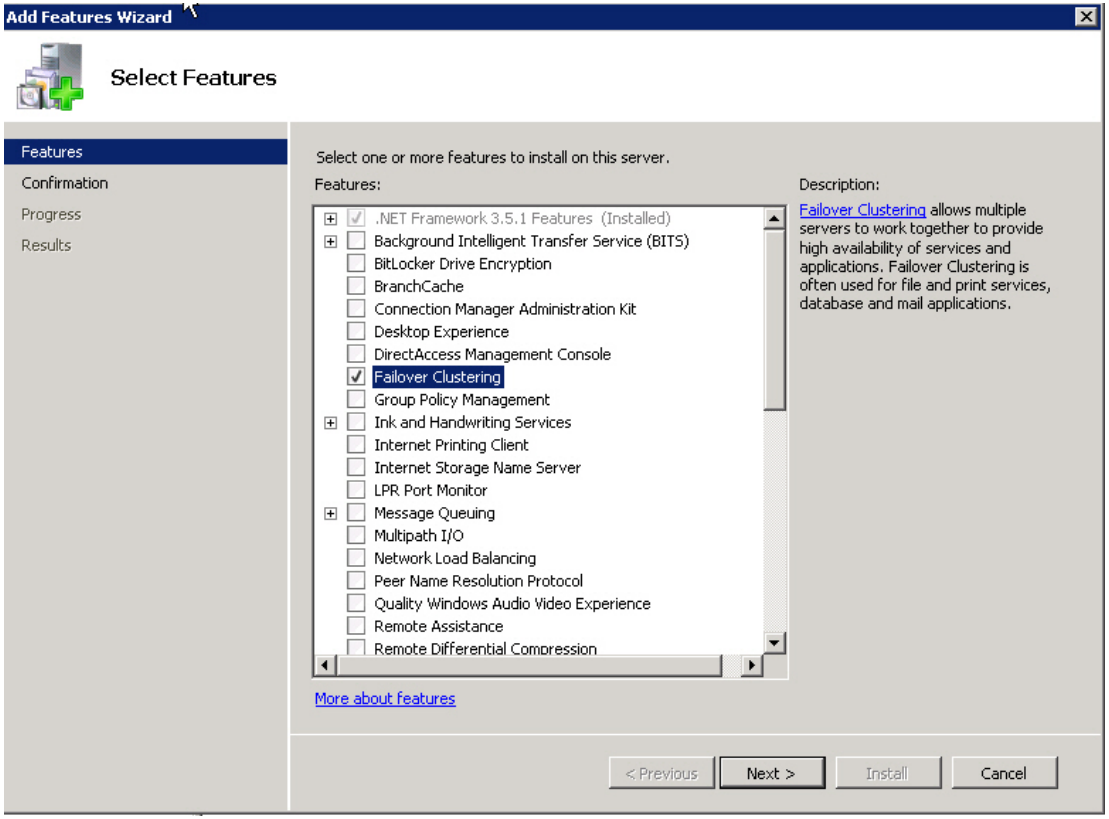

4. Enter the following parameter for the RAID supporting as a storage for cluster to the register:
   Location - HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\ClusDIsk\Parameters
   Name - AllowBusTypeRAID
   Type - DWORD
   Value - 1
5. Restart both servers.
6. Create three disks on the common RAID array:
   a. To work in quorum and to store the cluster configuration
   b. To store the Intellect database
   c. To store video archive
7. In the **Storage - Setup** menu set **Assignment Mode** in the **Multiple Assignment** position.
8. In the **Virtual Disks - Assign** menu set the **Full access** value for all servers.
9. Enter the **first server**. Start the disks control consol and initialize all three disks.
10. Switch over disks to online mode, create sections on all disks and format them.

11. Switch over disks to offline mode.
12. Enter the **second server** and initialize disks such way.

Combination of two Servers to the cluster and the Intellect software configuration

To combine two Servers to the cluster and configure the *Intellect* software, do the following:

1. Install the *Intellect* software of proper version on both Servers before combination them to cluster.
2. Set the ITV\INTELLECT\IntellectRunService\InheritServiceEnvironment parameter with the value 1 in the registry.
3. Stop **SQL Server (SQLEXPRESS)** and **ITV Intellect Core Server** services on both Servers and switch over them to the manual type of start.
4. Start the **Cluster failsoft executive program** on the one of servers (or remotely).
5. Select **Act - Create cluster**. The **Cluster creation wizard** will launch.
6. Add both servers which are supposed to use for the failsoft cluster.
7. Specify NetBios name and IP-address for the failsoft cluster (this data will be in use for connection of settings panel).
8. Complete the cluster creation.
9. Configure the role on cluster. Select **Add service - Generic Service** in the **High availability Wizard**.

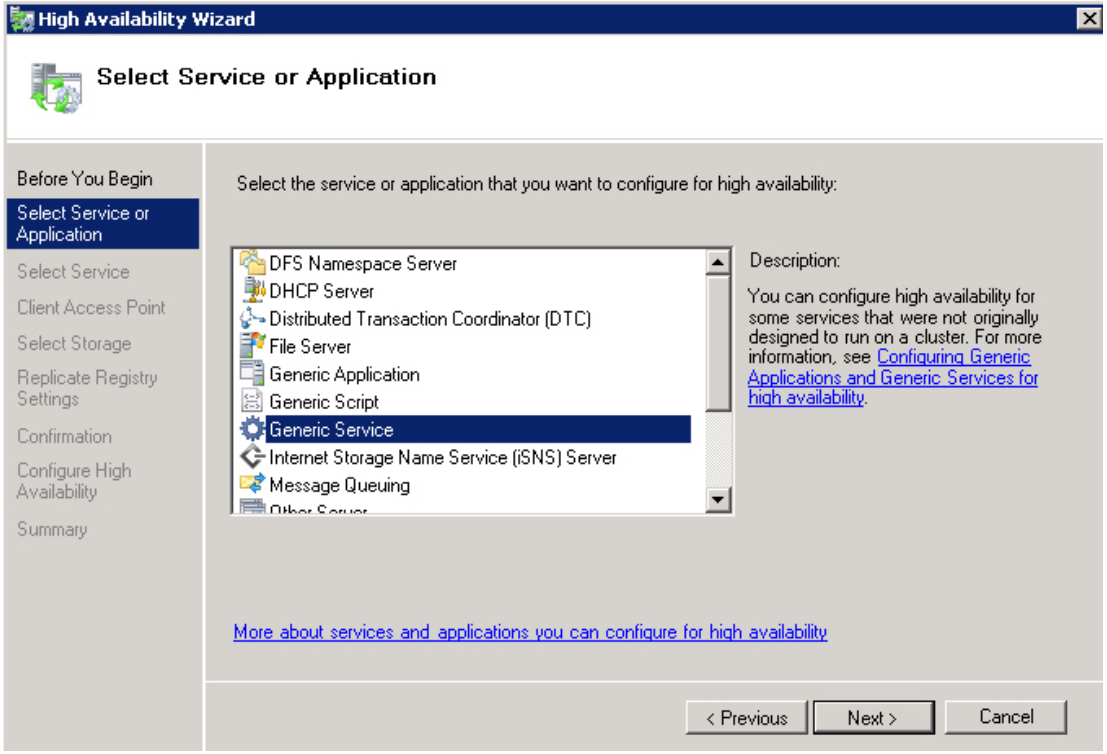

10. Select the **ITV Intellect Core Server** service.
11. Configure NetBios name and IP-address for the service (these parameters will be used for connection to the Intellect software).
12. Complete the role configuration.
13. Set the dependence on Name and IP-address on the **Dependence** tab in the settings of service.
14. Set the **Use network name for computer name** (the name will be transmitted in capitals apart of the registry in settings of cluster) checkbox on the **General** tab.

15. Go to the role settings and select **Add service - Generic Service**.
16. Select the **SQL Server (SQLEXPRESS)** service.
17. Complete the adding of service.
18. Select the **ITV Intellect Core Server** service and perform **Off the line** action.
19. Enter the Server which is specified as the Owner unit. Disconnect the Intellect database in SQL, replace database files on the disk of the failsoft array and connect the database again.
20. Set the user name and password for database connection in the idb.exe.
21. Start the Tweaki.exe and rename the computer to the name of failsoft cluster.
22. In the cluster setting select **Additional actions - Replace primary cluster resources - Select unit**. Specify the second Server.
23. In the SQL disconnect ald databases and connect new databases from the disk in failsoft array.
24. Change the user name and password for database connection in the idb.exe.
25. Start the **ITV Intellect Core Server** in the **Cluster failsoft executive program**.
26. Start the *Intellect* software. Ensure in the start accuracy.

Combination of two Servers to the cluster and the *Intellect* software configuration are completed.

License key

Functionality (configuration) of the system is restricted by the license key supplied together with the INTELLECT™ software installation package. Operations with the license files are described in the Installing and removing INTELLECT™ software section.

The license key activates the system functionality. Whenever the system configuration needs to be extended (for instance, where a subsystem, which is not included in the basic configuration, is required), to enable functionality of the program module corresponding to the subsystem which needs to be installed, the previous license key is to be replaced with a new one, which will restrict updated system functionality.

Replacement of the previous license key with a new license key initiates the updated set of functional subsystems when the system is reset.

In a distributed system the configuration of each computer depends not only on this computer's license key, but on the license keys of other computers in the distributed system. That is, the maximum functionality of each computer in the distribute system is limited by the license key of the computer with minimum capabilities. Thus, the same license key is recommended to be used on all computers in the distributed system.

The license key is bound to computer equipment. The bind to the equipment is performed by three means:

1. Binding to dallas-codes of video capture cards with cryptochip (FS5\6\8\16, WS7\17) of ITV | Axxonsoft production;
2. Binding to "Guardant" hardware keys;
3. Binding to computer equipment (HID).

License key is required when the *Intellect* software installing with the Remote Administrator Workstation or Sever installation type. If the Remote Client installation type is selected, the license key is not required.

Binding the license key to computer equipment

HID (Hardware ID) **–** is encrypted information about computer equipment which is gathered by CodeReader utility and is transferred to AxxonSoft for license key generation.

At the moment of writing the documentation the binding of following elements has been realized:

1. motherboard;
2. processor;
3. hard disk;
4. RAM;
5. video card;
6. netcard

Note.
Before releasing 4.8.3 version in INTELLECT™ the license key was generated using the information about other equipment. If the license key was generated for INTELLECT™ software of earlier version ,then its features are saved — see documentation about earlier versions https://doc.axxonsoft.com/confluence/display/ASdoc/AxxonSoft+documentation+repository

If main utilities of Server are replaced, then the licence is not active. For instance, simultaneous replacement of motherboard and processor will cause the license loss. However, simultaneous replacement, installation or deinstallation of hard disk, RAM, video card or netcard will not cause the key deactivation.

Match search in the license key

Codes match search in the license key with devices codes in the computer is performed in the following way:

1. Computer HID is read where the Intellect software is run.
2. License key is read.
3. For every computer, stated in the license key, the following actions are performed:
    a. If the computer in license key is bound via HID:
        i. If there are video capture cards manufactured by AxxonSoft company in the license key , the match search of board codes on the computer and board codes in the license key will be performed (if there is no match , the following computer in the key will be checked);
        ii. If there are no video capture cards manufactured by AxxonSoft Company in the license key, the match search of computer HID and computer equipment codes in the key will be performed (if there is no match, the following computer in the key will be checked).
    b. If the computer in license key is not bound via HID, the match search of video capture cards manufactured by AxxonSoft company on the computer and board codes in the license key will be performed (if there is no match , the following computer in the key will be checked).

If there is at least one match found the Intellect software will be run.

Features of the Intellect software operation when the object limit is exceeded

When the INTELLECT ™ software is started with the key and exceeded object limit, there is the message with the name of object because of which the limit is exceeded.

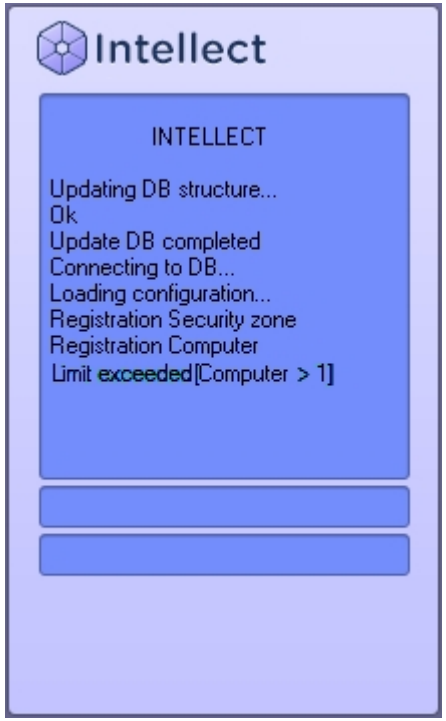

In this case to start the INTELLECT ™ software operation, do the following:

1. Forward the intellect.sec key from the INTELLECT directory to another folder, e.g. “D:\Temp”.
2. Run the INTELLECT ™ software in a demo mode.
3. Remove a redundant object.
4. Shutdown the INTELLECT ™ software.
5. Restore the key from the “D:\Temp” folder to the INTELLECT installation directory.
6. Start the INTELLECT ™ software.

If you try to add an object that is not provided by the key, there will be the message that current system configuration does not allow more than 1 object of this type.

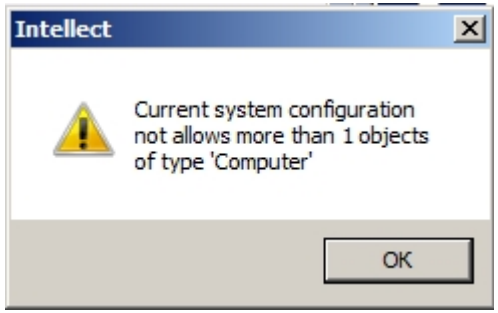

Moreover time of action of certain objects can be set in the intellect.sec license key. If the action of the objects expired, *Intellect* starts as usual, but the expired object is colored red in the hardware tree, and the INVALID_OBJECT_TIME event from this object comes to the Debug window.

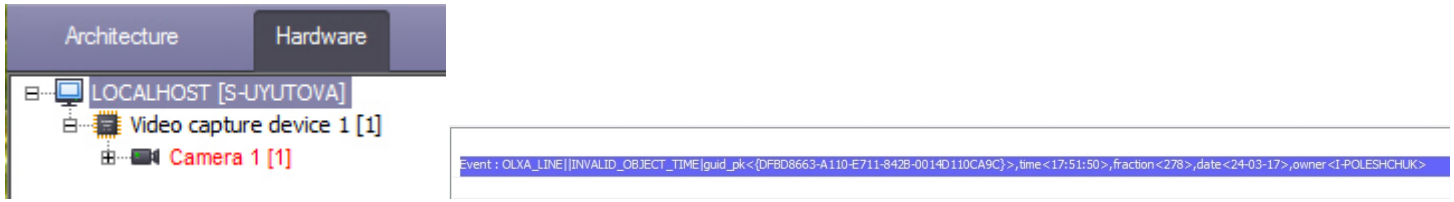

After the expiration of the object, it is impossible to use it in *Intellect*: it continues to be displayed in the object tree, but events are not received from it and it does not respond. Other modules cannot communicate with an expired object.

To resume work use of an expired object, connect ITV|AxxonSoft Manager in order to update the intellect.sec license key. If the object is no longer required, it can be deleted (see Deleting).

The time of action of the object can not be longer than the validity of the temporary key.

Decoding license key

It is possible to find out what objects and how many of them are available thanks to the activation key as well as hardware codes to which the key is bound.

For this do the following:

1. Go to https://sale.axxonsoft.com/
2. Select **Systems** - **Decoding**.

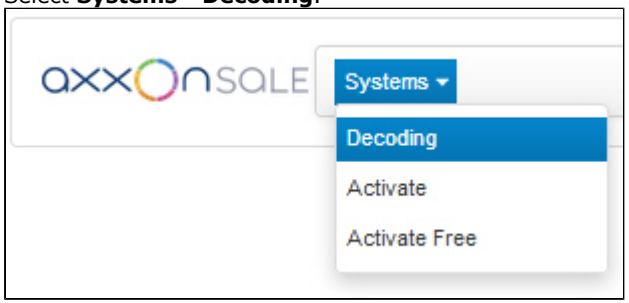

3. Add intellect.sec license file to the **File** form.

> **Note.**
> The license file is in the *Intellect* installation directory root, by default: C:\Program Files (x86)\Intellect\

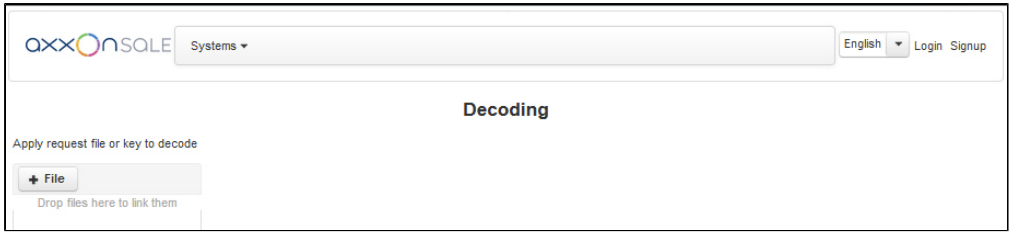

4. After adding the file, the information about available objects and hardware codes will be automatically displayed on the page.

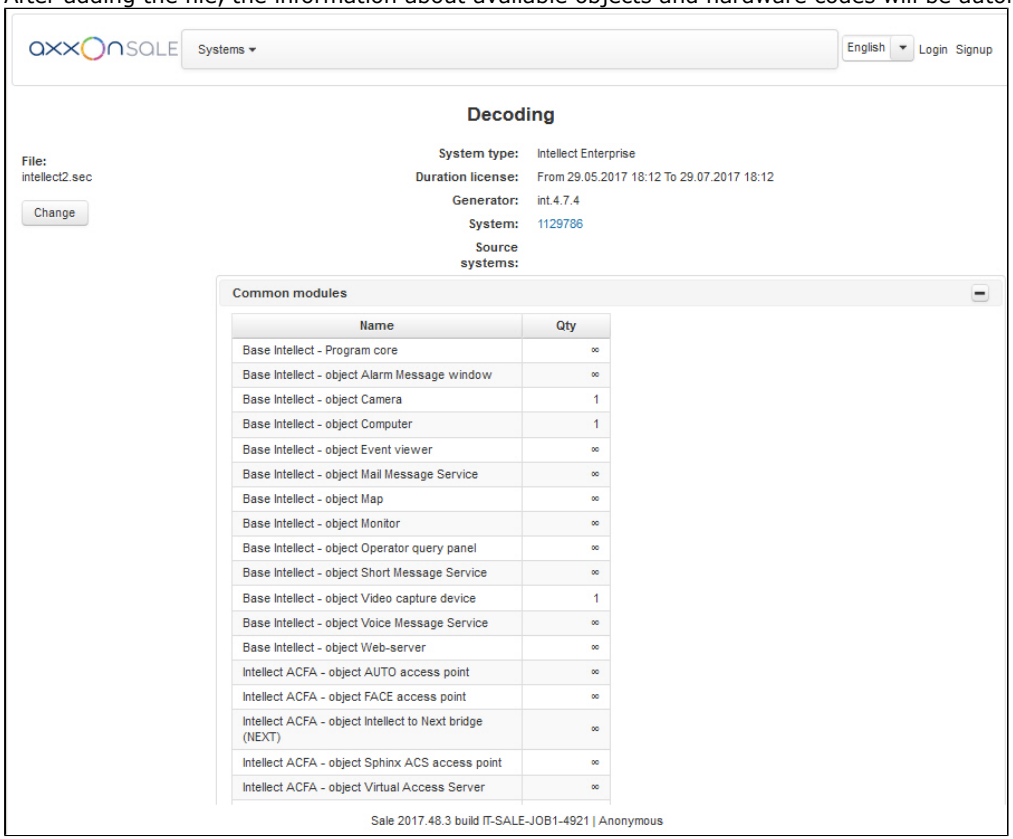

Configuring system startup and shutdown

Configuration of Intellect™ software startup

Possible options for Intellect™ software startup

Intellect™ software is launched in one of the following ways:

1. Manual launch;
2. launch from Windows OS Start menu;
3. launch from Windows OS command prompt;
4. automatic launch;
5. launch from Startup of the Windows OS;
6. launch with the PC switched on, without starting Windows OS;

Manual launch of *Intellect*™ software does not require additional settings. Automatic launch of *Intellect*™ software using one of the above methods, requires certain additional Windows OS settings. Windows OS settings are given in the corresponding sections of this chapter.

If the video surveillance system uses pre-defined rights and authorizations for the users, *Intellect*™ software launch starts with user authorization. Depending on the *Intellect*™ system settings, the following user authorization options are available:

1. By entering the login and password. In this case, when the system is launched, the user will be able to access only those functions of *Intellect*™ system, which comply with his rights and authorities.
2. Without entering any login and password. In this case *Intellect*™ system makes available only those functions, which comply with the rights and authorities of the default user.

By default, *Intellect*™ system authorizes a user through a password. To launch *Intellect*™ software without a password, an Operator should identify a user, whose rights and authorities will be used to launch the *Intellect*™ system. Procedures for identification of the default user are described in the Rights administration chapter.

Note.
If the *Intellect* software is installed as a service, and the user rights and privileges are not set, password authorization is required upon entering the *Intellect*. Otherwise the *Intellect* modules and services will not be launched.

Configuring Intellect™ system automatic startup from Windows OS Startup

Intellect™ software can be launched automatically from the **Startup** function, as soon as Windows OS services and shell start downloading.

To configure the *Intellect*™ system launch from the **Startup** function, the *Intellect*™ system icon should be placed in the **Startup** group of the **Start** menu.

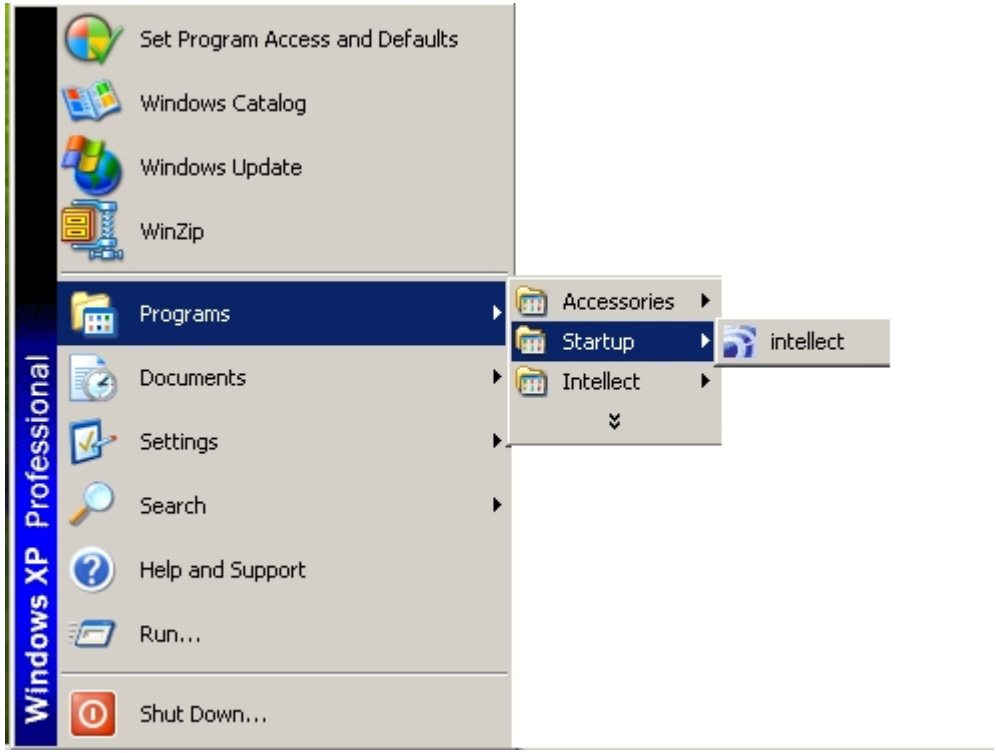

Important!
In **Windows 8.1** and **Windows 10** for the proper operation of the Startup function, create a registry key with an arbitrary name in the HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Microsoft\Windows\CurrentVersion\Run (if the OS is 64-bit) or HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Run (if OS is 32-bit).
The path to the executable file is to be specified as the key value, for instance: C:\Program Files\Intellect\Intellect.exe

Configuring Intellect™ system automatic startup bypassing standard Windows OS

Automatic start of *Intellect*™ system, instead of starting the standard Windows OS shell is used in cases, when access to the basic PCs of the video surveillance system need to be restricted: to prevent start of various applications, file copying and deletion, operations with Windows OS and other non-standard PC operations.

In cases where Startup is set for launching instead of Windows OS, the *Intellect*™ system will start downloading after Windows OS, instead of Explorer. This makes start of various applications installed in a PC, and operations with the program dialog boxes, inaccessible for a user.

Note.
Disable user account control (UAC) in the system settings for *Intellect*™ system automatic startup bypassing standard Windows OS 7/8/8.1. For that, *set to 0 the "Enable LUA"*

registry key in the HKEY_LOCAL_MACHINE\Software\Microsoft\Windows\CurrentVersion\Policies\System section.

Attention!
Configuration of the local security policy is required for full disabling of UAC in the Windows 8 and Windows 8.1 OS – see the OS settings for correct operation of Remote Admin Workstation or Server section.

To set up *Intellect*™ software automatic startup bypassing the standard Windows OS (Explorer), the following string parameters of the Windows OS registry are to be modified:

Registry section: HKEY_LOCAL_ MACHINE\SOFTWARE\Microsoft\ WindowsNT\CurrentVersion\.

Folder: Winlogon.

Parameter: Shell.

Default parameter value: Explorer.exe.

Required parameter value: entire path to the *Intellect*™ software startup file.

For instance, to set up *Intellect*™ system automatic start for configuration of the Server, the "Shell" parameter is to be identified as: "C:\ Program Files\Intellect\intellect.exe".

To set up *Intellect*™ system automatic start for configuration of the Remote Client, the "Shell" parameter is to be identified as: "C:\Program Files\Intellect\slave.exe".

If the rules of safety of distributed network, a part of which the configured PC is, require that the PC be authorized in the domain, Windows OS may be configured to start without requesting the name (login) and password of the user, who is registered in the domain of the distributed network. This procedure requires assigning a name (login) and a password of the user, which will be used for the PC authorization in the domain by default. To set up Windows OS start without user name (login) and password request, change the following string parameters of the Windows OS registry:

Registry section: HKEY_LOCAL_ MACHINE\SOFTWARE\Microsoft\ WindowsNT\CurrentVersion\.

Folder: Winlogon.

#	Parameter	Default parameter value	Required parameter value
1	AutoAdminLogon	0	1
2	DefaultUserName	One of the registered user names (logins).	User name (login) for authorization in the domain.
3	DefaultPassword	If parameter does not exist, it is to be created.	User name for authorization in the domain.

Registry parameters are edited either using the Tweaki.exe utility (recommended), or manually. Setup of *Intellect*™ system automatic startup with the Tweaki.exe utility is shown in Tweaki.exe utility for advanced setup of the Intellect software system.

Basic information required for manual system registry editing is outlined in the Working with Windows OS registry section.

Configuring Intellect™ system shutdown

The *Intellect*™ system is always closed manually. If the video surveillance system uses pre-defined rights and authorizations for the users, *Intellect*™ software should be closed by entering a user password.

Intellect™ system may be closed using the following options:

1. using an authorized user login and password
2. using an administrator password.
3. using an administrator password entered in the displayed administrator password request window.

Intellect™ system closure is configured at the stage of administration of user rights and authorizations, and is described in the corresponding sections of the Rights administration chapter..

Working with the System settings dialog box

General information about the System settings dialog box

The *Intellect*™ system is configured using the **System settings** dialog box.

The **System settings** dialog box is designed to configure and set up the digital components of the video surveillance system.

The **System settings** dialog box helps to solve the following key objectives:

1. creation and configuration of the system objects corresponding to the function modules (groups) of the *Intellect*™ system;
2. configuration of video surveillance and audio monitoring functions;
3. user interface configuration;
4. administration of user rights and authorizations.

The interface of the **System settings** dialog box is described in Description of the System settings dialog box.

Startup and shutdown of the System settings dialog box

Startup of the System settings dialog box

To start up the System settings dialog box follow the next steps:

1. Display the main control panel on the monitor. For this purpose, drag the mouse cursor to the upper left corner of the monitor.

2. Click **Run** and then select **System settings** in the appearing dropdown menu.

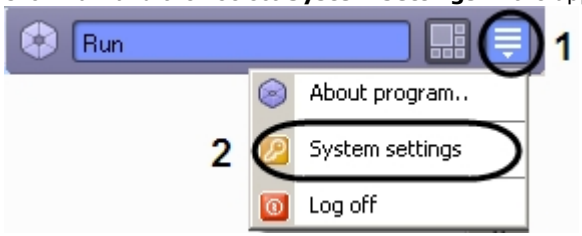

Note.

The **System settings** item is also available in the menu that appears on clicking the icon in the Windows notification area (system tray), or by short-time holding the

"hot" button F8.

Now you have the **System settings** dialog box displayed on the monitor.



Note.
The interface of the INTELLECT™ **Main Control Panel** is given in Appendix 1. Interface.

Attention!
While changing the screen resolution it is necessary to restart the *Intellect* software for dialog windows correct displaying.

Note.
In case of the **System settings** dialog window exceeds the bounds of the screen, use one of the following ways to solve this problem:

1. Set the font size 96 pixels per inch (the screen scale is 100%). To perform this operation, go to the **Control panel -> Appearance and personalization -> Settings of screen resolution**.
2. If the first way doesn't solve the problem, use settings_height and settings_width registry keys and specify the height and width of the **System settings** dialog window in pixels (see the Registry keys reference guide).

Note.
If captions are displayed incorrectly in the interface because there is no such font in the system, then install the font located in the Redist\Font folder. Information on how to install fonts in Windows up to 7 can be found at https://support.microsoft.com/en-us/help/314960/how-to-install-or-remove-a-font-in-windows.

On Windows 8, Windows 8.1, Windows 10 fonts are installed in the other way:

1. Select **Run** in the **Start** menu.
2. Enter the following command:
   %windir%\fonts
3. Click **OK**.
4. Copy or move font files to the folder opened.

Shutdown of the System settings dialog box

To exit the **System settings** dialog box, select **Run** in the **Main Control Panel**, or in the Windows notification area (system tray), or by short-time holding the "hot" button F8, and then select **System settings** in the appearing dropdown menu, which will already be checked.

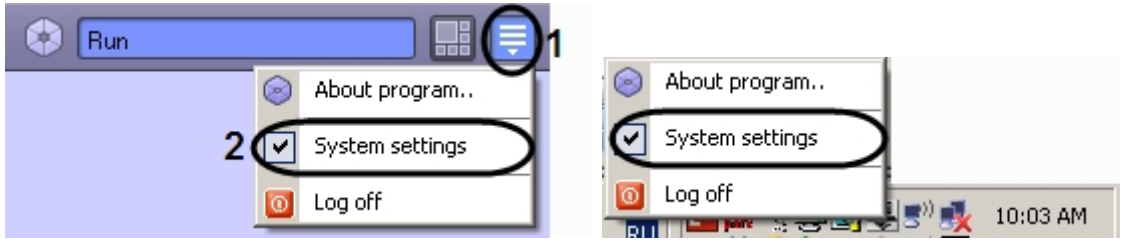

The **System settings** dialog box will be closed after repeated selection of the **System settings** in the menu.

Setting procedure for system objects

On the page:

- Select an object.
- Create an object.
- Editing.
- Deleting.
- Changing the parent object.
- Copying objects

Configuration of *Intellect*™ system objects generally includes the following stages:

1. ## Select an object.

   To select an object, do the following:
   a. open the **Hardware** tab containing objects tree;

b. select an object in the objects tree.

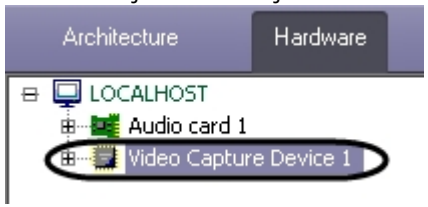

2. **Create an object.**

To create an object, do the following:

a. open the **Hardware** tab containing objects tree;

b. select a parent object in the objects tree, which should be used as a basis for the creation of a daughter object;

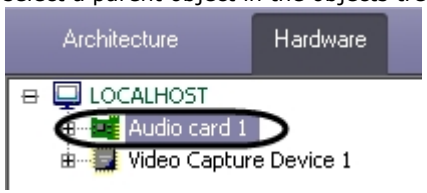

c. display the context menu by clicking the right mouse button and select **Create object**;

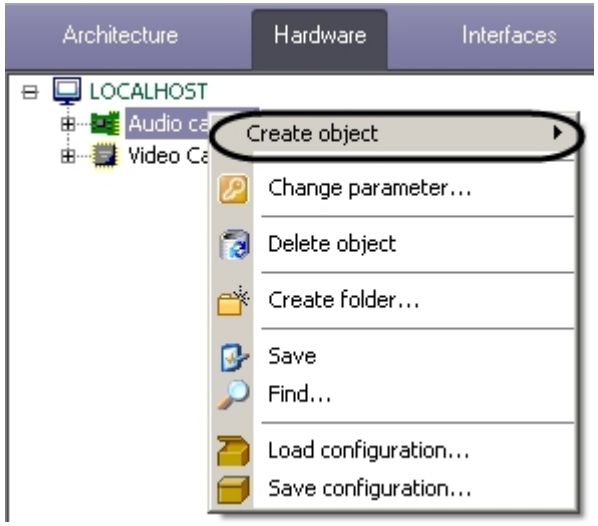

d. select the type of a new object using the corresponding second level menu;

As a result of the above operations, the object settings panel will display an identification panel for the new object.

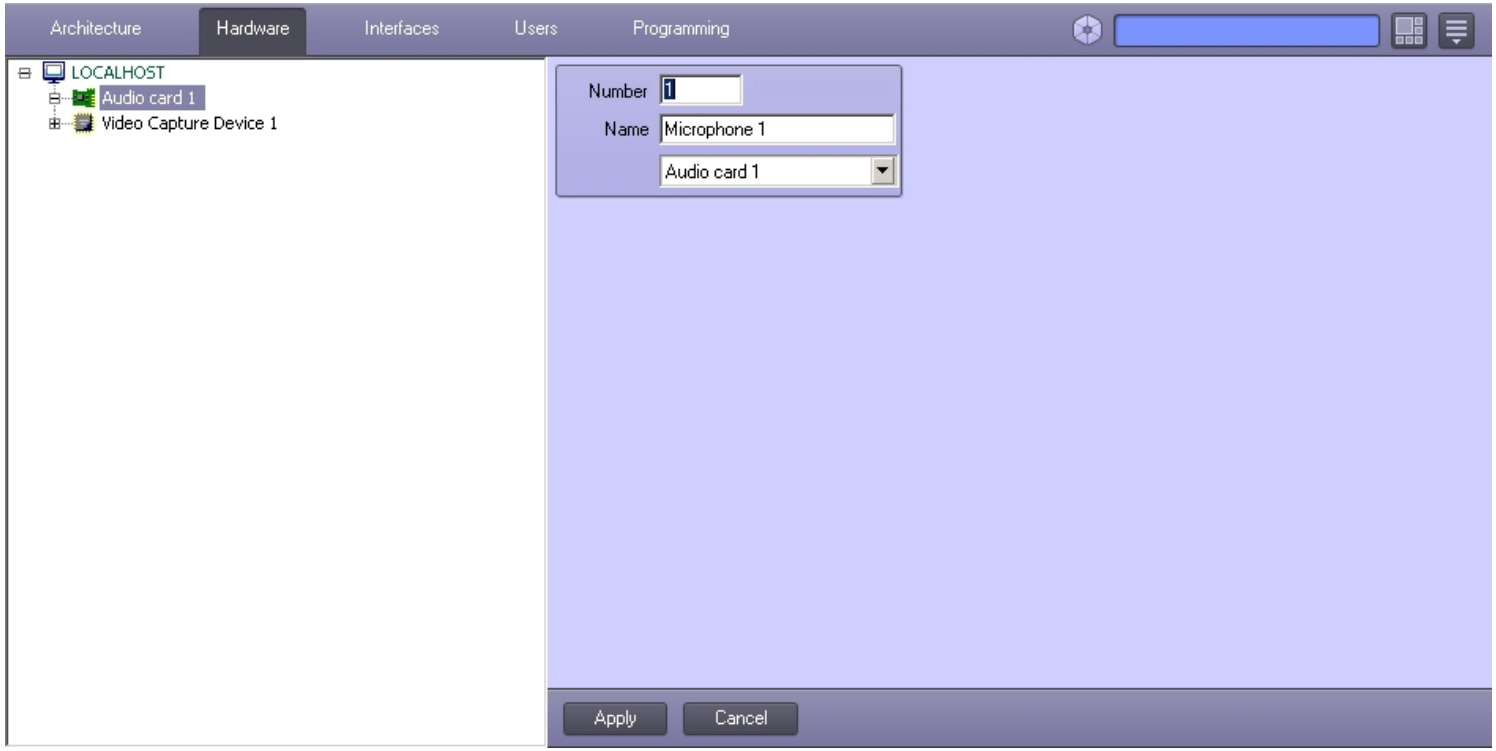

e. specify a unique identification number in the **Number** field (1) and the name of a new object, **Microphone** in the example on the figures, in the field **Name** (2).

Note.
Entering of > and < symbols is forbidden in the **Name** filed. They will be removed when settings applying if these symbols are used in the object name.

f. click the **Apply** button to complete the object creation process;

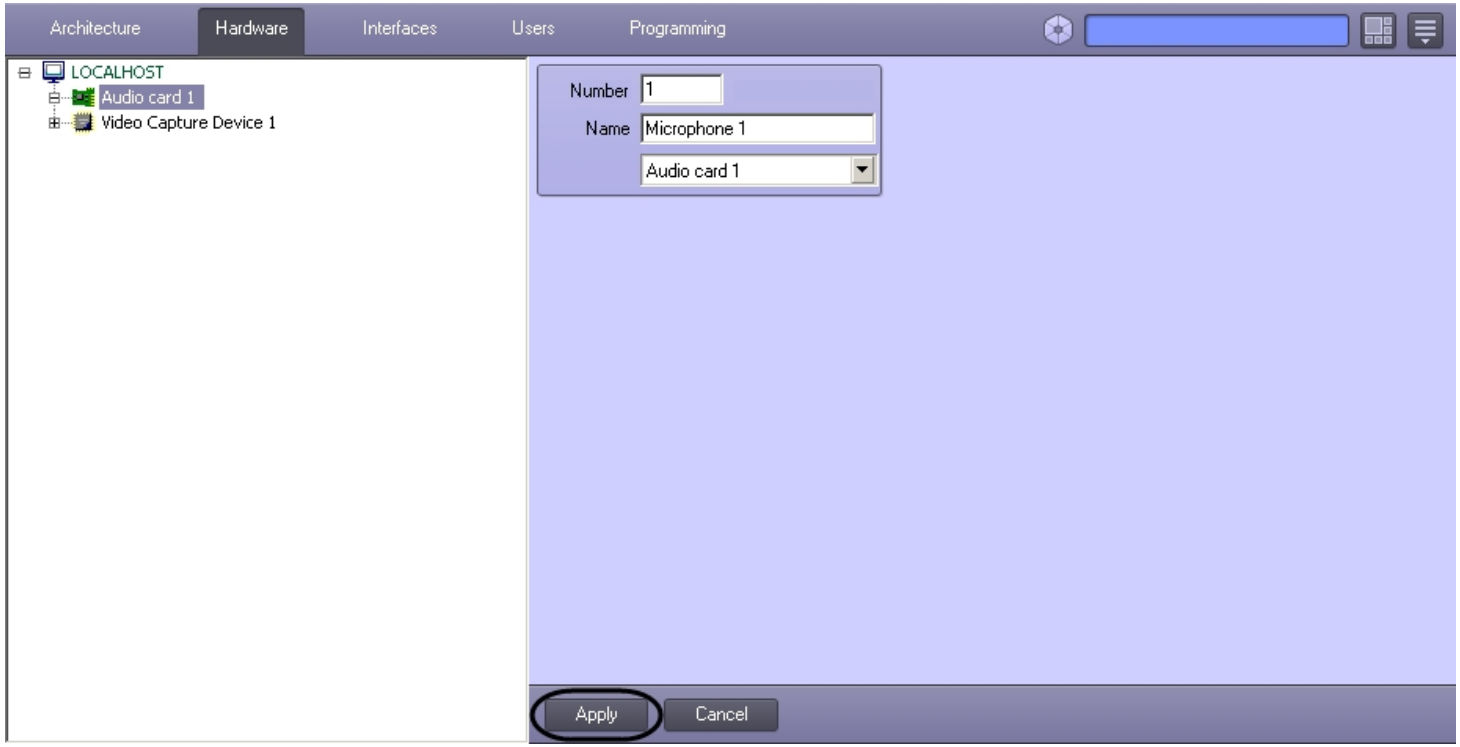

As a result, a new daughter object will be created based on the selected parent system object.

3. **Editing.**

Editing means any modification of the object settings, i.e., changes in the object parameter values. The tools panel of the system object is the key configuration instrument of the object setup.
To edit an object, do the following:

a. select a system object the parameters of which are to be modified (1);
b. modify the object parameters using the tools panel of the object (2);

> **Note.**
> The object ID cannot be edited.

c. click the **Apply** button to save all changes (3).

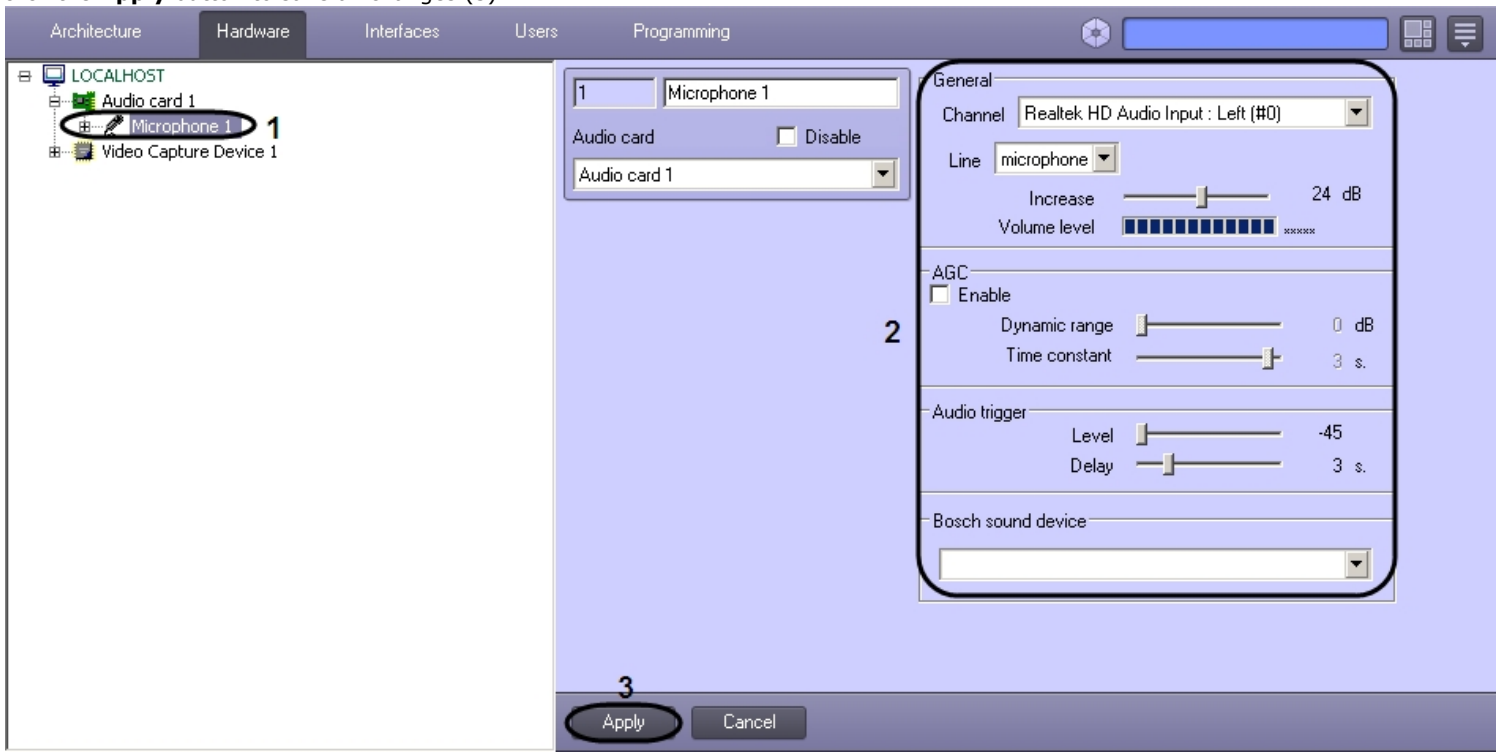

4. **Deleting.**

To delete an object, do the following:

a. select an object for deletion (1) and right-click to display the context menu on the monitor (2);

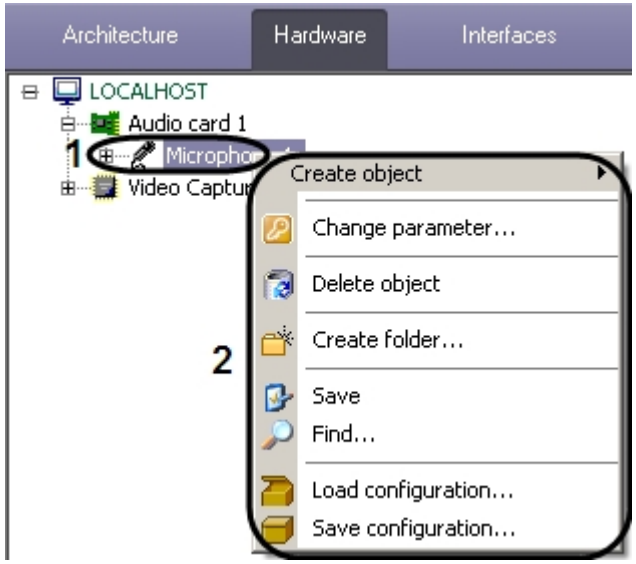

b. select the **Delete object** item in the menu;

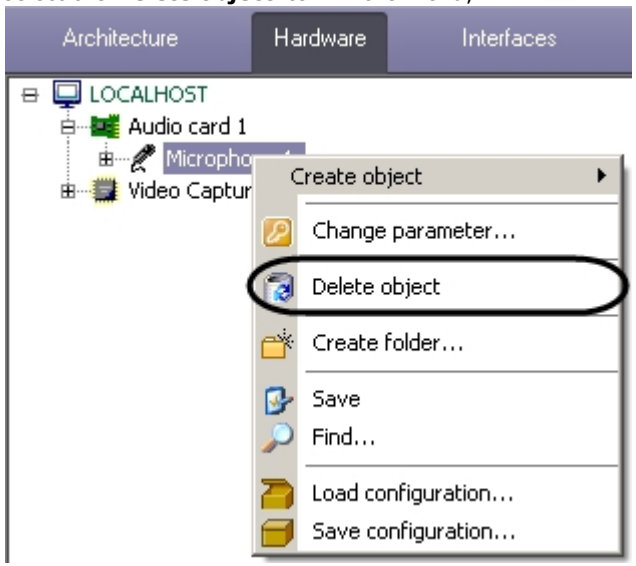

Now a dialog box requesting confirmation of the object deletion will appear on the monitor.

c. Click the **OK** button.

Figure below shows the result of an object deletion (objects tree contents after the object has been deleted). The object, in the example on figures the object is **Microphone**, which has been deleted is no longer displayed in the objects tree.

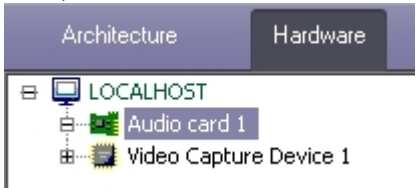

5. ## Changing the parent object.

When changing the parent object you can move created object in the objects tree of INTELLECT™ without losing settings.
To change the parent object, do the following:

a. Select the system object the position of which is to be changed in the objects tree.

b. Select a new parent object in the drop-down list on the settings panel of the object. The name of the drop-down list is the same as the type of the parent object.

Note.
If the object is moved to another computer, INTELLECT™ is to be restarted on both computers – on one the object is moved to and on another the object is moved from.

As a result the object is displayed in the objects tree of the selected parent object.

6. Copying objects

The copy function enables cloning objects created in *Intellect* object tree (see also The Save function).

> **Note.**
> The copy function is guaranteed for the **Video capture device** object and its child objects: **Camera**, **Sensor**, **Relay**, **Embedded detection tool**, **Face detection tool**, **Detection zone**, **Tracker**, **VMDA detection tool** and **Captioner**. For other objects this function is not guaranteed.

Copy objects as follows:

a. Select the object to be copied in the object tree.

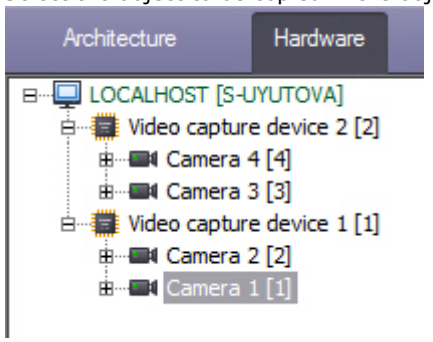

b. To copy the object press Ctrl+C.
c. Select the parent object under which the copy of the selected object is to be created or one of the objects created under the parent object.
   If the copy is to be created under the same parent object as the source object, then this step can be skipped.
d. Paste the object using one of the following key combinations:
   i. **Ctrl+V** – paste only the copied object.
   ii. **Ctrl+Shift+V** – paste the copied object with all child objects.
e. The object or objects will be created with the default names and a vacant IDs will be assigned to them. Parameters of created objects will be the same as those of corresponding source objects.

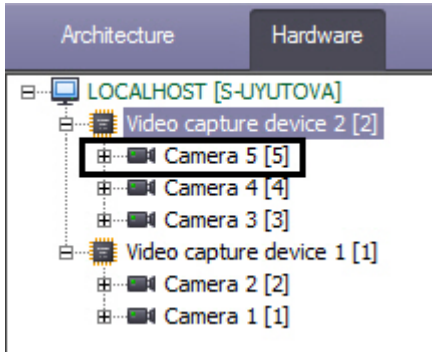

Note.
Once copied object can be pasted multiple times.

INTELLECT™ software configuration and setup

Configuration procedure for servers, clients and remote workstations

Server settings

Server hardware and software platform

The video surveillance system based on INTELLECT™ software uses Servers to receive and process video signals from analog and IP surveillance cameras. The Server hardware and software platform generally contains:

1. A personal computer that meets the requirements of INTELLECT™ software.
2. Embedded video capture cards or Guardant dongle that enables receiving video from IP devices only.
3. INTELLECT™ software with the **Server** configuration (see Installation of INTELLECT™ software as a Server/Administrator's workplace section).
4. The license key with rights to use video capture cards or IP devices along with INTELLECT™ software.
5. MS SQL server software for INTELLECT™ system database control.

Attention!
The same set of program modules specified in the intellect.sec license key is to be set for proper operation of the system on all Servers (see Program modules section).

Attention!
Proper operation of INTELLECT™ is possible only if the user has OS Windows administrator rights.

Setting up a Server

The main task of the Server is receiving and processing of video signals. It provides several options: audio signal receiving and processing, PTZ control, security services, user's auto functions (macros), etc. Server setup sequence depends on its hardware configuration and the options to be realized.

To configure the Server, follow the steps:

1. Start the INTELLECT™ program on the Server (see Operator's Guide).
2. With remote Server setup (e.g., from the administering Server), register the **Computer** object, which corresponds to the Server, and set the interaction parameters with the Servers, Remote Admin Workstations, Remote Clients of the distributed video surveillance system (see Configuration of distributed architecture section). While local setting up the Server the relevant **Computer** object is created automatically in the **Hardware** tab during the first startup.
3. Configure hardware that is connected to the Server (see Configuration of hardware section). This includes the following steps:
    a. Configure the Server video subsystem (see Configuring video subsystem section).
    b. Configure the Server audio subsystem if there are microphones (see Configuring audio subsystem section).
    c. If there are sensors and relays, create and configure the relevant objects (see Installing and configuring security system components guide).
    d. Configure backup video archiving on the Server, if necessary (see Configuring long-term archiving section).
    e. Configure the hardware performance tester and restart service, enable and configure the notification services (see Notification services and Configuring the System restart service sections).
    f. Set up logging of events registered for the Server system objects (see Configuring events logging).
4. If the Server is to be used as the Operator's workstation, configure the user interface: video surveillance monitor, audio player, map etc. (see Configuring the user interface section).
5. Assign the users rights to work with Server system objects (see Configuration of users and permissions section).
6. If auto options are to be used, create the macros and time zones, etc. (see System settings (the Programming tab) section).

Configuring a Remote Admin Workstation

Remote Admin Workstation hardware and program platform

The video surveillance system based on INTELLECT™ software uses Remote Admin Workstations for remote administering of INTELLECT™ software installed on Servers and other Remote Admin Workstations of the distributed video surveillance system, as well as the specialized platforms: videogate, remote archive server, remote web server etc. The Remote Admin Workstation can perform several of these functions or one of them.

> **Note.**
> Audio and video from IP devices can be processed at Remote Admin Workstations.

Remote Admin Workstation hardware and software platform contains:

1. Personal computer that meets the requirements of INTELLECT™ software.
2. Guardant dongle.
3. INTELLECT™ software with the "Remote Admin Workstation" configuration (see Installation of INTELLECT™ software as a Server/Administrator's workplace section).
4. License activation key.
5. MS SQL server software to control the *Intellect*™ database.

Remote Admin Workstation configuration

In a simple case a Remote Admin Workstation may be used for remote administering only.

To configure a Remote Admin Workstation, follow the steps:

1. Start the INTELLECT™ program on Remote Admin Workstation (see Operator's Guide).
2. With remote setup (e.g., from the administering Server), register the **Computer** object, which corresponds to the Remote Admin Workstation, and set the interaction parameters with the Servers, Remote Admin Workstations, Remote Clients of the distributed video surveillance system (see Configuration of distributed architecture section). While local setting up the Remote Admin Workstation the relevant **Computer** object is created automatically in the **Hardware** tab during the first startup.
3. Configure the hardware performance tester and restart service (see Configuring the System restart service section).
4. Set up logging of events registered for the Remote Admin Workstation system objects (see Configuring events logging).
5. If the Remote Admin Workstation is to be used as the Operator's workstation, configure the user interface: video surveillance monitor, audio player, map etc. (see Configuration of interfaces section).

6. Assign the users rights to work with Remote Admin Workstation system objects (see Rights administration section).
7. If auto options are to be used, create the macros and time zones, enable and configure the notification services (see System settings (the Programming tab) and Notification services sections).

Videogate configuration

Videogates are used in large-scale distributed video surveillance systems for video signal routing among the Servers, Remote Admin Workstations and Remote Clients that are in different subnets.

To configure the gateway, do the following:

1. Start the INTELLECT™ program on the videogate (see Operator's Guide).
2. With remote setup of the videogate (e.g., from the administering Server), register the **Computer** object, corresponding to the Remote Admin Workstation, and set the parameters of interaction with Servers, Remote Admin Workstations and Remote Clients of the distributed video surveillance system (see Configuration of distributed architecture section). While local setup of the videogate the relevant **Computer** object is created automatically in the **Hardware** tab during the first startup.
3. Enable and configure the **Videogate** module (see Configuring the Videogate module section).
4. Configure the hardware performance tester and the restart service (see Configuring the System restart service section).
5. Set up logging of events registered for the **Videogate** system objects (see Configuring events logging).
6. Assign the rights to users in order to work with the **Videogate** system objects (see Configuration of users and permissions section).
7. If auto options are to be used, create the macros and time zones, enable and configure the notification services (see System settings (the Programming tab) and Notification services sections).

Configuring backup archive server

INTELLECT™ software has a backup archiving option for video records from the video surveillance Servers. As the archiving process requires great computer resources, archiving is not to be performed on the Servers directly. It is strongly recommended to choose the individual Remote Admin Workstation as the archiving Server.

To configure the archiving server, do the following:

1. Start the INTELLECT™ program on the archive server (Operator's Guide).
2. With remote setup of the archive server (e.g., from the administering Server), register the **Computer** object, corresponding to the archive server, and set the parameters of interaction with the Servers, Remote Admin Workstations and Remote Clients of the distributed video surveillance system (see Configuration of distributed architecture section). While local setup of the archive server the relevant **Computer** object is created automatically in the **Hardware** tab during the first startup.
3. Enable and configure the **Backup archive** module (see Configuring long-term archiving section).
4. Configure the hardware performance tester and the restart service (see Configuring the System restart service section).
5. Set up logging of events registered for the **Videogate** system objects (see Configuring events logging).
6. Assign the rights to users in order to work with the **Videogate** system objects (see Configuration of users and permissions section).
7. If auto options are to be used, create the macros and time zones, enable and configure the notification services (see System settings (the Programming tab) and Notification services sections).

Configuring remote Web-server

The video surveillance system based on INTELLECT™ software uses the remote web-server to transmit video signals and to receive Operator's commands via the Internet. It is recommended for large-scale systems with a distributed structure to use the remote web server on the individual Remote Admin Workstation instead of a local one on one of Servers.

> **Note.**
> The remote web-server should be allocated in the individual subnet and on the outer IP address (for its operation as an Internet HTTP server). Therefore the web server should be set to receive video signals via the videogate. The videogate can be the remote one (remote computer with installed and configured *Videogate* module) or the local one (*Vid eogate* module is installed and configured on the same computer with the web-server).

To configure the remote web server, follow the steps:

1. Start the INTELLECT™ program on the web-server.

2. With web-server remote setup (e.g., from the administering Server), register the **Computer** object, which corresponds to the web-server, and set the interaction parameters with the Servers, Remote Admin Workstations, Remote Clients of the distributed video surveillance system (see Configuration of distributed architecture section). While local setting up the web-server the relevant **Computer** object is created automatically in the **Hardware** tab during the first startup.
3. Enable and configure the *Web-server* module (see Configuring the Web-server module section).
4. If no remote videogate is used, then enable and configure the *Videogate* module (see Configuring the Videogate module section).
5. Configure the hardware performance tester and restart service (see Configuring the System restart service section).
6. Set up logging of events registered for the **Web-server** system objects (see Configuring events logging).
7. Assign the users rights to work with the **Web-server** system objects (see Configuration of users and permissions section).
8. If auto options are to be used, create the macros and time zones, enable and configure the notification services (see System settings (the Programming tab) and Notification services sections).

OS settings for correct operation of Remote Admin Workstation or Server

The user who does not belong to the "Administrators" group can work with Intellect software correctly if the following requirements are fulfilled:

1. UAC (Users account control) is disabled for Windows 7, Windows 8, Windows 8.1, Windows 10 OS. UAC can be disabled on the Control panel by Administrator of computer.

   > ⚠ **Attention!**
   > Low position of the **Do not notify me** slider on the **User account control parameter** page doesn't mean the full UAC disabling in the Windows 8 and Windows 8.1. Configuration of the local security policy is required for full disabling the UAC. Configuration is performed on the **Control panel -> Administrating -> Local security policy** window.
   >
   > It is required to disable all policies names of which are started from "User Account Control", apart from:
   >
   > **User Account Control: request action to increase rights for administrators in the mode of administrator approval** – set the Increasing without request item in the **Security parameter** value.
   >
   > **User Account Control: request action to increase rights for users** – set the Account request item in the **Security parameter** value.

2. User is to have the free access to the ITV thread in the registry HKEY_LOCAL_MACHINE\Software\ITV section for 32-bit system (HKEY_LOCAL_MACHINE \Software\Wow6432Node\ITV for 64-bit system).
3. User is to have the free access to the folder in which the Intellect software is installed.
4. User is to have the free access to the VIDEO and AUDIO folders on all logical disks in the system.
5. If the HKEY_LOCAL_MACHINE\Software\ITV\Intellect\BackupFolder key is in the registry (HKEY_LOCAL_MACHINE \Software\Wow6432Node\ITV\Intellect\BackupFolder for 64-bits system), the free access to the folder specified in the BackupFolder key is to be granted to user. For more information on this key please see Creating the database backup copy.
6. The free access to the following folders is needed if there is no the BackupFolder key:
   a. C:\ProgramData\ - for Windows 7 OS;
   b. C:\ Documents and Settings\All Users\Application Data\ - for Windows XP OS.
7. The user is to have SeCreateGlobalPrivilege rights. Open the **Local security policy** tool (**Control panel -> Administration**), select **Local policies -> Assign User rights -> Global objects** creation and add the existing user to the folder.

Configuring Remote Clients (RC)

Remote Client hardware and software platform

Remote Clients are used as Operator's workstations and provide remote video surveillance and audio monitoring: video and audio monitoring, sensor status control, cameras and PTZ units control and so on.

At a Remote Client administering options (one cannot create, delete and configure objects in the system as well as register users and administer their rights) as well as local database (database on the remote computer with installed INTELLECT™ system is in use) are inaccessible.

The Remote Client hardware and program platform generally contains:

1. A personal computer, that meets the requirements of INTELLECT™ software.
2. The *Intellect*™ software with the **Client** configuration (see Installation of INTELLECT™ software to the Client section).

Configuring Remote Client

The basic function of the remote Client is receiving video and audio signals from video surveillance system Servers, video and audio monitoring, cameras, microphones and PTZ units control via various components of the Operator interface (video surveillance monitor, audio player, map, PTZ window etc.).

To configure the Remote Client, follow the steps:

1. Register the **Computer** object, which corresponds to the Remote Client, and set the interaction parameters with the Servers, Remote Admin Workstations, Remote Clients of the distributed video surveillance system on the administering server (see Configuring the INTELLECT™software system with distributed architecture of the digital video surveillance system section).
2. Configure the User interface by creating screen(s) and setting up the Remote Client access to them. The screen(s) should contain the user interface components: video surveillance monitor, audio player, map etc. (see Configuring the user interface section).

OS settings for correct operation of Remote Client

Fulfill the following conditions to work correctly with INTELLECT™ software which is installed as Remote Client by the user who does not belong to the "Administrators" group:

1. User is to have the free access to the ITV thread in the registry HKEY_LOCAL_MACHINE\Software\ITV section for 32-bit system (HKEY_LOCAL_MACHINE \Software\Wow6432Node\ITV for 64-bit system).
2. User is to have the free access to the folder in which INTELLECT™ software is installed.

Configuration of distributed architecture

General principles of designing the digital video surveillance system with distributed architecture

The digital video surveillance system generally contains:

1. Servers – hardware and program platforms used to receive and process video and audio signals from analog and IP surveillance cameras.
2. Remote Admin Workstations – hardware and program platforms used for remote administering of the video surveillance system and as the specialized platforms for: video gateway, remote archive server, remote web server etc.
3. Remote Client – hardware and program platforms used as Operator's workstations to realize remote video surveillance and audio monitoring:

Servers, Remote Admin Workstations and Remote Clients are integrated into the video surveillance system, fitting the system set of functions, safety requirements, specific features of the guarded location etc. The video surveillance system may include several subnets, that interact via selected (node) servers and Remote Admin Workstations. The distributed architecture of the video surveillance system provides synchro data exchange (events, commands, setting parameters, etc) among its components.

Servers, RAWs and ROWs communicate with each other in LAN, WAN, VPN, Wireless networks using TCP protocol.

Note.
One version of the *Intellect* software package is to be installed on all components of the distributed system. This is due to the database structure of the *Intellect* software package can differ in different versions so the data loss can occur.

Requirements for the software and hardware platform

Configuring procedure for the distributed system

To configure the distributed video surveillance system, follow the steps:

1. Design the surveillance system structure project, if it has not been developed before (see Selecting the structure of the distributed system).
2. Set up database synchronization for all servers and Remote Admin Workstations in compliance with the system structure project (see Synchronizing the databases of servers and remote workstations).
3. Register the servers, Remote Admin Workstations and Remote Clients from the same subnet on the administering server of this subnet (or at node Remote Admin Workstations and servers, that optionally realize the administering server function, if there are any subnets). If any selected subnets are present in the system, register the servers and Remote Admin Workstations that provide interaction of subnets (see Registration of servers, clients and remote workstations on the administering server).
4. Set up interaction of servers, Remote Admin Workstation and Remote Clients in compliance with the system structure project (see Configuring the interaction of distributed system components).
5. Set up time synchronization in the distributed system, if necessary (Configuring time synchronization in the distributed system).
6. Specify computers in the distributed system which will be used only as Clients (see Role-assignment in distributed system).

Selecting the structure of the distributed system

While designing the distributed video surveillance system structure you should take into account:

1. The number of servers, Remote Admin Workstations and Remote Clients to be installed on the guarded location.
2. The distances between video surveillance system components and their comminication channels capacity. For example, servers are divided by long stretches of land, and the Remote Admin Workstation and Remote Client are within the same room – the central surveillance station. Given the engineering constraints, servers will have the low capacity channels, and the Remote Admin Workstation and Remote Client will have high capacity channels. Then Remote Admin Workstation and Remote Client will interact with the servers via the gateway only.
3. The system security requirements, for example, to prevent unauthorized administering, subnets with servers and Remote Admin Workstations and subnets with Remote Clients, are separated. Subnets interact via the gateway only.

An example of organization of the distributed video surveillance system is shown in the figure.

Synchronizing the databases of servers and remote workstations

INTELLECT™ software servers and Remote Admin Workstations configuration parameters are stored in the distributed database. Each server and Remote Admin Workstation store local copies of the distributed database. Local database copies should be synced to provide distributed operation of INTELLECT™ software and data replication (synchro alteration of local database copies).

The following synchronization mechanisms are used in *Intellect*:

1. Internal synchronization. All changes are applied to computers automatically. This mechanism is used by default and does not require any further configuration. Internal synchronization can be disabled – see Configuring internal synchronization.
2. DB synchronization of recipients with sources when starting *Intellect*:
    a. Configuration synchronization (see Database synchronization setup).
    b. Configuration and protocol synchronization (see Database synchronization setup and make changes to sync.xml file).

    > **Note.**
    > DB tables that are not synchronized during synchronization are in the sync.xml file. It is highly recommended not to change this file.

    c. Only protocol synchronization (see Configuring the Event Viewer databases synchronization).

In the simplest case, database synchronization is performed for all servers and Remote Admin Workstations with the database of the administering server.

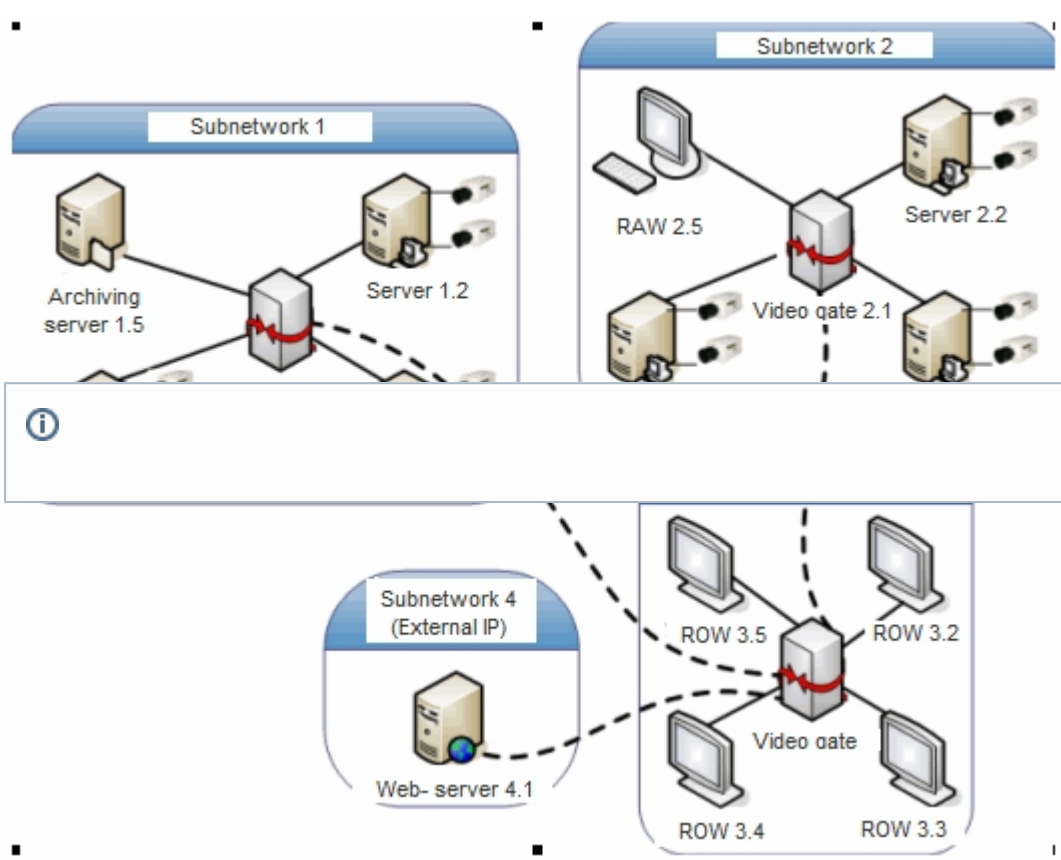

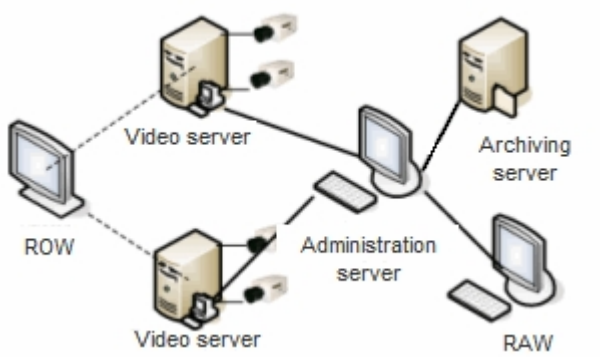

Note.
The Remote Client has no database; therefore the administering server database should not be synced with it.

If any selected subnets are present in the system, the servers and Remote Admin Workstation databases should be synced with the node server or Remote Admin Workstation database (see, for example, figure below).

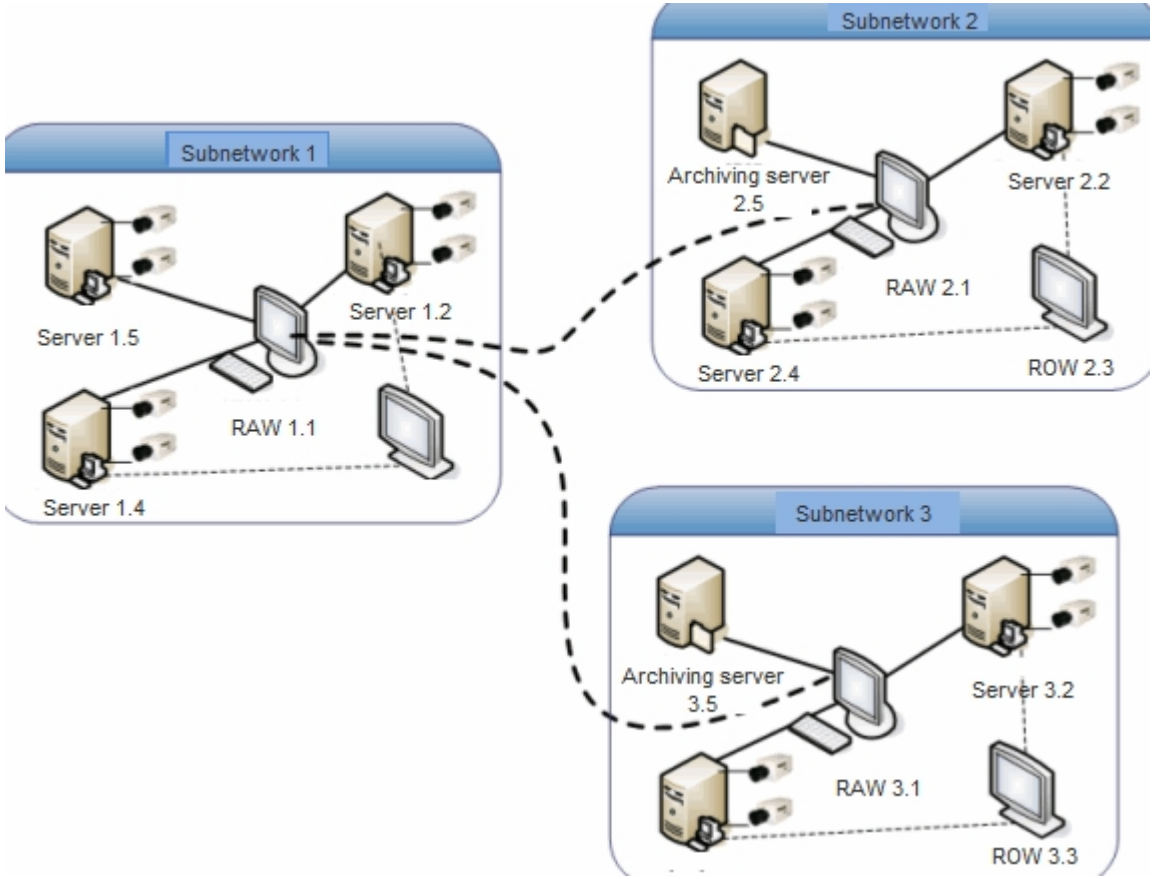

For example, to set up database synchronization for the servers of the distributed system shown in the figure, you need:

1. to sync the databases of 1.2, 1.4, 1.5 servers with 1.1 Remote Admin Workstation database;
2. to sync the databases of 2.2, 2.4 servers and 2.5 archiving server with 2.1 Remote Admin Workstation database;
3. to sync databases of 3.2, 3.4 servers and 3.5 archiving server with 3.1 Remote Admin Workstation database;
4. to sync databases of 3.1 and 2.1 and Remote Admin Workstations with 1.1 Remote Admin Workstation database;

For detailed instructions on database synchronization setup see INTELLECT™ software database management.

Registration of servers, clients and remote workstations on the administering server

Administering the servers and Remote Admin Workstations is usually performed from one selected Workstation – the administering server. It is recommended to have one administering server for any single selected video surveillance subnet (e.g. for security reasons).

All servers, Remote Admin Workstations and Remote Clients should be registered on the administering server.

To register the servers and remote Workstations on the administering server, follow the procedure:

1. Make sure that the synchronization of all servers and Remote Admin Workstations databases with the administering server database is set properly (see the previous section).
2. Check the servers, Remote Admin Workstations and Remote Clients connections to the subnet.
3. Launch the INTELLECT™ program on the administration server.
4. Register the **Computer** system object on the administering server for each server. Remote Admin Workstation or Remote Client. For that follow the steps:
    a. Go to the **Hardware** tab in the **System Settings** dialog box.

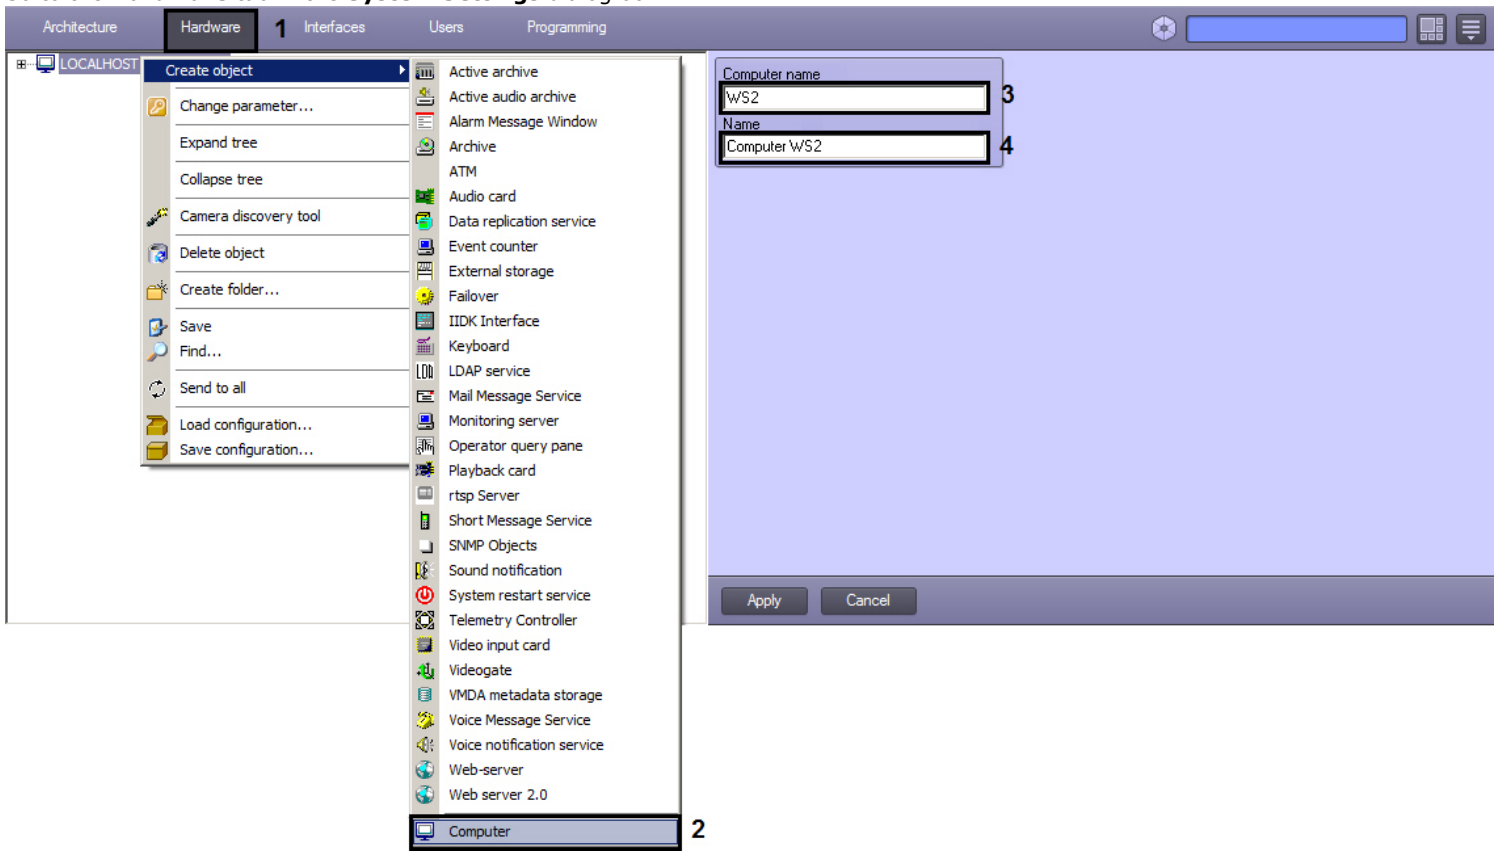

    b. Create a **Computer** object on the base of the **Computer** object.
    c. Enter the network name of the server, Remote Admin Workstation or Remote Client in the **Computer name** field.

> **Note.**
> The maximum length for the network name is 15 characters. If the network name is longer than 15 characters, then first 15 characters are to be specified as the network name in this field.

    d. Enter the name, used for the computer by the INTELLECT™ software, in the **Name** field.
    e. Click the **Apply** button.
5. Repeat the 4th step for each server, Remote Admin Workstation and Remote Client of the distributed video surveillance system (or its subnet).
6. Start the INTELLECT™ program on all operator and administration workstations and servers.
7. If communication exists between the administering server and the server, Remote Admin Workstation or Remote Client, the **Computer** object will be assigned the «» icon on

the objects tree.

8. If no connection exists between the administering server and the server, Remote Admin Workstation or Remote Client, the **Computer** object will be assigned the « » icon on the objects tree. The most probable causes of disconnection are INTELLECT™ software failure on the server, Remote Admin Workstation or Remote Client; network disconnection, faulty database synchronization, wrong network name. Detect and remove the cause of disconnection before continuing to configure the system, then try to connect the administering server to the server, Remote Admin Workstation or Remote Client again.

To connect to the the server, Remote Admin Workstation or Remote Client from the remote administering server without restarting INTELLECT™ software, right click the relevant **Comp uter** object to display the context menu and select **Reconnect**.

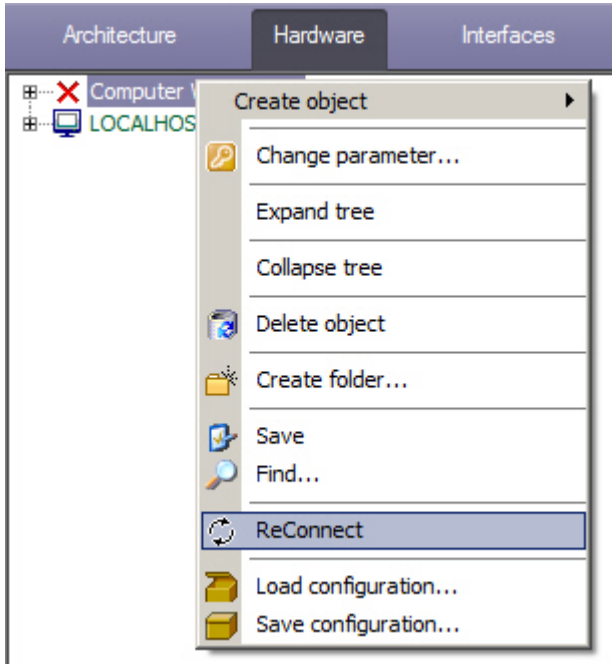

Registration of servers, Remote Admin Workstations and Remote Clients on the administering server is completed.

Configuring the interaction of distributed system components

To provide distributed system operation, Servers, Remote Admin Workstations and Remote Clients interactions are to be configured. Servers, Remote Admin Workstations and Remote Clients interaction means database replication (for Servers and Remote Admin Workstations only) and event exchange. For each Server, Remote Admin Workstation and Remote Client lists of interacting and non-interacting Servers, Remote Admin Workstations and Remote Clients are to be created.

Configuration of the surveillance system interaction is performed from the administering Server or, if there are dedicated subnets, from the node ьlerver or Remote Admin Workstation.

To configure the interaction between the distributed system components, do the following:

1. Go to the **Architecture** tab in the **System settings** dialog box (1).

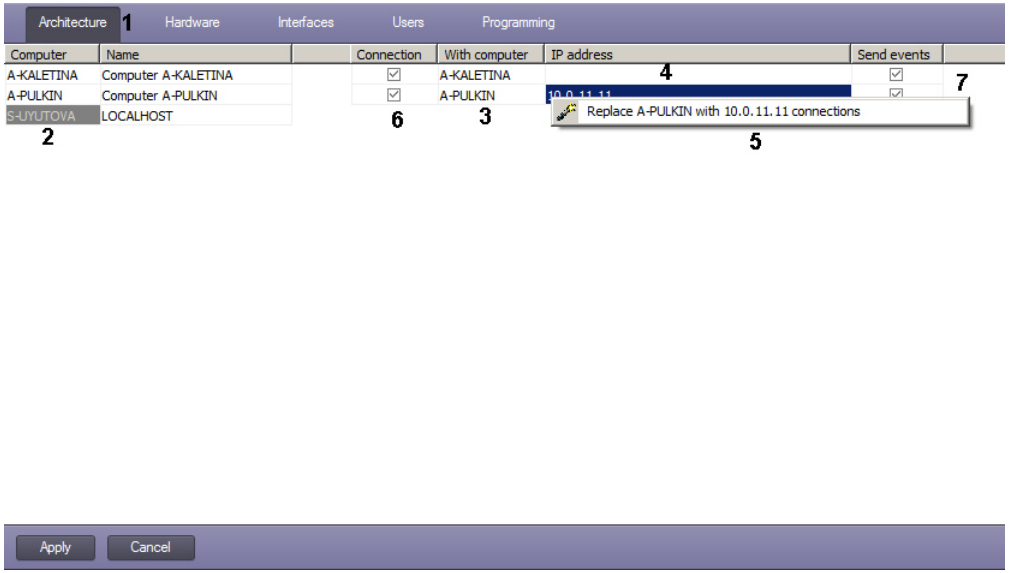

2. The **Computer** column displays the list of names of Servers, Remote Admin Workstations and Remote Clients registered in the **Hardware** tab (2). In the **Computer** column left click the name of the Server, Remote Admin Workstation or Remote Client to change its interaction settings. Text in the selected cell becomes grey.

> **Note**
> To search computer by name use Ctrl+F hotkeys combination. The **Search in tree** window will be opened, enter the full computer name or its part in it and click the Enter button. Found computer will be highlighted in grey in the list.
>
>
>

3. The **With computer** column displays the list of those Servers, Remote Admin Workstations and Remote Clients, with which the selected Server, Remote Admin Workstation or Remote Client is able to interact (3).
4. In the **IP address** column, specify the addresses of the computers you are connecting to (4). By default, the IP address is to be specified. If the **DNS instead of IP allowed** ch eckbox is set checked on the settings panel of the **Security zone** object in the **Programming** tab, then DNS name can be specified instead of IP address. If computer addresses are set automatically (DHCP is configured), then **IP address** field can be left blank.

> **Note**
> If the computer name is correct, then the IP address can be filled in automatically. For this, specify the question mark "?" in the **IP address** field and press the Enter key on the keyboard.

5. If the specified IP address is to be set for all communications with this computer in the distributed system, right-click in the **IP address** field and select **Replace links from <Computer name> to <IP-address>** in the opened feature menu (5). This is allowed if computers with one network interface are used in the system and the specified IP address is to be used to communicate with these computers.

> **Important!**
> When clicking the **Apply** button (see step 10), the changes will be saved only for the current computer. In order for the IP address to be saved for all computers in the

distributed system, click the **Apply** button holding down the **Ctrl** key on the keyboard.

6. If the box next the **Connection** column and the row, corresponding to the Server, Remote Admin Workstation or Remote Client is checked, then the data on system configuration of the selected Server, Remote Admin Workstation or Remote Client with any Server, Remote Admin Workstation or Remote Client is exchanged (6). To forbid exchange of configuration data with the selected Server, Remote Admin Workstation or Remote Client, set the checkbox in the **Connection** column unchecked.

> **Note**
> Server or Remote Admin Workstation always exchange configuration parameters with Remote Client, even if the Connection checkbox is unchecked for this Remote Client.

7. If the box next to the **Send events** column and the row, corresponding to the Server or Remote Admin Workstation is checked, then events are exchanged between selected Server or Remote Admin Workstation and any Server or Remote Admin Workstation (7). To forbid event exchange with the selected Server, Remote Admin Workstation or Remote Client, set the checkbox in the **Send event** column unchecked.

> **Note**
> Server or Remote Admin Workstation always exchange configuration parameters with Remote Client, even if the **Send events** checkbox is unchecked for this Remote Client.

> **Note**
> In order to set all checkboxes in the **Connection** or **Send events** columns, highlight a box in the required column and click Ctrl+A. To set all the checkboxes unchecked, highlight a box and click Shift+A.

8. If modems are used for connecting the distributed system components, then fill in the **Connection, User and Password** fields in the **Hardware** tab of the **Computer** object according to the Windows modem configuration used.
9. Repeat steps 2-5 for each twain of Servers, Remote Admin Workstations and Remote Clients.
10. Click the **Apply** button

Interaction of the distributed video surveillance system components is now configured.

Let’s consider setup of a Server and Remote Client connection via video gate as an example. A diagram of interaction of relevant components is shown in the figure.

> **Note.**
> Videogate is used in large distributed video surveillance systems for routing the video signals among servers and clients (or administrator workstations used as operator workstations) located in different subnetworks. See General information on the videogate for details.

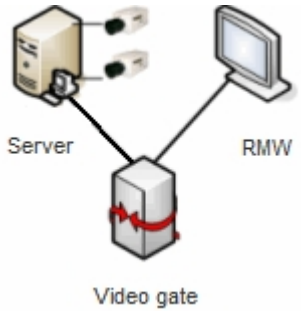

According to the diagram, shown in the figure above, interaction must be disabled between the server (SERVER1) and Remote Client (MN1). As a result, the **Architecture** tab is to display the settings:

1. For the video gate (GATE), interaction is to be set with the Server (SERVER1) and with the Remote Client (MN1).

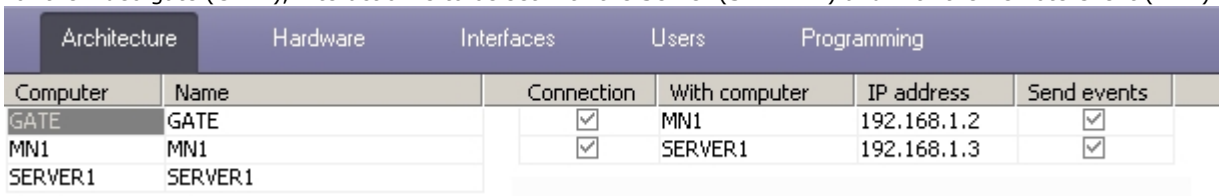

2. For Remote Client (MN1), interaction is to be set up with the video gate (GATE), and interaction with the server (SERVER1) is to be disabled.

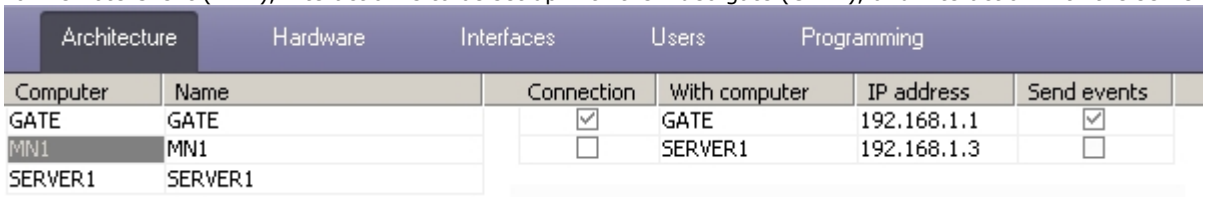

3. For the server (SERVER1), interaction is to be set up with the video gate (GATE), and interaction with the Remote Client (MN1) is to be disabled.

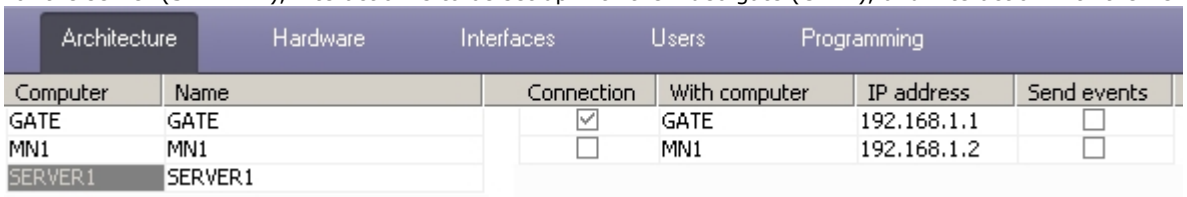

The Remote Client (MN1) **Computer** object in the **Hardware** tab in the **System settings** dialog box on the server (SERVER1) will not be displayed in the *Intellect* software package.

However, if the **Send events** checkbox is set (the **Connection** checkbox is to be deselected), the **Computer** object corresponding to the Remote Client (MN1) will be displayed on the **Hardware** tab on Server (SERVER1) tab but it will be marked with and the object name will be highlighted by grey color. This indicates that administering of the given object is forbidden.

Configuring time synchronization in the distributed system

If Server is to synchronize its time with Servers connected to it when INTELLECT™ is started, do one of the following:

1. Set the **Synchronize time** checkbox on the settings panel of the **Computer** object corresponding to the Server that is the source of time synchronization (see The Settings panel of the Computer object section).
2. Set the **Time synchronization** checkbox in the tweaki.exe utility on the Server that is the source of time synchronization (see The Settings panel of the Intellect section section).
3. Create the SyncTime parameter with 1 value in the HKEY_LOCAL_MACHINE \Software\ITV\INTELLECT for 32-bit system (HKEY_LOCAL_MACHINE \Software\Wow6432Node\ ITV \INTELLECT for 64-bit system) registry on the Server that is the source of time synchronization.

Time is automatically synchronized at midnight every 24 hours or when INTELLECT™ is started on the Server that is the source of time synchronization. Synchronization can also be started by SYNC_TIME command of the SLAVE system object (see Programming Guide (JScript)).

You can run a macro if time is to be synchronized when connecting the Servers that are time receivers. The details are in the Creating and using macros section.

The example of macro that synchronizes time of all Servers in the distributed system when connecting to Computer 2 if Computer 1 is configured as the source of time synchronization:

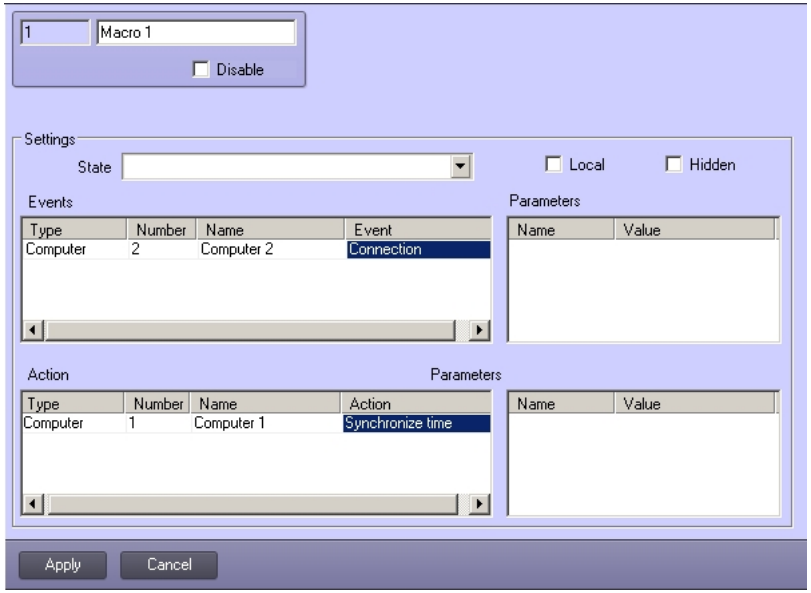

Role-assignment in distributed system

If it is certain that a computer is to be used as the Client only in the distributed systems (more than 30 computers), then it is to be specified on the settings panel of the corresponding **Computer** object. In this case software operation will be optimized.

Note.
There is no need to use this setting in the smaller distributed systems.

Important!
If the computer is in use as Server/RAW and it is set to be used as the Client, then the distributed system will not operate correctly.

Role-assignment is performed as follows:

1. Go to the **Hardware** tab of the **System settings** dialog box (1).

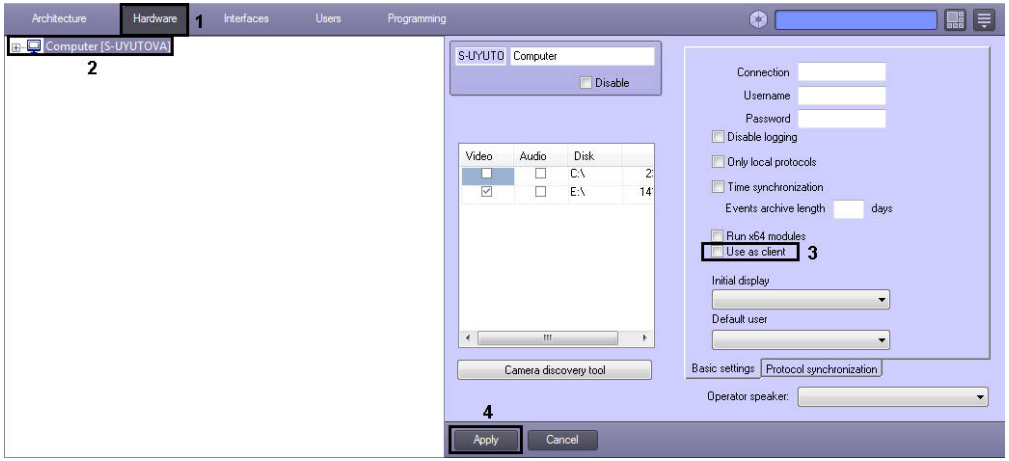

2. Select the **Computer** corresponding to the Client (2).
3. Set the **Use as client** checkbox checked (3).
4. Click the **Apply** button (4).

The role is now assigned to the computer in the distributed system.

Requirements for TCP/IP Network bandwidth for video signal transferring

Operations using the Client

Features of distributed system operation using NAT

If the distributed system is built on the basis of a network in which Servers are behind NAT, then VPN technology is to be in use for the operation of such system.
When you configure NAT the ports that are used by started INTELLECT™ modules are to be opened — see The list of TCP ports used in INTELLECT™ section. Moreover the ports that are used by MS SQL Server for database synchronization are to be opened.

Note.
By default MS SQL Server uses 1433 TCP port and 1434 UDP port.

If an ONVIF IP-camera is behind NAT, then proper operation of this camera is not guaranteed. This limitation is due to the special features of the ONVIF protocol.

Configuration of hardware

Configuring video subsystem

General information on configuring video subsystem

Video subsystem components description

In the video surveillance systems based on INTELLECT™ software by video subsystem you mean the set of software modules and hardware devices used to receive, transmit, digitize, process, record and display video signals from video surveillance system cameras on monitor screens.

Video subsystem hardware includes:

1. video capture cards;
2. analog video camera (cameras);
3. IP devices.

Video subsystem software includes:

1. components for configuring the video capture cards.
2. components for digitized video signal compression and decompression.
3. components for digitized video signal recording.
4. components for digitized video signal transmission to Remote workstations.
5. components for displaying video signal on the monitor.

Installing security system components

Configuring video capture cards in INTELLECT™ software

Configuring IP devices

Configuring video capture cards

Video capture cards are configured in the course of INTELLECT™ software administering. Video capture cards are configured by video signal digitization and processing settings, which comply with:

1. signal format (PAL or NTSC);
2. frame rate;
3. frame resolution;
4. brightness;
5. contrast;
6. color depth;
7. color rendition format.

Each camera has its individual video signal processing and digitization settings (except for the signal format, which is set for all cameras, and is attached to the same ADC).

Note.
In multistream mode (see Configuration of multistream video) settings of signal format parameters (PAL or NTSC), frames frequency, frame resolution is performed for each video stream separately on the **Camera** object's settings panel on the **Video stream** tab (see the The Settings panel of the Camera object section).

Moreover, configuring the video grabber involves setting up a proper switching of the video input channels.

Configuring video capture cards in INTELLECT™ software

Configuring the video signals processing mode while using video capture cards and analog video cameras

Configuring IP-devices

IP-devices are configured via the web server or any other software, supplied together with the device, and via INTELLECT™ software.

Video signal compression and processing settings (format, frame rate, frame resolution, brightness, contrast, color depth, color rendition format) are performed via the web server or

any other software, supplied together with the device.

The INTELLECT™ software system receives the image, processes it with detectors, records the video signals from IP-devices and transfers it to the Remote Client.

Be sure before using an IP-device that processing and digitization settings of IP-devices (especially codecs), set via the web server, are supported by INTELLECT™ software. For actual information on IP-device compatibility, see the "Integration" section on the site of AxxonSoft company: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

Requirements for IP devices of audio and video input

Configuring IP devices

Video signal compression and decompression

Video signal compression is digital video processing aimed at reducing video stream size. Compression is performed according to a specific software algorithm.

INTELLECT™ software uses a specific MotionWavelet algorithm to compress video signals received from video capture cards. This algorithm allows reducing video stream size by tens of times (from 5 to 30, subject to video signal features and compression rate).

To compress video signals from IP-devices, standard (MPEG4) or vendor designed algorithms are in use.

With compression, video stream size decreases at the cost of its quality. That is why INTELLECT™ software compresses the video signal in two modes only: in disk recording mode and in transmission to the Remote Workplace mode. The video signal is not compressed before displaying on a video server monitor.

Before displaying the compressed video signal it is decompressed. Decompression is automatically performed while displaying video signals (both real-time and archive footage playback) at Remote Workstations and video recordings playback on the videoserver.

If video resolution on the Monitor is less than resolution of compressed video, then INTELLECT™ partly decompresses video (it allows reducing load of CPU that decompresses video). Network load is reduced if the MotionWavelet codec is in use; if other codecs are in use, then the network load stays the same. Partial decompression is supported by MPEG4, MJPEG, MXPEG, Motion Wavelet and H264svc codecs. Partial decompression is not supported by H263, H264avc and Mpeg2 codecs. Only fps reduction is supported by H264svc-t codec.

Description of decompressors is shown in the table.

Decompressor	**Description**
FfmpegAllInOneDecoder	A module with a set of Ffmpeg library decoders (with an open source code). It allows converting multimedia data compressed by MxPEG, MPEG2, MPEG4 and Motion JPEG codecs.
H264InterlacedIppDecoder H264IppDecoder MPEG2IppDecoder MJPEGIppDecoder MPEG4IppDecoder	Decompressors included into the Intel Integrated Performance Primitives (Intel IPP) library. A compression format is specified in the decompressor name.
H264SvcEx	A decompressor for converting video signals in H264Svc format received from Stretch devices into the H264Avc format.
H264SvcTex	A decompressor for converting video signals in H264Svc-t format received from VIVOTEC devices into the H264Avc format.
MxPEG Mobotix	A decompressor for converting video signals received from Mobotix devices.

Motion Wavelet 7.1	A decompressor for wavelet-converting video signals.
BOSCH	A decompressor for converting video signals received from BOSCH devices.
MediaSdkDecoder	QuickSync-based decompressor decompresses video in H.264 format using embedded Intel graphic processor greatly reducing CPU load. To enable operation of this decompressor include the integrated video card into BIOS and install latest Intel drivers.

Note
When decompressors included into the Intel IPP library are in use, there can be video distortions for some resolutions. In these cases resolutions divisible by 16 are recommended to be used (e.g, 1280x720 or 1360x768) or another decompressor is to be selected.

Compression and decompression algorithms are set on the settings panel of a **Camera** object using the **Compressor** and **Decompressor** list correspondingly (see the Settings panel of the Camera object section). The decompression algorithm set in the camera settings is used when a video signal is displayed on a video surveillance monitor and for detection operation.

Important!
By default compression and decompression algorithms are not available for selecting and **Compressor** and **Decompressor** dropdown lists are not available for editing. To enable this feature set the "1" value for EnableCodecSettings registry parameter (see Registry keys reference guide).

Note
In multistream mode (see Configuration of multistream video) the codec selecting and settings of video signal quality is performed separately for each video stream on the **Camera** object's settings panel on the **Video stream** tab.

If the compressor/decompressor (default value) is not selected on the settings panel of a **Camera** object or the incorrect one is selected, then INTELLECT ™ software automatically selects the first compressor/decompressor in alphabetical order. If it does not fit too, the following one is selected and so on, until the correct one is selected.

Note
When WS7 and WS17 video capture cards are in use, the **Decompression** field is to be left blank otherwise use Motion Wavelet decompressor. If another decompressor is selected, then INTELLECT™ operation is not guaranteed.

Important!
If for some reasons the automatic decompressor selection is not right, then you are to select a decompressor manually.

How to record digitized video signals

Video signals archiving provides post-event analysis of evidence footage.

The archive is located on the local disks of the videoserver. Having reached the end of the archive disk volume, the archive is overwritten.

Before archiving on the videoserver, the video signal is compressed. It is compressed to reduce the size of the video recordings.

INTELLECT™ software is capable of auto recording, initiated by cameras (Main detectors) and detectors alarm detection or by Operator command.

Pre-event, post-event, and Hot (higher frame rate) recording can be performed to make post-event analysis of evidence footage more effective.

Configuring video archiving

Digital video signal transmission to Remote Workplaces

INTELLECT™ software provides video surveillance from Remote Workstations based on:

1. A PC (IBM PC–based) personal computer, connected to the videoserver via local TCP/IP net;
2. An IBM PC, connected to the videoserver via the "web server" module by HTTP protocol;
3. Mobile device on the basis of iOS connected to the videoserver with the help of mobile client.

Both real-time and archive video signals may be transmitted to Remote Workstations. Prior to being transmitted to a Remote Workplace, video signals are compressed.

Configuring video transmission to Remote Workstations

Video signal display

Video signals are displayed using the **Video Surveillance Monitor** interface object. The Video monitor is especially used to display video signals, received from cameras, and to play back the video recordings.

The video monitor has several options: detectors, PTZ units and microphones control, image processing and exporting.

Different video monitors are used with different video signal transmission modes:

1. Video server surveillance Monitor.
2. Video surveillance Monitor of the Remote Workstation, connected to the videoserver via the TCP/IP net, identical to the videoserver surveillance Monitor.
3. Video monitor of the web server, depicted in web browsers on Remote Workstations, connected to the videoserver via the web server module by HTTP protocol.
4. Video monitor of the mobile client based on iOS operation system.

The above video surveillance monitors have different components and functions. Any video monitor can be set up to display real-time video and play back archive footage.

Video signal display settings

Registrating Video Capture Devices and cameras in INTELLECT™ software

To configure video subsystem in INTELLECT™ software, create the **Video Capture Device** objects on the base of which the **Camera** objects are created (see Installing and configuring security system components guide).

Configuring the video signals processing mode while using video capture cards and analog video cameras

Setting up format (PAL or NTSC) for the input analog video signal

Different digitization and processing algorithms are used with different input video signal formats. The input signal format is individually set for ADC of every video capture card. Any single ADC processes and digitizes single format signals only: either PAL or NTSC.

In INTELLECT™ all ADCs of video capture cards by default are set to digitize video signal in PAL format.

Note.
While using Stretch VRC6004, VRC 6008, VRC 6416, VRC 7008L and VRC 6404HD video capture cards, the input video signal (PAL or NTSC) is selected automatically depending on cameras, connected to the card. Changing the parameter does not affect the card workability.

Note.
While using SL16-200 (FX116) and FX416 video capture cards, restart INTELLECT™ software after changing the format of video input. Otherwise the initial settings will be active.

To set the ADC of a video capture card to digitize and process video signal in NTSC format, do the following:

1. Go to the **Hardware** tab in the **System Settings** dialog box (1).
2. In the objects tree of the **Hardware** tab, select the **Video Capture Device** object, created before (2).The settings panel for the selected object is displayed on the right of the **Hardware** tab.

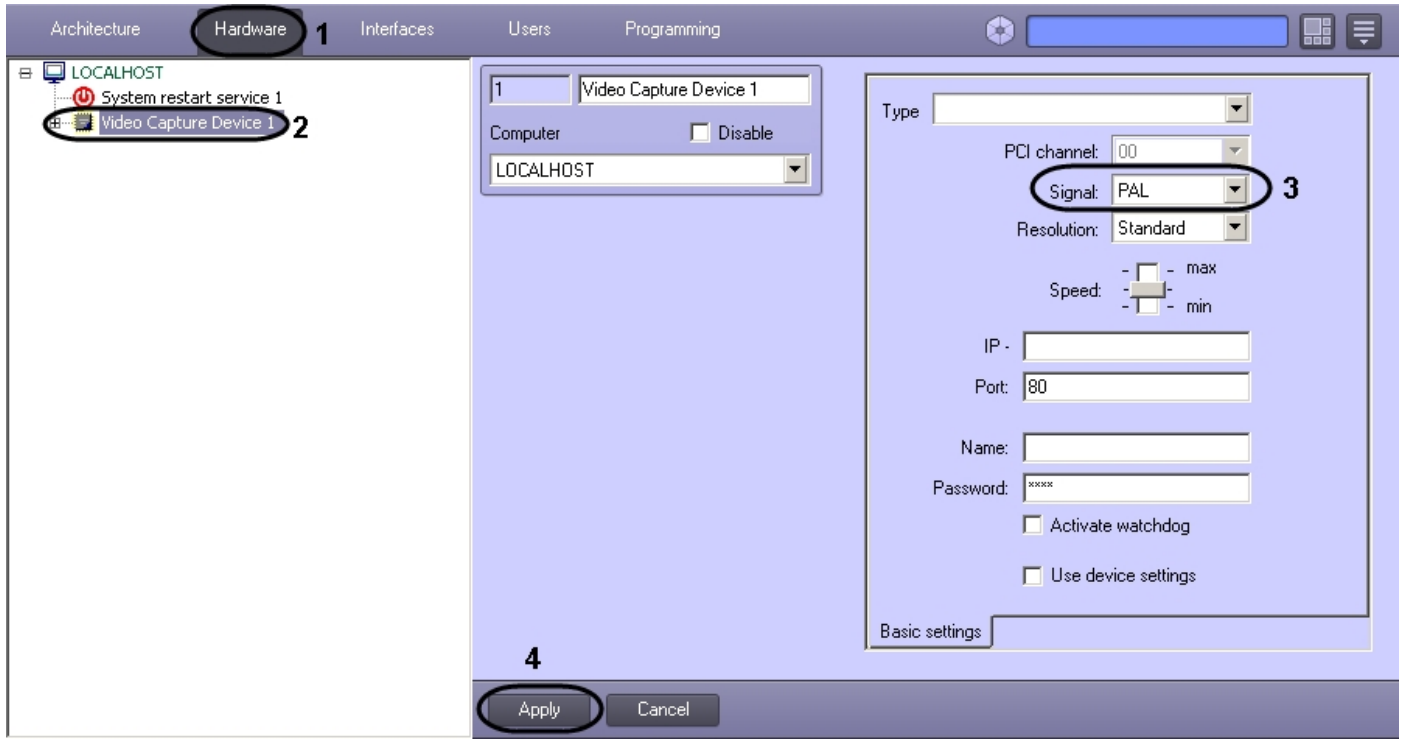

3. In the **Signal** drop-down list, select the **NTSC** value (3).
4. Click the **Apply** button (4).

The input video signal format is now selected.

Frame rate settings

On the page:

- Video capture card resources
- Operation modes of the video capture cards' ADC
- Frame rate setup procedure
- Configuring video subsystem with disabled video channels
- Actual frame rate
- Changing frame scaling
- Allocation of video capture card's resources
- Video signal processing priorities
- Setting video processing priority
- Setting video recording priority

Video capture card resources

By default the resources of video capture cards are uniformly distributed between cameras video signals of which are digitized and processed by this ADC. The frame rate of the digitized video signal is limited by the ADC resources for video signal processing and digitization.

Video capture cards may be configured, so as to give to one or more cameras additional ADC resources, and thus to increase the frame rate of video signals from these cameras. At the same time the frame rate of video signals from other cameras is decreased.

INTELLECT™ software and video capture cards sharing allows reallocating video capture card resources to the cameras:

Option 1. Reallocation of cameras between ADCs of a video capture card.

ADC resources are generally characterized by the maximum total frame rate of video signals. By default ADC resources are uniformly distributed between cameras to the assigned cameras. So, the more camera video signals are digitized and processed by the ADC, the lower the frame rate of the single video signal is.

Reallocation of cameras between ADCs allows increasing the frame rate for some cameras by means of others.

If all allowable cameras are connected to a video capture card, then only uniform distribution on ADC is possible. In this case every ADC of a video capture card digitizes and processes video signal from an equal number of cameras. So, the maximum frame rate is the same for all video signals (except for video signals of different formats and different resolutions).

If the number of cameras connected to a video capture card is less than their maximum number, then it is possible to reallocate them between ADCs of a video capture card. For this, those cameras, which frame rate is to be increased, are allocated separately to one ADC, or allocated in number that is less than the maximum allowable one. Cameras allocated to a given ADC and not subject to strict frame rate requirements, are reallocated to other ADCs.

An example of allocating cameras to ADCs is shown in the figure.

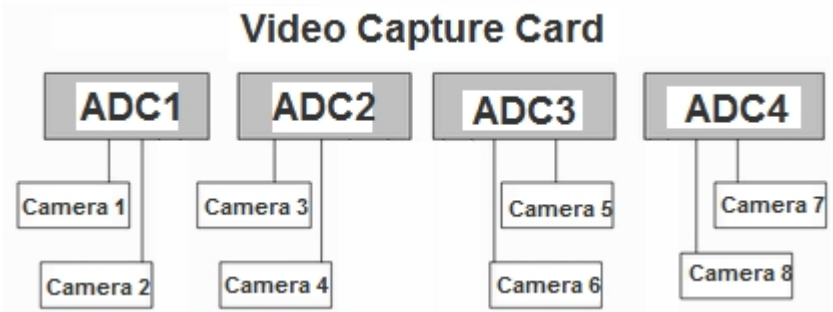

A. Uniform camera allocation between ADCs

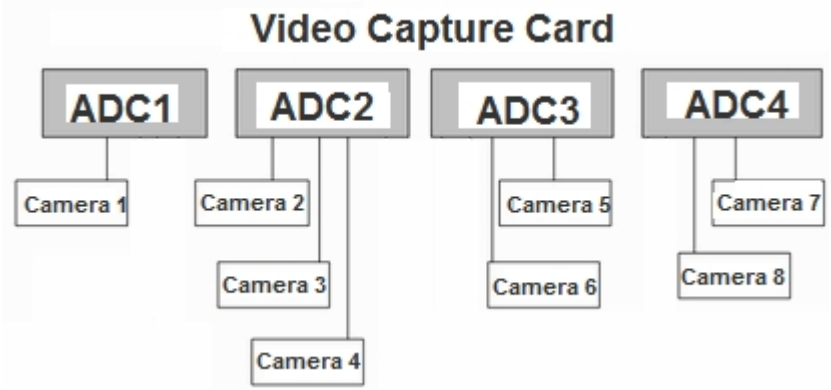

B. reallocating the cameras between ADCs to allocate extra resources to Camera1

Option 2. Reallocation of resources of one ADC between cameras video signal of which are to be processed and digitized by one ADC.

By default the ADC resources are uniformly distributed between cameras video signals of which are digitized and processed by this ADC.

Reallocation of cameras between ADCs allows increasing the frame rate for some cameras by means of others. Reallocation of resources of one ADC to the cameras is much less effective than camera reallocation between the ADC. Therefore this is to be done only if camera reallocation to the ADC is impossible or if it does not help.

With reallocation of resources from 1 ADC to the cameras, one of the cameras gets extra ADC resources for its video signal processing and digitization. Extra ADC resources are formed by removing them from other cameras video signals of which whose are processed by the ADC.

So, for a single ADC, when the frame rate of a certain camera increases, the frame rates of other cameras decrease.

To perform this operation, a selected camera is to have priority in the process queue.

An example of reallocation of resources of one ADC between cameras is shown in the figure below.

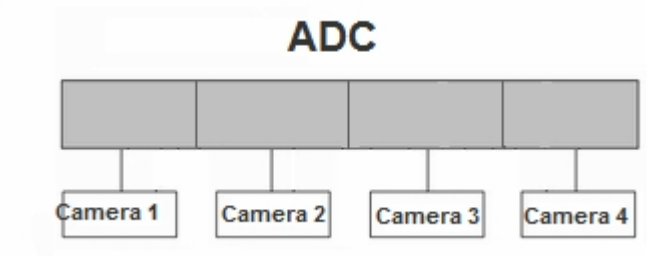

A. Uniform camera allocation between ADCs

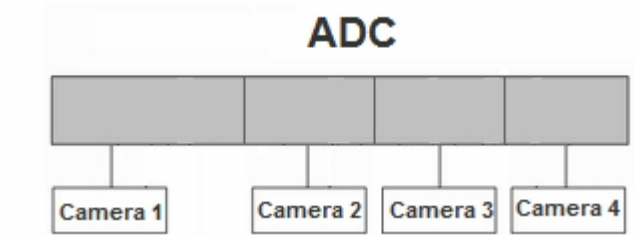

B. reallocating the cameras between ADCs to allocate extra resources to Camera1

Operation modes of the video capture cards' ADC

ADC operation mode is defined by the number of processed and digitized video signals. There are two modes:

1. Live video.
2. Multiplexing.

In the Live video mode all resources of an ADC are used to process the single video signal. The mode provides digital video stream with a maximum frame rate of 25 fps in PAL format and 30 fps in NTSC format.

If the ADC processes two or more video signals, its resources are used in the multiplexing mode. Then the ADC resources are uniformly allocated between the cameras, and part of its resources support the multiplexing process. So, in the multiplex mode the total frame rate of video signals, digitized by a single ADC, is much lower than in the Live video mode.

The maximum permissible total frame rate in the multiplexing mode depends on the frame resolution.

For ADC that digitizes all video signals with standard (352 x 288 pixels in PAL format, 352 x 240 pixels in NTSC format) and/or high (704 x 288 pixels in PAL format, 640 x 240 pixels in NTSC format) frame resolution, the total frame rate is 16 fps in PAL format and 20 fps in NTSC format.

When ADC digitizes at least one of the video signals with full resolution (704 x 576 pixels in PAL format, 640 x 480 pixels in NTSC format), the maximum permissible total frame rate is reduced to 12 fps in PAL format and 15 fps in NTSC format.

Frame rate setup procedure

Default settings for the digitized video signals frame rate are 2 fps in PAL format and 2.5 fps in NTSC format.

While settings it is possible to increase or to reduce the frame rate.

To set up the frame rate, do the following:

1. Switch off the **Camera** objects, which are assigned to the idle video channels. This allows allocating the resources between working cameras only and thus increasing the frame rate.
2. Change frame scaling.
3. Reallocate cameras on ADC of the video capture card.
4. Reallocate resources of one ADC between cameras (priority process queues).

In most cases 1 and 2 steps are sufficient to set the frame rate. 3 and 4 steps are necessary only with high frame rate requirements to one or more cameras.

Configuring video subsystem with disabled video channels

By default resources of video capture cards' ADC are allocated uniformly between all video channels whether there is any signal passing through it or not. So, even if a video channel has no signal, the resources of ADC are allocated to it.

Several **Camera** objects are disabled in turn.

To prevent allocation of ADC resources, the **Camera** objects are to be disabled in INTELLECT™, assigned to the disabled video channels.

To disable the **Camera** objects in INTELLECT™ system, do the following:

1. Define the numbers of the idle video capture channels (taking into account BNC plug numbering).
2. Go to the **Hardware** tab in the **System settings** dialog box (1).
3. Select the **Camera** object, created before, with the same channel number as the BNC plug (idle channel) (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.

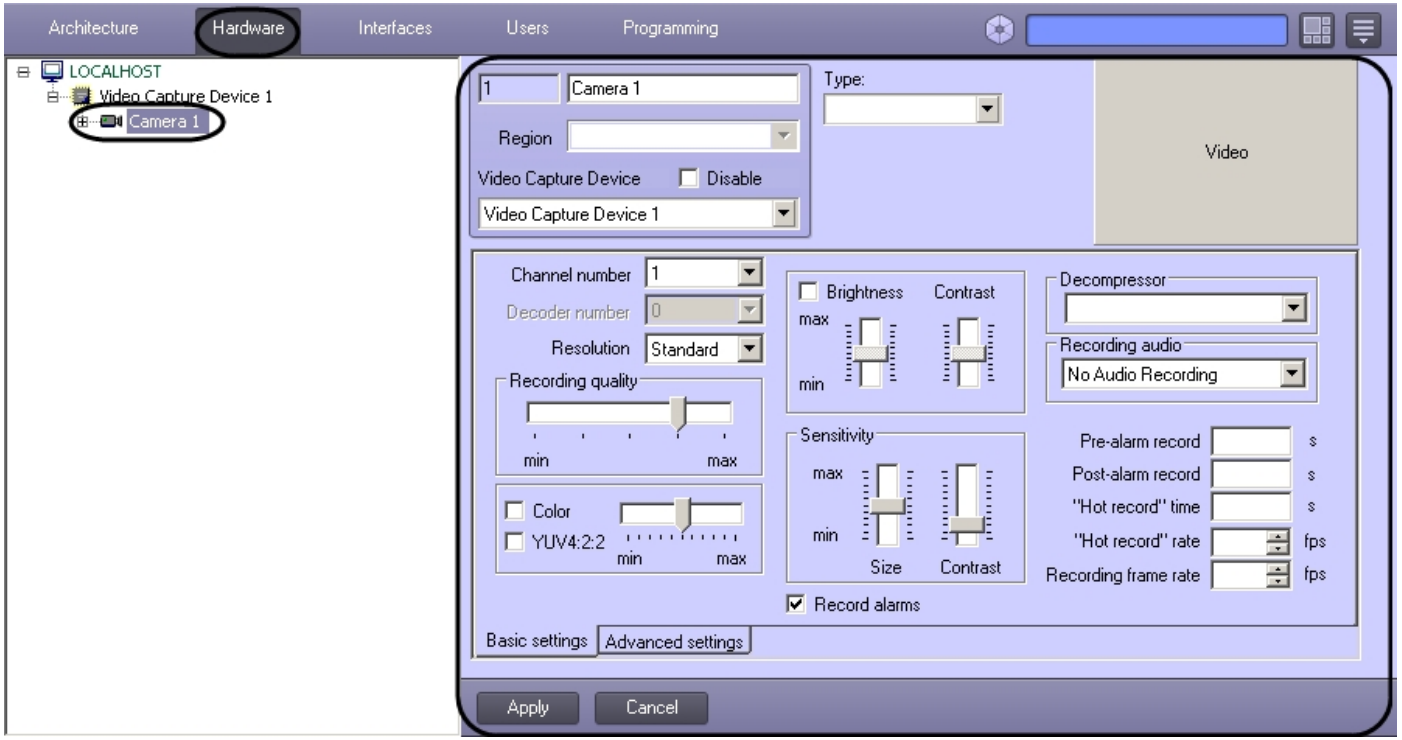

4. Make sure that no signal is displayed in the video field (1).

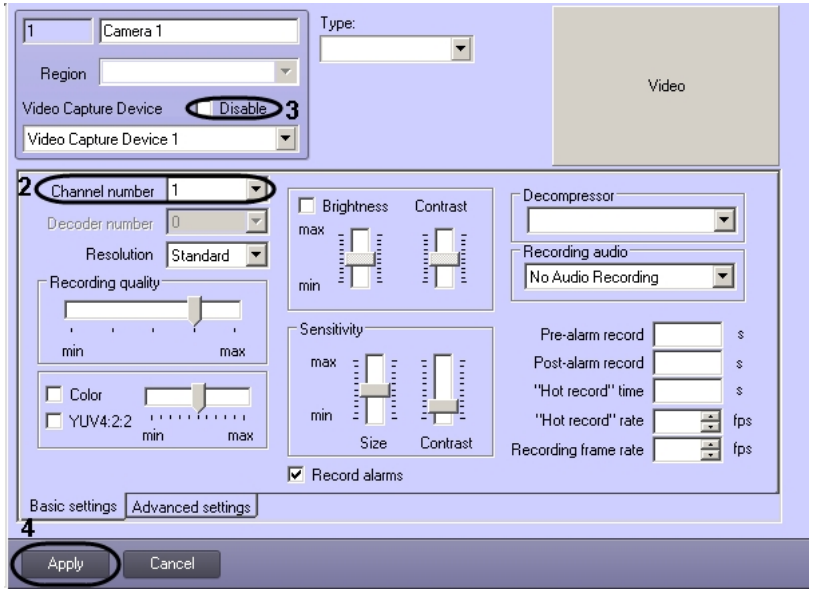

5. The signal displayed in the video field indicates that the **Camera** object is matched to another video channel.The video channel number is specified in the **Channel number** dro p-down list in the **Basic settings** tab (2). Match the **Camera** object with the channel number, which corresponds to the BNC plug number and the **Camera** object number, or scan for a **Camera** object, matched with the desired channel number.
6. Set the **Disabled** checkbox (3).
7. Click the **Apply** button (4).

The disabled **Camera** object is indicated with a cross mark.

Video subsystem with disabled video channels is now configured.

Actual frame rate

It is recommended to define the actual frame rate of video signal digitization and then to set up the frame rate for video signals from video surveillance system cameras.

Frame rate setup is to be done only if video signal frame rates from one or more cameras do not meet the requirements.

Actual frame rates are defined for each camera individually.

To define the actual frame rate for a selected camera, do the following:

1. Configure the video surveillance monitor (see Video signal display settings section);
2. Enable the debug mode in Intellect™ software using the tweaki.exe utility (see Tweaki.exe utility for advanced setup of the Intellect software system section).

In Intellect™ software, actual frame rates of digitized video signals in the debug mode are displayed on the Monitor. To define the frame rate of video signal from a selected camera, do the following:

1. Display the selected camera box on the Monitor.
2. Activate the selected camera box by left clicking on it.
3. The actual frame rate of the selected window video signal is displayed in the information window in the top right corner of the Monitor.

Note.
For Stretch video cards of standard compression (h264) the frame rate that is displayed on Monitor in Intellect™ software can be less than the frame rate that is indicated by the video card manufacturer. This is due to the fact that while displaying the frame rate of video signal digitization on Monitor in Intellect™ software blank frames that are distributed by the video card, are not taken into account. «Blanck frames» do not contain the information about the image and are created by the video capture card when there are no changes in the video stream and a new video frame is the same as the previous one (for example, there is no motion in the frame).

Changing frame scaling

By default INTELLECT™ software digitizes video signals with the frame rate lower than maximum allowed one. This is caused by the following:

1. Video signal processing and digitization with a high frame rate is a resource-intensive process. When the video signal frame rate increases, configuration requirements increase for the computer used as a Server.
2. Video signal is transmitted to the Remote Workplaces with the same frame rate as it was digitized. So, network capacity requirements increase together with the frame rate increase.

By default the total frame rate of video signals, which are digitized and processed by the same ADC, is 2 times lower than the maximum allowed one. This ratio is provided by frame scaling, which allows every second frame to be processed by the program.

Settings allow reducing (total frame rate increases) or increasing (total frame rate decreases) the scaling.

Frame scaling is changed separately and independently for every ADC.

To change scaling of ADC video signals, do the following:

1. Go to the Hardware tab in the **System settings** dialog box (1).
2. Select the relevant **Video Capture Device** object, created before, in the **Hardware** tab in the objects tree (2). The settings panel for the selected object is displayed in the right part of the **Hardware** tab.

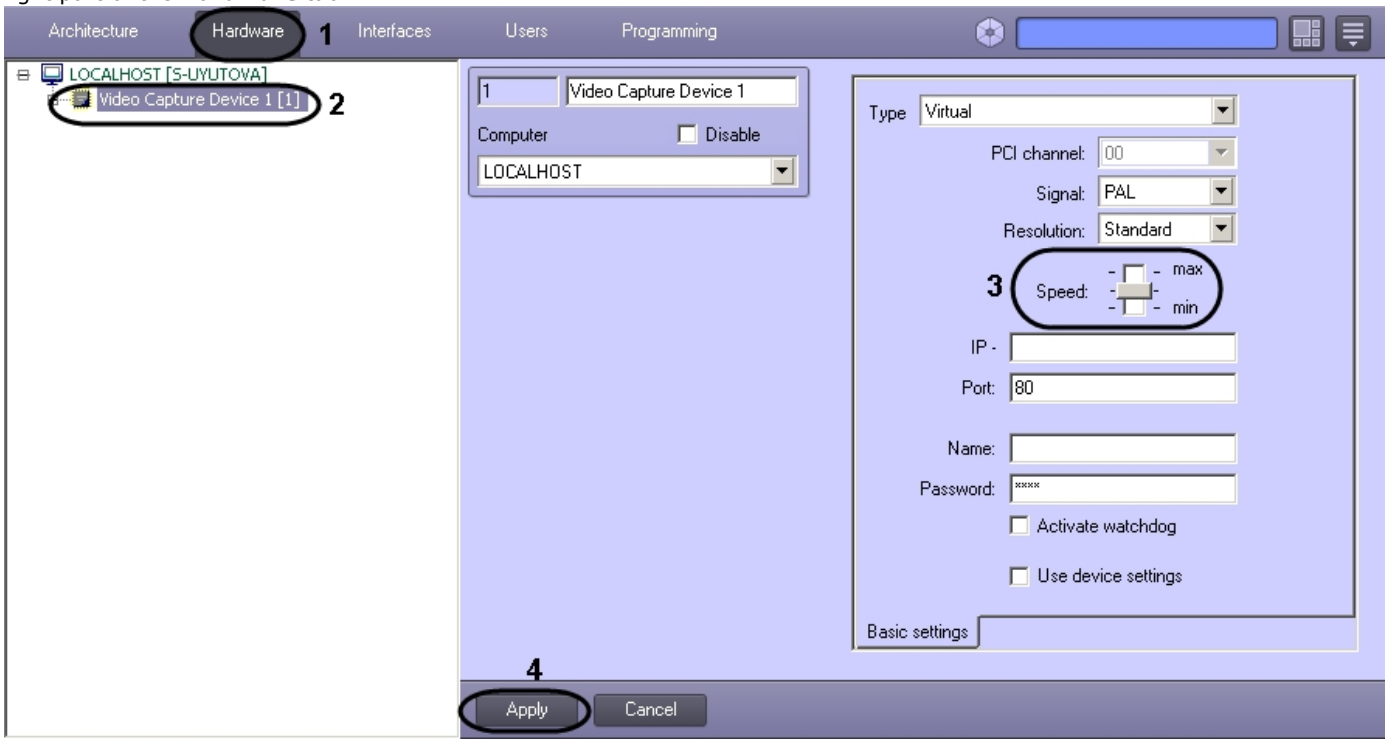

3. If it is necessary to increase the total frame rate up to the maximum allowed value, move the **Speed** slider to the **Max** position (3).
4. If it is necessary to reduce the total frame rate to the minimum allowed value, move the **Speed** slider to the **Min** position. The minimum total frame rate of video signals, digitized and processed by selected ADC, is 3 times lower than the maximum allowed one.
5. If it is necessary to return the default scaling settings, move the **Speed** slider to the middle position. The default total frame rate is 2 times lower than the maximum allowed one.
6. Click the **Apply** button (4).
7. Close the **System settings** dialog box and restart INTELLECT™ software.

Note.
Without restart, changes in video signal scaling may be applied incorrectly.

Allocation of video capture card's resources

By default all cameras are uniformly allocated to ADC of video capture card. Thus ADC resources are uniformly distributed to the cameras, attached to the video capture card, and all cameras have the same frame rate.

If the number of cameras connected to a video capture card is less than their maximum allowed number, it is possible to reallocate them between different ADCs of the video capture card. Reassigning of cameras allows increasing the frame rate for some cameras by means of a decrease in the frame rate of others.

Before reassigning the cameras to ADCs of the video capture card, disable the **Camera** objects corresponding to disabled cameras (see Configuring video subsystem with disabled video channels section).

> **Note.**
> Video inputs numeration of SC300Q16 (FX4) and SC300D16 (FX8) video capture cards does not correspond to the numeration of PCI channels in Intelect. It is impossible to allocate video inputs to chips one after another (i.e. the first corresponds to 1 and 2 chips, the second upper input corresponds to 3 and 4 etc.) because OS determines it.

To increase the frame rate of the video signal from one or more cameras, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera, which frame rate is to be increased, in the objects tree in the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.

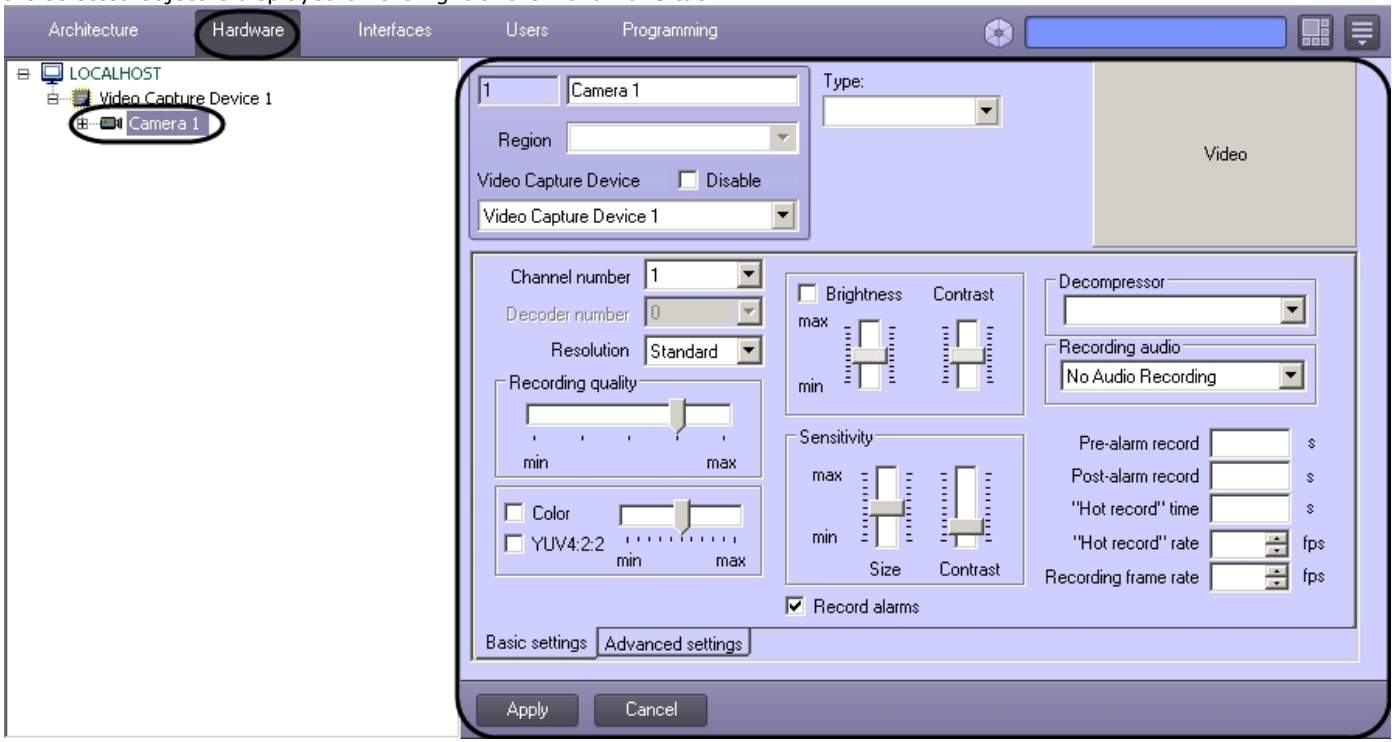

3. To increase the frame rate of a camera up to the Real time rate (25 fps in PAL format and 30 fps in NTSC format), reallocate other cameras serviced by the same ADC as with

the camera above , to other ADCs.

For this move **Camera** objects to parent branches of other **Video Capture Device** objects. The parent **Video Capture Device** object for a **Camera** object is set by selecting the number of the parent object in the **Video Capture Device** list of settings panel for the **Camera** object. As a result the **Camera** object moves to a subdirectory of the selected **Video Capture Device** object.

Example 1. Configuring video signal digitization with the Real time frame rate.

Task. Video signal on Camera2 is to be digitized with the Real time frame rate.

Initial data. The card has 4 ADCs. They are matched to 4 **Video Capture Device** objects in the objects tree. The video capture card may have up to 16 cameras connected to it. 8 cameras are actually connected to the video capture card. The objects matched to the remaining 8 cameras are disabled. Each of two ADCs, matched to the **Video Capture Device 1** a nd **Video Capture Device 2** objects, is configured to digitize the signals from 4 cameras. The ADCs matched to the **Video Capture Device 3** and **Video Capture Device 4** objects are not configured to digitize signals from any cameras. An example of the objects tree is given in figure A:

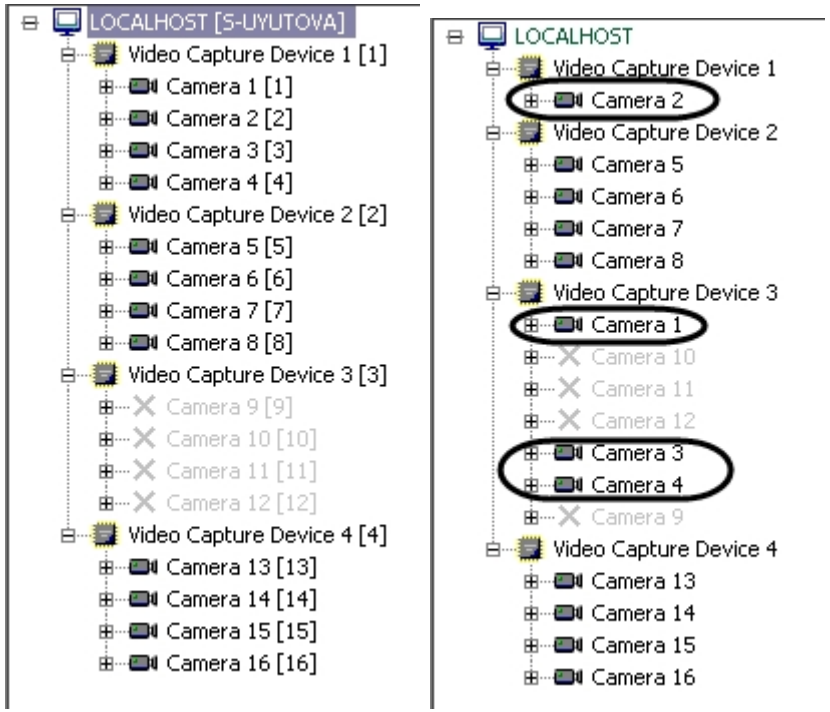

A. Initial data B. Result

Solution. Do the following:

1. Select the **Camera 1** object in the objects tree. The settings panel for the selected object is displayed.
2. Select **Video Capture Device 3** in the **Video Capture Device** list.
3. Click the **Apply** button.
4. The **Camera 1** object moves to the subdirectory of the **Video Capture Device 3** object (see B).
5. Repeat (1) – (4) steps for the **Camera 3** and **Camera 4** objects.

6. Select the **Video Capture Device 1** object in the objects tree.
7. Make sure that the **Speed** slider is in the max position.
   If the **Speed** slider is in the max position, then setup is completed.
   If the **Speed** slider is in another position, move it to the max position and do (8) - (10) steps.
8. Click the **Apply** button.
9. Close the **System settings** dialog box and restart INTELLECT™ software.
10. The frame rate of the selected camera increases up to the Real time rate (for information on testing the frame rate change, see the Actual frame rate section).
11. If the number of connected cameras prevents the configuration of video signal digitization from one of the cameras with the Real time rate (for example, when 15 of 16 allowed cameras are connected), or if the frame rate on several cameras is to be increased simultaneously to the rate, lower than the Real time one, then the cameras, the frame rate of which is to be increased, are allocated between ADCs and they do not exceed the maximum allowable number. The frame rate is increased by as many times, as the number of cameras on ADC is reduced.

Video capture card's resources are now allocated.

Example 2. Configuring video signal digitization from 2 cameras with increased frame rate

Task. Video signal on **Camera1** and **Camera5** is to be digitized with increased frame rate.

Initial data. The card has 4 ADCs. They are matched to 4 **Video Capture Devices** objects in the objects tree. The video capture card may have up to 16 cameras connected to it. 12 cameras are actually connected to the video capture card. The objects matched to the remaining 4 cameras are disabled. Each of 3 ADCs, matched to the **Video Capture Device 1**, **Video Capture Device 2** and **Video Capture Device 4** objects, is configured to digitize the signals from 4 cameras. The ADC, matched to the **Video Capture Device 3** object, is not configured to digitize the signals from any camera. An example of the objects tree is given in figure A.

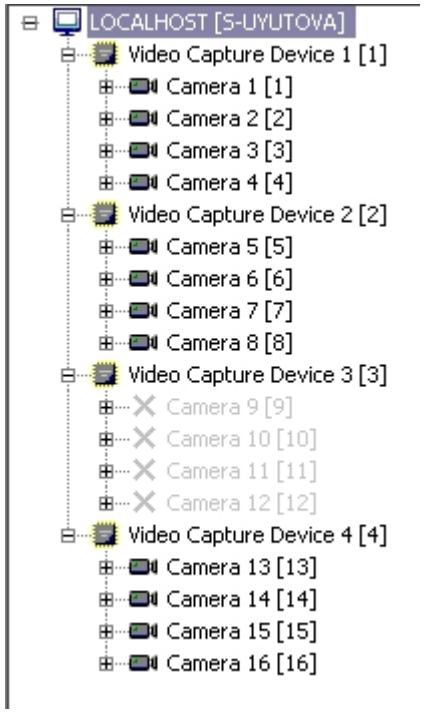

A. Initial data

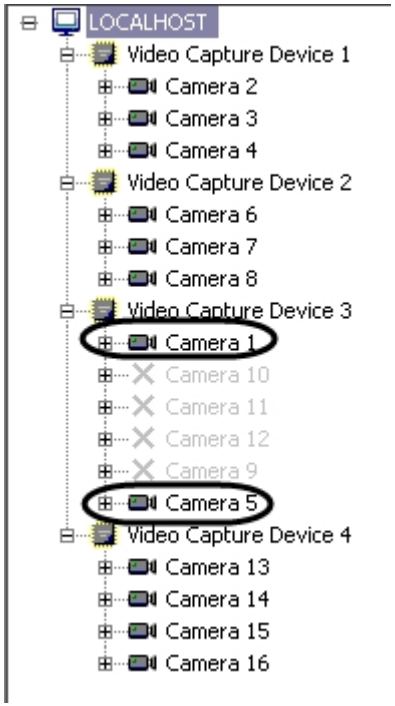

B. Result

Solution. Do the following:

1. Select the **Camera 1** object in the objects tree. The settings panel for the selected object is displayed.
2. Select **Video Capture Device 3** in the **Video Capture Device** list.
3. Click the **Apply** button.
4. The **Camera 1** object moves to a subdirectory of the **Video Capture Device 3** object (B).
5. Repeat (1) – (4) steps for the **Camera 5** object.
6. The frame rate on **Camera1** and **Camera5** increases twofold (for information on testing the frame rate change see the Actual frame rate section).
7. Click the **Apply** button.

Video capture card's resources are now allocated.

> **Note.**
> Ways of resources allocation (given in examples) are not used for SC200Q4 (FS15)\SC200Q4 LOW PROFILE (FS115)\SC300Q16 (FX4)\SC300D16 (FX8) video capture cards, because for these cards numbers of PCI channels (specified in settings of the **Video Capture Device** objects) are connected with physical inputs (BNC connectors).

Video signal processing priorities

The ADC resources are uniformly distributed to the assigned cameras by default.

ADC resources reallocation allows increasing the frame rate for a camera by means of other cameras. Reallocation of resources from 1 ADC between the cameras is much less effective than camera reallocation on the ADC. Therefore it should only be done if camera reallocation on the ADC is impossible or if it does not help.

With reallocation of resources from 1 ADC between the cameras, one of the cameras is allocated with additional ADC resources for its video signal processing and digitization. Additional ADC resources are formed by removing them from other cameras, video signals of which are processed by the ADC.

A camera is allocated with additional ADC resources via the priority process queue.

INTELLECT™ software provides 1/2 and 1/3 process queues.

When a camera has a 1/2 process queue, its video signal is processed in every second frame. So, the digitization frame rate on this camera is the half of total frame rate of the considered ADC.

When a camera has a 1/3 process queue, its video signal is processed in every third frame. So, the digitization frame rate on this camera is one third of total frame rate of the considered ADC.

Example 1. The ADC is configured to digitize video signal from 4 cameras.

If all the cameras have a common queue, the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 4, Camera 1, Camera 2, Camera 3…

Let us suppose that Camera 1 has 1/2 queue, and the rest of the cameras are in the common queue. Then the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 1, Camera 3, Camera 1, Camera 4, Camera 1…

So, the frame rate on Camera 1 is increased by 2 times and becomes the half of total frame rate of the considered ADC. The frame rate of each of the remaining cameras becomes 1.5 times less and makes up 1/6 of total frame rate of the considered ADC.

Example 2. The ADC is configured to digitize the video signal from 3 cameras.

If all the cameras have a common queue, the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 1, Camera 2, Camera 3…

Let us suppose that Camera 1 has a 1/2 queue, and the rest of the cameras are in the common queue. Then the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 1, Camera 3, Camera 1, Camera 2…

So, the frame rate of Camera 1 is increased by 1,5 times and becomes the half of total frame rate of the considered ADC. The frame rate of each of the remaining cameras becomes 1.33 times less and makes up 1/4 of total frame rate of the considered ADC.

Example 3. The ADC is configured to digitize video signal from 4 cameras.

If all the cameras have a common queue, the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 4, Camera 1, Camera 2, Camera 3…

Let us suppose that Camera 1 has 1/3 queue, and the rest of the cameras are in the common queue. Then the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 1, Camera 4, Camera 2, Camera 1…

So, the frame rate of Camera 1 is increased by 1.33 times and becomes one third of total frame rate of the considered ADC. The frame rate of each of the remaining cameras becomes 1.125 times less and makes up 2/9 of total frame rate of the considered ADC.

Example 4. The ADC is configured to digitize video signal from 4 cameras.

If all the cameras have a common queue, the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 4, Camera 1, Camera 2, Camera 3…

Let us suppose that Camera 1 and Camera 2 have 1/2 queue, and the rest of the cameras are in the common queue. Then the ADC digitizes video signals in the following sequence:

Camera 1, Camera 2, Camera 3, Camera 1, Camera 2, Camera 4, Camera 1…

So, the frame rate of Camera 1 is increased by 1.33 times and becomes equal one third of total frame rate of the considered ADC. The frame rate of each of the remaining cameras becomes 1.5 times less and makes up 1/6 of total frame rate of the considered ADC.

Note1. If Camera 1 and Camera 2 have 1/3 queue and Camera 3 and Camera 4 are in the common queue, then allocation of the ADC's resources is as it is showed in the Example4.

Note2. It has no sense to enqueue one of two cameras, with 1/2 priority allocated to the same ADC, because this camera video signal will be processed as if it were in the common queue.

Note3. It has no sense to enqueue one of three cameras with 1/3 priority allocated to the same ADC, because this camera video signal will be processed as if it were in the common queue.

Reallocation of resources of 1 ADC between the cameras is possible in two modes:

1. in the processing mode, i.e. with video signal digitization and processing before it is displayed;
2. in the recording mode, i.e. with video signal digitization and processing before it is recorded into the Server archive. When cameras are switched to the recording mode, video signals are displayed with the rate, corresponding to the given ADC resources allocation.

Setting video processing priority

While processing video before displaying it, ADC resources are reallocated between the cameras by queueing one of the cameras with 1/2 or 1/3 priority.

This setting is relevant only for the following video capture cards: FS5, FS6, FS8 and FS16.

To change the order of processing video from the selected camera, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera, ADC video processing queue of which is to be changed, in the **Hardware** tab in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Advanced settings** tab on the settings panel of the **Camera** object (3).

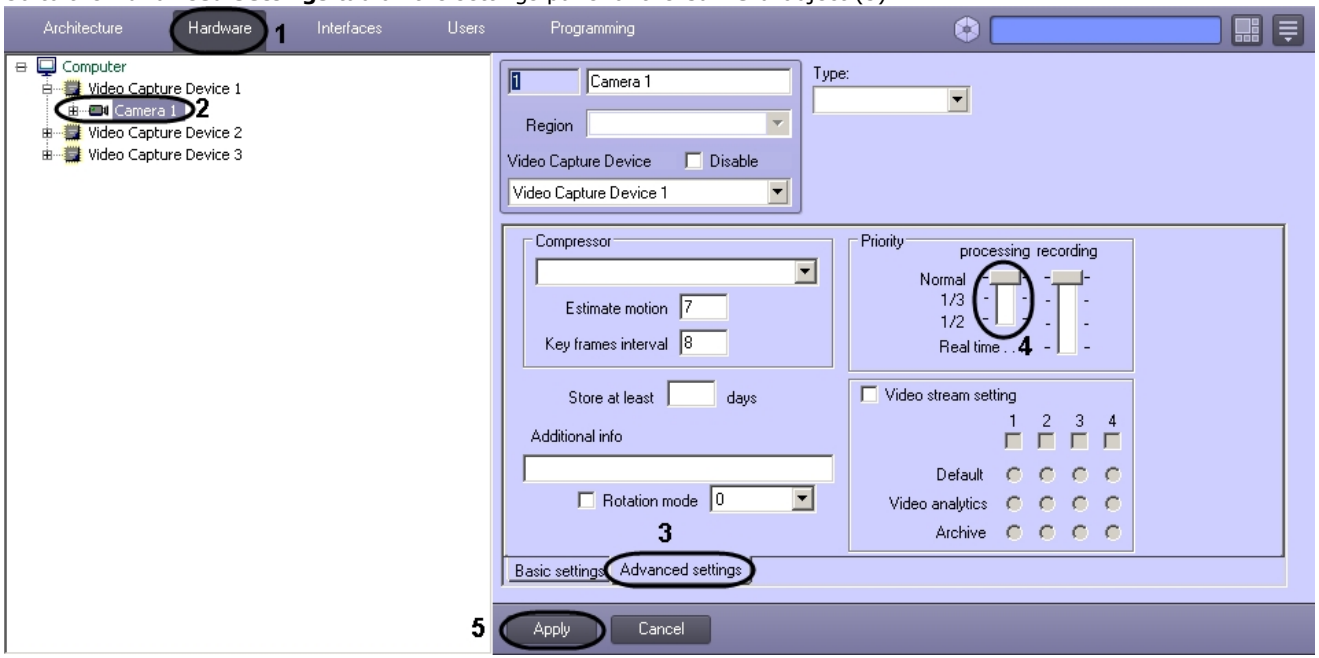

4. If it is necessary to queue the camera with 1/2 priority for ADC video processing, move the **Processing** slider in the **Priority** group to the **1/2** position (4).
5. If it is necessary to queue the camera with 1/3 priority for ADC video processing, move the **Processing** slider in the **Priority** group to the **1/3** position.
6. If it is necessary to return the camera into the normal queue for ADC video processing (set by default), move the **Processing** slider in the **Priority** group to the **Normal** positio n.
7. Click the **Apply** button (5).

Video processing priority is now set.

Setting video recording priority

While processesing the video signal before recording it to the video server archive, ADC resources are reallocated between the cameras by queueing one of the cameras with 1/2, 1/3 or the Real time priority.

If the camera with Real time priority switches into the recording mode, it will be allocated with all ADC resources for its video processing. So, the frame rate on this camera becomes equal to the total frame rate of the considered ADC. No video from other cameras, allocated to a given ADC, is processed, displayed and recorded to the disk.

To change the processing queue of the video on the selected camera in the recording mode, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera, ADC video processing queue of which is to be changed, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Advanced settings** tab on the settings panel of the **Camera** object (3).

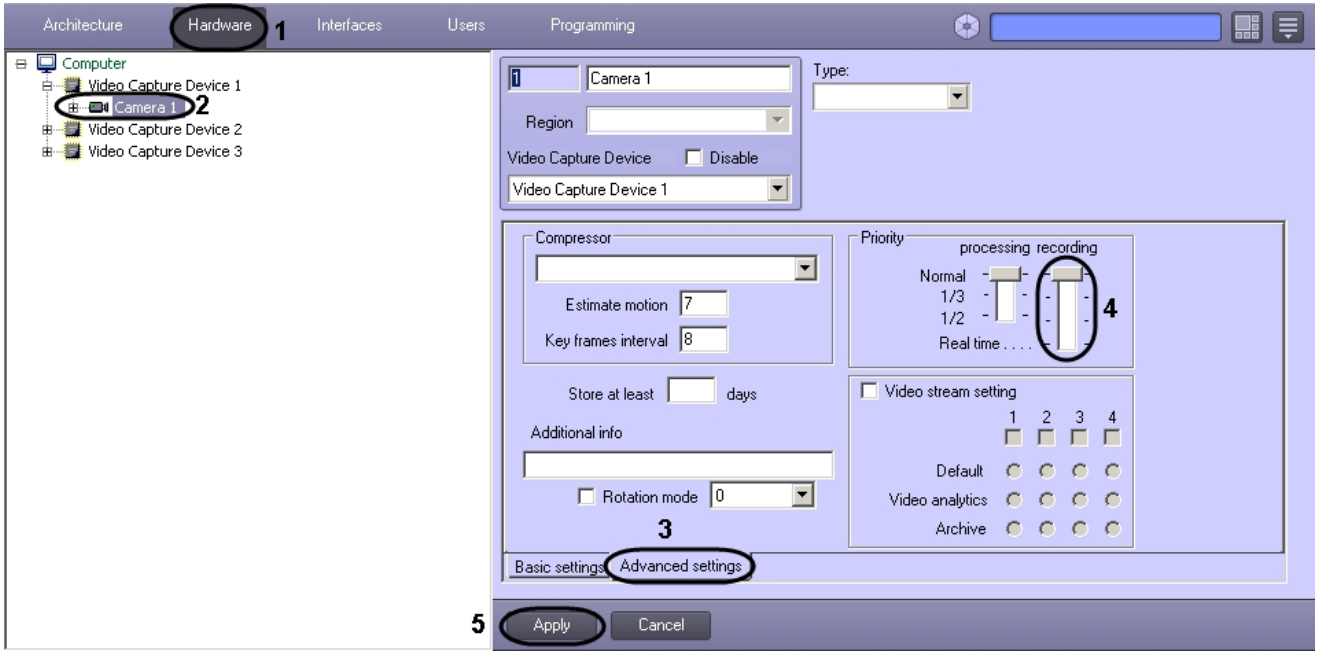

4. If it is necessary to queue the camera with 1/2 priority for ADC video processing in the recording mode, move the **Recording** slider in the **Priority** group to the **1/2** position (4).
5. If it is necessary to queue the camera with 1/3 priority for ADC video processing in the recording mode, move the **Recording** slider in the **Priority** group to the **1/3** position.
6. If it is necessary to queue the camera with the Real time priority for ADC video processing in the recording mode, move the **Recording** slider in the **Priority** group to the **Real time** position.
7. If it is necessary to return the camera into the normal queue for ADC video processing in the recording mode (set by default), move the **Recording** slider in the **Priority** group to the **Normal** position.
8. Click the **Apply** button (5).

Video recording priority is now set.

Brightness, contrast, color depth and color rendition format settings

On the page:

- Brightness and contrast settings
- Color depth adjustment
- Selecting the color rendition format

Brightness and contrast settings

INTELLECT™ software provides facilities for video brightness and contrast adjustment in different modes depending on the demands of the video characteristics.

Brightness can be adjusted in the following modes:

1. Auto brightness and contrast adjustment. In this mode INTELLECT™ software automatically applies the internal algorithm of video brightness and contrast adjustment. In this mode manual brightness and contrast adjustment is unavailable.
   This mode is activated by default and it does not need any additional settings. This mode to adjust brightness and contrast is recommended for video with no special requirements to video characteristics.
2. Manual brightness and contrast adjustment. In this mode the administrator may change the **Brightness** and **Contrast** settings.
3. Manual brightness and contrast adjustment with auto optimization. In this mode the administrator manually presets the values of **Brightness** and **Contrast** parameters. After the preset is confirmed, INTELLECT™ software automatically launches the process of video image brightness and contrast optimization. This process involves step-by-step changing of video brightness and contrast.

Note.
The ManualBrightnessControl line parameter in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\Video for 32-bit system (HKEY_LOCAL_MACHINE\Software\Wow6432Node\ITV\INTELLECT\Video for 64-bit system) registry is used to enable automatic adjustment of IP-cameras' brightness and contrast. If ManualBrightnessControl is equal to 1, then the manual brightness and contrast control of IP-cameras is enabled. If ManualBrightnessControl is equal to 0, then the mode of the manual brightness and contrast control of IP-cameras is set on the settings panel of the corresponding Camera object.

Note.
Manual Brightness and Contrast Control of IP-cameras is enabled by default.

Brightness and contrast are changed separately and independently for every camera.

To adjust brightness and contrast, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera, brightness and contrast of which is to be adjusted, in the **Hardware** tab in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).
   To adjust brightness and contrast, use the **Brightness** and **Contrast** sliders on the settings panel of the **Camera** object (4).

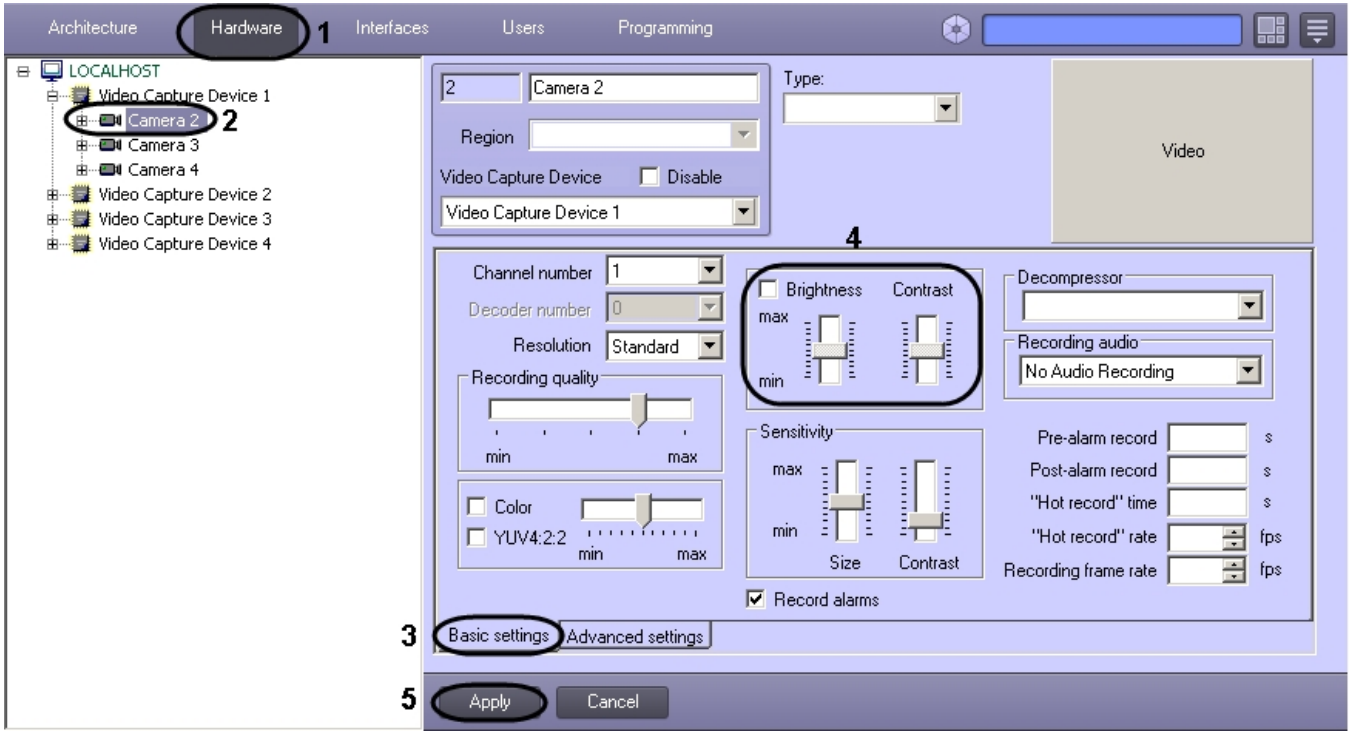

4. Auto brightness and contrast adjustment mode is activated by default. Active brightness and contrast auto adjustment mode is indicated by the absence of the check in the **Brig htness** and **Contrast** boxes. In this mode manual brightness and contrast adjustment is unavailable. So, the **Brightness** and **Contrast** sliders are deactivated.

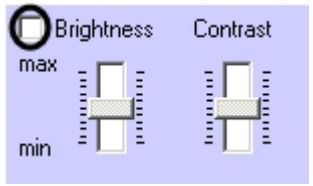

   The mode is activated by default. To return to this mode, uncheck the checkbox next to the **Brightness** and **Contrast** sliders.
5. To go to the manual brightness and contrast adjustment mode, check the checkbox next to the **Brightness** and **Contrast** sliders. In this mode brightness and contrast settings are changed by moving the corresponding sliders.

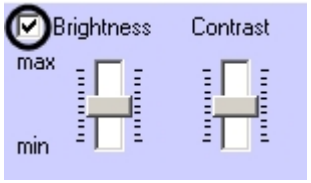

6. To go to the manual brightness and contrast adjustment with auto optimization mode, check the checkbox next to the **Brightness** and **Contrast** sliders.

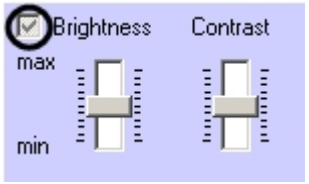

In this mode brightness and contrast settings are changed by moving the corresponding sliders. To launch the video brightness and contrast auto optimization, click the **Apply** b utton at the bottom of the **System settings** dialog box. The optimization sequence involves a step-by-step change of video brightness and contrast.

7. To activate the new brightness and contrast settings, click the **Apply** button (5).

> **Note.**
> The sight control of brightness and contrast settings is performed using the viewing field.

Brightness and contrast are now adjusted.

Color depth adjustment

Color depth (**Saturation** parameter in the HSL color spectrum model) defines the number of colors used to build an image, while digitizing it by the video capture card. Color depth in INTELLECT™ software corresponds to the **Color Depth** setting.

Color depth is set for each camera individually.

The color depth mean value is set by default.

While adjusting the color depth bear in mind that the image color depth is directly proportional to the frame size and thus to the video stream size. So, the digitized video stream with the greater color depth is bigger. The bigger the video stream, the bigger the HDD capacity to store it and the bigger the channel capacity to transmit it are required.

To change the image color depth, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the **Hardware** tab in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3)

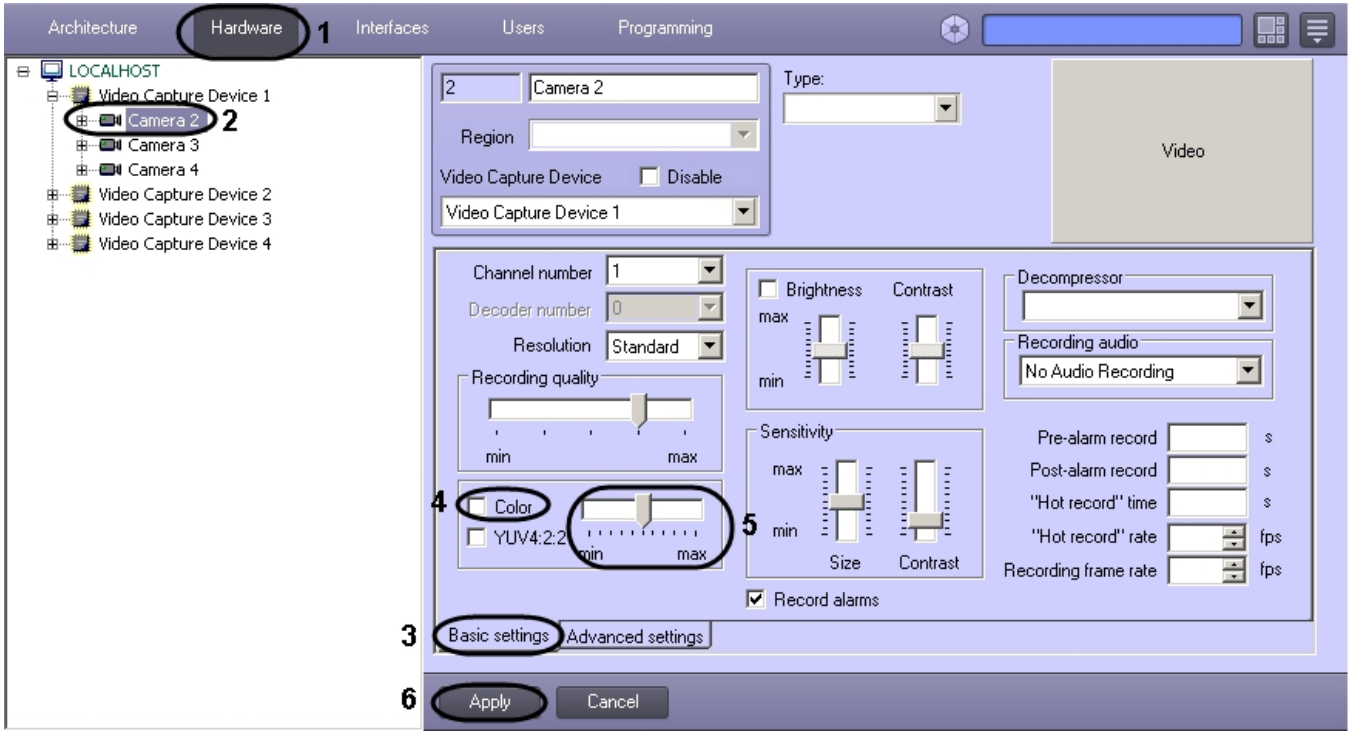

4. To reduce the image color depth to the black-and-white palette, uncheck the **Color** checkbox.
5. To change the color depth in other cases, move the **Color** slider on the right of the **Color** checkbox into the required position (5). The slider's **Max** position corresponds to the maximum color depth of the image, and the **Min** position - to its minimum color depth (black-and-white image). The sight control of color depth settings is performed using the viewing field.
6. Click the **Apply** button (6).

Color depth is now adjusted.

Selecting the color rendition format

Video image color rendition format fixes the number and the sequence of digitized video signal bits (or analog video signal frequencies), that contains its color depth data. So, the digitized video stream with the higher color depth is bigger. The bigger the video stream size, the bigger the HDD capacity to store it and the bigger the channel capacity to transmit it are required.

The TV systems use two formats of video color rendition: YUV 4:2:0 and YUV 4:2:2.

YUV 4:2:2 color rendition format is the standard format in TV systems. YUV 4:2:2 format provides high color depth and gives a large size of video stream. That is why video surveillance systems use to apply the YUV 4:2:0 format. In YUV 4:2:0 format, video signal color depth is slightly lower, than in YUV 4:2:2 format, and video stream size, digitized in YUV 4:2:0 format, is several times less than that in YUV 4:2:2 format.

INTELLECT™ software has digitization options in both formats: YUV 4:2:0 and YUV 4:2:2.

Video color rendition format is set for each camera individually.

Default encoding of video signals for all cameras is performed by the video capture card in YUV 4:2:0 color rendition format.

To configure the encoding of video signals in YUV 4:2:2 format, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the **Hardware** tab in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3)

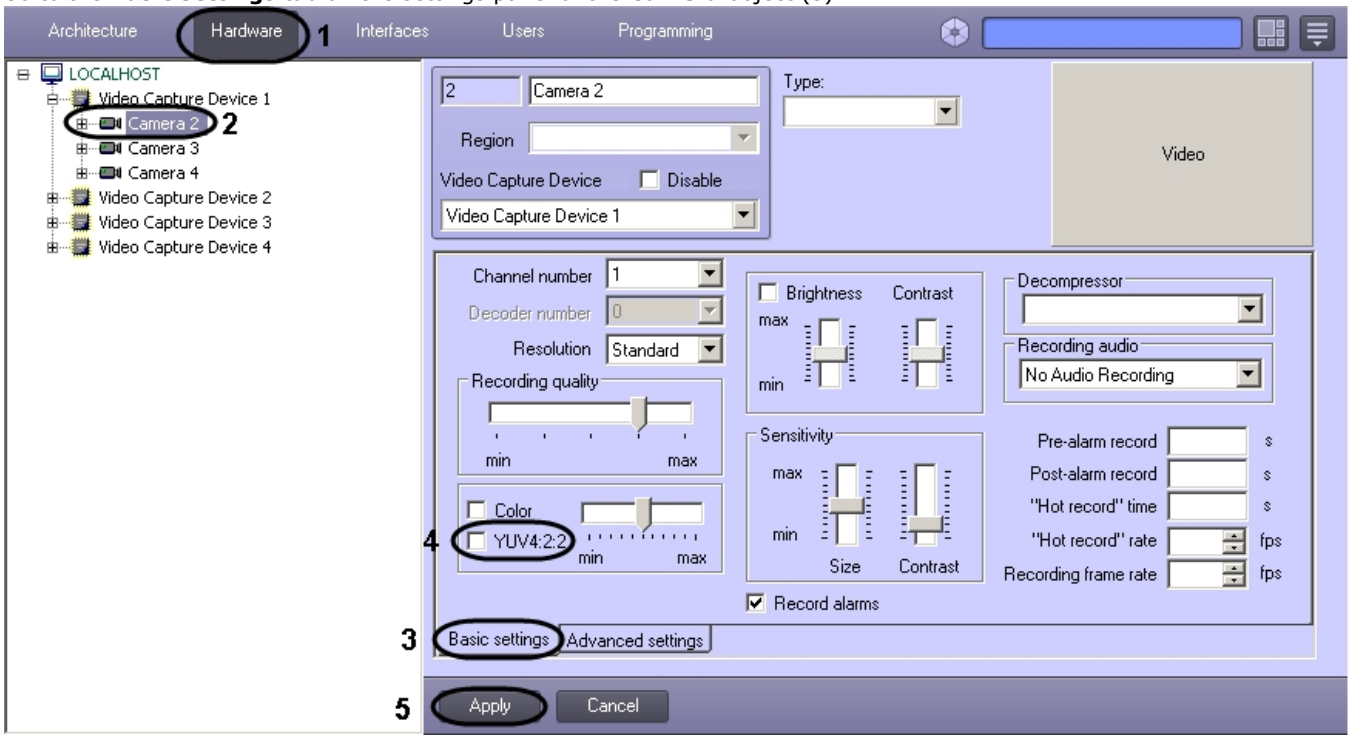

4. Set the **YUV 4:2:2** checkbox (4). The sight control of color rendition settings is performed using the viewing field.
5. Click the **Apply** button (5).

The color rendition format is now selected.

Configuring video compression

On the page:

- Compression rate settings
- Key frame rate settings
- Setting delta frame creation criterion

Compression rate settings

The image is compressed to reduce the size of video stream. Video is not compressed when it is displayed on the Monitor of the Server.

An increase in compression rate leads to video degradation. Intellect™ software compresses video right after its digitizing by the video capture card, prior to its recording and/or before transmitting it to the Remote Workstations.

Video compression rate is configured for each camera individually.

INTELLECT™ system uses the **Quality** setting for the compression rate parameter, which is reverse to the compression rate.

In most cases the default **Quality** setting is sufficient.

To change the video compression rate, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

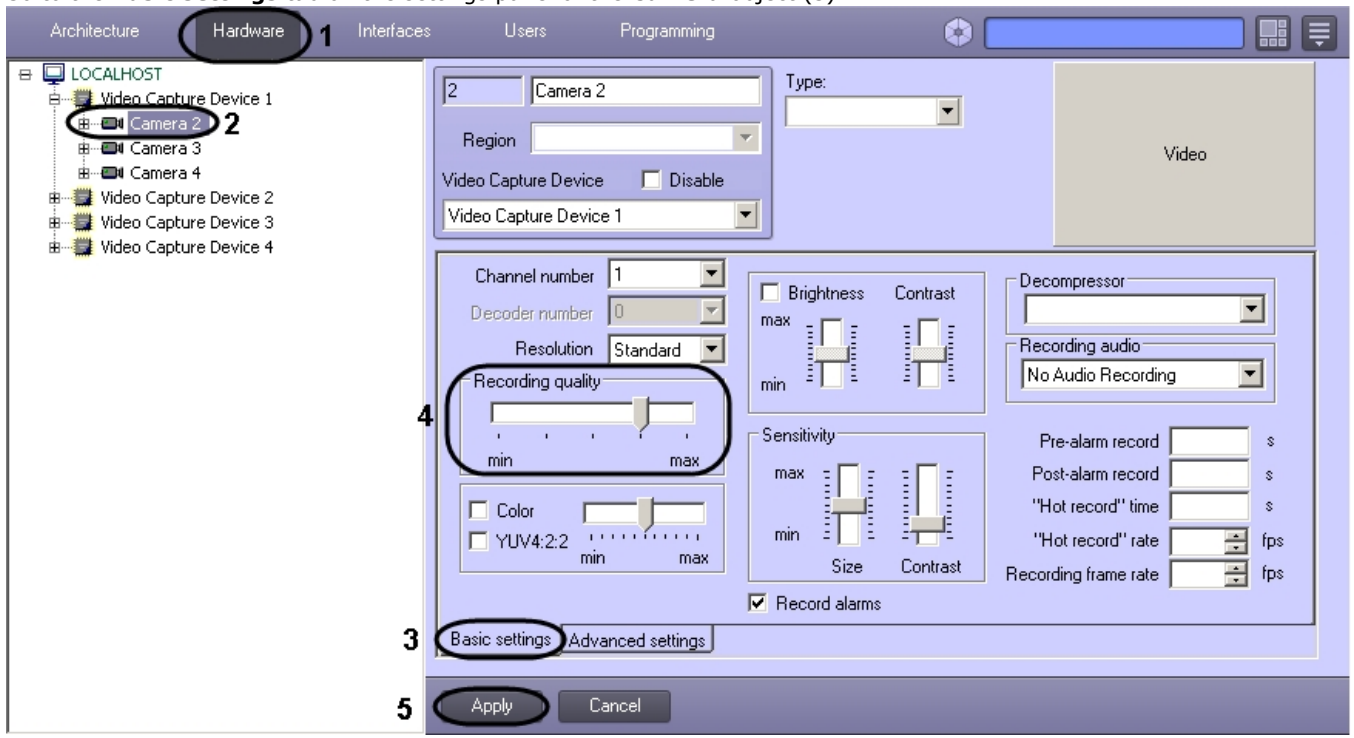

4. If it is necessary to improve the video quality, move the **Quality** slider to the **Max** (4).
   If it is necessary to reduce the size of video stream from the camera, move the **Quality** slider to the **Min**.

> **Note.**
> Use the viewing field to estimate video enhancement or degradation.

5. Click the **Apply** button (5).

Key frame rate settings

INTELLECT™ software uses Motion Wavelet algorithm for video processing and compression. Processed by this algorithm, the video is the sequence of key - and delta frames. A key frame is a full frame of an image. A delta frame (differential frame) is an image containing only pixel blocks which differ from the previous key frame.

Motion Wavelet algorithm guarantees consistency of a frame regardless of key frame rate. With an increase of motion intensity in a frame, the size of delta frame is also increased and the quality of video does not change. With very intense motion (more than 70% of frame is engaged) the setting of key frame rate is ignored and every frame is processed as a key frame.

The best value of frame rate is set by default in INTELLECT™ software: every 8^{th} frame is processed as a key frame. If there are no special requirements to video size and quality, it is recommended to keep the default key frame rate.

To change the key frame rate, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Advanced settings** tab on the settings panel of the **Camera** object (3)

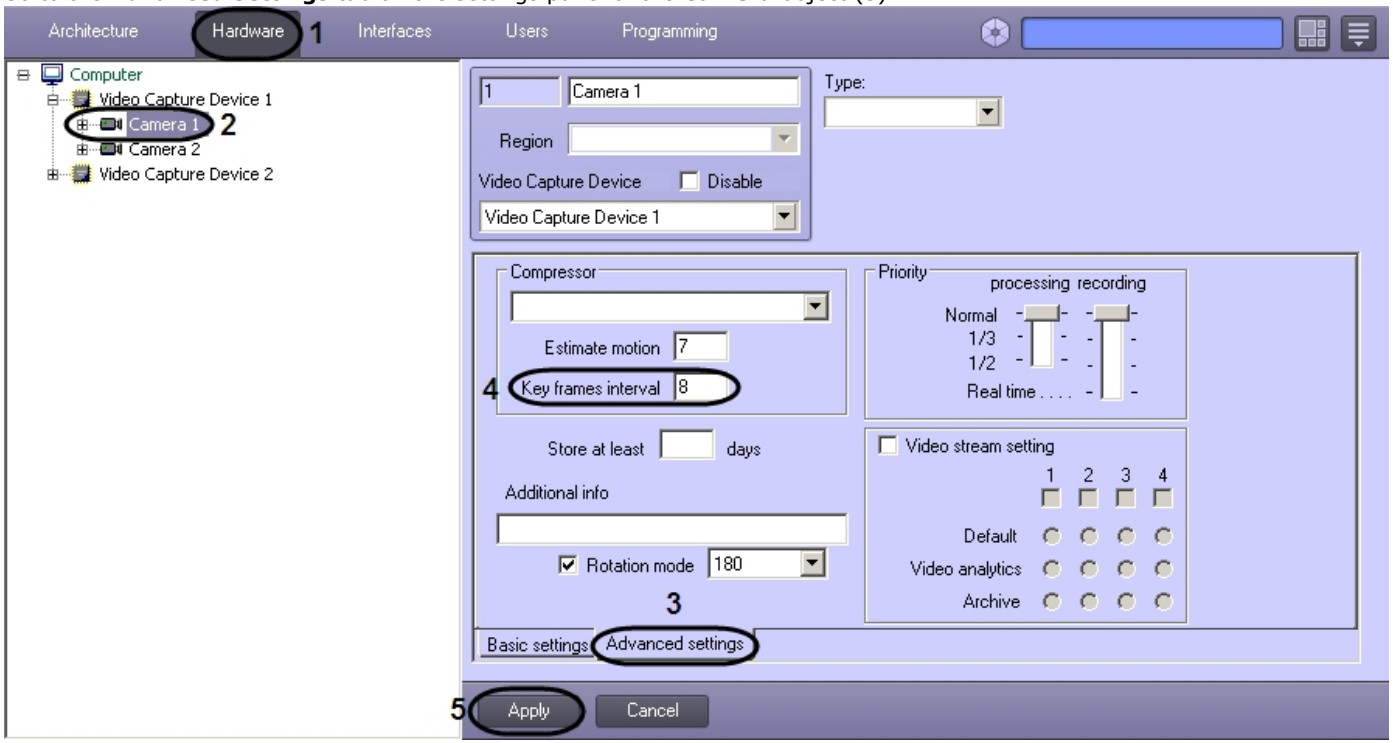

4. Specify the required value of key frame rate in the **Key frames interval** field (4).
5. Click the **Apply** button (5).

Key frame rate is now configured.

Setting delta frame creation criterion

INTELLECT™ software uses Motion Wavelet algorithm for video processing and compression. Processed by this algorithm, the video is the sequence of key - and delta frames. A key frame is a full frame of an image. A delta frame (differential frame) is an image containing only pixel blocks which differ from the previous key frame. To compare the pixel blocks of a key frame to those of the frame next to the key frame, the average brightness of blocks is compared. If the difference in brightness exceeds a preset value, the block is considered to have fixed motion, and it becomes a part of a delta frame. Otherwise, the block is considered to have no motion, and it is not included into the delta frame.

Legitimate values of pixel block brightness lie within 0-225 range. The block becomes a part of the delta frame by default, if the difference between its average brightness in the current frame and in the previous key frame exceeds 7 units. If this value is increased, the size of the delta frame is decreased, and the video stream size is consequently decreased, as a delta frame now contains less pixel blocks. Note that the blocks with useful motion data now are more likely to be excluded from the processed video and consequently there is video degradation. So, by reducing the value of the parameter setting the criterion for blocks to be included into a delta frame, you may improve the image while building up its size.

The best value of the parameter, which sets the criterion for blocks to be included into a delta frame, is defined by the brightness gradient of the video background and the moving objects in a frame: with a high gradient the parameter may be increased; with a low gradient the parameter value is to be decreased.

Note.
The **Estimate motion** parameter is ignored by the **Motion Wavelet 7.1** and **Motion Wavelet 7.1 Intr** compressors.

To change the value of the parameter, which sets the criterion for the block to be included into a delta frame, do the following:

1. Go to the Hardware tab in the **System settings** dialog box (1).
2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Advanced settings** tab on the settings panel of the **Camera** object (3)

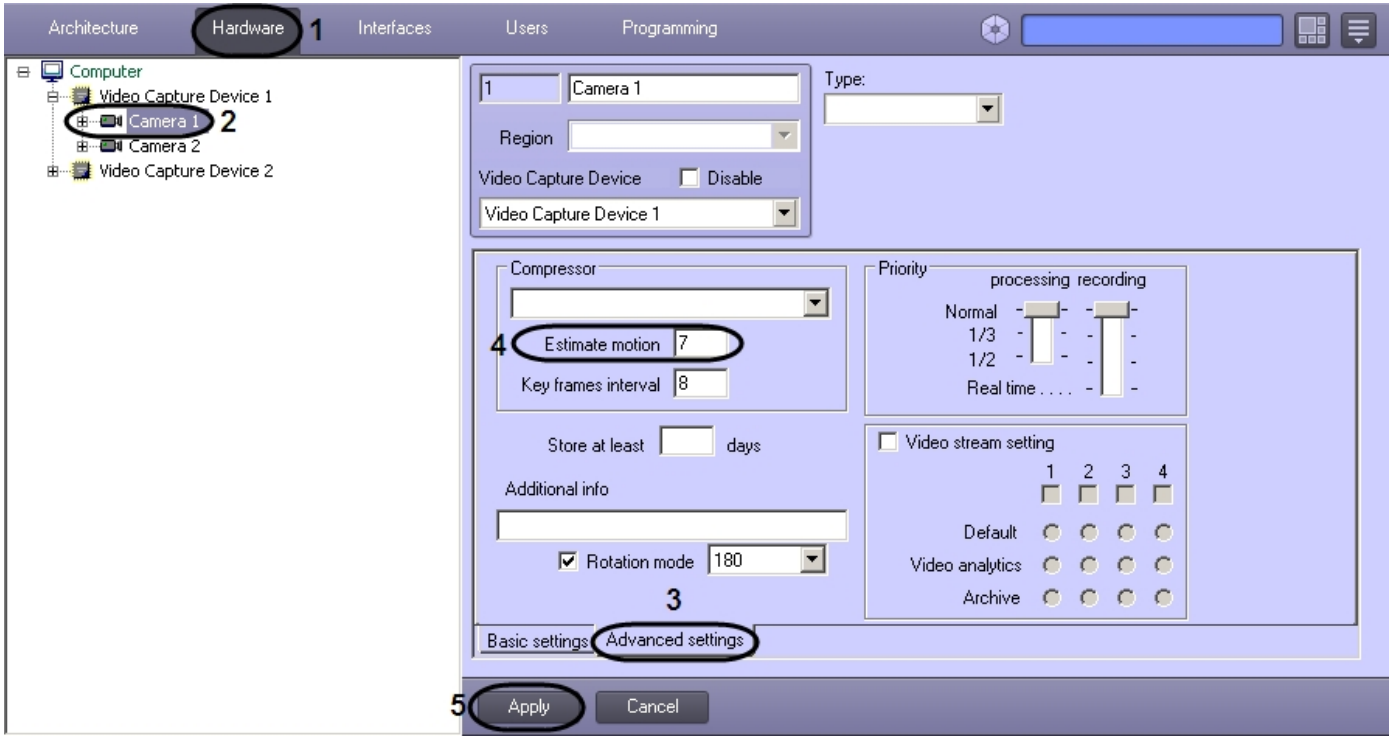

4. Specify the value of the parameter, which sets the criterion for the block to be included into the delta frame, into the **Estimate motion** field (4).
5. Click the **Apply** button (5).

Delta frames generation criterion is now set.

Creating and configuring a virtual Video Capture Device

One can work with a virtual Video Capture Device in INTELLECT™ software package. This way assumes that INTELLECT™ operates in a test mode and consists of imitation of video stream feed to virtual Video Capture Device by playing back ready-made video recording. The following video recordings are played back:

1. Video recordings of internal INTELLECT™ format;
2. AVI-files in formats for which DirectShow filters (codecs) are installed in Windows OS.

Virtual Video Capture Devices do not support multistreaming. To ensure correct operation of a virtual Video Capture Device, including video displaying and archiving, disable multistreaming (see Configuration of multistream video).

Note.
If only Windows Media Player 11 (or its older versions) is installed on Windows OS to view video recordings, then it is to be updated to Windows Media Player 12 or DirectShow filters (codecs) of third-party vendors are to be in use.

To create and configure a virtual Video Capture Device, do the following:

1. Set the **Use virtual grabber** checkbox (the **Video subsystem section** in Tweake.exe utility), having shut down INTELLECT™ beforehand.

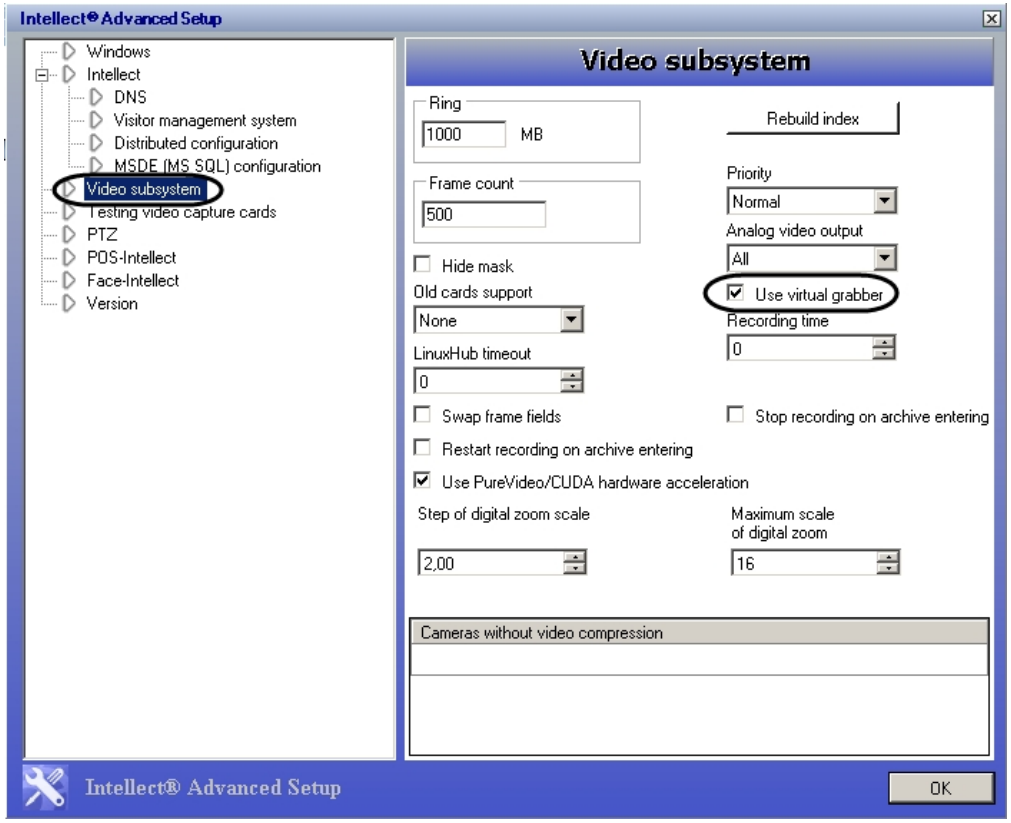

2. Set the **Video Capture Device** type.

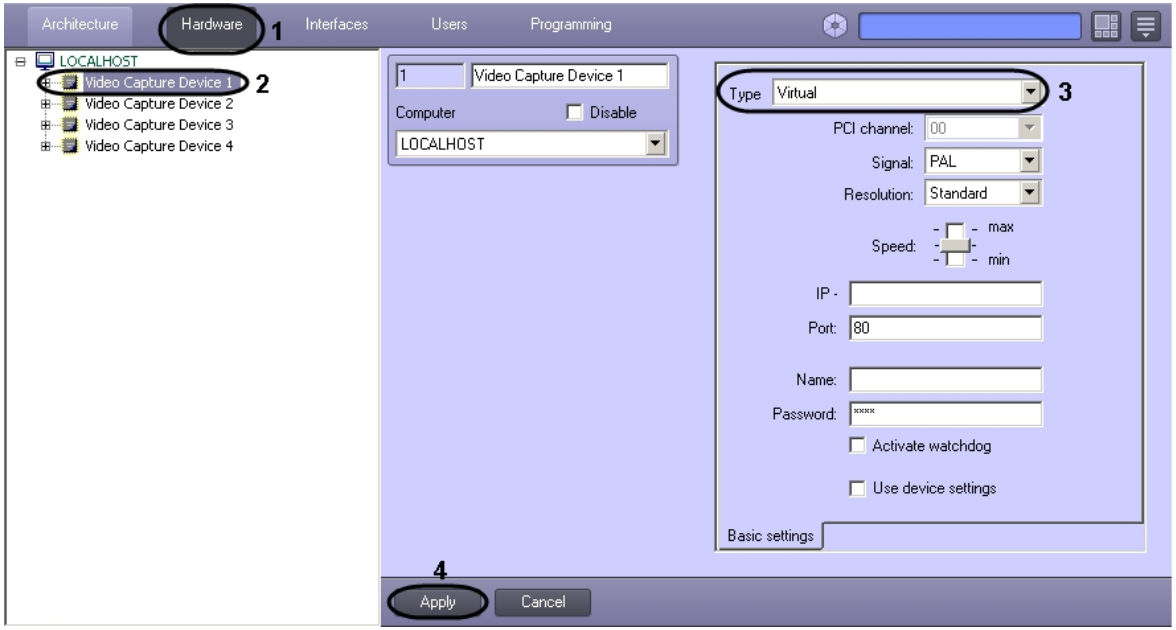

3. Specify the storage for video recording that is to be used for video signal imitation in the **Basic settings** tab of the selected **Camera** object.

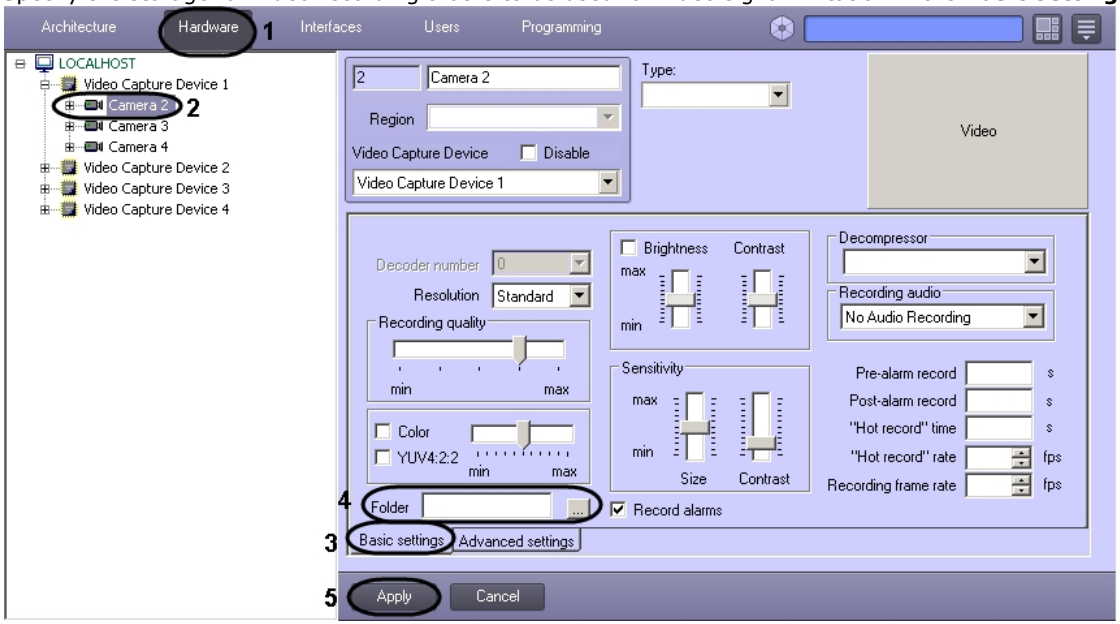

As a result video recording file from the selected folder will be played back in a loop. If there are several files in the folder they are to be played back in the order set in the latest

modification.

Note.
Files can also be sorted by names and creation time while being played back. The sorting order is set by the VirtualGrabberSortMode registry parameter (see Registry keys reference guide).

Attention!
The selected folder must not contain video recordings of internal INTELLECT™ format and AVI-files at the same time.

Configuring video archiving

General information on video archiving

Video archiving allows saving the footage according to the settings and analyse the fragments of interest for the user.

The archive is saved on the Server storage. Video is stored in the archive as one or more indexed files. To limit the size of the files, use the **Video Subsystem** tab in the Tweaki.exe utility.

The archive represents the storage for the video recordings that are made in INTELLECT™ software. Loop recording is used here. When the hardwares run out of the space allocated to archive storage, the rewriting of footprint starts. It is made on the principle of overwriting the earliest recordings.

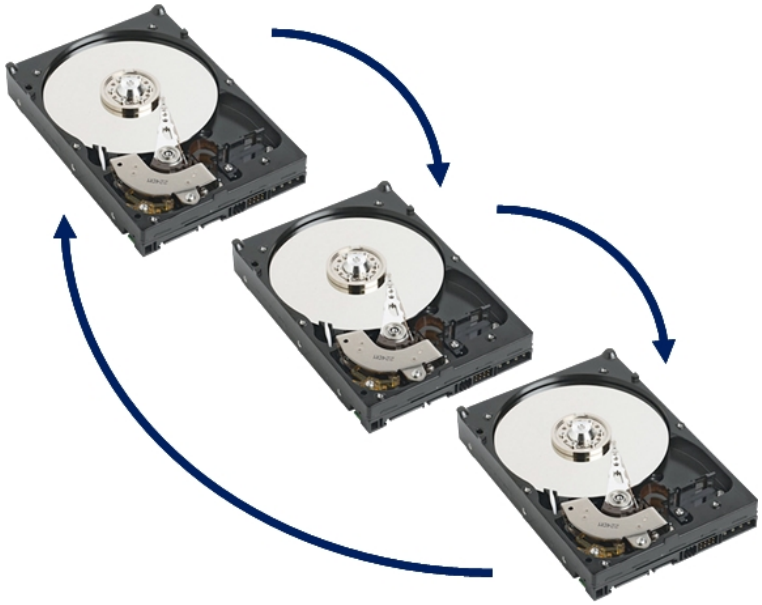

Video archive is stored in the VIDEO folder on the selected system disk. Child directories with titles in «DD-MM-YY HH» (Date, Hour) format are stored in the VIDEO folder. Archive files for the current hour are here. Video file extension indicates the number of video camera that is used for video archive.

Important!

Intellect software creates and stores video archive in its own format. One can view the archive files without converting with the Video surveillance window, using the converter.exe utility or using the AxxonPlayer utility (if you chose the required period).

Video archive can also be exported to other formats. For that, the above instruments as well as the AviExport utility can be used. See also Operator's Guide , the Export and print out section.

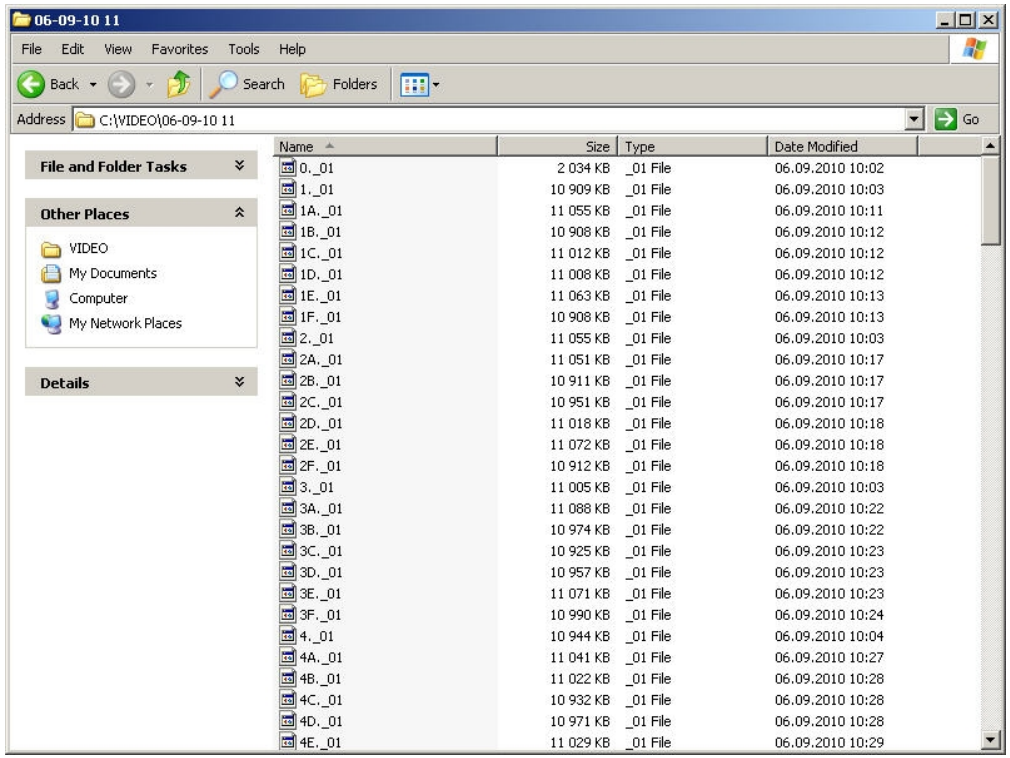

Video signal recording may be initialized by one of three methods:

1. Forced recording by Operator command;
2. Automatic recording upon alarm registration;
3. Automatic recording upon a macro/script/program execution.

To make the analysis of the causes and effects of an alarm event more effective, INTELLECT™ software performs expanded schemes of video recording file. An example of a video recording expanded scheme is given in the figure below.

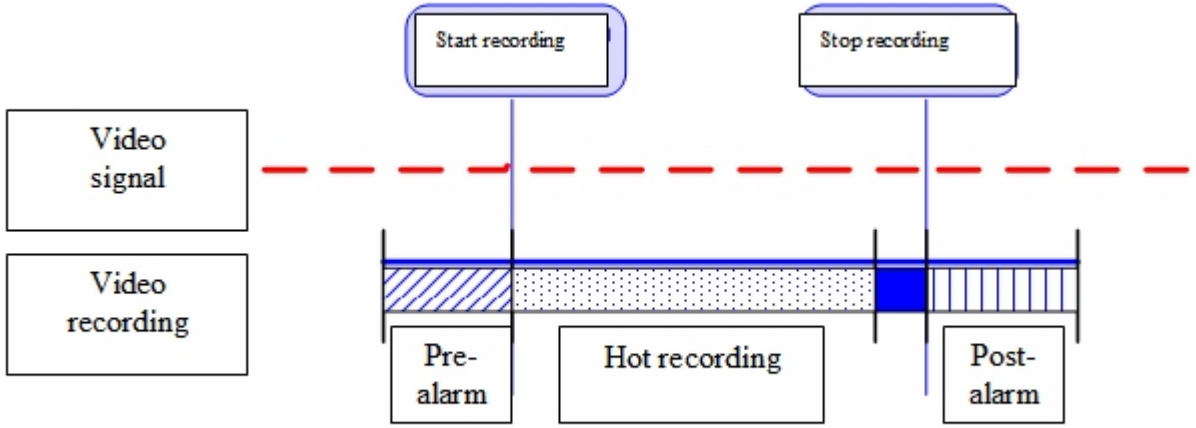

The scheme contains the following segments:

1. Pre-alarm event recorded before the recording start time on the camera alarm. Pre-alarm event recording option facilitates the analysis of event causes.

   Attention!
   For cameras without video compression that have been added to the corresponding list in the **Video subsystem** section in the tweaki.exe utility (see The Settings panel of the Video subsystem section), video is not recorded in **Pre-alarm record** mode.

2. Post-alarm event recorded after the recording end time on camera alarm. Post-alarm event recording option facilitates the analysis of event consequences.
3. Hot recording – video recording segment with higher frame rate. Increasing frame rate on the **Hot recording** segment makes event analysis more effective. The **Hot recording** segment always starts from the recording start time on the alarm event registration. The **Hot recording** segment is finished at the recording end time (depending on the **Hot recording** settings and event duration).

Further use of video recording segments is restricted by INTELLECT™ software. The list of restrictions is given in the table.

Video recording initialization mode	**Recording option**		
	pre-alarm	**hot recording**	**post-alarm**
By Operator command	No	Yes	No
On alarm event	Yes	Yes	Yes
On macro/script	Yes	Yes	Yes

Note.
If the MPEG4 recording format is selected, a small fragment of the recording (about 0.5 seconds from the beginning) may be lost.

Free disk space (video archive size) required

Working with the archives

Video archiving procedure

Configuration of video archiving consists of the following steps:

1. Selecting the disks for video archive storage.
2. Switching off/on the auto alarm recording mode.
3. If a camera supports multistreaming, then select streams that are to be recorded to the archive upon alarm and those for continuous recording (see Configuration of multistream video).
4. Configuring video frame rate and other video stream parameters if the multistream mode is in use (see Configuration of multistream video).
5. Configuring video in the Hot recording mode.

> **Note.**
> If different streams are selected for recording upon alarm and for continuous recording (see Configuration of multistream video), then hot recording is not performed.

6. Configuring video in the Pre-alarm mode.
7. Configuring video in the Post-alarm mode.
8. Configuring audio and video synchro recording.

Selecting the disks for video archive storage

INTELLECT™ software performs video archiving to a storage device. When INTELLECT™ is installed, set the local disks to save the archive to in the **Hardware** tab of the **Computer** obj ect.

> **Note.**
> Use disks with the NTFS file system for storing the archive. If the FAT32 file system is in use, then there can be problems caused by this system, for instance — it has no logging.

To select the disks for the archive, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Computer** object corresponding to the configured Server in the objects tree of the **Hardware** tab (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab. Each local disk available for archiving has the check of the same name in the **Disks for storing the archive** group (3).

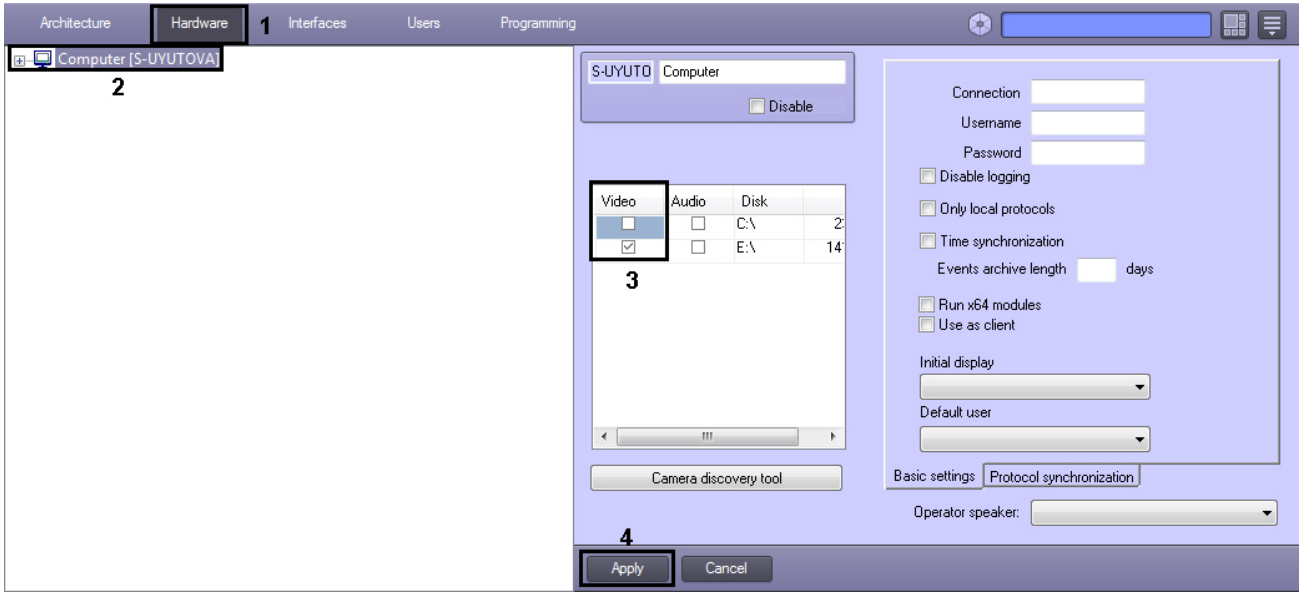

3. Set the relevant check in the **Video** column next to the disk to be selected. Local, network and USB disks are available for storing (details on adding network disks are in Using network disks section).

> **Note.**
> For the reverse effect set the checkboxes corresponding to the disk unchecked in the **Video** column.

4. Click the **Apply** button (4).

The disks for video archive storage are now selected.

> **Note.**
> If no disk for storing the video is selected, then there is no storing to the archive.

> Free disk space (video archive size) required
>
> Working with the archives

Using network disks

To use network disks as an archive, set UNC paths to them in INTELLECT™. Details of working with network disks in INTELLECT™ installed as a Service are given in Using network disks of INTELLECT™ installed as a Service section.

While working in Windows Vista and Windows 7 OS consider the following features:

1. For Windows Vista and Windows 7 OS with UAC enabled it is necessary to connect network disks via command prompt with Administrator's rights. The way of connecting is described in Connecting network disks in Windows Vista and Windows 7 OS section.

2. Access to network disks on computers with Windows Vista or Windows 7 OS can be forbidden when the user account control (UAC) is swiched on. To enable access create the EnableLinkedConnections key of the DWORD type with 1 value in the HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Policies\System registry. Details of working with registry keys are in Working with Windows OS registry section.

Note.
When connection with net disk fails, video is not recorded (for 30-60 seconds) and displayed. This is due to filesystem features.

Important!
The archive from various Servers must not be recorded to one network storage as the archive index will be violated.

To add a network disk by specifying the UNC path, do the following:

1. Go to the last line in the disk list and click the down key.

2. Specify the path to a network disk in the appeared line in the **Disk** column. UNC path is set in **\\server_name\share_name** format where server_name is the name of file server and share_name is the network name of the general folder.

   Note.
   If there are any problems with storing video/audio archive at network disks, then use the net use command of Windows command prompt:

   net use disk_name: \\server_name\share_name /delete

   net use disk_name: \\server_name\share_name /USER:user_name

   Where user_name is a user that has rights to store to selected network disk; disk_name: is the name of the disk drive. This is to be performed after every Windows OS restart.

   Details about the net use command are in Microsoft official documentation (www.microsoft.com).

3. Set a checkbox for created disk in the **Video** column.
4. Click the **Apply** button.

A network disk by specifying the UNC path is now added.

Free disk space (video archive size) required

Selecting the disks for video archive storage

Working with the archives

Disabling automatic recording upon alarm registration

INTELLECT™ software supports automatic video recording upon alarm registration for each **Camera** object individually. By default, the auto recording option is enabled for all cameras in the **Hardware** tab.

The auto recording option is disabled for each camera individually, as well.

To disable the auto recording upon alarm option for a selected camera, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

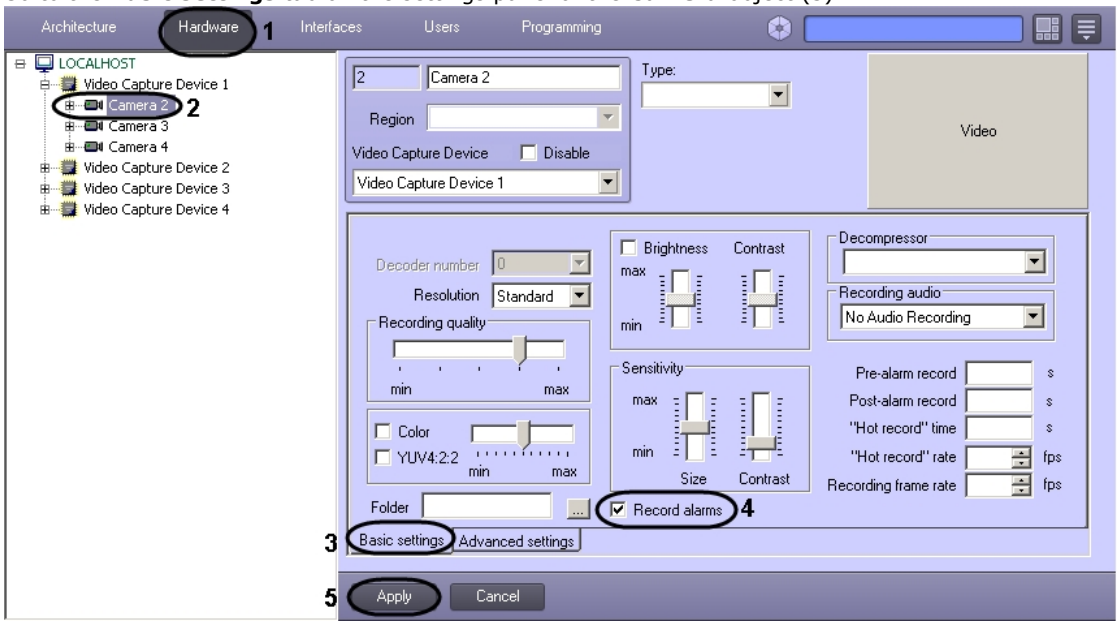

4. Set the **Record alarms** checkbox unchecked (4).
5. Click the **Apply** button (5).

Automatic recording upon alarm event registration is now disabled.

Note.
To re-enable the auto recording, repeat the above steps and set the **Record alarms** checkbox.

Configuring video frame rate

By default, video is recorded to the archive with the same frame rate as the video capture card digitizes it. Thus, to reduce the archive size, the frame rate can be configured.

Note.
The reduction of the video recording frame rate does not affect the displaying of the video on the Server monitor and its transmission to the Remote Workstations by the network.

To change the recording frame rate, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

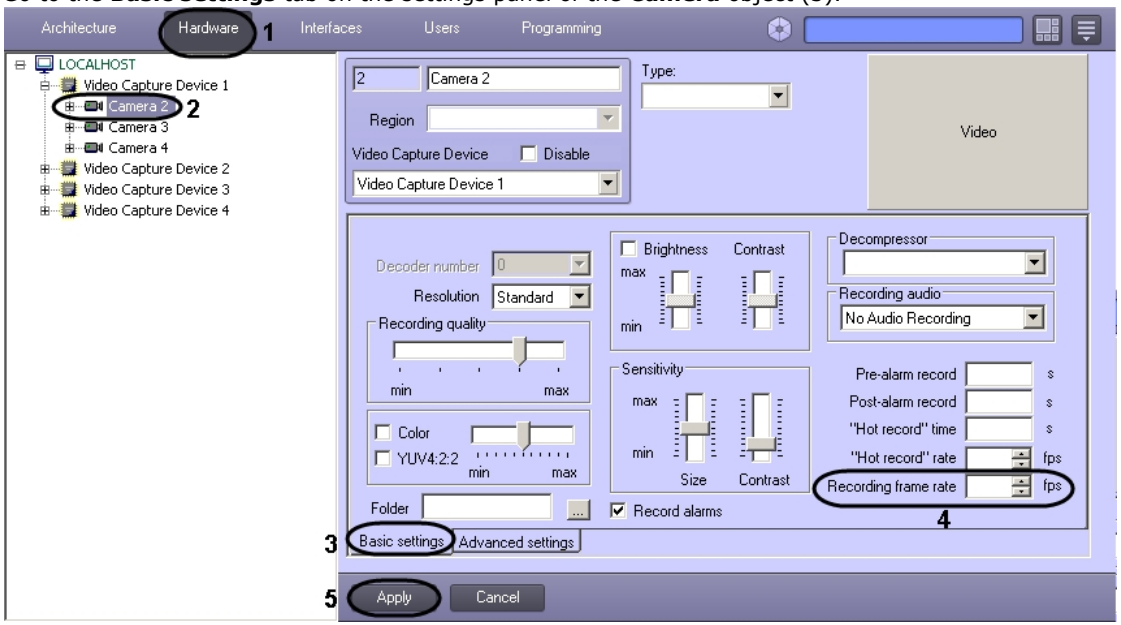

4. Specify the recording frame rate value in the **Recording frame rate** field (4). The value is not to exceed the digitization frame rate value. The value set for the **Recording frame rate** parameter allows calculating the interval (msec) in which a frame is to be captured to be stored in the archive. The calculation is made according to the formula: ***Interval = 1000 / Value in the Recording frame rate field***

   Note.
   Setting the value of the **Recording frame rate** parameter, take account of video digitizing rate and frame rate (fps), otherwise actual recording speed can differ from the set one.

5. Click the **Apply** button (5).

Configuring video in the Hot record mode

In the Hot record mode the video is recorded with a larger frame rate compared to the set value.

Note.
If two different streams are selected for continuous and alarm video recording (see Configuration of multistream video), then the Hot record mode can not be used, and the corresponding fields on the **Camera** object settings panel are disabled.

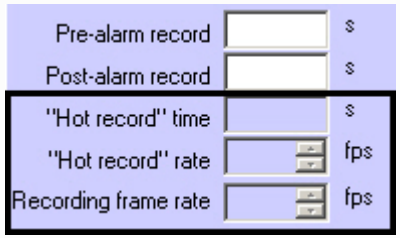

By default, this mode is disabled. To enable the Hot record mode, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

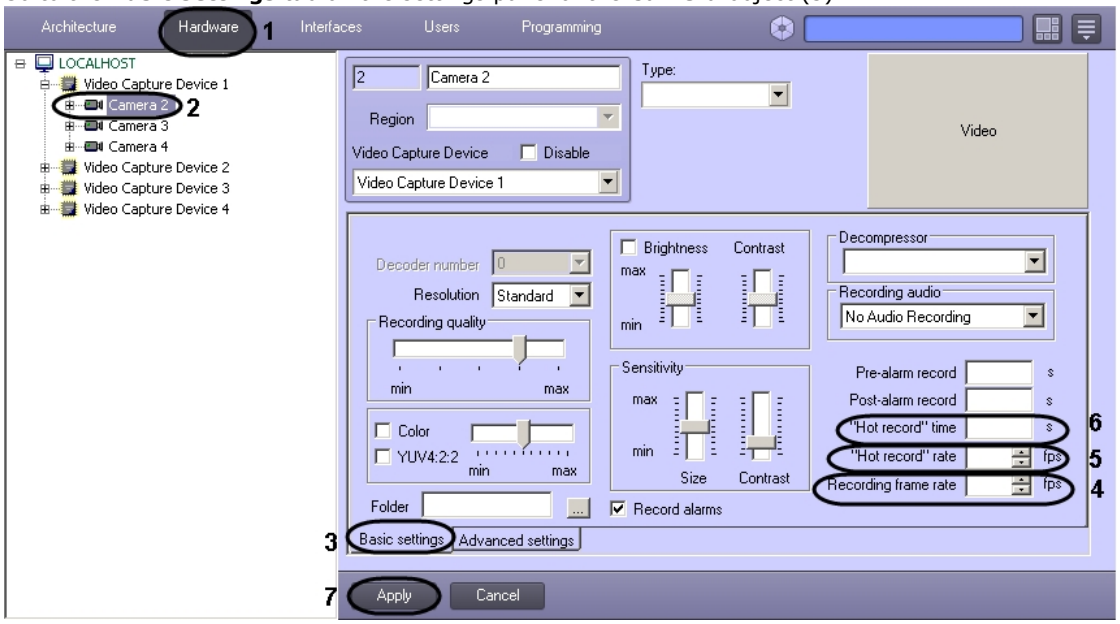

4. In the **Recording frame rate** field specify the frame rate of the video to be recorded (4).

5. In the **Hot record rate** field specify the frame rate for the alarm hot recording (5).
6. In the **Hot record time** field specify the interval in sec during which the video is being recorded at the rate that has been set in the **Hot record rate** field, from the moment of alarm registration (6).

> **Note.**
> If there is an end of alarm event while recording in the hot record mode, then recording to the archive will be with the same rate as hot record until the end of specifyied interval.

7. Click the **Apply** button (7).

> **Note.**
> If the **Recording frame rate** parameter (**Camera** object, **Basic settings** tab) is set to non-zero, regardless of its value of recording to the archive is performed only by anchor frames if H.264 codec is in use. If the **Hot record rate** parameter for H.264 codec is also in use, then the recording to the archive will be performed by anchor frames too. If the **Recording frame rate** parameter is set to 0 or not set, all frames are recorded to the archive.

Configuring video in the Pre-alarm record mode

The **Pre-alarm record** mode is the record mode for recording pre-alarm events for a specified period before recording an alarm. Pre-alarm record is performed at the hot record rate. If the hot record rate is not specified, then at standard record rate.

> **Attention!**
> For cameras without video compression that have been added to the corresponding list in the **Video subsystem** section in the tweaki.exe utility (see The Settings panel of the Video subsystem section), video is not recorded in **Pre-alarm record** mode.

By default the recording in this mode is disabled. To enable the pre-alarm recording, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

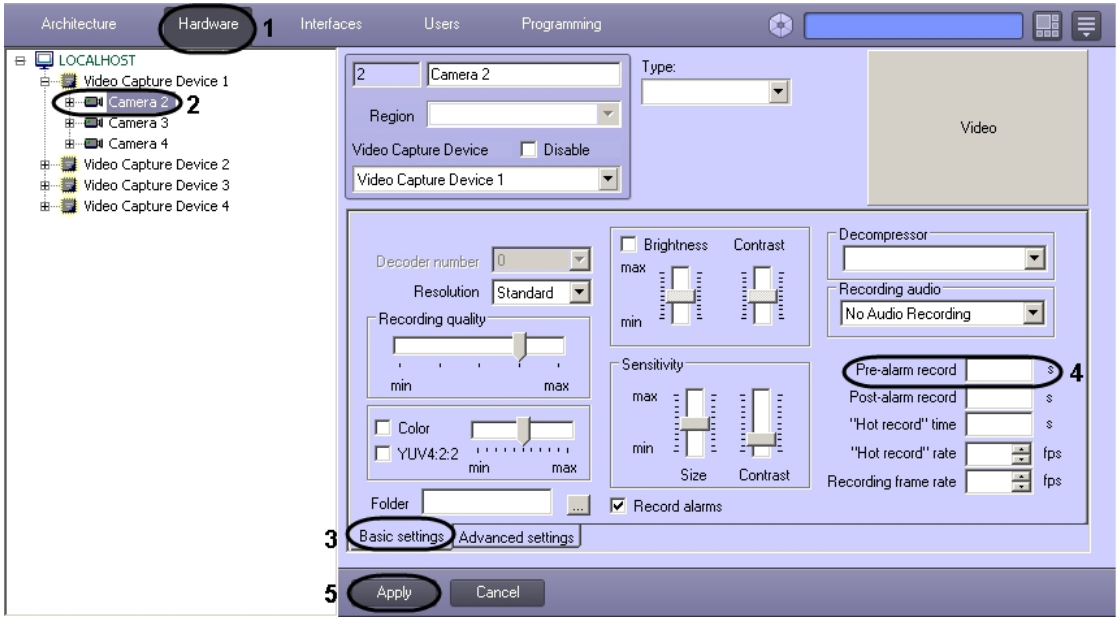

4. In the **Pre-alarm record** field specify the required interval (sec) of pre-alarm events recording (4).
5. Click the **Apply** button (5).

Information on pre-alarm recording options is given in the table.

Camera state	Recording initiator	Recording
Armed	Macro	Without pre-alarm recording
Armed	Manually	Without pre-alarm recording
Armed	Alarm	With pre- alarm recording
Armed	Program	With pre-alarm recording
Disarmed	Macro	Without pre-alarm recording
Disarmed	Manually	Without pre-alarm recording
Disarmed	Alarm	-
Disarmed	Program	With pre-alarm recording

In INTELLECT™ one can make pre-alarm recording if camera is disarmed. One can do it with the help of DoReact("CAM","1","REC","rollback<1>") program; (see Programming Guide (JScript)).

Specifying the long pre-record time can result in increasing the waste of running memory. Recommended pre-record time is not more than 20s.

To count the memory consumption ascertain the average size of video signal frame. To perform this, record the video fragment of 500 frames length to the archive (maximal size on default) and use the following formula:

Frame size = Fragment size / 500

The frame size is also depends on percent of motion in the frame.

It is possible to count the size of pre-record buffer for one camera it the frame size is known:

Size of pre-record buffer for one camera, Mb=Pre-record time, sec * Frame frequency in the pre-record mode, fps * Frame size, Mb.

General memory consumption in the pre-record mode is defined by sum of values for each camera.

It is possible to use the following formula in case of cameras perform pre-record with equal frame frequency:

Size of pre-record buffer for all cameras in system, Mb = Number of cameras * Pre-record time, sec * Frame frequency in the pre-record mode, fps * Frame size, Mb

Example.
Camera performs pre-record for 15 seconds with the hot record speed 25 fps. Size of 500-frames fragment is 20Mb. It is required to define size of pre-record buffer for such camera.

At first define the average frame size:

Frame size = Fragment size / 500 = 20Mb/500 frames=0,04Mb.

So, the size of pre-record buffer is:

The memory consumption in the pre-record mode for one camera, Mb = Pre-record time, sec * Frame frequency in the pre-record mode, fps * Frame size, Mb = 15 sec * 25 fps * 0,04 Mb = 15Mb.

Configuring video in the Post-alarm record mode

The Post-alarm record mode is the record mode for recording post-alarm events for a specified period after recording an alarm.

By default, post-alarm recording is disabled. To enable the post-alarm recording, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3)

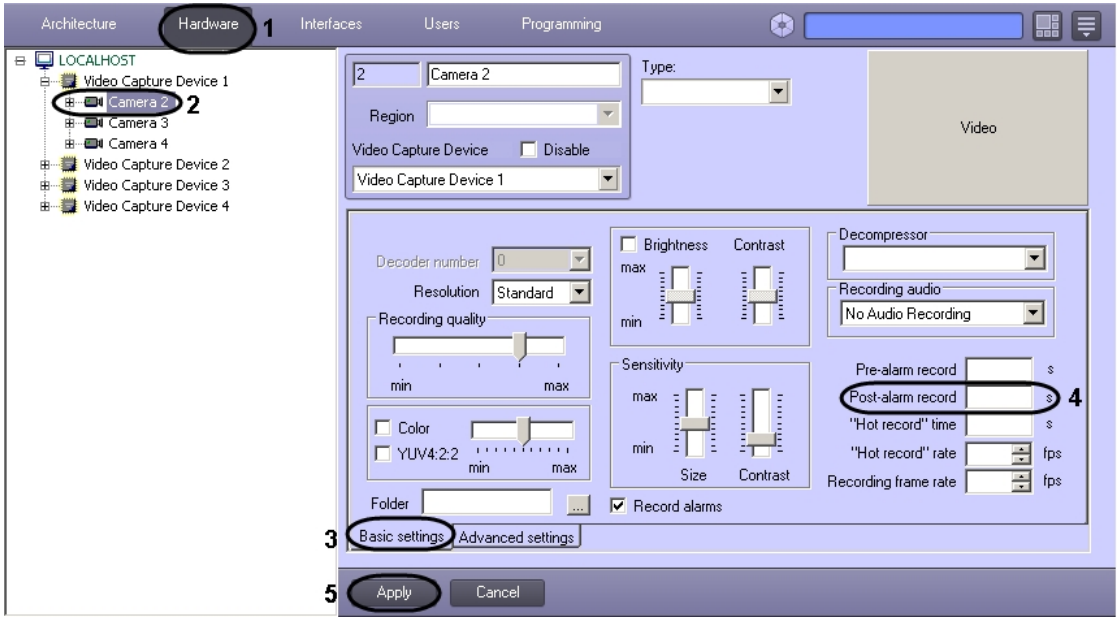

4. In the **Post-alarm record** field specify the required interval (sec) of post-alarm events recording (4).
5. Click the **Apply** button (5).

Configuring audio and video synchro recording

INTELLECT™ software provides audio and video synchro recording option.

Audio signal recording beginss at the recording start time and ends at recording end time. In synchro record mode, audio files are stored with video files in the Server archive in the "VIDEO" folders on the Server archive local disks.

To use the synchro recording option, INTELLECT ™ software audio subsystem is to be properly configured. The audio subsystem configuration procedure in INTELLECT™ system is described in Configuring audio subsystem section.

> **Attention!**
> If camera and microphone configured for synchronous video- and audio record are created on the basis of different **Computer** objects, than synchronous audio record will be performed only when disks for archive record on both computers have identical letters (see also Selecting the disks for audio archive storage and Selecting the disks for video archive storage).

If the audio subsystem is configured, do the following to configure synchro recording on the selected camera and microphone:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object corresponding to the required camera in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Basic settings** tab on the settings panel of the **Camera** object (3).

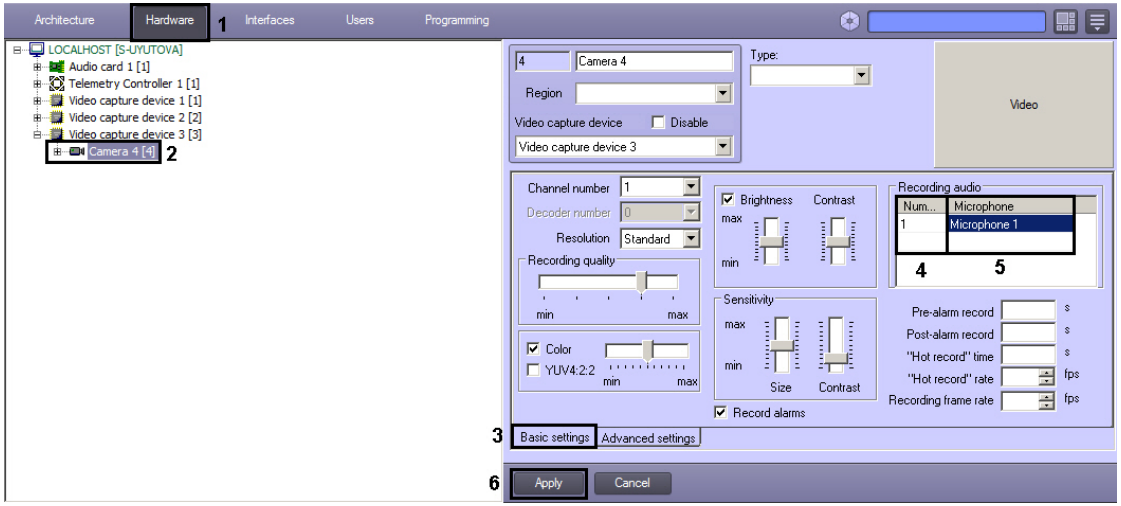

4. In the **Number** dropdown list of the **Recording audio** table select the ID of the microphone set for synchro recording when being registered in *Intellect* (4).
5. After the number is set, the name of any selected **Microphone** object is automatically displayed when clicking on any area of the **Microphone** column in the table (5).
6. If synchro audio recording from 2 microphones is to be performed, then repeat steps 4-5 for the second microphone.

> **Note.**
> Audio from two Microphones is recorded to one stream.

7. Click the **Apply** button (6).

Camera and microphone are now configured for audio and video synchro recording.

Synchronous playback of video and audio recordings

Audio and video synchro recording

Selecting current disk for recording

The current disk on which the archive is stored is displayed in the **Recording** column of the **Computer** settings panel.

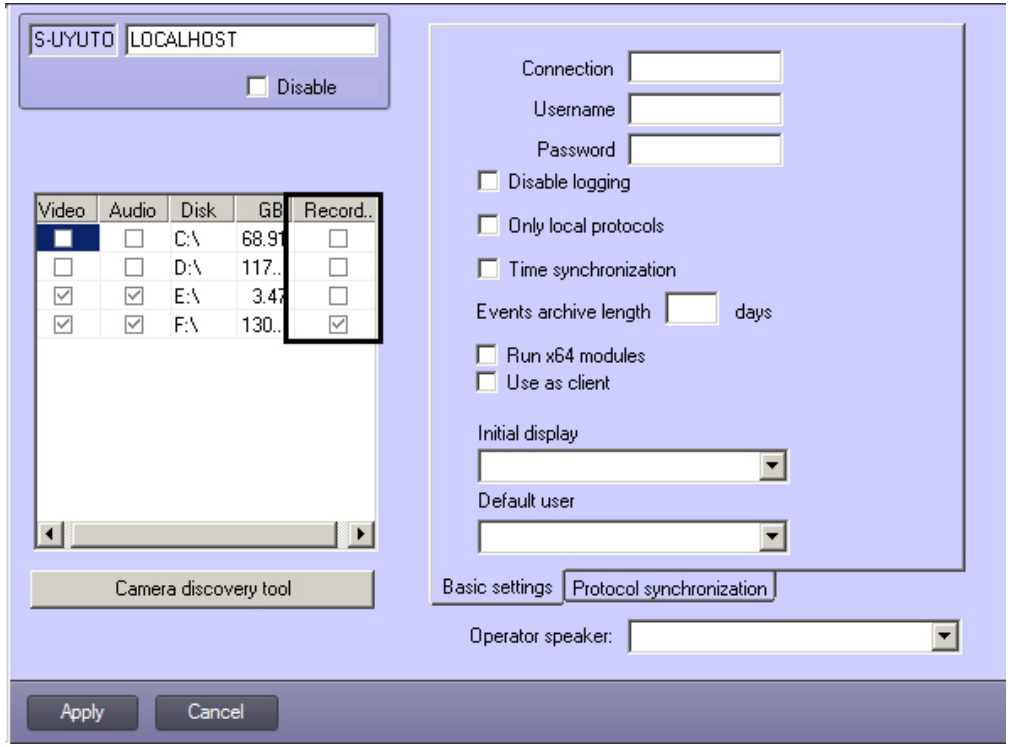

The *select current disk for recording* feature allows switching once to the disk from the list of active disks specified by the user (not to the following in the list) while loop recording in the list.

Example.
Recording of the archive is performed to 3 disks: A, B and C. When the archive is recorded in the standard mode, disks will be changed in the A->B->C->A->B->C.... order.

Let us assume that the recording is performed to disk B. Disk A (not C) is to be the following. Set the **Recording** checkbox checked for this disk, so disk C will be skipped and when disk B is full, archive will be recorded to disk A, then – to disk C, then – to disk A, etc.

Change the current disk for recording as follows:

1. Set the **Recording** checkbox unchecked next to a disk the recording is currently performed on.

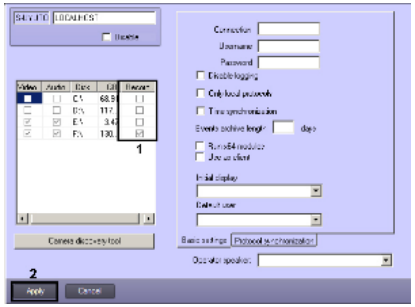

2. Set the **Recording** checkbox checked next to a disk the recording is to be performed on.

> **Note.**
> A new disk is to be selected to store the archive (see Selecting the disks for video archive storage).

3. Click the **Apply** button.

As a result the archive is stored on the selected disk. Further the loop recording continues (see General information on video archiving).

> **Note.**
> m_nCurVolume and m_dwTime registry parameters change when the current drive for recording is changed – see Registry keys reference guide.

Viewing current disk for recording

The current disk on which the archive is stored is displayed in the **Recording** column of the **Computer** settings panel.

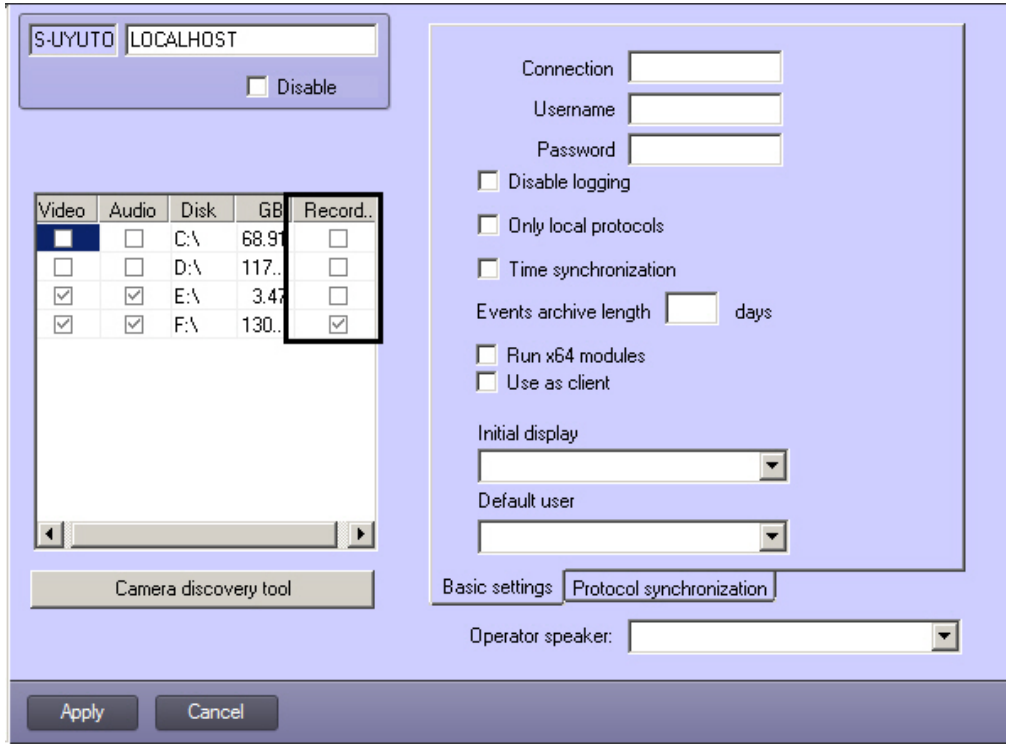

Configuring video camera archive depth

It is possible to set the period of keeping the video and audio archive (in case of synchro recording) on a camera in *Intellect.* This feature is implemented using the **Keep no longer than** and **Keep no less than** parameters:

- The **Keep no less than** parameter enables keeping the deeper archive on the selected camera by means of archives of other cameras. It is recommended to set the **Keep no less than** parameter not more than on 30% of cameras in the system as this is advisory setting. If there is not enough space for keeping the archive, then the setting will be ignored and loop recording won't stop anyway (see General information on video archiving). If not less than 10 cameras are created in the system, then there will be the corresponding warning when clicking the **Apply** button while attempting to set this parameter for more than 30% of cameras. It can be disabled using the NotifyAbout_arch_days registry key (see Registry keys reference guide).
- The **Keep no longer than** parameter enables specifying the time period over which the camera archive will be kept and at the expiring of which the archive will be deleted. The archive can be deleted earlier than specified time period if it is required by the loop recording. The check for files to be deleted is performed every 10 minutes system time.

Important!
The parameter is to be used carefully – do not change it dramatically downward. For instance, if 1 TB archive is recorded and the archive depth is 360 days and the user sets 10 days value for the **Keep no longer than** parameter – it will result in one-time deletion of big data that will take a lot of time during which some frames can be skipped.

Configure the video camera archive depth as follows:

1. Go to the settings panel of **Camera** object.

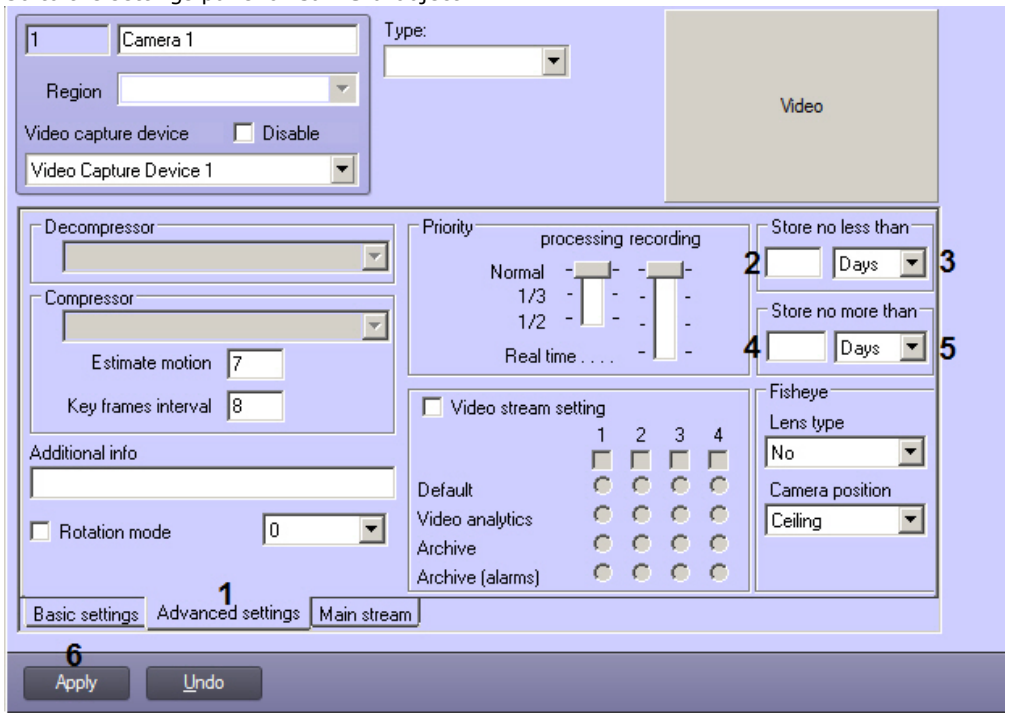

2. Go to the **Advanced settings** tab (1).
3. In the **Keep no less than** field specify the time period during which the video and audio archive (in case of synchro recording) is to be kept on the Server (2).
4. In the **Keep no less than** dropdown list select the units used to set the time period in the **Keep no less than** field: days or hours (3).
5. In the **Keep no longer than** field specify the time period over which the camera archive is to be kept and at the expiring of which the archive is to be deleted (4).
6. In the **Keep no longer than** dropdown list select the units used to set the time period in the **Keep no longer than** field: days or hours (5).
7. Click the **Apply** button (6).

The video camera archive depth is now configured.

Additional information on camera

Additional information on the camera is:

1. Displayed on the video surveillance monitor over the camera name.
2. Added to the name of export file from interface monitor (AVI, BMP/JPEG) and for frame printing.
3. Displayed in the Event log window in the **Additional info** column.

To set additional information, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).

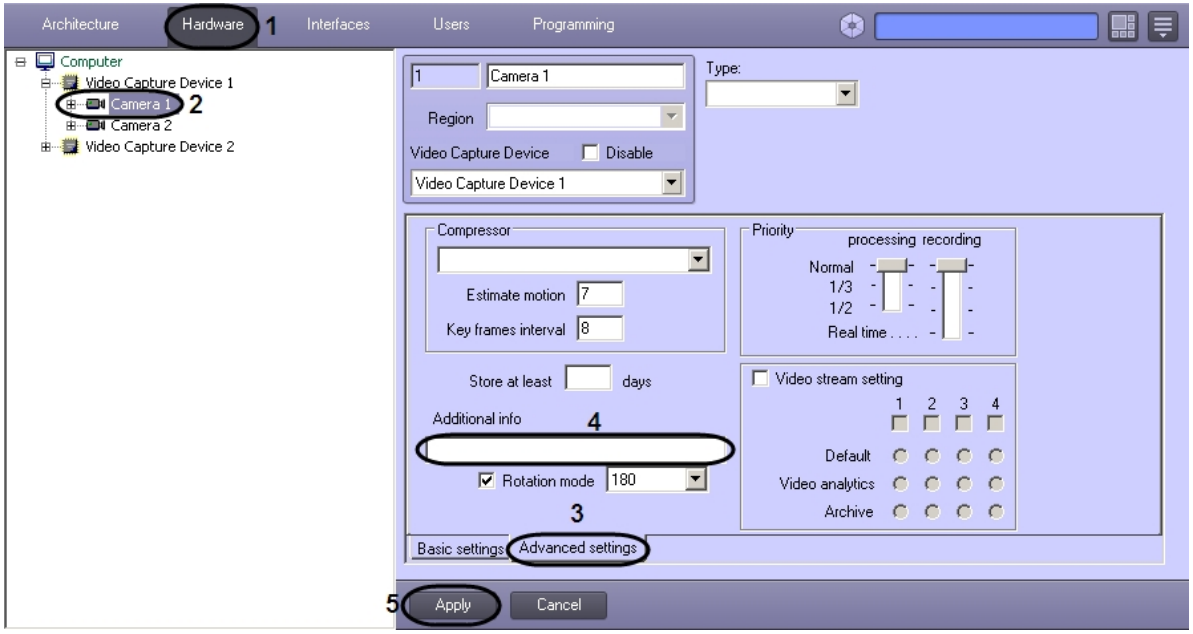

2. Select the **Camera** object, created before, corresponding to the camera to be adjusted, in the Hardware tab in the objects tree (2). The settings panel for the selected object is displayed on the right of the **Hardware** tab.
3. Go to the **Advanced settings** tab on the settings panel of the **Camera** object (3).
4. Type in additional information (not more than 100 characters) in the **Additional info** field (4).
5. To save the changes, click the **Apply** button (5).

Additional information is now set.

Event control via event log

Viewing video sequences from surveillance cameras

Export and print out

Configuring video detection tools

General description of Intellect software detection tools

The following detection tools are available in the *Intellect* software:

1. Main motion detection tool and basic detection tools.
2. Smart video detection tools.
3. Embedded detection tools.
4. Face detection tool.

Enabling, configuring and disabling basic video detection tools

General information on basic detection tools

Basic video detection tools provide automatic video image analysis to recognize events occurring within the observed scene. Event recognition capabilities depend on the type of detection tool.

In INTELLECT™ software several types of basic detection tools are available:

1. main motion detection tool;
2. motion detection tool;
3. focusing detection tool;
4. video signal stability detection tool;
5. background change detection tool;
6. camera blinding detection tool;
7. camera covering detection tool;
8. abandonded objects detection tool;
9. infrared detection tool.

By default, INTELLECT™ software uses solely the main motion detection tool, which detects the video surveillance camera alarms. The rest of detection tools are optionally activated in the course of INTELLECT™ software administration.

To configure basic detection tools, set up the program algorithms for them, enable auto recording on detection tool alarm option etc.

To activate Main detection tool, arm the corresponding camera (see Camera arming and disarming section of the Operator's Guide). To activate basic detection tools, arm the corresponding detection zone (see Use of video detection tools section of the Operator's Guide).

Requirements to video parameters while working with detection tools

Camera arming and disarming

Use of video detection tools

Procedure for enabling and configuring basic detection tools

Generally the procedure of configuring basic detection tools includes the following steps (except for the main motion detection tool (camera alarm detection tool), configuration procedure of which is described in Configuring Main motion detection tool section):

1. Connecting basic detection tools. It is performed for each camera independently.
2. Setting detection tools parameters.
3. Testing video detection tool operation by using the video monitor.
4. If detection tool operates improperly, go back to step 2, change the settings and test it again.
5. If detection tool operates properly, the setup is completed.

Connecting basic detection tools

The list of video detection tools is created individually for each camera.

Initially only a Main motion detection tool is registered for each camera. No other detectors are registered by default.

To connect basic video detection tools (except the main motion detection tool), do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Camera** object, corresponding to the camera to process video from which a detection tool is connected and configured, in the objects tree of the **Hardware** tab.
3. Create the **Detection zone** object on the base of the **Camera** object. The settings panel for the **Detection zone** object appears on the right of the **Hardware** tab (2).

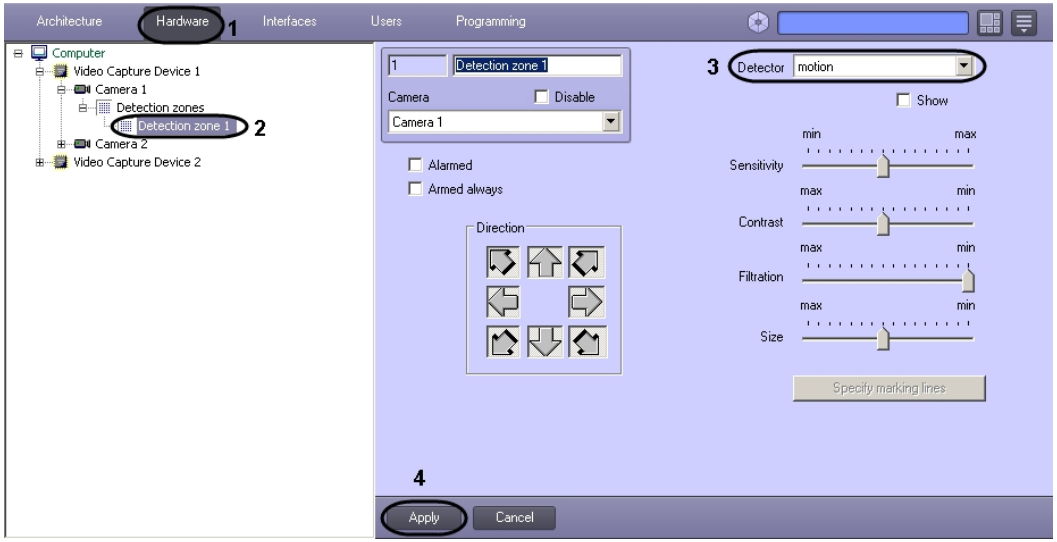

4. In the **Detector** list, select the required type of detection tool.
   When a detection tool is connected, the controls for configuring the selected detection tool are activated. Controls that are not required are disabled. With different types of detectors, the same graphics object may correspond to different settings.
   The setup procedure depends on the type of detection tool. Setup sequences for different types of detection tools are described in the relevant sections.
5. Click the **Apply** button (4).

A detection tool is now connected.

Requirements to video parameters while working with detection tools

Camera arming and disarming

Use of video detection tools

Configuring basic detection tools

Configuring Main motion detection tool

The main motion detection tool is used to detect motion on the guarded location and to generate the system alarm events when the relevant camera is armed.

Main motion detection tool configuration is performed for each camera independently.

In most cases the default settings for Main motion detection tool are sufficient for it to function properly.

To configure Main motion detection tool, do the following:

1. Display the video surveillance monitor on the screen and check if INTELLECT™ properly registers alarms on camera.
   If registration is proper, then additional settings may be skipped.

Note.

If alarms on camera are registered improperly (for example, a detection tool is triggered by artificial or natural video signal noise (rain, snow, etc), a detection tool does not detect small object motion and high speed motion), a Main motion detection tool is to be configured. The proper setup of a Main motion detection tool allows significantly lowering the probability of unsatisfactory camera alarm detection.

2. Go to the **Hardware** tab in the **System settings** dialog box (1).
3. Select the **Camera** object corresponding to the camera on which a detection tool is configured, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object appears on the right of the **Hardware** tab.
4. Select the **Basic settings** tab on the settings panel of the **Camera** object (3).

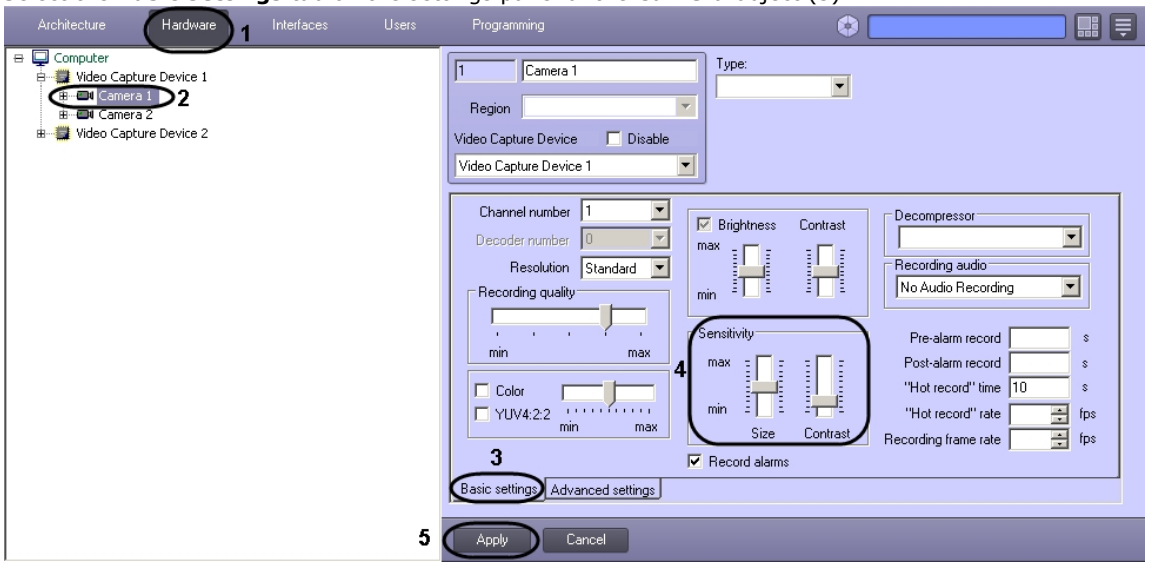

5. Set the **Size** value by moving the slider of the same name (4). The value of this setting corresponds to the part of the total frame square, occupied by the smallest detected object. When an object bigger than the preset one moves, the motion detection tool switches to the alarm status.
   The best valueof the **Size** parameter is defined by testing the triggering of a detection tool. With low values of the **Size** parameter, triggering by noise (including rain, snow) is more probable. With high values of the **Size** parameter, triggering by object motion is less probable.
   The value that is slightly lower than the average size of the moving objects in the frame is recommended to be set to the **Size** parameter. If a detection tool triggers upon video signal noise, then it is necessary to change the **Contrast** parameter.
6. Set the **Contrast** value by moving the slider of the same name (4). The value of this setting corresponds to the contrast of detected object.
   The best valueof the **Contrast** parameter is defined by testing the triggering of a detection tool. With low values of the **Contrast** parameter, triggering by moving objects, color spectrum of which is very similar to that of the background, is more probable. In most cases the default **Contrast** setting (the average value) is sufficient.
7. Click the **Apply** button.

Main motion detection tool is now configured.

Configuring Motion detection tool

The Motion detection tool discovers moving objects in the zone under control. When a moving object is detected, it is dynamically framed. The motion is detected by calculating the gradient between sequential frames to time.

Note.
The performance of this detector is much worse than performance of VMDA detector (see Motion in the Area detector configuration). When better recognition quality is required, VMDA detector is recommended to be used.

To configure Motion detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the detection tool that is to be configured, in the objects tree of the **Hardware** tab (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

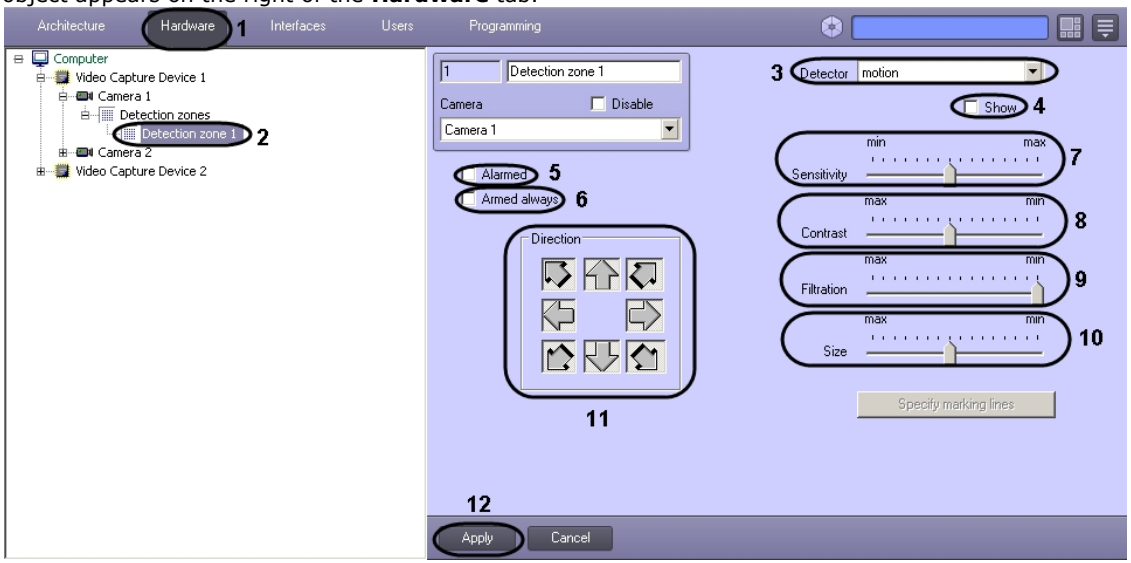

3. Enable the motion detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the motion detection tool registered earlier (3).
4. By default, the detected moving object is dynamically framed with its motion direction is marked with an arrow. If the moving object does not need to be framed, set the **Show** checkbox unchecked (4).
5. To enable the auto recording option on a motion detection tool alarm for the selected camera, set the **Alarmed** checkbox (5).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed when the detection tool triggers.

> **Note.**
> If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

6. To disable disarming of the motion detection tool by any user (irrespectively of his rights), set the **Armed** always checkbox (6).

> **Note.**
> When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

7. Set the value of the **Sensitivity** parameter by moving the the slider of the same name. This setting corresponds to the minimum value of the average brightness of the moving object, with which the detection tool triggers by its motion only, and not by noise in a video signal (including rain, snow, etc.) (7).
   The best value of the **Sensitivity** parameter is defined by testing false triggering of detection tools. With low values of the **Sensitivity** parameter, false triggering by noise is more probable. With high values of the **Sensitivity** parameter, triggering by object motion is less probable.

Set the value of the **Sensitivity** parameter after setting the **Size**, **Filtration** and **Contrast** parameters. It is recommended to select the value of the **Sensitivity** parameter that will exclude false triggering by noise.

8. Set the value of the **Contrast** parameter by moving the slider of the same name. This setting corresponds to the contrast of the detected object (8).
   The best value of the **Contrast** parameter is defined by testing the triggering of detection tools. With low values of the **Contrast** parameter, triggering by moving objects, color spectrum of which is very similar to that of the background, is less probable. With high values of the **Contrast** parameter, false triggering of detection tools by noise is more probable.
   In most cases the default setting (the average value) is sufficient.
9. Set the value of the **Filtration** parameter by moving the the the slider of the same name (9). The value of this parameter corresponds to the threshold of color processing of objects, at which the detector should trigger.
   The best value of the **Filtration** parameter is defined by testing the triggering of detection tools. With low values of the **Filtration** parameter, triggering by noise (including rain and snow) is more probable. With high values of the **Filtration** parameter, triggering by object motion is less probable. If a detection tool triggers upon noise, then it is necessary to change the value of the **Sensitivity** parameter.
10. Set the value of the **Size** parameter by moving the slider of the same name (10). The value of this parameter corresponds to the minimum linear dimensions of the detection object as a percentage of the dimensions of the video. When an object that is bigger than the preset one moves, the motion detection tool switches to the alarm status.
    The best value of the **Size** parameter is defined by testing the triggering of detection tools. With low values of the **Size** parameter, triggering by noise (including rain and snow) is more probable. With high values of the **Size** parameter, triggering by object motion is less probable.
    It is recommended to set the value of the **Size** parameter that is slightly lower than the average size of objects moving in the frame. If a detection tool triggers upon video signal noise, then change the value of the **Sensitivity** parameter.
11. By default, a detection tool recognizes motion in any direction. To disable detection of motion in certain directions, click the relevant buttons in the **Direction** group. A detection tool detects motion in the directions of the pressed arrow buttons and does not detect it in the directions of pulled arrows (11).
12. Click the **Apply** button (12).

Motion detection tool is now configured.

Configuring Focus detection tool

This detection tool notifies the Operator about camera tampering, resulting in focus loss or camera sensitivity degradation. The high frequency component of the video signal is analyzed to check for presence of distinct contours.

To configure Focus detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

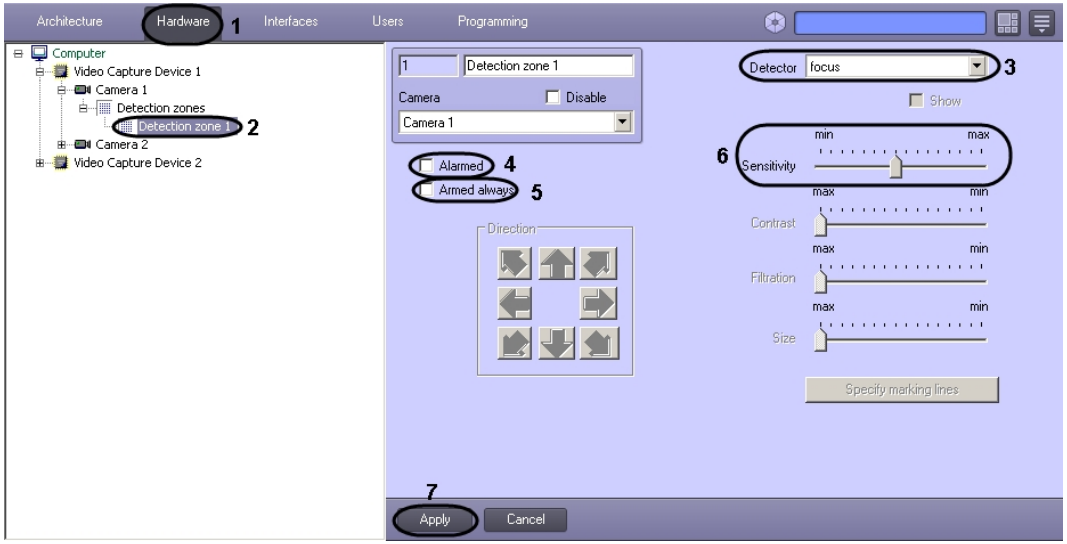

3. Enable the focus detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the focusing detection tool registered earlier (3).
4. To enable the auto recording option on a focus detection tool alarm for the selected camera, set the **Alarmed** checkbox (4).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**
> If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

5. To disable disarming of the focus detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (5).

> **Note.**
> When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

6. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (6). This setting corresponds to the minimum drop in image sharpness (that is the difference between the average number of contours and the number of contours in the current frame), with which the detection tool is to trigger.
   The best value of the **Sensitivity** parameter is defined by testing the triggering of detection tools. In most cases the default setting is sufficient.
7. Click the **Apply** button (7).

Focus detection tool is now configured.

Configuring Stability detection tool

Stability detection tool reacts to any change in video camera position. Operation of the detection tool is based on the comparison between parameters of each frame and the average parameters. It uses high frequency filtration to detect the objects' outlines, if they are sharply-defined.

To configure Stability detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

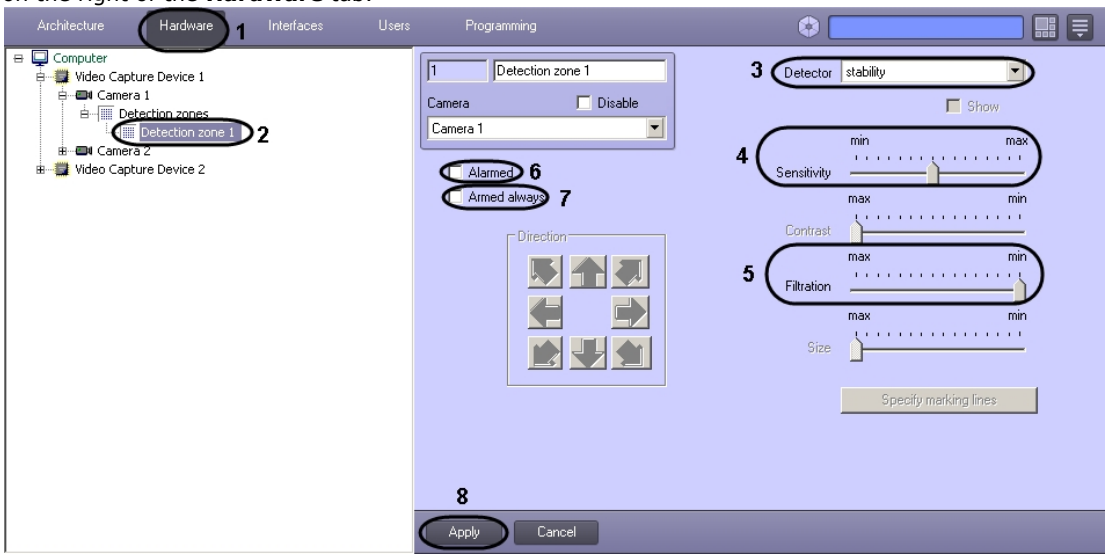

3. Enable the stability detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the focusing detection tool registered earlier (3).
4. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (4). This setting corresponds to the minimum drop in image sharpness (that is the difference between the average number of outlines and the number of outlines in the current frame), with which the detection tool is to trigger.
   The best value of the **Sensitivity** parameter is defined by testing the triggering of detection tools. In most cases the default setting is sufficient.
5. Set the value of the **Filtration** parameter by moving the the slider of the same name (5). The value of this parameter corresponds to the contrast threshold of the detected object.
   Decreasing the **Filter** parameter means that it is less probable that detection tool will trigger at objects the color gamut of which is close to the background color gamut.
   Increasing the **Filter** parameter means that it is more probable that the detection will trigger at the video signal noise. The best value of the **Filter** parameter is identified by testing the detection tool for triggering under the required conditions. In most cases, the default value is enough.
6. To enable the auto recording option on a stability detection tool alarm for the selected camera, set the **Alarmed** checkbox (6).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**
> If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

7. To disable disarming of the stability detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (7).

> **Note.**
> When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

8. Click the **Apply** button (8).

Stability detection tool is now configured.

Configuring Background change detection tool

This detection tool reacts to changes in the scene background due to physical tampering of the CCTV camera. Operation of the detection tool is based on calculation of the standard deviation of integral frame intensity from its mean value.

To configure Background change detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the Hardware tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

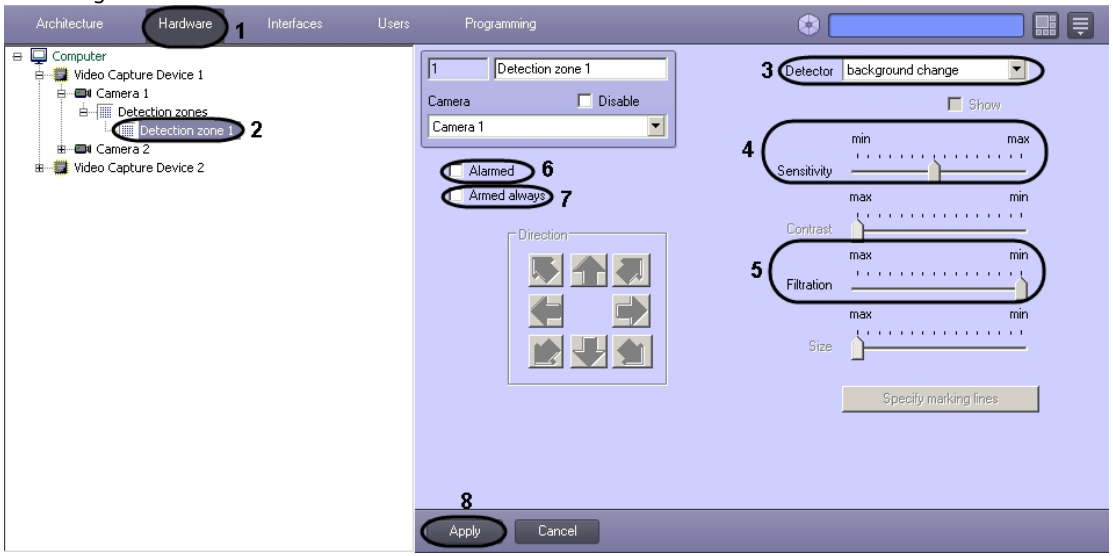

3. Enable the background change detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the focusing detection tool registered earlier (3).
4. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (4). This setting defines the deviation of the integral frame brightness from its mean value at which the detection tool is to trigger.
   The best value of the **Sensitivity** parameter is defined by testing the triggering of detection tools. In most cases the default setting is sufficient.
5. Set the value of the **Filtration** parameter by moving the slider of the same name (5). The value of this parameter corresponds to the contrast threshold of the detected object. Decreasing the **Filter** parameter means that it is less probable that detection tool will trigger at objects the color gamut of which is close to the background color gamut. Increasing the **Filter** parameter means that it is more probable that the detection will trigger at the video signal noise. The best value of the **Filter** parameter is identified by testing the detection tool for triggering under the required conditions. In most cases, the default value is enough.
6. To enable the auto recording option on a background change detection tool alarm for the selected camera, set the **Alarmed** checkbox (6).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**

If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

7. To disable disarming of the background change detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (7).

> **Note.**
> When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

8. Click the **Apply** button (8).

Background change detection tool is now configured.

Configuring Blind detection tool

Blind detection tool detects camera blinding. Operation of the detection tool is based on comparison of the bitmap histogram of the current frame to that of the reference blinding frame (white).

To configure Blind detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

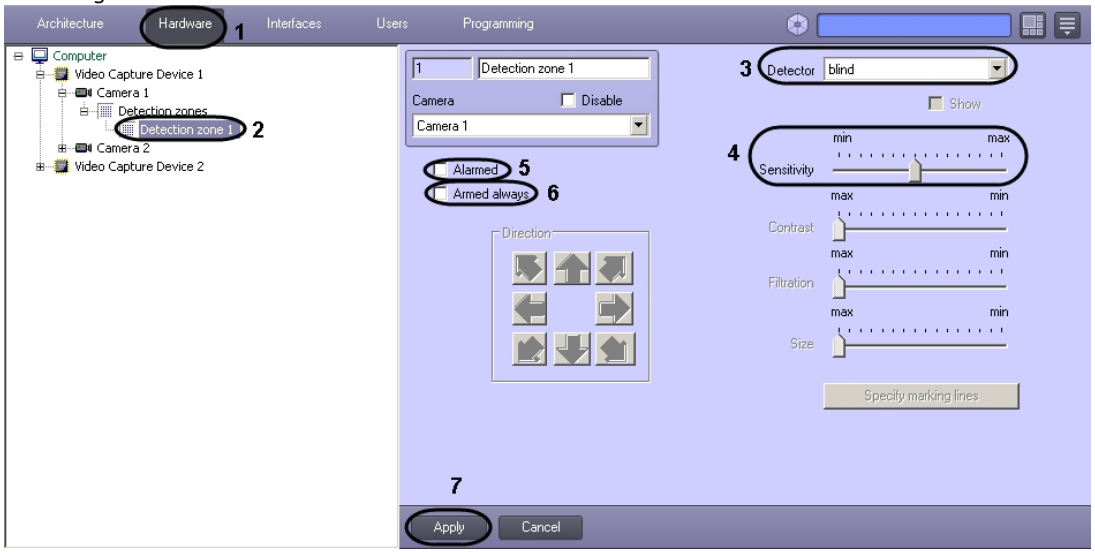

3. Enable the blind detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the focusing detection tool registered earlier (3).
4. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (4). This setting defines the image blinding rate, expressed in the difference between the brightness histogram median position of the current and reference frames with which the detection tool is to trigger.
   The best value of the **Sensitivity** parameter is defined by testing the triggering of detection tools. In most cases the default setting is sufficient.
5. To enable the auto recording option on a blind detection tool alarm for the selected camera, set the **Alarmed** checkbox (5).

> **Note.**

If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

Note.
If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

6. To disable disarming of the blind detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (6).

Note.
When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

7. Click the **Apply** button (7).

Blind detection tool is now configured.

Configuring Cover detection tool

Cover detection tool detects camera covering. Operation of the detection tool is based on analysis of the broadening of the frame histogram, relative to the histogram median of the reference covering frame (grey).

To configure Cover detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

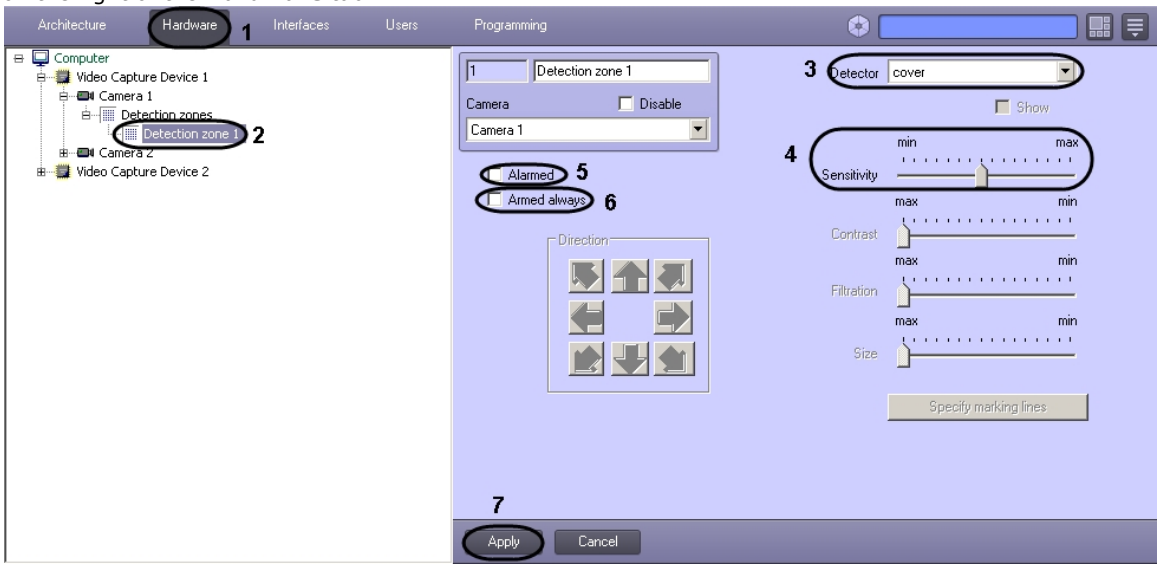

3. Enable the cover detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the focusing detection tool registered earlier (3).
4. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (4). This setting corresponds to the contraction rate of the frame brightness histogram, i.e. estimation of grey filling ratio with which the detection tool is to trigger.

The best value of the **Sensitivity** parameter is defined by testing the triggering of detection tools. In most cases the default setting is sufficient.

5. To enable the auto recording option on a cover detection tool alarm for the selected camera, set the **Alarmed** checkbox (5).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**
> If the **Alarmed option** is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

6. To disable disarming of the cover detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (6).

> **Note.**
> When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

7. Click the **Apply** button (7).

Cover detection tool is now configured.

Configuring Abandoned objects detection tool

Abandoned objects detection tool is capable of detecting objects that have been abandoned (or lost) from the scene. If the time of presence/absence of a motionless object exceeds the preset time, then the detected object is framed.

The special algorithm analyses the changes in averaged frames within a certain time interval. The detection tool is capable of recognizing lost objects and the objects that are always within the scene. This is done by the motion detection tool that registers the object's appearance in the frame.

> **Note.**
> The performance of this detector is much worse than performance of the same detector configured using the **Tracker** object (see Creating and configuring the Tracker object).
>
> When better abandoned object detection quality is required, the **Tracker** detector is recommended to be used.

To configure Abandoned objects detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

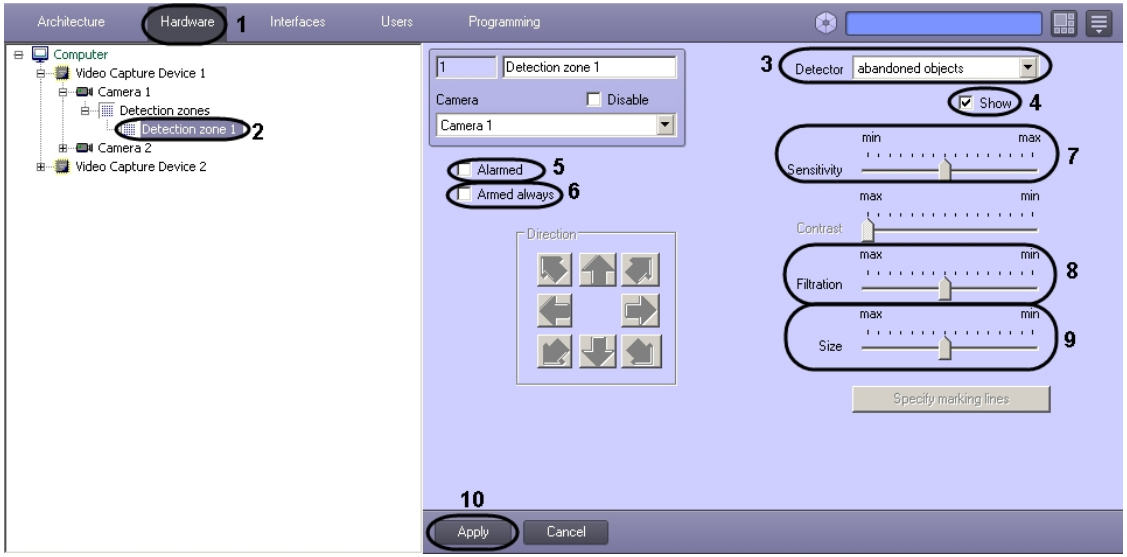

3. Enable the abandoned objects detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the abandoned objects detection tool registered earlier (3).
4. By default, abandoned (or lost) objects are framed in red. The frame color can be changed.
5. By default, the detected (or lost) object is dynamically framed. If an abandoned (or lost) object is not to be framed, then set the **Show** checkbox unchecked (4).
6. Set the value of the **Sensitivity** parameter by moving the the slider of the same name (7). This setting corresponds to the minimum value of the average brightness of the abandoned (or lost) object, which triggers the detection tool only by its appearance in the frame, not by the appearance of any other objects.
   The best value of the **Sensitivity** parameter is defined by testing the false triggering of detection tools. With low values of the **Sensitivity** parameter, false triggering of detection tools by appearance of other objects is more probable. With high values of the **Sensitivity** parameter, detection of abandoned objects is less probable. It is recommended to select a **Sensitivity** value, which will exclude false triggering of detection tools.
7. Set the value of the **Filtration** parameter by moving the slider of the same name (8). This setting corresponds to the time interval at the end of which the object in the frame is considered to be abandoned (or lost). The **Max** position of the slider corresponds to 3 minutes, the **Min** position – to 3 seconds.
8. Set the value of the **Size** parameter by moving the slider of the same name (9). The value of this parameter corresponds to the minimum linear dimensions of the detection object as a percentage of the dimensions of the video. When an object that is bigger than the preset one is detected as abandoned, the abandoned objects detection tool switches to the alarm status.
   The best value of the **Size** parameter is defined by testing the triggering of detection tools. It is recommended to set the value to the **Size** parameter that is slightly higher than the mean size of abandoned (or lost) objects in the frame. If there is a false triggering of a detection tool, it is necessary to change the value of the **Sensitivity** parameter.
9. To enable the auto recording option on an abandoned objects detection tool alarm for the selected camera, set the **Alarmed** checkbox (5).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**
> If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

10. To disable disarming of the abandoned objects detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (6).

Note.
When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

11. Click the **Apply** button (10).

Abandoned objects detection tool is now configured.

Configuring Infrared detection tool

Infrared detection tool is used for thermal imagers – infrared cameras. Infrared detection tool detects moving objects within the controlled scene. Detected moving objects are dynamically framed. The motion is detected by calculating gradients between consequent frames.

Note.
The thermal imager is a device, that allows both day and night, to control the situation in any kind of weather, functioning in the thermal, invisible spectral range. It enables to see things that are invisible for night vision devices and TV cameras. Heavy snow, fog, the absence of lighting at night strongly reduce the effectiveness of standard video surveillance facilities. The thermal imager, unlike the common highly sensitive camera or infrared camera, functions properly without regard to the weather and illumination: moonless night, heavy clouds, mist, smoke or, vice versa, very bright sunlight do not affect its functioning. The sensitive element of the thermal imager operates in the invisible spectral range and in fact is not affected by the environmental changes. The thermal imager provides instant temperature measurement at thousands of object points.

Note.
The video signal from the thermal imager is treated as a standard video signal, but the size of a detected object may be very small (as small as 3 pixels), so the detection tool needs fine tuning.

To configure Infrared detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1)
2. Select the **Detection zone** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

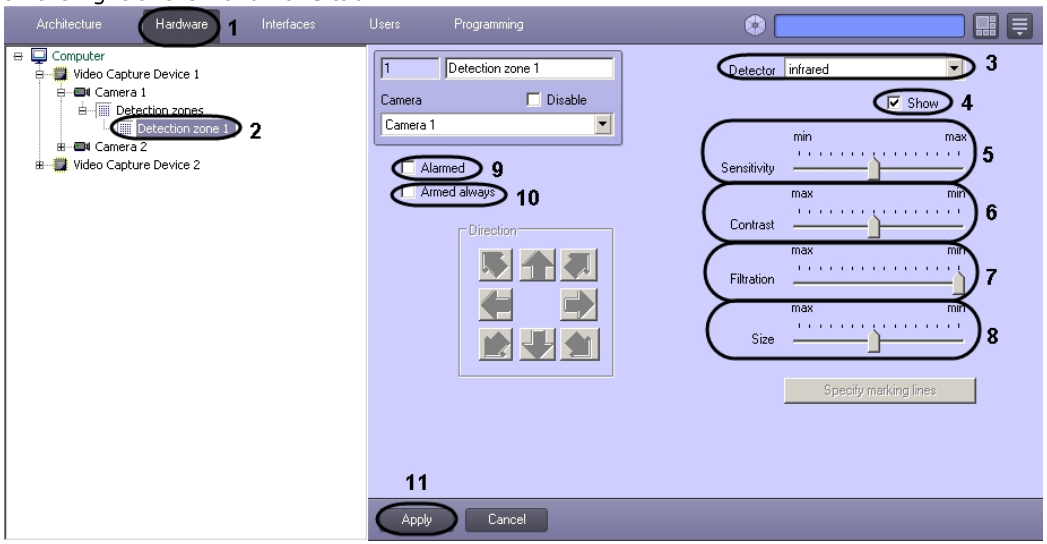

3. Enable the infrared detection tool (see the Enabling, configuring and disabling basic video detection tools section) or select the infrared detection tool registered earlier (3).
4. By default, detected moving objects are dynamically framed. If a moving object is not to be framed, set the **Show** checkbox unchecked (4).
5. Set the **Sensitivity** slider to the position corresponding to the minimal value of the average brightness of the moving object which triggers the detection tool by its motion (5).

> **Note.**
> The best value of the **Sensitivity** parameter is defined by testing the false triggering of detection tools. With low values of the **Sensitivity** parameter, false triggering of detection tools by thermal noise is more probable. With high values of the **Sensitivity** parameter, detection of motion in the frame is less probable.
> Set the **Sensitivity** parameter when the **Size**, **Filtration** and **Contrast** parameters are set. It is recommended to set the value of the **Sensitivity** parameter which does not lead to false triggering by noise in video signal.

6. Set the **Contrast** slider to the position corresponding to the minimal value of the contrast which triggers the detection tool by its motion (6).

> **Note.**
> The best value of the **Contrast** parameter is defined by testing the triggering of detection tools. With low values of the **Contrast** parameter the detection tool triggering by motion of objects colors of which are close to the color of the background is less probable. With high values of the **Contrast** parameter triggering of detection tools by noise in a video signal is more probable.
> In most cases the default setting (mean value) is sufficient.

7. Set the **Filter** slider to the position corresponding to the minimum color threshold of the detected object at which the detector will trigger (7).

> **Note.**
> The best value of the **Filtration** parameter is defined by testing the triggering of detection tools. With low values of the **Filtration** parameter triggering of detection tools by noise (including snow and rain) in a video signal is more probable. With high values of the **Filtration** parameter triggering of detection tools by motion in the frame is less probable. If a detection tool triggers upon noise in a video signal, then change the value of the **Sensitivity** parameter.

8. Set the **Size** slider to the position corresponding to minimal size of the object, which triggers the detection tool (8). The size of the object is expressed in fractions relative to the size of the frame. When there is motion of the object which size exceeds the given value, motion detection tool switches to the alarm status.

> **Note.**
> **The best value of the Size** parameter is defined by testing the triggering of detection tools. With low values of the **Size** parameter triggering of detection tools by noise (including snow and rain) in a video signal is more probable. With high values of the **Size** parameter triggering of detection tools by motion in the frame is less probable.
> It is recommended to set the value to the **Size** parameter that is slightly lower than the mean size of objects moving in the frame. It is recommended to set the value of the **Size** parameter that is a little less than the mean size of objects moving in the frame. If a detection tool triggers upon noise in a video signal, then change the value of the **Sensitivity** parameter.

9. To enable the auto recording option on an infrared detection tool alarm for the selected camera, set the **Alarmed** checkbox (9).

> **Note.**
> If the **Recording alarms** option is disabled in the **Camera** object settings, then no video recording is performed after detection tool triggers.

> **Note.**
> If the **Alarmed** option is disabled in the detection tool settings, then detection tool arming is ineffective, though the line with the name of this detection tool is highlighted with a yellow square in the feature menu of the video surveillance window.

10. To disable disarming of the abandoned objects detection tool by any user (irrespectively of his rights), set the **Armed always** checkbox (10).

Note.
When the **Armed always** checkbox is set, the line with with the name of the detection tool is not displayed in the feature menu of the video surveillance window.

11. Click the **Apply** button (11).

Infrared detection tool is now configured.

Configuring smart video detection tools

General information on forensic search

The forensic search in an archive is a search of video recordings in the archive using video recording metadata. The forensic search of video recordings in an archive is performed by object parameters that get into the field of video camera vision, e.g. in the direction of the object motion.

Note.
As metadata is stored in the object trajectories DB (VMDA DB) during recording the archive, forensic search in the archive imported from the external storage is not performed. Information on how to export archive from edge storage is given in Configuring the access to the archive in edge storage section.

The following tools are used in INTELLECT™ for the forensic search: **Line Crossing** and **Motion in the Area** that are available in the video surveiilance window. Working with these tools is described in details in the Operator's Guide manual.

To implement the functionality of the forensic search in INTELLECT™ it is necessary to create and configure the following objects:

1. **VMDA metadata storage** (see Creating and configuring VMDA metadata storage);
2. **Tracker** (see Creating and configuring the Tracker object).

It is possible to create VMDA detection tools on the base of the **Tracker** object (see Creating and configuring VMDA detection). If VMDA detection tools are configured, the archive recordind can start on these detections triggering. When recording is enabled, the **Tracker** object records all motion paths of objects that it has detected, regardless of whether the VMDA detection tools are created on its base or not.

The **Tracker** and **VMDA Detection** objects allow object classification. The following object types are supported:

- human;
- group of humans (with a possibility to count number of people in a group);
- car;
- noise;
- object carried into the area;
- object carried out of the area;
- other.

Configuration and use of this classification method is carried out using scripts and registry keys (see also CAM_VMDA_DETECTOR section of the Programming Guide).

Requirements to video parameters while working with detection tools

Video requirements to be met for abandoned object detection tool of the Tracker object operation

Requirements for video parameters to perform the forensic search in the archive

Define required disk space (VMDA metadata storage)

Search by line crossing

Search by motion in the area

Search by colour

Creating and configuring VMDA metadata storage

VMDA metadata storage stores object trajectories covered by a camera. Information that is stored in the VMDA metadata storage is used for the forensic search in an archive.

To configure the VMDA metadata storage, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Create the **VMDA metadata storage** object on the base of the **Computer** object in the objects tree. The settings panel for the created object appears in the right part of the **Hardware** tab (2).

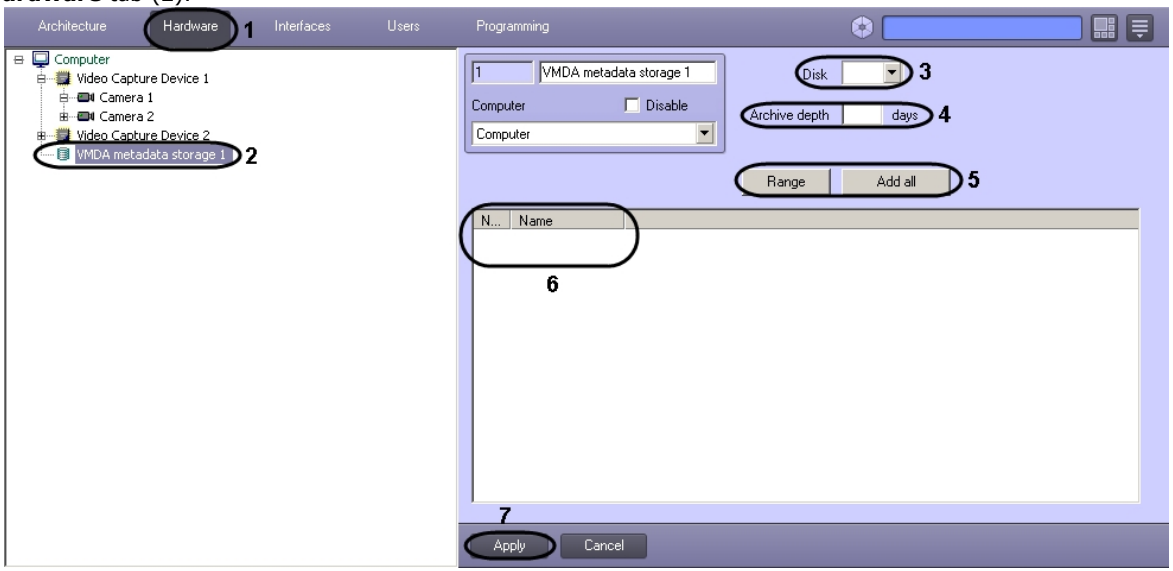

3. In the **Disk** drop-down list, select the disk for saving the archive (3).

> **Note.**
> The archive will be saved on the selected disk in the VMDA folder.

> **Attention!**
> Storing the data to the VMDA metadata storage may be very computer-intensive. The following actions are to be performed for proper system operation:
> 1.Create the **VMDA metadata storage** object on a separate Server.
> 2.Enable disk caching by means of redundant array of independent disks or OS.

4. In the **Archive depth** field, set the time period (in days) of storing the archive (4).
5. Select cameras metadata from which is to be saved in a created storage. To select all cameras registered in the system click the **Add all** button or click the **Range** button to go to the **Add/Edit Camera objects** window (5).
   As a result all selected cameras are displayed in the table (6). One can edit the list of selected cameras in the table.
6. To save the changes, click the **Apply** button (7).

The VMDA metadata is now created and configured.

Recommendations on configuring smart video detection tools

Before configuring smart video detection tools (see Creating and configuring the Tracker object) consider the following recommendations that could help to reduce false alarms:

1. Configure the **Tracker** object iteratively and check operation quality in each iteration.
2. The parameters that affect operation quality most are: **Minimum size**, **Maximum size**, and **Sensitivity**.
3. It is recommended to set **Sensitivity** to zero (left end position of the slider). This will enable automatic sensitivity ranging to ensure reasonable operation quality of the tracker in changing lighting conditions.
4. If lighting is stable, it could be reasonable to adjust the **Sensitivity** value manually. Set **Sensitivity** value about 35 to detect objects with low contrast or about 15 to detect contrast object.
5. Minimum size is to be selected so that it is a little less than typical object size on the image.
6. Maximum size is to be selected so that it is a little greater than typical object size on the image, considering that the object can be joined with its shadow.
7. Lowering the **Waiting for loss parameter** allows excluding triggering of false static objects, while setting it to a higher value could allow not breaking off alarms for overlapping or temporarily disappearing objects in some cases.
8. To improve accuracy of the VMDA detection tools, use an advanced object classifier, which is configured using scripts and registry keys – see also CAM_VMDA_DETECTOR section of the Programming Guide.

Creating and configuring the Tracker object

The **Tracker** object is designed for motion detection and saving video recordings to VMDA metadata storage.

To configure the **Tracker** object, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box.
2. Select the **Camera** object in the objects tree of the **Hardware** tab.
3. Create the **Tracker** object on the base of the **Camera** object. The settings panel for the created object appears on the right in the **Hardware** tab.

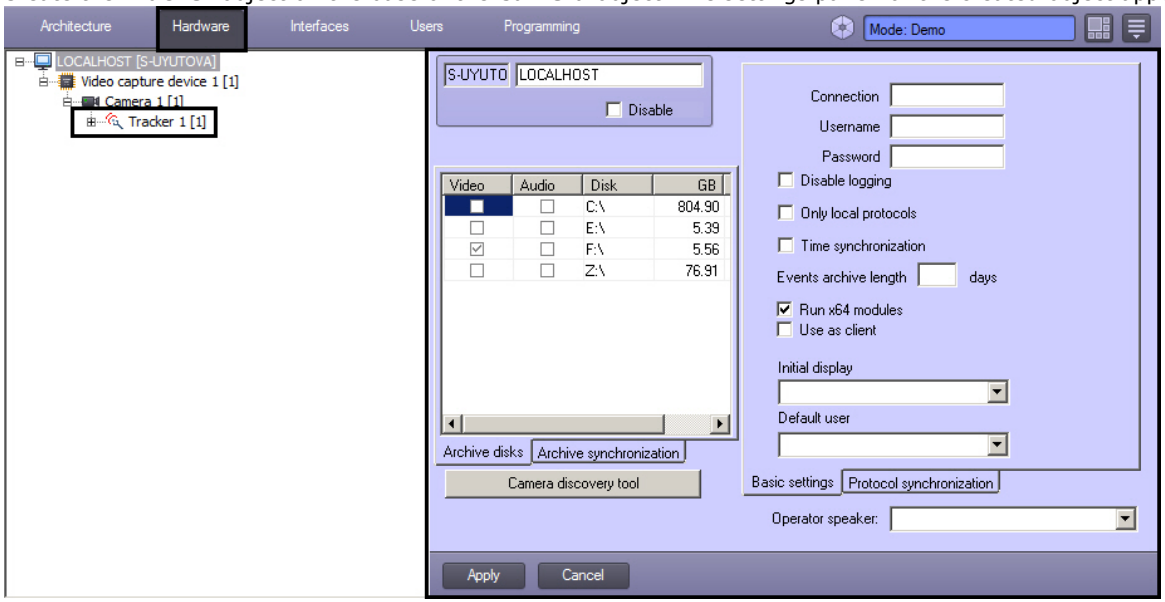

4. Set the **Show objects on image** checkbox (1), if the objects are to be selected on the preview screen. When object is selected in the top left corner the object speed is displayed in pixels per second.

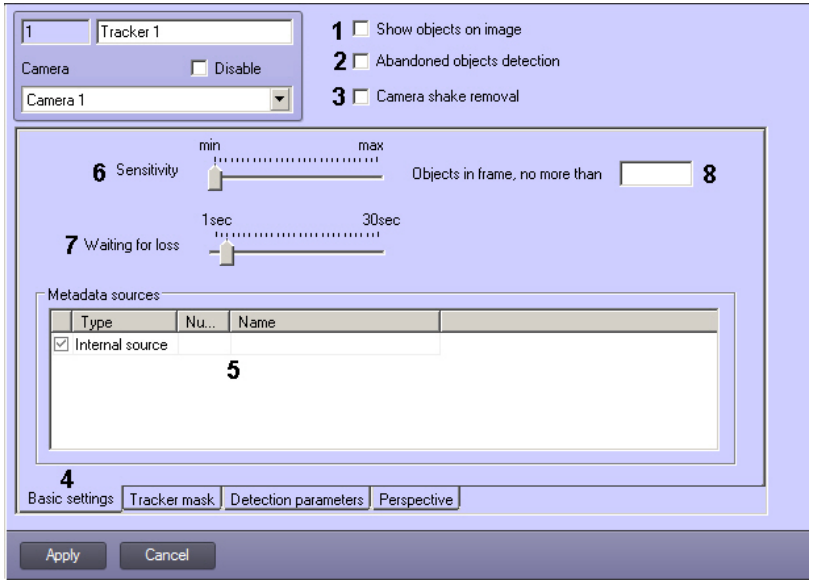

Note.
To enable displaying tracker ID, set 1 value for the DrawDetectorNumbers line parameter in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\Video (HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ITV\INTELLECT\Video for 64-bit system) registry.
Frame color is adjusted by the DrawDetectorColors parameter in the same registry:

a. When value is 1, then the frame color is the average one in the area

b. When value is 0, then the frame color is white.

5. To allow VMDA detectors monitoring abandoned objects in area covered by the camera set the **Abandoned objects detection** checkbox (2). See the video requirements for this feature to operate in the Video requirements to be met for abandoned object detection tool of the Tracker object operation section.

> **Note.**
> Camera is to always perform recording for proper operation of the abandoned objects detection tool.

> **Note.**
> If there is no need to monitor abandoned objects in area covered by the camera, disable the **Abandoned objects detection** option to reduce Server load. Disabling this option you disable detectors configured to monitor abandoned objects.

If the **Abandoned objects detection** feature is enabled, then detected abandoned objects will be framed in the image while viewing the live video or archive. In addition, an object disappearance is detected, a place where it was located is framed on the image. The function of highlighting abandoned and disappeared objects on the video is available for both standard and converted fisheye video.

6. If the camera is installed on the moving object, then set the **Camera shake removal** checkbox to stabilize the image and reduce detector's errors (3).

> **Attention!**
> When the Camera shake removal option is active, the Server load increases.

7. Go to the **Basic settings** tab (4).
8. In the **Metadata sources** table, set checkboxes next to objects used for metadata creation (5):
   a. Internal source. VMDA detectors are used as metadata source (see Creating and configuring VMDA detection section).
   b. Embedded detector. Metadata goes from detectors embedded in the camera (see Embedded detectors section).

> **Note.**

Functionality of recording tracks from the embedded detectors must be supported by the device. Furthermore, this functionality has to be integrated in the *Intell ect* software.

9. Set the value of the **Sensitivity** parameter by moving the slider to the required position (6). The parameter value corresponds to minimal value of moving object's averaged brightness on which the detector will trigger only to its motion, not to video signal noise (including snow, rain, etc.).

Note.
If the slider is in the left end position, then the value of the **Sensitivity** parameter is selected automatically.

10. Set the **Waiting for loss** slider into position corresponding to time when the object stops moving and is considered to be active and the detector is still tracking it (7). If the object is motionless for a longer period than the value which has been set, then the object is considered to be lost.

Note.
If the lost object starts moving it is considered as a new one.

Note.
More sophisticated configuration of abandoned objects detection tool is performed using registry keys – see Registry keys reference guide.

11. In the **Objects in frame, not more than** field specify maximum number of objects in the frame that are detected (8). If the number of objects exceeds the specified value, then MD_LIMIT event is generated (see CAM section of Programming Guide). If the parameter is not set or equal to 0, then this event is not generated.
12. To disable analysis in the area covered by the camera click the **Set mask** button (2) in the **Tracker mask** tab (1) and specify the area in the preview field. It is possible to disable analysis in several areas, i.e. to set several masks. To set an additional mask, click the **Set mask** button again and specify an additional masked area in the video preview field.

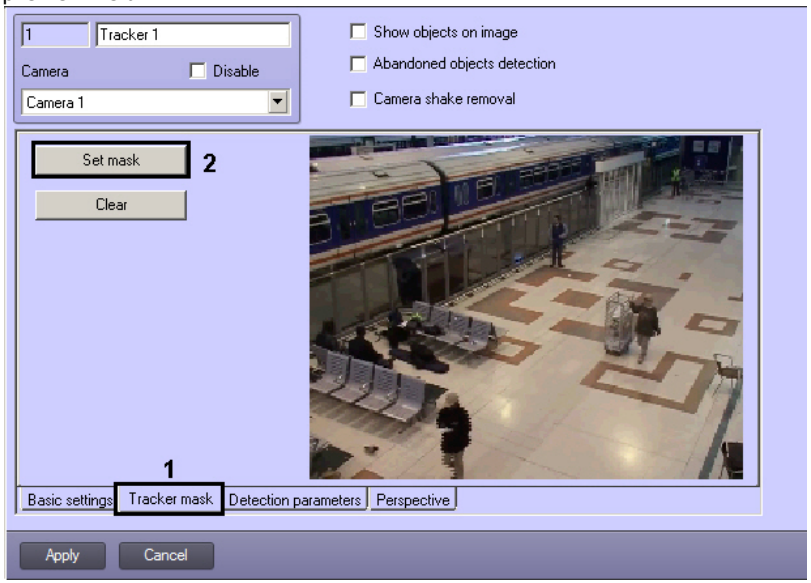

13. To set the minimal and maximal sizes of detected object do the following:

Note.

If the perspective configuration is enabled, maximum and minimum object size for detection parameters are ignored. **Width, m and Height, m parameters** in the **Perspective tab** (see Configuring perspective) are considered instead.

a. Go to the **Detection parameters** tab (1).

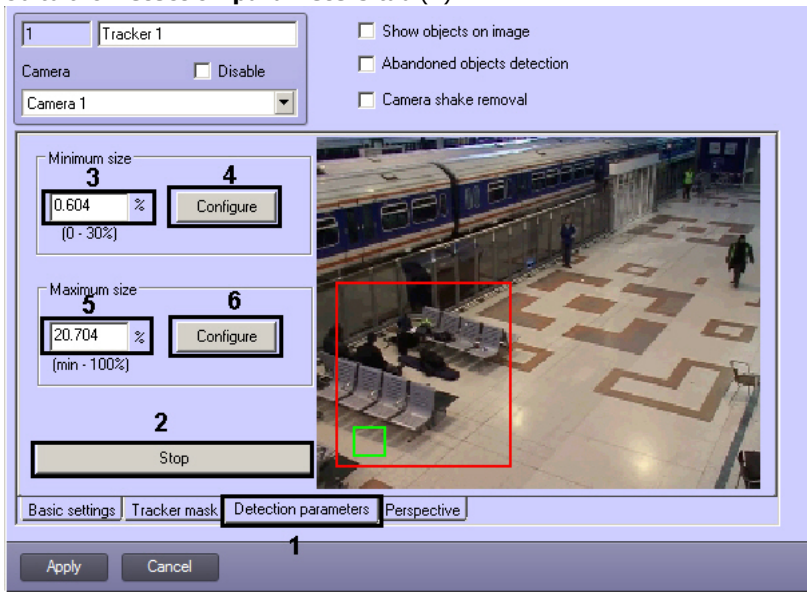

b. To stop playback in the preview, click the **Stop** button (2).

Note.
To resume playback, click the **Resume playback** button.

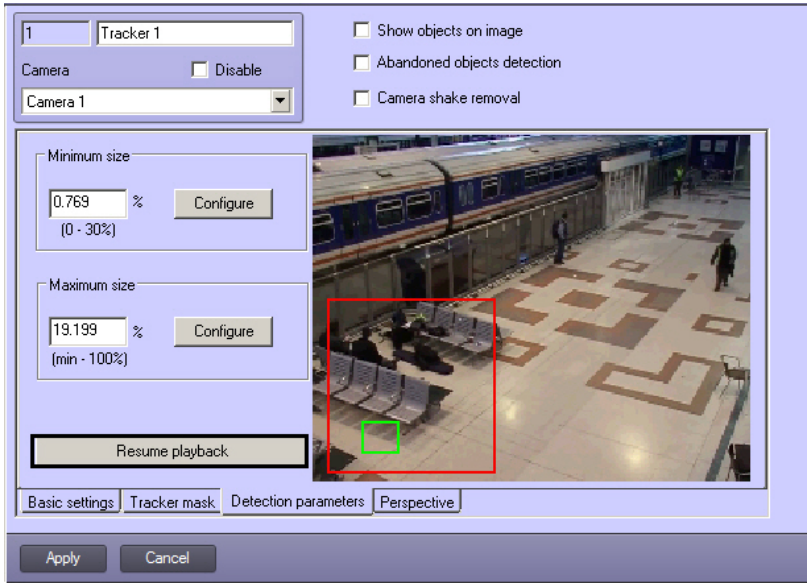

c. In the **Minimal size** group specify the minimal size of detected object as a percentage of total image area (3) or click the **Configure** button and specify the size in the preview area (4).

> **Note.**
> Range of values of the **Minimal size** parameter varies from 0 to 30% relatively the frame size.

d. In the **Maximal size** group, specify the maximal size of detected object as a percentage of total image area (5) or click the **Configure** button and specify the size in the preview area (6).

> **Note.**
> **Maximal size** is to be bigger than the minimal one and not more than 100%. If the maximal size is the same as the minimal, then there is no detection.

14. To save the changes, click the **Apply** button.

The **Tracker** object is now created and configured. During video signal recording in VMDA metadata storage the information about all objects in camera coverage will be recorded.

Configuring perspective

Perspective in the **Tracker** object is configured in order to set maximum and minimum object size (in meters) for these sizes to be considered correctly regardless of the fact that small objects can look bigger than big objects in the background. Perspective calibration allow better performance of the **Tracker** object.

If the perspective setting is active in the **Tracker** object then sizes specified in the **Detection parameters** tab are not taken into account. The **Width, m** and **Height, m** parameters are used instead.

To set perspective there are to be at least three objects of the same size in the scene that is in the camera's field of view. The perspective will be calibrated by these cameras. Poles, people, etc. can be calibration objects. Calibration objects are not to be on the same line. For higher accuracy they are to be positioned in all frame grounds: foreground, medium shot

and background. Though, in some cases this is not obligatory: for instance, if there is no need to detect objects in the background and objects in the foreground are to be detected, then calibration objects are to be positioned in the foreground. The more there are calibration objects, the higher the accuracy of parameters restoration is.

It is also possible to set points on the underlying level and their coordinates in meters (at least 3). This setting is not obligatory. Points setting allow getting track position in absolute coordinates. Points are to be located on one level. Points are not to be on the same line. The more uniformly the points are, the higher the accuracy is.

> **Note.**
> Up to 10 calibration objects and background points are allowable. This number can be changed using the PerspMaxObjects registry key (see Registry keys reference guide).

If the perspective is to be considered when setting maximum and minimum object size do the following:

1. Go to the **Perspective** tab (1).

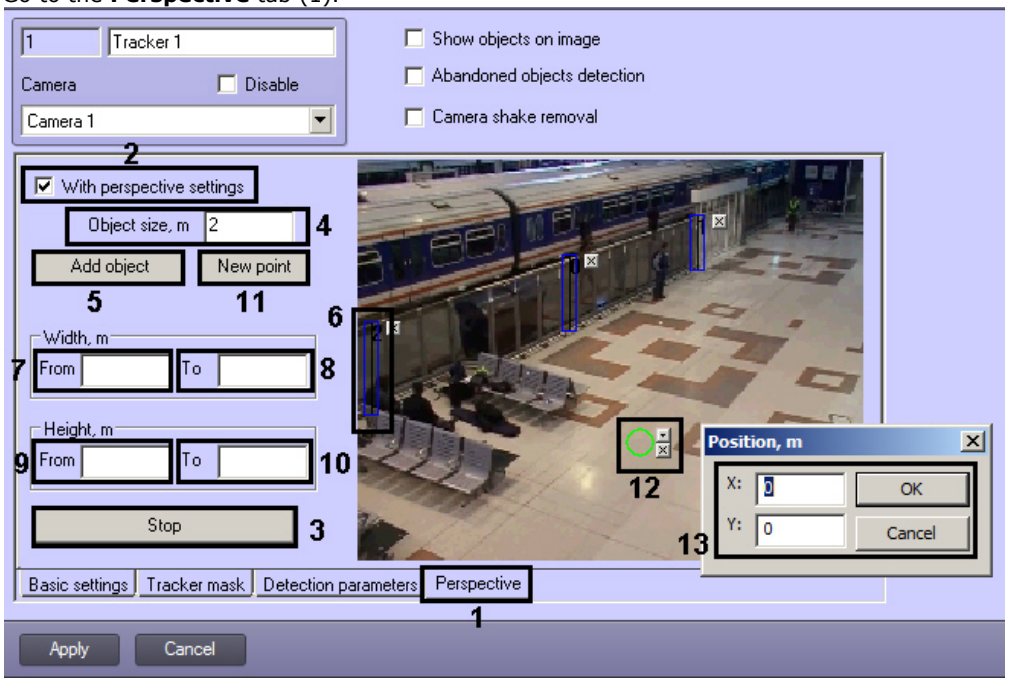

2. Set the **With perspective settings** checkbox checked (2).
3. Click the **Stop** button to stop playback in the viewing tile (3).
4. Specify the size of calibration object (in meters) in the **Object size, m** field (4).
5. Set the position of calibration objects on the video image in the viewing tile as follows:
   a. Click the **Add object** button (5).
   b. Position the object over the calibration object on the video image (6).
   c. Correct the object size by dragging its edges using left mouse button.

   > **Note.**
   > To delete an object click the ⊠ button next to it.

   d. Repeat steps a-c for all calibration objects in the scene.

6. In the **Width, m** group set the maximum and minimum width of detected object (in meters) in the **From** (7) and **To** (8) fields (8).
7. In the **Height, m** group set the maximum and minimum height of detected object (in meters) in the **From** (9) and **To** (10) fields.
8. If required set points on the background as follows:
    a. Click the **New point** button (11).
    b. Position a point on the video image (12).
    c. Click the button. The **Position, m** dialog box appears.
    d. Set the point position in meters and click **OK** (12).

    > **Note.**
    > To delete a point click the button next to it.

    e. Repeat steps a-d for all required points.
9. To save the changes, click the **Apply** button.

The perspective in the **Tracker** object is now configured.

Creating and configuring VMDA detection

VMDA detection are detection tools due to triggering of which some actions can be performed in the system.

> **Important!**
> Up to *Intellect* version 4.10.2, VMDA detection tools trigger only if recording to the archive is performed (permanently or by alarm of the Motion detection tool). Intellect since version 4.10.3, recording is not an obligatory condition for VMDA detection tool to trigger.

For instance, when the detection tool with corresponding settings triggers, the alarm on camera is generated and recording to the archive starts. Thus VMDA detection tools allow recording to the archive and, therefore, the recording of object trajectories, not steadily, but in the required situations.

If it is necessary to initiate a camera alarm when the VMDA detection tool is triggered, select the **Generate alarm on camera** check box.

Detections arming and disarming is performed using macros or scripts which are to be created manually (detailed information about macros see in the Creating and using macros section). The initial state of detection is defined by **Generate alarm on camera** checkbox – detection armed if the checkbox is set, otherwise – disarmed.

The table below describes the cases and reactions on detection tool triggering (e.g. on line crossing or motion in the area).

	Detection tool is armed	**Detection tool is disarmed**
Generate alarm on camera check box is set	Alarm on camera + alarm on detection tool	nothing happens
Generate alarm on camera check box is not set	Alarm on detection tool	nothing happens

> **Note.**
> The **Disappearance in the area** detection tool is triggered **immediately** after an object in the area disappears. By default, the alarm is reset 15 seconds after the alarm is triggered. To change the length of time after which an alarm is reset, edit the DisappearedAlarmDuration registry key in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\Video section for 32-bit systems (HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ITV\INTELLECT\Video for 64-bit systems).

To create a **VMDA detector,** do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box.
2. Select the **Tracker** object in the objects tree of the **Hardware** tab.
3. Create the **VMDA detection** object on the base of the **Tracker** object. The settings panel for the created object appears on the right of the **Hardware** tab.

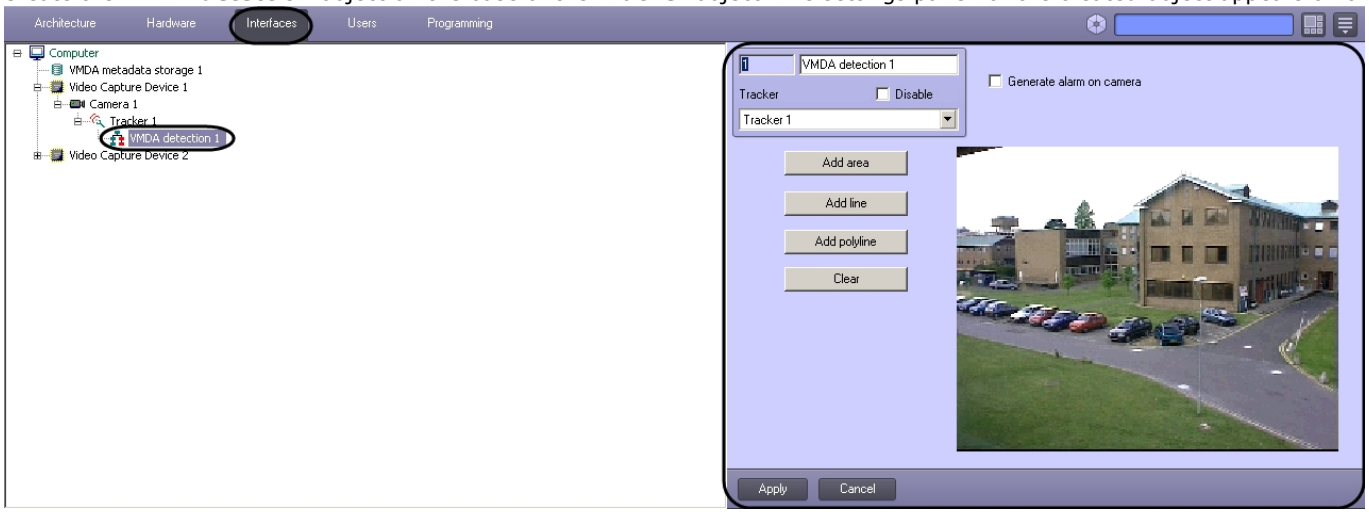

Note.
Video from the camera on the baase of which the VMDA detection object is created is displayed in the **Video** field.

The **VMDA detection** is now created. Information only about the objects that triggered detector action is recorded to the VMDA metadata storage.

Attention!
Creating VMDA detection on IP cameras, do not forget about information in the Requirements for IP devices of audio and video input section.

Cross line detector configuration

A cross line detector is a VMDA detector that triggers when the trajectory of an object that is in the camera coverage and crosses a virtual line.

To configure a cross line detector, do the following:

1. Go to the settings panel for a **VMDA detection** object.

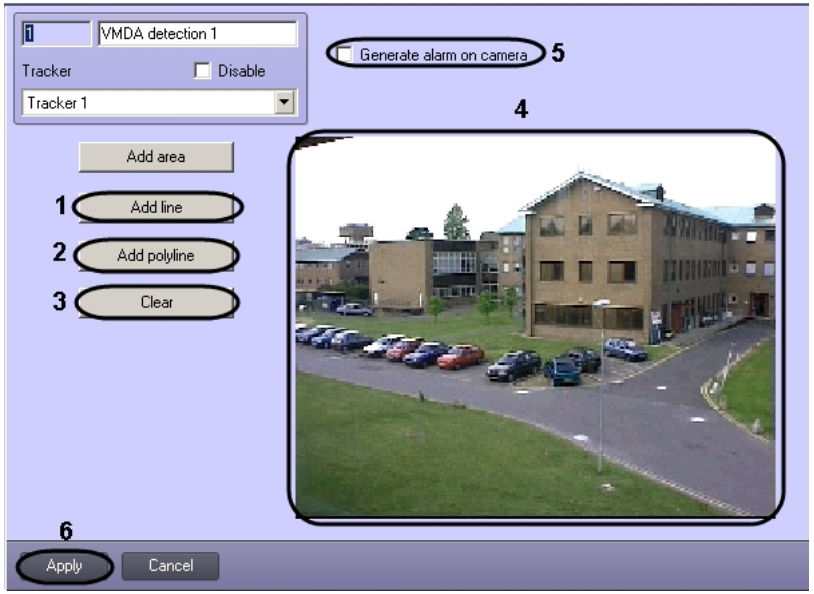

2. Select a line type (straight or polyline) the crossing of which leads to a detector triggering. Only one line can be added. The first line will be deleted if there is an attempt to add a second one.
    a. If a detector is to trigger while crossing a straight line, click the **Add line** button (1).
    b. If a detector is to trigger while crossing a polyline, click the **Add polyline** button (2).
3. In the **Video preview** field (4), set the end point of the line, by clicking left mouse button, which crossing leads to a detector triggering.

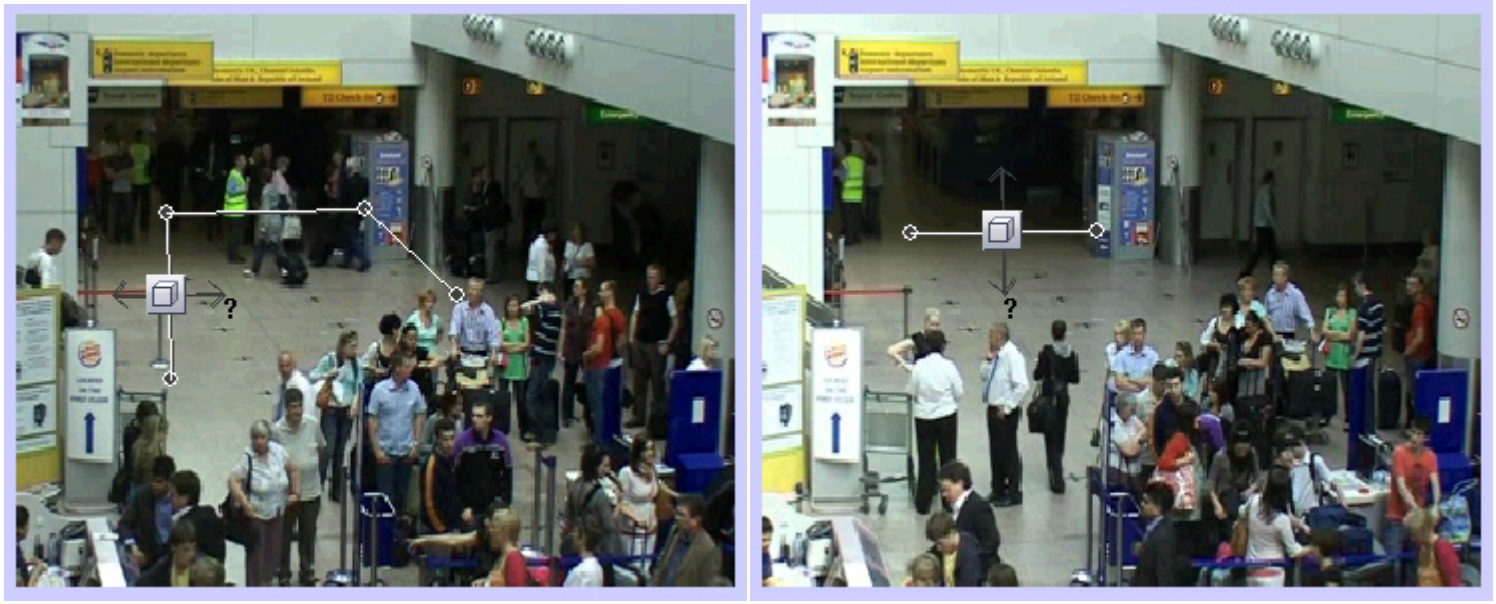

4. Make necessary operations with a line. Line operations are shown in the table.

Operation	Result
Left mouse click in the video surveillance window	Creation of a line's end point
Hover to an end point and holding the left button pressed move the mouse	Shift of a line's end point
Hover to an end point and click the right mouse button	A line's deletion

5. To select object type for which the detector will be enabled, click the symbol. Available object types are:
   a. Any object. Detector triggers when the line is crossed by any object
   b. Man. Detector triggers when the line is crossed by a man
   c. Vehicle. Detector triggers when the line is crossed by a vehicle

> **Note.**
> Detection of the following object types can be configured using scripts and registry keys: human, group of humans (with a possibility to count number of people in a group), car, noise, object carried into the area, object carried out of the area, other. See also CAM_VMDA_DETECTOR section of the Programming Guide.

6. By clicking the left mouse button upon one of the grey arrows, set the object's direction across the line by which the detector will trigger. The arrow will be colored white.

   Approximate speed of detected objects when the detector triggers is displayed close to arrow. At minimal and maximal value of speed the "?" sign will display and fact of cross

line regardless of speed will be detected. It is possible to change value of speed by changing arrow length moving arrowhead with pressed left mouse button.

> **Note.**
> Arrow has minimal length while adding.

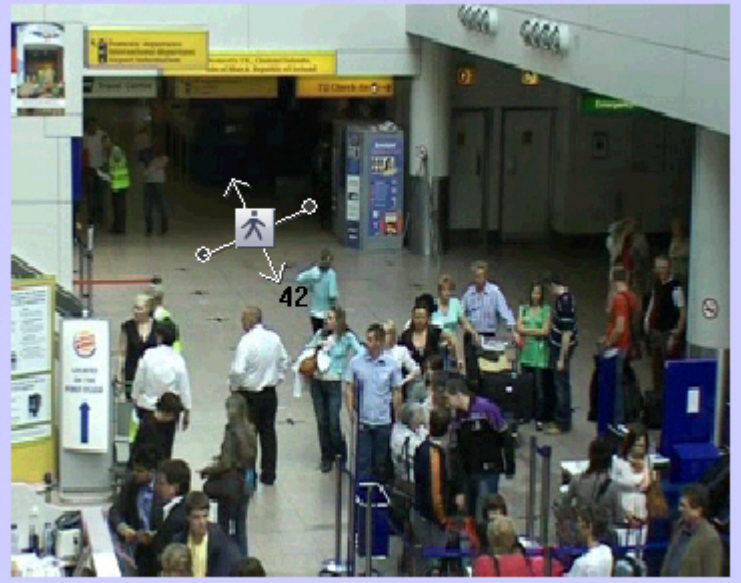

> **Note.**
> It is necessary to set at least one object's direction across the line.

> **Note.**
> If both directions are set, the detector will trigger at any line crossing by an object.

7. If the alarm is to be generated when the detector triggers, set the **Generate alarm on camera** checkbox (5).
8. To save the changes, click the **Apply** button (6).

> **Note.**
> To clear the preview field from a visual elemnt (line), click the **Clear** button (3).

A cross line detector is now configured.

Motion in the Area detector configuration

A motion in the area detector is a tracker detector that operates when the object (objects) makes some actions in a virtual area that is in the camera coverage.

To configure a motion in the area detector, do the following:

1. Go to the settings panel for a **VMDA detection** object.

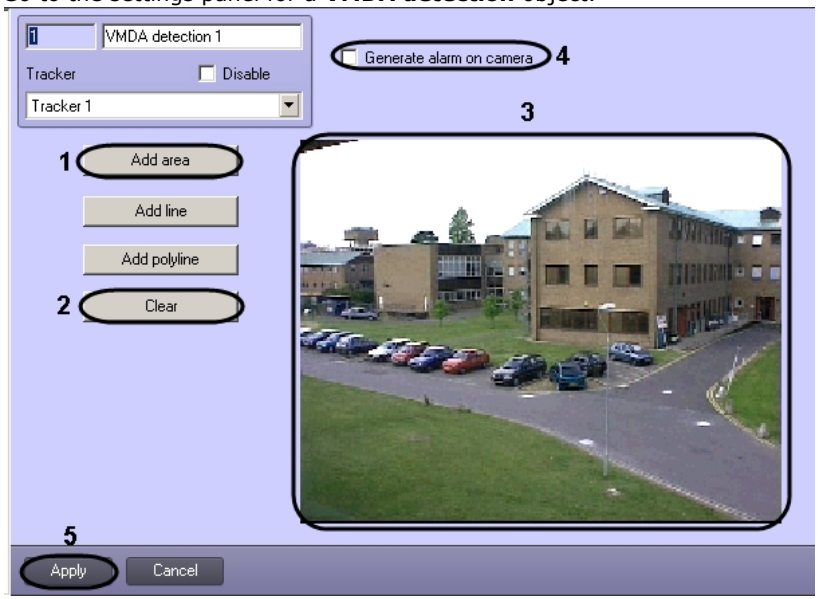

2. Click the **Add area** button (1).
3. In the **Video preview** field (3), set, by one by one clicking left mouse button, nodal points of the area which state is to be analysed.Only one area can be added. If there is an attempt to add a second area, the first one will be deleted.

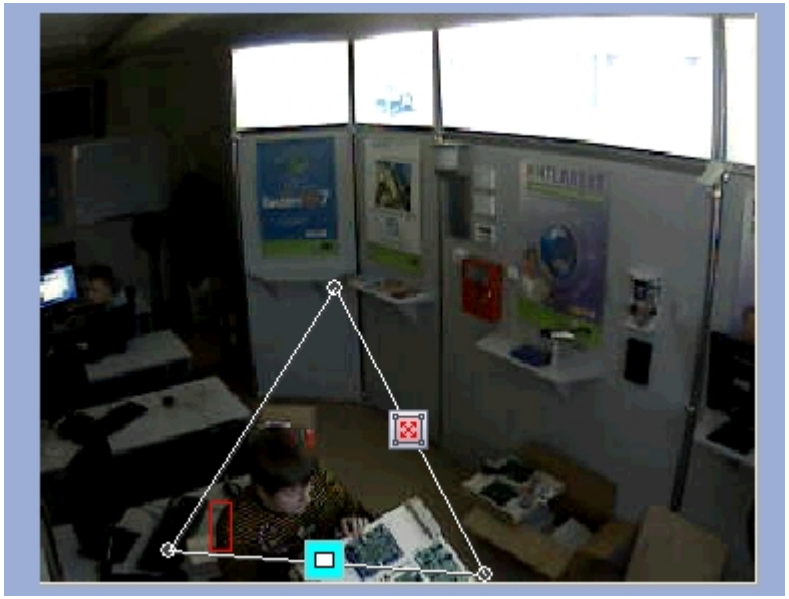

4. Make necessary operations with an area. Area operations are shown in the table.

Operation	Result
Left mouse click in the video surveillance window	Area's nodal point addition
Hover to a nodal point and holding the left button pressed move the mouse	Area's nodal point shift
Hover to a nodal point and press right mouse button	Line deletion. If there are three nodal points the whole area will be deleted

5. To select an object type for which the detector will trigger, click the symbol. Available object types are given below.
   a. Any object. Detector triggers while dealing with any object
   b. Man. Detector triggers while dealing with any man
   c. Vehicle. Detector triggers while dealing with any vehicle

> **Note.**
> Detection of the following object types can be configured using scripts and registry keys: human, group of humans (with a possibility to count number of people in a group), car, noise, object carried into the area, object carried out of the area, other. See also CAM_VMDA_DETECTOR section of the Programming Guide.

6. To select a detector type, click the symbol. Available detector types are given below.
   a. Any motion in the area. Detector triggers due to any motion in the area

b. Entrance into the area. Detector triggers due to object's entrance into the area
c. Exit from the area. Detector triggers due to the exit of object from the area
d. Appearance in the area. Detector triggers due to the object's appearance in the area
e. Disappearance from the area. Detector triggers due to the object's disappearance from the area
f. Stop in the area. Detector triggers due to the object's stop in the area
g. Presence in the area for more than 10sec. Detector triggers due to the object's precense in the area for more than 10sec
h. Abandoned item. Detector triggers due to the item abandoned in the area

7. If the alarm is to be generated when the detector triggers, set the **Generate alarm on camera** checkbox (4).
8. To save the changes, click the **Apply** button (5).

Note.
To clear the preview field from a visual element (area), click the **Clear** button (2).

A motion in the area detector is now configured.

Embedded detectors

At the moment of writing the documentation the embedded analytics of various cameras and Stretch cards (if it is supported-see reference manual concerning these devices) has been integrated into the *Intellect* software complex.

Note.
To clarify whether the embedded analytics is integrated for a particular video camera, please refer to the documentation for the relevant version of Drivers Pack - see page Documentation Drivers Pack.

Moreover, ACAP app for Axis devices is supported by *Intellect* – AxxonSoft Object Tracker for Axis cameras. This app allows using AxxonSoft analytics in Axis devices. Information on how to add the app to Axis device as well as how to configure and use it in *Intellect* can be found in the AxxonSoft tracking in Axis devices section. The app can be downloaded here.

This section contains an example of embedded detectors auto setup. One should consult with reference manual while setting up embedded detectors of special devices manually.

Note.
If there is no time synchronization for some IP devices, the events of the onboard detection tools may work incorrectly in *Intellect*. In this case it is recommended to enable the synchronization of time and time zone between the Server and the IP device in the web-interface of the latter.

Creating embedded detectors

To create build-in detectors do the following:

1. With the help of *Camera discovery tool* create IP devices that support build-in analytics.
2. In result the created objects will be displayed in the objects tree together with build-in detectors.

Build-in detectors creation is completed.

Configuring embedded detectors

To configure embedded detectors, do the following:

1. Go to the settings panel for the **Embedded detector** object.

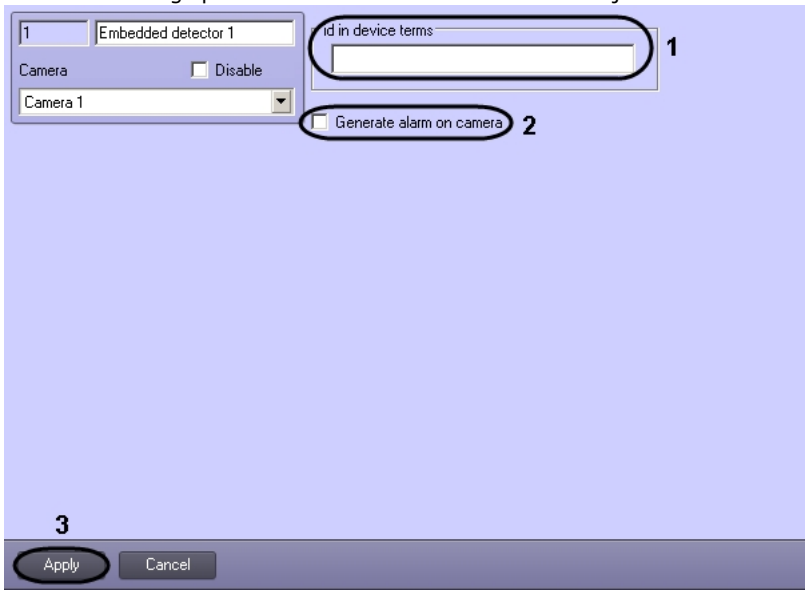

2. In the **id in device terms** field the detector code in the device is specified (camera, card) (1). It is recommended to leave this field unchanged for proper operation of the detector.
3. Set the **Generate alarm** on the camera checkbox if the alarm is to be generated on the camera by detector's response (2).
4. Click the **Apply** button to save the changes (3).

Embedded detectors are now configured.

AxxonSoft tracking in Axis devices

You can use analytics from AxxonSoft (Smart video detection tools) on Axis devices.

> **Note**
> This option is available for all devices based on Axis ARTPEC-4 processors and ARTPEC-5

All CPU heavy analytics and metadata generation tasks are delegated to the camera in this case reducing Server load.

To do this:

1. Go to the device's web interface.
2. Select the **Setup** menu (**1**) -> **Applications** (**2**).

3. Select the ACAP application (**3**) and click **Upload the Package** (**4**).

> **Important!**
> The application can be downloaded from AxxonSoft web site here.

4. Go to **AxxonSoft Tracker** menu (**1**) -> **License**(**2**).

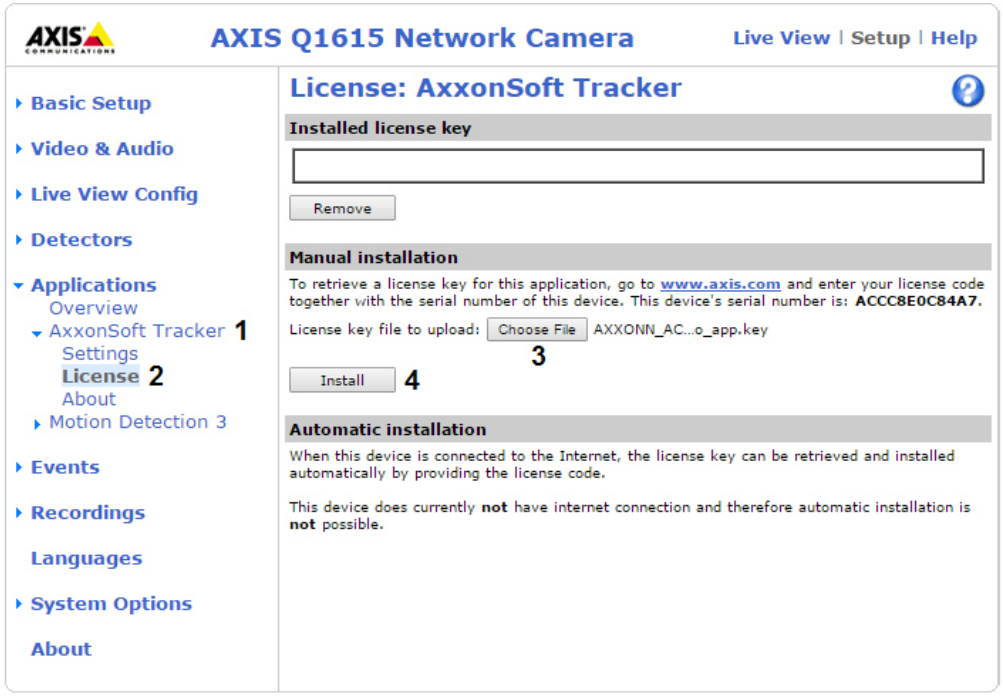

5. Select the license file (**3**) and click **Install** (**4**).

> **Note.**
> Register a license code along with camera's MAC address on Axis website in order to get the license file.
>
> Contact AxxonSoft help-desk to get the license code.

6. Go to **Applications**, select the installed application (**1**) and click **Start** (**2**).

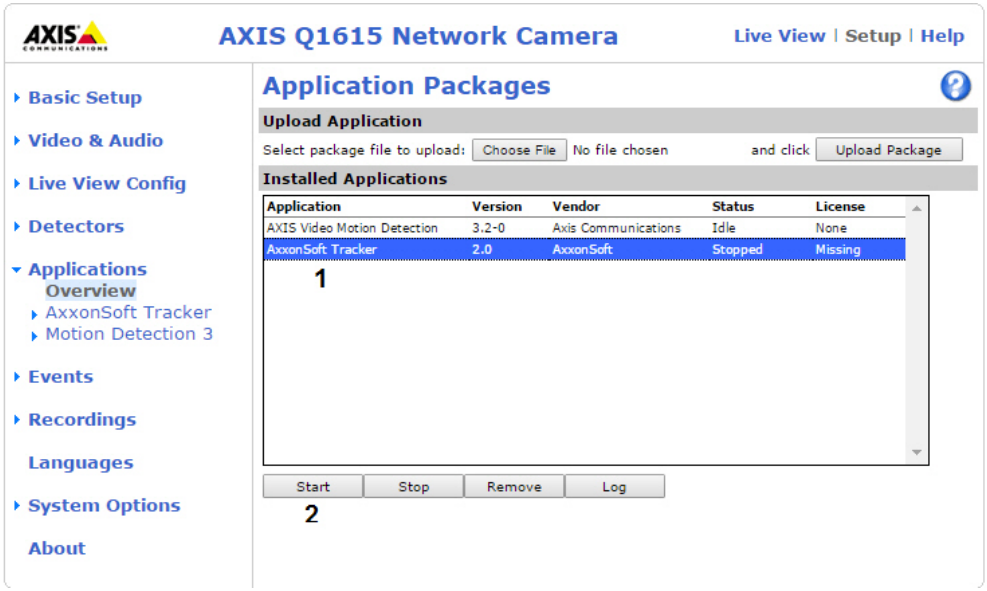

7. Add the Axis device to the *Intellect* software using the Camera discovery tool. An **Embedded detection tool** object corresponding to the tracker is created on the base of the **Camera** object.

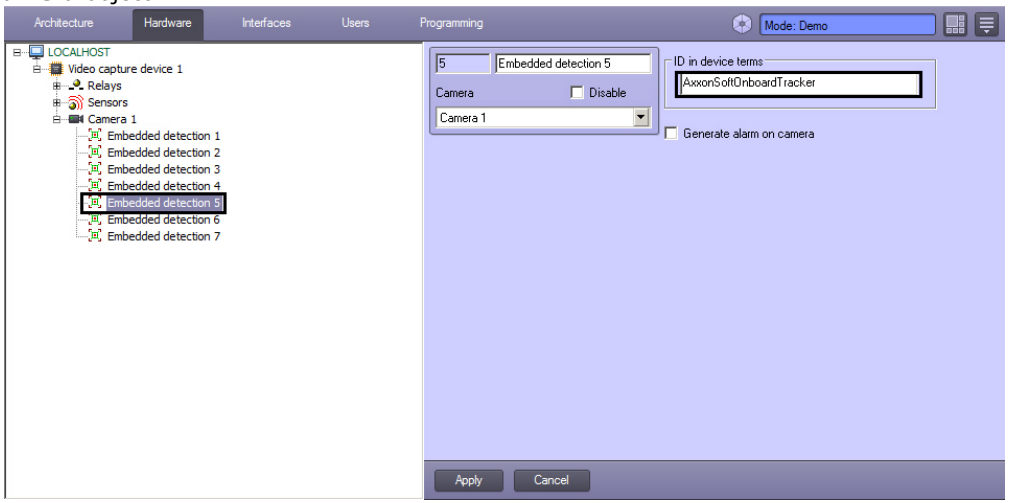

8. Configure this object in the Intellect software according to the Configuring embedded detectors section.

> **Note.**
> The tracker parameters are configured in the **Setup** -> **Applications** -> **AxxonSoft Tracker** -> **Settings** section of the Axis device web-interface similar to the **Tracker** object in the Intellect software (see Creating and configuring the Tracker object).

Note.
In order to perform forensic search in the archive while using this method of metadata generation, create and configure the **VMDA metadata storage** and **Tracker** objects and select the created above detection tool as metadata source for the **Tracker**. See also Creating and configuring the Tracker object and Creating and configuring VMDA metadata storage.

Axxonsoft tracker is now configured to be used in Axis devices.

Configuring Face detection tool

Face detection tool recognizes «faces» objects in the controlled zone. While detecting the «faces» in the frame the following can be observed:

1. A face is dynamically framed on the frame;
2. If Face Intellect is installed, then there is possibility to record a frame with a face to the file of .bmp format to the folder «<Face-Intellect>\ Bmp\ person\».

Note.
The **External capture** and **Maximum performance** options are only used with *Face-Intellect* installed. For more details please refer to Face intellect. Administrator's Guide. The most relevant version of this document is available in the AxxonSoft documentation repository.

To configure Face detection tool, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1)
2. Select the **Face detection** object corresponding to the required detection tool, on the **Hardware** tab in the objects tree (2). The settings panel for the selected object appears on the right of the **Hardware** tab.

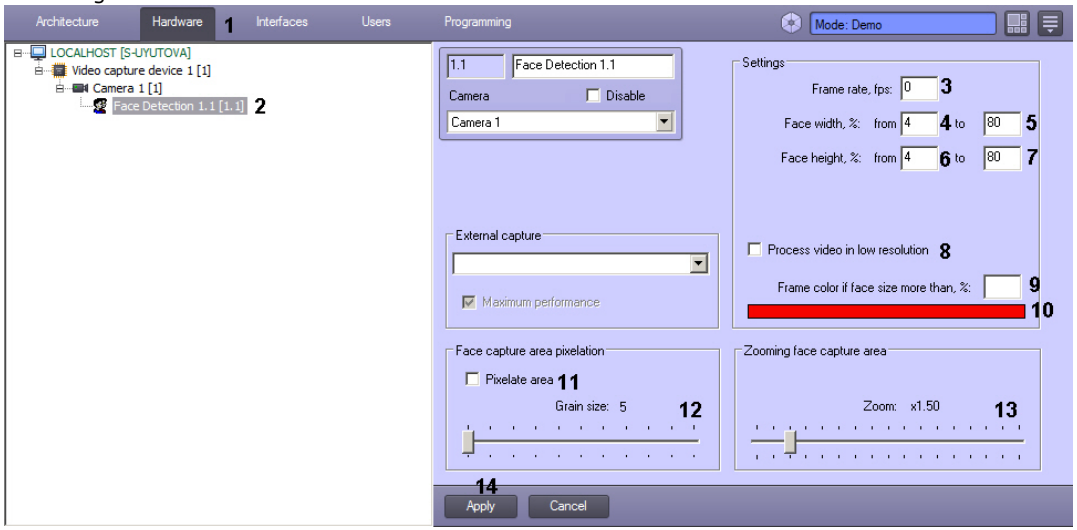

3. Specify how many fps from the video stream are processed by the Face detection program module. This parameter is necessary for reducing the load on the Server (3).
4. Set approximate width of face on the video image in percentage of width of frame;
    a. In the **From** field enter minimally allowable width of face on the video image (4).
    b. In the **To** field enter maximally allowable width of face on the video image (5).
5. Set approximate height of face on the video image in percentage of height of frame;
    a. In the **From** field enter minimally allowable height of face on the video image (6).

b. In the **To** field enter maximally allowable height of face on the video image (7).

> **Note.**
> Faces won't be detected if specified minimal sizes highly differ from actual sizes.
>
> For example, if there are big faces (15-30%) on the video and minimal size is 5% and maximal size is 80%, then faces won't be detected. But if minimal size is 12% and maximal size is 80%, then faces will be detected.
> So, detection won't detect big faces if it is configured for detection of small faces, and vice versa.

6. By default the Face detection tool processes a video with the resolution, set for the **Camera** parent object. To process a video with 320x240 pixels resolution, set the **Process video in low resolution** checkbox (8)

> **Note.**
> Enabling this option reduces the load of the Server's processor, but the probability of face detection also reduces.

> **Attention!**
> The **Process video in low resolution** setting is not relevant in case, when a high resolution is set for a **Camera** parent object.

7. Specify the size of a face in percent relatively to the sizes of camera's video surveillance window when the face is required to be dynamically framed (9)
8. If the color of a dynamic frame is to be changed, then left click the **Color** field (10). Select the required color in the standard **Color** dialog box and click **OK.**
9. Estimate the part of detected faces while processing the video with 320x240 pixels resolution. In case, when this value is not high enough, set the **Process video in low resolution checkbox** unchecked.
10. To pixelate the part of video image in which the face was recognized, do the following:
    a. To enable the pixelate function set the **Pixelate area** checkbox (11).
    b. Set the **Grain size** cursor in position corresponding to the pixilation grain size in pixels (12).
11. Set the **Face capture area's scaling** slider to the position corresponding to the required scaling of a face in the frame for recording (13). The current scale value is displayed in the field above the slider and ranges from 1 (only the face is recorded) to 5 (the whole frame is recorded).

> **Note.**
> This setting is relevant in case of installed *Face-Intellect* system. A frame with a face is recorded to the < Face-Intellect>\ Bmp\ person\ folder.

12. Click the **Apply** button (14).

Face detection tool is now configured.

Configuration of multistream video

The *Intellect* Software System supports the use of different streams from a video camera for display on the Video Surveillance Monitor, archiving, and video analytics. For example, this feature lets you display a low-quality video signal on the monitor while writing a high-quality signal to the archive, reducing the load on the Client.

To use multistreaming over the ONVIF protocol, select ONVIF 2.X brand and 1-channel-multistream model when creating an ONVIF device (using Camera discovery tool, see Installing and configuring security system components guide). Two streams will be available.

> **Note.**
> There are instances in multistream mode where changes to some video stream parameters may affect others–without any user notification. This is related to the video camera's model and firmware, because certain cameras do not support user selection of the resolution, codec, etc.

To configure multistream settings, do the following:

1. Go the **Hardware** tab in the **System Settings** dialog (1).
2. In the object tree on the **Hardware** tab, select the previously created **Camera** object that corresponds to the video camera for which multistream mode is to be configured (2). The right part of the **Hardware** tab shows the settings panel for the selected object.
3. On the **Camera** object's settings panel, go to the **Advanced settings** tab (3).

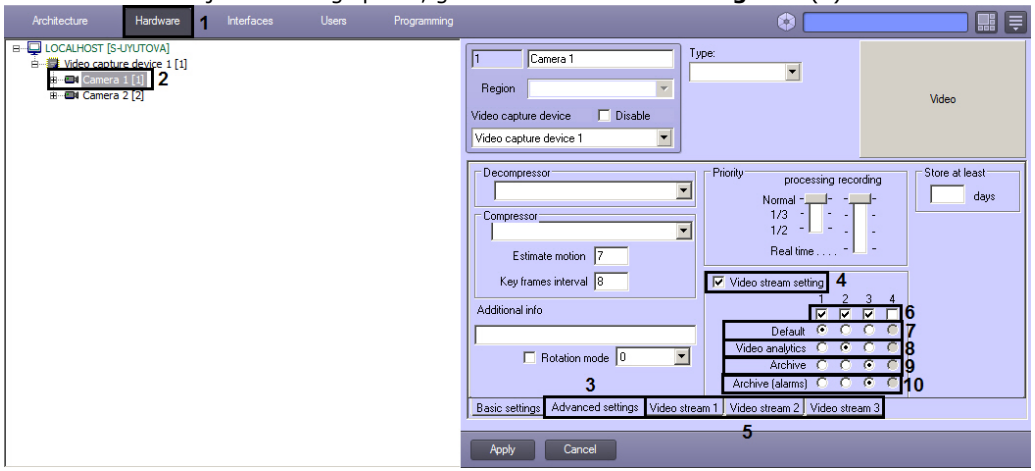

4. To enable multistream mode, check the **Video stream setting** box (4). This will display tabs for configuring the camera's video streams (5).
5. By default, all streams are enabled. If it is necessary to disable unused streams, clear the check boxes that correspond to the numbers of the relevant streams (6).
6. Set the **Default** switch (7) to the position corresponding to the number of stream that is to be in use in the following cases:
   a. To display video both locally and on remote clients;
   b. To send to remote clients, including the Videogate, that can record this video stream;

   > **Note.**
   > If a specific video stream is requested via Video gate, then the requested stream is send to Video gate, not the **Default** stream.

   c. When a video stream is not specified for the video request.

   > **Note.**
   > This stream is used, for example, to display video on the Video Surveillance Monitor if a default stream has been selected for the camera or for displaying video on the Video Surveillance Monitor of the web server.

7. Set the **Video analytics** radio button to the number of the stream to be used by sensors (8). This stream will be used for the main motion detection tool, zone detection tools, tracking detection tool and face detection tool (if an external recognizer is not in use).

   For the license plates recognition server, face detection tool (if an external recognizer is in use) and detection tools that are the part of the *Detector Pack* subsystem, the "Default" stream is in use.
8. Set the **Archive** switch to position corresponding to the number of stream that is to be recorded to the archive not upon alarm – the continuous recording is performed (9).
9. Set the **Archive(alarm)** switch to position corresponding to the number of stream that is to be recorded to the archive upon alarm (10).

   This stream is also used for long-term archive.

   > **Note.**
   > If different streams are selected for recording to the archive upon alarms and continuous recording, recording is performed non-stop and detection tools are enabled, then upon alarm recording of the current archive fragment is stopped in the continuous recording stream and recording of a new fragment starts in the alarm recording

stream. When the alarm ends and after pre-alarm recording the continuous recording with the corresponding stream resumes.

If the same stream is selected for recording to the archive upon alarms and continuous recording, then recording of current fragment is not stopped upon alarm.

Note.
If pre-alarm recording is configured, then when different streams are selected for recording to the archive and continuous recording, some archive recordings overlay as the following video fragment starts before the previous ends.

10. Configure the video streams as follows:
    a. Go to the tab that corresponds to the desired video stream (11).

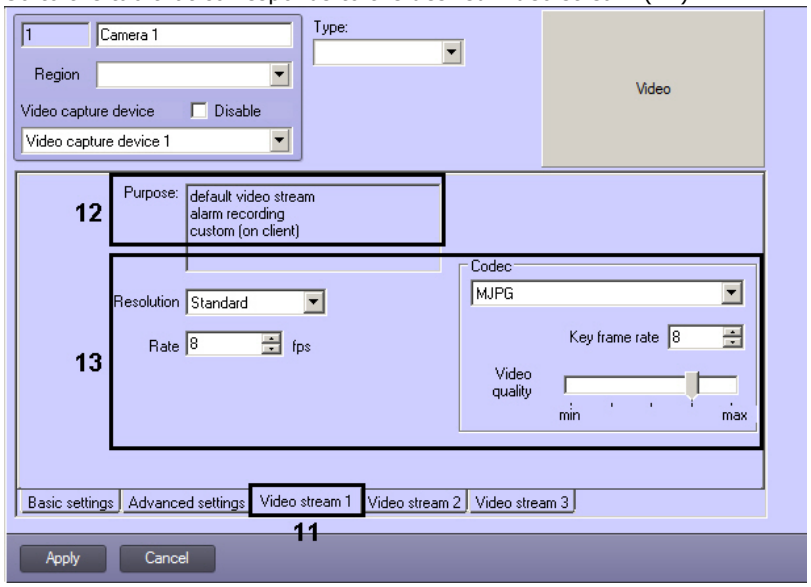

    b. The **Purpose** field displays a description of how the video stream is used (12).
    c. Specify the video stream's parameters (13) (see The Settings panel of the Camera object).

Attention!
Following video streams are available for Axis cameras:

1. Receiving of H264/MJPEG/MPEG4 video. It is available to specify settings of video stream using the *Intellect* software package facilities. Settings are specified in the **Video stream 1** tab.

2-4. Stream corresponding to "Quality", "Balanced" and ""Bandwidth" profiles. These profiles configure in the camera web-interface. **Video stream 2** correspon ds to the "Quality" video stream, **Video stream 3** corresponds to the "Balanced" video stream, **Video stream 4** corresponds to the "Bandwidth" video stream.

    d. Repeat steps a-d for the remaining video streams.
11. Click the **Apply** button.

This completes the process of configuring multistream mode.

Configuring of using 64-bits modules

In the *Intellect* software it is possible to use modules specialized for working in 32-bits and 64-bits OS. Video.run and vmdadb.run modules, codecs, part of IP-cameras and video capture cards drivers are converted to the 64-bits platform.

Modules specialized for working on the 64-bits system allow removing restrictions on the number of connected and simultaneously displayed video channels in the *Intellect* software. Using of 64-bits modules allows the system performance improvement up to 10 % comparing with 32-bits modules.

64-bit versions of the following modules are not available in *Intellect*:

1. The **Scene** object (see Configuring object's panoramic view by means of the Scene object).
2. Some detection tools from *Detector Pack* (at the moment of writing the documentation - the barcode detection tool only).
3. *Arena* module and *Auto-Uragan* license plate recognition as a part of *Auto Intellect*.
4. *ACFA Intellect* modules.

Some modules of *Intellect* and vertical solutions support operation in 64-bit mode only:

1. Some detection tools from *Detector Pack* (at the moment of writing the documentation - smoke, fire, sweethearting and fluid level detection tools).
2. *IntelliVision* module as a part of *Auto Intellect.*
3. *VisionLabs* and *Tevian* modules as a part of *Face Intellect*.

64-bit modules are loaded by default, and if there is no corresponding bit module, then a 32-bit module is started.

Important!
If two detection tools of DetectorPack are created in the configuration and one supports 32-bit operation only while another supports 64-bit operation, then detection module will start in 32-bit mode and 64-bit detection tool won't operate.

Using of 64-bit system is recommended:

1. if the large number of cameras are to be displayed simultaneously (over 100 cameras);
2. if the large number of cameras are to be displayed in the ultrahigh resolution (over 50 cameras with 5Mpxls resolution in format without local unpacking);
3. if the large number of channels of forensic detections with search are to be in use (over 25 **Tracker** objects on the Server when video resolution is higher than 800x600).

Note.
There is no 64-bit decoder for WS7 and WS17 cards with hardware compression. So video from these cards is not displayed on the remote client when 64-bit modules are in use.

To use the 64-bit modules do the following:

1. Go to the settings panel of the **Computer** object (1).

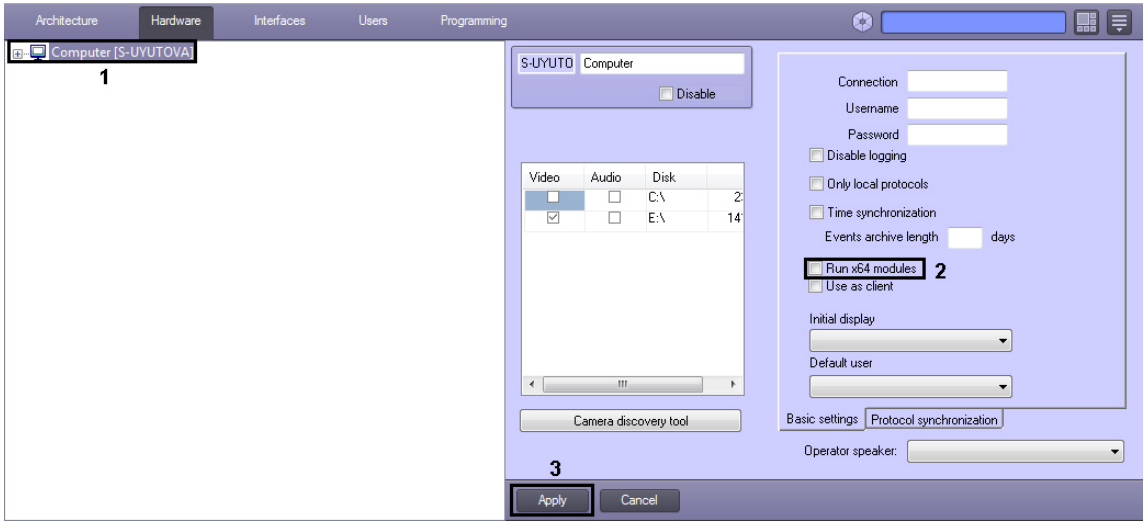

2. Set the **Run x64 modules** checkbox (2).
3. Click the **Apply** button (3).
4. Restart *Intellect*.

As a result modules specialized for 64-bit OS will be loaded. If the 64-bit module is not found, the corresponding 32-bit module will be loaded.

Configuring of using 64-bit module is completed.

Video record from computer monitor

Record of video from computer monitor is performed to control operator actions. Video from computer monitor can be transmitted to the Intellect software package by general protocols using external programs, for example:

1. By RTSP protocol using the VLC Media Player which is available to download from the http://www.videolan.org/vlc/ web-site.
2. By ONVIF protocol using the ScreenOnvif program which can be got in the http://screenonvif.com/en web-site.

Example of the VLC Media Player configuring for transmitting video from computer monitor to the *Intellect* by the RTSP protocol is presented in this section. Configuring of the Intellect software package to receive and record this video stream is performed by standard means as described in the Configuring rtsp Server module and Selecting the disks for video archive storage sections.

Configuring the VLC Media Player for transmitting video from computer monitor to the Intellect software package by the RTSP protocol is performed the following way:

1. Run the VLC Media Player.
2. Select the **Open Network Stream item...** in the **Media** menu.

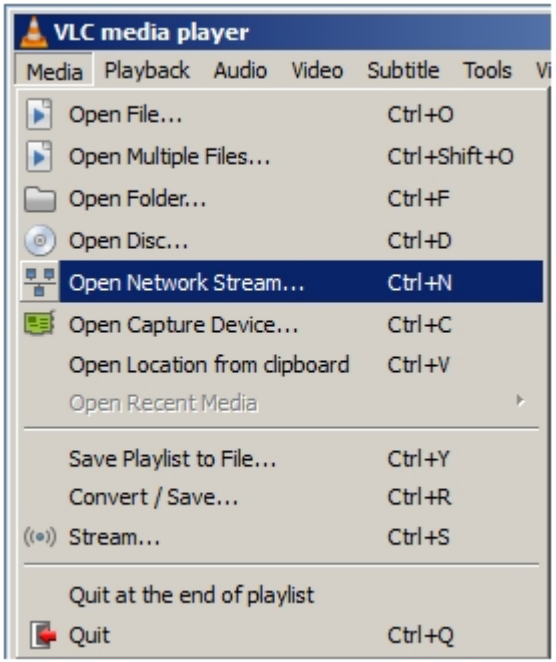

3. In the opened window go to the **Capture Device** tab.

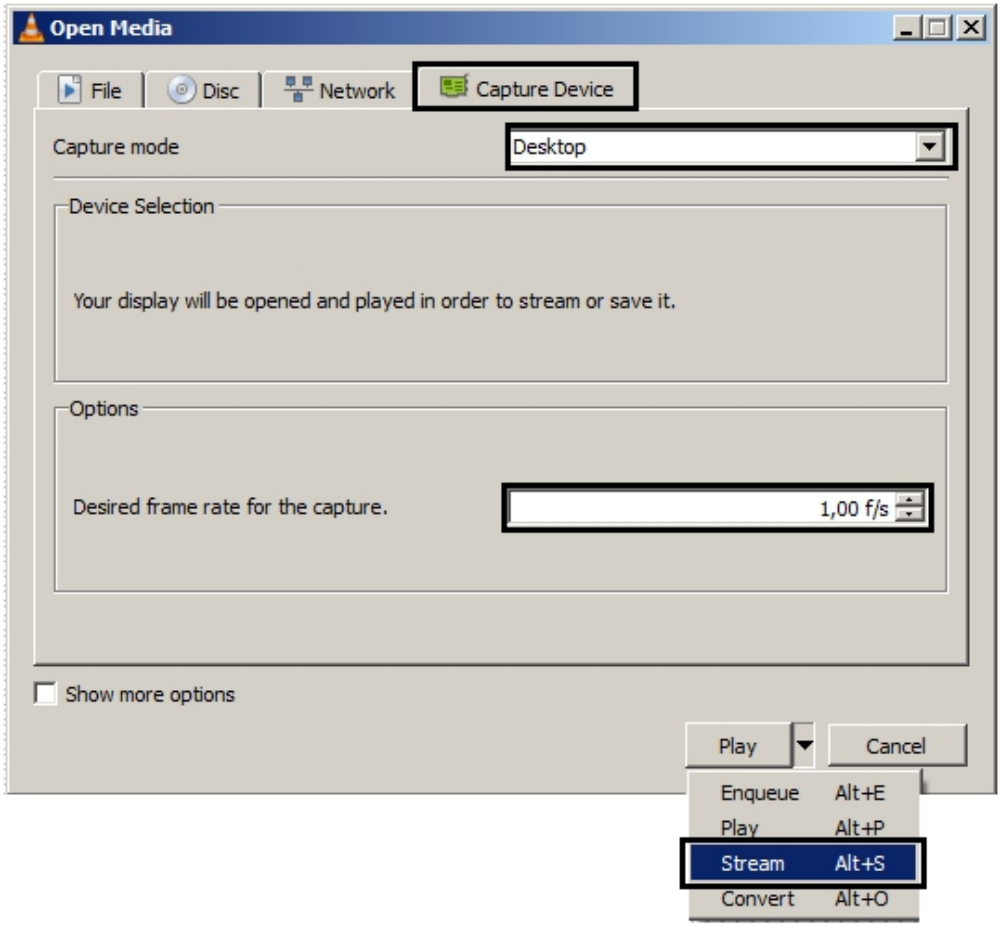

4. In the **Capture mode** drop-down list select the **Desktop** value.
5. Set the desired frame rate for the capture in the corresponding field.
6. In the **Play** list select the **Stream** value. As a result the **Stream Output** window will open.

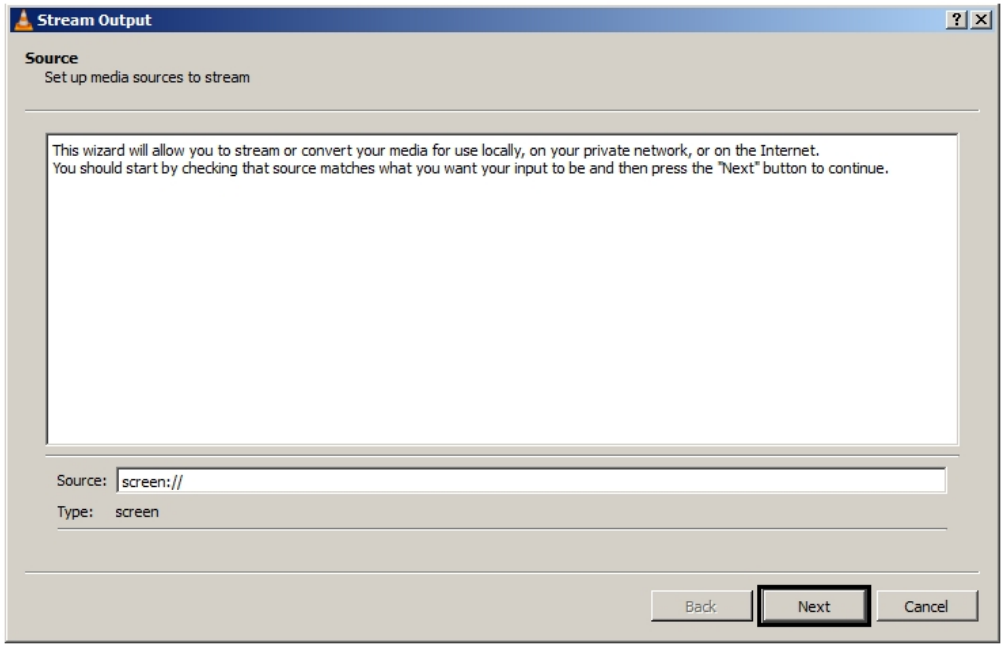

7. Click the **Next** button.
8. In the opened window select the **RTSP** value in the **New destination** drop-down list and click **Add** button.

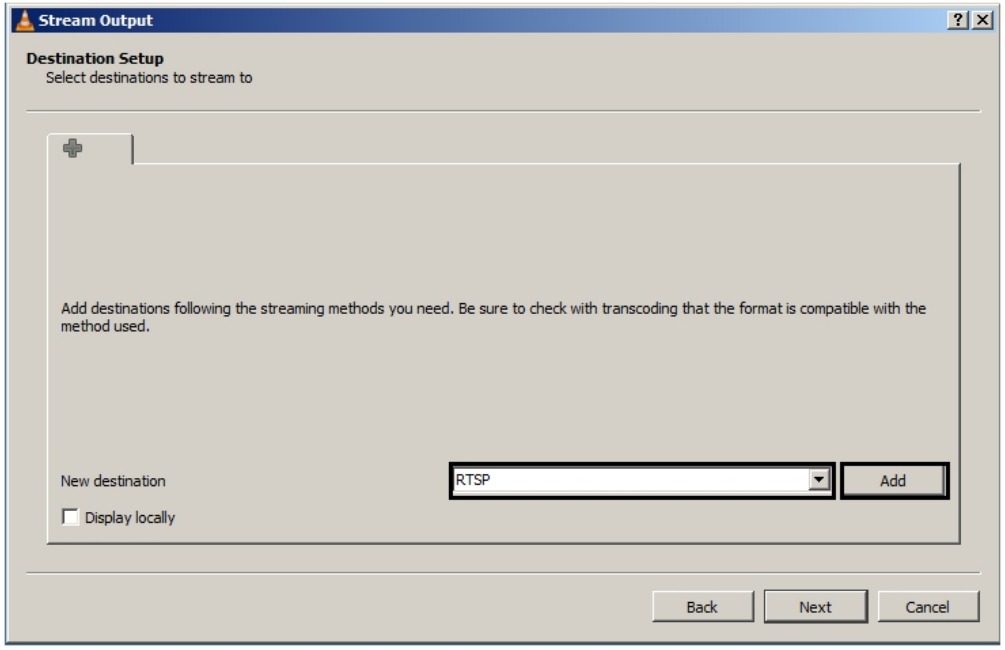

9. Go to the **RTSP** tab.
10. Specify port and path to the stream if it's required.

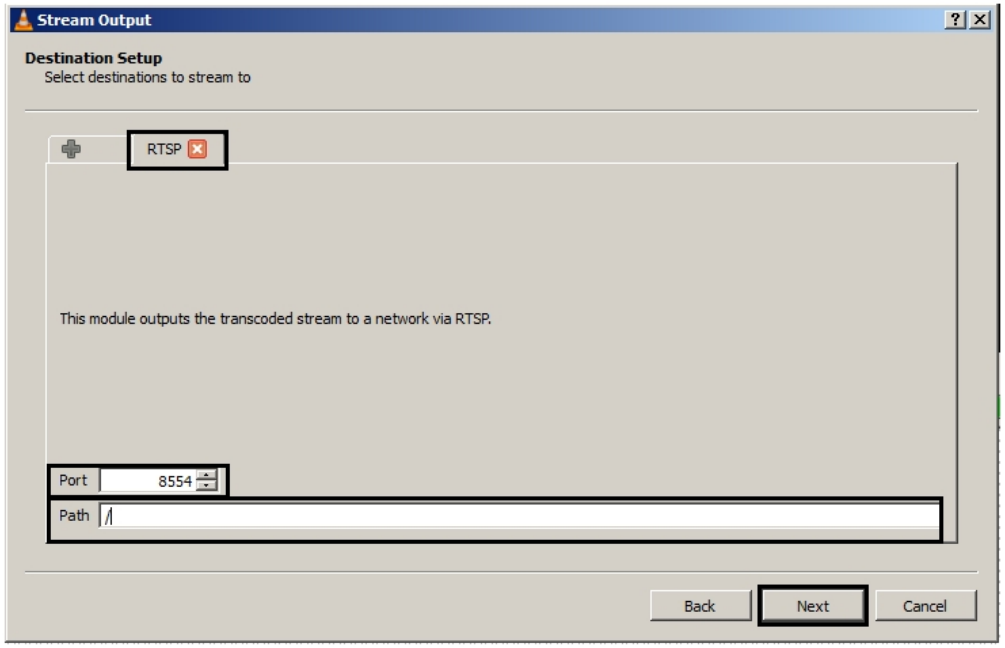

11. Click **Next** button.
12. Specify parameters of video transcoding and click **Next** button.

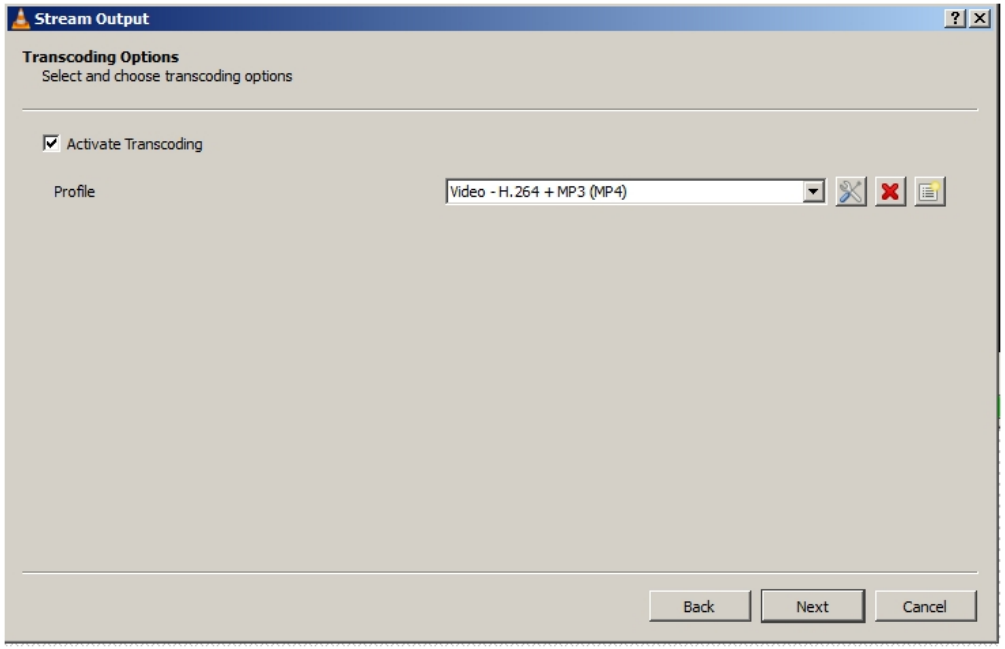

13. Click **Stream** button in the opened window.

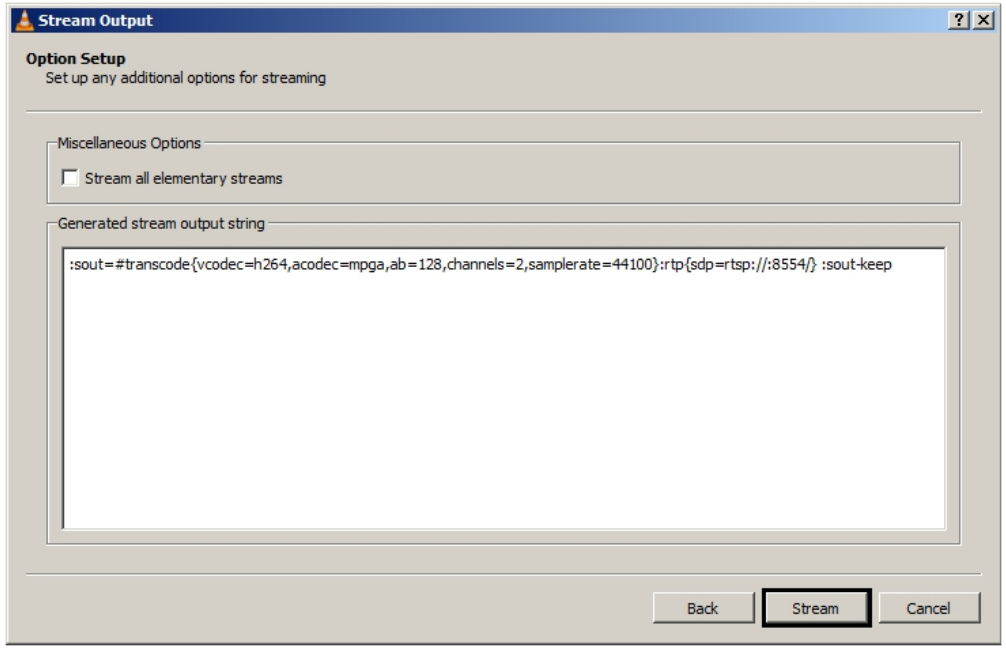

After that configure receiving of the RTSP stream and its record to the archive in the Intellect software package – see Configuring multimedia receipt using RTSP protocol and Selecting the disks for video archive storage sections.

Configuring of the VLC Media Player for transmitting video from computer monitor by the RTSP protocol to the Intellect software package is completed.

Configuring fisheye cameras

Conversion of video from fisheye cameras when displaying it on the video surveillance monitor is possible in *Intellect.* The conversion type is selected when adding a camera to the Monitor (see Selecting and configuring video cameras). To use this feature specify the lens type and fish eye camera location when configuring it in *Intellect*:

1. Go to the **Additional settings** tab on the settings panel of the **Camera** object corresponding to the fisheye camera (1).

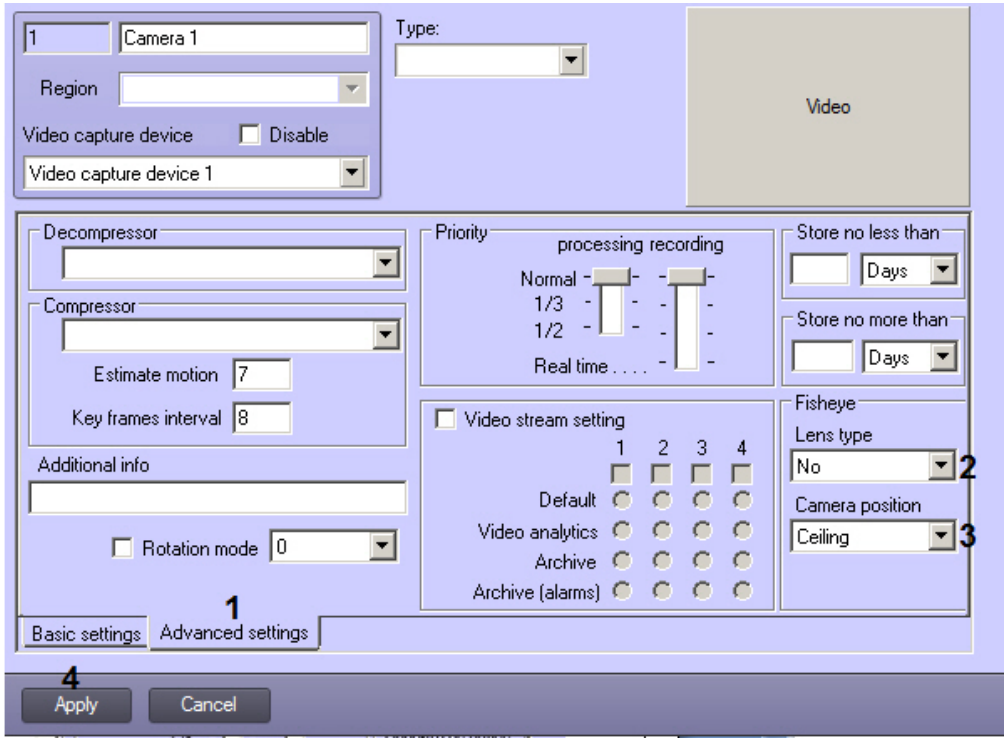

2. Select the **Standard fisheye lens** value in the **Lens type** dropdown list if this is a fish eye camera (2). If a camera with anamorphic lens is in use, then select its type in this dropdown list.
   With some settings there can be some artifacts at the top of video for a standard fisheye lens. If there are such artifacts , then select the **Autocalibration** in this dropdown list.

   > **Important!**
   > Video will be calibrated every time the settings are applied.

3. In the **Camera location** dropdown list select the value corresponding to the camera (3).
4. Click the **Apply** button (4).

The fisheye camera is now configured.

Configuring audio subsystem

General information on configuring audio subsystem

In the video surveillance systems, based on INTELLECT™ software, the audio subsystem contains software modules and hardware devices, used to receive, transmit, digitize, process, record and play back audio signals from video surveillance and audio monitoring system microphones.

Audio subsystem hardware includes optionally:

1. video capture cards;
2. standard soundcards;

3. multi-channel soundcards;
4. audio capture IP-devices;
5. microphones;
6. loudspeakers and headphones.

Audio subsystem software includes:

1. components for configuring the audio signal digitizing devices;
2. components for recording digital audio signals;
3. components for transmitting digital audio signals to Remote Workplaces and remote servers;
4. components for digital audio signals playback.

Requirements for audio input units

Audio player operation

Audio digitizing devices

On the page:

- Video capture cards
- Standard soundcards, microphones, loudspeakers and headphones
- Multichannel audio capture devices
- IP-devices

Audio capture and digitizing devices are used to receive and process analog audio signals from connected microphones.

To enter and digitize an audio signal, the servers, created in the INTELLECT™ software, use:

1. video capture cards;
2. standard soundcards;
3. multi-channel soundcards;
4. IP-devices.

Video capture cards

Video capture cards, used as audio capture devices, support reception and digitization of audio signals. Video capture cards don’t support audio signal output to headphones and loudspeakers.

Video capture cards digitize audio signals in conjunction with processing and digitization of video signals. Audio and video signals are processed independently.

The facility to receive and digitize audio signals depends on the server hard- and software configuration, on the type of video capture cards and the key file parameters.

Standard soundcards, microphones, loudspeakers and headphones

Standard soundcards are used for audio capture and audio output devices. They receive and digitize audio signals, reconvert digitized audio signals and feed them to the loudspeakers and headphones.

INTELLECT™ software system supports the audio signal sample rate range, corresponding to the standard soundcard and restricted to a 48 kHz frequency.

Usually up to 2 microphones and 1 headphone are used with a standard soundcard.

Multichannel audio capture devices

Multichannel audio capture devices are PCI cards (for example, MidiMan Delta, Comart Hera, Olkha 9P) or outer hardware and software modules (for example, Echolot USB-32), used for digitization and processing of 2 or more audio signals. For the list and features of INTELLECT™ software compatible multichannel audio capture devices, see the Integration section on the site of AxxonSoft company: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

Multichannel audio capture devices reproduce sound and digitize audio signals in parallel, or sound is reproduced by the standard sound cards. The Audio signal sample rate range depends on the audio capture device type. The INTELLECT™ software system sample rate range, available to the installed card, is restricted to a 48 kHz maximum value.

IP-devices

The INTELLECT™ software system supports audio signals reception, digitization, processing and playback using audio capture IP-devices. IP-cameras and IP-servers' built-in microphones or the external analog microphones, connected to IP-devices, may be used for receipt, digitization and processing of audio signals. Outer loudspeakers or headphones, connected to IP-servers may be IP-devices used for playback of audio signals. For the list of INTELLECT™ software compatible IP-devices for audio signals reception, digitization, processing and playback see the Integration section on the site of AxxonSoft company: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

The audio signal sample rate range depends on the IP-device type, which is used as the audio capture device. The sample rate range, available to the installed card, is restricted to a 48 kHz maximum value.

Registration of audio cards and microphones in INTELLECT™ software

Configuring the digitization devices for audio signals

Audio capture and digitizing devices are configured via the **System Setup** dialog box.

Audio capture and digitizing devices are configured by setting the audio signal sample rate and sound volume.

The sample rate is the same for all audio signals, processed by a common device; it can't be individually set for every audio signal.

Until *Intellect* 4.10.1 audio playback and video recording were performed in the PCM format with digitization rate not more than 8000 Hz. Since *Intellect* 4.10.2 the number of hertz depends on the selected rate on the settings panel of the **Audio card** object and playback of audio from IP device is performed using any codec selected on the camera and supported by this device in the Drivers Pack.

Volume is adjusted after the audio signal has been digitized by the audio capture device. With INTELLECT™ software you can restrict volume to a certain value or switch on the automatic gain control (AGC). This levels out the sound volume across the range to a constant level.

Configuring audio signals digitization and processing

Digitized audio signal recording

Audio signals archiving provides post-event analysis of evidence footage.

Audio recording can be performed:

1. As an audio and video synchro recording;
2. Independently, by Operator command.
3. As a sound activated audio recording.

In synchro recording mode, audio recordings are combined with video recordings; they are stored in the videoserver archive.

When audio signals are recorded by Operator command or by sound activation, audio recordings are separately stored in the audio archive.

Once the archive disk(s) is full, the archive is overwritten.

Configuring audio signals recording

Digital audio signal transmission to Remote Workstations and servers

INTELLECT™ software enables to transmit audio signals to Remote Workstations on IBM PC's, connected to the videoserver via local TCP/IP net, to remote servers and to mobile clients on the basis of iOS.

Both real-time and archive audio signals may be transmitted to Remote Workstations.

Audio signal playback

Audio signal playback is performed on Remote Workplaces with the use of the **Video surveillance monitor** or **Audio player** interface objects.

Realtime audio monitoring and synchro audio and video playback is performed by the video monitor. Nonsynchronous audio recording cannot be replayed by the video monitor.

The Audio player allows to playback audio signals from microphones, and to replay audio recordings. Audio recordings, synchronous to video recordings, cannot be replayed by the Audio player.

A standard soundcard installed on a Remote Workstation or remote server and configured by INTELLECT software, with microphones or loudspeakers attached to its output, is necessary to play back audio signals.

Configuring audio playback

Registration of audio cards and microphones in INTELLECT™ software

Audio capture cards are registered in the INTELLECT™ software by creating and setting up **Audio card** objects. **Audio card** objects are created on the **Hardware** tab on the base of the **Computer** objects (see Installing and configuring security system components guide, the Audio subsystem configuration section).

Eavesdropping on the audio signal through microphones

Configuring audio signals digitization and processing

Audio signals sample rate settings

The signal sample rate affects the quality of the audio signal and audio recording size. The higher the audio signal sample rate, the higher the signal quality and, hence, the efficiency of real-time and post-event analysis. When the audio signal sample rate increases, the size of the audio stream, transmitted by the network to Remote Workplaces and recorded to the disk, increases. These factors should be considered while choosing the sample rate of the audio signals.

If audio is to be received from IP devices, then the digitization rate is set on the settings panel of the **Microphone** object in the driver parameters (see Configuring audio acquisition from IP devices section in Installing and configuring security system components guide). The rate set on the settings panel of the **Audio card** object is ignored.

In other cases the digitization rate is set on the settings panel of the Audio card object (see Creating and configuring the Audio card object section in Installing and configuring security system components guide). By default, the audio signals sample rate is set to the minimum value. The sample rate is set for each audio capture device individually and covers any microphone, connected to it. Different sample rate settings for different microphones, connected to the same audio capture device, are unavailable.

Setting up the audio signal volume amplification

It is possible to amplify incoming audio signals with the help of software.

> **Note.**
> If the signal power varies during the audio session, it is necessary to increase the audio signal power by a constant value and to use Automatic Gain Control (AGC).

To amplify audio signal do the following:

1. Go to the Settings panel of the **Microphone** system object.

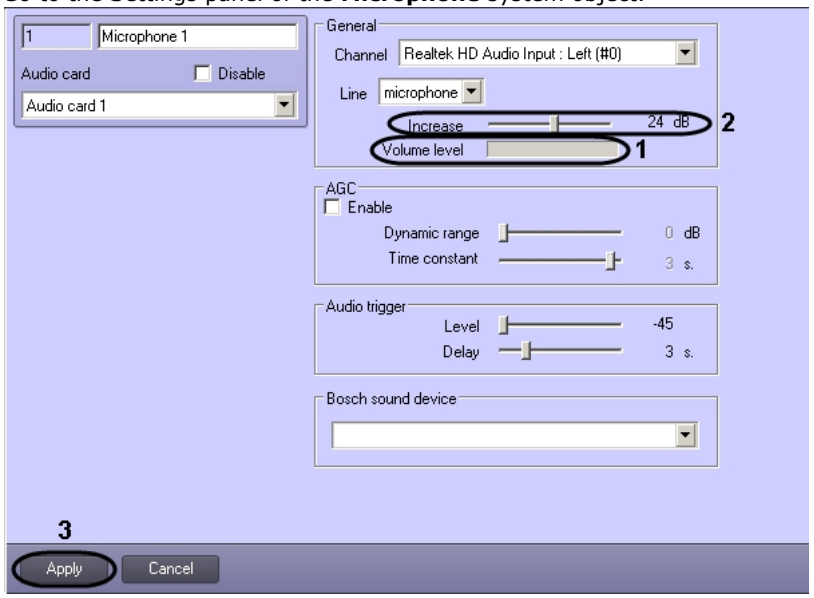

2. Feed the audio signal with to the microphone. Power level of incoming signal will be displayed on the indicator Level (1).
3. When necessary set the slider **Volume** to the position, corresponding to the required value of amplification (2).The current value in dB is shown in the right field next to the slider.
4. Repeat steps 2 and 3 for the required power level of audio signal.
5. Press **Apply** button to save all the changes (3).

Set of audio signal volume amplification is completed.

Setting up the Automatic Gain Control for sound cards of Olha line

Automatic Gain Control (AGC) is designed to make the audio signal volume constant. AGC mechanism should be set only with the use of sound cards of Olha line : Olha-9P, Olha-10LP, Olha-12U, Olha-14.

It is recommended to use AGC when input audio signal power is unsteady or when the power of the sound signals, coming from different sources and forming the joint audio signal, differs significantly. AGC levels out the power levels of audio signal components from different sources.

INTELLECT™ software has an AGC adjust option. AGC has two adjustable parameters: a target power level, to which AGC brings different audio signals, and the adjustment time of bringing the signal to the target power level. The second parameter has certain restrictions: the less time it takes to bring the signal to a certain power level, the lower the quality of

AGC operation, which may result in greater power level jumps in the processed signal. However a longer adjustment time lengthens the areas where the power of the processed audio signal builds up and decreases. So, processing may bring sizable distortions into the audio signal. Hence, AGC settings depend substantially on the conditions of audio signal formation, and when these conditions have been changed, new AGC settings should be set.

AGC is independently applied to any audio signal from any microphone of the video surveillance and audio monitoring system.

By default, AGC is disabled. The AGC option is enabled for each microphone independently.

To set up the AGC follow the steps:

1. Go to the settings panel of **Microphone** system object.

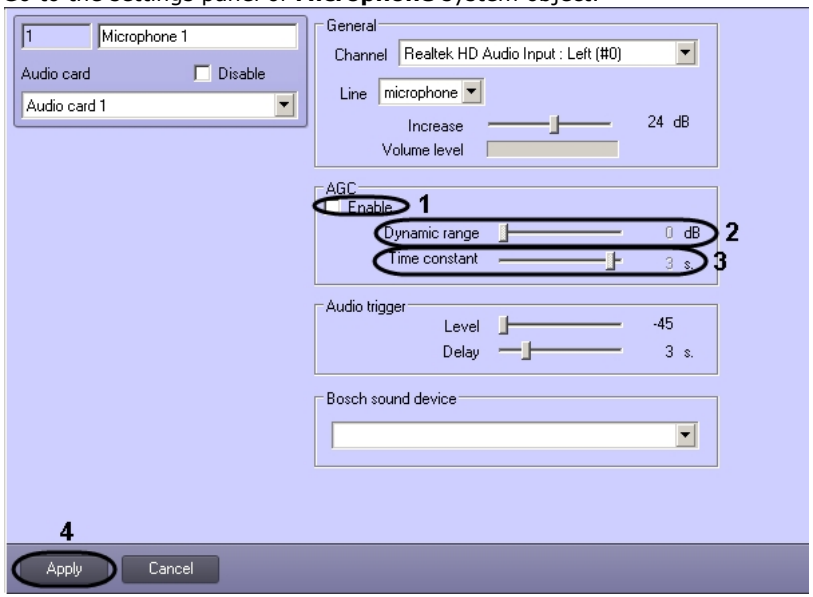

2. Set the **Enable** checkmark in the **AGC** group.
3. As a result, sliders in the **AGC** group **Dinamic range** and **Time constant** are activated (3).
4. Set the **Dynamic range** slider to the position, corresponding to the desired level of video signal's output power. The current power value, measured in decibels, is shown in the field on the right of the slider .
5. Set the **Time constant** slider to the position that corresponds to the time of bringing the signal to the defined power level. The value of the time constantin seconds, set by the slider, is displayed on the right of it.
6. Click the **Apply** button to save all the changes.
7. It is recommended to check AGC correctness after the settings were made. To do so, use one of the audio playback devices of the INTELLECT ™ software, for example, Audio player object. Audio player should be preset for audio signals playback.
8. If audio signal power is too high, move the **Dynamic range** slider some points to the left. If audio signal power is too low, move the **Dynamic range** slider some points to the right.
9. If increasing and decreasing of audio signal power is perceptible, move the **Time constant** slider some points to the left. If significant jumps in audio signal power are perceptible, move the **Time constant** slider some points to the right.
10. When necessary repeat 7-10 steps. If AGCis set up correctly, finish AGC setting up procedure.

AGC setting up is completed.

Configuring audio signals recording

Audio signals recording modes

Audio recording can be performed:

1. As audio and video synchro recording;
2. By sound activation, i.e. when input audio signal power exceeds a certain value.
3. Independently, by Operator command.

In synchro recording mode audio and video signals' recording is initialized simultaneously (by Operator's command or by alarm).

Audio and video signals' recording is stopped simultaneously. Audio recording shutdown may be caused by:

1. Video recording shutdown (by Operator command or by the end of alarm recording);
2. Post-alarm recording shutdown (if the relevant camera is configured to perform post-alarm recording).

In synchro recording mode, audio recordings are combined with video recordings; they are stored in the videoserver archive.

In sound activated recording mode, audio recording is initialized at the moment, when signal power exceeds a preset (threshold) value. Audio signal recording is shutdown at the moment, when signal power becomes lower than a preset value, that has been previously exceeded.

An audio recording file, created in sound activated recording mode or by Operator command, includes an audio signal segment from the start till the end of the recording. In sound activated recording mode, as well as at recordind by Operator command, audio recording files are stored in a separate server archive (audio archive).

Note.
In the sound activated audio recording mode the disk space, reaching which the recordings are deleted for loop recording, is 100 MB.

Audio recording of events

Free disk space (video archive size) required

Configuration of audio

Selecting the disks for audio archive storage

INTELLECT™ software performs audio signal archiving to the local server disks, net disks and USB disks.

In synchro recording mode, audio recording files are stored together with video recordings in the "Video" folder(s). So, selecting the disks for audio recording storage in synchro recording mode is equivalent to selecting the disks for video recording storage. For description of the procedure, see the relevant section of this Guide. In sound activated recording mode, audio recording files are stored in the "AUDIO" folder separately from the video archive.

By default, no HDD is listed for the sound activated audio recording storage, hence, sound activated recording is unavailable. To enable the sound activated recording, select one or more disks.

Important!
If audio recording is activated by sound – not performed in synchro record mode – then disks different from those for recording video are to be selected.

Note.
Use disks with the NTFS file system for storing the archive. If the FAT32 file system is in use, then there can be problems caused by this system, for instance — it has no logging.

Disk(s) selection is done in one of the following ways:

1. Estimate the disk capacity, necessary for audio archive storage in the sound activated mode. The estimation technique is similar to the one used for the video archive (see Free disk space (video archive size) required).
2. Go to the **Computer** object settings panel.
3. Select the **Computer** object on the **Hardware** tab in the objects tree. The settings panel of the selected object appears in the right part of the **Hardware** tab.

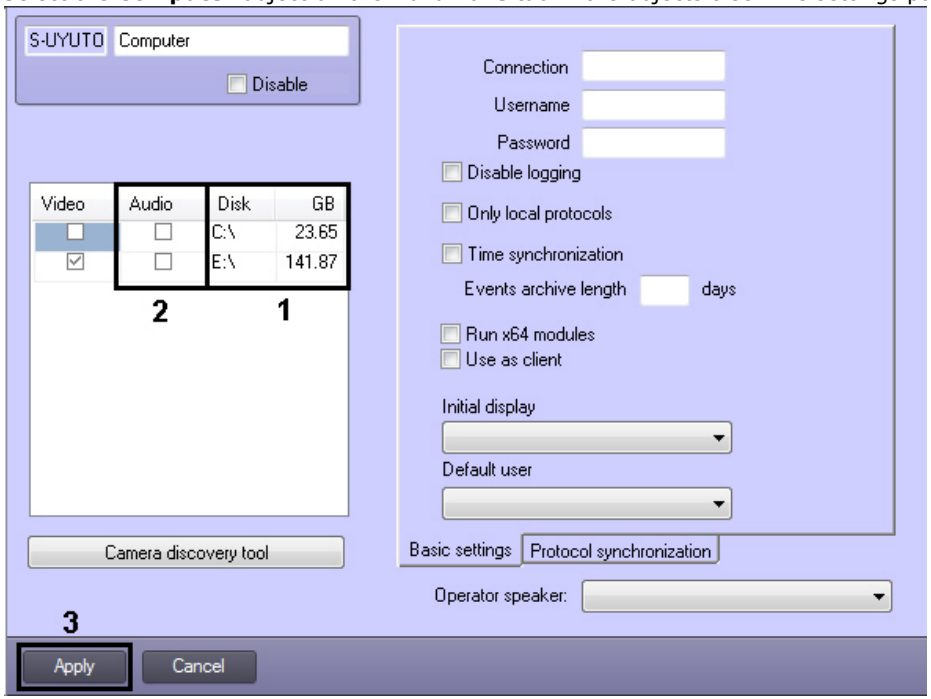

4. The local disk names, available for audio archiving, are presented in the **Disk** column of the **Archive storage disks** table (1). The **GB** column contains the relevant disks capacities in gigabytes (GB). Select the disks for audio archiving and make sure that the total selected disk capacity is sufficient.
5. Set the checkmarks in the **Audio** column for the selected disks names (2). Local, net and USB disks are available for storing.
6. To add a net disk via UNC paths do the following:
    a. Go to the last line in the disk list and click the down key.

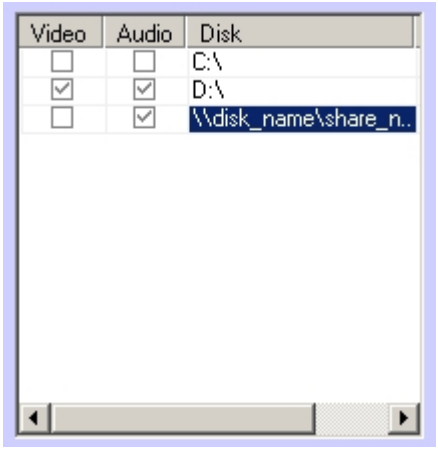

b. Enter the path to a net disk in the appeared line. UNC path is set in the format «\\server_name\share_name», where «server_name» is the name of file server and «share_name» is the net name of general folder.
c. Set a checkbox in the **Audio** column for created disk.

7. Click the **Apply** button (3).

Selecting the disks for audio archive storage is completed.

Setting up the sound activated recording

The sound activated audio recording mode is the mode, in which audio signal recording starts at the moment, when signal power exceeds a preset level and is shutdown at the moment, when signal power becomes lower than the preset level that has been previously exceeded.

To set up the sound activated recording, INTELLECT™ software uses the settings:

1. **Level** - When audio signal power exceeds a threshold value (Level setting) during a preset interval (Delay), audio signal recording starts automatically(alarm's registration).
2. The **Delay** setting defines the time interval, during which audio signal is prerecorded after the end of alarm.

Sound activated recording is adjusted separately and independently for any microphone. It is recommended to select the optimal settings by trial and error to avoid malfunction.

By default, sound activated audio signal recording is disabled.

Enabling and setting up the sound activated recording option for a selected microphone is done in the following way:

1. Select the disk(s) to store audio recordings in the sound activated mode (see. Selecting the disks for audio archive storage).
2. Set the **Audio player** object to operate with the selected microphones.
3. Go to the **Microphone** system object settings panel.
4. Set the slider **Audio trigger** to the position, corresponding to the required level of video signal.The current level in conventional units is displayed in the field on the right of the slider.

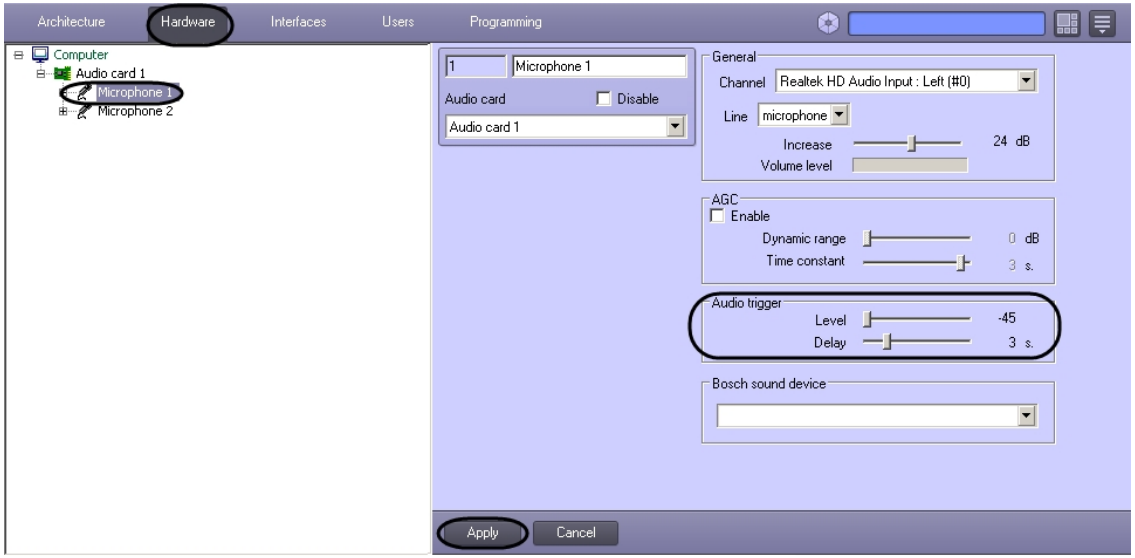

5. Set the **Audio trigger** slider to the position, corresponding to the required delay time of audio signal after the end of alarm. The current delay time in sec is displayed in the field on the right of the slider.
6. Click the **Apply** button to save all the changes.
7. With the help of **Audio player** object check if the sound activated recording is initialized, when the sound signal of the required volume is fed to the microphone. If not, reduce the value of Level by moving the **Level** slider some points to the left (see 4-5 steps).
8. With the help of **Audio player** object check, if the sound activated recording is initialized, when the sound signal of lower volume, is fed to the microphone. If yes, move the **Le vel** slider some points to the right (see 4-5 steps) to increase the setting value.
9. Repeat steps 7-9. If the sound activated recording is properly set up, complete the set up procedure.

Setup of sound activated recording of audio signal is completed.

Recordings by acoustic start

Setting up the audio and video synchro recording

Audio and video synchro recording is applied to enable post-event analysis of evidence footage, retrieved simultaneously from video surveillance system microphones and cameras. In this mode audio is recorded by start and end video recording times.

Audio and video synchro recording is configured by coupling cameras, registered in INTELLECT™, with microphones. Any single camera can be coupled with one or two microphones. If simultaneous recording is performed from two Microphones, audio is recorded to one stream.

The procedure of audio and video synchro recording configuration is described in Configuring audio and video synchro recording section.

Synchro audio and video recordings

Configuring audio playback

INTELLECT™ software provides an audio playback using the **Audio playback card** object. The **Audio playback card** object combines speakers objects in case the playing card has

several channels. You can direct sound from the microphone to the dynamic using audio switch (see Setting up the sound switch section), macro or script.

Creating and configuring the Audio playback card object

The **Playback card** object is registered on the basis of the **Computer** object in the **Hardware** tab of the **System settings** dialog box.

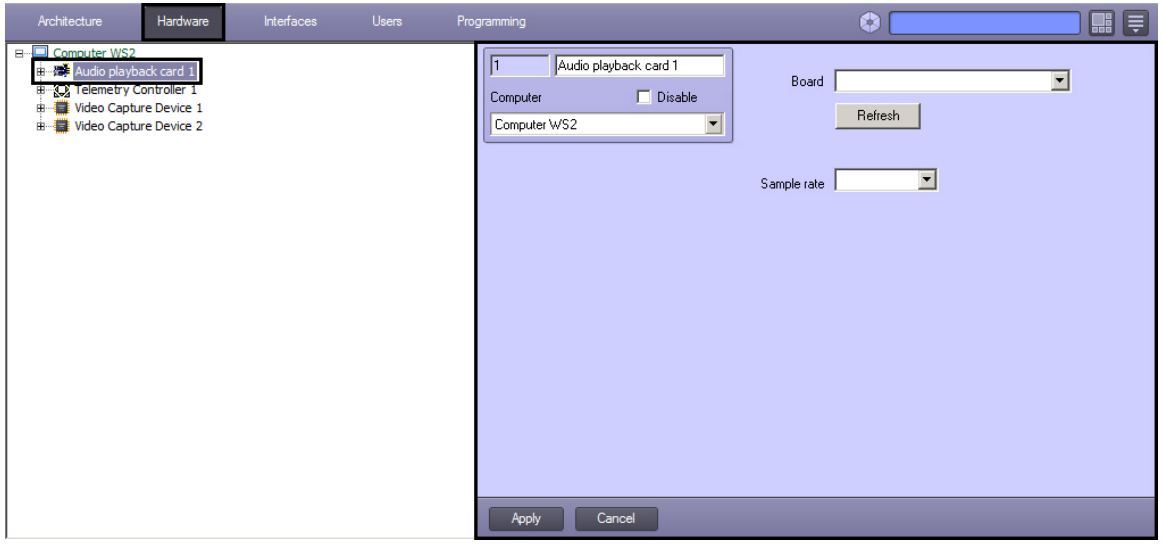

To configure the **Audio playback card** object, do the following:

1. Go to the settings panel of the **Audio playback card** object.

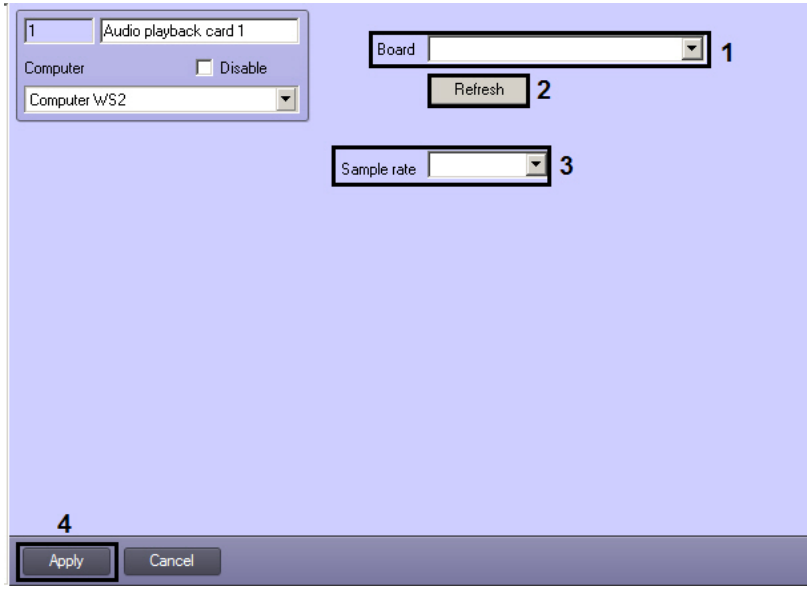

2. Select the type of audio digitization device in the **Board** dropdown list (1).

> **Note.**
> SoundBlaster, ADC video card, audio digitization USB devices, IP cameras digitization devices are used as audio digitization devices.

3. Select the rate of audio digitization in the **Sample rate** dropdown list (3).
4. To save the changes, click the **Apply** button (4).

> **Note.**
> The **Refresh** button is for returning to previous settings of audio digitization device if new settings were not saved (2).

The **Audio playback card** object is now configured.

Creating and configuring the Speaker object

The **Speaker** object is an audio playback device.

The **Speaker** object is registered under the **Audio playback card** object in the **Hardware** tab in the **System settings** dialog box.

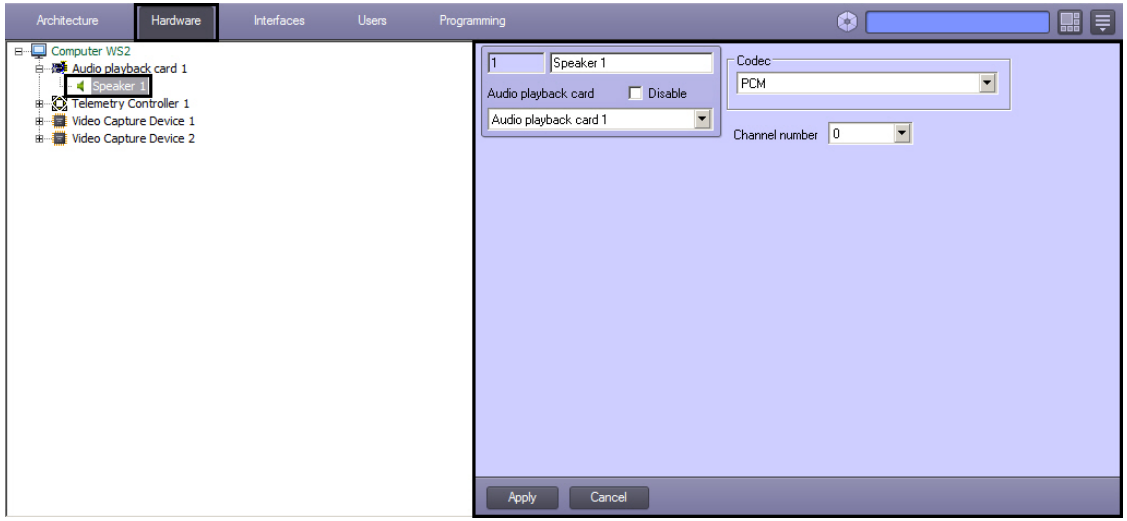

To configure the **Speaker** object, do the following:

1. Go to the setting panel of the **Speaker** object.

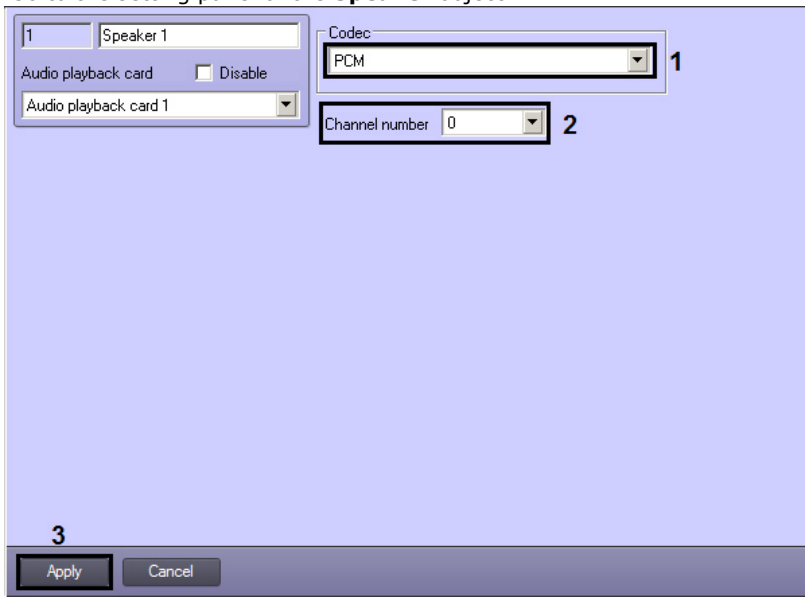

2. Select the coding format of reproductible audio signal in the **Codec** dropdown list (1).
3. Select channel number of speaker connection in sound card from the list of the same name (2).
4. To save the changes click the **Apply** button (3).
5. Select the **Operator's speacker**: object from the list on the settings panel of the **Computer** object.

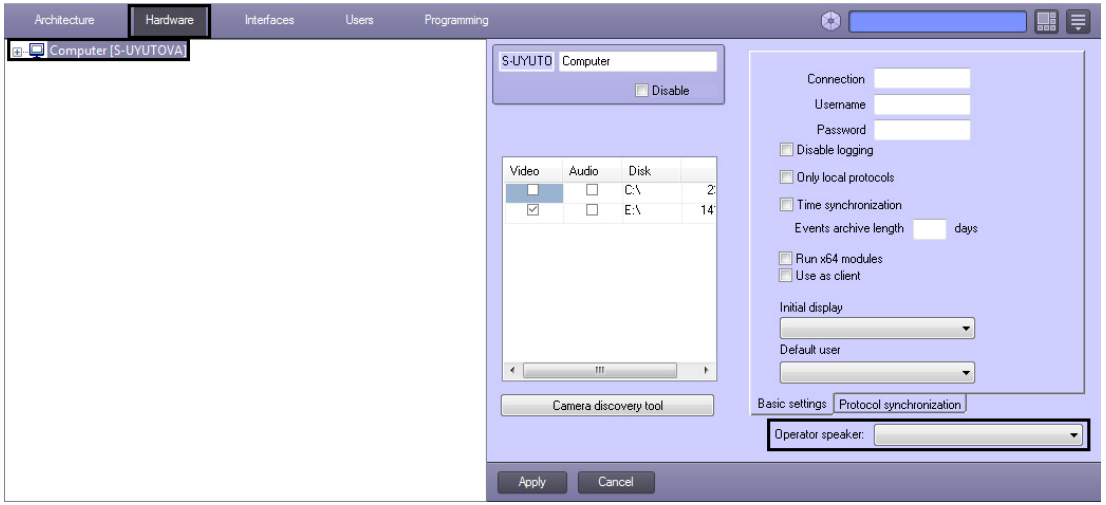

Note.
Several **Speaker** objects can be configured in the system. When the speaker is changed over using the **Operator's speaker** list, then *Intellect* is to be restarted on the computer where it is in use.

6. Click the **Apply** button.

The **Speaker** object is now configured.

Features of standard sound card use

General information on standard sound cards

Standard sound cards are PCI cards or motherboard integrated modules, and are used to play back digital audio signals (2, 4, 6 or 8 sound channels) and/or to digitize analog video signals.

Usually standard sound cards have 1 output for connecting loudspeakers or headphones (modifications exist with 2 and 3 outputs for multi-channel sound realization and some others) and 1 input for connection of microphones.

Note.
Sound cards have one plug for 2 channels to connect microphones to. To connect 2 microphones, resolder the connector or use the mini jack 2xRCA adapter.

Standard sound cards perform sound playback and audio signals digitization in parallel.

The audio signal sampling rate range depends on the audio card type. The INTELLECT™ software system sampling rate range, available to the installed card, is bounded by the 48 kHz maximum value.

Features of standard sound card setup

As a rule a standard sound card digitizes no more than 2 audio signals.

Each standard sound card is registered in the INTELLECT™ software by creating and setting up **Audio card** objects. **Audio card** objects are created on the **Hardware** tab on the base

of the **Computer** object. During creation of the **Audio card** object for each standard sound card, the different values in the numbering sequence should be assigned to the **Board** para meter: for the first **Audio card** object the FS 6 (0) value should be selected, for the second one - FS 6 (1) and so on.

Example of **Board** settings for Realtek standard sound cards:



A.at single standard sound card registration

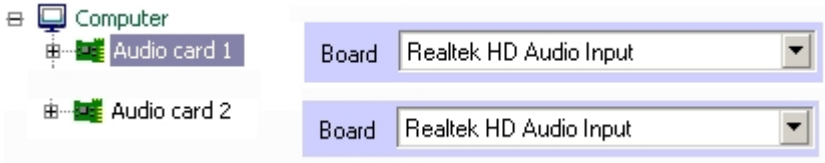

B. at registration of two standard sound cards of the same type

To register the microphones, connected to the standard sound card input audio channels, create **Microphone** objects on the base of the **Audio card** object. Up to 2 **Microphone** objec ts may be placedn the base of a single **Audio card** object. The relevant hardware tree segment during the registration of the standard sound card and 2 microphones is shown in the figure.

After the sound card registration in the INTELLECT™ system, the values should be assigned to the **Channel** settings of the **Microphone** objects, according to the channel numbers of the microphone connections to a standard sound card.

To connect more than one microphone to a standard sound card, the mini jack 2xRCA adapter is used. The mini jack 2xRCA adapter numbering layout is shown in Figure 8.831. Examples of **Microphone** object settings with one and two FS-5 video capture cards, registered in the INTELLECT™ system, are shown in Figure A and Figure B correspondingly.

Mini jack 2xRCA adapter numbering layout:

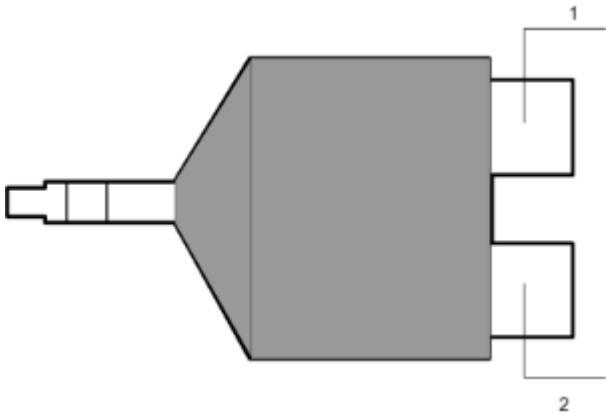

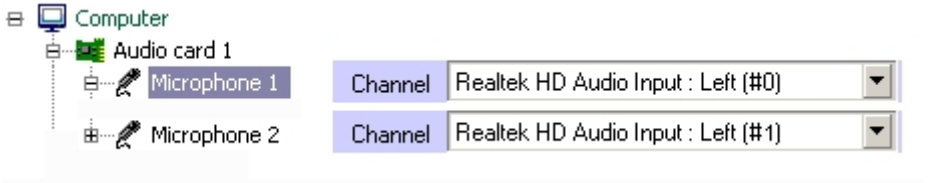

A.for a single standard sound card

B. for two standard sound cards

Using multi-channel audio capture devices

General information on multi-channel audio capture devices

Multi-channel audio capture devices are PCI cards (for example, MidiMan Delta, Comart Hera, Olha9P) or external hardware and software modules (for example, Echolot USB-32), used for digitization and processing of 2 or more audio signals. For the list and features of INTELLECT™ software compatible multi-channel audio capture devices, see the Integration section on the site of AxxonSoft company: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

Multi-channel audio capture devices reproduce sound and digitize audio signals in parallel, or sound is reproduced by the standard sound cards. The audio signal sampling rate range

depends on the audio capture device type. The INTELLECT™ software system sampling rate range, available to the installed card, is limited to the 48 kHz maximum value.

Setting up multi-channel audio capture devices

Usually multi-channel audio capture devices digitize 2 or more audio signals, de on the device type.

Each multi-channel audio capture device is registered in the INTELLECT™ software by creating and setting up **Audio card** objects. **Audio card** objects are created on the **Hardware** ta b on the base of the **Computer** object. During creation of the **Audio card** object for each multi-channel audio capture device the value, corresponding to its name, should be assigned to the **Board** parameter.

To register the microphones, connected to the multi-channel audio capture device input audio channels, create **Microphone** objects on the base of the **Audio card** object. The number of **Microphone** objects, allocated on the base of a single **Audio card** object, is defined by the number of audio input channels and restricted by the License key file. The relevant hardware tree segment during the registration of the standard sound card and 8 microphones is shown in the figure.

The hardware tree segment at registration of an Eholot USB-32 multi-channel audio capture device and 8 microphones:

After registration in the INTELLECT™ system, the values should be assigned to the **Channel** settings of the **Microphone** objects according to the channel numbers of the microphone connections to the audio capture device. An example of **Microphone** object settings is shown in the figure above.

Using IP-devices

General information on IP-devices

INTELLECT™ software system supports audio signals reception, digitization, processing and playback options, using audio capture IP-devices. IP-cameras and IP-servers built-in microphones or the external analog microphones, connected to IP-devices, may be used for audio signals receipt, digitization and processing. External IP-loudspeakers or headphones, connected to IP-servers or IP-cameras may be used for audio signals playback. For the list of INTELLECT™ software compatible IP-devices for audio signal reception, digitization, processing and playback, see the Integration section on the site of AxxonSoft company: http://www.axxonsoft.com/products/axxon_enterprise/core_functionality/integration.php.

The audio signal sampling rate range depends on the IP-device type, used as an audio capture device. The INTELLECT™ software system sampling rate range, available for the installed

card, is limited to the 48 kHz maximum value.

> **Note.**
> *Intellec*t supports IP devices with dynamic IP address using DynDNS or other services. In these cases specify the address (hostname) given by DynDNS service instead of IP address when configuring IP devices.

Setting up the transmission of video signals to IP-devices

INTELLECT™ software has the facility to transmit audio signals from microphones to IP-devices and to play them back with loudspeakers or headphones, connected to IP-devices.

Audio signal transmission to IP-devices can be performed in two ways:

1. with the help of interface object the **Audio player**;
2. with the help of system object the voice notification service.

The object **Audio player** is used to transmit audio signals from the selected microphones on the supported IP-devices.

To set up the transmition of audio signals with the help of the **Audio player** object do the following:

1. Go to the tab of setting up interface object **Audio Player**.

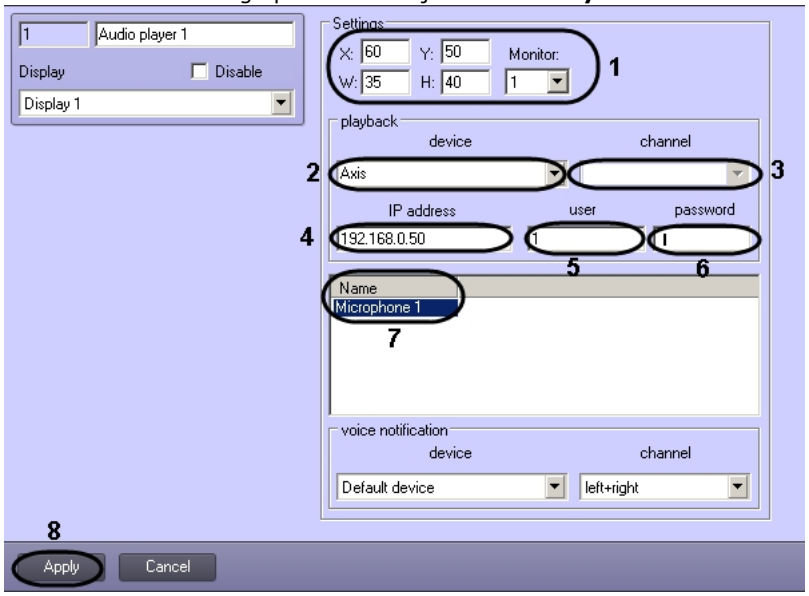

2. Enter the settings of the **Audio player** interface box (1).
3. Select the required IP-device from the dropdown list **Device** (2).

> **Note.**
> Select the value **Virtual Cable** to transmit audio signals to IP-device Bosch (see Setting up the transmission of audio signals to IP-device Bosch)

4. From the dropdown list **Channel**, select the required audio signals'playback channel (3).
5. In the field **IP address** enter the IP address of the selected IP-device (4).

6. If necessary enter user name and password in the fields **User** and **Password** to connect to the selected IP-camera (5-6).
7. From the dropdown list in the colomn **Name** select the object's name **Microphone**, from which audio signal has to be transmitted to the selected IP-device (7).
8. Repeat step 7 for each selected microphone object.
9. Click the **Apply** button to save all the changes. (8).

Setup of the audio signal's transmition with the help of **Audio player** object is completed.

Note.

To activate audio signals'transmition from the microphone to the IP-device click the button (**Interception from microphone**) in the **Audio player** interface box.

Voice notification object is used to transmit files of WAV format to the supported IP-devices. Set up order of the object **Voice notification service**is described in the Setting up the voice notification.

Note.
With joint use of the Audio player and voice notification service, bear in mind, that the sampling rate of audio signals, fed from microphones via the **Audio player** (**Sample rate** setting of **Audio card** object) and that of the audio files, transmitted with the voice notification service, must be the same.

Setting up the transmission of audio signals to IP-device Bosch

Transmission of audio signals to IP-device Bosch is performed with the use of Virtual Audio Cable driver.

Note.
Information about program Virtual Audio Cable one can find in official reference manual of this program. The program is not a part of the Intellect^{TM} software.

To set up the transmission of audio signals to IP-device Bosch do the following:

1. Install Virtual Audio Cable driver and set it in accordance with the figure and the table.

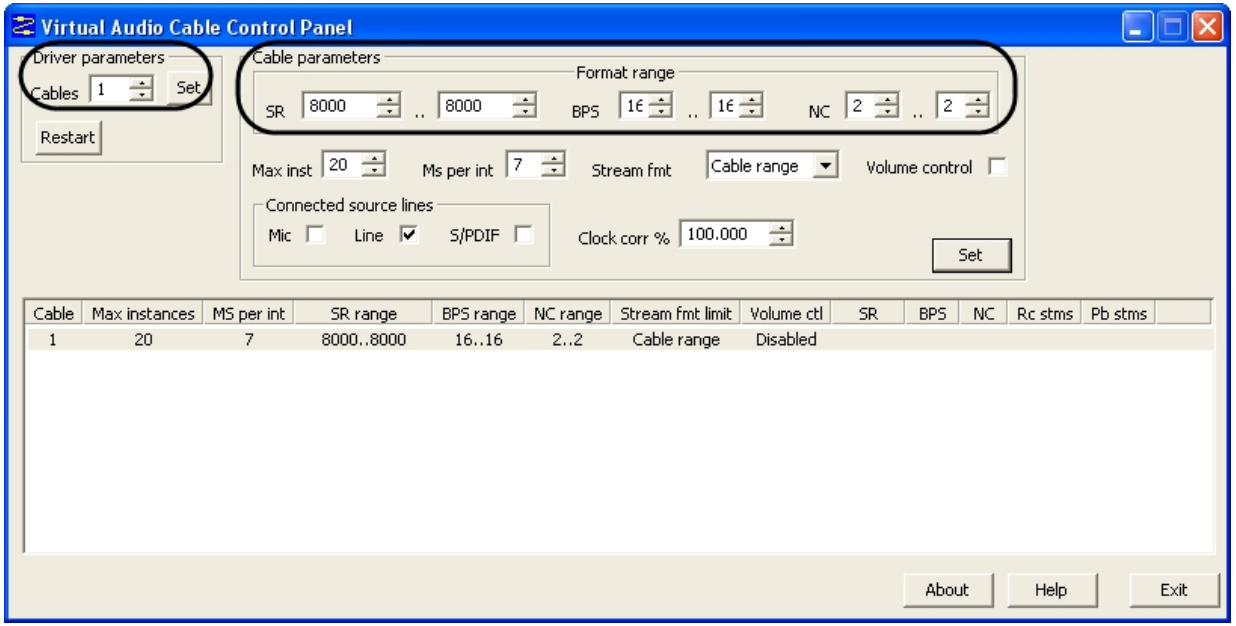

Driver set up utility	Group	Parameter	Description of parameter	Range of parameter's value
Start -> All programs -> Virtual Audio Cable -> Control Panel	Driver parameters	**Cable**	Number of virtual audio cables	1
	Cable parameters -> Format range	**SR**	Sampling rate of audio signals	8000..8000
		BPS	Depth of audio signals sampling	16..16
		NC	Number of channels of virtual audio cable	2..2

2. Start *Intellect* program complex.
3. Go to the settings panel of system object **Audio card** (see Registration of audio cards and microphones in INTELLECT™ software).
4. From the dropdown list **Board** select the required IP-device Bosch (1).

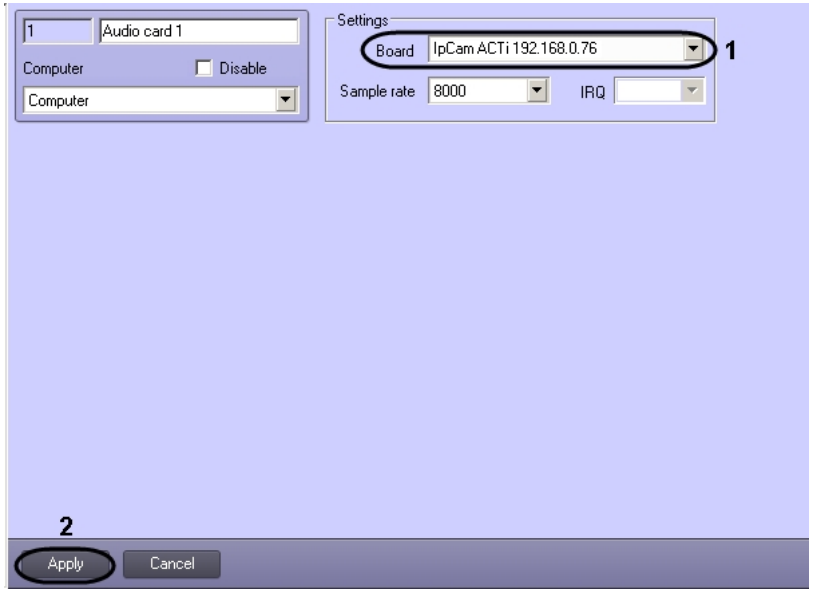

5. To save the changes click **Apply** button (2).
6. Create **Microphone** object on the base of this object and go to its settings panel (see Registration of audio cards and microphones in INTELLECT™ software).

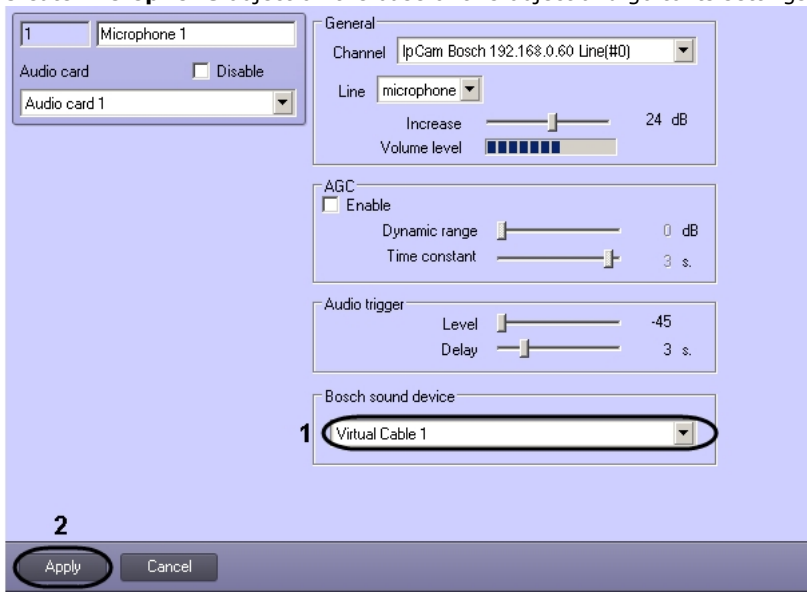

7. From the dropdown list **Bosh sound device** select the value **Virtual Cable** (1).
8. To save the changes click **Apply** button (2).
9. Go to the settings panel of the **Audio player** interface object(see Configuring audio signals playback using the Audio player object).

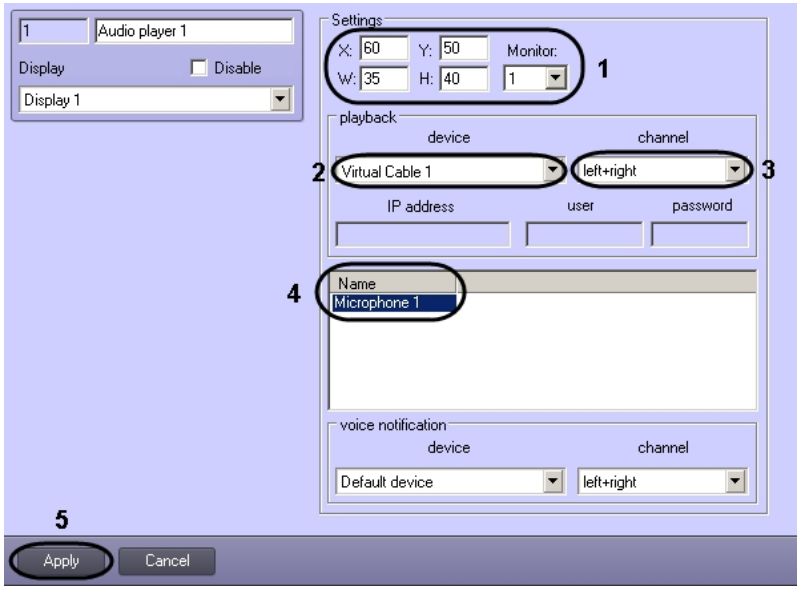

10. Set the coordinates and size of the **Audio player** interface box (1).
11. From the dropdown list **Device** select the value **Virtual Cable** (2).
12. From the dropdown list **Channel** select the required chanal of audio signals playback (3).
13. From the dropdown list in the column **Name** select the name of **Microphone** object which audio signal has to be transmitted to IP-device Bosch (4).
14. Repeat step for all the required **Microphone** objects.
15. To save the changes click **Apply** button (5).
16. Restart *Intellect* program complex.
17. Setting up the transmission of audio signals to IP-device Bosch is completed.

Note.

To enable the transmission of audio signals from the microphone to IP-device Bosh click the button (**Interception from microphone**) in the **Audio player** interface box.

Setting up the transmission of duplex audio signals to IP-devices

Transmission of duplex audio signals to IP-devices is configured by coupling speakers, registered in INTELLECT™ software, with microphones.

Note.

The feature of transmitting audio to an IP-device must be supported by the IP-device and be integrated into the Intellect™ software – see Drivers Pack documentation.

To configure transmission of duplex audio signals to IP-device, do the following:

1. Create and configure the **Camera** object on the base of the **Video Capture Device** object.
2. To work with a microphone of an IP-camera, create and configure the **Audio card** and **Microphone** objects (see Registration of audio cards and microphones in INTELLECT™ software section).

3. To work with a speaker of a camera, create and configure the **Playing card** and **Speaker** objects (see Configuring audio playback section).
4. To redirect a signal from a microphone to a speaker of a camera, create and configure the **Live sound switch** object (see Creating and configuring the Live sound switch object section).

As a result one can direct audio to a speaker of a camera while working with the **Live sound switch** object (see Using the Live sound switch object section).

Configuring events logging

The Event Viewer database is used for storing data about events registered in the system. It can be a part of the *Intellect* database (by default) or a separate database (see Extracting event protocol into an individual database).

The Event Viewer database is configured by means of the settings panel of the **Computer** system object.

To configure the Event Viewer database, do the following:

1. To disable events recording to the Event Viewer database, set the **Disable protocol** checkbox (1). This setting is relevant only for the Server corresponding to the **Computer** o bject.

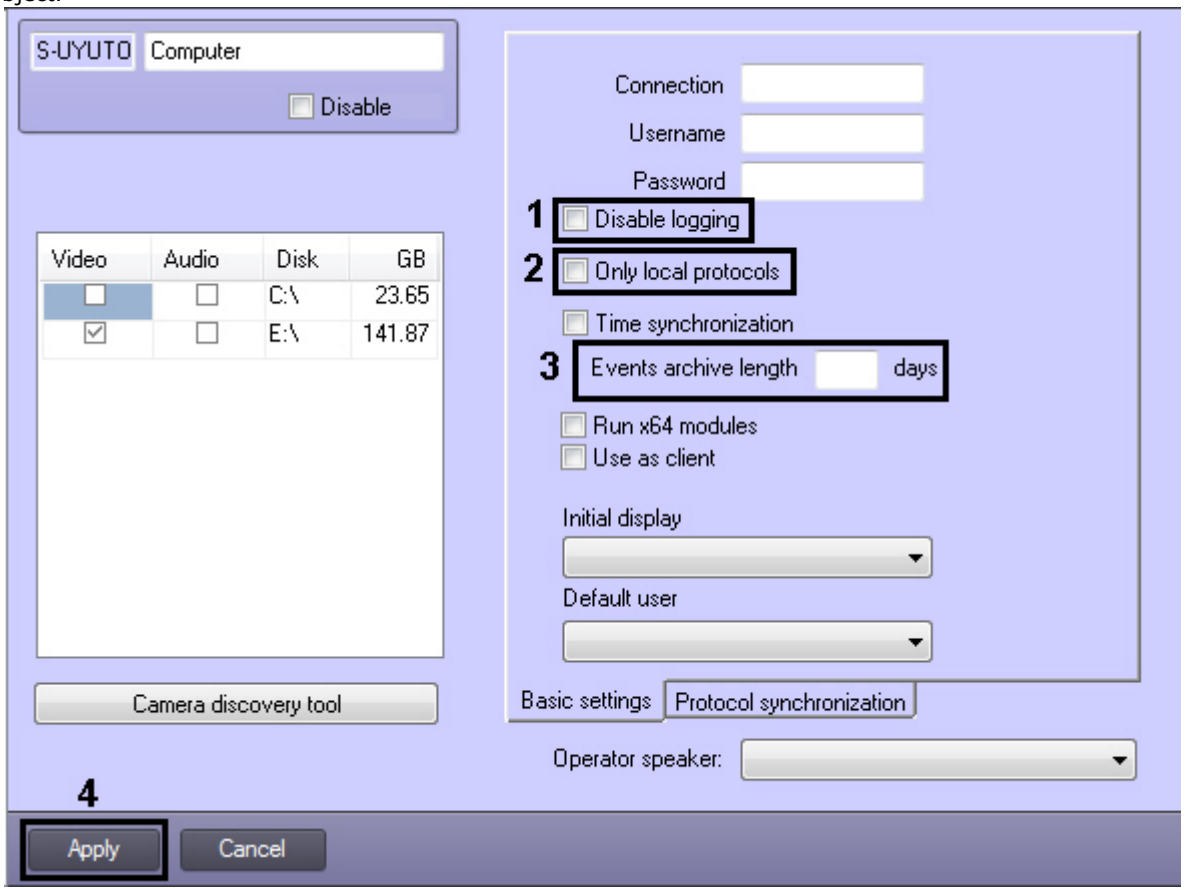

2. Set the **Only local protocols** checkbox in case when only events registered on this computer are be logged to the database (2). This setting is relevant only for the Server

corresponding to the **Computer** object.

3. In the **Event archive length** field specify the time period for storing the event archive in the Event Viewer database (3). This setting is relevant only for the Server corresponding to the **Computer** object. To specify the time period for storing the event archive for all Servers in the distributed system, use the common settings in the **Programming** tab (see The Settings panel of the Security zone object section). The value of the Events archive length parameter on the settings panel of the **Computer** object has the higher priority.

   Note.
   If no value is specified in the **Events archive length** field in the configuration panel of the **Computer** object, the value specified in the configuration panel of the **Security zone**object is used.

4. Click the **Apply** button to save all the changes (4).

Note.
Steps 1 and 3 are for configuring events viewing in the system of distributed configuration.

The Event Viewer database is now configured.

Note.
The tweaki.exe utility can also be used to configure events viewing (see the The Settings panel of the Intellect section).

Define required disk space (size of event log database)

Configuring the Operator protocol interface object

Configuring the Event Viewer interface object

Event control via event log

Event processing using the Operator protocol

Configuring the Event Viewer databases synchronization

General information on the Event Viewer databases synchronization

Information on registered events in the system is stored in the Event Viewer database in INTELLECT™. The local copy of distributed database is stored on each Server. Synchronization of local copies of Event Viewer databases is to be configured to provide the data replication.

Start of Event Viewer database synchronization is performed via programming resources, for example, via macros.

Configuring the Event Viewer database synchronization

Synchronization of the Event Viewer databases is configured on the settings panel of the **Computer** object in the **Protocol synchronization** tab.

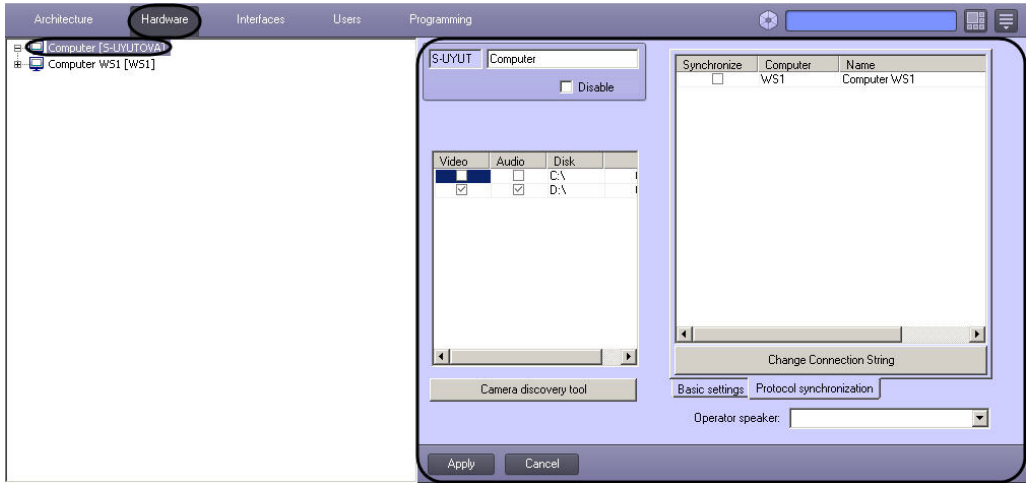

To configure the synchronization, do the following:

1. Go to the **Protocol synchronization** tab (1).

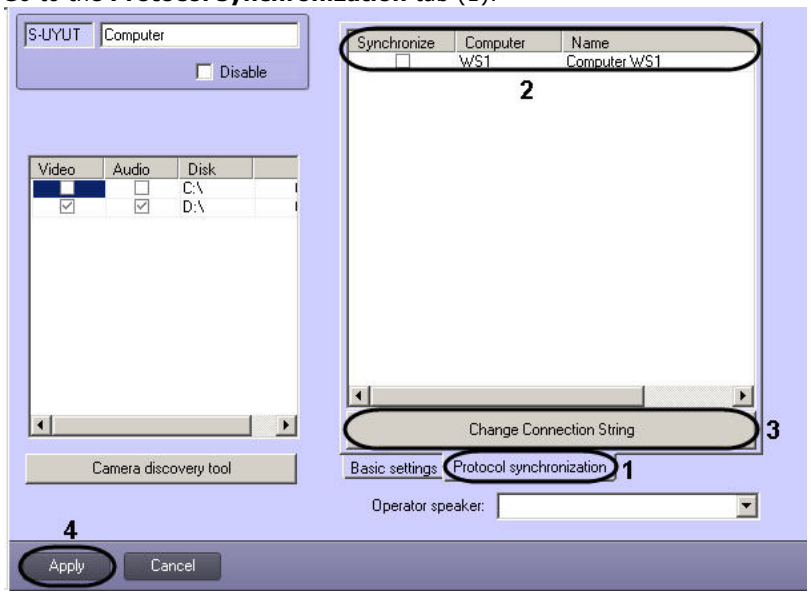

2. In the **Synchronize** column set checkboxes next to those computers with which the synchronization of the Event Viewer databases is to be performed on the Server (2).
3. Set the connection string in the Event Viewer database on remote computers:
    a. Select the cell corresponding to the required computer in the line of the table.
    b. Click the **Change Connection String** button (3).
    c. In the opened **Data communication channel** box configure the connection to the Event Viewer database located on the selected computer.
    Connection configuration is performed via Windows standard tools and is described on the Microsoft reference web-site (http://msdn.microsoft.com/).

d. Repeat 3.1 – 3.3 steps for all required computers.

4. Click the **Apply** button to save the settings (4).

Synchronization of the Event Viewer databases is now configured.

Example of macro to start the Event Viewer databases synchronization

On the WS3 computer the synchronization of the Event Viewer databases is to be performed when Timer 1 is triggered.

Set the macro parameters using one of the following ways (see figure and table):

Event		Action	
Object	**Event**	**Object**	**Action**
Timer 1 (1)	Timer triggered (2)	Computer (3)	Receive protocol (4)

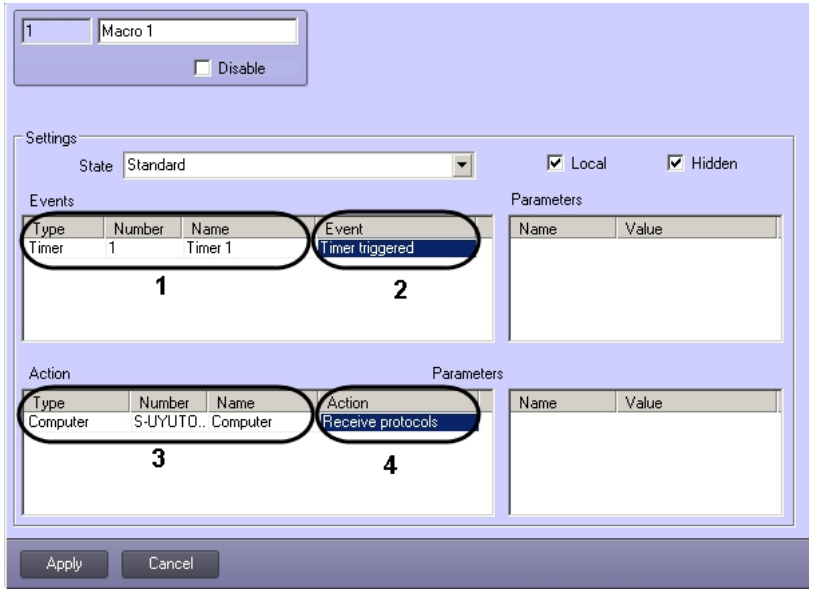

Configuring telemetry

In digital video surveillance system PTZ devices are used for extension of video surveillance area by mechanical rotation of the camera. Detailed description of connection and configuration of PTZ devices is given in the Installing and configuring security system components guide manual.

Requirements for PTZ and control panels

Telemetry control

Configuring operation of distributed architecture in the failover mode

General information about Failover mode

Distributed architecture can operate in the failover mode. If the connection with one of distributed system Servers fails, then this mode enables transfering the configuration created under the Server to a Standby Server. A Standby Server temporarily becomes a Video server and records archive in accordance with the settings of the **Computer** object that corresponds to a Standby Server (see Selecting the disks for video archive storage section). When the connection is restored, the configuration is restored on the main Server.

Note.
When moving configuration to the Backup Server and getting it back to the Main Server the **Failover service** object generates START and STOP events. These events can be used in scripts for flexible system configuration. For examples see Examples of scripts in JScript language section of Programming Guide (JScript).

If the main Server + standby Server flowchart is in use, it is possible to configure both main and standby Servers for recording on the same network resource or several resources (see Using network disks section). In this case the archive is always available no matter what Server operates with cameras.

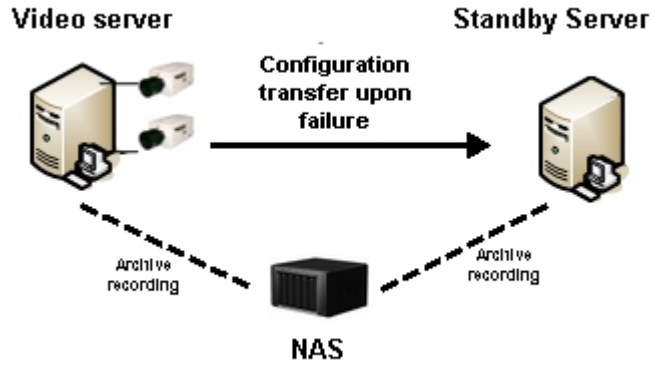

If the N main Servers + standby server flowchart is in use, it is impossible to create a unified archive. In this case main Servers perform recording on different logical drives (sections, partitions), local or network. If these drives for archive recording are specified on a standby Server, then archives from different main Servers will mix.

The AxxonPlayer.exe utility can be used to access the archive created by a standby Server on NAS or local drive (see Viewing video using the AxxonPlayer.exe utility section). Alternatively, main and backup server archives can be synchronized through the *Long-term archive* module (see Configuring archive synchronization of main and backup Servers).

The N main Servers + standby server flowchart:

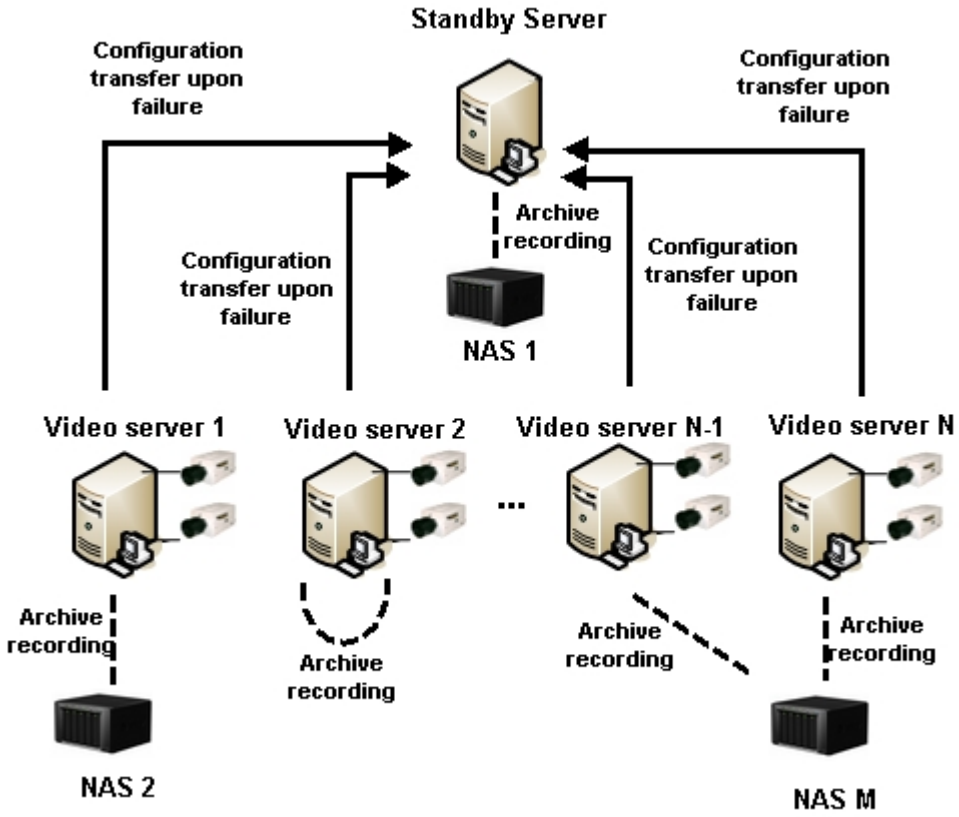

The N main Servers + standby server flowchart when archive is recorded to one NAS:

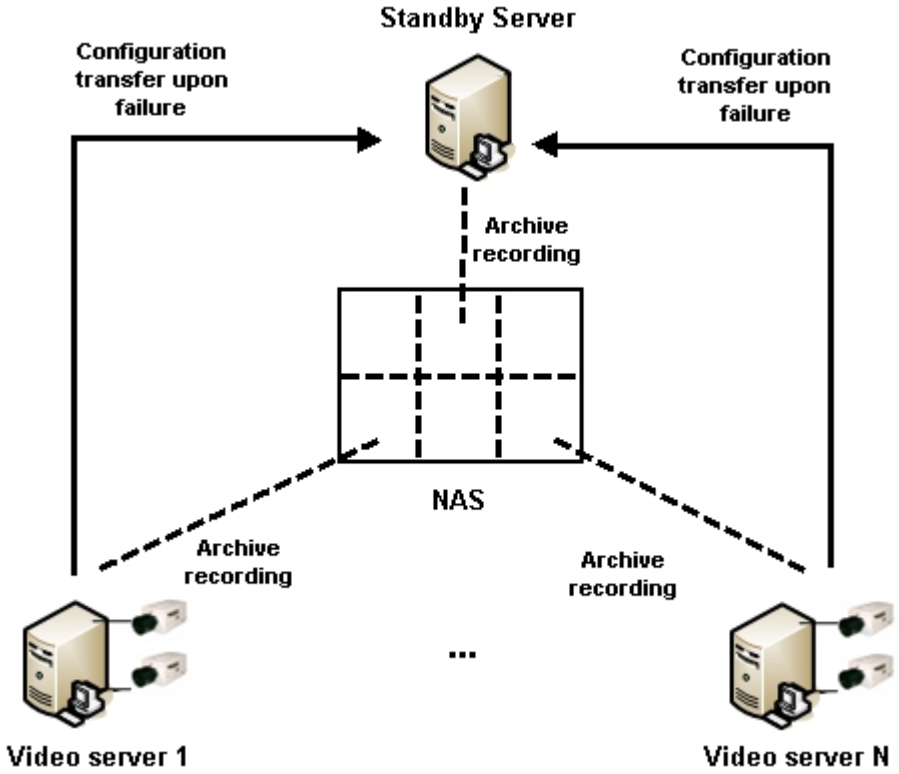

If configuration from several main Servers is transferred to one standby Server, then provide enough processor resources, RAM and LAN on a standby Server in case when all main Servers become disabled.

The Failover mode is configured using the **Failover service** objects created under the **Computer** objects corresponding to backup servers in the **Hardware** tab of the **System settings** dialog box.

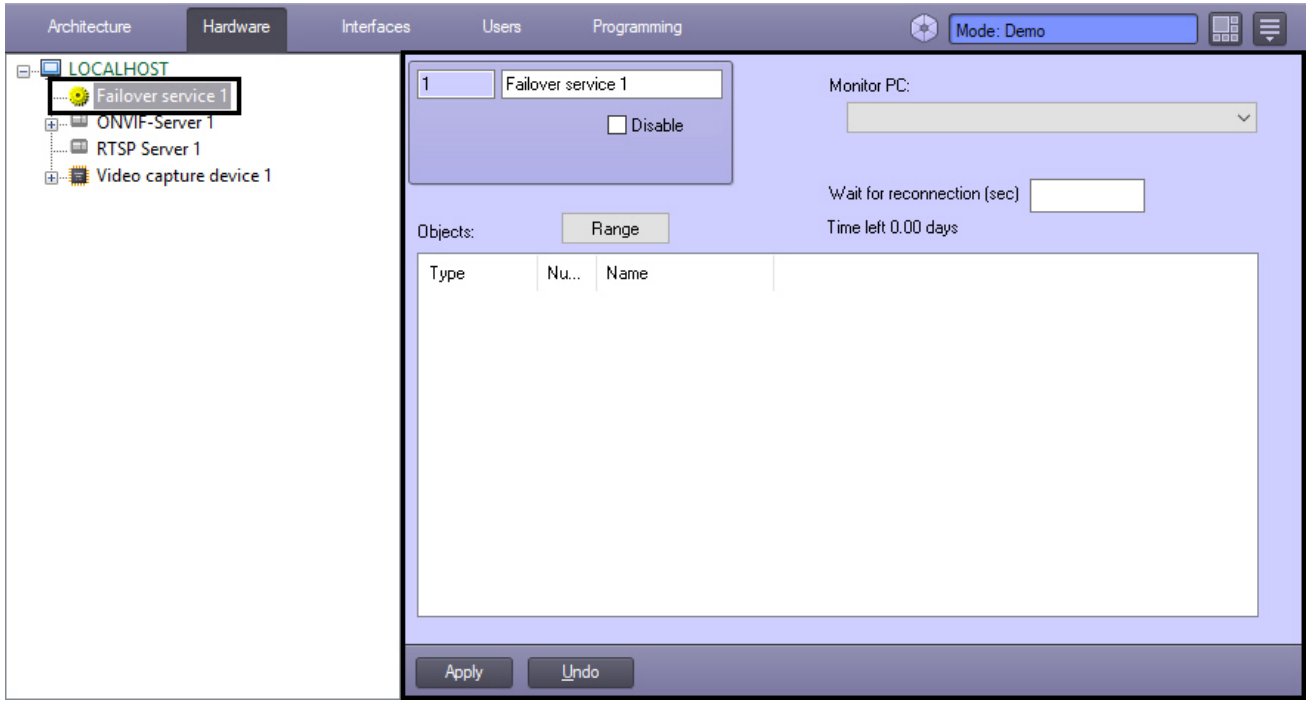

If the quantity of cameras is bound to specific Servers in the protection key, then the license becomes invalid when cameras are moved to the backup Server. In this case the system gives 2 months to restore the faulty Server in order to move the cameras back and the license to become valid again. Otherwise, Intellect will unload on the backup Server because the hardware limit is exceeded (see Features of the Intellect software operation when the object limit is exceeded section). Time (in days) remaining for restoring the main Server is shown on the settings panel of the **Failover service** object:

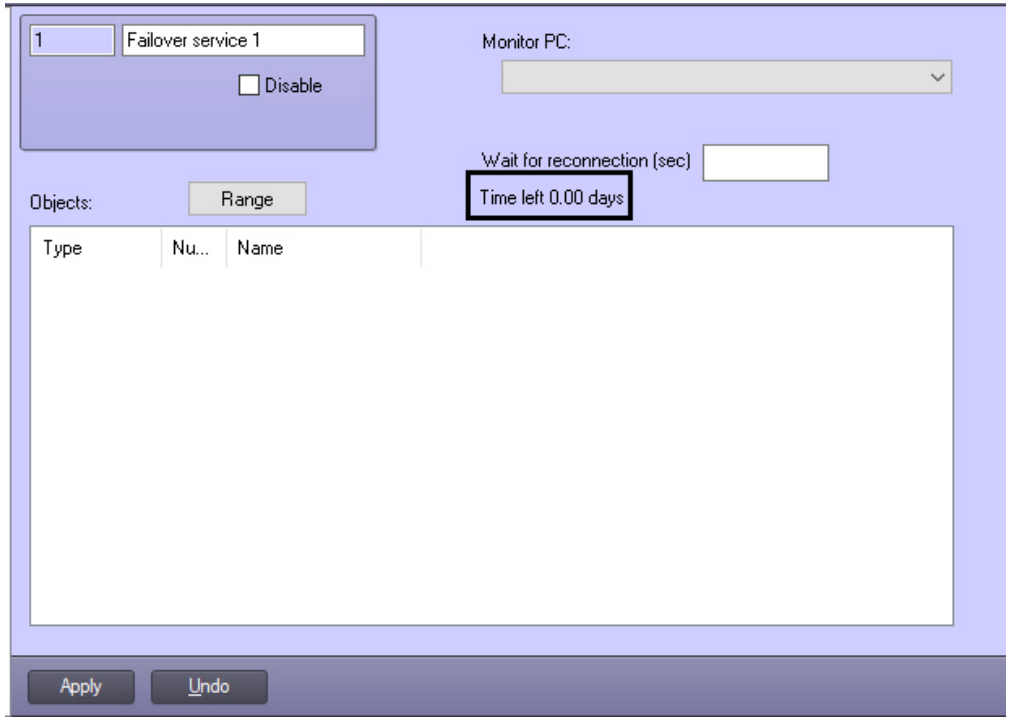

When you log off INTELLECT™, configuration is not transferred from main Server to a standby server.

The number of failovers running simultaneously can be limited. For this the **Manager of Failover services** object is used. It is created under any **LOCALHOST** object (that is not a Client) in the system – see Role-assignment in distributed system section). Only one **Manager of Failover services** object can be created in the system.

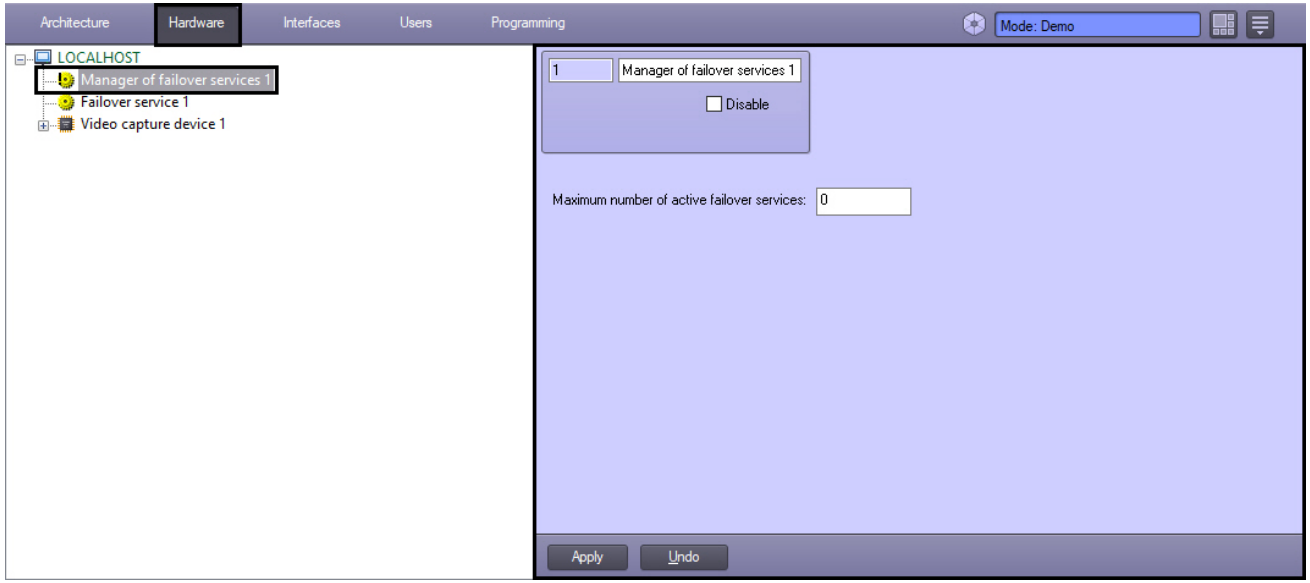

If the number of dead servers exceeds the specified limit, configuration from new dead servers will be transferred as previously dead servers restore.

Configuring Failover mode

To configure the failover mode, configure a standby Server as follows:

1. Create the **Failover service** object under the **Computer** object corresponding to the standby Server in the **Hardware** tab of the **System settings** dialog box.

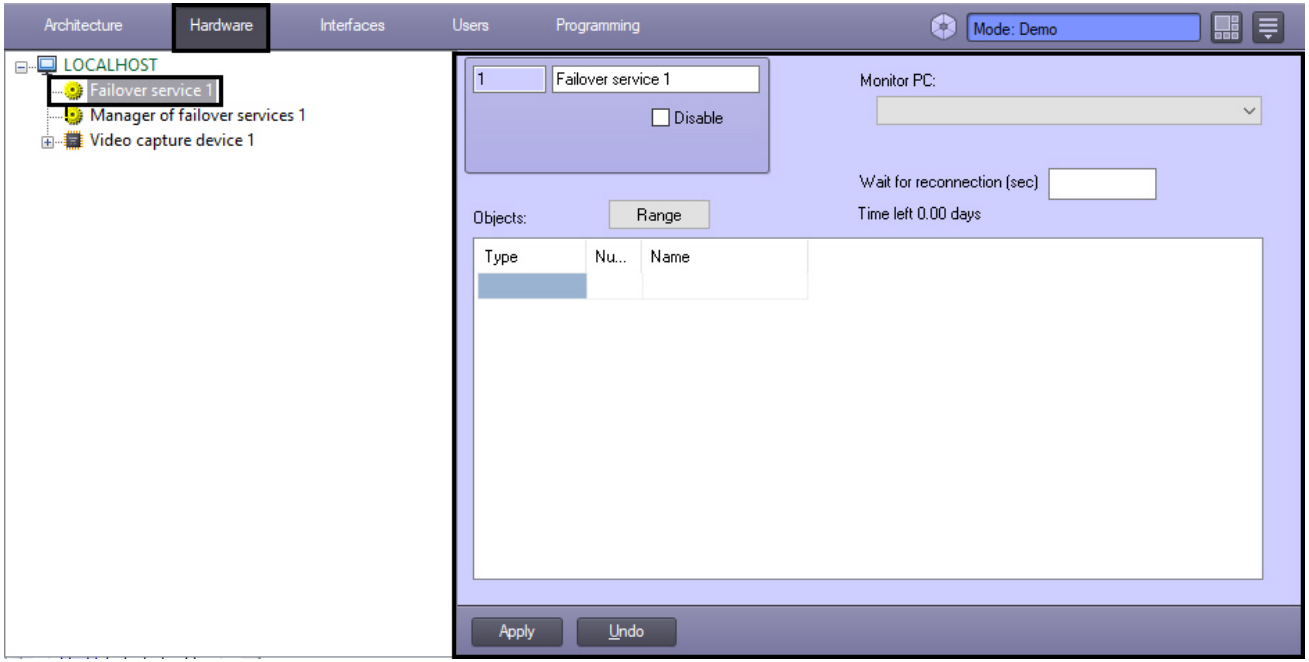

2. Go to the settings panel for the **Failover service** object.

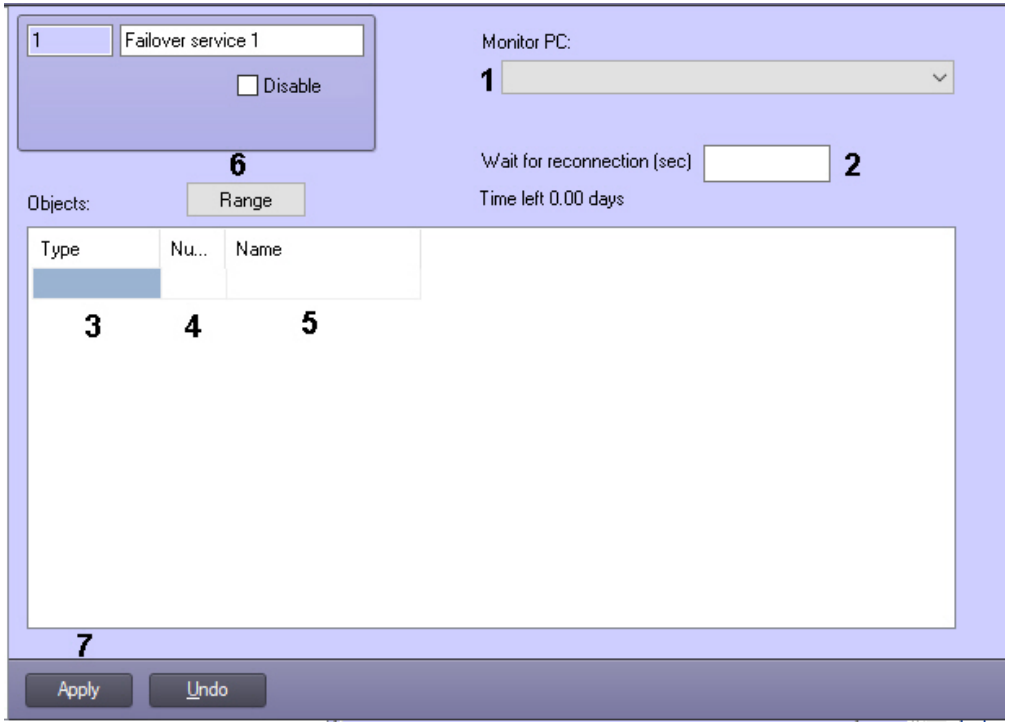

3. In the **Monitor PC** dropdown list, select the name of the **Computer** object that is to be under control (1).
4. In the **Expect reconnection (sec)** field, specify the time period (in seconds) at the end of which configuration is transferred to a standby Server when the Server connection fails (2).
5. In the **Objects** table, specify the list of configuration objects (that are to be transferred to a standby Server if connection fails) of the main Server:
    a. Manually one by one:
        i. In the **Type** dropdown list, select the object type (3).
        ii. In the **Number** dropdown list, select the object ID (4).
        iii. The **Name** field is automatically filled in with the name of a corresponding object (5).
        iv. Repeat steps i-iii for all objects (that are to be transferred to a standby Server if connection fails) in the objects tree of a Server under control.

> **Note.**
> To add a new line in the table, click the downwards arrow on the keyboard.

        v. Click the **Apply** button (7).
    b. As a group:
        i. Click the **Range** button (6). The **Range** box is displayed.

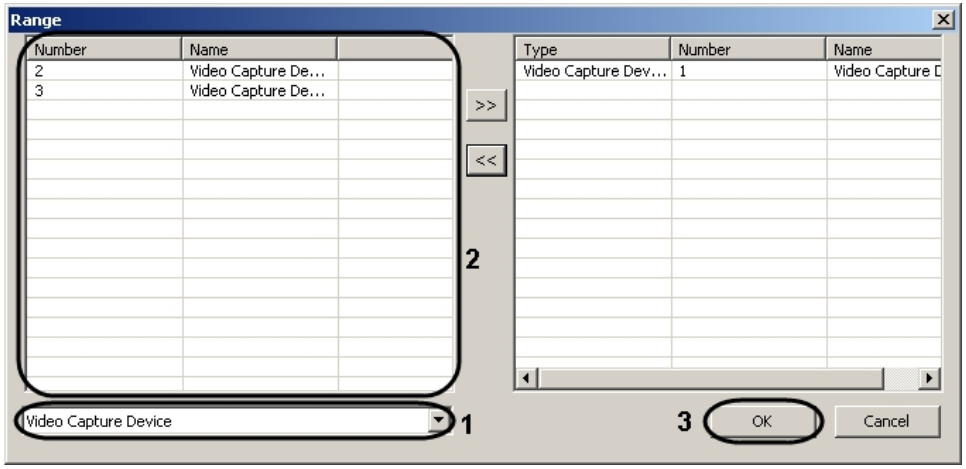

ii. In the dropdown list, select the object type (1).
iii. In the table, mark the required objects of this type (2). To mark several objects, hold the Ctrl key on the keyboard.
iv. Click the >> button to transfer selected objects to the list of the objects under control. The list is on the right of the **Range** box.

> **Note.**
>
> The << button is used to transfer the object back from the list of objects under control to the list of available objects.

v. Repeat steps ii-iv for all required objects.
vi. Click the **OK** button (3).
vii. Click the **Apply** button (7).

6. Repeat steps 1-5 for all main Servers under control of a configured standby Server in the distributed system.

The failover mode is now configured.

Limiting number of failovers running simultaneously

Limit the number of failovers running simultaneously as follows:

1. Go to the settings panel of the **Manager of failover services** object.

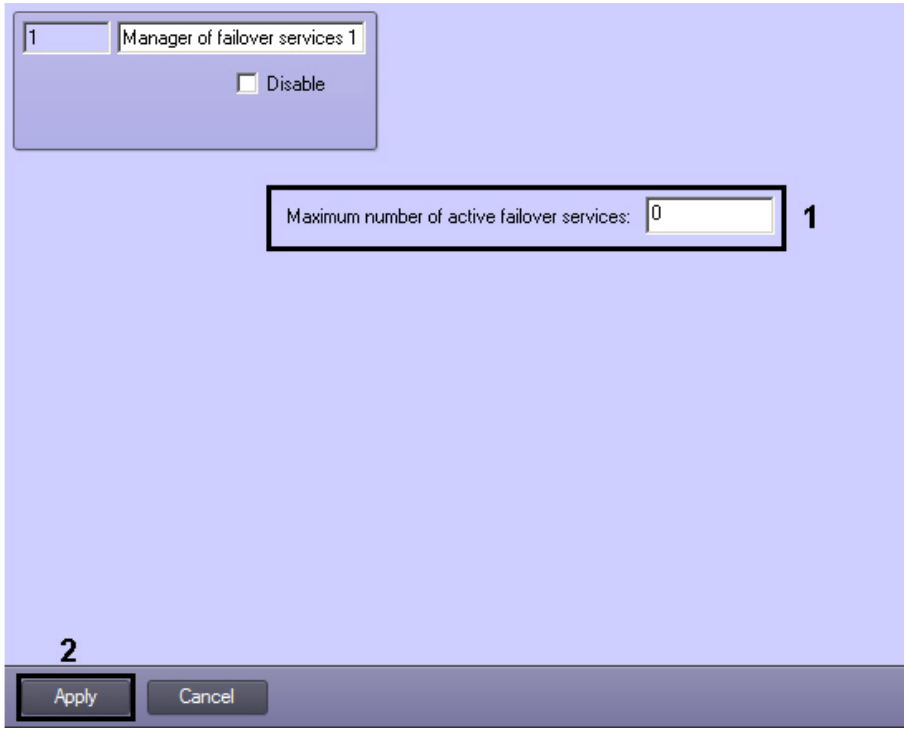

2. In the **Maximum number of active failover services** field specify the maximum number of dead servers – when this limit is reached the configuration transferring is to be stopped until one of failovers becomes vacant (1).
3. Click the **Apply** button (2).

Limit to the number of failovers running simultaneously is now set.

Configuring archive synchronization of main and backup Servers

In *Intellect* one can configure the synchronization of the video archive of the main and backup Servers. In this case, after restoring the main Server, the video archive will be transferred from the backup Server using the *Long-term archive* module.
To use the archive synchronization mechanism create a Long-term archive object under the same **Computer** object as the **Failover service** object.

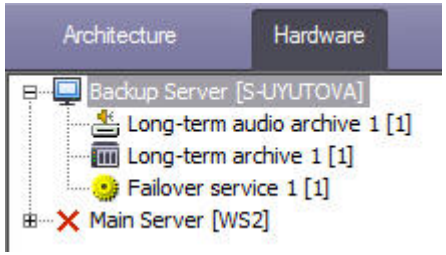

Cooperation with the Failover service is to be enabled on the settings panel of the Long-term archive (see Enabling cooperation of Long-term archive with Failover service).

Configure synchronization on the main Server as follows:

1. Go to the settings panel of the **Computer** object corresponding to the main Server.

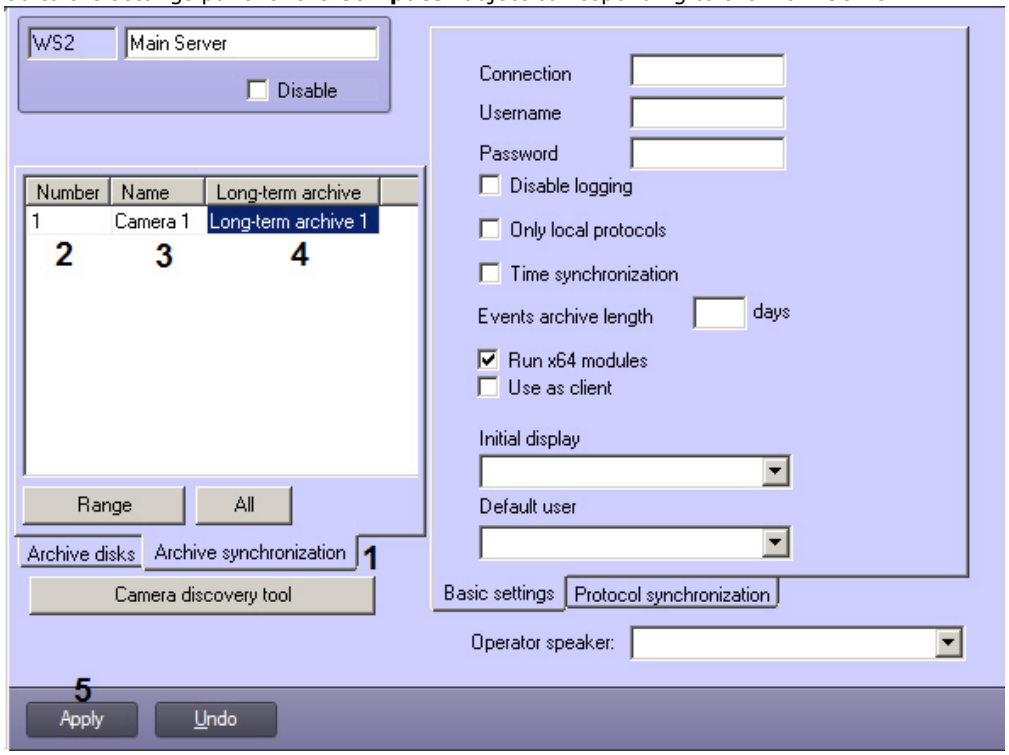

2. Go to the **Archive synchronization** tab (1).
3. Configure the list of cameras the archive of which is be synchronized when restoring the main Server:
    a. Select the camera ID in the **Number** dropdown list (2).
    b. Select the camera name in the **Name** dropdown list (3).
    c. In the **Long-term archive** dropdown list select the name of the **Long-term archive** object configured to cooperate with the Failover service and located on the backup Server where the selected camera is transferred to when the main Server fails (4).
    d. Repeat steps a-c for all required cameras.
    e. Click the **Apply** button (5).

The synchronization of main and backup Servers is now completed.

Configuring the access to the archive in edge storage

General information on keeping video archive in edge storage

One can view video archive from embedded storage of IP devices (NVR video recorders) in INTELLECT™ software package.

Access to video archive of edge storage is configured using the **Edge storage** object. Viewing video from external archive is carried out in the **Video surveillance** box. The details of its operation are given in Operator's Guide manual.

Note.
Video is not recorded to edge storage via the **Edge storage** object in INTELLECT™ software package.

Note.
For the *Intellect* to work with embedded IP device storage, it is necessary to synchronize the time between the Server and the device in the web interface of the latter.

Edge storage playback

Creating the Edge storage object

To create the **Edge storage** object do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).

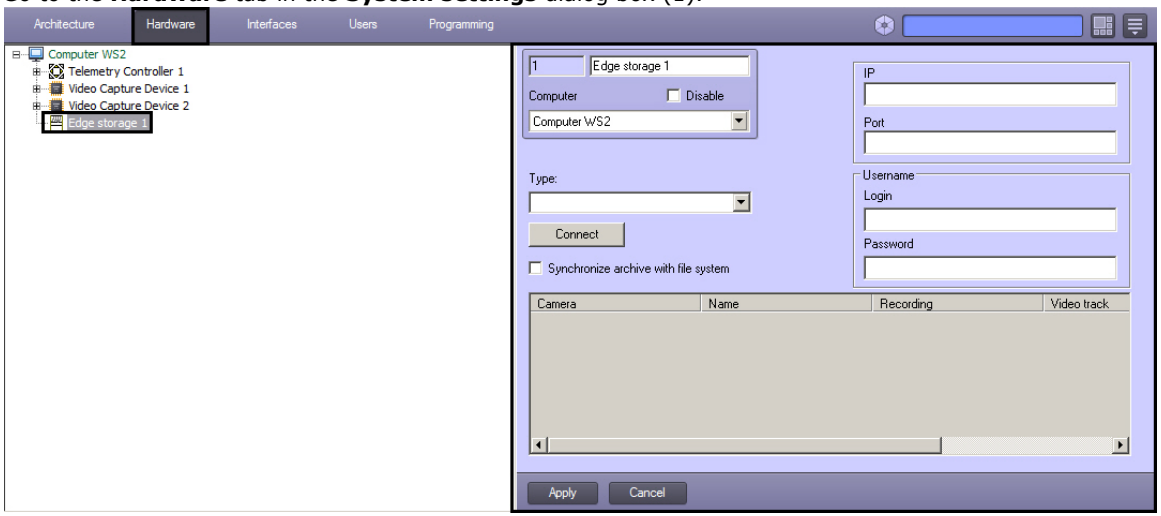

2. Create the **Edge storage** object in the objects tree of the **Hardware** tab (2). In the right part of the **Hardware** tab the setting panel of the selected object is displayed (3).

After this one can continue configuring the connection to edge storage (see Configuring the connection to edge storage section) and set the list of cameras to access the edge storage (see Setting the list of cameras to access the edge storage section).

Creation of the **Edge storage** object is completed.

Configuring the connection to edge storage

To configure the connection to edge storage in INTELLECT™ software package do the following:

1. Go to the setting panel of the **Edge storage** object.

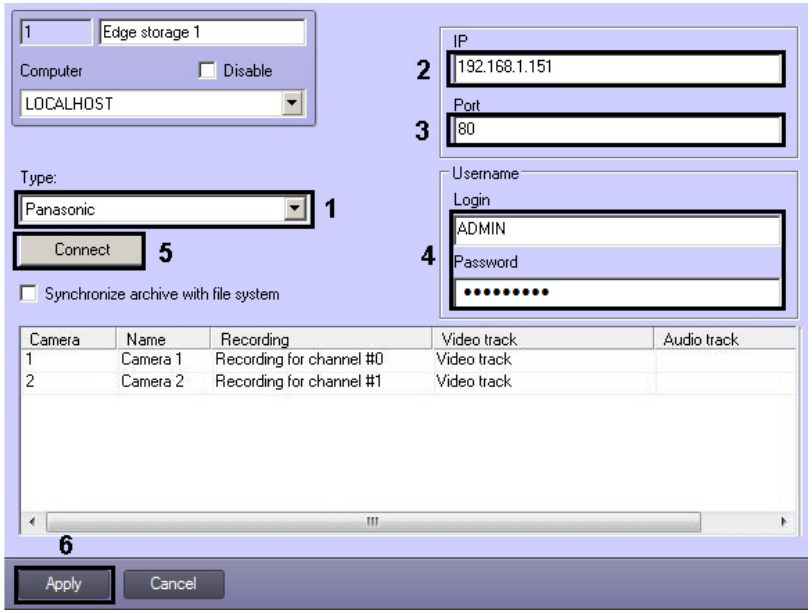

2. From the **Type** dropdown list select the interfacing protocol for the connected device (1).
3. In the **IP** field specify the IP address of the device with edge storage (2).
4. In the **Port** field specify the port for device connection (3).
5. In corresponding fields of the **Username** group specify the login and password to connect to edge storage (4).

> **Note.**
> Login and password depend on device settings. See default login and password in manufacturer's reference documentation on device.

6. Click **Connect** (5). If the device is connected then one can set the list of cameras for playing back video from the edge storage archive and match the number of camera in INTELLECT™and edge storage from which the video is to be received (see Setting the list of cameras to access the edge storage section).
7. To save all the changes click **Apply** (6).

Configuration of the connection to edge storage is completed.

Setting the list of cameras to access the edge storage

One can configure several cameras to view video from the edge storage. Each camera is configured for one channel of the device with edge storage.

If one camera is selected for viewing video from several edge storages, then the archive is viewed only from the archive that is matched with camera while the **Monitor** object is configured (see Selecting and configuring video cameras section).

To set the list of cameras to access the edge storage do the following:

1. Go to the setting panel of the **Edge storage** object.

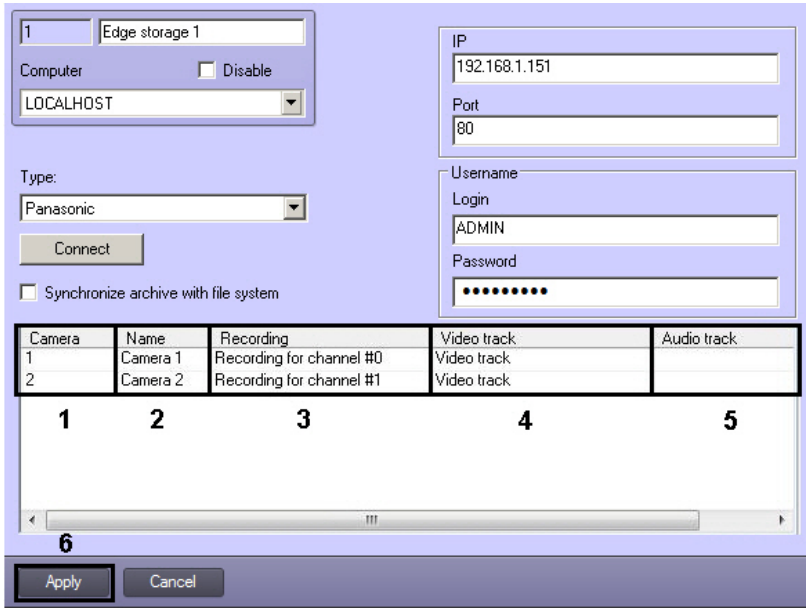

2. In the **Camera** column specify the number of the camera used for video archive viewing (1).
3. Double left click in the **Name** field (2). This field is automatically filled with the name of selected camera.
4. In the **Recording** column specify the channel of the device with edge storage that will be used by camera (3).

> **Note.**
> Recording names are received from the device with edge storage and are not changed in INTELLECT™.

5. In the **Video track** column specify the video channel within selected recording (4).

> **Note.**
> Names of video tracks are received from the device with edge storage and are not changed in INTELLECT™.

6. In the **Audio track** column specify the audio channel within selected recording (5).
7. Repeat steps 2-6 for all cameras that are to be used for viewing the archive from the edge storage.
8. To save all the changes click **Apply** (6).

Setting the list of cameras to access the edge storage is completed.

Importing from edge storages

When *Intellect* is connectied to the camera with edge storage, then video server performs recording the video archive from the camera. If the connection is lost, then recording is performed to the edge storage only. It is possible to import the video archive (for the time period when connection was lost) from edge storages to *Intellect* file system when the connection is restored. The archive is imported as follows:

1. Import to the Main video server archive. Prior to *Intellect* version 4.10.2, there is a restriction when using this method - the recording is performed to one disk/partition only; starting with version 4.10.3, there is no such restriction. Video server always records the main archive. When connecting a camera the main video server archive requires the edge storage for the archive over the period when the camera was disconnected from the server.

2. Import to the Long-term archive. The archive can be recorded onto several disks/partitions. When connecting a camera and activating the long-term archive, it requires the edge storage for the archive over the period when the camera was disconnected from the server.
   To configure import to the Long-term archive, select and configure cameras for copying to the Long-term archive – see the Selecting and configuring the cameras for the Long-term archive section, as well as set the schedule for archive copying when the connection is lost - see Configuring the schedule of the video archive copying.

   Important!
   Create a specific **Long-term archive** object to import from edge storage and backup copying of video server archive. Thus, the video archive is always divided into two parts: the archive over connection lost periods is in the specific Long-term archive and the archive over periods when there is connection is in the Main and/or Long-term archive of the video server.

Important!
In both cases only videos recorded when the Server was disconnected are imported in order to avoid video duplication.

Important!
It is not recommended to view the archive in the edge storage until the synchronization is completed in order to avoid video import.

Import from edge storages is enabled as follows:

1. Go to the settings panel of the **Edge storage** object.

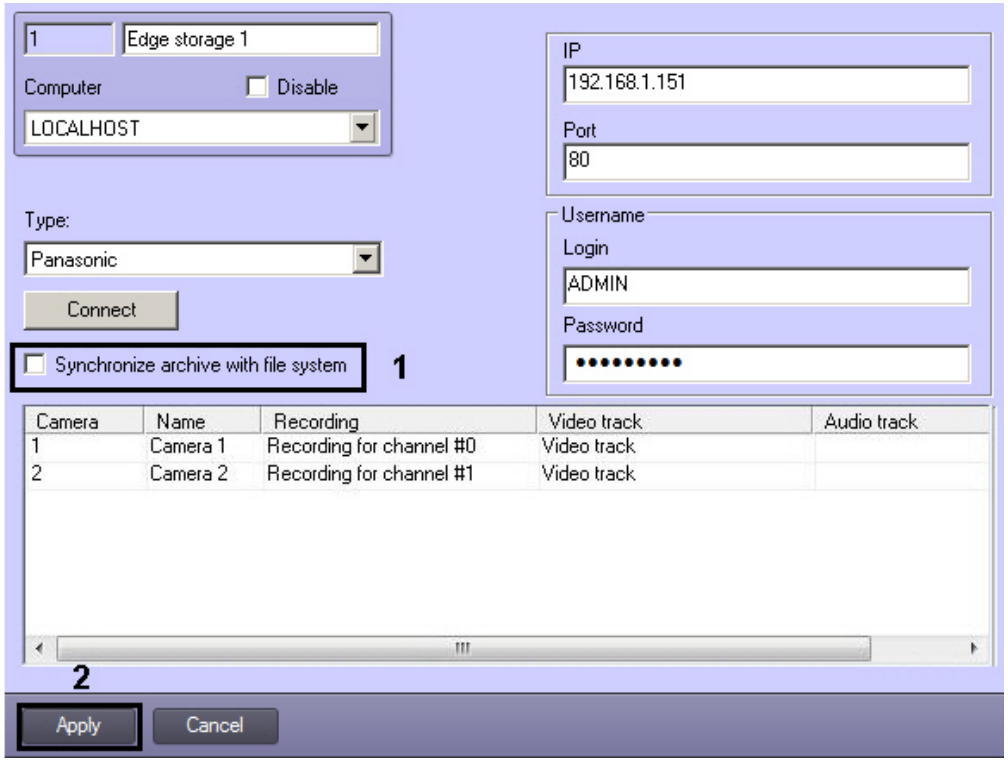

2. Set the **Synchronize archive with file system** checkbox checked (1).
3. Click the **Apply** button to save changes (2).

Import from edge storages is now enabled.

Configuring the SNMP-service

SNMP service setting order

It is possible to create SNMP-service for resending messages about the registered events to SNMP-manager. This opportunity is realized with the use of **SNMP trap** system object.

Note.
Data concerning SNMP-manager is given in the official SNMP protocol reference manual – see, for example, https://technet.microsoft.com/en-us/library/cc738071%28v=ws.10%29.aspx.

Note.
SNMP trap objects use the trap port 162 to send messages in Intellect.

SNMP-service carries out the following functions:

1. Receipt of messages concerning the event, registered in the system;
2. Message conversion concerning the event to SNMP format;
3. Message transfer in SNMP format (trap) to SNMP-manager with the use of TCP/IP net protocol.

> **Note.**
> Moreover, SNMP Wrapper module is the part of *ACFA Intellect* – it allows *Intellect* to behave as SNMP manager and get data from external systems – see SNMP Wrapper Settings Guide.

Setting the SNMP-service is done in the following order:

1. Create **SNMP trap** object on the basis of **SNMP service** system objects (see Creating the SNMP trap object).
2. Select the events, which messages should be transferred to SNMP-manager (see Events selection for transmitting to SNMP manager).
3. Set the message conversion to SNMP format (see Configuring the message conversion into SNMP format).
4. Set the trap with SNMP-message (see Setting up the trap with SNMP-message).
5. Check the validity of SNMP configuration, if necessary (see SNMP configuration for traps receiving on remote computer).

> **Note.**
> It is not recommended to create lots of SNMP trap objects (more than 10) as it can cause system slowdown.

Creating the SNMP trap object

Creating the **SNMP trap** object is done in the following way:

1. Select **Computer** object on the tab **Hardware** of **System settings** dialog window.

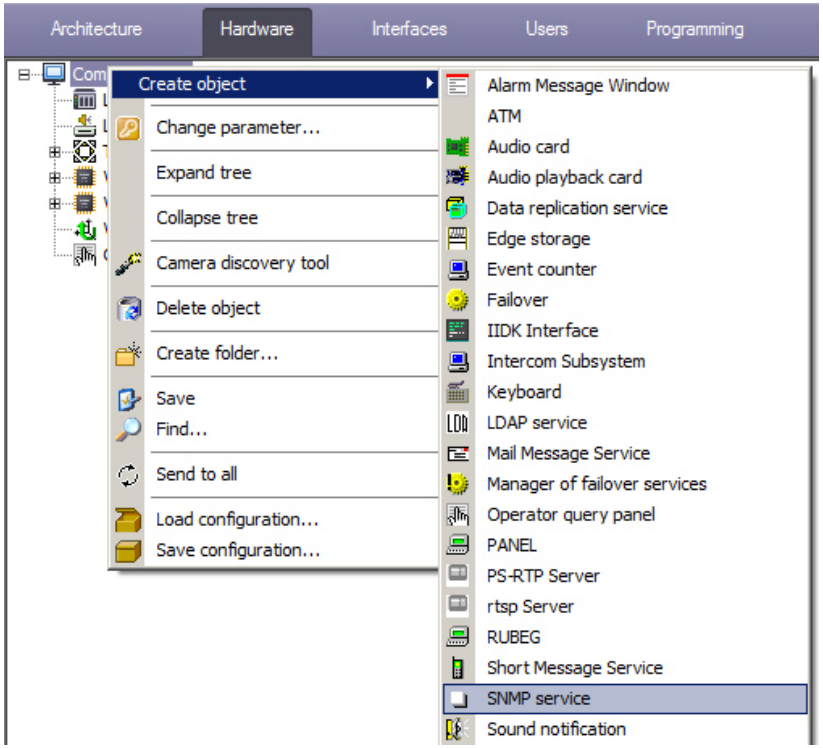

2. Make a right mouse click upon the selected **Computer** object and select **Create object -> SNMP service** in the contextual window.
3. Set the number and name of the object **SNMP service** and then click **Apply**.

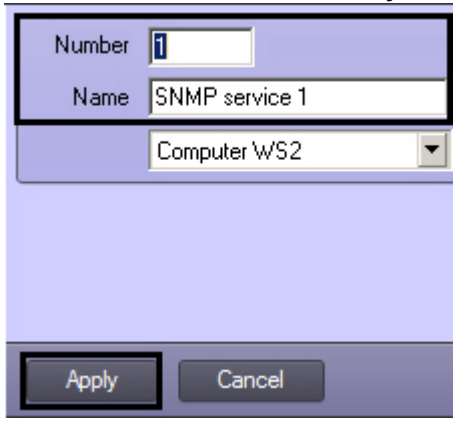

4. Select the created object **SNMP service** on the tab **Hardware** of **System settings** dialog window.

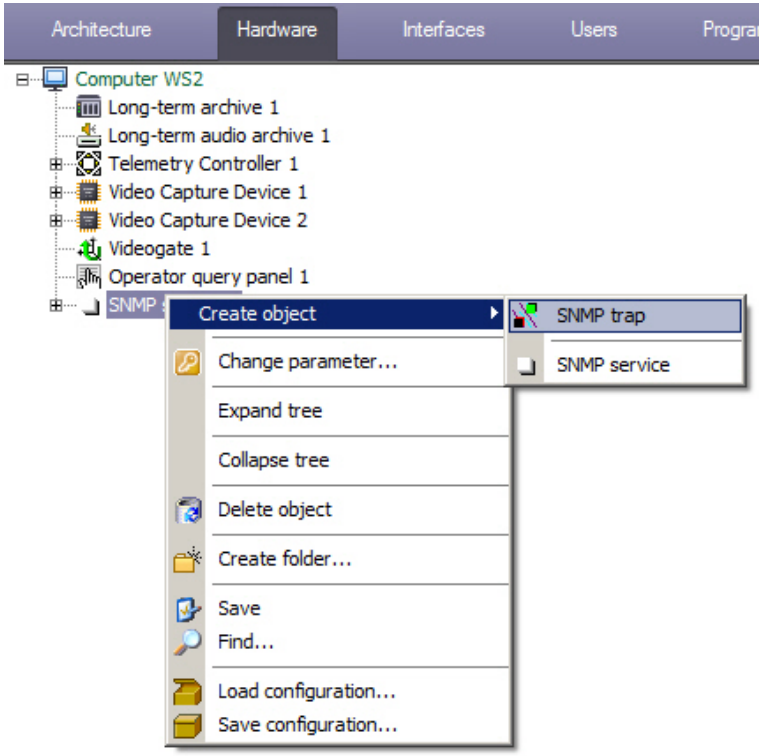

5. Make a right mouse click upon the selected object **SNMP service** and select the point **Create object -> SNMP trap** in the contextual window.
6. Set the number and name of **SNMP trap** object in the appeared window and then click **Apply** button.

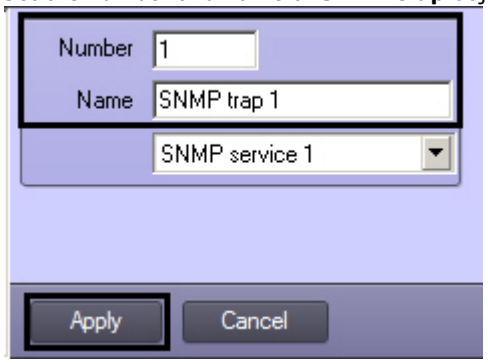

Note.
Settings panel of **SNMP trap** object will appear in result.

Creating the **SNMP trap** object is over.

Events selection for transmitting to SNMP manager

Selection of events for transmitting to SNMP-manager is done in the following way:

1. Go to the settings panel of **SNMP trap** object.

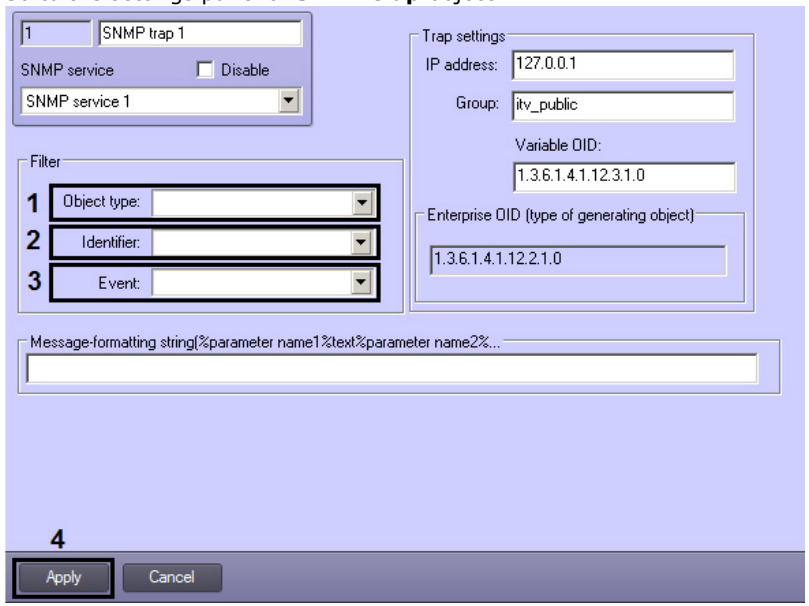

2. From the dropdown list **Object's type** of **filter** group select the object's type for which the required event may be registered (1). If no object's type is selected, all the events concerning all the system objects will be transferred to SNMP-manager.
3. From the dropdown list **Identifier** of **filter** group select the object's identification number, which type has been entered during the second step (2).If the field is not fulfilled, all the events concerning objects of the given type will be transferred to SNMP-manager.
4. From the dropdown list **Event** of **filter** group select the required object for the set during steps 2-3 object (3). If the field is not fulfilled, all the events registered for the given event will be transferred to SNMP-manager.
5. Click **Apply** button to save the changes (4).

Selection of events for transmitting to SNMP-manager is completed.

Configuring the message conversion into SNMP format

SNMP-service implements message conversion into SNMP format. SNMP-message is a sequence of parameters, describing the event. Parameter's name is changed by the value of this parameter in the pattern of SNMP-message with the event registration. Changing the SNMP-message is done in the following way:

1. Go to the settings panel of **SNMP trap** object.

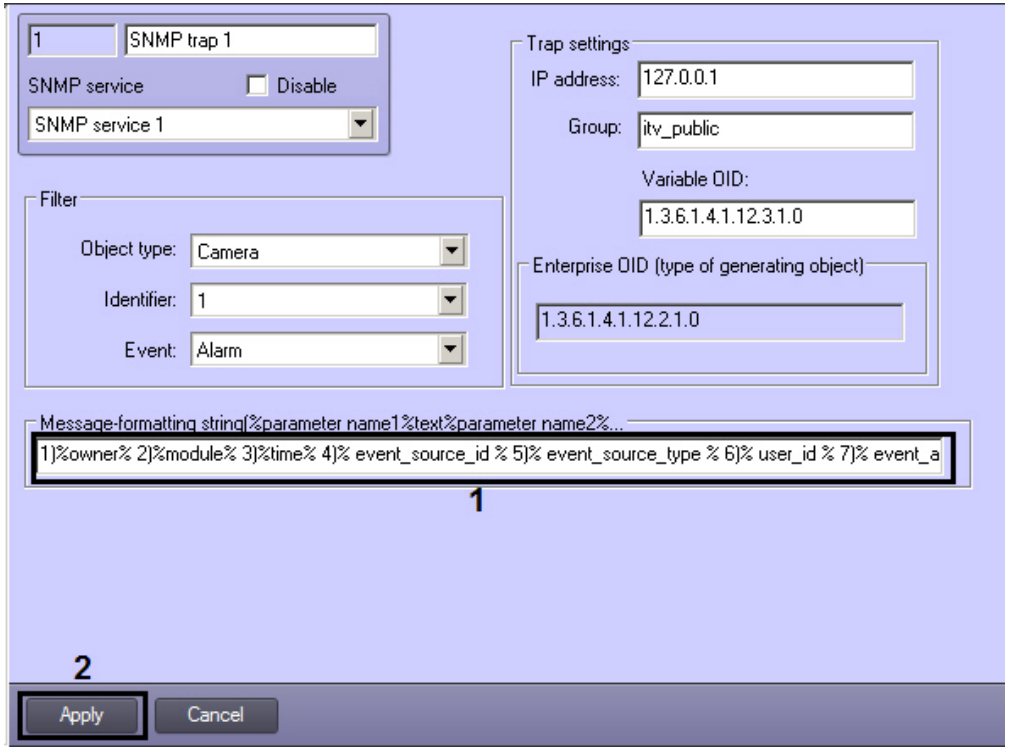

2. Enter in the field **Message's format string (%parameter's name1%text% parameter's name2%...** parameters'names in the required sequence. Description of event's main parameters is given in the table.

Parameter's name	Description of parameter	Availability in the message
%event_action%	Event, registered in the system	Is determined by object's type, for which the event may be registered
%event_source_id%	Object's identification number, for which the event has been registered	
%event_source_type%	Object's type, for which the event has been registered	
%owner%	Computer name, from which the message has been received	Obligatory message's parameters
% time %	Time of event's creation	
%user_id%	Computer's user identification number, from which the message has been received	Optional message's parameters
%module%	Module's name, for which the event has been registered	

Note.

In case when message's format string is not set, SNMP message is formed in accordance with the pattern %event_action%,%event_source_id%,%event_source_type%, %owner%,%user_id%,%module%.

3. To save the changes click **Apply** button.

Changing the pattern of SNMP-message is completed.

Example of SNMP-message, formed in accordance with the pattern 1)%owner% 2)%module% 3)%time% 4)% event_source_id % 5)% event_source_type % 6)% user_id % 7)% event_action % is exemplified in the figure below.

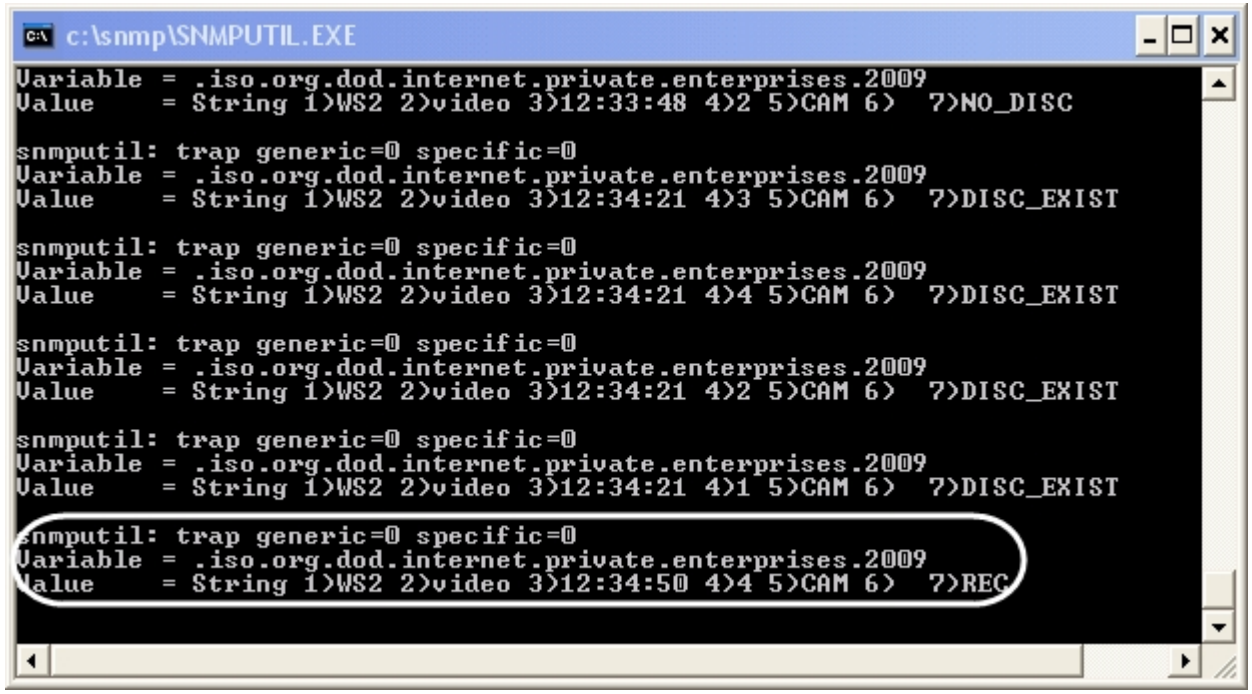

Setting up the trap with SNMP-message

Setting the trap with SNMP-message is done in the following way:

1. Go to the settings panel of **SNMP trap** system object.

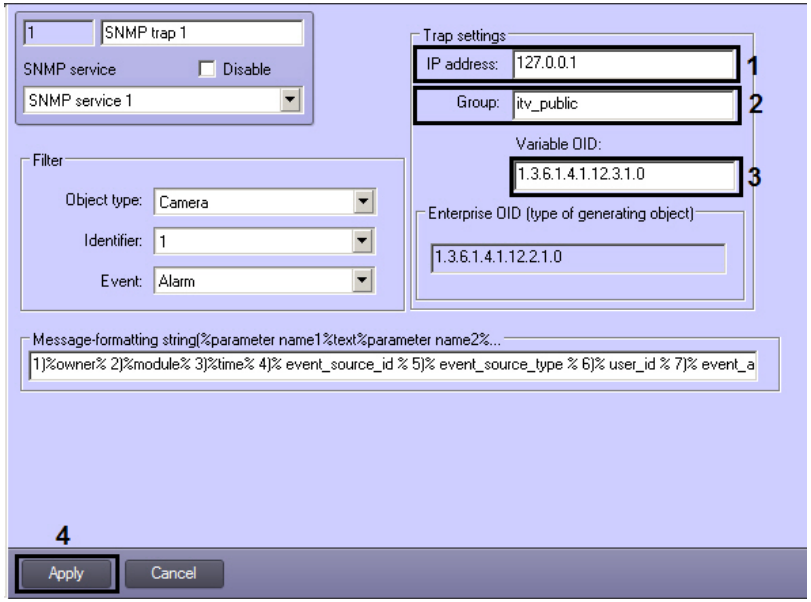

2. In the **ip** field enter IP-address from SNMP-manager, that will receive SNMP-traps with messages concerning the events(1).
3. In the field **Group** enter the community name for SNMP-trap authentication on the computer with installed SNMP-manager(2).

> **Note.**
> Safety model on the basis of communities is realized in *Intellect* program complex.

4. In the field **OID** enter the unique trap's number in the tree of SNMP-objects (3).
5. To save the changes click **Apply** button (4).

Setting up the trap with SNMP - message is completed.

SNMP configuration for traps receiving on remote computer

It is possible to use SNMPUTIL.EXE utility to check the validity of SNMP configuration. In this case SNMP configuration for traps receiving sent by Intellect software on remote computer is performed as follows:

1. Start the **SNMP Trap** on the computer where SNMPUTIL.EXE utility is run.
2. Specify address of this computer in settings of the **SNMP Trap** object (as described in the Setting up the trap with SNMP-message section).
3. Run the SNMPUTIL.EXE utility with "trap" flag.

> **Note.**
> It is not required to run SNMP services on the computer where the **SNMP Trap** object is created.

Setting up and connecting the special keyboard

The *Special keyboard* device is used for efficient control of the main functions of interface objects in the INTELLECT™ software. The *Special keyboard* allows to control the following

system's main functions:

1. Video surveillance
2. Audio control
3. Telemetry
4. Events protocol
5. Macros
6. Sensor/Relay

Setting up the interaction of the *Special keyboard* device is performed with several stages:

1. Connect the *Special keyboard* to the Workplace.
2. Setting up the keyboard layout (programming).
3. Creation and set up of the *Special keyboard* object in the *Intellect* program complex.
4. Setting the keyboard layout's rules of interpretation by Intellect program complex in the ini-file.

Note.
When ini-file is used, that is delivered in the *Intellect* software distributive, possibility of control of 16 cameras on one monitor is realized. To get ini-file, that solves more difficult tasks of interface objects control (e.g. on two or more monitors), one should apply to technical support service of AxxonSoft group company.

INTELLECT™ software supports the following models of the *Special keyboard* device:

1. PROMAG KB-840. Is delivered beginning from version 4.7.5 of Intellect software as a substitute of PROMAG KB-950A model
2. PROMAG KB-950A. Out of production.

Note.
Information on connecting and setting up the PROMAG KB-950A model is the same as for PROMAG KB-840. Layoutin is described in the documentation for INTELLECT™ version 4.7.4 (see AxxonSoft documentation repository).

Use of the specialized keyboard

Connecting the special keyboard to the Workstations

To connect the *Special keyboard* to a workstation, follow the sequence:

1. Connection of the special keyboard to the computer PS/2 port.
2. One by one connection of other special keyboard devices to the special keyboard device (optionally).
3. Connection of standard keyboard to the special keyboard device.

Note.
When *Intellect* software is used, up to ten special keyboard devices may be connected to one computer.

Standard safety regulations should be sticked to when the special keyboard device is being connected to the computer.

To connect the special keyboard device to the computer, do the following:

1. Switch off the computer power supply
2. Disconnect the standard keyboard from the computer system unit.

3. Connect the special keyboard to the computer PS/2 port with the help of interface cable.

> **Note.**
> Before connecting the *Special keyboard* device, make sure that your hands are free of static electricity. To prevent damage to the system unit, it is recommended to use special protectors from static electricity (for example, an anti-static strap).

4. If necessary, connect interface cable of other special keyboard device to PS/2 pin of the connected device
5. Repeat step 4 for all the required devices of special keyboard
6. Connect interface cable of standard keyboard to to PS/2 pin of the last connected special keyboard device.

7. Switch off the power of computer

Connecting the *Special keyboard* device to a workstation is completed.

Setting up the layout of the special keyboard device

The special keyboard, delivered with the INTELLECT™ system, has already been programmed: for every key there is set a special set of characters that are correctly recognized in the system. On default the device layout corresponds to the object special keyboard with 0 identification number. Interpretation rules of special keyboard layout are set in the configuration file «<Intellect>\Modules\keyb_0.ini».

It is possible to reprogram the *Special keyboard* device for the **Special keyboard** object with 1 and over identification number.

Setting up the *Special keyboard* device (programming) is done in two stages:

1. Installation of software for programming the *Special keyboard* device
2. Programming the *Special keyboard* device

Installing the software for programming the Special keyboard device

Programming the keys of the *Special keyboard* device is performed with the help of software that is included in the delivery set of the *Special keyboard* device.

Special keyboard KB840 is programmed with the help of Visual KeyMaker program.

Installing Visual KeyMaker program is done in the following way:

1. Insert the CD from the delivery set of the *Special keyboard* device into CD-ROM driver.
2. The auto explorer of the CD will be run. The given explorer contains a list of items, available for installation and exploring.

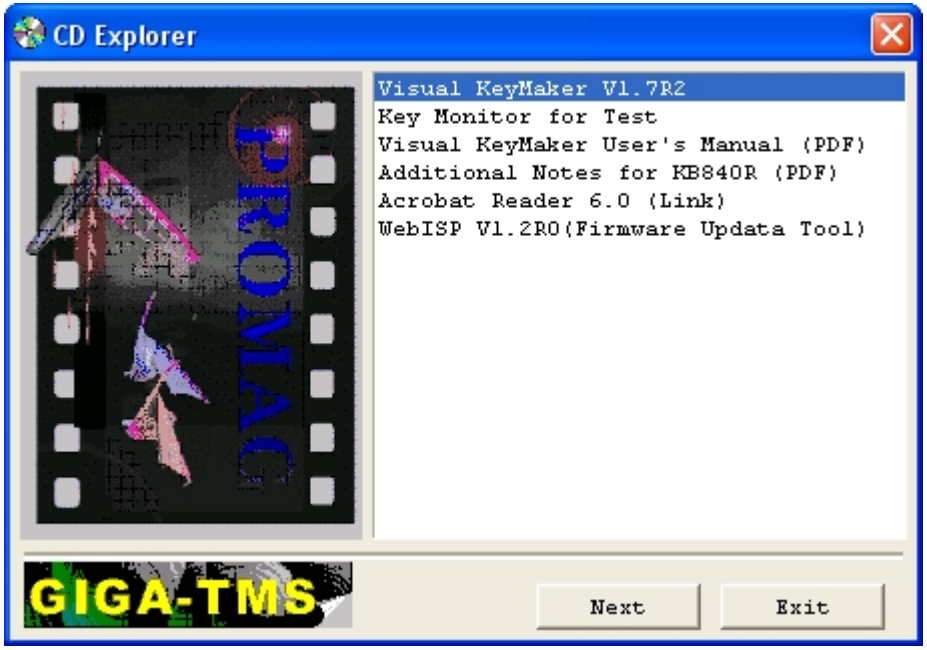

3. Select the value **Visual KeyMaker** from the list of available items and then click **Next**.
4. Preperation window for running InstallShield Wizard will open as a result.

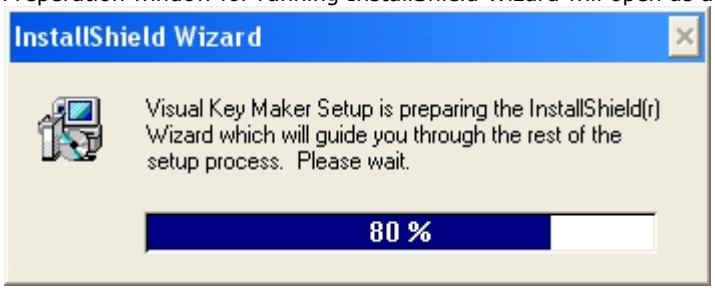

5. When the preparation to run InstallShield Wizard is over, a welcome message dialog window of the installation will be displayed. Click **Next** to continue, click **Cancel** to cancel installation.

6. Set the directory of program installation Visual KeyMaker. To change the directory, given on default, click **Browse**. In the opened dialog window **Choose Directory** select the required folder and then click **OK**.
7. Click **Next** to continue, click **Cancel** to cancel installation.

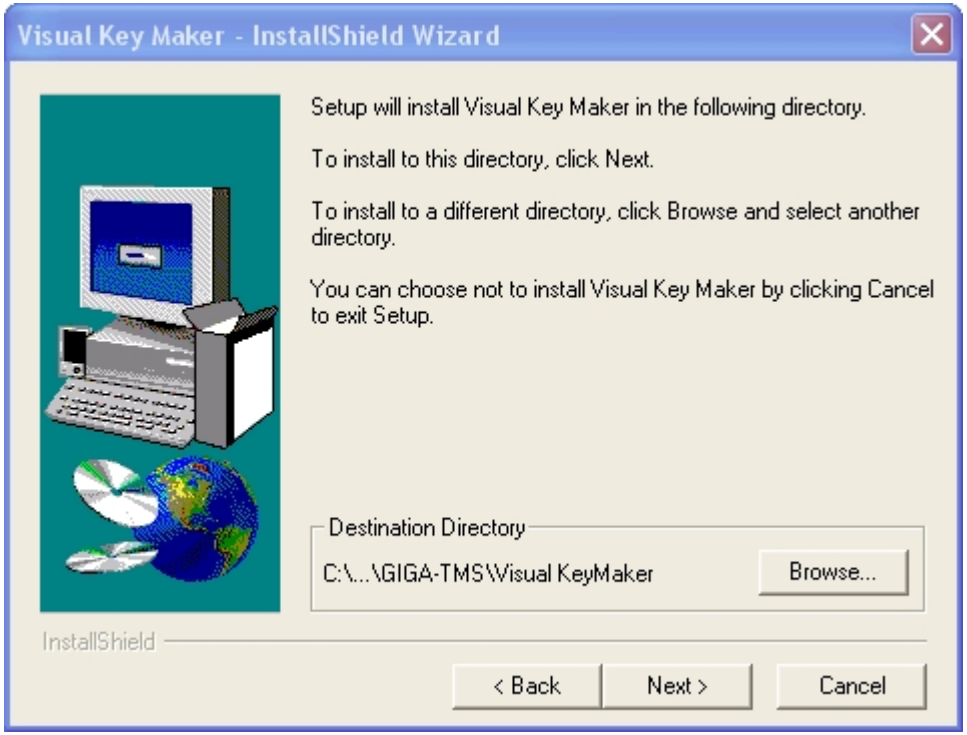

8. Enter the name of a program folder, created in Windows OS **Start** menu (displayed by selecting **Start -> All programs**), where the launching commands for this program will be displayed.

9. Check installation parameters, set during step 6.To change installation parameters click **Back**. To run installation process, click **Next**. To exit from installation program click **Cancel**.

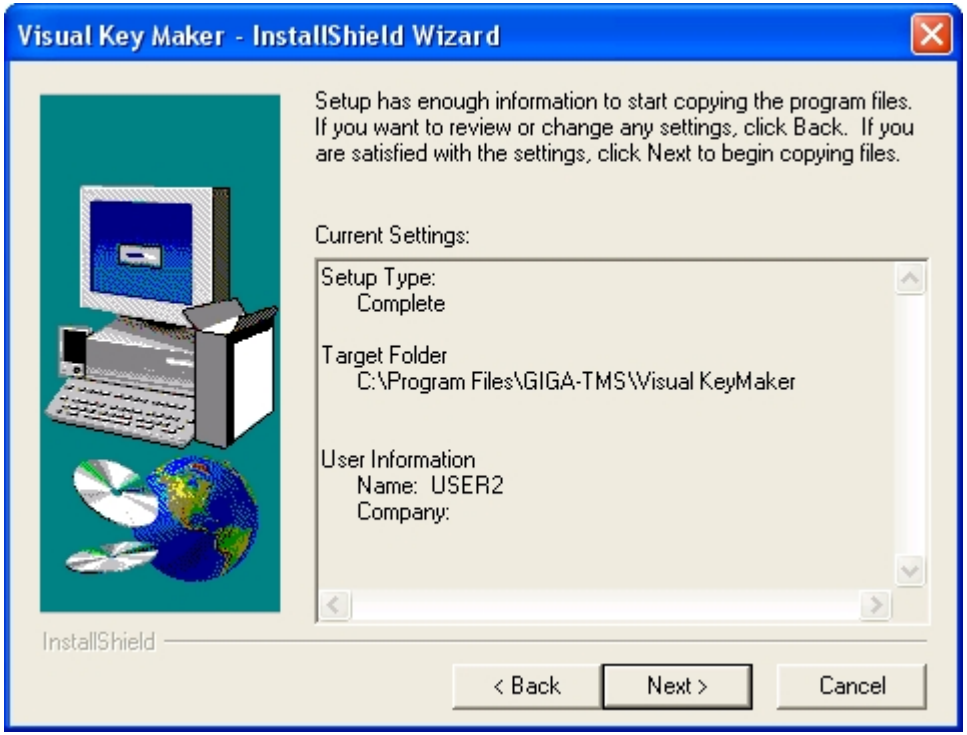

10. After copying the files, the folder, created in OS Windows **Start** menu and ending the installation dialog window will open.

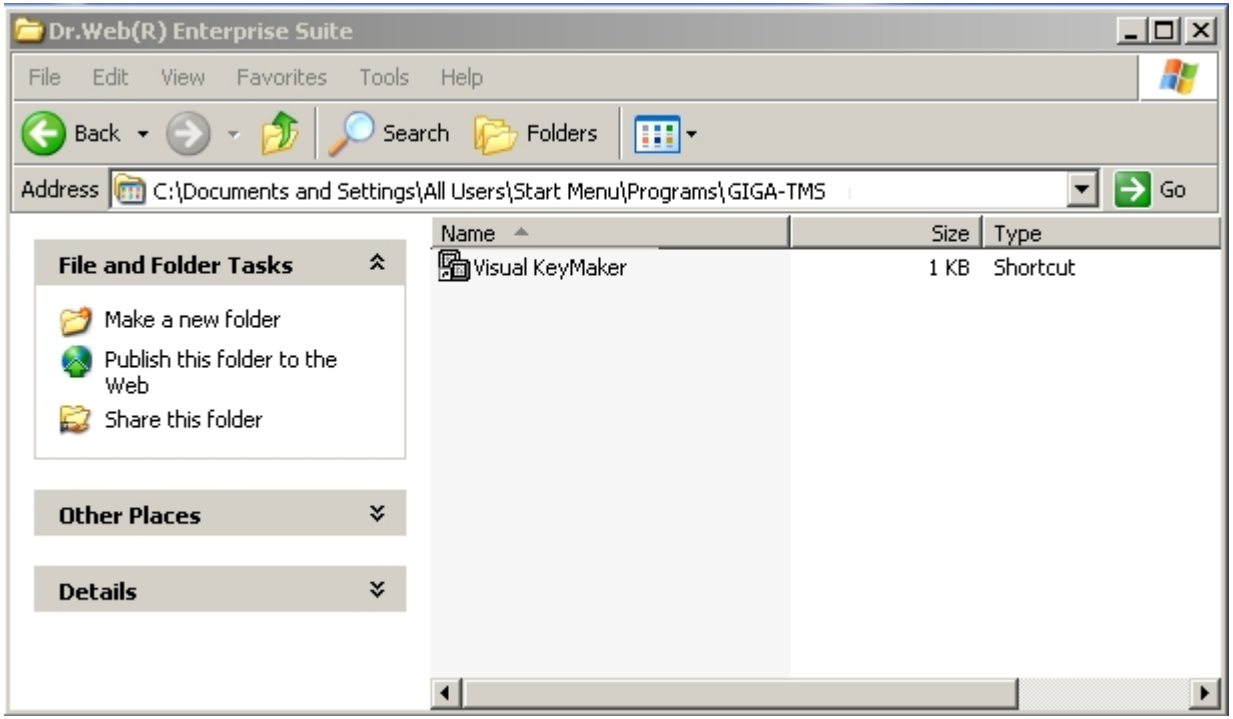
Dr.Web(R) Enterprise Suite
File Edit View Favorites Tools Help
Back Search Folders
Address C:\Documents and Settings\All Users\Start Menu\Programs\GIGA-TMS
Go
File and Folder Tasks
Make a new folder
Publish this folder to the Web
Share this folder
Other Places
Details
Name Size Type
Visual KeyMaker 1 KB Shortcut

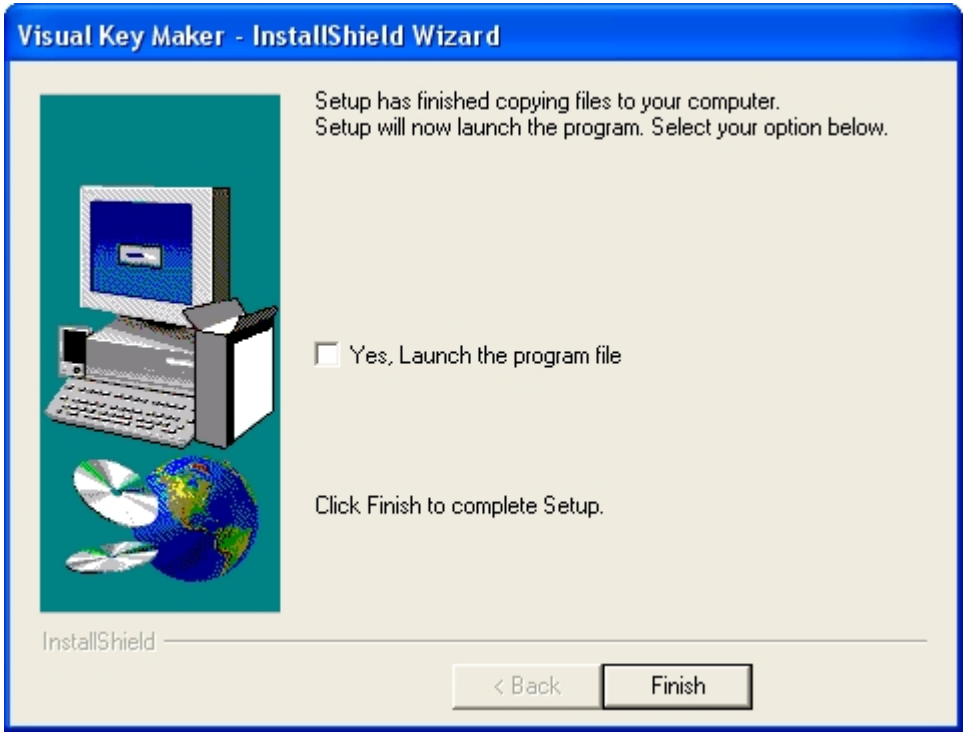

11. To launch Visual KeyMaker program after ending the installation, set **Yes**, **Launch the program file** checkbox.
12. Click **Finish** to finish installation.

Installation of Visual KeyMaker is completed.

Programming the Special keyboard device in Windows OS

> **Note.**
> Detailed information about programming the *Special keyboard* is given in official manual Visual KeyMaker.

To program the *Special keyboard* device do the following:

1. Connect the *Special keyboard* device to computer's COM-port with the help of connection plug RS-232, that is included in the delivery package.

> **Note.**
> Connection of the *Special keyboard* device to serial port should be performed, when the power of the computer is disconnected. Otherwise the device may be damaged.

2. Run Visual KeyMaker on the computer with connected *Special keyboard* device. It is launched from the Windows start menu: **Start** -> **Programs** -> **GIGA-TMS** -> **Visual KeyMaker**.

> **Note.**
> Visual KeyMaker program may be also launched by the Windows **Run** command, which is displayed from the **Start** menu: **Start->Run**. Enter the full path to the file, which launches the VKeyMaker.exe application, in the Open field.

3. As a result the **Visual KeyMaker** interface box will open. In case when *Special keyboard* device is correctly connected to computer's COM-port, COM value will be displayed in the bottom part of the interface box.

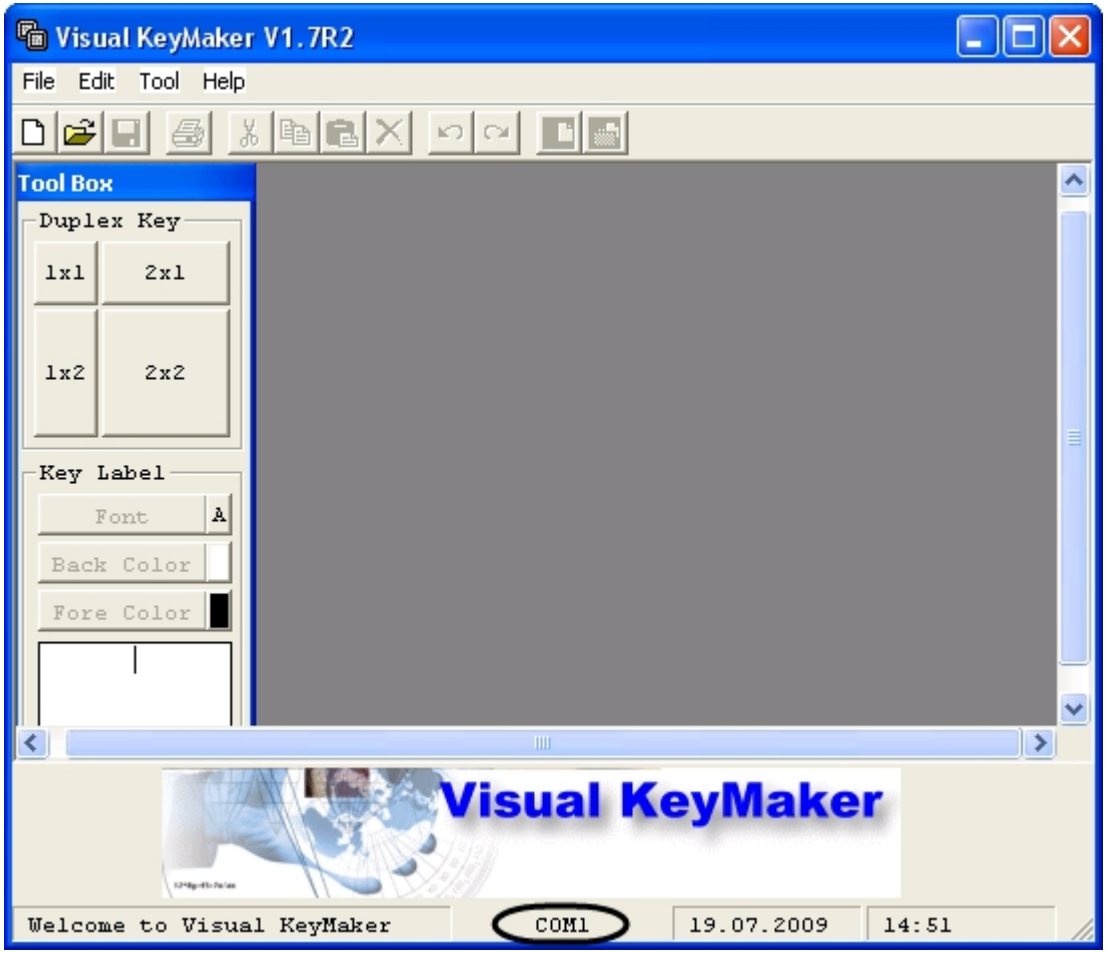

4. Open file with settings for the *Special keyboard* device programming. For this run the main menu's command **File -> Open**, in the standard dialog window **Open** select the required file and click **Open**.

> **Note.**
> To get the file with settings for the *Special keyboard* device programming apply to Technical support service of AxxonSoft company.
> File with settings for PROMAG KB-840 model programming has tab. extension. File name corresponds to the suggested identification number of the Special keyboard object in Intellect software and a form kb840-0n, where n – object number from 0 to 9. In case, when one Special keyboard device is used, it is recommended to use kb840-00.tab settings file.

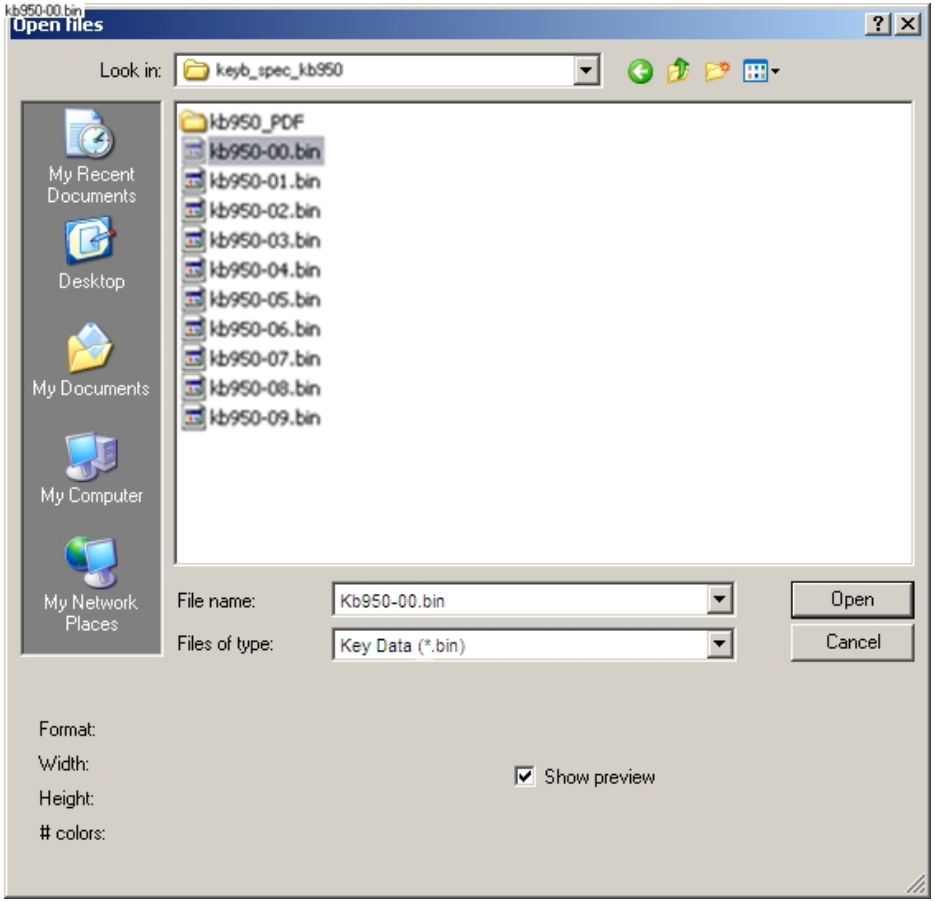

5. In result settings for programming the *Special keyboard* device will be displayed in the Visual KeyMaker interface box.

> **Note.**
> Every key in the layout has a set of symbols of the kind (<'>, <n>, <xx>) – see figure below. Symbols have the following value:
> <'> - symbol, that let *Intellect* software recognize, that command has come from the *Special keyboard* device
> <n> - single-valued identification number of the **Special keyboard** object, corresponding to the connected device
> <xx> - two-digit key number (numeration is performed from the left to the right, top-to-bottom).

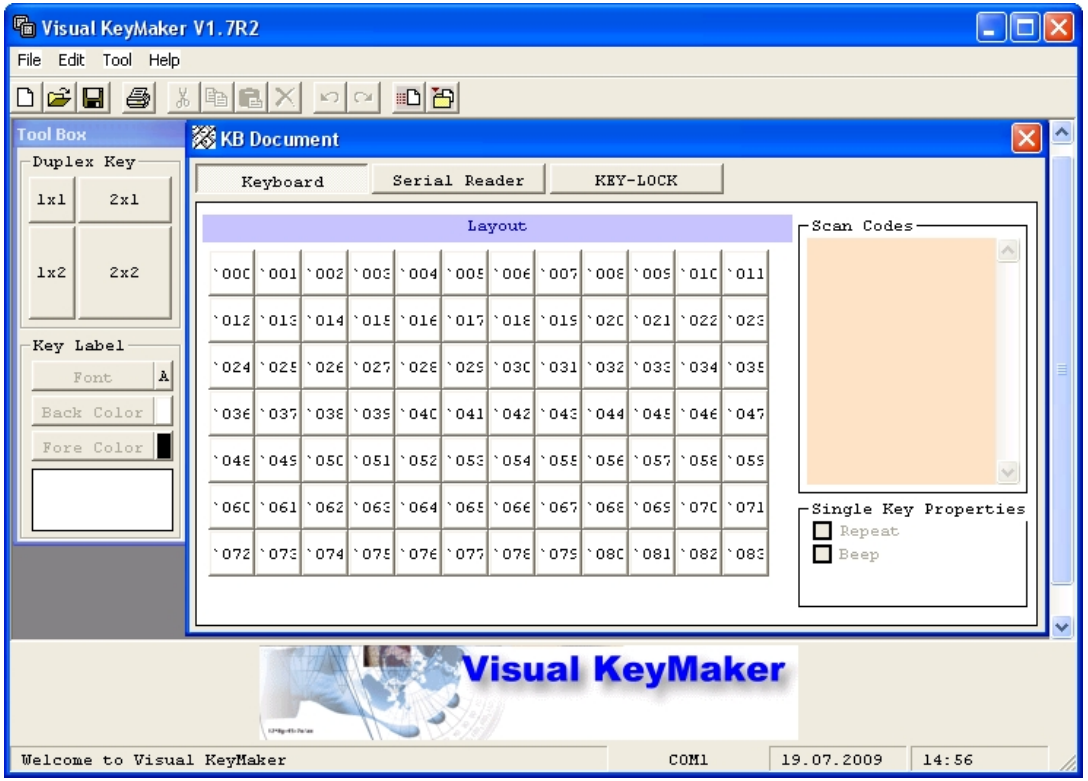

6. To apply settings for programming the *Special keyboard* device run the command for the main menu: **Tool -> Download to KB**.
7. Indicator of command's execution will be displayed in the window Progress Bar.

> **Note.**
> Slowdown of all processes in OS Windows is possible during programming operation.

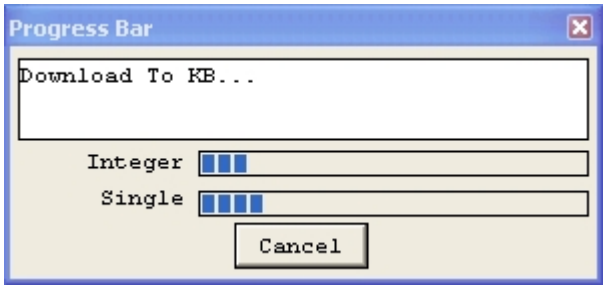

8. After successful operation **Download Reader Settings to KB OK** will open. Click **OK** to close the window.

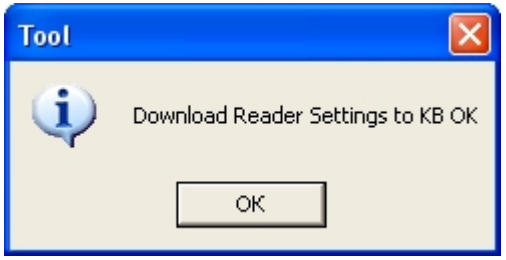

9. Run the command of the main menu: **File** -> **Exit.**
10. As a result dialog window prompting to save the file with the *Special keyboard* device layout will open. Click **No** to exit without saving the layout.

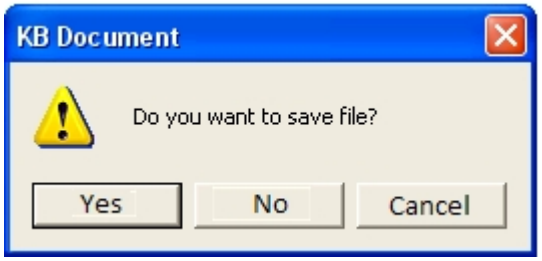

11. Connect the power of computer and then disconnect the *Special keyboard* device from COM-port.

Programming the *Special keyboard* device is completed.

> **Note.**
> After programming the *Special keyboard* device it is recommended to sign on the opposite side of the device its number (n) based on the used number for programming kb840-0n.tab file.

Setting up the Keyboard object in INTELLECT™ software

To create and set up the *Keyboard* system object in INTELLECT™ software, follow the sequence:

1. Open the **Hardware** tab in the **System Settings** dialog box (1).

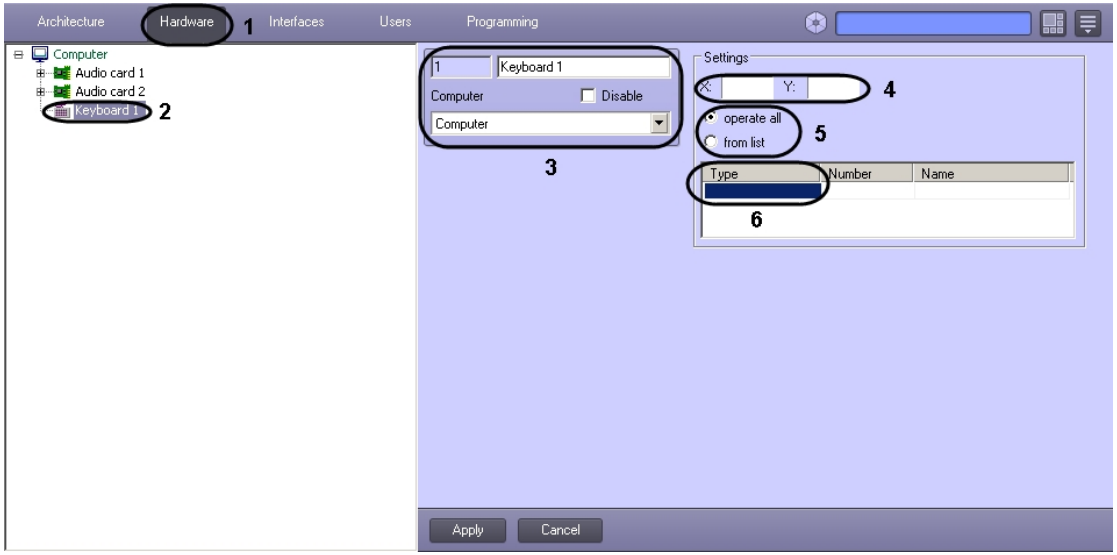

2. Create the **Keyboard** system object on the base of the **Computer** object or select the relevant object in the objects tree on the **Hardware** tab of *Intellect* settings panel (2).
3. Enter the ID of the created object, its name and select the **Computer** system object to be the parent one for the **Keyboard** object (3).

> **Note.**
> The object ID should be the same as the file number used for programming the device (see the Programming the Special keyboard device in Windows OS section) and should be within the range from 0 to 9.

The **Computer** system object should match the computer, to which the *Special keyboard* device is connected.

4. Enter the coordinates of the interface box (coordinates of the left upper corner), used to enter the object's number, which should be controlled by the *Special keyboard* device (4). Coordinates are given in percentage in accordance with horizontal and vertical screen sizes correspondingly.
5. It is necessary to define what interface objects of the distributed video surveillance system will be controlled by the *Special keyboard* device (5). The **Control all** item is selected, Operator can control all the interface objects, that corresponds to the installation of configuration file. The **From the list** item allows control interface objects, denoted in the list.

> **Note.**
> Interface objects are controlled when a command is sent to these objects by clicking a key on the keyboard. For instance, when LOCK and UNLOCK commands are sent, interface objects are locked or unlocked.The correspondence between a command and the key on the keyboard is described in ini-file (see Settings the interpretation rules of the Special keyboard layout by Intellect program complex section).

6. It is necessary to define what interface objects of the distributed video surveillance system will be controlled by the *Special keyboard* device (6). In the **Type** and **Number** colu mns it is necessary to select interface object that is controlled by *Special keyboard* device, in the **Name** column the name of the selected interface object is automatically displayed.

Settings the interpretation rules of the Special keyboard layout by Intellect program complex

Pressing of any button on the *Special keyboard* device corresponds to certain option activation in INTELLECT™ software. The buttons and options lookup table is described in the files with an ini extention. The name of the file with an .ini extension should like : keyb_n, where n is the *Special keyboard* device identification number (from 0 to 9) in the system.

In case, when one *Special keyboard* device should be connected to a workstation, standard keyb_0.ini file, that is included in the delivery package, is recommended to be used. After installation this file is located in the folder <Intellect>\Modules.

In case, when more than one *Special keyboard* device should be connected to a workstation, a set of files keyb_n.ini should be used. These files are to be located in the folder «<Intellect>\Modules».

Note.
A standard keyboard can be used as the special one. For this set the "1" value for the ProcessAll parameter that is described in details in Registry keys reference guide. In this case keypress on the standard keyboard will be processed in Intellect according to the ini file.

The use of standard ini-file

The following functions of Intellect software may be realized with the use of ini-file:

1. Hide/display the video surveillance monitor.
2. Change the number of video surveillance windows on the Monitor.
3. Layout of video surveillance windows.
4. Listing of video surveillance windows.
5. Enabling the surveillance window.
6. Scaling of images in video surveillance window.
7. Arming and disarming the cameras.
8. Events' recording in accordance with the command.
9. Playback of video recordings.
10. Archive navigation.

Standard ini-file allows managing 16 cameras on one video surveillance Monitor. The given functional is realized by the Special keyboard object with 0 identification number.

Preparation to use the functionality, provided by standard ini-file, is done in the following way:

1. Open keyb_0.ini file, located in the catalogue <Intellcect>\Modules.

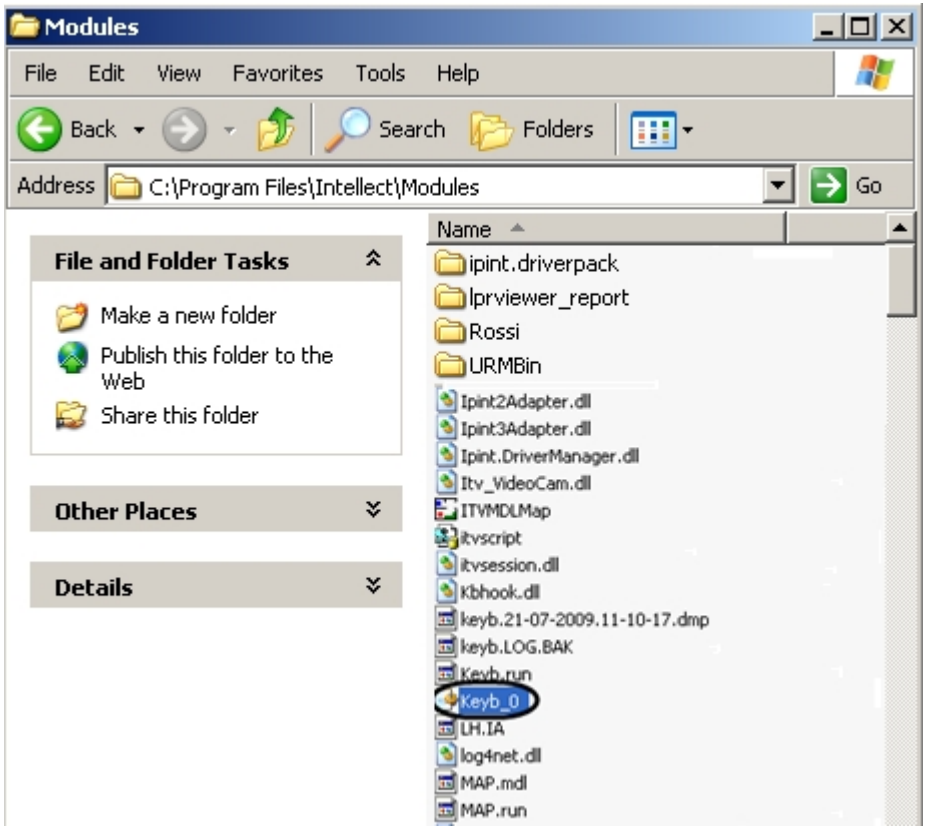

2. Make sure, that value of «targets» parameter corresponds to Monitor object's identification number, which control should be performed with the use of Special keyboard device. Otherwise Monitor object's number should be changed to the required value in the line «targets». After changing the value of «targets» parameter save the changes in keyb_0.ini file.

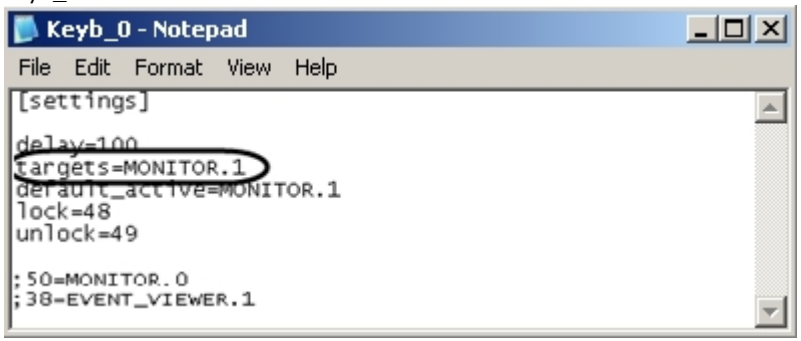

3. Close keyb_0.ini file.
4. Visual form of Special keyboard device layout is given in the figure below.

Note.
To get layout file it is necessary to apply to Technical support service of AxxonSoft. The given layout should be printed, cut the symbols and put them to the keys of the *Special keyboard* device.

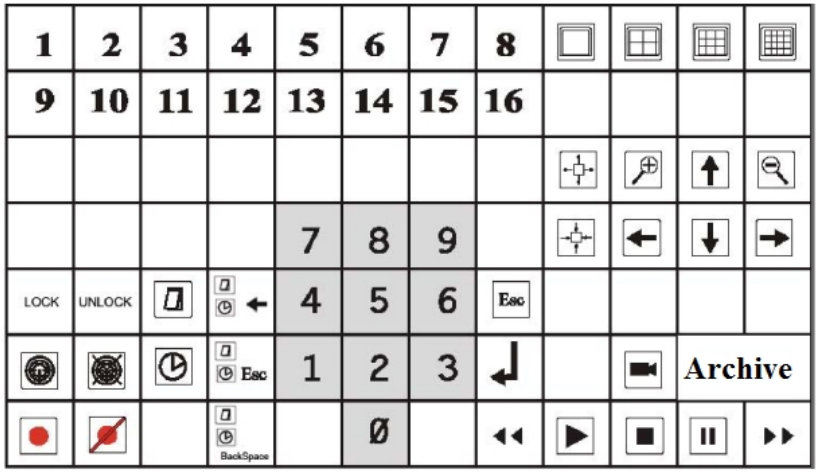

5. Check the interaction of *Special keyboard* device and Intellect software in the following way:
    a. launch the INTELLECT™ software.
    b. display the video monitor, controlled by the *Special keyboard* device.
    c. click the *Special keyboard* buttons in turn.
6. In case, when actions are not carried out when keys of *Special keyboard*device are pressed, check the following issues:
    a. Special keyboard" connection to a workstation.
    b. Special keyboard device layout setup.
    c. Special keyboard device setup in INTELLECT™ software.
    d. Setting the Intellect software interpretation rules for special keyboard device layout.

Preparation to use the functionality, provided by standard ini-file, is completed. The special keyboard device is ready for work.

Note.
To set the interpretation rules for additional keys of special keyboard device standard ini-file has to be modified (see. Editing the standard ini-file(optionally)).

Setting up Intellect program software with the use of several Special keyboard devices

It is possible to connect several *Special keyboard* devices simultaneously to a workstation and control the necessary interface objects with the help of it.

Note.

On default one *Special keyboard* device is provided for controlling 16 cameras on one video surveillance Monitor.

Preparation to use several *Special keyboard* devices in Intellect software is done in the following way:

1. Prepare to use functionality, provided by standard ini-file, in accordance with step by step instruction the Use of standard ini-file.The given functional is realized by the *Special keyboard* object with 0 identification number
2. Copy ini-files to catalogue«<Intellect>\ Modules» to use additional devices the Special keyboard. keyb_n.ini file corresponds to every additional *Special keyboard* device , , where n is the *Special keyboard* device number (from 0 to 9) in the Intellect software.

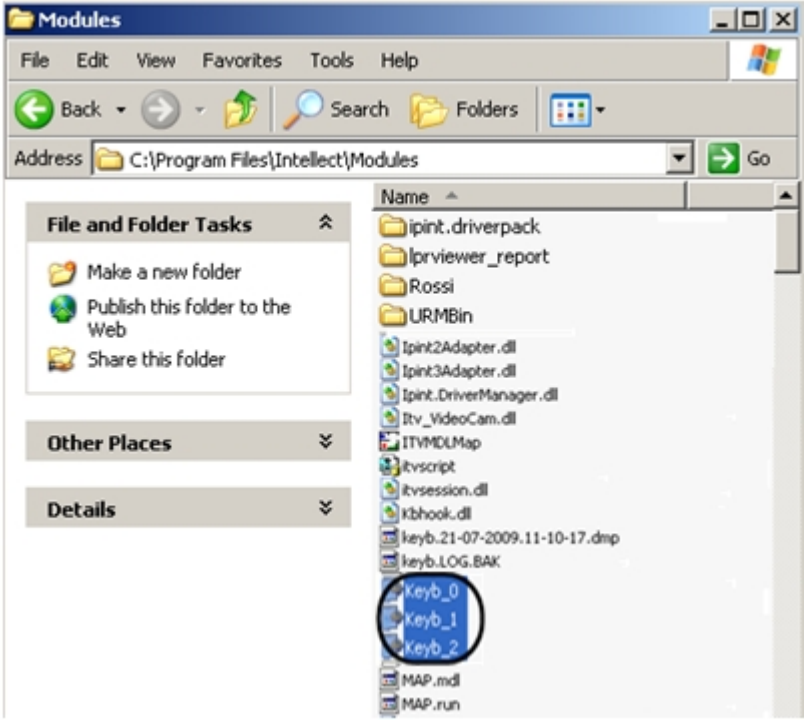

   The number of copied files corresponds to the number of connected additional *Special keyboard* devices.
   To get ini-files one should apply to Technical support service of AxxonSoft company.
3. Get ready to use functionality, provided by copied ini-files, in accordance with step by step instruction the Use of standard ini-file. The given functional is realized by the *Special keyboard* objects with ID from 1 and above.

Preparation to use several *Special keyboard* devices in Intellect software is completed. *Special keyboard* devices are ready to work.

Editing the standard ini-file(optionally)

It is possible to edit standard ini-file to change interpretation rules of the *Special keyboard* device layout.

Editing ini-file is done in the following way:

1. Open the required configuration file keyb_n.ini, where n – identification number of the corresponding **Special keyboard** object.
2. Find parameter– two digits number of the required key (is set during programming-see. Programming the Special keyboard device in Windows OS)

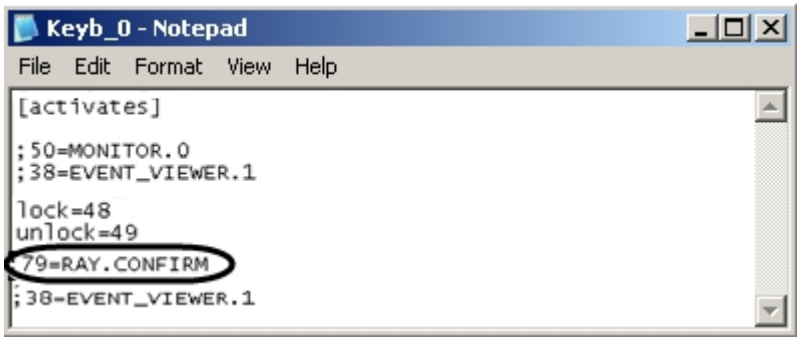

3. When there is commentary symbol «;» in the line with parameter and/or in the headline of parent section delete it.
4. Set the value of the parameter- *Intellect* software command, that has to be carried out pressing the button.
5. In case, when the parameter is met in the file not by once, enter the commentary symbol before its name in all the lines, that are not used.
6. Repeat steps 2-5 for all the required keys of the *Special keyboard* device.
7. Save the changes and then close configuration file.

Editing the ini-file is completed.

Configuring the System restart service

General information on the System restart service module

The System restart service is designed to control the workability of *Intellect* software modules and their restart if there is no response during the specified time interval. Software as well as hardware control of workability can be used.

The System restart service allows performing the following actions if there is no response from the module:

1. Computer restart (hardware operability testing, additional devices are to be enabled). The computer will restart if the slave.exe process is not active.
2. Module restart. Only module which is not replying to requests will restart if there is no response from this module.
3. Core restart. The Intellect core will restart if there is no reply from the module.

The System restart service is configured on the settings panel of the **System restart service** object. This object is based on the **Computer** object in the **Hardware** tab of the **System settings** dialog box.

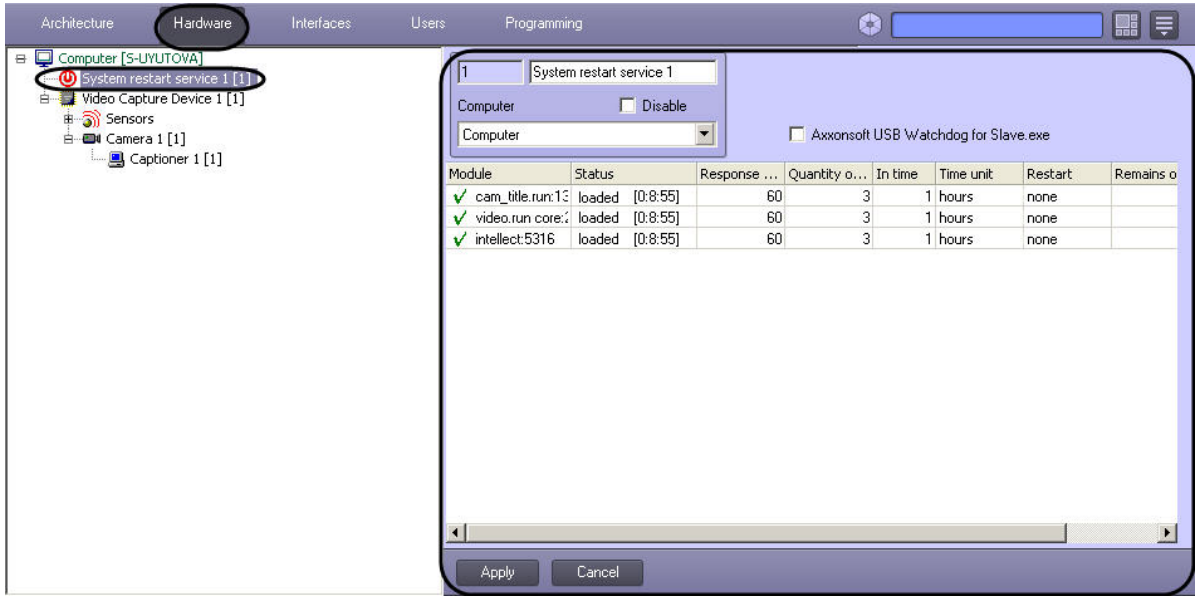

Activating the hardware control of workability

Connect the AxxonsoftUSBWatchDog cable to activate the system of hardware control of workability (see Installing and configuring security system components guide).

To activate the hardware control of workability do the following:

1. Go to the settings panel for the **System restart service** object.

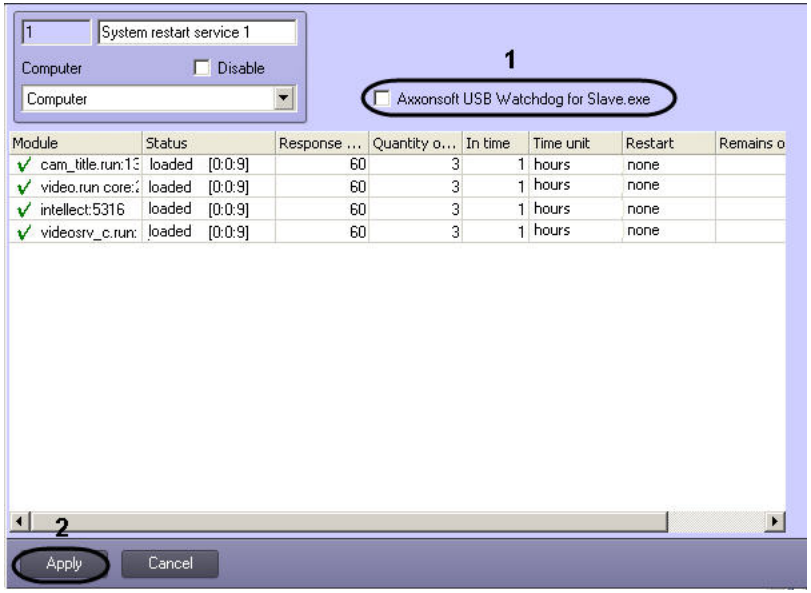

2. Set the **Axxonsoft USB WatchDog for Slave.exe** checkbox (1).
3. Click the **Apply** button (2).

Hardware control of workability is now activated.

Configuring the software control of workability

Software control of workability allows restarting the module or Intellect core if there is no response from the module.

To configure the software control of workability, do the following:

1. Go to the settings panel for the System restart service object.

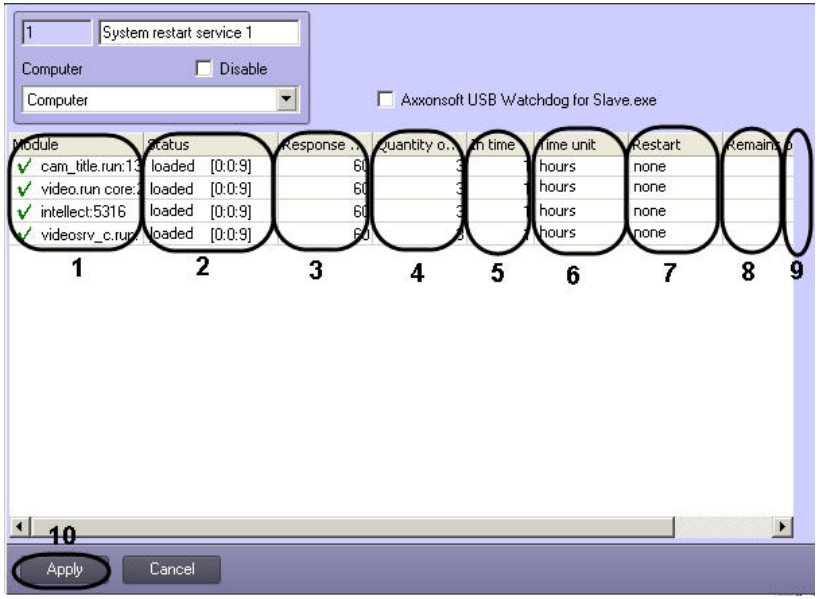

2. The list of run modules on this computer is displayed automatically in the **Module** column (1).

> **Note.**
> Modules with the **In process** state are marked with ✓ sign. Modules with the **No response** state (red field) or **Shutdown** are marked with **!** sign

3. The current state of modules is automatically displayed in the **Status** column (2). In the square brackets the time of module working since the last restart is displayed in HH:MM:SS format.
4. In the **Response timeout**, sec, type-in the time period in seconds during which the response from the module will be waited (3).

> **Note.**
> The system will restart if there is no response from the module within the waiting interval.

5. In the **Quantity of restart** field, type-in the maximum of restarts (module or Intellect core) that can be performed within the specified time period (4).
6. In the **In time** field, type-in the new value and/or select in the **Time unit** dropdown list the required metric unit of period to change the value of time period during which the maximum restarts can be performed (5-6).
7. In the **Restart** dropdown list, select the required method of restart (7).
   a. Select the **module** method, to restart module without response.
   b. Select the **core** method, to restart the Intellect core without response from the module.

> **Note.**
> Select the **None** value if the restart is not needed when there is no response from the module.

8. The remaining number of restarts within the specified time period is automatically displayed in the **Remains of restarts** column (8).

Note.
The module changes over to the **Shutdown** state if the number of performed restarts exceeds the maximum.

Note.
The remaining reboots counter may be reset in the following circumstances:
a. If the period of time in which the maximum number of reboots can be performed has elapsed but the number of reboots performed does not exceed the maximum, then the counter will be reset upon a new reboot.
b. If the period of time in which the maximum number of reboots can be performed has elapsed and the maximum number of reboots has been performed, then the module will reboot and the counter will be reset.

9. In the **Memory (Mb)** field enter the value of the memory threshold consumed by module. Exceeding of this value requires the system restart (9)
10. To save changes, click the **Apply** button (10).

The software control of workability is now configured.

Getting the information on memory consumption for processes

To the slave.log log file corresponding to the **Computer** object based on which the **System restart service** object is created the information about memory consumption by processes run by the *Intellect* software is recorded once in a minute.

Messages look like this:

!WARNING <<<process information>>> name="video.run", committed memory is 83001344 bytes (79MB, 81056KB). DELTA is 22687744 bytes (21MB, 22156KB).

The DELTA value is the difference between the current and previous values of memory consumption by this process.

Configuring long-term archiving

Purpose and implementation of long-term archiving in the Intellect software

The *Intellect* software allows creating the backup copies of video and audio recordings. The *Long-term archive* and *Long-term audio archive* modules are used for creation of backup multimedia archives. When making a backup copy, the *Intellect* software copies video and audio recordings from the main archive of the videoserver to different storage devices.

The *Long-term archive* module copies the video archives received from the specified cameras to any of the available local or network hard drives. Copying of audio archive from specified microphones which are included in the digital video surveillance system is performed while using the *Long-term audio archive* software module. Archive files are copied on loop on any of connected local disks as the main archive is recorded (see the General information on video archiving section)

The *Long-term archive* module supports the following functions:

1. Copying the video archive to local or network hard drives, or USB storage.
2. Changing the frame rate of the signal at the time of saving it to *Long-term archive*.
3. Changing the rate of data transfer via a local network.
4. Setting up the periodicity of backup archiving.
5. Cyclic copying of the data to the connected storage devices.
6. Viewing the video archive from *Long-term archive* on the video surveillance monitor.

Note.
To record the audio archive together with the video archive, configure the **Long-term audio archive** object (see Configuring the Long-term audio archive module section).

A folder named VIDEO which holds the backup multimedia archive is created on the specified storage devices when setting up the corresponding objects.

The backup copying module can be controlled:

1. Manually using special interface objects.
2. Automatically using the built-in programming capabilities of Intellect software – macros and scripts.

Configuring the Long-term archive panel object

Copying video sequence to the Long-term archive

Configuring the Long-term archive module

The *Long-term archive* module is used to make backup copies of the video archive from the videoserver. The *Long-term archive* module copies the video archives received from the specified cameras to the specified storage device.

Note.
A remote workstation, where the *Long-term archive* is installed, is to have data about servers archive so that the video archive being copied uniformly from specified cameras. For this the remote workstation gets data about archive indexes from the server once in 30 seconds. After system restarting, data exchange is stopped until the *Long-term arc hive* is started.

The *Long-term archive* module is configured by an **Long-term archive** system object. When the **Long-term archive** object is created, an **Long-term audio archive** object with the same identifier is created automatically.

Configuration procedure for the Long-term archive object

To configure the **Long-term archive** object, do the following:

1. Create the **Long-term archive** object on the base of the **Computer** system object (see Creating the Long-term archive object);
2. Select and configure cameras to copy the video archive to the *Long-term archive* (see Selecting and configuring the cameras for the Long-term archive or Selecting cameras as a group for the Long-term archive);
3. Set the parameters of video archive transmission over LAN (see Setting the parameters of video archive transmission over LAN);
4. Select disks to store the *Long-term archive* module (see Selecting disks to store the archive of the Long-term archive module).
5. Configure the video archive scaling when it is copied to the *Long-term archive* (see Configuring the scaling of the video archive);
6. Configure the schedule of video archive copying to the Long-term *archive* (see Configuring the schedule of the video archive copying);

   Note.
   It is recommended to restart the *Intellect* software after performing actions described above for correct using of **Long-term archive** object settings.
7. Configure the **Panel of Long-term archive** interface object (see Configuring the Panel of Long-term archive object).

Creating the Long-term archive object

To create the **Long-term archive** object, do the following:

1. Select the required computer object on the **Hardware** tab of **System settings** dialog box (1).

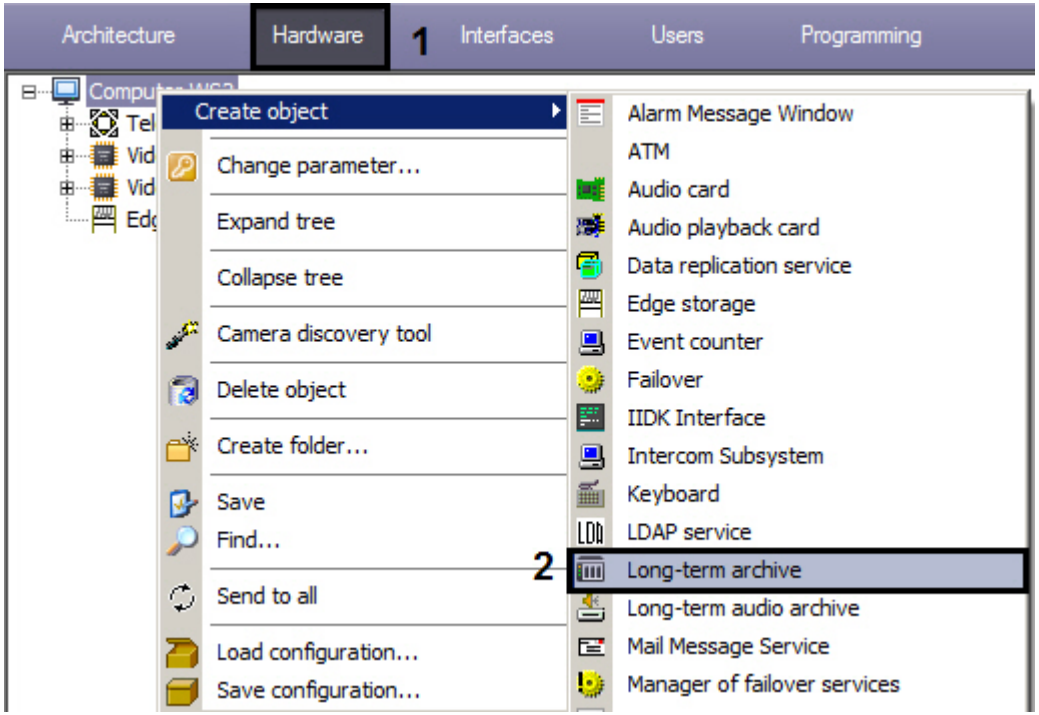

2. Click right mouse button upon the selected **Computer** object and select **Create object -> Long-term archive** in the context menu (2).
3. In the appeared window set the number and name of the **Long-term archive** object and then click the **Apply** button.

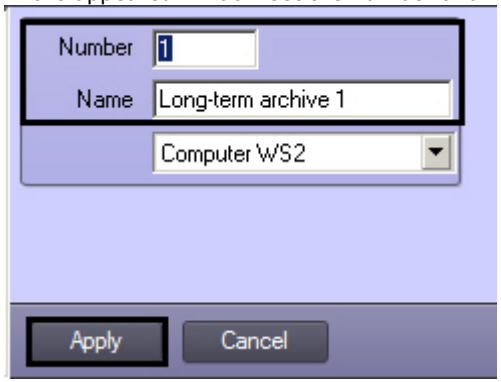

> **Note.**
> The settings panel for the **Long-term archive** object is displayed as a result.

4. Repeat steps 1-3 for all required **Computer** and the **Long-term archive** objects.

The **Long-term archive** object is now created.

Selecting and configuring the cameras for the Long-term archive

There are two ways to select and configure cameras for copying the video archive to the *Long-term archive*:

1. Separately. The settings panel for the **Long-term archive** object is in use.
2. Integrated selection. The **Add/Edit cameras** dialog box is in use.

> **Note.**
> The order of cameras' complex selection for copying the video archive to the *Long-term archive* is described in the Integrated selection of cameras for the Long-term archive section.

To select cameras on the settings panel of the **Long-term archive** object, do the following:

1. Go to the settings panel for the **Long-term archive** system object.
2. In the **Number** column of the **Cameras** group, select the name of the required video camera (1).

> **Note.**
> To select all the cameras registered in the system, click the **All** button (2).

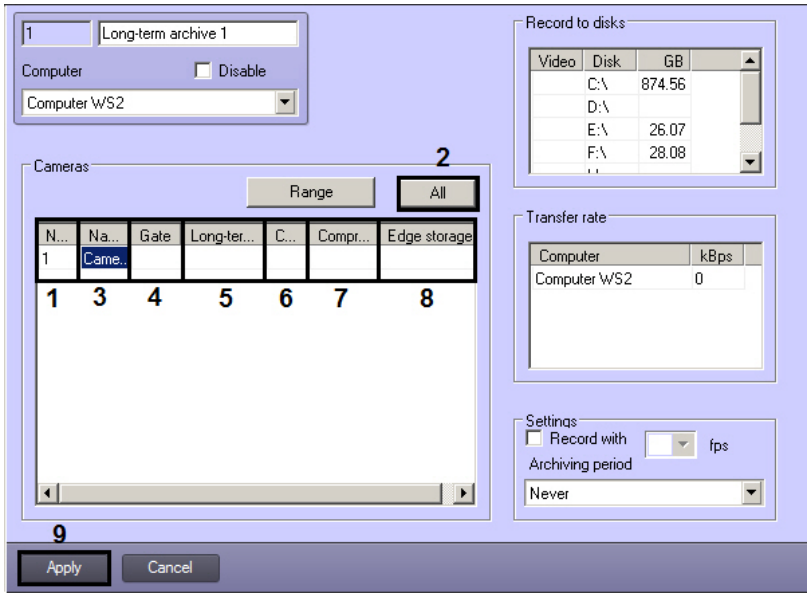

3. As a result the name of the selected camera is automatically displayed in the **Name** column of the **Cameras** group (3).
4. If a video archive from the selected camera is to be received via the **Videogate** object, then select the name of this object from the **Gate** drop-down list (4).
5. If a video archive from the selected camera is to be transmitted from another **Long-term archive** object, select the name of this object in the **Long-term archive** drop-down list (5).
6. To change the procedure of video signal compression during the record to the **Long-term archive**, select the required procedure of compression from the **Compressor** drop-down list (7).The value in the **Compression** list is to be selected if the compressor is specified (6).

7. To change the level of video signal compression during the record to the *Long-term archive*, select the required level of video signal compression from the drop-down list in the **Compression** column (6). The level of bideo signal compression will increase from 0 (no compression) to 5 (maximal compresion).

> **Note.**
> Recompression is performed on the side of the *Long-term archive*.

8. In the **External storage** dropdown list select the name of the object corresponding to the external storage of IP device from which video recordings are to be imported to the Long-term archive (8). For more details see Configuring the access to the archive in edge storage section.
9. Repeat steps 2-8 for all the cameras.
10. To save all the changes, click the **Apply** button (9)

The cameras on the settings panel of the **Long-term archive** object are now selected.

Selecting cameras as a group for the Long-term archive

There is an opportunity of integrated selection and editing of cameras' parameters for copying the video archive to the *Long-term archive*.

Integrated selection can be performed in the following way:

1. Go to the settings panel for the **Long-term archive** system object, click the **Range** button in the **Cameras** group (1).

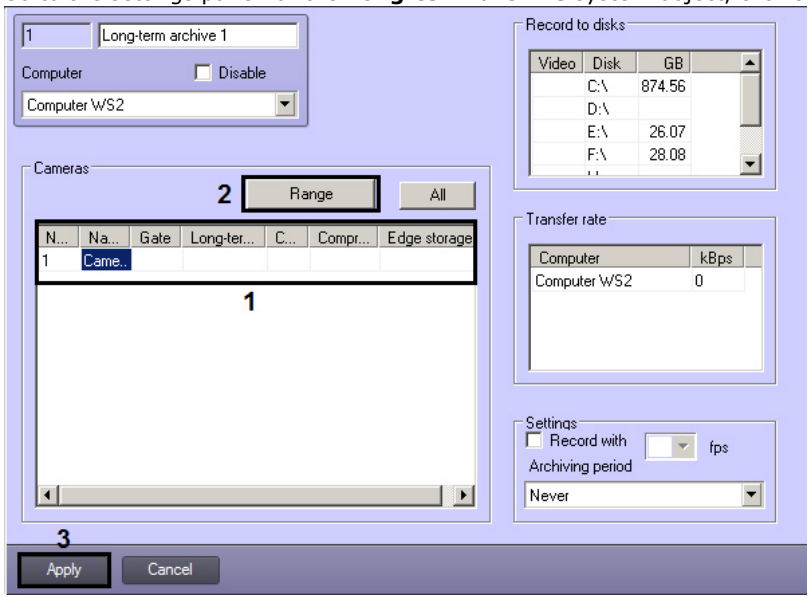

2. As a result the **Add/Edit Camera Objects** dialog box opens.

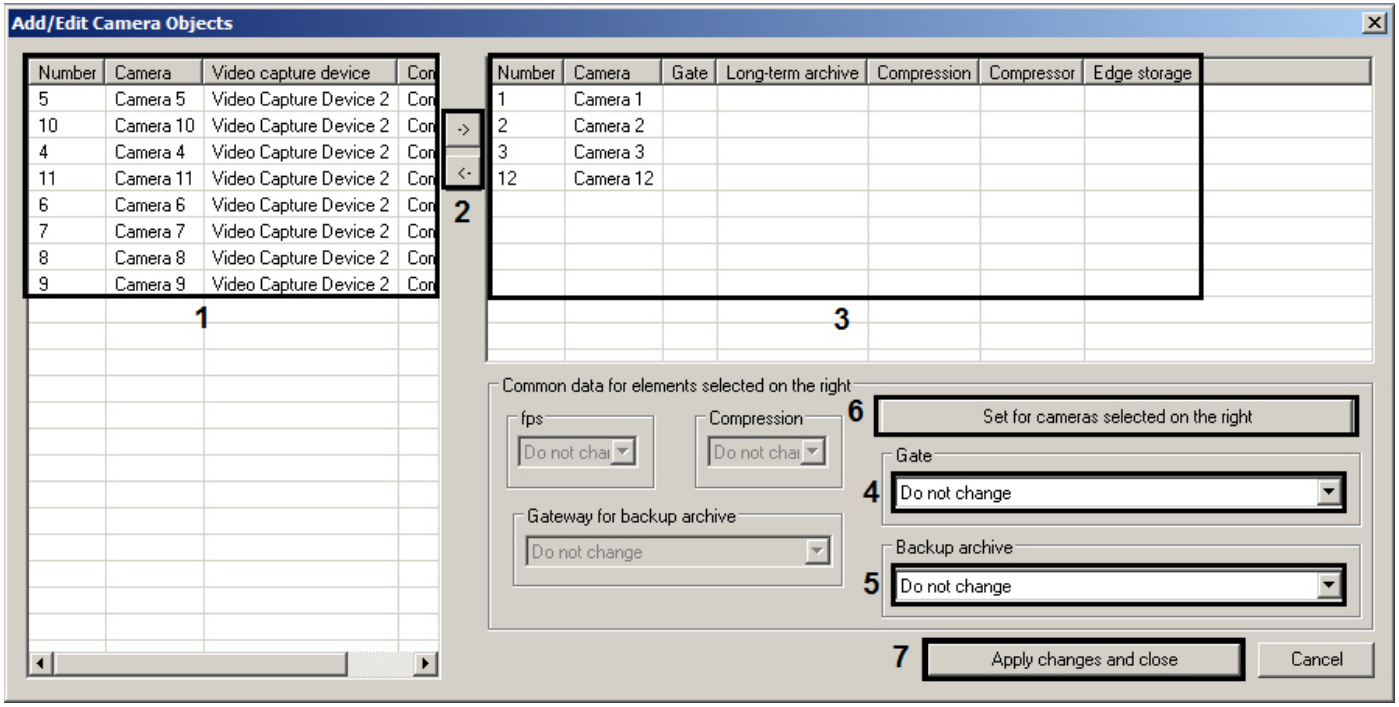

3. Select the required cameras in the left list of the **Add/Edit Camera Objects** box (1).
4. Move the selected cameras to the right list by clicking the -> button (2).

> **Note.**
> The list on the right is the list of cameras selected for copying the video archive to the *Long-term archive*.
>
> The <- button is used for reverse action that is for moving the selected video cameras from the right list to the left one (2).

5. As a result the selected cameras are displayed in the right list of the **Add/Edit Camera Object** box (3).
6. If it is necessary in the right list select the names of required cameras for complex editing their parameters (3).

> **Attention!**
> For all the selected cameras the same parameters will be set.

7. If a video archive from the selected camera is to be received via the **Videogate** object, then select the name of this object from the **Gate** drop-down list (4).

> **Note.**
> The **Gate** and **Long-term archive** settings belong to the **Common data for the elements selected in the list on the right** group.

8. If a video archive from the selected camera is to be transmitted from another **Long-term archive** object, select the name of this object in the **Long-term archive** drop-down list (5).

9. To save the parameters, click the **Set for the cameras selected in the list on the right** button (6).
10. As a result the set parameters are shown in the list on the right of the **Add/Edit Camera Objects** box (3).
11. Repeat steps 6-9 for complex editing of all the required cameras.
12. To save the changes and close the **Add/Edit Camera Objects** box, click the **Apply** changes and close button (7).
13. Camera settings are shown in the **Cameras** table on the settings panel of the **Long-term archive** object (2).
14. To save all the changes, click the **Apply** button (3).

Integrated selection of video cameras is now over.

Setting the parameters of video archive transmission over LAN

There is a **Transfer rate** table in the setting panel for the **Long-term archive** system object. This table limits the bandwidth over LAN for every Server transferring archive to the Long-term archive module.

To set the bandwidth parameters, do the following:

1. Go to the settings panel for the **Long-term archive** system object. In the **Transfer rate** table there are computers transferring video data to the Long-term archive (1). The list of computers is determined by cameras list.

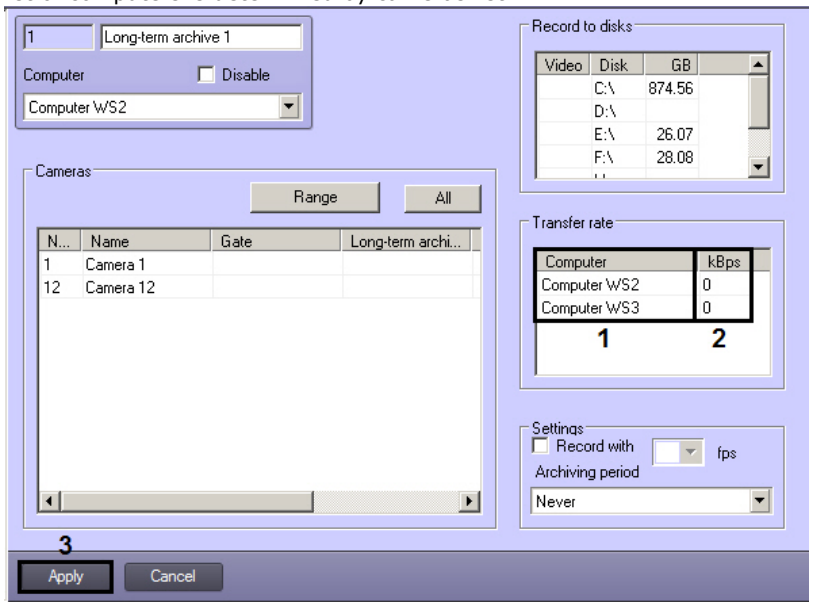

2. In the **kBps** column for each of the computers specify the values of maximum bandwidth for transmitting video over LAN for the computer (2).
3. To save the changes, click the **Apply** button and restart INTELLECT™ software (3).

The parameters of transmitting video archive over LAN are now set.

Selecting disks to store the archive of the Backup archive module

In INTELLECT™ software the backup copy of the video archive for the *Long-term archive* module is stored to local and network disks and to connected USB storage. Backup files are stored in the VIDEO folders on these disks.

By default long-term archiving is disabled.

To select diskes to store the archive of the *Long-term archive* module, do the following:

1. Got to the settings panel for the **Long-term archive** system object.

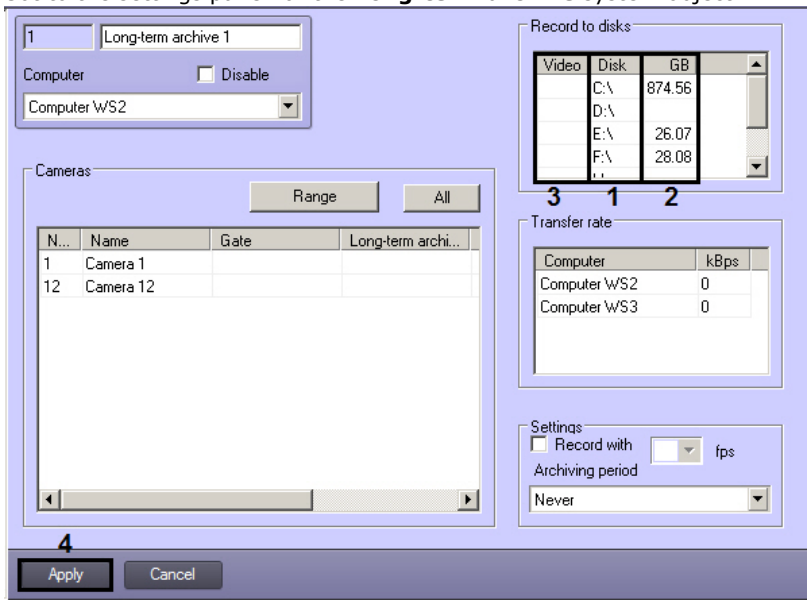

2. Names of local (net, USB) disks available for storing the archive of the *Long-term archive* module are given in the **Disk** column of the **Record to disks** table (1).

> **Attention!**
> It is necessary to connect net disks via a command prompt with Administrator's rights for Windows Vista and Windows 7 OS with enabled UAC. The way of UAC enabling is described in the Connecting network disks in Windows Vista and Windows 7 OS section.

> **Note.**
> To use net disks for a long-term archive, set UNC paths to them in INTELLECT™ software. Details on working with net disks in INTELLECT™ software (installed as a Service) are given in Working with network disks of INTELLECT™ installed as a Service section.

3. Free space on disks (in GB) is given in the **GB** column (2).
4. In the **Video** column, set the checkboxes for disks selected for storing the archive of the *Long-term archive* module (3).
5. To add a net disk by giving the UNC path, do the following:
    a. Go to the last line in the **Disk** list and click the down key.

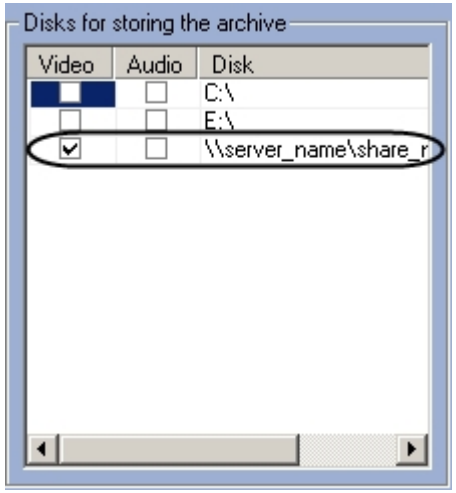

b. Specify the path to a net file in the appeared line in the **Disk** column. The UNC path is set in the "\\server_name\share_name" format, where the "server_name" is the name of file server and the share_name is the net name of general folder.
c. In the **Video** column, set the checkbox for the created disk.

6. To save the changes, click the **Apply** button (4).

Attention!
For storing the long-term archive one should select disks that are not used for storing video archive from cameras (are selected in the settings panel of **Computer** object). Otherwise after saving the given changes the **An error occurs during object saving** window appears.

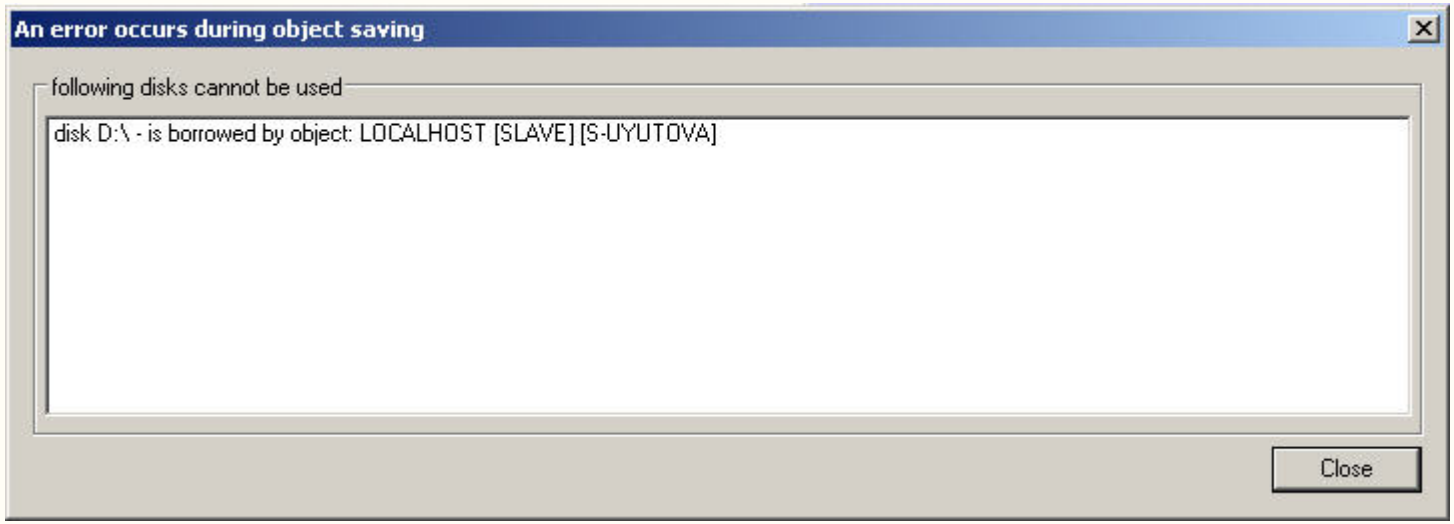

The disks for storing the archive of the *Long-term archive* module are now selected.

> **Note.**
> If no disks have been selected, the *Long-term archive* backup is disabled.

Configuring the scaling of the video archive

Video signals can be scaled before they are copied to a backup archive of the *Backup archive* module. Scaling is performed at the Server from which the video signal is transmitted to the Backup archive.

> **Note.**
> Scaling in the Backup archive may be performed with such codecs as MJPEG, Motion Wavelet, MPEG, H264 and MxPeg.
>
> If the scaling rate is 25 fps, the videois processed at a lower rate for the first minute (~12 fps).
>
> The maximum allowable scaling rate for MxPeg codec is 12 fps.

By default, a signal is copied from the server to the Backup archive without scaling.

To configure the scaling of video archive frames while copying them to the *Backup archive*, do the following:

1. Go to the settings panel for the **Backup archive** system object.

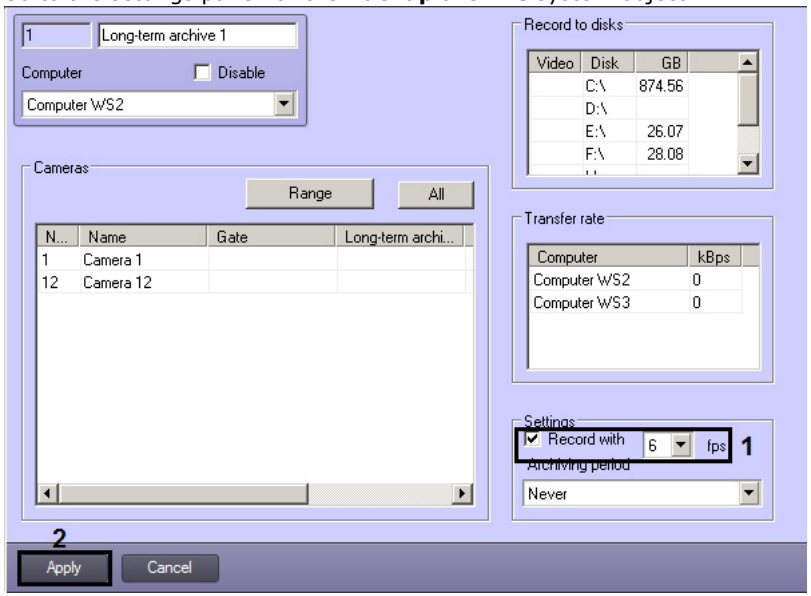

2. To enable the video archive scaling, set the **Record with ___ fps** checkbox in the **Settings** group (1).
3. In the **Record with ___ fps** drop-down list, select the required frame rate of video archive for transmitting to the *Backup archive* (1).

> **Note.**

The selected **Record with ____ fps** value is to be less than frame rate of video signal digitized by a video capture card. Otherwise the frame rate of a video signal will be the same as the frame rate of digitizing.

Note.
The selected framerate value of the video archive that is to be transferred to the *Backup archive* is an average value. A real value of framerate may be different from that one, indicated in the **Record with ____ fps** drop-down list.

4. To save the changes, click the **Apply** button (2)

Video scaling is now configured.

Configuring the schedule of the video archive copying

The *Long-term archive* module can be started in two ways:

1. Automatically. Due to the schedule of copying on the settings panel of the **Long-term archive** system object.
2. Manually. With the help of the **Long-term archive panel** interface object.

The process of automatic video archive copying is implemented starting with the latest recordings of video fragments. By default the automatic copying of video archive is not configured.

To configure the schedule of video archive's copying to the *Long-term archive*, do the following:

1. Go to the settings panel for the **Long-term archive** system object.
2. In the **Archiving period** drop-down list, select the required time zone (time period) of the *Long-term archive* module start (1).

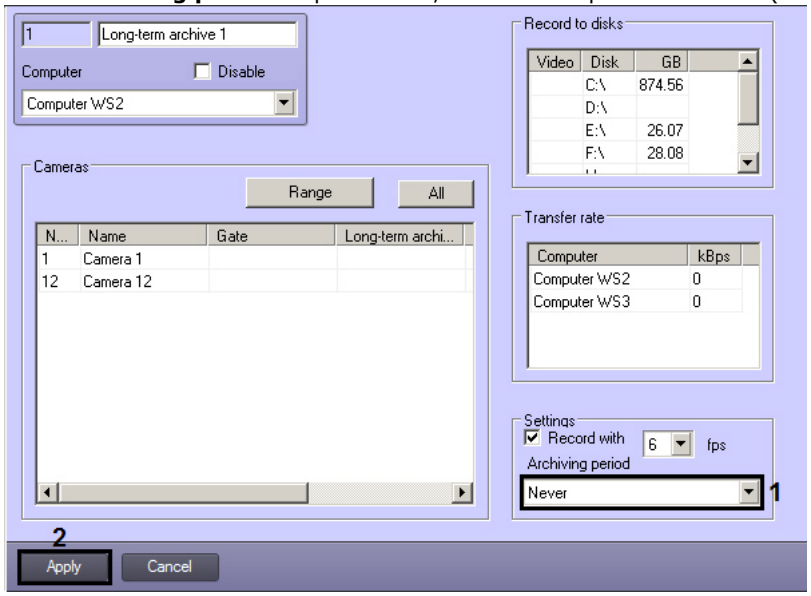

3. To save the changes, click the **Apply** button (2).

The schedule of video archive copying to the *Long-term archive* is now configured.

To start the archive backup manually, set the beginning and the ending dates of the archive to be copied and click the **Start** button.

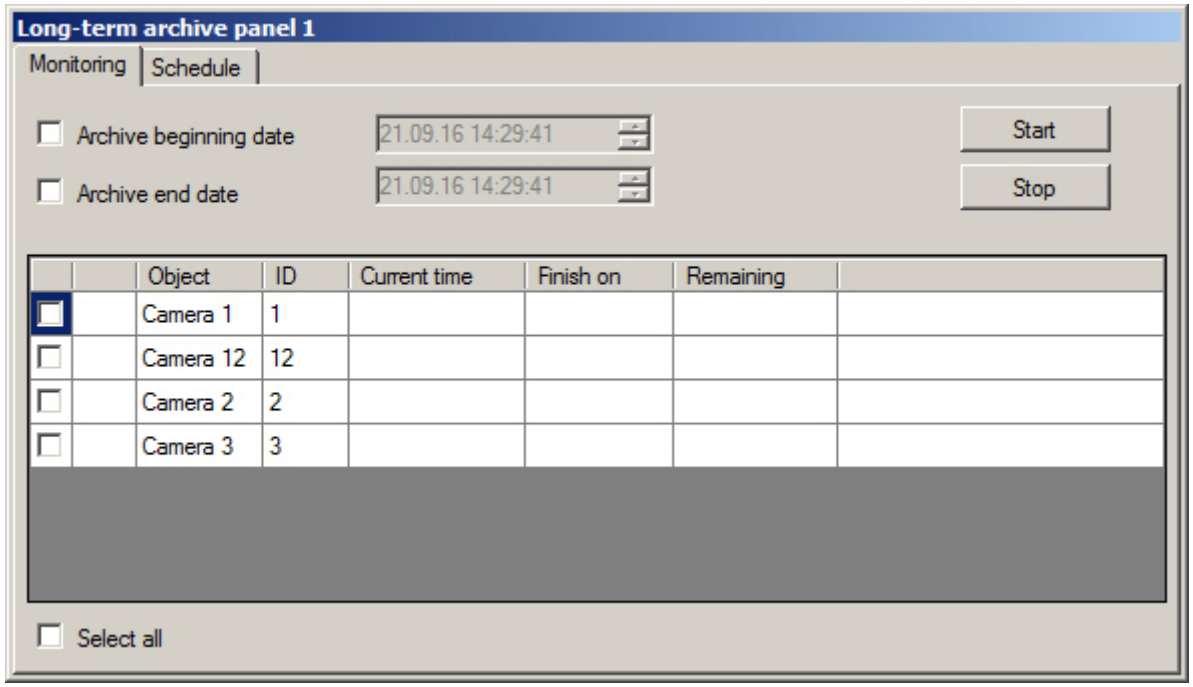

Enabling cooperation of Long-term archive with Failover service

If the Long-term archive operates together with the Failover service, their cooperation is to be configured (see Configuring archive synchronization of main and backup Servers). Cooperation of these modules is enabled as follows:

1. Go to the **Long-term archive** settings panel.

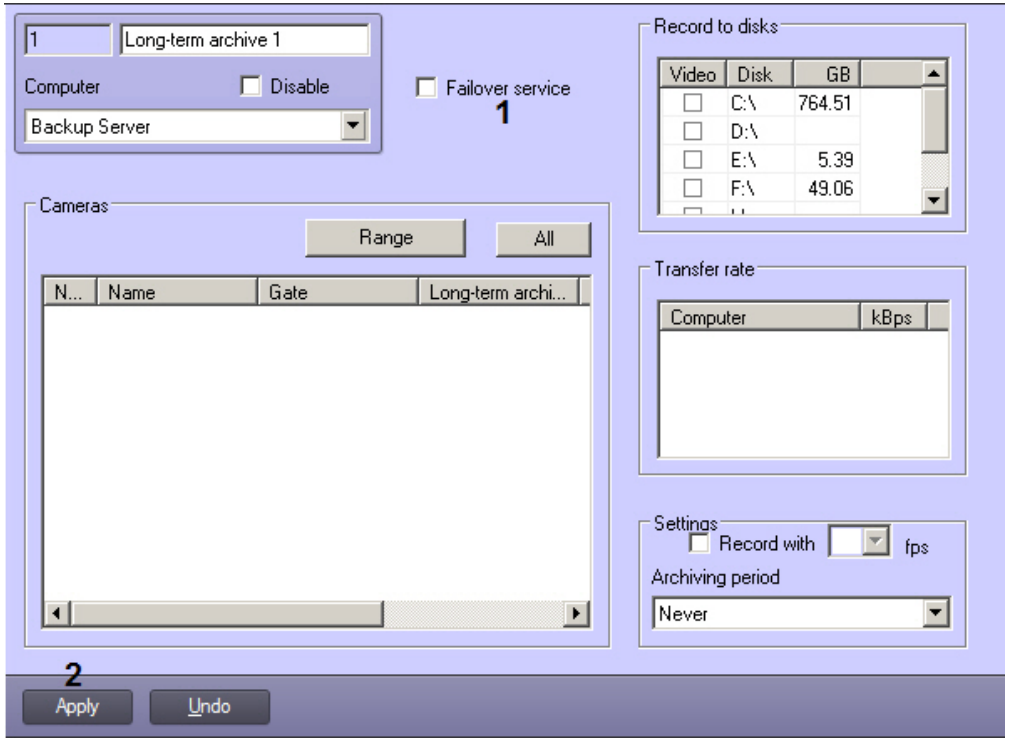

2. Set the **Failover service** checkbox checked (1). The **Record to disks** table becomes unavailable for editing, and when the archive is requested from the main server, the Long-term archive will be transferred from the disks specified on the settings panel of the **Computer** object under which the **Long-term archive** object is created.
3. Click the **Apply** button (2).

Cooperation of the Long-term archive and the Failover service is now enabled.

Configuring the Long-term audio archive module

The *Long-term audio archive* program module is designed to create a backup copy of audio archive recorded synchronously with a video archive. When the *Long-term audio archive* pro gram module is in use the audio archive recorded synchronously with the video archive from selected cameras included into digital video monitoring system is copied to a storage selected while configuring the *Long-term archive* module (see Selecting disks to store the archive of the Long-term archive module section). Copying is performed synchronously with a video archive copying.

Configuration of the *Long-term audio archive* is performed using the **Long-term audio archive** system object. The **Long-term audio archive** object is created automatically while creating the **Long-term archive** object.

> **Note.**
> Deleting the **Long-term archive** object the **Long-term audio archive** object is deleted automatically.

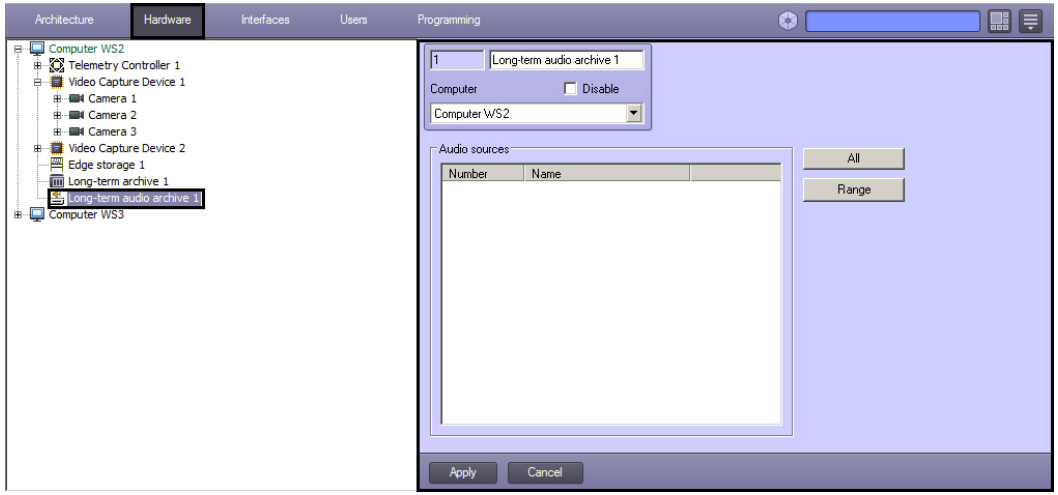

To configure the Long-term audio archive do the following:

1. Go to the settings panel for the **Long-term audio archive** object.

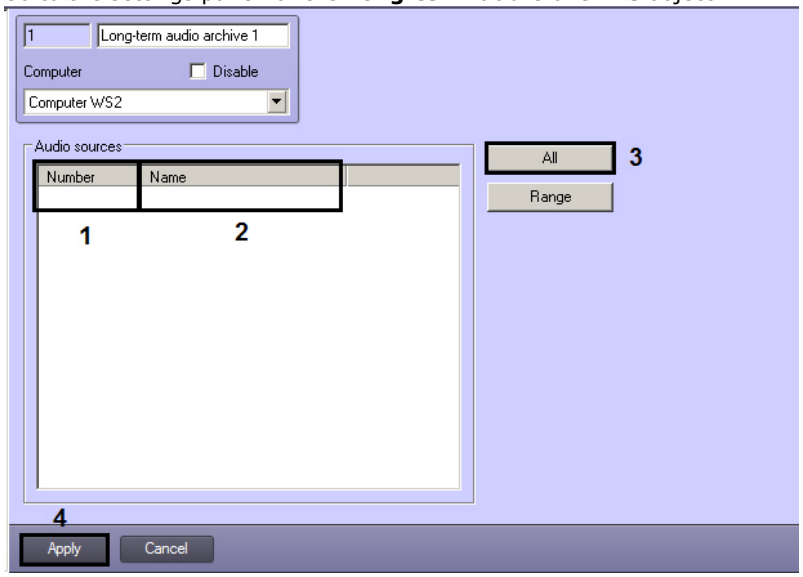

2. In the **Number** drop-downlist, select the id of a microphone related to the camera the archive from which is to be moved to the backup archive (1).
3. Left-click in the **Name** field. It will be automatically filled with the name of selected microphone (2).

> **Note.**
> To add all **Microphone** objects created in the system to the list click the **All** button (3).

4. Repeat steps 2-3 for all required microphones.
5. Click the **Apply** button.

It is possible to add microphones to the list in a single package. To perform it, do the following:

1. Click the **Range** button. As a result the **Add/Edit** window will open.

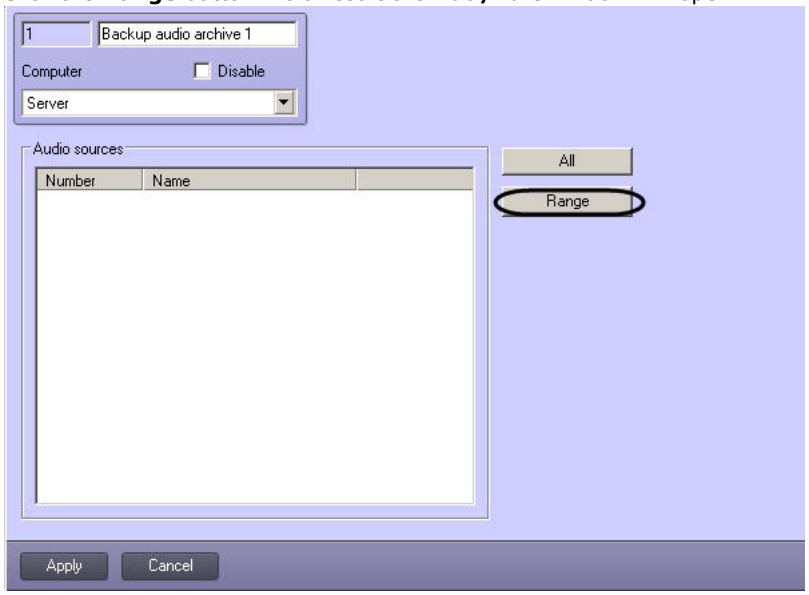

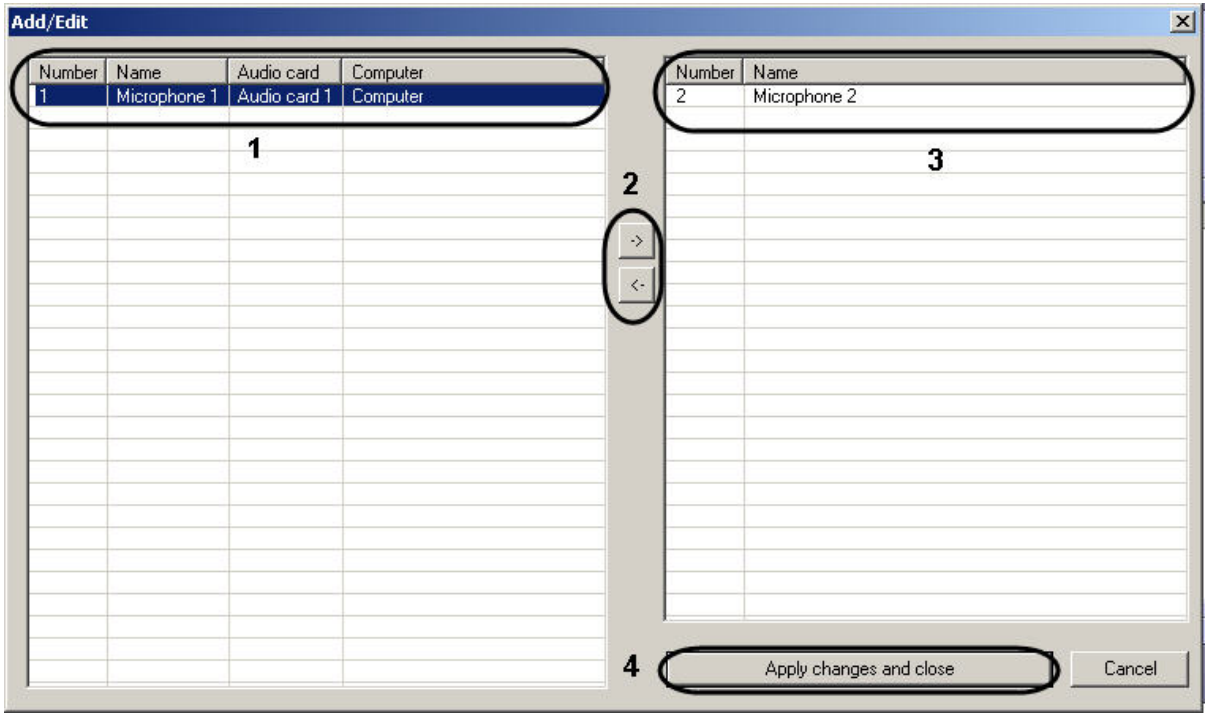

2. In the left part of list select required **Microphone** objects using the left mouse button (1). Use Shift and Ctrl keys to select several objects simultaneously.
3. Click the **->** button (2) to replace selected objects to the right part of list (3).

> **Note.**
> To replace objects from the right part of the list to the left part select microphones in this list and click the **<-** button (2).

4. Click the **Apply changes and close** button (4). Microphones from the right part of list will be added in the settings panel of the **Long-term audio archive** object.

The *Long-term audio archive* module is now configured.

Configuring the Videogate module

General information on the videogate

Videogate is used in large distributed video surveillance systems for routing the video signals among servers and clients (or administrator workstations used as operator workstations) located in different subnetworks. Servers and remote workstations are grouped into different subnetworks due to the following reasons:

1. Technical limitations leading to the servers being connected by low band channels and the clients using a high band connection. For example, the servers may be distributed over a large area, while the clients are located in one room of the monitoring center.
2. Security requirements. For example, to eliminate unauthorized access to administrative functions, the servers and clients are isolated into a different subnetwork from the operator workstations. When the subsystem interface uses the videogate, the clients(or rather administration workstations used as operator workstations) do not have access to the administrative functions of the servers and administration workstations of another subnetwork, but receive video signals from the servers.

Figures A and B show the schemes of construction of the video surveillance systems directly to the Videoservers with and via the videogate.

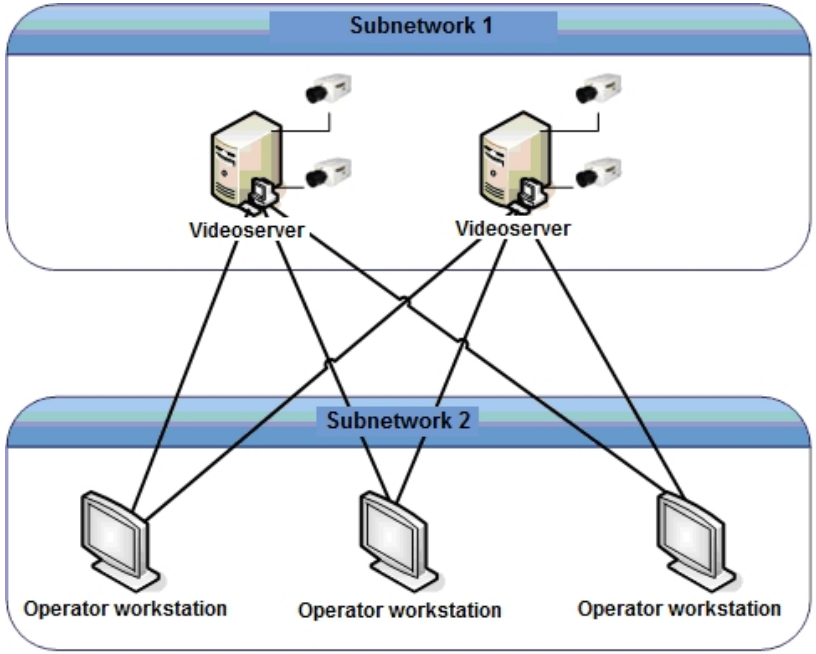

A. without the videogate

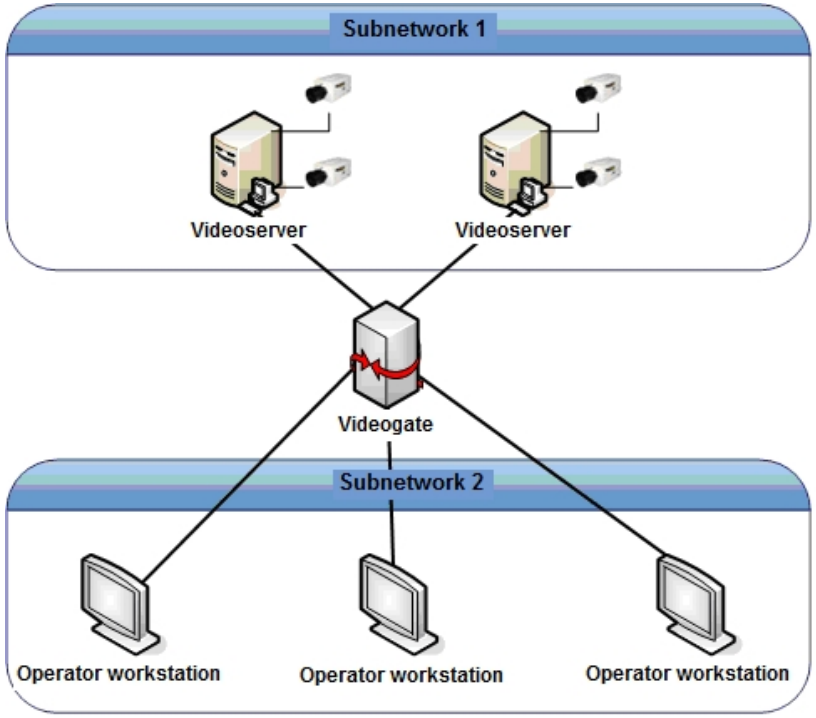

B. with the videogate

Note.
Video signal transfer to vertical modules on the basis of the Intellect software is not performing using the Video gate module. These modules always receive video signal directly as others modules.

Important!
There is no sound transmission to the RMW via the Videogate if different subnets are in use.

Order of setting up the Videogate object

To set the **Videogate** object do the following:

1. Create the **Videogate** object on the basis of the **Computer** system object (see Creating the Videogate object).
2. Select and set cameras for transmitting the video signals through the *Videogate* (see Selecting and configuring the cameras for the Videogate module or Selecting video cameras as a group for the Videogate module).
3. When necessary select the disks for storing archive of *Videogate* module (see Selecting disks for storing the archive of the Videogate module).

Creating the Videogate object

To create the **Videogate** object do the following:

1. Select the required **Computer** object on the tab **Hardware** of **System settings** dialog window.

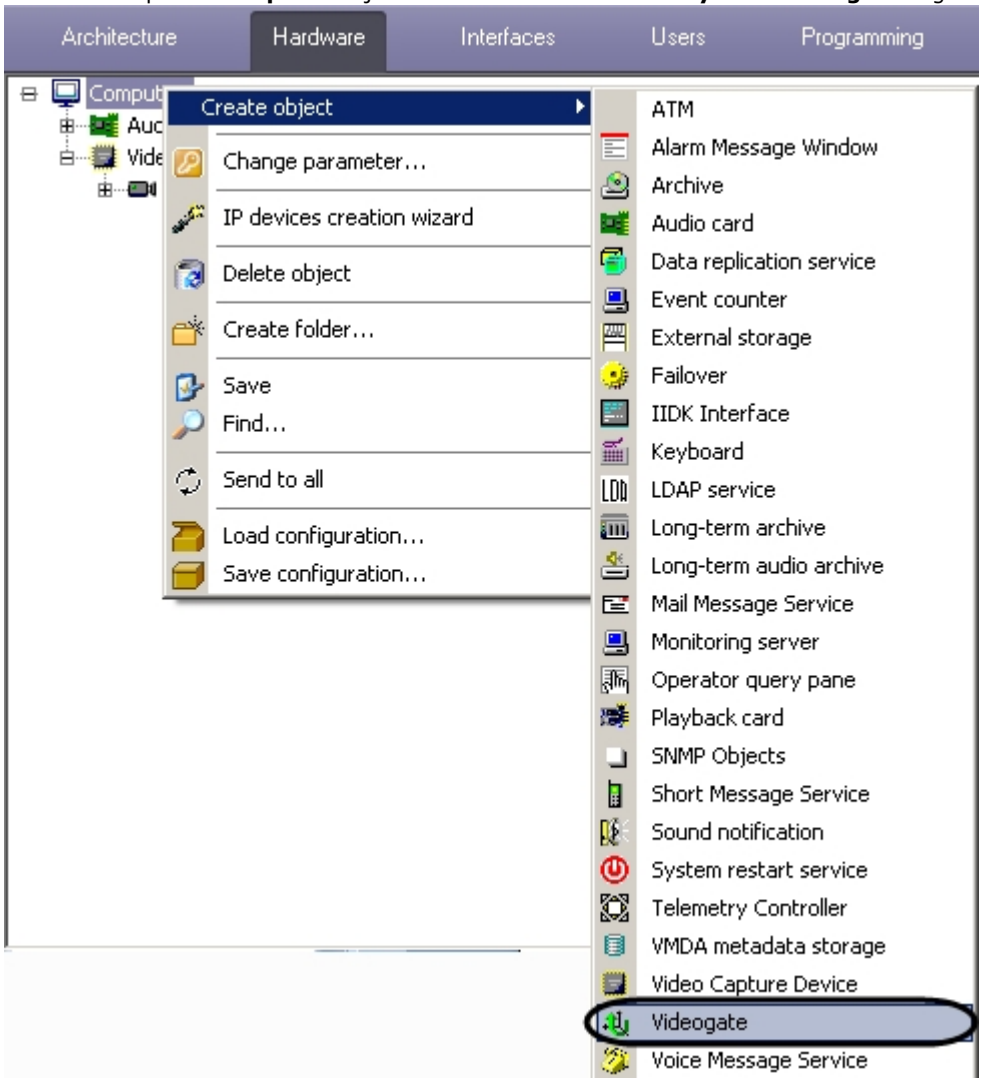

2. Right mouse click upon the selected **Computer** object and select **Create object> Video gate** in the context menu that will open.
3. In the window, that will open, set the name and the number of **Videogate** object and the click **Apply** button.

Note.
In result settings panel of **Videogate** object will open.

4. Repeat steps 1-3 for all the required **Computer** and **Videogate** objects.

Creation of the **Videogate** object is completed.

Selecting and configuring the cameras for the Videogate module

One can set and select cameras for transmitting the video signals through Videogate in two ways:

1. Separately. Use the settings panel of **Videogate** object.
2. Complex. Use the **Add/edit cameras** dialog box.

Note.
Order of complex selection of video cameras for transmitting video signals through the Videogate is described in Selecting video cameras as a group for the Videogate module.

To select cameras on the settings panel of the **Videogate** object do the following:

1. Go to the settings panel of Videogate system object.
2. From the dropdown list in the column **Number** select the number of the required video camera (1).

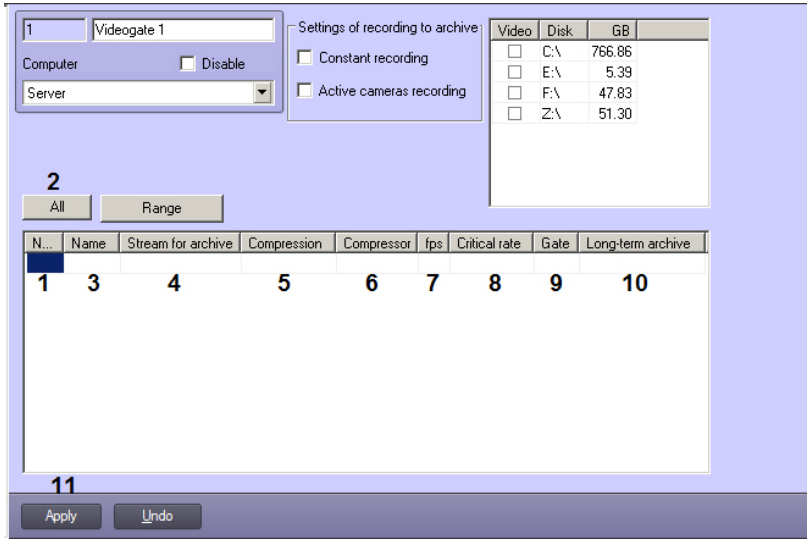

Note.
To select all cameras, registered in the system, click the **ALL** button (2).

3. In result in the column **Name** the name of the selected camera will be displayed (3).
4. In the **Stream for archive** dropdown list select the video stream from the Server that you want to use to record the videogate archive (4). By default, the **Archive** stream that the Server uses for constant recording is recorded (see also Configuration of multistream video).
5. In case, when compression level of the video signal for transmitting through the Videogate, select from the dropdown list in the column **Compression** the required compression level of video signal (5). Compression level of the video signal rises from «0» (compression is absent) to «5» (maximum compression).

Note.
In case of setting the compression level video signal on the Server has to be preliminary decompressed, that leads to great load on CP of the Server.

6. To change the procedure of video signal compression during transtission through the Videogate, select the required procedure of compression from the **Compressor** drop-down list (6).The value in the **Compression** list is to be selected if the compressor is specified (5). If **Compression** is selected but **Compressor** is not set, the Motion Wavelet compressor if used.

Note.
Recompression is performed on the Server side.

7. In case, when video signal has to be thinned out for its transmitting through the Videogate, enter in the field in the column **fps** the required frame rate of the video signal (7).

Note.
The given **fps** value must be less than the frame rate of video signal's digitizing by video input device. Otherwise frame rate of video signal will be equal to the frame rate of digitizing.
The given **fps** value must not be less than 0.01 which corresponds to transmission of one frame in 100 seconds.

Note.
For correct thinning of a video stream compressed with the help of H.264 or MPEG4 codecs, the fps value is to be equal to keyframe rate specified in the device (IP-camera) or INTELLECT settings (see Configuring video compression section).

8. In case, when transmission of video signals through the local net or from the Server to the Videogate has to be controlled, enter in the field in the column **Critical rate** minimal available value of frame rate of video signals, transmitted to the Videogate (8).

Note.
The given value Critical rate should not be more than the frame rate of video signal, transmitted to the Videogate.
The setting of critical rate on the Videogate must be combined with the settings of **Alarm messages window** system object (see. Setting up the Alarm Message window). In this case with the reduction of rate of inputting signals below the given value **Alarm messages window** will be displayed with the message "Reduced input rate".

9. In case, when video signal from the selected video camera is to be received from the other **Videogate** object, then select the name of this object from the dropdown list in the **Gate** column (9).
10. In case, when the video archive for the selected camera has to be received from the **Backup archive** object, select the name of this object from the dropdown list in the **Backup archive** (10).

Attention!
Selected value is to be coincide with value which is specified while configuring video cameras for displaying for this Camera – see the Selecting and configuring video cameras section.

11. Repeat steps 2-8 for all the required cameras.
12. To save all the changes click **Apply** button (11).

Selection of cameras on the settings panel of the **Videogate** object is completed.

Selecting video cameras as a group for the Videogate module

There is opportunity of complex selection and editing parameters of video cameras for transmitting video signal through Videogate. Complex selection of cameras is performed in the following way:

1. Go to the settings panel of **Videogate** system object and then click **Range** button (1).

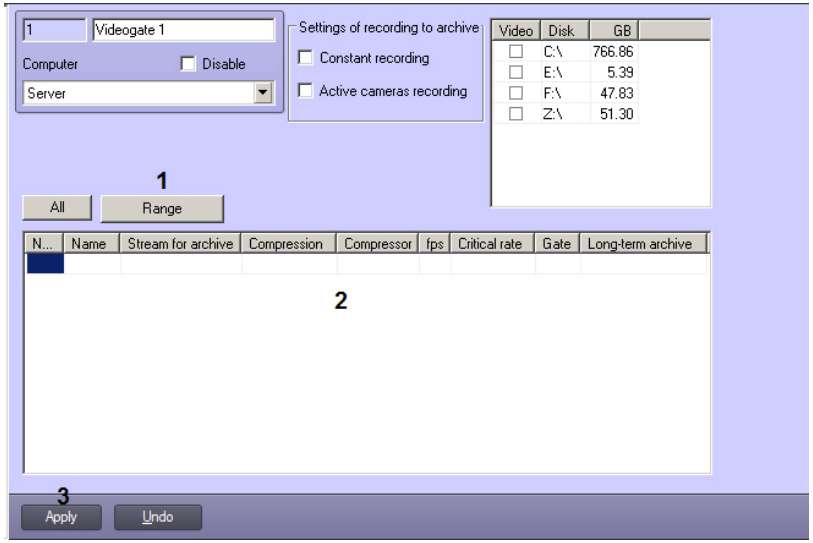

2. In result a dialog window **Add/edit cameras** will open.

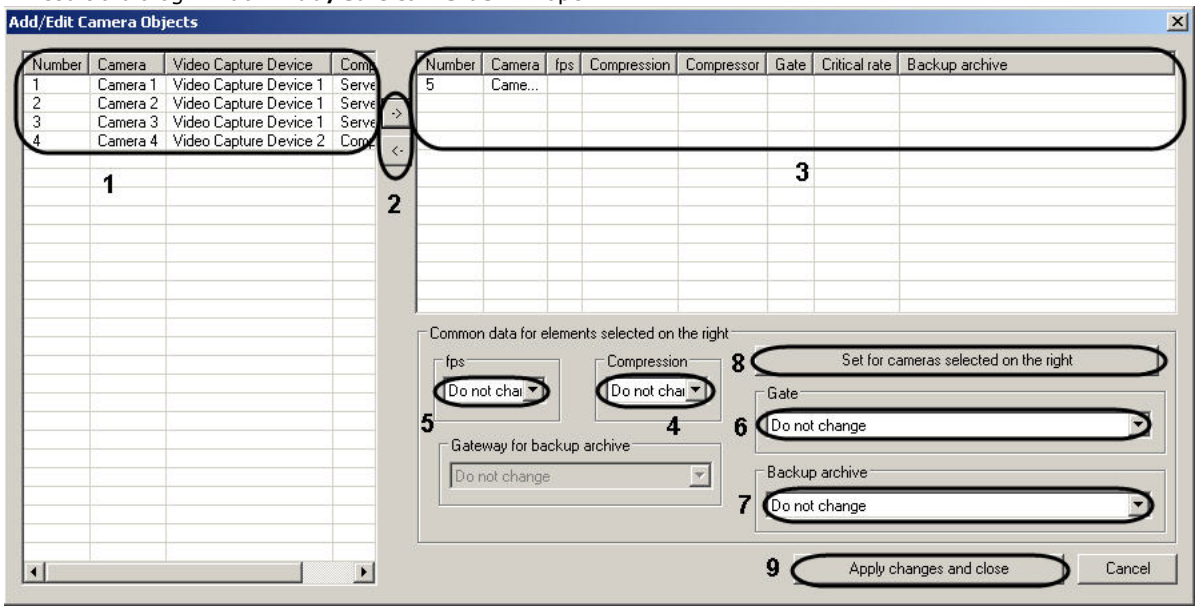

3. Select the required objects in the left list of **Add/edit cameras** window (1).
4. Remove the selected cameras to the right list, clicking the button (2).

Note.

Right list contains a list of cameras, selected for transmitting the video signals through the Videogate.

Button is used for back action, for removing the selected cameras from the right list to the left (2).

5. In result the selected video cameras will be displayed in the right list of **Add/edit cameras** window (3).
6. When necessary select in the right list the names of the required cameras for complex editing of parameters (3).

Attention!
For all the selected cameras the same value of parameters will be set.

Note.
There is no possibility to edit **Critical rate** parameter with the help of **Add/edit cameras**.

7. In case, when compression level of video signal has to be changed for transmitting through the Videogate, select from the **Compression** dropdown list the required compression level (4).**Compression** level rises from «0» (no compression) till «5» (maximum compression).

Note.
In case of setting the compression level video signal must be preliminary decompressed on the Server that leads to great loading on the CP of the Server.
Settings **Compression**, **fps**, **Gate**, **Backup archive** belong to the group **Set for the selected in right list of cameras**(6).

8. In case, when video signal has to be thinned out for transmitting through Videogate select from the **fps** dropdown list the required frame rate of video signals (5).

Note.
The given **fps** value must be less the frame rate of video signal's digitizing by video capture card. Otherwise frame rate of video signal will be equal to the frame rate of digitizing.

9. In case, if video signal form the selected cameras is to be received from the other **Videogate** object, then select the name of this objet from the **Gate** dropdown list (6).
10. In case when video signal has to be transmitted from the selected cameras from the **Backup archive** object, select from the **Backup archive** dropdown list the name of this object (7).
11. To save the set parameters click **Set for the selected in right list of cameras** button (8).
12. In result the set parameters will be displayed in the right list of **Add/edit cameras** window (3).
13. Repeat steps 6-11 for complex editing of all the required cameras.
14. To save all the changes and close **Add/edit cameras** window click **Apply** changes and close button (9).
15. The given settings will be displayed on the settings panel of the **Videogate** object (2).
16. To save the given changes click **Apply** button (3).

Complex selection of cameras is completed.

Selecting disks for storing the archive of the Videogate module

To enable video signals archiving, going through the Videogate, it is necessary to select the disks for archive storing.

To select the disks do the following:

1. Go to the settings panel of **Videogate** system object.

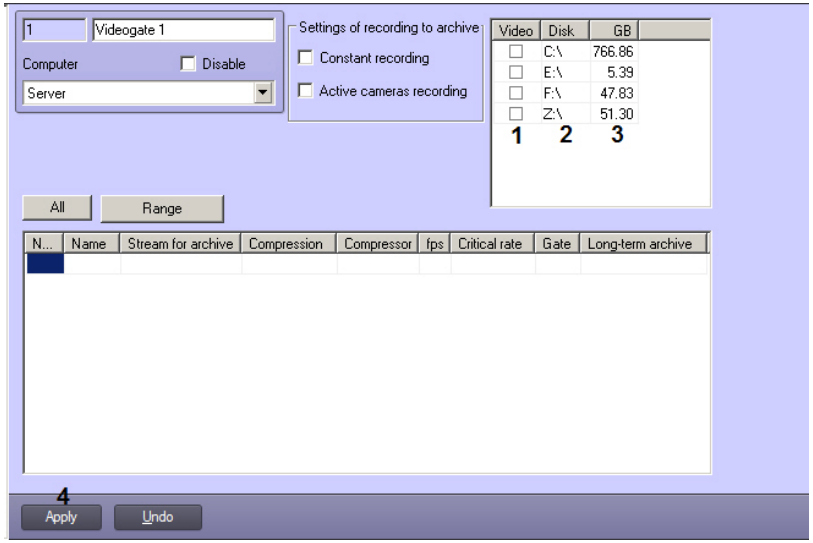

2. Names of local (net, USB) disks, accessible for archive of *Videogate* module are given in the column **Disk** (1).

> **Attention!**
> For Windows Vista and Windows 7 OS with connected UAC it's necessary to connect net disks through command prompt with Administrator's rights. The way of connection is described in Connecting network disks in Windows Vista and Windows 7 OS part.

> **Note.**
> To use net disks as an archive, set UNC paths to them in Intellect software. Details of working with net disks in Intellect software that is installed a s a Service are described in Working with Windows OS services for operating Intellect™ installed as a Service.

3. In the column **GB** there is a size of free space on disk in GB (2).
4. In the column **Video** put the check mark for disks, selected for storing archive of *Videogate* module (3).
5. To add a net disk via entering the UNC path, do the following:
    a. Go to the last line in the **Disk** list and click **Down** key.

b. Enter the path to a net file in the appeared line in **Disk** column. UNC path is set in format «\\server_name\share_name», where «server_name» is file server's name and «share_name» is net name of generalfolder.
c. Set the checkbox for created disk in **Video** column.

6. To save the set changes click **Apply** button (4).

Note.
For storing the archive of *Videogate* module one should select disks that are not used for storing video archive from cameras (are selected in the settings panel of computer object). Otherwise after saving the given changes there will appear **Error in the process of saving the Videogate object** window.

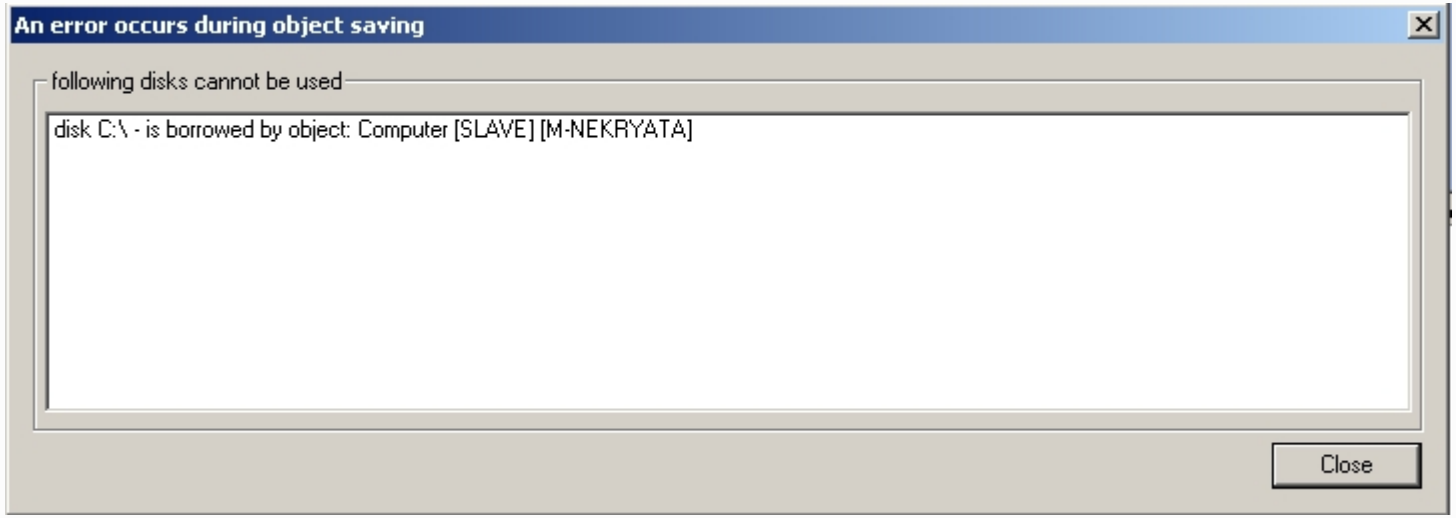

Note.

In case, when no one disk is selected for storing video recordings, there is no recording of video signals to the archive of *Videogate* module.

Selection of disks for storing the archive of *Videogate* module is completed.

Free disk space (video archive size) required

Video gateway archive playback

Configuring the record of the Videogate module archive

By default, if disks are selected for storing the archive of the Videogate module (see Selecting disks for storing the archive of the Videogate module), then Videogate requests video streams for all selected cameras (see Selecting and configuring the cameras for the Videogate module) from Server and only records the Videogate module archive if recording is configured for these cameras on the Server. Continuous Videogate archive record by all added cameras regardless of Server configuration, as well as record only on cameras requested on clients can be enabled.

To configure the record of the Videogate module archive do the following:

1. Go to the **Videogate** object settings panel.

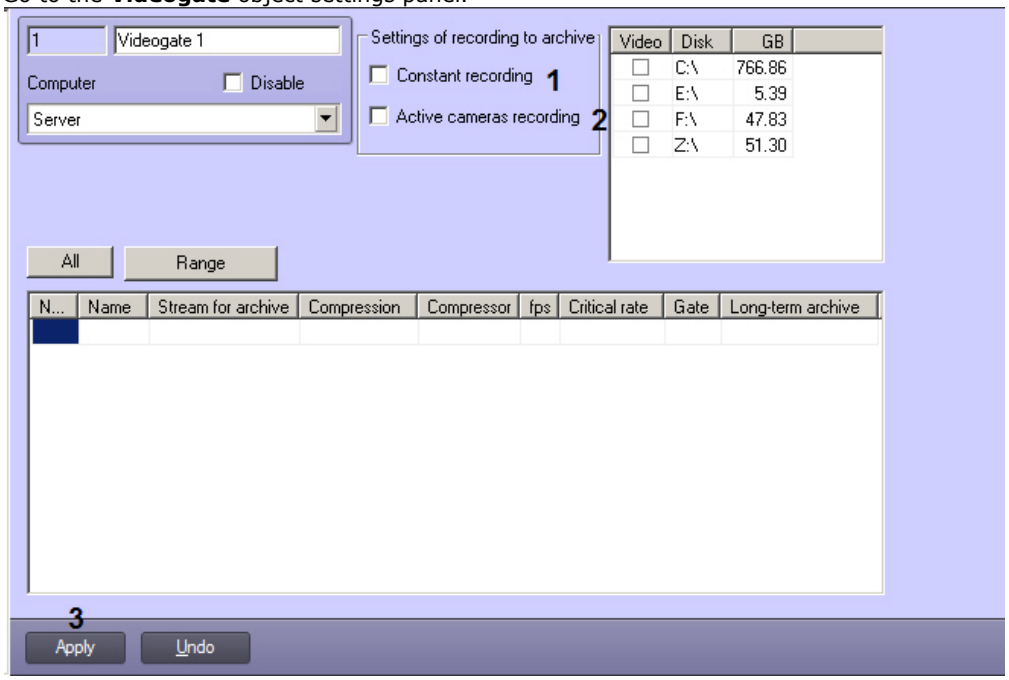

2. If continuous record on all cameras added to the Videogate is required regardless of whether the Server records its archive or not, set the **Constant recording** checkbox (1).
3. If only cameras requested on clients (i.e. displayed in the Video surveillance monitor) are to be recorded to the Videogate module archive, set the **Active cameras recording** c heckbox (2).
4. Click **Apply** (3).

Configuring the record of the Videogate module archive is completed.

Notification services

Setting up the Alarm Message window

On the page:
• General description and usage details of the Alarm Message window • Creating and setting up the Alarm Message Window object

General description and usage details of the Alarm Message window

The **Alarm Message window** notifies the operator about alarms and opens above all other windows in case of an alarm event on a set device.

Creating and setting up the Alarm Message Window object

To set up the **Alarm Message window**, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Alarm Message Window** object in the **Computer** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

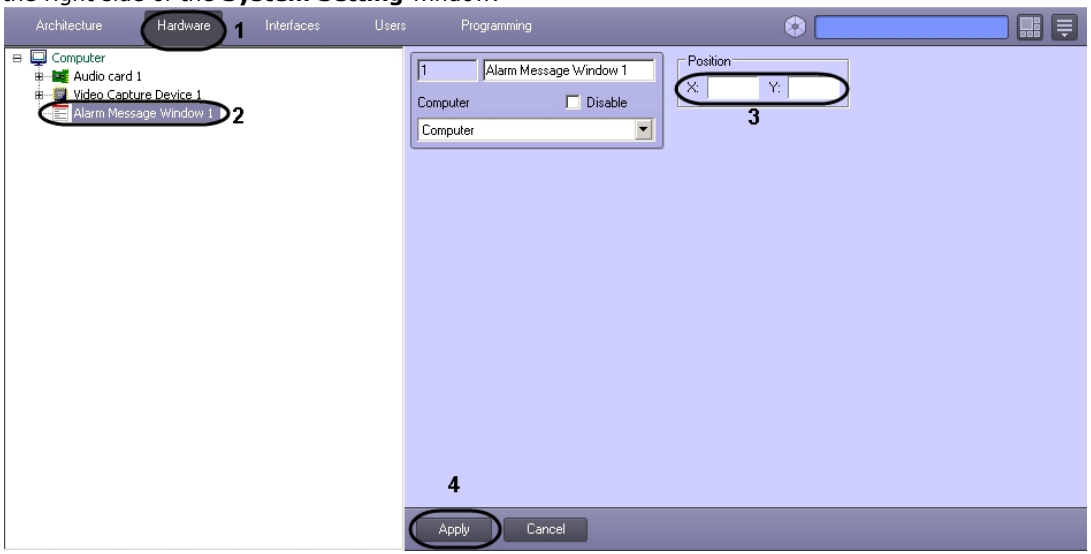

3. Set the coordinates (**X, Y**), in percent, for the position of the **Alarm Message window**.

> **Note.**
> By default, X and Y coordinates are 0, thus, if they are not changed, the window opens in the upper left corner of the screen.

4. Press the **Apply** button to save the settings for the **Alarm Message** object.

Figure below shows a general view of the **Alarm Message**: this window will open above all other windows at a set position (60, 60) upon receiving an alarm event from Camera 3.

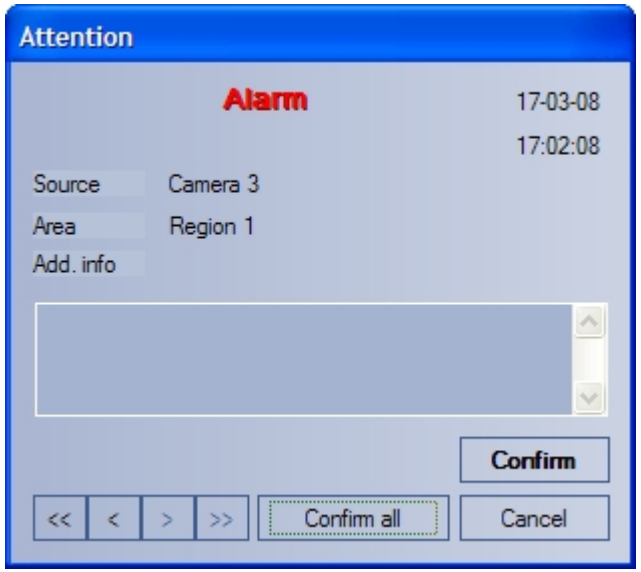

Note.
To disable opening the **Alarm Message window**, check the **Disable** checkbox in the settings panel of the **Alarm Message Window** object.

Setting up the Short Message Service (SMS)

General description and usage details of the Short Message Service

The Short Message Service (SMS) is used for sending short messages to mobile phones about alarm events registered by Intellect software. A short message is sent automatically upon registration of any of the events specified in the corresponding macro.

Actions with *Intellect* objects can be performed when a SMS is received. Macros, programs in the language embedded in Intellect or Jscript scripts are used for this. When the sms is received the SMS object sends the RECEIVE event in *Intellect.*

The short messages are transferred using the services of the GSM mobile providers. To send the short messages, dedicated devices are used: GSM modems, GSM adapters and mobile phones.

Note.
When using a device with Android OS incoming messages are transliterated in *Intellect*.

Note.
When using Intellect software SMS service a certain fee should usually be paid to the mobile providers.

To be able to send the short messages, a GSM modem, a GSM adapter or a mobile phone supporting ETSI GSM 07.07 or ETSI GSM 07.05 should be installed on the computer.

The following modem models are currently integrated into *Intellect* software:

1. 3G -modem Huawei E160, is identified as HUAWEI Mobile Connect -3G Modem in OS Windows. Modem control program is not required to be run to work with this device.
2. 3G-modem ZTE MF626 is identified as ZTE Proprietary HS-USB Modem in OS Windows.To use this device it is necessary to install the hardware, which installation will be run automatically after the modem is connected.
3. Huawei E173 3G modem. The RECEIVE event is supported if the ProcessFromSim registry key is in use (see Registry keys reference guide).

Note.
Most mobile operators protect their USB-modems from using them in mobile networks of other operators. Launch the utility installed with the device simultaneously with the *In tellect* software to activate sms-notifications when the modem protected by operator is in use. Any other actions (connect to 3G, etc.) with the utility are not required.

To create and send a short message:

1. Create and set up the **Short Message Service** object.
2. Create and set up the **Short Message** object.
3. Create a macro for sending the short message.

Requirements for GSM Equipment

Creating and setting up the Short Message Service object

To set up the **Short Message Service** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Short Message Service** object in the **Computer** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

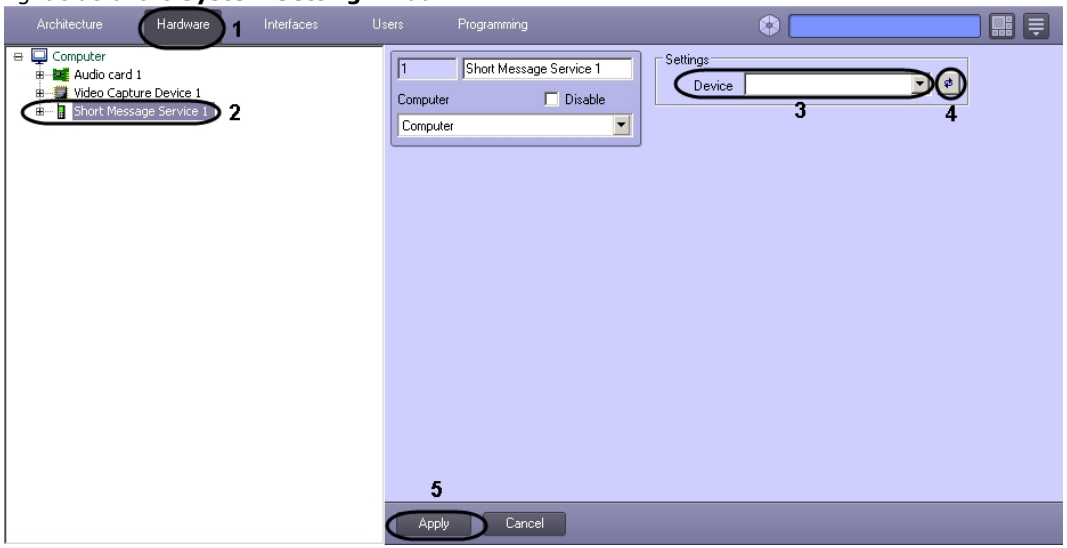

3. Select the GSM-device to be used for sending SMS, in the **Device** drop-down list.

4. Press the refresh button for the system to update the list if the device was not listed.
5. Press the **Apply** button to save the settings for the **Short Messages Service** object.

Creating and setting up the short messages

To set up the **Short Message** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window (1).
2. Create the **Short Message** object in the **Short Message Service** node in the objects tree (2). The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

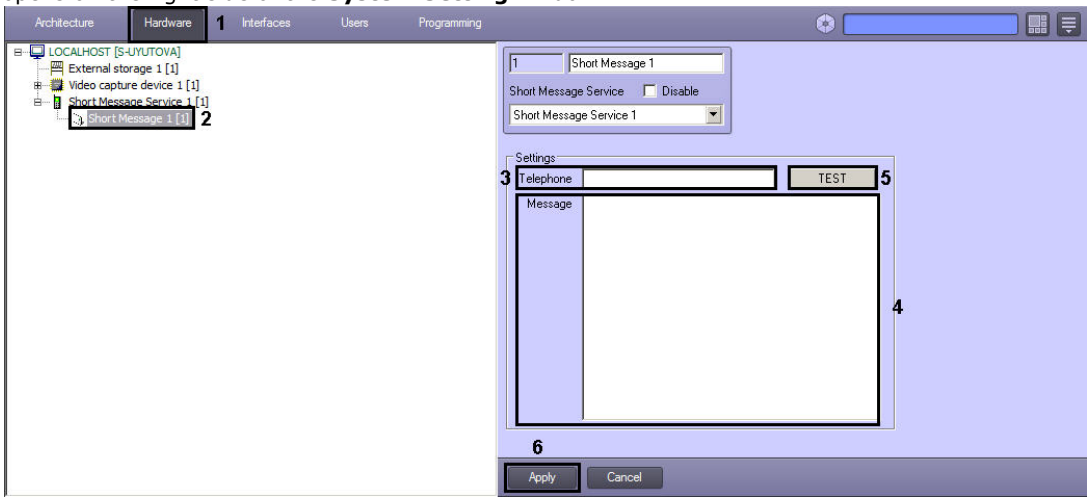

3. Enter the telephone number into the **Phone** field in the following format: [prefix "+"] [country code] [city/provider code] [phone number] with no spaces or other delimiters (3).
4. Enter the message text into the **Message** field (4).
5. If a short message is to be force sent, click the **TEST** button (5). Make sure the message has been received by the recipient. Otherwise check if **Short message service** and **S hort message** objects have been configured correctly.
6. Press the **Apply** button to save the settings for the **Short Message** object. (6).

Creating and setting up the macro for sending the short message

The message is sent upon execution of a macro. The macro is executed immediately after a set event occurs. To create the macro for sending the short message:

1. Go to the **Programming** tab of the **System Settings** window.
2. Create a **Macro** object in the objects tree of the **Programming** tab.

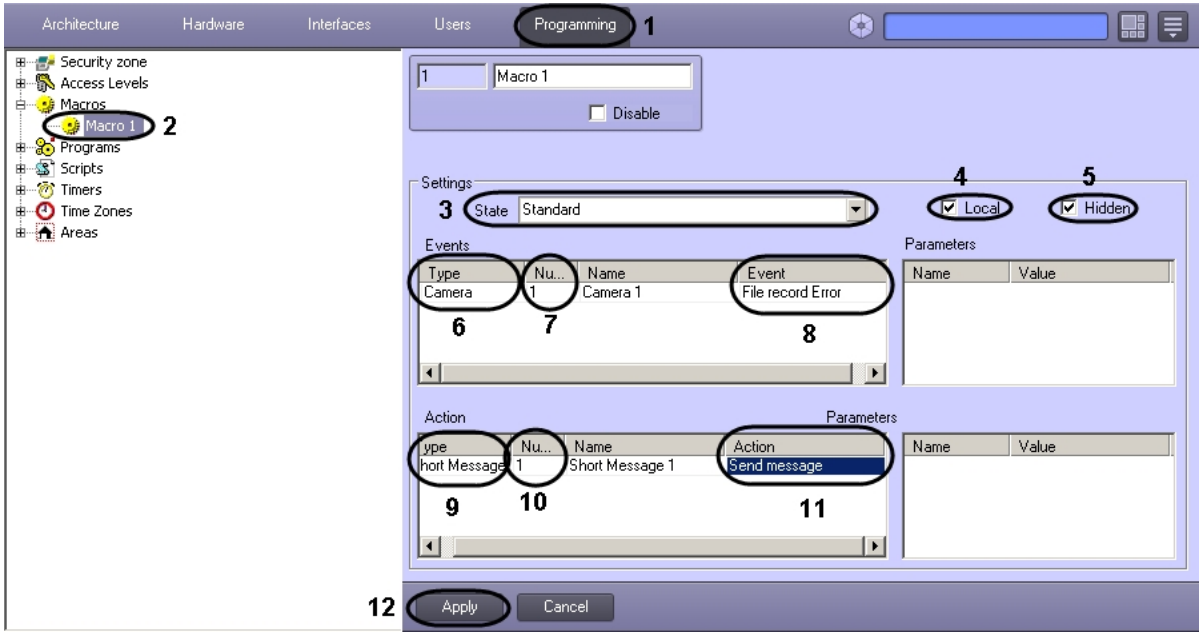

3. Set the **State** parameter.
4. Check the **Local** checkbox to send the message from a local computer only.
5. Choose the event object type for the SMS macro to be related to.
6. Choose the event object number for the SMS macro to be related to.
7. Choose the event name which will trigger the sending of the short message.
8. Choose the **Short Message** object in the **Type** column.
9. Choose the number of the **Short Message** object to be sent by the macro.
10. Choose **Send Message** in the **Action** column.
11. Press the **Apply** button to save the settings for the **Macro** object.

Setting up the Mail Message Service (E-mail)

General description and usage details of the Mail Message Service

The Mail Message Service (E-Mail) is used for sending e-mail messages about the alarm events registered by Intellect software, to remote system users. Sending e-mail messages is triggered automatically upon registration of any of the events set in the macro.

To be able to send e-mail messages, the computer should be connected to the internet via a local area network or remote TCP/IP connection.

The e-mail messages are sent by the Mail Message Service. To send e-mail messages in Intellect, you should first register a mailbox in the Mail Message Service.

Note.
When registering your mailbox in the Mail Message Service, note the following:

1. Intellect's Mail Message Service does not support SMTP servers with Secure Password Authorization (SPA).
2. Intellect's Mail Message Service supports only the following authorization algorithms on SMTP servers: LOGIN, CRAM-MD5, PLAIN.
3. By default the Mail Message Service uses TLS encoding. If SMTP Server does not use TLS, then set the 0 value for the UseTls registry key (see Registry keys reference

guide).
4. For proper operation of Mail Message Service two-factor authentication is to be in configured for the e-mail account in use.

To create and send an e-mail message:

1. Create and set up the **Mail Message Service** object.
2. Create and set up the **Mail Message** object.
3. Create a macro for sending the e-mail message.

Creating and setting up the Mail Message Service

To set up the **Mail Message Service** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Mail Message Service** object in the **Computer** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Settings** window.

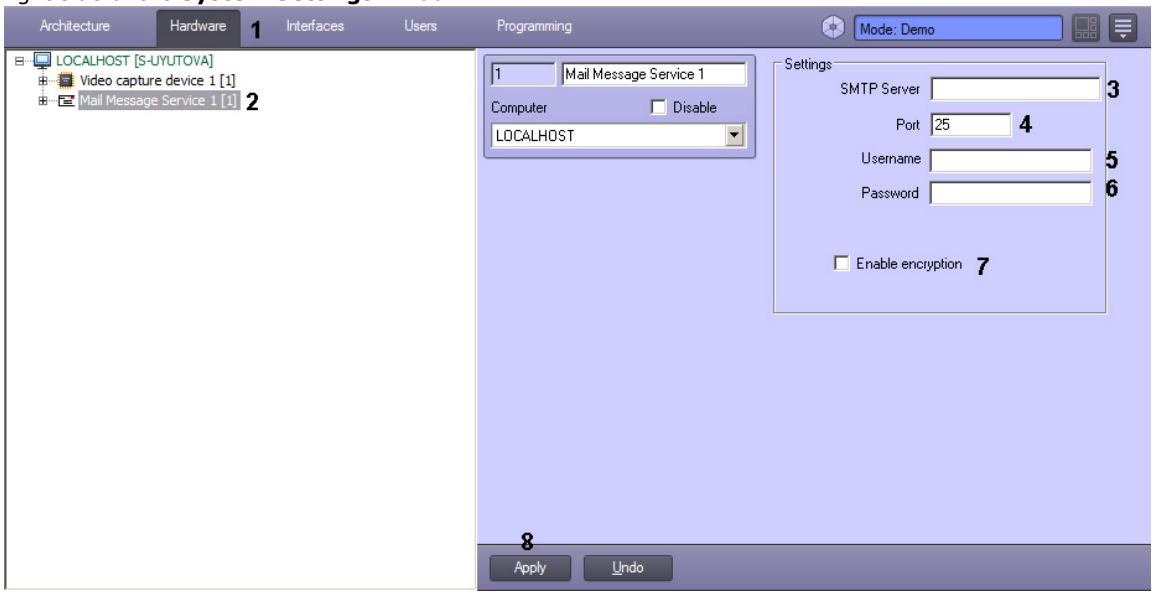

3. Enter the URL address of the SMTP server.
4. Enter the port number for outgoing messages.
5. Enter the username for authorization on the SMTP-server.
6. Enter the password for authorization on the SMTP-server.
7. Enable encryption if necessary.
8. Press the **Apply** button to save the settings for the **Mail Messages Service** object.

Find information on how to set up mail servers in the table.

	Yandex	Yahoo!	Outlook	Google
SMTP Server	smtp.yandex.ru	smtp.mail.yahoo.com	smtp-mail.outlook.com	smtp.gmail.com

Port	587	587	587	587
Username	username@yandex.ru	username@yahoo.com	username@outlook.com	username@gmail.com
Password	User account password	Password generated if 2-step verification is used. **Important! To use Yahoo! mail server 2-step verification is to be set up.**	User account password	Password generated if 2-step verification is used. **Important! To use Google mail server 2-step verification is to be set up.**
Encryption	Yes	Yes	Yes	Yes

Creating e-mail messages

To set up the **Mail Message** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window .
2. Create the **Mail Message** object in the **Mail Message Service** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

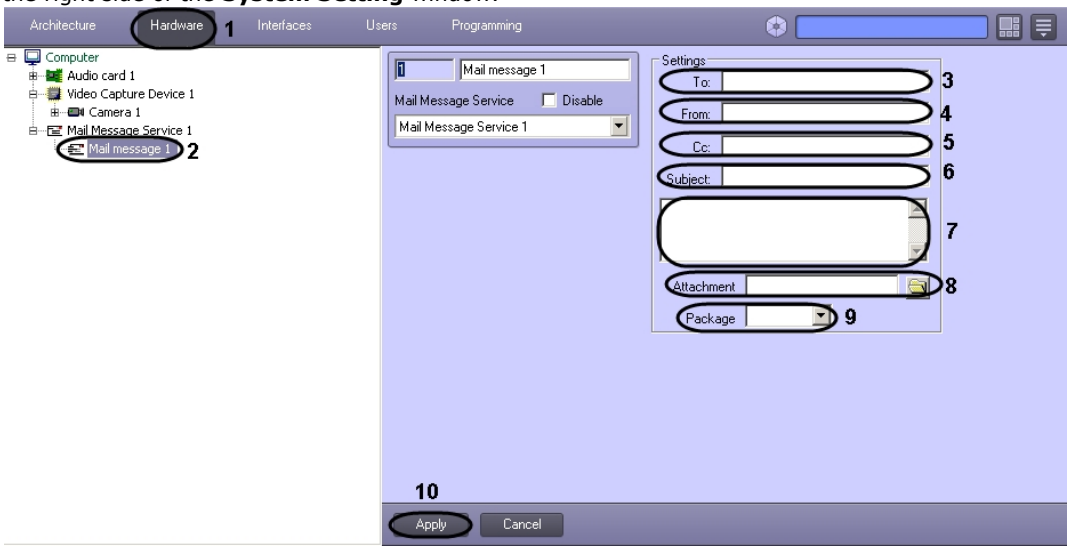

3. Enter the e-mail address of the recipient.
4. Enter the e-mail address of the sender.
5. Enter additional addresses (**Cc:**) to send this message to, if necessary.
6. Enter the subject of the message.
7. Enter the text of the message to be sent to the specified addresses.
8. Attach a file to the alarm message (report, audio, image), if necessary. If several files are attached, their addresses are semicolon separated.
9. Specify if the attachment should be packaged (archived).
10. Press the **Apply** button to save the settings for the **Mail Message** object.

Creating and setting up a macro for sending the e-mail message

The message is sent upon execution of a macro. The macro executes immediately after the registration of the event it is set for. To create the macro for sending the e-mail message:

1. Go to the **Programming** tab of the **System Settings** window.

2. Create a **Macro** object in the objects tree of the **Programming** tab.

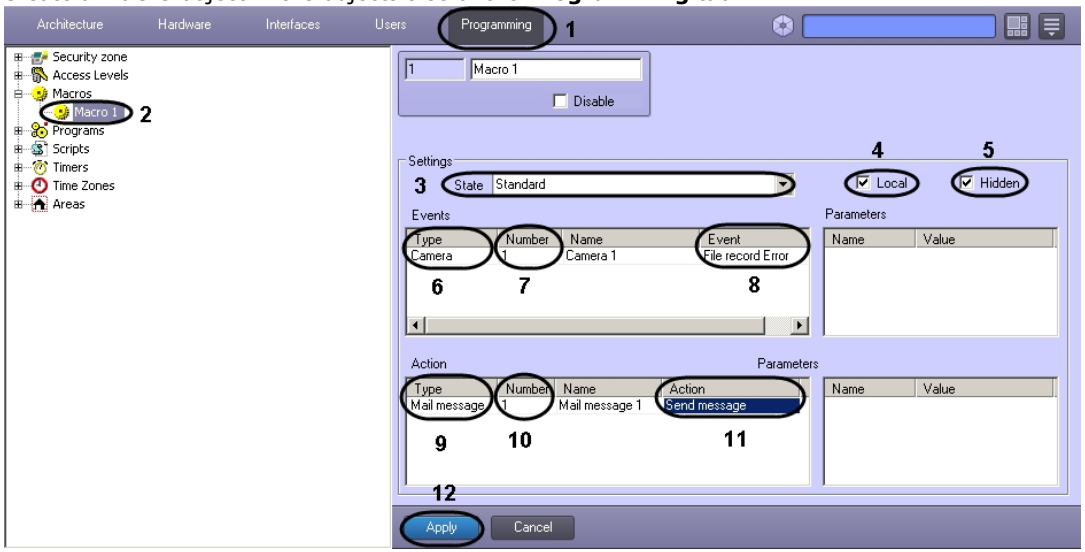

3. Set the **State** parameter.
4. Check the **Local** checkbox to send the messages from a local computer only.
5. If the manual start of macros from the main control panel of Intellect software should be forbidden, set the **Hidden** checkbox.
6. Choose the event object type for the e-mail macro to be related to.
7. Choose the event object number for the e-mail macro to be related to.
8. Choose the name of the event to trigger the sending of an e-mail message.
9. Choose the **Mail Message** object in the **Type** column.
10. Choose the number of the **Mail Message** object to be sent by the macro.
11. Choose **Send Message** in the **Action** column.
12. Press the **Apply** button to save the settings for the **Macro** object.

Setting up the Voice Message Service (V-dial)

General information and usage details of the Voice Message Service

The Voice Message Service is used to transmit voice messages over telephone lines. The Service automatically dials up the specified phone numbers and plays the audio files. The following dialing options are available: until connection, until answer, until digital acknowledgement of message reception. To be able to send a voice message, a voice modem (V-Dial) should be installed on the computer.

> **Note.**
> For proper detection of a voice modem in INTELLECT™, the inf folder is to be created in the Intellect/Modules directory. The drivers of installed modem are to be copied to the Intellect/Modules directory. This action is to be performed for Windows 7 / Server 2012.

To create and send a voice message:

1. Create and configure the **Voice Message Service** object.
2. Create and configure the **Voice Message** object.
3. Create a macro for sending the voice message.

Requirements for voice modems

Creating and setting up the Voice Message Service object

To set up the **Voice Message Service** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Voice Message Service** object in the **Computer** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

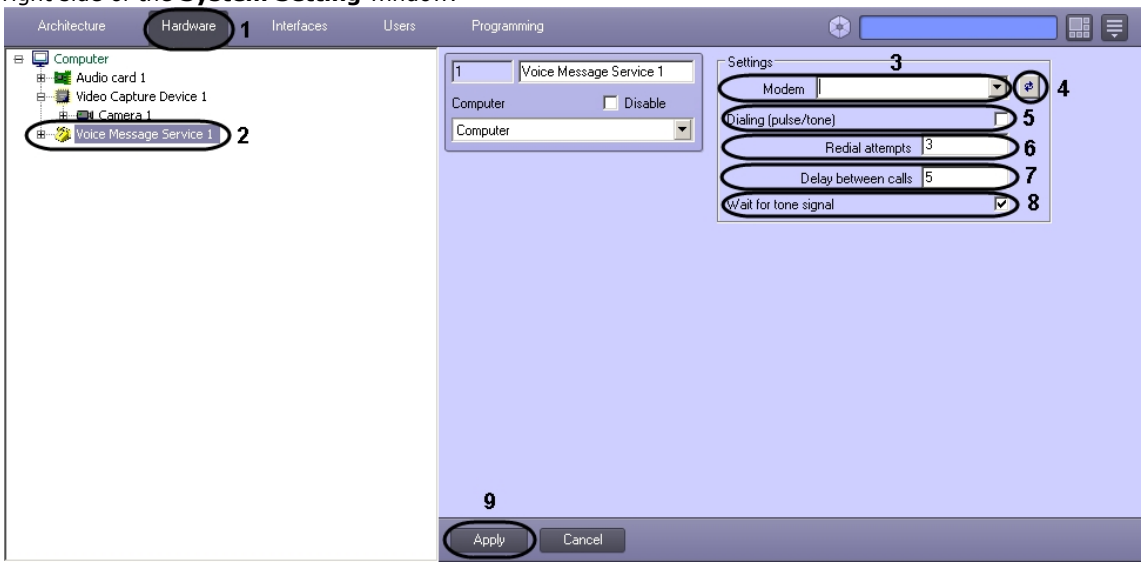

3. Choose a modem in the list of all modems available in the system.
4. If the modem is not in the list or there are no modems in the list, press the modem search button.
5. Check/uncheck the checkbox to choose the dialing mode.
6. Enter the number of dialing attempts.
7. Enter the delay between dialing attempts, in seconds.
8. Check the checkbox to wait for dialtone.
9. Press the **Apply** button to save the settings for the **Voice Messages Service** object.

Creating voice messages

To set up the **Voice Message** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Voice Message** object in the **Voice Message Service** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

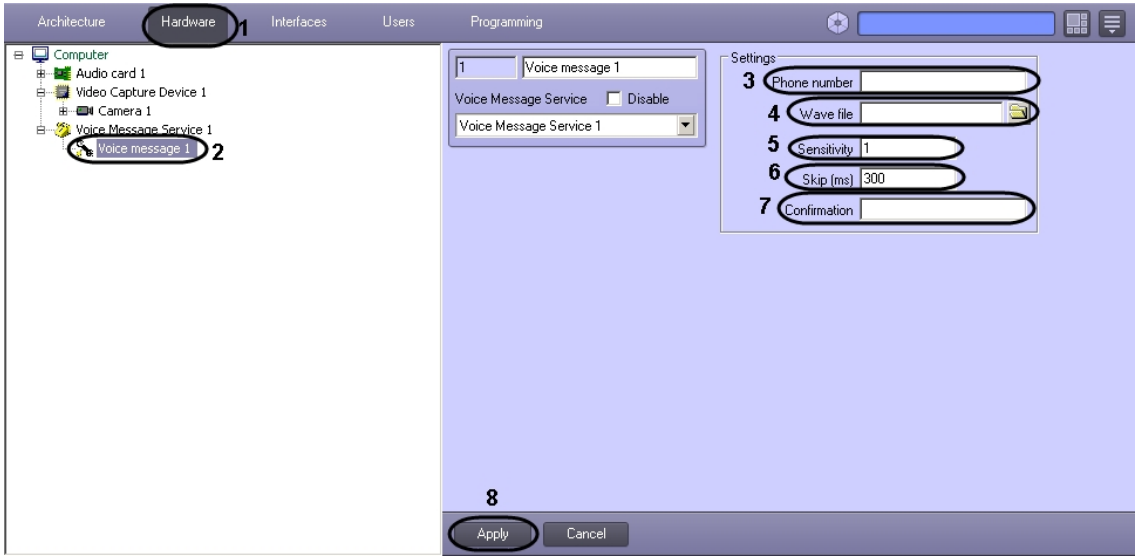

3. Enter the telephone number into the **Phone** field in the following format: [prefix "+"] [country code] [city/provider code] [phone number] with no spaces or other delimiters.
4. Load the wave file to be sent as a voice message.
5. Specify the sensitivity level, which will eliminate noise on the telephone line, ensuring correct message transmission. Values from 1 to 10 are acceptable.
6. Specify the delay between the recipient answering and the beginning of the message. Set in milliseconds (1000 ms = 1 sec).
7. Enter the code for the recipient to confirm receipt of the message. This is a digital code set in the system which the recipient dials in tone mode to confirm receipt of the message.
8. Press the **Apply** button to save the settings for the **Voice Message** object.

Creating and setting up the macro for sending the voice message

The message is sent upon execution of the macro. The macro executes immediately after the registration of the event it is set for. To create the macro for sending the voice message:

1. Go to the **Programming** tab of the **System Settings** window.
2. Create a **Macro** object in the objects tree of the **Programming** tab.

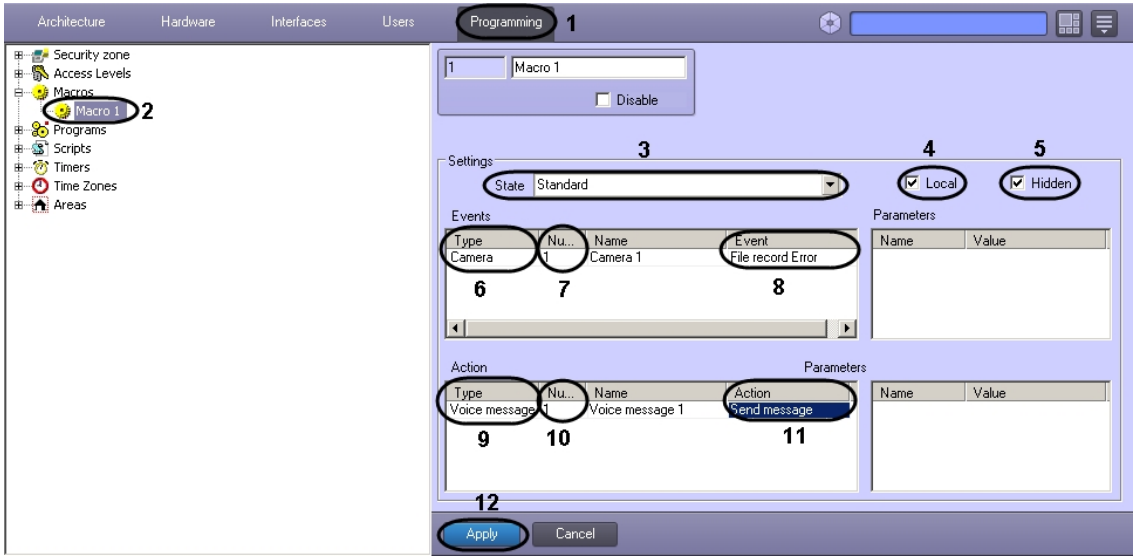

3. Specify the **State** parameter.
4. Check the **Local** checkbox to send the voice messages from a local computer only.
5. If the manual start of macros from the main control panel of Intellect sofware should be forbidden, set the **Hidden** checkbox.
6. Choose the event object type for the voice message macro to be related to.
7. Choose the event object number for the voice message macro to be related to.
8. Choose the name of the event to trigger the sending of the voice message.
9. Choose the **Voice Message** object in the **Type** column.
10. Choose the number of the **Voice Message** object to be sent by the macro.
11. Choose **Send Message** in the **Action** column.
12. Press the **Apply** button to save the settings for the **Macro** object.

Setting up the Voice Notification Service

General description and usage details of the Voice Notification Service (VNS)

The voice notification service is used for audio notification of Intellect Operators about the alarm event registered by the system. This service allows voice notification of the remote workstations using the following devices: headphones (speakers) connected to the workstation’s sound card, IP camera or LinuxHub. The service provides automatic transmission of the voice notification to the specified device IP address and audio file playback.

To create and send the voice notification:

1. Create and set up the **Voice Notification Service** object.
2. Create a macro for sending the voice notification.

Creating and setting up the Voice Notification Service object

To set up the **Voice Notification Service** object, do the following:

1. Go to the **Hardware** tab of the **System Settings** window.
2. Create the **Voice Notification Service** object in the **Computer** node in the objects tree. The object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** window.

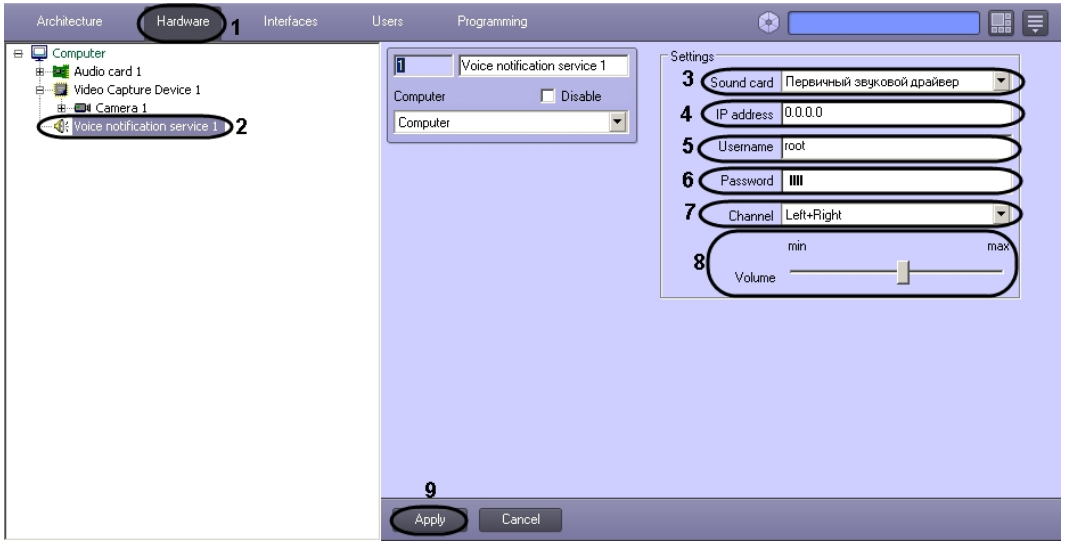

3. Choose the device in the **Sound card** list to send the notification to.
4. Specify the IP address of the network device (sound card, IP camera or Linux Hub), used to access this device over the network. If the sound card of the local computer is selected, this field is disabled.
5. Specify the username of the network device (sound card, IP camera or Linux Hub), used to access this device over the network. If the sound card of the local computer is selected, this field is disabled.
6. Specify the password of the network device (sound card, IP camera or Linux Hub), used to access this device over the network. If the sound card of the local computer is selected, this field is disabled.
7. Choose the headphones (speakers) playback option in the **Channel** drop-down list.
8. If the soundcard has two outputs (left/right), the list contains the following options: a) **Left**, b) **Left + Right**, c) **Right**.
9. If the sound card has N outputs, the list contains the numbered outputs from 0 to N-1.
10. Specify the volume level using the slider.
11. Press the **Apply** button to save the settings for the **Voice Notification Service** object.

Creating and setting up the macro for sending the voice notification

The voice notification is sent upon execution of the macro. The macro executes immediately after the registration of the event it is set for. To create the macro for sending the voice notification:

1. Go to the **Programming** tab of the **System Settings** window.
2. Create a **Macro** object in the objects tree of the **Programming** tab.

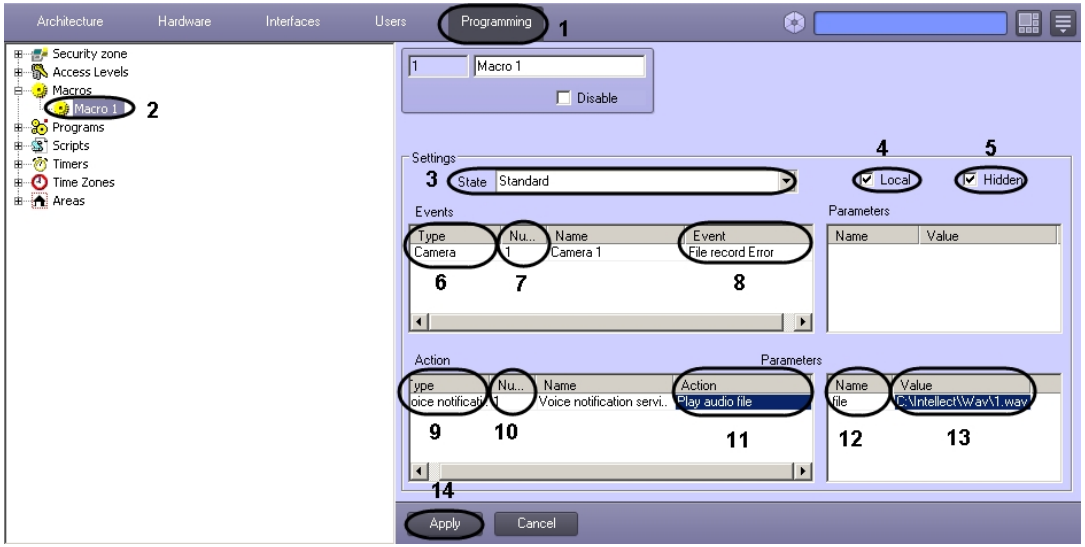

3. Specify the **State** parameter.
4. Check the **Local** checkbox to send the voice notifications from a local computer only.
5. If the manual start of macros from the main control panel of Intellect software should be forbidden, set the **Hidden** checkbox.
6. Choose the event object type for the voice notification macro to be related to.
7. Choose the event object number for the voice notification macro to be related to.
8. Choose the name of the event to trigger the sending of the voice notification.
9. Choose the **Voice Notification** object in the **Type** column.
10. Choose the number of the **Voice Notification** object.
11. Choose **Play wave file** action.
12. Click the **Name** field in the **Parameters** table. The **Value** field becomes available to specify the audio file.
13. Specify the full pathname of the wave file to be sent as the voice notification.
14. Press the **Apply** button to save the settings for the **Macro** object.

Replicating archive from unconnected servers using the removable storage

Order of archive replication from unconnected servers

It is possible to receive video and audio archive from unconnected Servers in the *Intellect* software using the removable storage. Records over a specified period are copied from the Source-Server to the Target-Server while replicating archive.

Archive replication is performed in the following order:

1. Configure the **Data replication service** object on the Target and Source;
2. Configure the Target objects tree for data replication;
3. Create a query file on the Target using the schedule.exe utility;
4. Copy the archive from the Source to a removable storage;
5. Restore the archive from a removable storage on the Target.

Configuring the Data replication service object

Data replication service is configured on the settings panel of the **Data replication service** object. This object is created under the **Computer** object in the **Hardware** tab of the **Syst**

em settings dialog box.

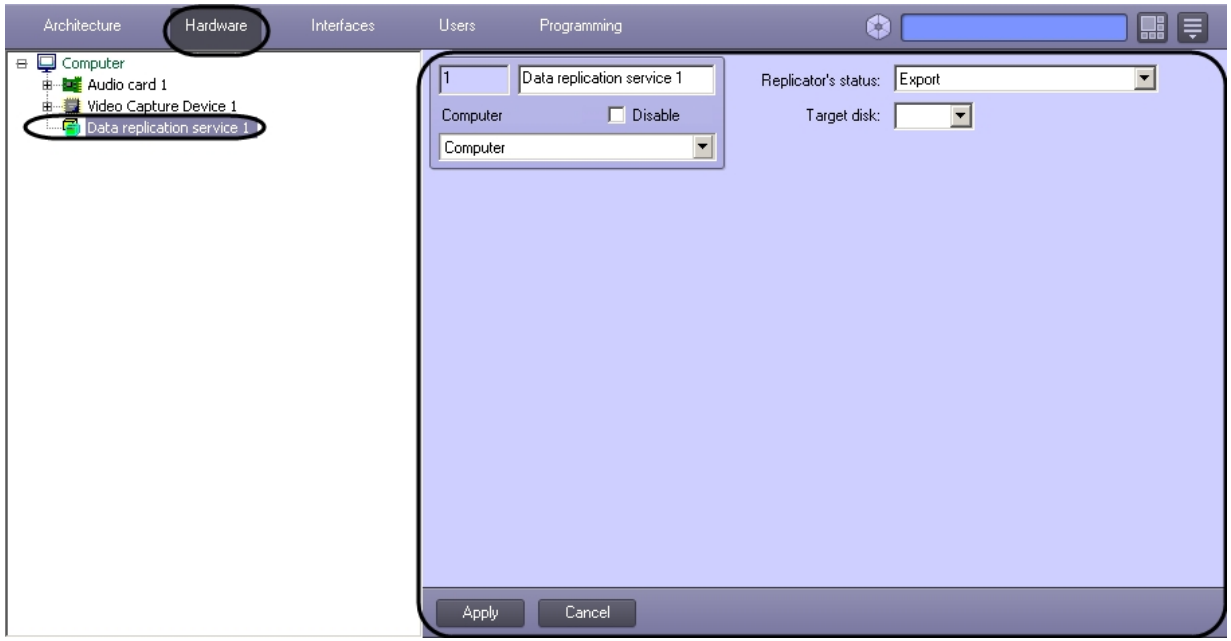

To configure the data replication service, do the following:

1. Go to the settings panel for the **Data replication service** object.

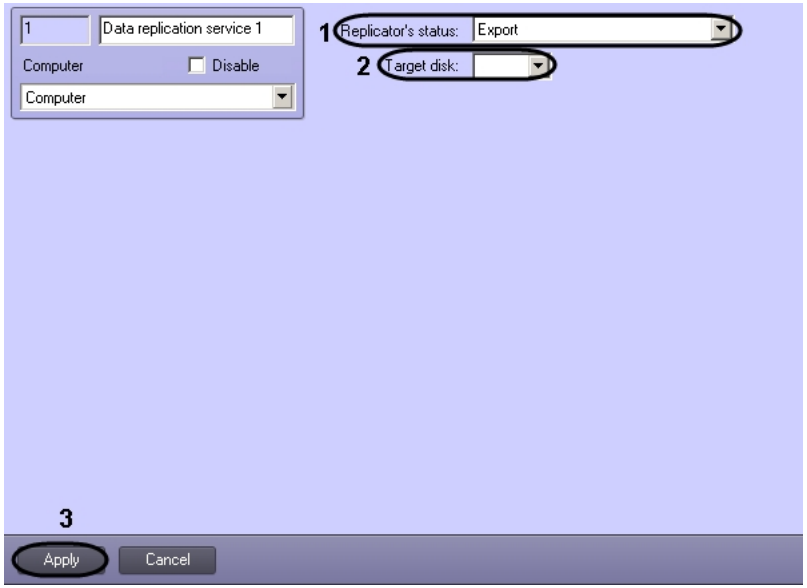

2. In the **Replicator's status** dropdown list select the **Export** value if the Server is an archive Source or the **Target** value if the Server is a target (1).
3. If the Server is a Source, then in the **Target disk** dropdown list select the name of a removable storage used for archive transfer. If the Server is a Target, then in the **Target disk** dropdown list select a disk where the archive form a removable storage is to be copied (2).
4. Click the **Apply** button (3).

Configuration of the data replication service is completed.

Configuring the Target objects tree for data replication

For proper replication operation the following objects are to be created in the objects tree of the Target objects:

1. In the **Hardware** tab of the **System settings** dialog box create the **Computer** objects with the names corresponding to the names of Sources from which the archive records are to be copied.

2. Under the **Computer** object create the **Video Capture Device** objects with the names that correspond to the same names on Sources (2).
3. Under the **Video Capture Device** objects create the **Camera** objects with numbers corresponding to the camera numbers the archive records from which are to be copied from

Sources (3).

> **Note.**
> The **Camera** and **Video Capture Device** objects will be disabled because there is no connection between Source and Target.

When replication is completed the archive is available in the interface of Video surveillance monitor on cameras that are in the query.

Configuration of the Target objects tree is completed.

Creating the query file

The query file specifies Sources, cameras and time periods for archive replication. This file is created on the Target. To create the query file the following conditions are to be met:

1. Users are created in the INTELLECT™ (see User registration and removal section).

   > **Note.**
   > Users with the same name and password are to be ctreated on Source and Targen for stable operation of the **Data replication service**.

2. Corresponding rights are assigned to users (see Registration of users' rights section).
3. At least one **Camera** object is created in the Target hardware tree.

The query file is created using the *schedule.exe* utility (see The shedule.exe utility for creating a replication query file section).

Copying the archive from the Source

To copy the archive from the Source, do the following:

1. Connect the removable storage with a query file to the Source.
2. The *replication.exe* file located in the root of removable storage is run automatically.

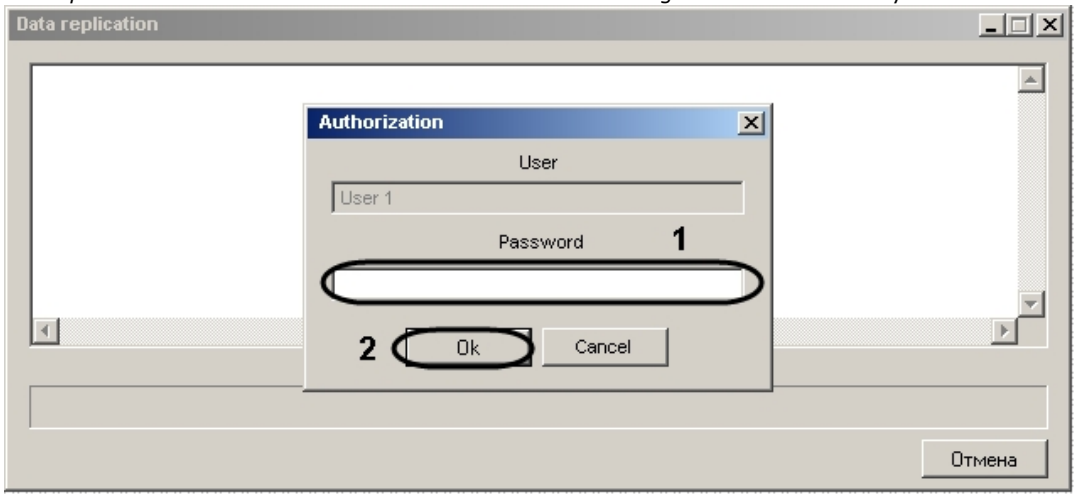

> **Note.**

If the query file is not run automatically, then run it from the command prompt with the **-pack** parameter.

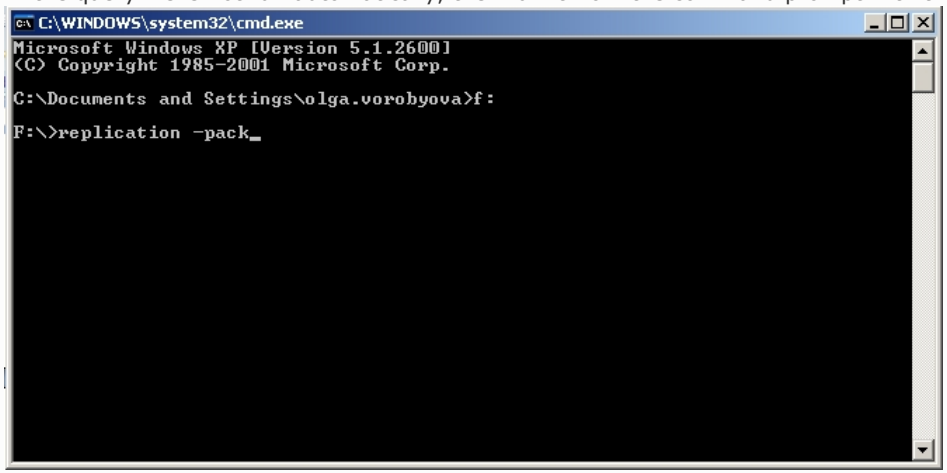

3. In the **Authorization** dialog box type-in the password of user who makes the replication (1).

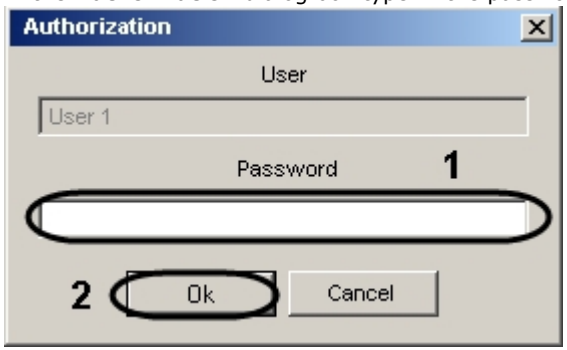

4. Click the **OK** button (2).
5. Wait when the data copying is complete.

Note.
If there is no enough space for copying all required data, then there will be no copying.

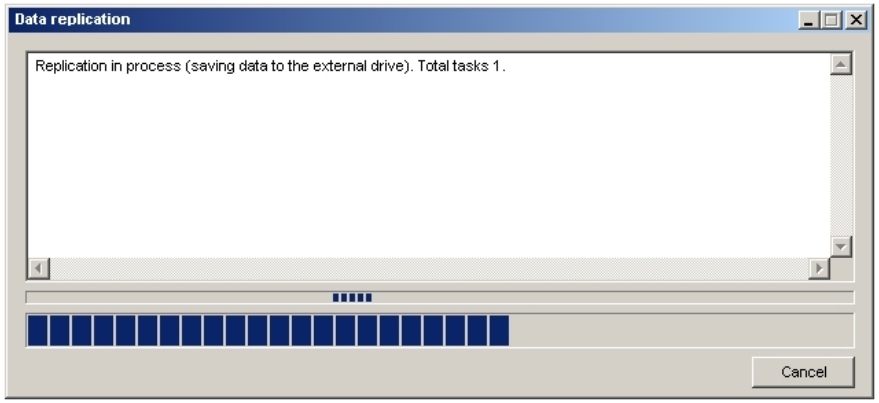

6. Click the **Exit** button.

Requested part of the archive is copied to a removable storage and located in the IntellectBackup/Computer_name directory. Files of log replication with the .LOG extension are located in the IntellectBackup directory.

Removable storage is automatically removed when the copying is complete.

Archive copying from the Source is completed.

Restoring the archive on the Target

When the archive is restored data is copied from the removable storage to the Target.

To restore the archive do the following:

1. Connect the removable storage to the Target.
2. Run the request file from the command prompt with the **–unpack –d:disk_with_archive** parameters.

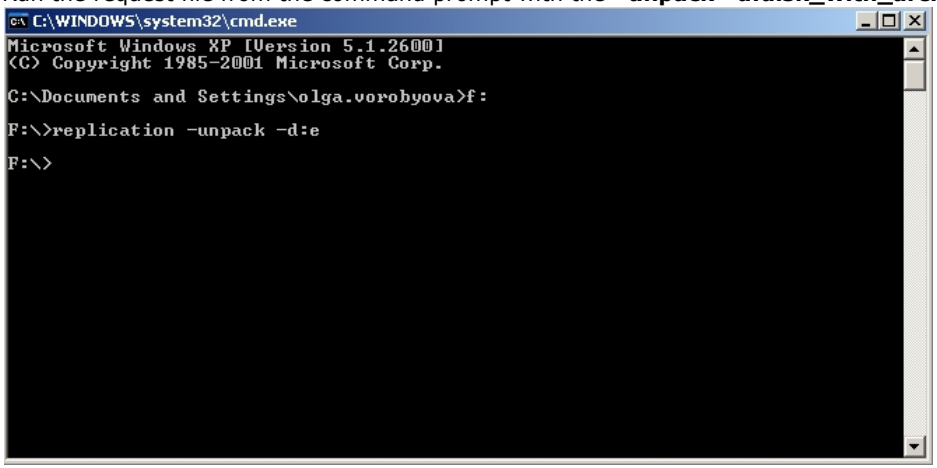

3. Wait when the data copying is complete.
4. Click **Exit**.

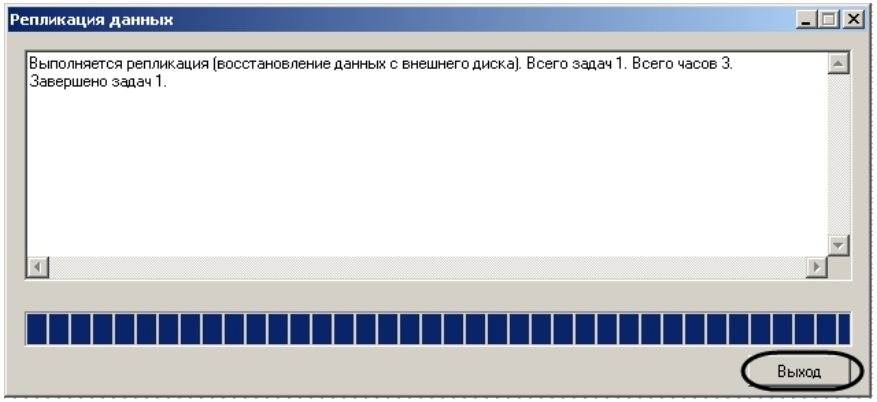

The archive restoring on the Target is completed.

Configuring the Web-server module

General description of the Web-server module

The Web-server module is used for viewing the video surveillance information in a web browser using the TCP/IP communication protocol.

Web-server provides some of the functions of an HTTP server, video transfer gate and HTTP control commands.

Web-server provides the following HTTP server functionality:

1. Access control through authorization.
2. Working as a gate for transferring video data using HTTP/HTTPS protocol.
3. Video monitoring and camera control through the web browser using the TCP/IP environment.
4. Control of camera movement through the web browser using the TCP/IP environment.
5. Setting the layout of the video frames on the screen: 1, 4, 6, 9 windows per screen.
6. Viewing the archives stored on the videoserver for each camera through the video surveillance window.
7. Limiting access rights for viewing the video feed from the cameras, controlling the camera movement, and viewing recordings from the videoserver.
8. Displaying the video signal parameters (frame rate (fps) and frame size (kB) in the surveillance window.

Attention!
Web-server displays only video in MJPEG format. When video is transferred onto Web-server, the Web-server performs video stream recompression and that causes the traffic increment while transmitting video onto Web-server surveillance monitor.

The Web-server interface looks like a video surveillance monitor and is built as an HTML page. This page is called the Web-server's home page. The surveillance monitor and control elements for the camera movement devices are driven by the Java applet.

Intellect software can be set up to require user authorization on entering the Web-server. Access to viewing and controlling the movement of the cameras through the Web-server is defined by the module settings.

System requirements

Video surveillance using the Web browser

System requirements

The Web-server module stable opration requires Java Runtime Environment version 1.6. 7 or higher (mentioned software is included into the Intellect software installation package) and browser Internet Explorer version 8.0 and higher (this software is available free of charge).

Installing Java Runtime Environment

Installing Java Runtime Environment

The Web-server module working on videoservers and workstations of the *Intellect*-based surveillance system requires Java Runtime Environment. This software is available free of charge.

The option for Java Runtime Environment installation is included in the *Intellect* software installation procedure.

Java Runtime Environment should be manually installed on the remote workstations. The Java installation package is available for downloading from www.java.com. If the Web-server home page is accessed from a computer with no Java installed, the home page will contain a direct link to the Java Runtime Environment installation package ready for downloading.

Note.
It is necessary to install Java Runtime Environment not in quiet mode. Otherwise the Intellect may not respond displaying two possible messages:

1. «Error applying transforms. Verify that the specified transform paths are valid». - alternate route s of this error are detailed on the site http://www.java.com/ru/download/help/error_applying_transforms.xml .
2. «Revocation information for the security certificate for this site is not available. Do you want to proceed? » - certificate installation query.

If the message appears when you try to access the Web-server saying that the application is blocked by security settings (see figure below), the Java security policy configuration is required for the computer on which you have received this message.

Configuring security policy is performed with the Java Control Panel utility. To run this utility, go to **Start** -> **Control Panel** -> **Java**. After the utility has been launched, go to the **Security** tab.

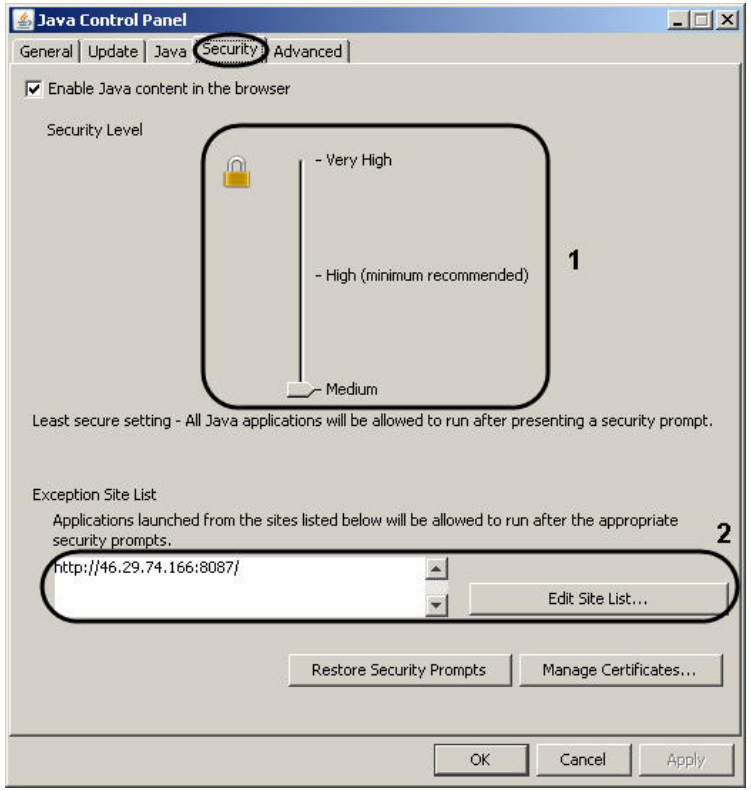

For Java Runtime Environment 7 update 45 and lower versions it is required to reduce security level (1).

Starting with Java Runtime Environment 7 update 51 version you need to add Web-server address to the list of Java exceptions (2).

Authorization on the Web-server home page

Access to the Web-server home page is restricted by an HTTP user authorization algorithm.

A user can be authorized by any of the passwords registered for the Intellect users. No additional authorization setup for Web-server HTTP server is required.

Access to viewing the video feed from the cameras and controlling the cameras, sensors and motion devices is restricted according to the Web-server-related settings of the videoserver.

Connection to the Server

Starting and setting up the Web-server module

Depending on its operative requirements, the Web-server module can be set up in the following optional stages:

1. Open the **Hardware** tab and select the **Web-server** object in the objects tree.

2. Check if the Web-server is on. This can be checked in the notification area of the Windows taskbar. By default, the Web-server is on. If the Web-server is off, turn it on before starting the setup procedure.

3. Set up the interface for the video surveillance monitor of the Web-server by changing the Java applet parameters shown on the Web-server home page.
4. Set up the display of the data for traffic estimation on the Web-server video surveillance monitor by changing the Java applet parameters shown on the Web-server home page.

Set up the Web-server to act as a gate on another HTTP-server by changing the Java applet parameters shown on the Web-server home page.

Configuring the videoserver to connect Clients via the Web-server module

The videoserver configuration to connect Clients via the Web-server is performed on the Server in the **System settings** box. In most cases, the default videoserver settings can be used for proper Web-server operation.

To configure the Web-server module, do the following:

1. Create the **Web-server** object on the basis of the **Computer** system object (see Creating the Web-server object).
2. Select and configure cameras for displaying on the Web-server home page (see Selecting and configuring cameras for the Web-server module or Bulk selecting and configuring cameras for Web-server).
3. Set the connection parameters of Clients to the Web-server (see Setting the parameters of connecting Clients to the Web-server).
4. Set the default user for Web-server module (see Setting the default user for the Web-server module).
5. Set up the processing of ECHD requests (Enabling the processing of ECHD requests and selecting rtsp server).

Video surveillance using the Web browser

Creating the Web-server object

To create the **Web-server** object, do the following:

1. Select the required **Computer** object in the **Hardware** tab of the **System settings** dialog box (1).

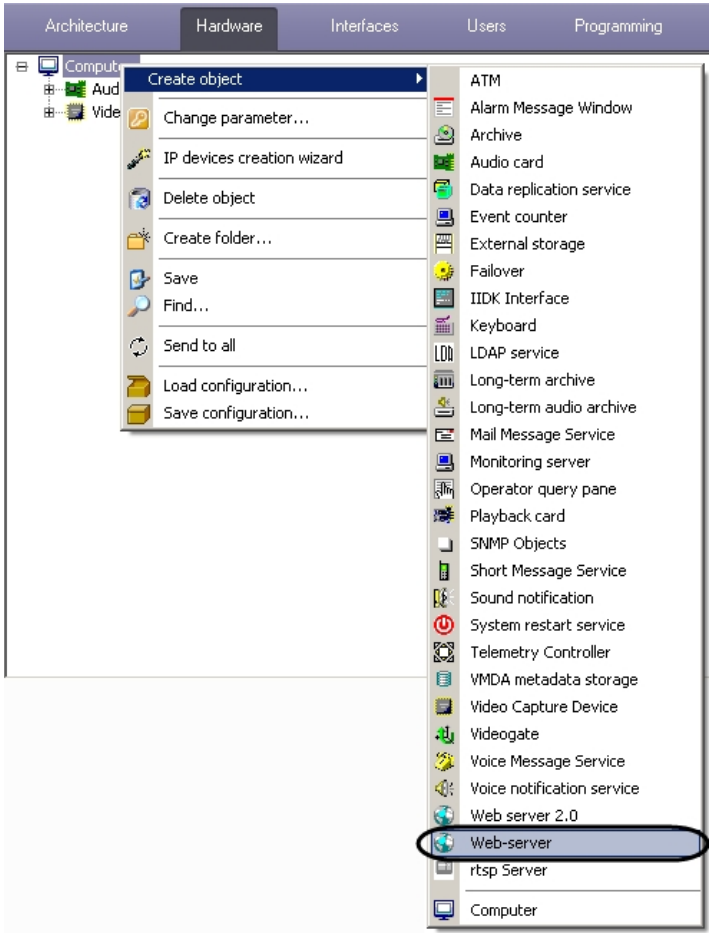

2. Right-click upon the selected **Computer** object and select **Create object** -> **Web-server** in the context menu (2).
3. Set the number and name of **Web-server** object and then click **Apply** button.

Note.
As a result the settings panel for the **Web-server** object opens.

4. Repeat steps 1-3 for all required **Computer** and **Web-server** objects.

The **Web-server** object is now created.

Selecting and configuring cameras for the Web-server module

One can select and configure cameras for displaying on the **Web-server** home page in two ways:

1. Individually. The settings panel of the **Web-server** object is used**.**
2. In bulk. The **Add/Edit cameras** dialog box is used.

Note.
Information on how to bulk select cameras in order to stream video via Web-server is given in Bulk selecting and configuring cameras for Web-server section.

To select cameras for displaying on the Web-server home page, do the following:

1. Go to the **List of cameras** tab on the settings panel of the **Web-server** object (1).

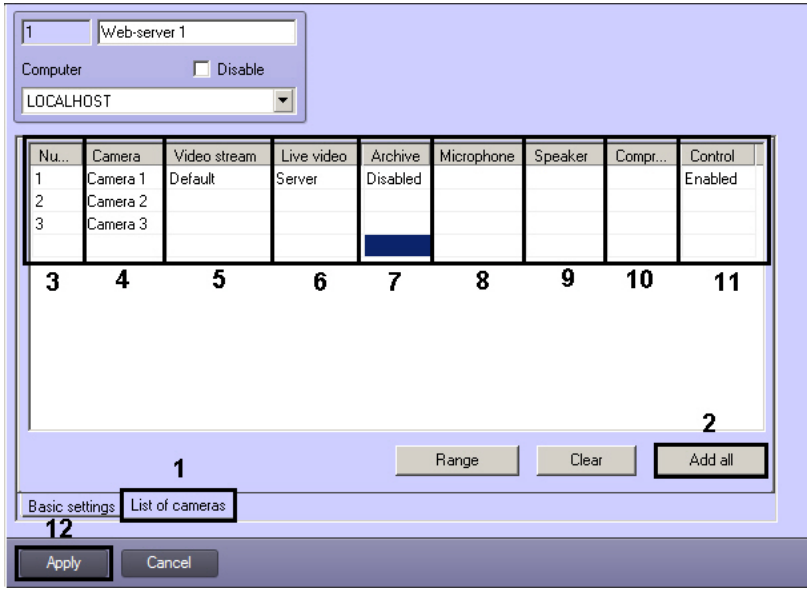

> **Note.**
> To select all cameras created in the system use the **Add all** button (2).

2. In the **Number** dropdown list select the number of a required camera (3). Being left-clicked the **Camera** field is automatically filled in with the camera name with the selected number (4).

> **Note.**
> To select all the cameras registered in the system, click the **Add all** button.

3. In the **Video steam** dropdown list select the number of the stream that is to displayed in the Web-server interface (5). Information on how to configure video streams is given in the *Configuration of multistream video* section.
4. In the **Live video** dropdown list select the source of live video to be displayed in the Web-server interface (6). If the **Server** value is selected, then live video is received from the Server on which the corresponding **Camera** object is created.

   If the **Videogate** value is selected, then video will be received from the corresponding videogate. A camera is to be configured in the corresponding Videogate – see the *Selecting and configuring the cameras for the Videogate module* section.

   If the **Server** value is selected, then archive footage is received from the Server on which the corresponding **Camera** object is created. If the **Videogate** or **Backup archive** value is selected, then archive footage is received from the videogate or backup archive. A camera is to be configured in the corresponding Videogate or Backup archive.
5. In the **Archive** dropdown list select the the source of archive footage to be displayed in the Web-server interface (7).
6. Select the **Microphone** object associated with the camera from the **Microphone** drop-down list if a sound came from the camera is to be passed over the **Web-server 2.0** (8).
7. Select the **Speaker** object associated with the camera from the **Speaker** drop-down list if a sound came from the **Web-server 2.0** is to be played (9).

> **Attention!**
> Steps 6 and 7 are to be executed only in case if the Web-server runs together with the Web-server 2.0, which, in its turn, is used to work with the iOS-based mobile client. For more information on the Web server 2.0, see section Configuring the server for the clients connection via the Web-server 2.0 module

8. By default the compression ratio of video transmitted to the Surveillance monitor through the Web-Server is the same as the compression ratio of video before its recording to the disk or transmitting (the blank value is selected in the **Compression** dropdown list). To change the compression ratio, select the required compression (1-5 where 1 is minimum compression ratio, and 5 is maximum) ratio in the **Compression** dropdown list (10).

> **Note.**
> The compression level parameter for the signal transmission to remote workstations via the Web-server is inverse to the **Recording quality** parameter of the **Camera** object.
> Increase of video signal's compression level decreases the network traffic while connecting the Client to the Web-server. But video signal on the Server has to be recompressed in case of setting the compression level that results in greater load on Server's central processor. The compression level is selected empirically.

9. By default the camera control (arming/disarming, PTZ control, control over recording to the archive) in accordance with user rights is enabled. To disable the camera control, select the **Disabled** value in the **Control** dropdown list (11). As a result the camera control in the Web-server interface is disabled regardless of the user rights.
10. Repeat steps 2-9 for all required cameras.

> **Note.**
> To clear the **Cameras** table click the **Clear** button.

11. To save the changes, click the **Apply** button (12).

Cameras for displaying on the Web-server home page are now selected.

Bulk selecting and configuring cameras for Web-server

Parameters of cameras can be bulk selected and edited for displaying on the **Web-server** home page.

Bulk select cameras as follows:

1. Go to the settings panel of the **Web-server** object**.**
2. Click the **Range** button in the **List of cameras** tab (1).

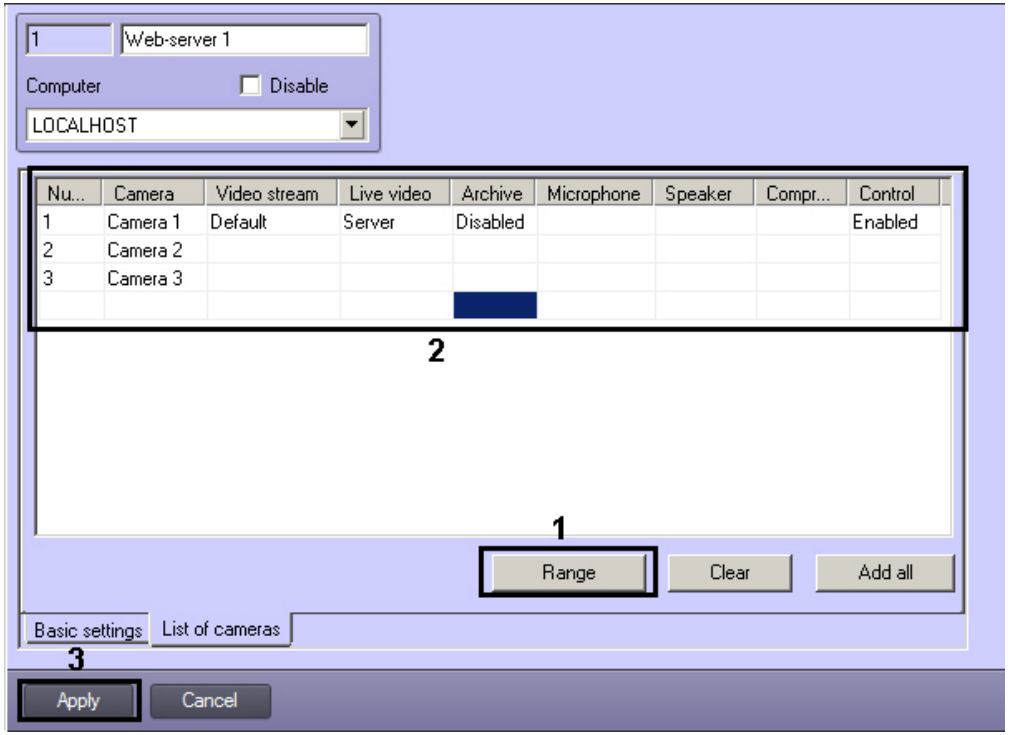

3. As a result the **Add/Edit cameras** dialog box appears**.**

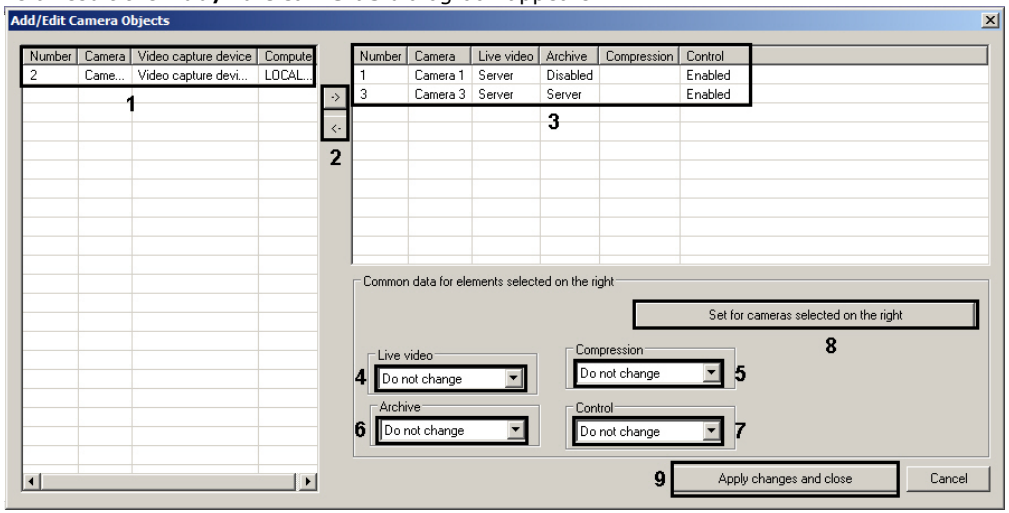

4. Select required cameras in the list on the left of the **Add/Edit cameras** dialog box (1).
5. Move selected cameras to the list on the right by clicking the button (2).

Note.
The list on the right is the list cameras selected to stream video via Web-server.

The button performs reverse action, i.e. it is used to move selected cameras from the right list to the left one (2).

6. As a result selected cameras are displayed in the list on the right of the **Add/Edit cameras** dialog box (3).
7. If necessary select names of required cameras in the list on the right to bulk edit the parameters (4).

Important!
The same parameter values will be set for all selected cameras.

8. In the **Live video** dropdown list select the source of live video to be displayed in the **Web-server** interface (4). If the **Server** value is selected, then video will be received from the Server on which the corresponding **Camera** object is created. If the **Videogate** value is selected, then video will be received from the corresponding videogate and the camera is to be configured in the corresponding Videogate – see Selecting and configuring the cameras for the Videogate module.
9. By default the compression level of video sent to the monitor of the Web-server module is the same as one before storing video on disk or transmitting it over network (an empty value is selected in the **Compression** dropdown list). To change the video compression level select the required compression level (from 1 to 5) in the **Compression** dro pdown list. 1 is the minimum compression level and 5 is the maximum compression level (5).

Note.
The video compression level parameter is inversely related to the **Quality** parameter specified in the **Camera** settings.
Video compression level increase reduces traffic when connecting the Client to Web-server. However, if the video compression level is set video must be recompressed on the Server – it results in significant increase of Server CPU load. The compression level is selected empirically.

10. In the **Archive** dropdown list select the source of archive video to be displayed in the **Web-server** interface (6). If the **Server** value is selected, then archive video will be received from the Server on which the corresponding **Camera** object is created. If the **Videogate** or **Backup archive** value is selected, then video will be received from the corresponding videogate or backup archive and the camera is to be configured in the corresponding Videogate or Backup archive.
11. By default camera control (including PTZ control, arm/disarm and store to archive control) is enabled according to user rights. To disable camera control select the **Disable** valu e in the **Control** dropdown list (7). As a result camera control in the Web-server interface will be forbidden regardless user rights.
12. To save specified parameters click the **Set for cameras selected on the right** button (8).
13. As a result the specified parameters are displayed in the list on the right of the **Add/Edit cameras** dialog box (3).
14. Repeat steps 4-13 to bulk edit all required cameras.
15. To save the changes and close the **Add/Edit cameras** dialog box click the **Apply changes and close button** (9).
16. The specified camera settings will be displayed in the **List** table on the settings panel of the **Web-server** object (2).
17. To save the changes click the **Apply** button (3).

Cameras are now bulk selected.

Setting the parameters of connecting Clients to the Web-server

To set the parameters of connecting Clients to the Web-server, do the following:

1. Go to the **General settings** tab on the settings panel of the **Web-server** object (1).
2. In the **Port number** field of the **Http-server** group specify the number of the port to connect to Http-server (2).

Important!
This port is used when connecting to the *Web-server* from web-browser. The default port for connection of mobile clients is 8085. To change it, edit the jetty.port parameter value in the start_64.bat file (start_86.bat for 32-bit system) in <Intellect installation>\Modules\Jetty\ folder.

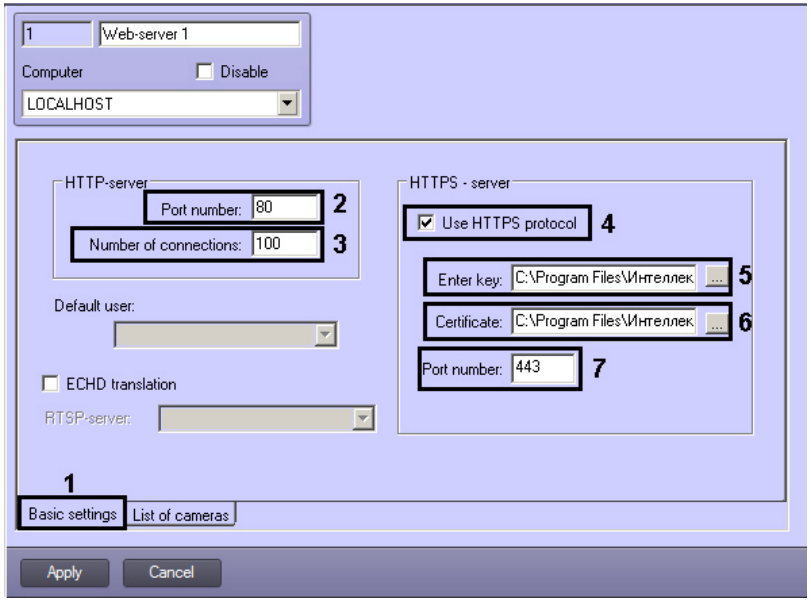

3. In the **Number of connections** field of the **Http-server** group specify the maximum permissible simultaneous connections to Web-server via Http protocol (2). The less there are connections, the less Server load is. This parameter is selected experimentally.

> **Note.**
> Connections are used to receive video (live or archive), to receive audio (live or archive), to send audio to INTELLECT™, to get data on configuration, to send commands to INTELLECT™, etc. The Client can use the same connection to perform several actions.

4. If data is to be transmitted via Web-server using HTTPS protocol, then perform the following settings in the **HTTPS-server** group:
   a. Set the **Use HTTPS protocol** checkbox checked (4).
   b. Specify path to the key file in the **Key** field using the ... button (5).
   c. Specify path to the certificate file in the **Certificate** field using the ... button (6).
   d. In the **Port number** field of the **HTTPS-sever** group specify the port number in order to connect to HTTPS-server (7).
5. To save all the changes, click the **Apply** button.

The parameters of connecting Clients to the Web-server are now set.

Setting the default user for the Web-server module

Default user is the user with rights and authorities to conduct video surveillance from a Web browser.

Before setting the default user, make sure that the users are created and added to the rights in INTELLECT™ (see Rights administration section).

To set default user, do the following:

1. Go to the **General settings** tab on the settings panel of the **Web-server** object (1).

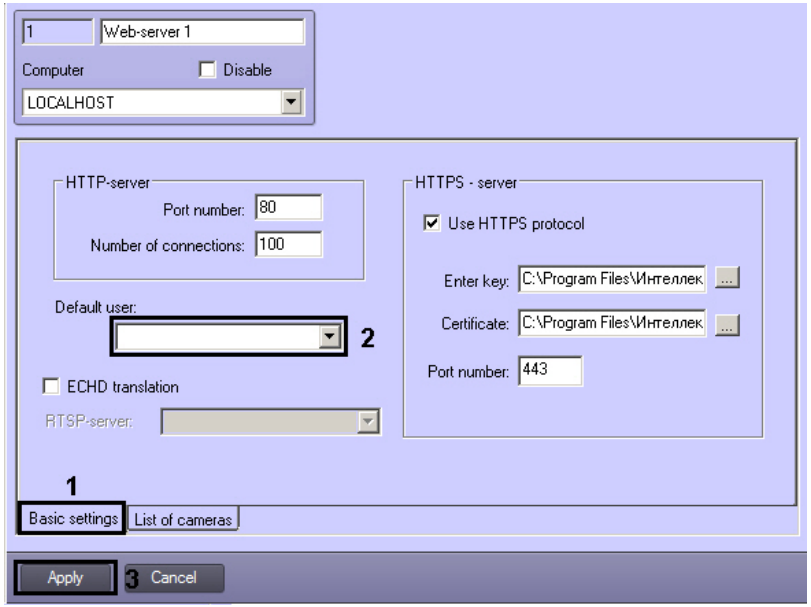

2. Select the default user in the **Default user** dropdown list (2)
3. Click the **Apply** button (3).

The default user for the Web-server module is now set.

Enabling the processing of ECHD requests and selecting rtsp server

Integration with ECHD (Unified data center) is supported in *Intellect*. Requests to *Intellect* are made in ECHD using HTTP API – see Intellect HTTP API document. Some requests have http/https interface. These requests are used to get info on configuration. The **rtsp Server** bound to the **Web-server** object streams live or archived video.

Besides binding the Web server to the RTSP server the **ECHD channel** objects are to be created under the **Camera** object for ECHD requests performance.

> **Note.**
> Information on how to create and configure the **rtsp Server object is given in** Configuring RTSP Server module section.

Bind **rtsp Server object** to process ECHD requests as follows:

1. Go to the **General settings** tab on the settings panel of the **Web-server** object (1).

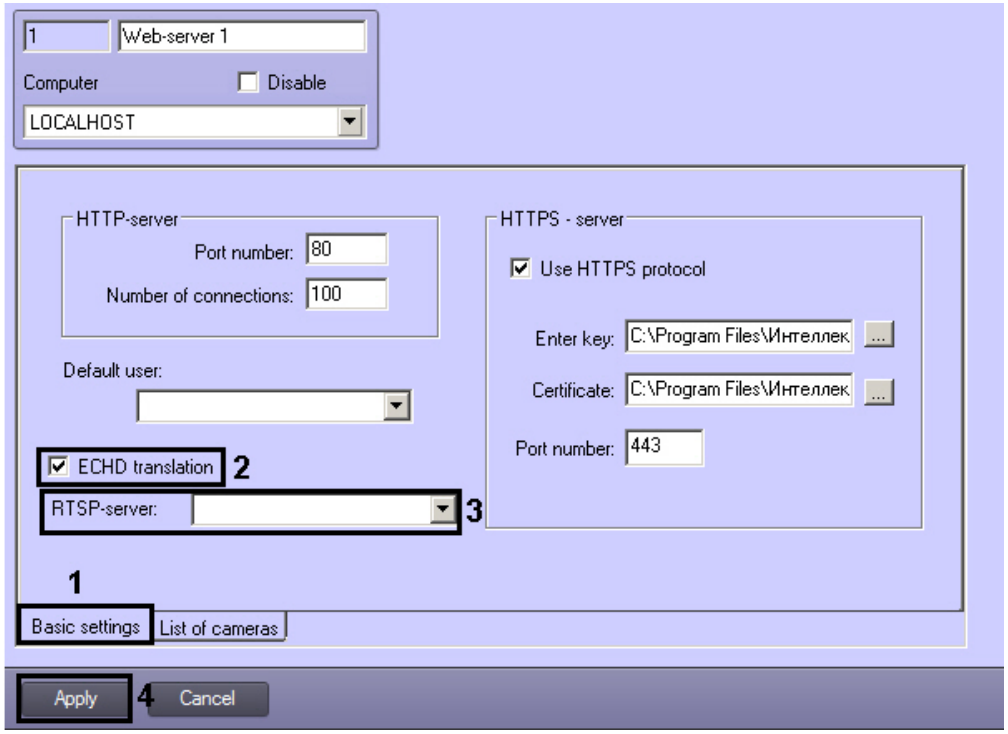

2. Set **the ECHD translation** checkbox checked (2).
3. Select created and pre-configured **rtsp Server** object in the **rtsp Server** dropdown list (3).
4. Click the **Apply** button (4).

The **rtsp Server** object is now bound to **Web-server** object.

Configuring the server for the clients connection via the Web-server 2.0 module

The *Web-server 2.0* module is designed for video surveillance on the side of a mobile client application. Detailed information on such applications can be found in the corresponding documents (see AxxonSoft mobile Clients. Documentation).

The *Web-server 2.0* also provides the following functionality:

1. sending to the mobile client video and audio coming from the camera;
2. sending to the mobile client video and audio coming from the archive;
3. notification the user about the alarms;
4. execution of macros;
5. sending to the mobile client and processing alarms;
6. control of PTZ cameras;
7. working with maps;
8. sending push notifications to client.

Note.
Push notifications are sent to a client regardless of whether the client is connected to the Server. The Apple server is responsible for delivering notifications. The device on which the client is installed must be connected to the Internet.

The **Web-server** object are to be created and configured for correct operation of the *Web-server 2.0* module (see Configuring the videoserver to connect Clients via the Web-server module section).

Creating the Web-server 2.0 object

In the Intellect software the **Web-server 2.0** object is based on the **Computer** object on the **Hardware** tab of the **System settings** dialog box.

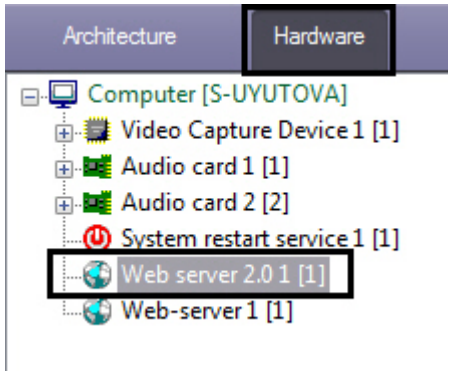

Configuring the Events filter for the Web-server 2.0 module

To configure the filter of events which are to be received by Web-server 2.0 module do the following:

1. Go to the settings panel of **Web-server 2.0** object.

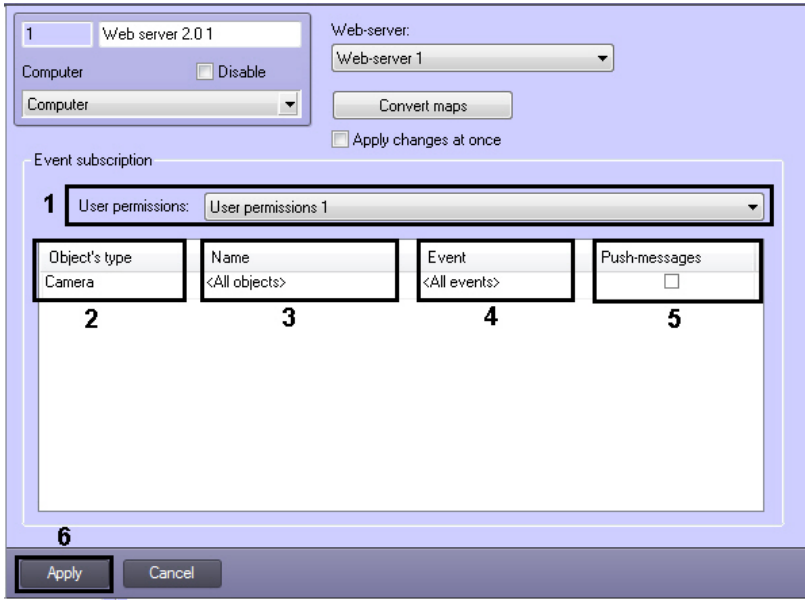

2. In the **User permissions** drop-down list, select the **User permissions** object for which you want to configure the events filter (1). Events that match the filter will be sent only to clients on which users with the selected permissions are connected. Different filters can be configured for different user permissions.

> **Note.**
> **User permissions** objects are created and configured on the **Users** tab of the **System settings** dialog box (see the section Rights administration).

> **Attention!**
> Only users added to the selected permissions will have access to the Web-server 2.0

3. In the **Object type** drop-down list, select the type of object from which you want to send events (2).

> **Note.**
> The **Object type** list contains only the object types that are included in the user's current permissions. If user permissions have not been selected, the list of object types is empty.

4. From the **Name** drop-down list select the name of object of specified type from which the events are to be sended, if it is needed (3).
5. From the **Event** drop-down list select the type of event coming from objects of specified type which is to be sended (4).
6. If you want to authorize sending push notifications about events of the selected type to the mobile client, select the **Push notifications** check box (5). For push notifications to function, it is necessary for the iOS client to have connected to the Server at least once. This enables the Server to get user account information and the ID of the device to which push notifications are to be sent. The device must also have an active Internet connection.

> **Note.**
> If sending of push notifications is disabled and the client is not connected to the Server, notifications are not sent anywhere when a relevant event occurs.

7. Repeat steps 2 – 6 for all required objects and events.

8. Click the **Apply** button to save settings in the Intellect software (4).

Configuration of the event filter for the Web-server 2.0 module is completed.

Using the Web-server settings for the Web-server 2.0 module

The **Web-server** object is to be created and configured for correct working of *Web-server 2.0* module.

Binding the **Web-server 2.0** to the **Web-server** is performed the following way:

1. Go to the settings panel of the **Web-server 2.0** object.

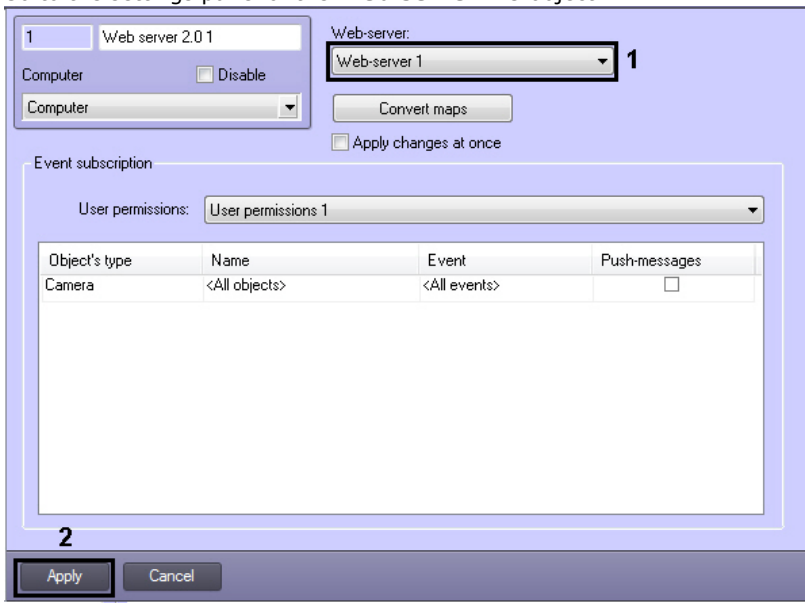

2. From the **Web-server** drop-down list select the required **Web-server** object (1).
3. Click the **Apply** button (2).

Binding the **Web-server** to the **Web-server 2.0** object is completed.

Converting maps

Maps are to be converted in order to function on the mobile client. The conversion is meant for sending maps to the mobile clients.

Objects are to be created in the hardware tree and added to the map.

To convert maps, do the following:

1. Go to the settings panel for the **Web-server 2.0** object.

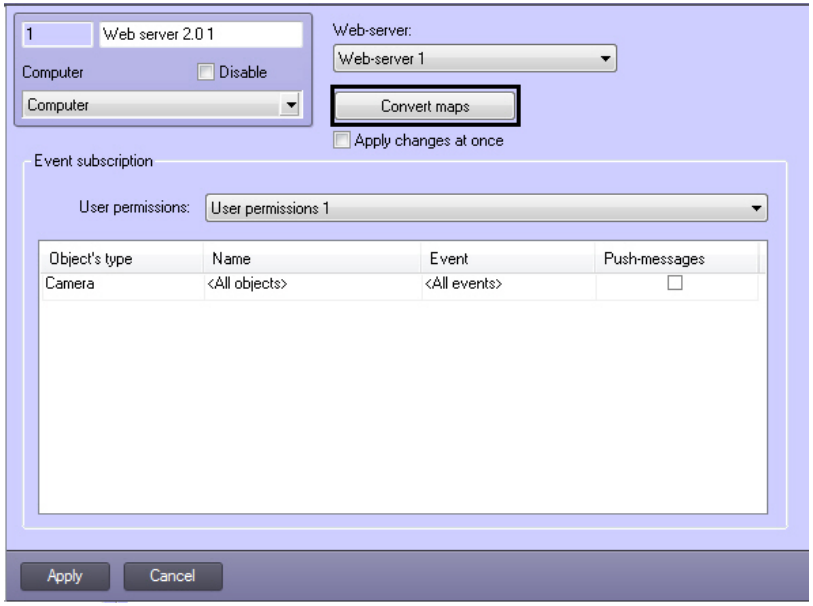

2. Click the **Convert Maps** button.
3. The **Convert Maps** box appears.

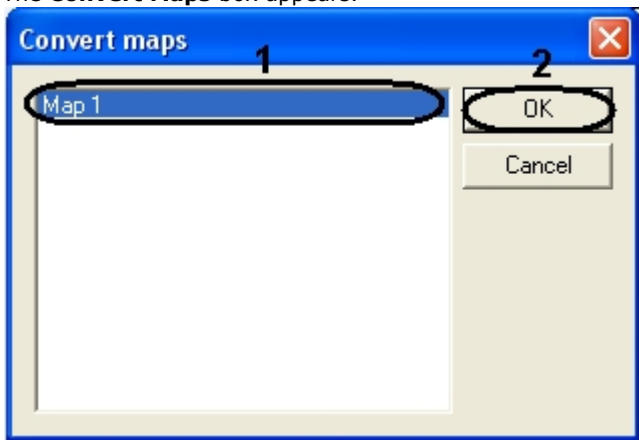

4. In the list, select maps that are to be converted (1).
5. Click the **OK** button (2).

Maps are now converted.

Applying changes of the user rights

In *Intellect* by default when user rights are changed (objects added or deleted), access rights are not changed in *Web-server 2.0* module until the **Apply** button is clicked on the settings panel of the **Web-server 2.0** object or *Intellect* is restarted, otherwise the mobile app operates as before.

It is possible to enable the **Apply changes at once** feature. *Web-server 2.0* module will immediately apply these changes of user rights.

> **Note.**
> This feature is not to be used in the large distributed systems.

Enable the **Apply changes at once** feature as follows:

1. Go to the settings panel of the **Web-server 2.0** object.

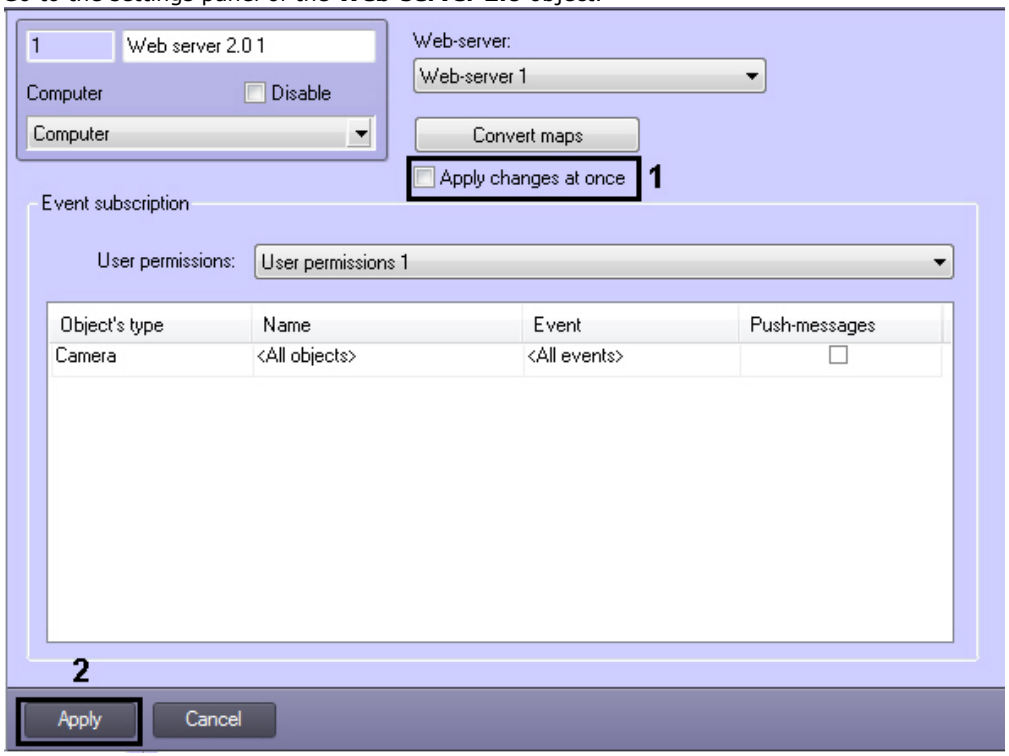

2. Set the **Apply changes at once** checkbox checked (1).
3. Click the **Apply** button (2).

The **Apply changes at once** feature is now enabled.

Web-server home page template and Java applet settings

The template for the Web-server home page is stored in the index.htm file located in the program folder of *Intellect* software, in the …\Modules\webroot subfolder. For example: C:\Program Files\Intellect\Modules\webroot.

The home page template holds the parameters of the page and of the Java applet displaying the surveillance windows.

By changing the Java applet parameters in the home page HTML-code, you can set the parameters of the video and control signal transmission through the gate (in case of using another HTTP-server), add or remove interface elements of the Web-server surveillance monitor, and enable showing the current frame size and frame rate for traffic estimation.

Each applet parameter description takes a separate line and consists of <param name=, followed by the quoted name of the parameter, and value=, followed by the quoted parameter value. The line ends with the > symbol.

The full line has the following format:

<param name=”Parameter name” value=”Parameter value”>.

Note.
If a parameter is not specified in the index.htm template, the default value is used.

Table 8.16—1 shows the available Java applet parameters.

Table 8.16—1

Parameter name	Possible values	Default value	Description
General data			
Version	-	-	HTML file version (must be the same as the client version)
Gate transmission parameters for video signals and controls			
port	number	80	Port number for the applet to receive the video feed and send the controls. The parameter is enabled if the “port.from” parameter has the value "html".
port.from	html| url	by default, this line is not included in index.htm	Specifies the source of the video feed port number for the applet to use: html – “port” parameter of the index.html file; url – URL by which the user accesses the index.html page.
path.from	html| url	by default, this line is not included in index.htm	Specifies the source of the path to the index.html page: html – URL, specified in index.html; url – URL by which the user accesses the index.html page.
path	string	- by default, this line is not included in index.htm	The path to index.html on the HTTP server, in case of a different HTTP server. The parameter is enabled if the “port.from” parameter has the value "html".
User interface display parameters			
layout.available	true|false	true	Enables (true) or disables (false) the windows layout panel on the surveillance monitor.
top.visible	true|false	true	Enables (true) or disables (false) the tools panel on the surveillance monitor.

layout.default	0|1|2|3	0	Specifies the default layout of surveillance windows when the Web-server home page opens. Possible values: 0 – one window 1 – four windows 2 – six windows 3 – nine windows
cam.default.id	number	1	The id of the camera whose window is displayed when the Web-server home page opens. This parameter is enabled, if the "layout.default" parameter has a value of 0.
messages	Text interface elements Visible text	see index.html file	The list of visible text elements of the interface: menu items, information strings in the surveillance window, etc. Only the visible text can be edited. IMPORTANT! The names of text elements are reserved. Editing them will result in their misinterpretation.
Parameters for displaying the data used in traffic estimation			
fs.fps	true|false	false by default, this line is not included in index.htm	Enables (true) or disables (false) the frame rate indication on the surveillance monitor.
fs.size	true|false	false by default, this line is not included in index.htm	Enables (true) or disables (false) the frame size indication on the surveillance monitor.

Setting up the surveillance monitor interface of the Web-server module

The interface of the surveillance monitor of the Web-server may be customized: removing the tools panel, choosing the default layout of the surveillance windows, changing the visible text on the menu item and service messages, etc.

Usually, the default interface settings provide quite a comfortable working environment. In case they need to be changed, do the following:

1. Using the text editor, for example Notebook, open the index.html file from the Intellect software program folder ...\Modules\webroot, for example, C:\Program Files\Intellect\Modules\webroot.
2. To remove the tool panel from the surveillance monitor, set the "top.visible" parameter to "false": <param name="top.visible" value="false">.
3. To remove the layout selection panel from the surveillance monitor, set the "layout.available" parameter to "false": <param name="layout.available" value="false">.
   To make the tools panel visible at the same time, set the "top.visible" parameter to "true":
   <param name="top.visible" value="true">.
4. By default, only one surveillance window is displayed when you open the Web-server home page. To open 4, 6, or 9 windows, set the "layout.default" parameter to 1, 2, or 3, respectively. For example, to display 9 windows:
   <param name="layout.default" value="3">.
5. By default, the surveillance window from camera 1 is displayed when you open the Web-server home page. To display the window from another camera, set the "cam.default.id" parameter to the number of the required camera. For example, to display the window from camera 9:
   <param name="cam.default.id" value="9">.
   To use this setting, the parameter "layout.default" must be set to 0 (default):
   <param name="layout.default" value="0">.
6. To change the visible text of the menu items in the surveillance windows or the texts of service messages, look in the "message" parameter for the text to be replaced and replace it with the required text.
   For example, to replace the message text "Cable detached from the camera…" with the text "No connection to the camera", make the following changes to the "messages"

parameter:
replace
<param name="messages" value="name=AxxonSoft WebServer client*detach=Cable detached from the camera…*disable=Camera is off…* …….>
with
<param name="messages" value="name=AxxonSoft WebServer client*detach=No connection with the camera*disable=Camera is off…* …….>
When changing the texts in menu items and messages, do not use the following symbols: ‘ * ’, ‘ = ’, ‘ “ ‘.

7. Save changes to the index.htm file.

Setting up the display of the data for traffic estimation in the Web-server

Web-server operation uses network traffic. It’s important to estimate the traffic, because it must be paid for.

The volume of network traffic when using the Web-server depends on the following factors:

1. the number of cameras displayed on the surveillance monitor;
2. compression level of the video signal;
3. frame size of the video signal;
4. frame rate of the video signal.

The traffic volume can be monitored on the Web-server surveillance window. When set up, the current frame size and frame rate for each camera are shown in the surveillance windows. The traffic is approximately estimated by the following formula:

Traffic = {Viewing time} * {Number of cameras} * {Average frame size} * {Average frame rate}

By default, the traffic estimation data is not shown. To set up the Web-server module to display the traffic estimation data, do the following:

1. Using the text editor, for example Notebook, open the index.html file from the Intellect software program folder...Modules\webroot. For example, C:\Program Files\Intellect\Modules\webroot.
2. Add the following lines to the Java applet parameter list:
   <param name="fs.size" value="true">
   <param name="fs.fps" value="true">
3. Save changes to the index.htm file.

Setting up the Web-server module to act as a gate on a different HTTP-server

By default, the Web-server module is set up to work as an independent HTTP-server. If a different HTTP-server must be used to connect to the remote workstations, the Web-server should act as a gate only for that HTTP-server and additional parameters should be set up.

For example, to use the Web-server for video surveillance, the user must open the page http://www.*****.ru:8080/video/index.htm (asterisks “*****” represent the domain name of the site where the cameras can be accessed). To set up the Web-server to act as a gate, do the following:

1. Using the text editor, for example Notebook, open the index.html file from the Intellect software program folder...\Modules\webroot. For example, C:\Program Files\Intellect\Modules\webroot.
2. By default, Java applet receives the video signal from http://www.*****.ru address.
3. For Java applet to receive the signal from http://www.*****.ru:222/reverse/proxy/, add the following lines to the index.htm file:
   <param name="port.from" value="html"> /add
   <param name="path.from" value="html">
   <param name="path" value="/reverse/proxy/">.
   Set the “port” parameter to 222:
   <param name="port" value="222">.
4. For Java applet to receive the signal from http://www.*****.ru:222, add the following line to the index.htm file:
   <param name="port.from" value="html">.

Set the “port” parameter to 222:
<param name="port" value="222">.

5. For Java applet to receive the signal from http://www.*****.ru/reverse/proxy/, add the following lines to the index.htm file:
<param name="path.from" value="html">
<param name="path" value="/reverse/proxy/">.
6. Save changes to the index.htm file.

Change of certificates of push-notifications for the Web-server 2.0 module

Existence of special certificate from the Apple which is given to the ITV|AxxonSoft company and valid for a year is required for working of push-notifications functional of the Web-server 2.0 module. Replace certificate if it is expired.

Updating of push-notifications certificate is performed as follows:

1. Download current certificate files available by link (these files are valid until May, 2018).
2. Go to the Intellect installation directory. Open the \Modules\Jetty\webapps folder.
3. Search for web2.war file. This file is a zip-archive. In this archive replace **WEB-INF/classes/dev_keystore.p12** and **WEB-INF/classed/keystore.p12** files on those files which are located in the archive downloaded in step 1. For example, it can be performed in the following way:

    a. Rename web2.war file as web2.zip.
    b. Unpack web2.zip file to the web2 folder using the program for working with zip-files (e.g. WinRAR or WinZip).
    c. Replace **WEB-INF/classes/dev_keystore.p12** and **WEB-INF/classed/keystore.p12** files.
    d. Pack the contents of the folder to the web2.zip archive using the program for working with zip-files.

    > ⚠ **Attention!**
    > It is required to pack only contents, not folder.

    e. Rename the web2.zip file as web2.war. Ensure that new file is located in the \Modules\Jetty\webapps folder.

Updating of push-notifications certificate is completed.

Configuring RTSP Server module

The **RTSP Server** object is used for transmitting video from Server to remote workplaces using the RTSP protocol. Use of the RTSP protocol allows viewing video from IP cameras and video archive on remote clients by means of the *Intellect* software or using video players that support this protocol. Transmitting Video gate archive and Long-term archive is also supported.

If there is sound with live video or the archive is recorded with sound, then video broadcast with sound through **RTSP Server** is supported – for this specify the ID of microphone from which the archive is recorded when requesting video (see the table with requests examples). For proper operation of this feature set the **VLC media player compatibility mode** check box checked in VLC Media Player (see item 14).

> ⚠ **Attention!**
> Transmitted video stream is to be compressed using H.264, H.265, MPEG4 or MJPEG codecs.
>
> When MJPEG codec is in use, video of height and/or width more than 2048 pixels is not supported.
>
> The client is to reconnect to URL when the codec is changed.

Create and configure the **RTSP Server** object, as follows:

1. In the context menu of the **Computer** object select **Create object** => **RTSP Server**.
2. Specify the name and ID of the object in the opened panel.

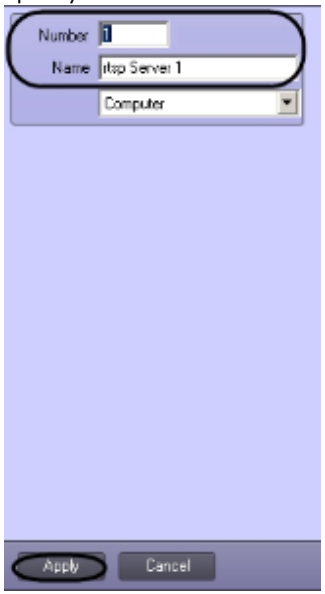

3. Click the **Apply** button to create the object.
4. Open the settings panel for the **RTSP Server** object. For this select the created object in the *Intellect* objects tree.

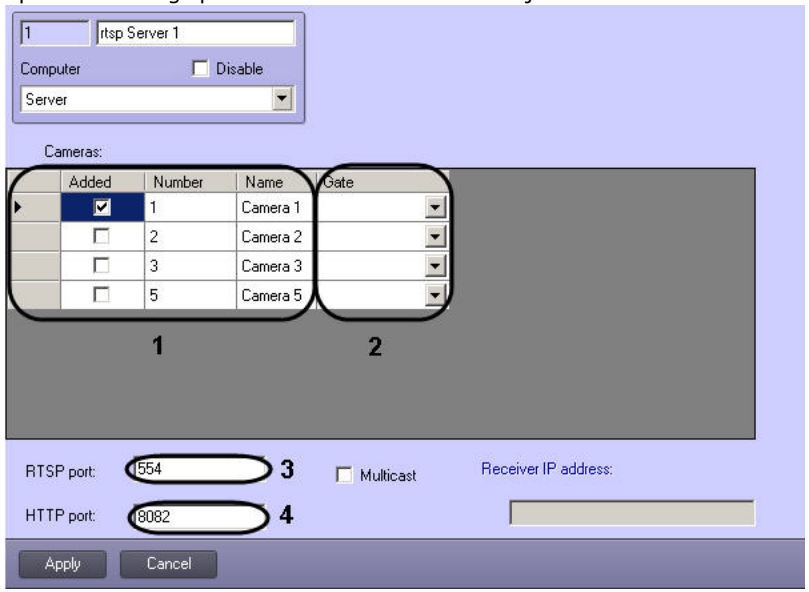

5. In the **Cameras** table set the checkboxes next to video cameras video from which is to be displayed (1).

Note.
To select several cameras at the same time, mark lines in the table and then holding down the Ctrl key on the keyboard click the unchecked box in one of the marked lines.

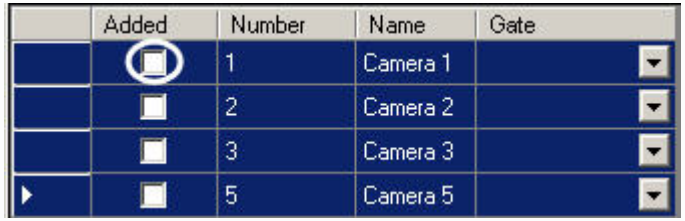

As a result all selected lines will be set checked.
To uncheck several boxes at the same time, do the same, but click the checked box after the selection of the lines.

6. If video from the camera is to be received through the video gate, then select the Video gate **object** in the **Gate** drop-down list (2).
7. Set the **Unicast** checkbox checked if signals from all cameras are to be broadcast through one port (3).
8. In the **RTSP port** field specify the port via which the video is transmitted (4).

Note.
The "Windows Media Player Network Sharing" service can use the default port 554. Change the port number or disable this service for broadcast.
To disable the service go to the **Control panel** - **Administrative Tools** - **Services** and double-click the service name and click the **Stop** button in the opened window.

9. In the **HTTP port** field specify the port that is to be used for transmitting video via http-protocol (5).
10. To distribute transmitted signal among different RTSP-ports set the **Multicast** checkbox (1). In the **Cameras** table the **Port** column is displayed. Every video camera is to have a data transmission port (2). Bear in mind the following when specifying ports:
    a. The following ports are in use for each camera in the **Multicast** mode: nPort, nPort + 18000 (rtp), nPort + 19000 (rtcp), where nPort – port number specified for camera in the **Port** column.
    For proper operation of RTSP server in the **Multicast** mode these ports are to be vacant.
    b. Specified ports are not addressed directly. Use RTSP port to get video from all cameras inthe **Multicast** mode (see item 12).
    c. In spite of specifying video data port it is required to specify camera number in the data source address (see the table below).

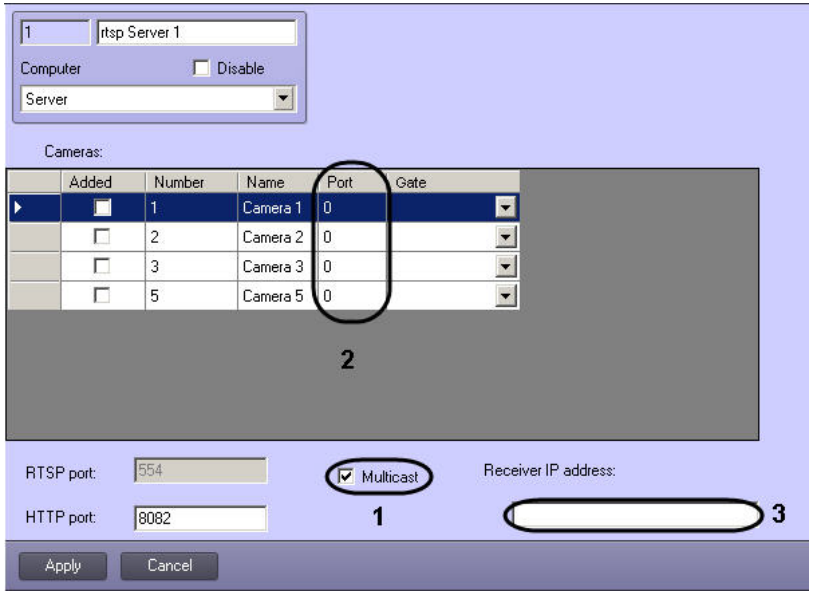

Note.
Use of the **Multicast** mode allows decreasing Server load due to reduction of transmitted data

Note.
To get such video in *Intellect* (see Configuring multimedia receipt using RTSP protocol) set the multicast value to the RTSP parameter in the HKEY_LOCAL_MACHINE \SOFTWARE\ITV\Intellect\Video\TransportProtocols registry section (for 64-bit system the path is HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ITV\Intellect\Video\TransportProtocols) on computer where the **Camera** object is created. Detailed information on this parameter see in Changing the transport protocol used by IP-device section.

11. In the **Receiver IP** address field specify the address from which the broadcast in **Multicast** mode will be performed. Address is to be in range from 224.0.1.0 to 239.255.255.255 (3). By default, the receiver IP is 224.0.1.150.

Important!
224.0.0.0-224.0.0.255 address range is reserved for routing protocols and other service protocols. Destination IP address cannot be set from the specified range.

Note.
RTSP-server can broadcast to one network simultaneously. The network with minimal metric is selected by default. To change the broadcast network, create the IpInterface = "IP-address of required interface" key in the registry. See also Registry keys reference guide.

12. In the **RTSP port** field specify the number of port through which video signal will be sent in the **Multicast** mode (4). When requesting video data from the camera using the RTSP protocol, it is necessary to specify this port. The system itself forwards the request to the port of the requested camera.
13. Go to the **Advanced settings** tab.
14. If the current time is to be sent to VLC Media Player instead of the frame time, then set the **VLC media player compatibility mode** checkbox checked (1). This option is to be

used in case of problems when playing back the archive received over RTSP in VLC Media Player.

15. If there are captions on the video (see Configuring captions display on a video image), set the **Use captions track** checkbox checked to send them along with video via **RTSP Server** and to display them in the receiving app – VLC player (2).

> **Important!**
> Correct video and captions operation are enabled only in VLC Media Player 2.0.0. These features are not guaranteed to work in other versions of VLC Media Player or other programs.

16. Click the **Apply** button to save the changes.

The **RTSP Server** object is now configured.

To connect to Server and display video in the video player that supports RTSP protocol, specify the address of data source in the format given in the table:

Address	Example	Description
rtsp://Server IP address[:Port]**/**CameraNo	rtsp://127.0.0.1/1	Viewing video signal from Camera 1 if default port is in use.

	rtsp://127.0.0.1:555/1	Viewing video signal from Camera 1 when broadcasting in **Multicast** mode if port 555 is in use for video transmission from this camera. *Note. Connection to the RTSP stream is performed via the broadcasting adapter IP-address, not by the destination IP which is specified in the settings panel of the **RTSP Server** and is used internally.*
rtsp://Login:Password@Server IP address[:Port]/CameraNo	rtsp://login:pass@127.0.0.1:554/1	Viewing video signal from Camera 1 if users and permissions are configured in *Intellect* (see Rights administration).
rtsp://Server IP address[:Port]**/**CameraNo**?mic_id=**Microphone ID	rtsp://127.0.0.1:555/15?mic_id=1	Viewing video from Camera 15 with sound.

rtsp:// Server IP address[:Port]**/?mic_id=** Microphone ID	rtsp://127.0.0.1:555/?mic_id=1	Getting sound only from microphone 1 with no video from any camera.
rtsp:// Server IP address[:Port]**/archive?id=** CameraNo.**&time_begin=**yyyy.mm.dd-hh:mm:ss **&&time_end=** yyyy.mm.dd-hh:mm:ss	rtsp://127.0.0.1:554/archive?id=1&time_begin=2011.11.11-11:11:11&&time_end=2011.11.11-11:12:00	Viewing video archive from Camera 1 for specified time period.
rtsp:// Server IP address[:Port]**/archive?id=**CameraNo**&mic_id**= Microphone ID **&time_begin=** yyyy.mm.dd-hh:mm:ss**&&time_end=** yyyy.mm.dd-hh:mm:ss	rtsp://127.0.0.1:554/archive?id=1&mic_id=1&time_begin=2011.11.11-11:11:11&&time_end=2011.11.11-11:12:00	Viewing video archive from Camera 1 with sound from microphone 1 for specified time period.
rtsp://Server IP address[:Port]**/archive?id=**CameraNo.**&time_begin=**yyyymmddThhmmssZ**&time_end=**yyyymmddThhmmssZ	rtsp://127.0.0.1:555/archive?id=1&time_begin=20160331T080000Z&time_end=20160331T080800Z	Viewing video archive from Camera 1 for specified time period.
rtsp://Server IP address[:Port]**/archive?id=**CameraNo.**&time_begin=**yyyymmddThhmmssZ	rtsp://127.0.0.1:555/archive?id=4&time_begin=20160316T065000Z	Viewing video archive from Camera 4 from specific start time till the archive end (as the value of time_end is not specified in the address).
rtsp://Server IP address[:Port]**/archive?id=**CameraNo	rtsp://127.0.0.1:555/archive?id=4	Viewing video archive from Camera 4 from the beginning till the end.

rtsp://Server IP address[:Port]/**archive**?**id**=CameraNo.**&long_term_archive**=Long-termArchiveNo	rtsp://127.0.0.1:559/archive?id=1&long_term_archive=2	Viewing Camera 1 video archive from Long-term archive 2.
rtsp://Server IP address[:Port]/archive?id=CameraNo.**&gate**=VideogateNo	rtsp://127.0.0.1:559/archive?id=1&gate=3	Viewing Camera 1 video archive from Video gate 3.

Note.
If 554 port is in use (default value), it can be not specified in the address line.

In the examples given above specify the IP address of the computer where the **RTSP Server** object is instead of 127.0.0.1.

The figure shows how to view video from the Server.

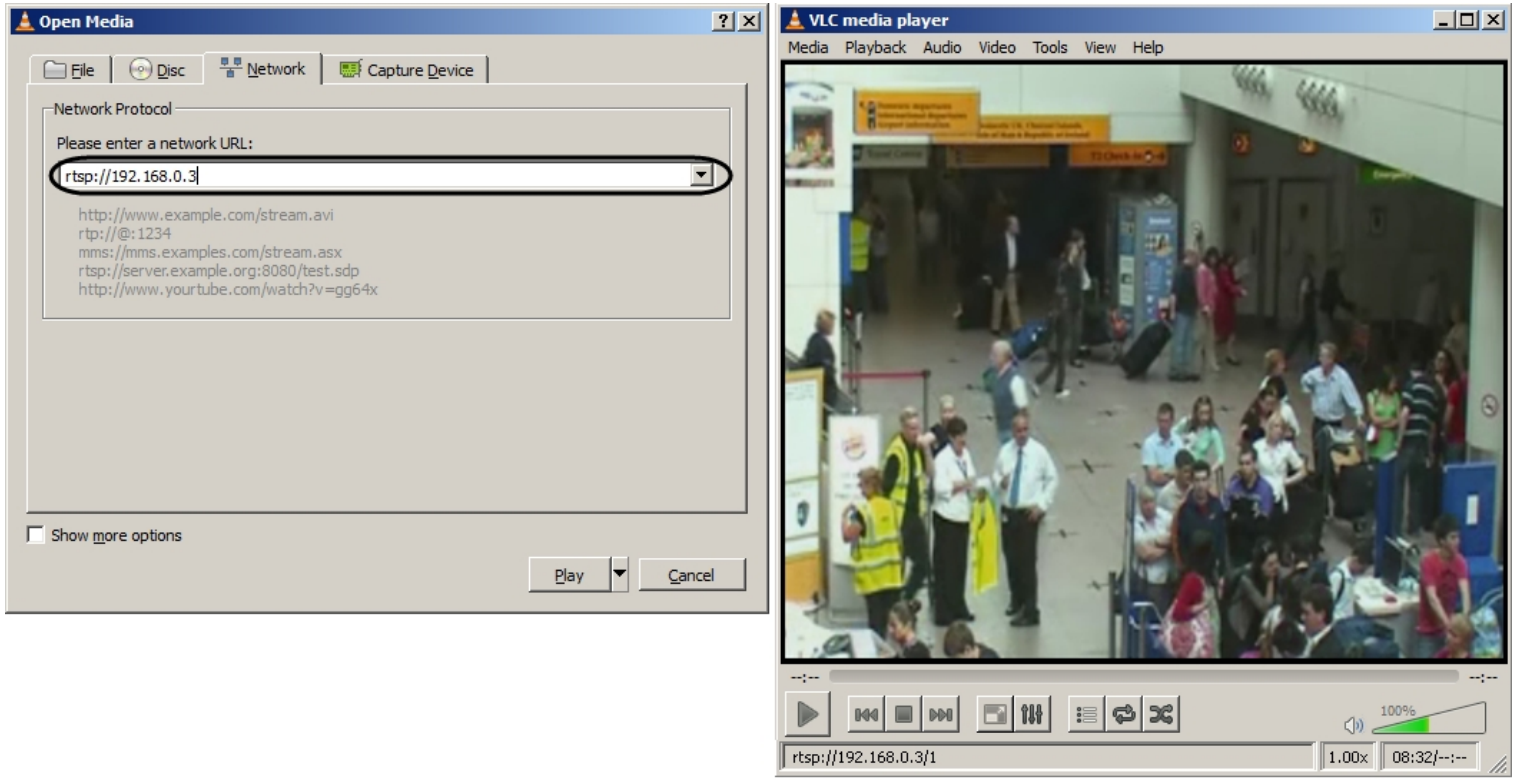

Counting the system events

General Information on counting the system events

The **Events Counter** system object is designed for counting the specified types of events on the specified objects. Unlike other objects in the **Hardware** tab, this object is not a hardware component, and fulfils auxiliary functions in programming the Intellect system. It is most commonly used together with other system components, since it does not have a separate interface box for data input/output.

The counter notifies the system about the collected statistical data using the “Data Collected (SIGNAL_POINT)" message. Two notification modes are available: for a specified period of time and for a specified number of events. In the first case, the notification is issued upon expiration of a set time period after the start of counting. In the second case, the notification is issued when a certain amount of events has been counted.

An option for conditional count reset is available. Two reset modes are available: for a specified period of time and for a specified number of events. In the first case, the counter is reset upon expiration of a set time period after the start of counting. In the second case, the counter is reset when a certain amount of events has been counted. After resetting the statistic, the counter issues the “Counters have been reset (COUNTERS_FLUSHED)” message.

The start time for counting can be set manually, or automatically according to the last change of the **Events Counter** settings.

Besides, one **Events Counter** object allows setting a separate counter for each event.

Configuring the Event Counter

To configure the Event Counter do the following:

1. Select the required **Computer** object in the **Hardware** tab of the **System settings** dialog box.

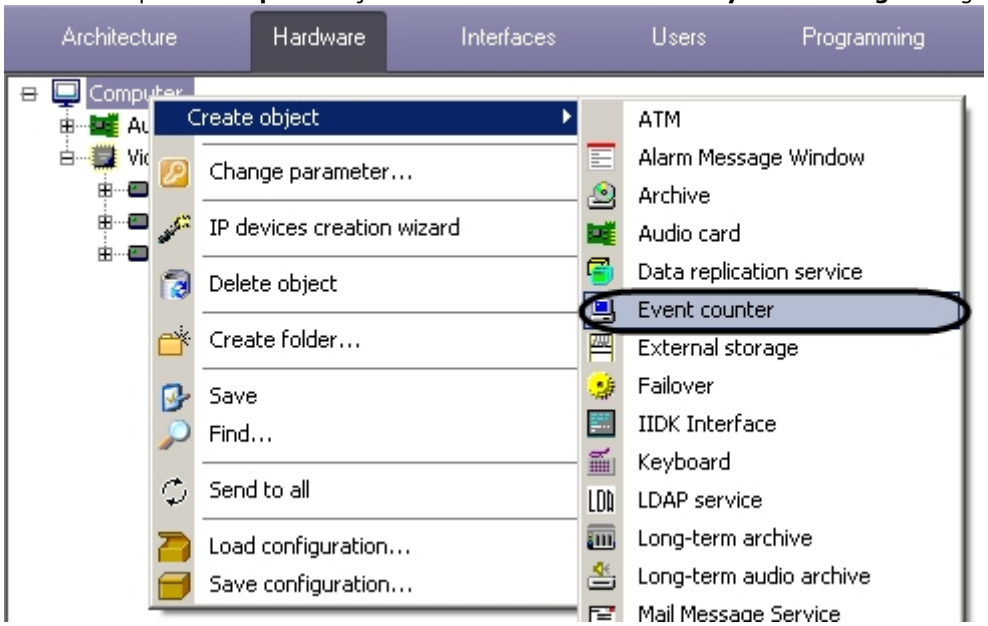

2. Right-click the selected **Computer** object. In the drop-down menu, select **Create Object**, then **Event Counter**. Enter the number and name of the counter and click **Apply**.
3. Select an object type in the **Object Type** column, and an ID in the ID column. Then, select an event in the **Event** column for the created object. Repeat these steps for all required objects and events (1).

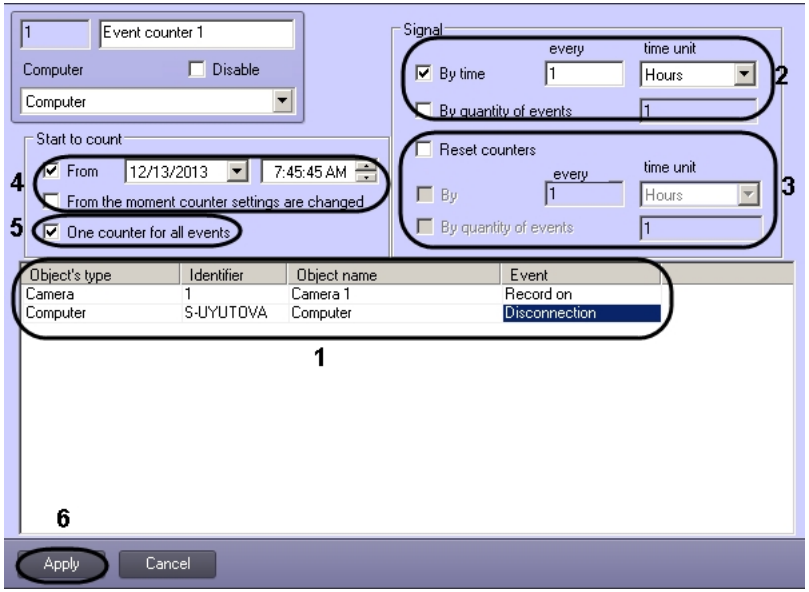

4. Select the notification mode and set the notification parameters (2).
5. Enable the counter reset option, if necessary. Select the reset mode and set the reset parameters (3).
6. Select the time setting mode and enter the date and time, if necessary (4).
7. Uncheck the option for individual events counting, if necessary (5).
8. Click **Apply** to save the settings (6).

The **Event counter** is now configured.

Data output and counter control

The **Event Counter** object has no separate interface object for data input/output, thus it is used together with other objects. Usually, macros are used to control the counters.

Figures below show an example of using a counter in a macro.

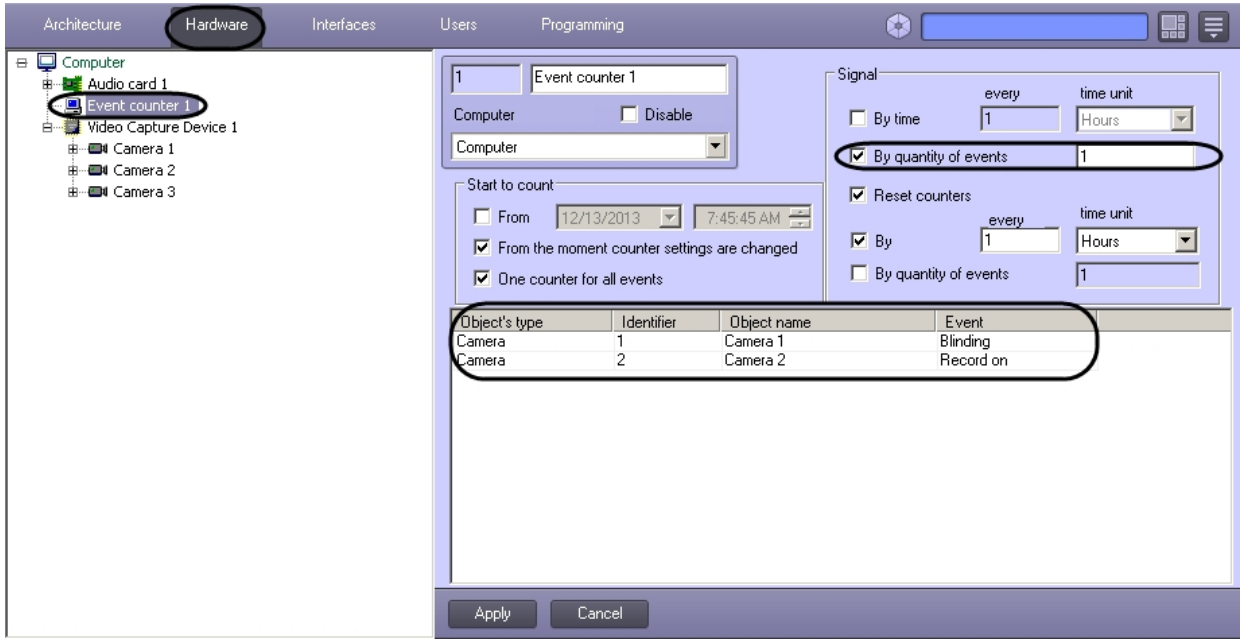

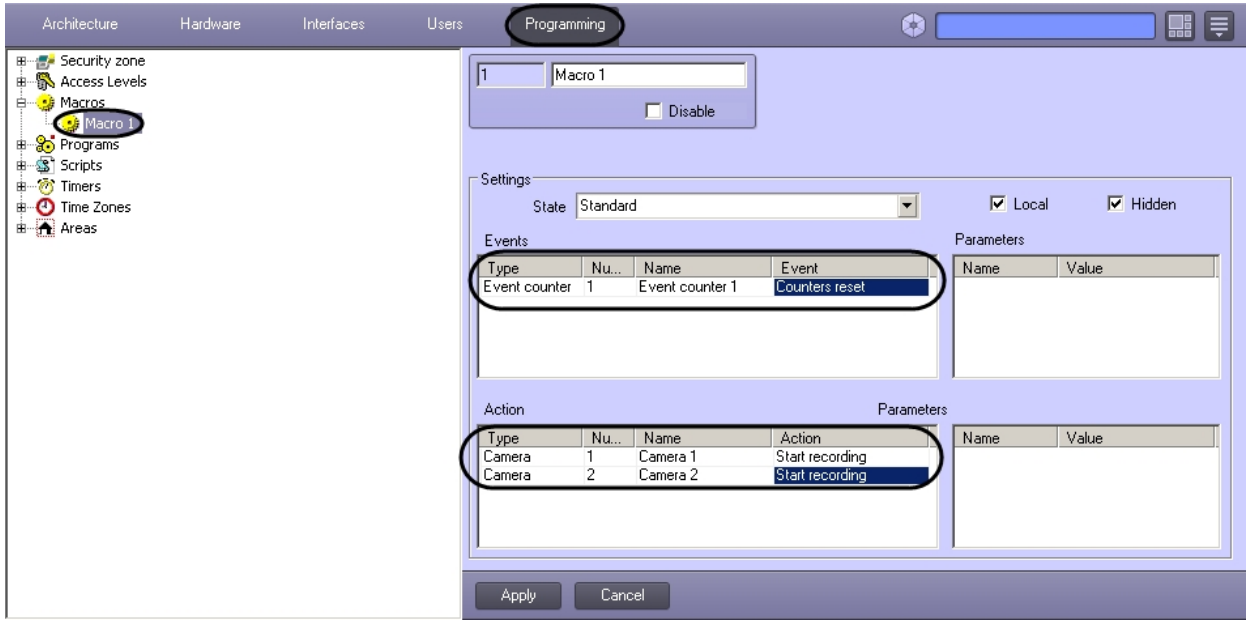

The counter issues a notification (sends a “SIGNAL_POINT (Data collected)” message in any of the following cases: camera 1 blocked, camera 2 blocked, camera 1 connection lost,

unauthorized access attempt, the number of access attempts exceeded the limit. If the Access Abuse Control macro is active at the moment of the counter notification, video recording automatically starts on cameras 1 and 2.

> **Note.**
> The macros are described in detail in the Creating and using macros section.

Configuring PS-RTP server

PS-RTP server enables the following functions in *Intellect*:

1. In the third-party software control cameras, PTZ, relays and sensors configured in *Intellect* using the GB28181 protocol.
2. Watch live and archived video in the third-party software.
3. According to user rights limit access to the functions listed above.

Intellect acts as a subserver in the server hierarchy. If Intellect is to act as a supserver, configure Connecting cameras via the GB/T28181 protocol.

Configure PS-RTP server as follows:

1. Create a **PS-RTP server** object under the **LOCALHOST** object in the **Hardware** tab of the **System settings** dialog box.
2. The settings panel of the object is displayed in the **Main** tab on the right of the **System settings** dialog box (1). Here the parameters of PS-RTP server that acts as a subserver are set.

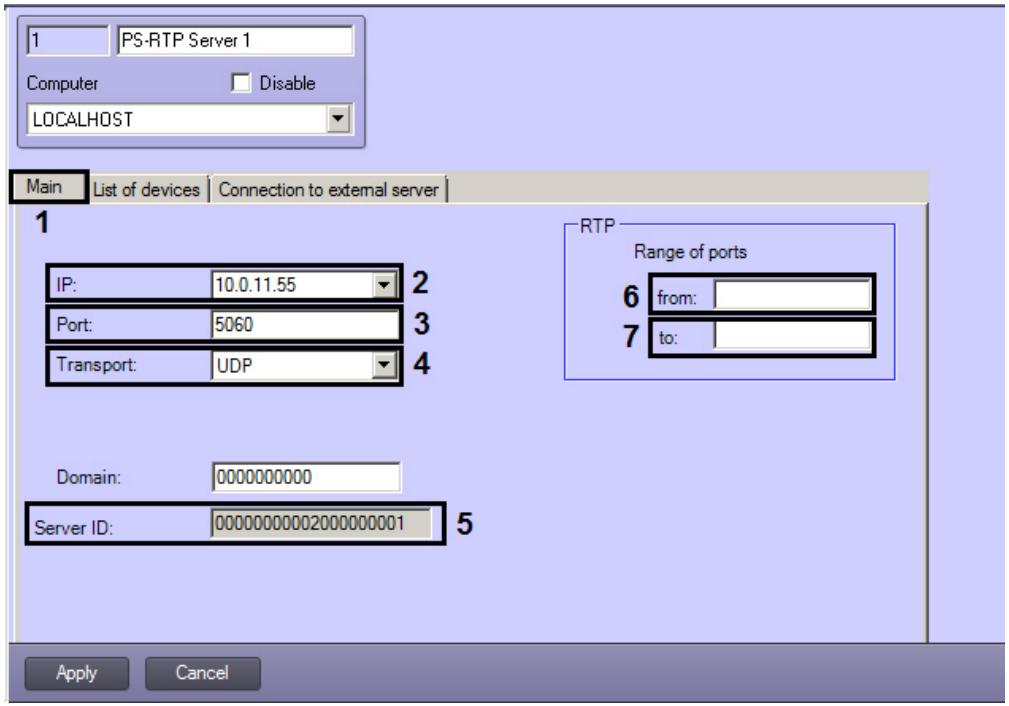

3. In the **IP:** dropdown list select the address of network interface via which the third-party software will access PS-RTP server using the GB28181 protocol (2).
4. In the **Port** field specify the number of port to which the third-party software will be connected using the GB28181 protocol (3).
5. In the **Transport** dropdown list select a data transfer protocol: UDP or TCP (4).

6. In the **Server ID** field the id of *Intellect* server is shown – it is used in the third-party software to connect to RS-RTP server via the GB28181 protocol (5).
7. In the **from:** (6) and **to:** (7) fields set the range of RTP ports used by the module.
8. Specify the list of objects the access to which is to be guaranteed by RS-RTP server as follows:
    a. Go to the **Device list** tab (1).

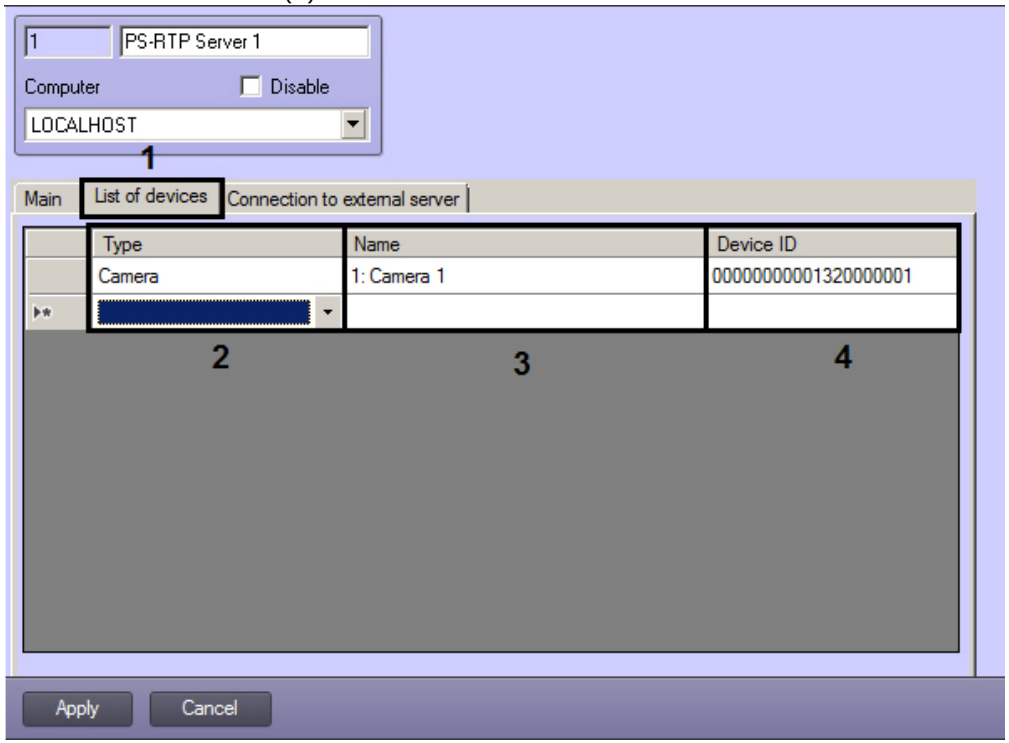

    b. In the **Type** dropdown list select the type of object created in the *Intellect* object tree (2).
    c. In the **Name** dropdown list select the name of required object (3).
    d. In the **Device ID** field the device id is shown – it will be used in the third-party software to control objects via the GB28181 protocol (4).
    e. Repeat steps b-d for all required devices.
9. Set parameters to connect *Intellect* to edge supserver:
    a. Go to the **Edge supserver connection** tab (1).

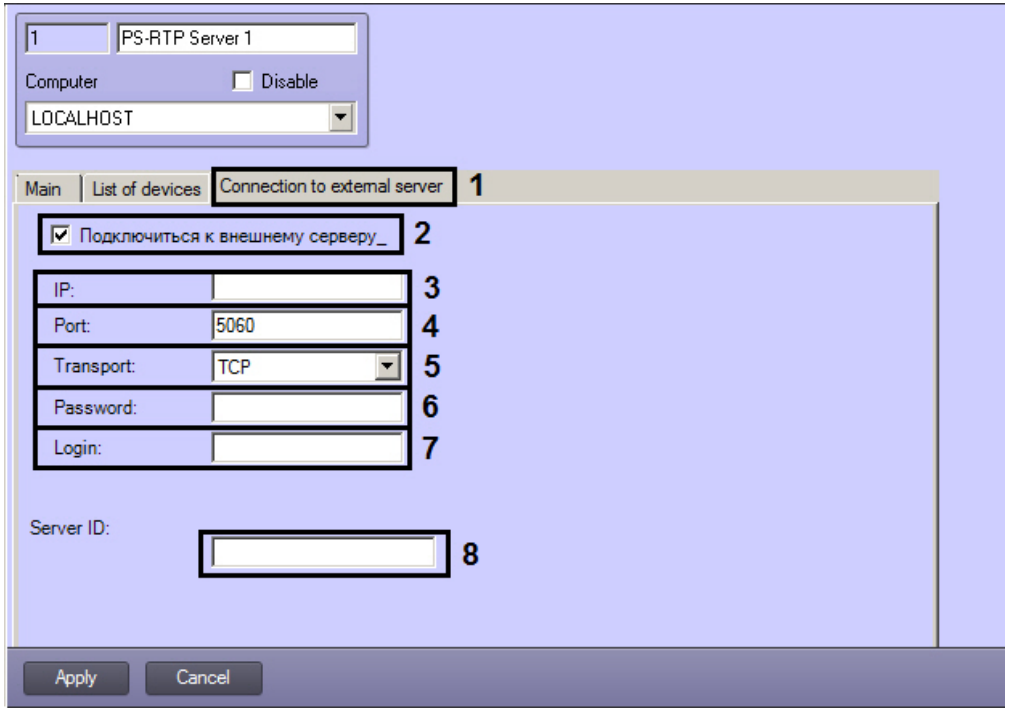

b. Set the **Edge server connection** checkbox checked (2). As a result edge server connection parameters are available for editing.
c. In the **IP** field specify the edge server IP-address (2).
d. In the **Port:** field specify the edge server connection port (3).
e. In the **Transport** field select a transport protocol used for edge server connection (5).
f. In the **Login:** field specify the username for edge server connection (6).
g. In the **Password** field specify the password for edge server connection (7).
h. In the **Server ID** field specify the id of the edge server via the GB28181 protocol (8).
i. To save settings click the **Apply** button.

RS-RTP server is now configured.

Configuring interaction with Manitou software

Interaction with *Manitou* software means sending messages on the event from *Intellect to the Server with installed Manitou software. Messages contain info on the events and alarm video can be attached to such message.*

Important!
Non-stop recording is to be performed on the corresponding camera for correct operation of attaching alarm video to the message feature – see the Recording by Operator command section in Operator's Guide.

Manitou integration module stands as a client in *Intellect*.

Interaction with *Manitou* software is configured on the settings panel of the **Manitou** object created under the **Computer** object in the **Hardware** tab of the **System settings** dialog

box.

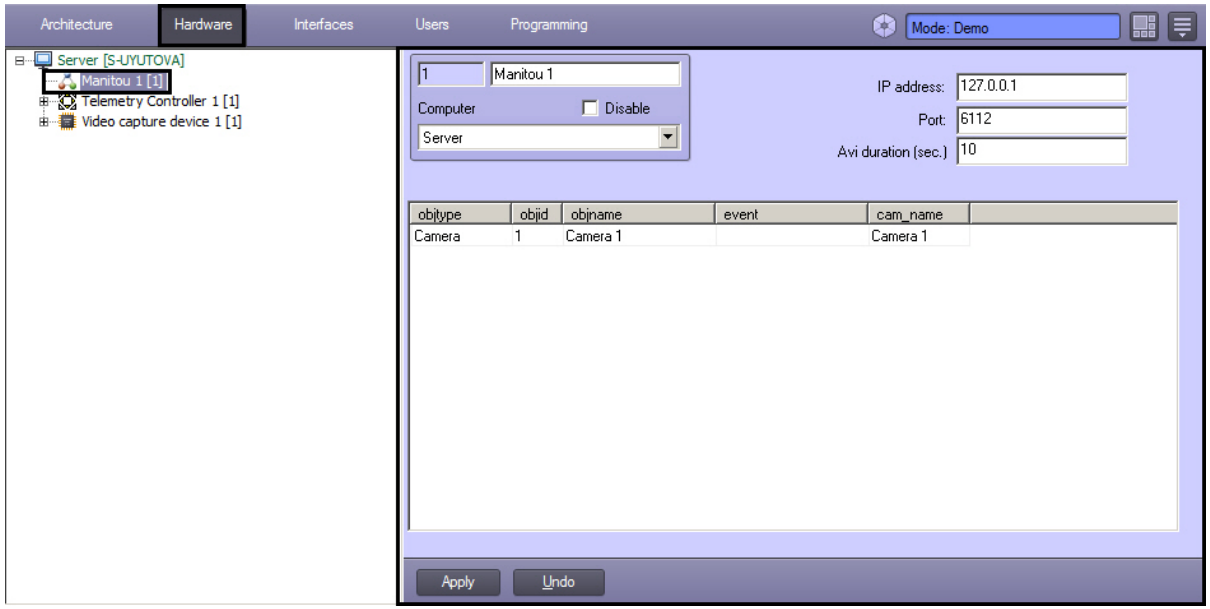

Configure interaction with *Manitou* software as follows:

1. Go to the settings panel of **Manitou object**.

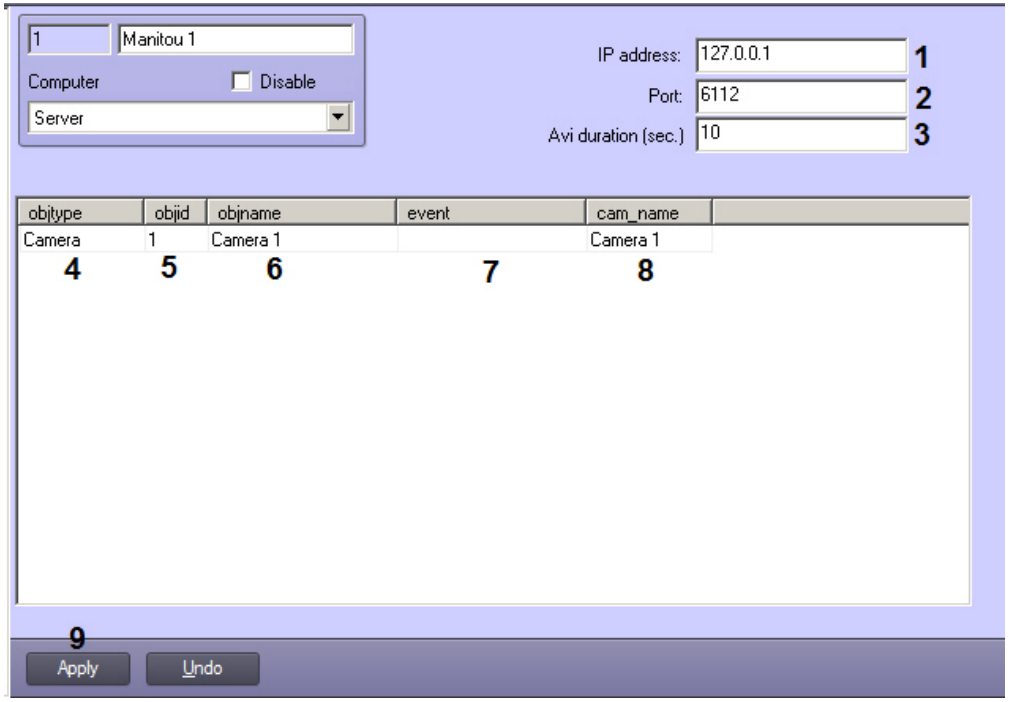

2. In the **IP** field specify the IP address of the Server where *Manitou software is started* and to which the connection is to be performed (1).
3. In the **Port** field specify the port number to connect to the Server with *Manitou* software (2).
4. In the **Avi duration (sec.)** field specify the period of delay after the event happens and before sending the message with attached video (3).

> **Note.**
> For correct video export, in the Tweaki.exe utility set maximum frames in one video file so the video fragment duration is shorter than the delay (for instance, 100). Otherwise it may happen that recording of the required fragment of video archive has not stopped yet when sending the message. See The Settings panel of the Video subsystem section (the **Frame count** parameter).

5. In the **objtype** dropdown list select the type of object by the event from which the message is to be sent to *Manitou* software (4).
6. In the **objid** dropdown list select the ID of object of the selected type (5).
7. Left click in the **objname** field (6). It is automatically filled with the name of corresponding object..
8. In the **event** dropdown list select the event from the object of the selected type – when this event happens the message is sent to *Manitou* software (7). If the event is not selected, then messages will be sent at any event from the selected object.
9. In the **cam_name** dropdown list select the **Camera** object the video fragment from which is to be attached to the message (8).
10. Repeat steps 5-9 for all required objects and events.

> **Note.**
> Press the down arrow on the keyboard to add a line to the table.

11. Click the **Apply** button (9).

The *Manitou* connection status is displayed in the Event viewer.

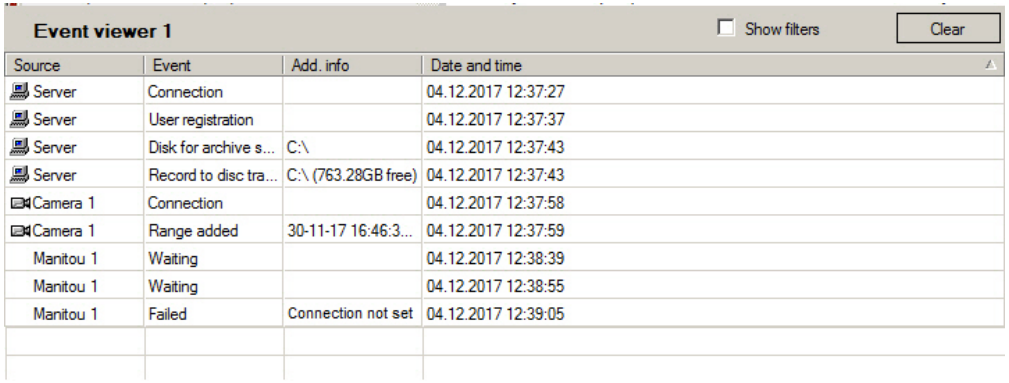

Interaction with *Manitou* software is now configured.

Configuration of interfaces

Configuring the user interface

The user interface in the Intellect software

In the course of setting-up the video surveillance/audio monitoring system, the personal user interface is configured and personal (role-dependent) rights are assigned to each Operator for using the system functions and managing the system resources.

The user interface of the Intellect-based video surveillance system is built under the **Display** hierarchical object.

The **Display** object groups and sets the position of the UI components on the Operator's workstation monitor.

The **Display** object represents the whole visible area of the computer monitor showing all the interface components according to their settings.

The **Display** object includes the following interface components:

1. HTML Interface;
2. Audio player;
3. External window;
4. Map;
5. Live sound switch;
6. Monitor;
7. Intercom Control Monitor;
8. Telemetry control panel;
9. Panel of Backup archive;
10. Search by captions;
11. Configuration check;
12. Event Viewer;
13. Operator protocol;
14. Scene.

The following windows are created on the base of the **Computer** object and pop up on the **Display**:

1. Alarm Message Window.

2. Operator query panel.

Setup procedure for the displays

Screen creation is an important stage of the surveillance system design as it is the main working instrument of the Operator.

The screen is created in the **Interfaces** tab and includes the following stages:

1. Creating **Display** objects.
2. Creating objects (interface components) on the base of the **Display** object in the **Interfaces** tab (see the list in the The user interface in the Intellect software section).
3. Placing the interface components on the screen in relation to each other.
4. Assigning the screens to the operator workstations.

Creating a Display object

The **Display** object is created on the **Interfaces** tab of the **System settings** dialog window. After the Intellect software installation no one Display object is created on default. To create the first **Display** object, do the following:

1. Go to the **Interfaces** tab (1).

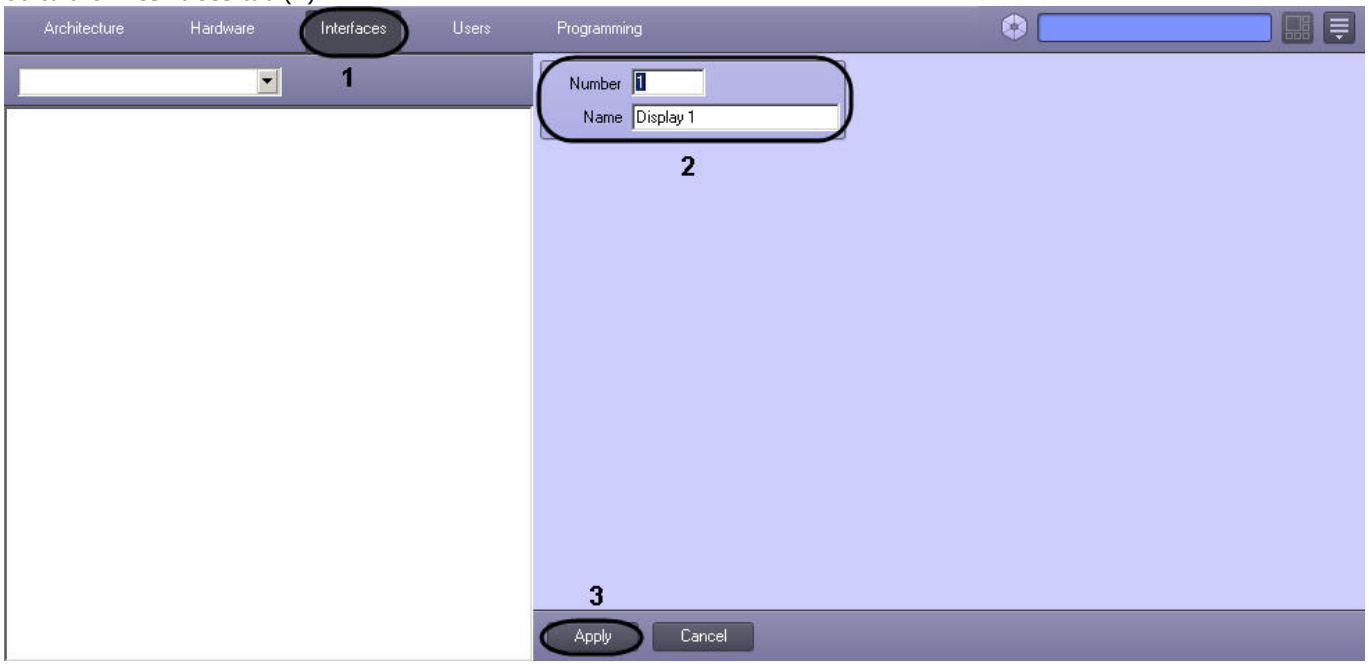

2. Specify number and name of the creating **Display** object (2).
3. Click the **Apply** button (3).
4. Created object will display in the objects tree:

After creating the first **Display** object the next **Display** objects are to be created on the basis of this or other **Display** objects. Click the right mouse button on the **Display** object and select **Create object – Display** item in the functional menu.

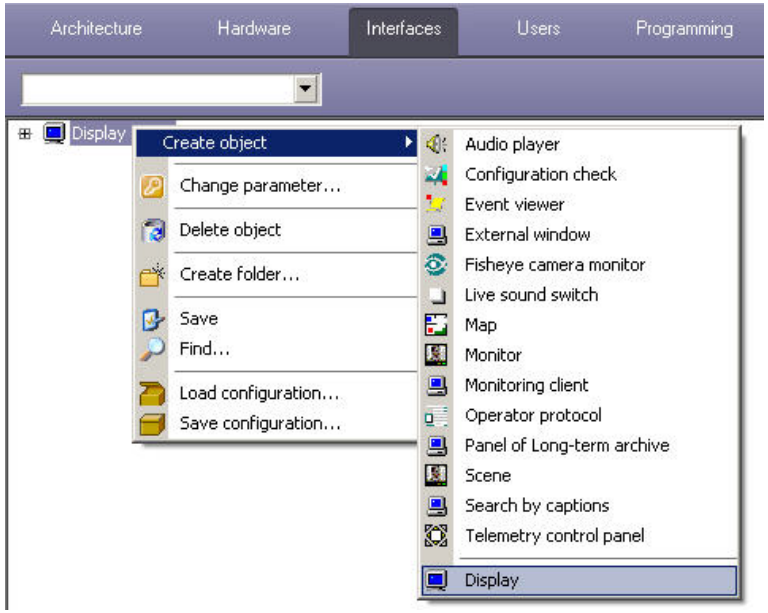

Then follow the instruction presented above from the step 2.

Placing the interface components on the screen

To place an interface component on the screen, its position (1) and window size (2) are to be specified. To enable the user to move the windows across the screen, set the **Allow moving** checkbox (3).

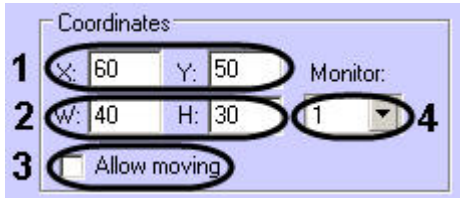

When several monitors are connected to a computer, select from the **Monitor** dropdown list the identifier of monitor in the operating system, for displaying on which the object coordinates are set (4).

> **Note.**
> If there is no **Monitor** dropdown list on the object setting panel, it is possible to set object position on non-primary monitor using negative coordinates or coordinates more than 100 depending on physical position of the monitor relative to the primary monitor. In this case it is strongly not recommended to use negative coordinates less than -200 (for example, -250, -300 etc.)

> **Note.**
> Intellect does not support NVIDIA® Mosaic™ multi-display technology.

The size of some components (**Telemetry control panel**, etc.) is fixed. In this case the corresponding fields are not shown.

> **Note.**
> The Telemetry control panel can also be shown semi-transparent (see The Settings panel of the Telemetry control panel object section).

Popup windows (**Alarm Message** and Operator's query) have no placing settings. They are displayed on top of other windows and can be moved to any place on the screen using the mouse.

Assigning the screens to the operator workstations

To configure the access of several operator workstations to the same interfaces, the corresponding screens are to be assigned to these workstations.

The screens can be assigned to workstations on the settings panel of the **Display** object . Figures below show the configuration of two objects: **Display 1** and **Display 2**. **Display 1** wil l be available for both workstations, while **Display 2** will be available only for the Y-GAVRILYCH workstation.

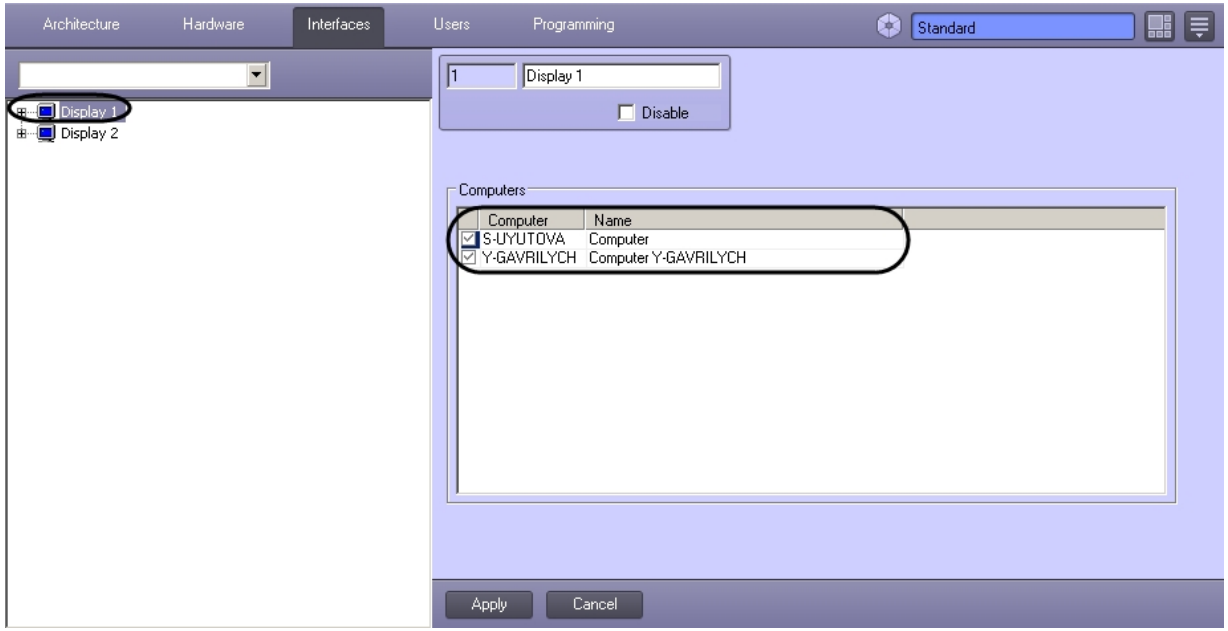
Architecture
Hardware
Interfaces
Users
Programming
Standard
Display 1
Display 2
1
Display 1
Disable
Computers
Computer
Name
S-UYUTOVA
Computer
Y-GAVRILYCH
Computer Y-GAVRILYCH
Apply
Cancel

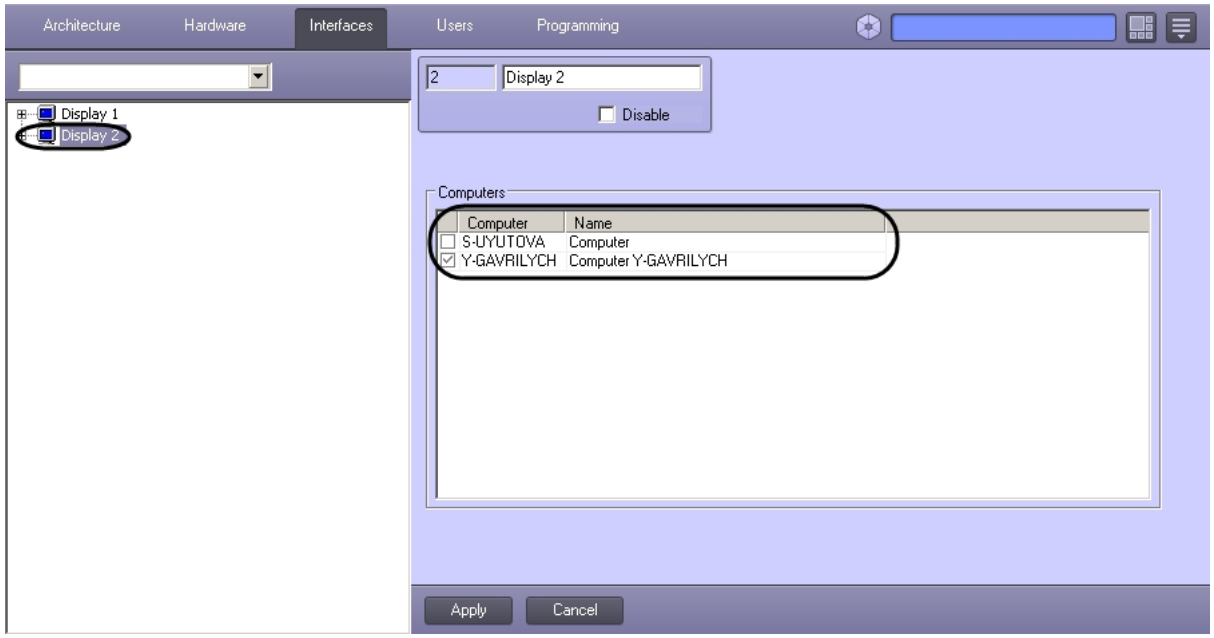
Architecture
Hardware
Interfaces
Users
Programming
Display 1
Display 2
2
Display 2
Disable
Computers
Computer
Name
S-UYUTOVA
Computer
Y-GAVRILYCH
Computer Y-GAVRILYCH
Apply
Cancel

Note.
If the screen assigning is performed from the Server which is not connected with some Servers of distributed system (the corresponding checkbox in the Architecture tab is not set – see the Configuring the interaction of distributed system components section), the data from this Server will not be displayed in the list of computers to which the current **Display** can be assigned. Settings of these Servers will not change after completing the screen allocation.

Examples of the user interface configuration

Figure below shows an example of the user interface components placed on the screen. Corresponding coordinates are given in the table.

	Interface component	X, %	Y, %	W, %	H, %
1	Monitor	0	0	40	40
2	Panel of Backup archive	40	0	41	60
3	Search by captions	0	40	60	60
4	Event Viewer	60	40	40	60

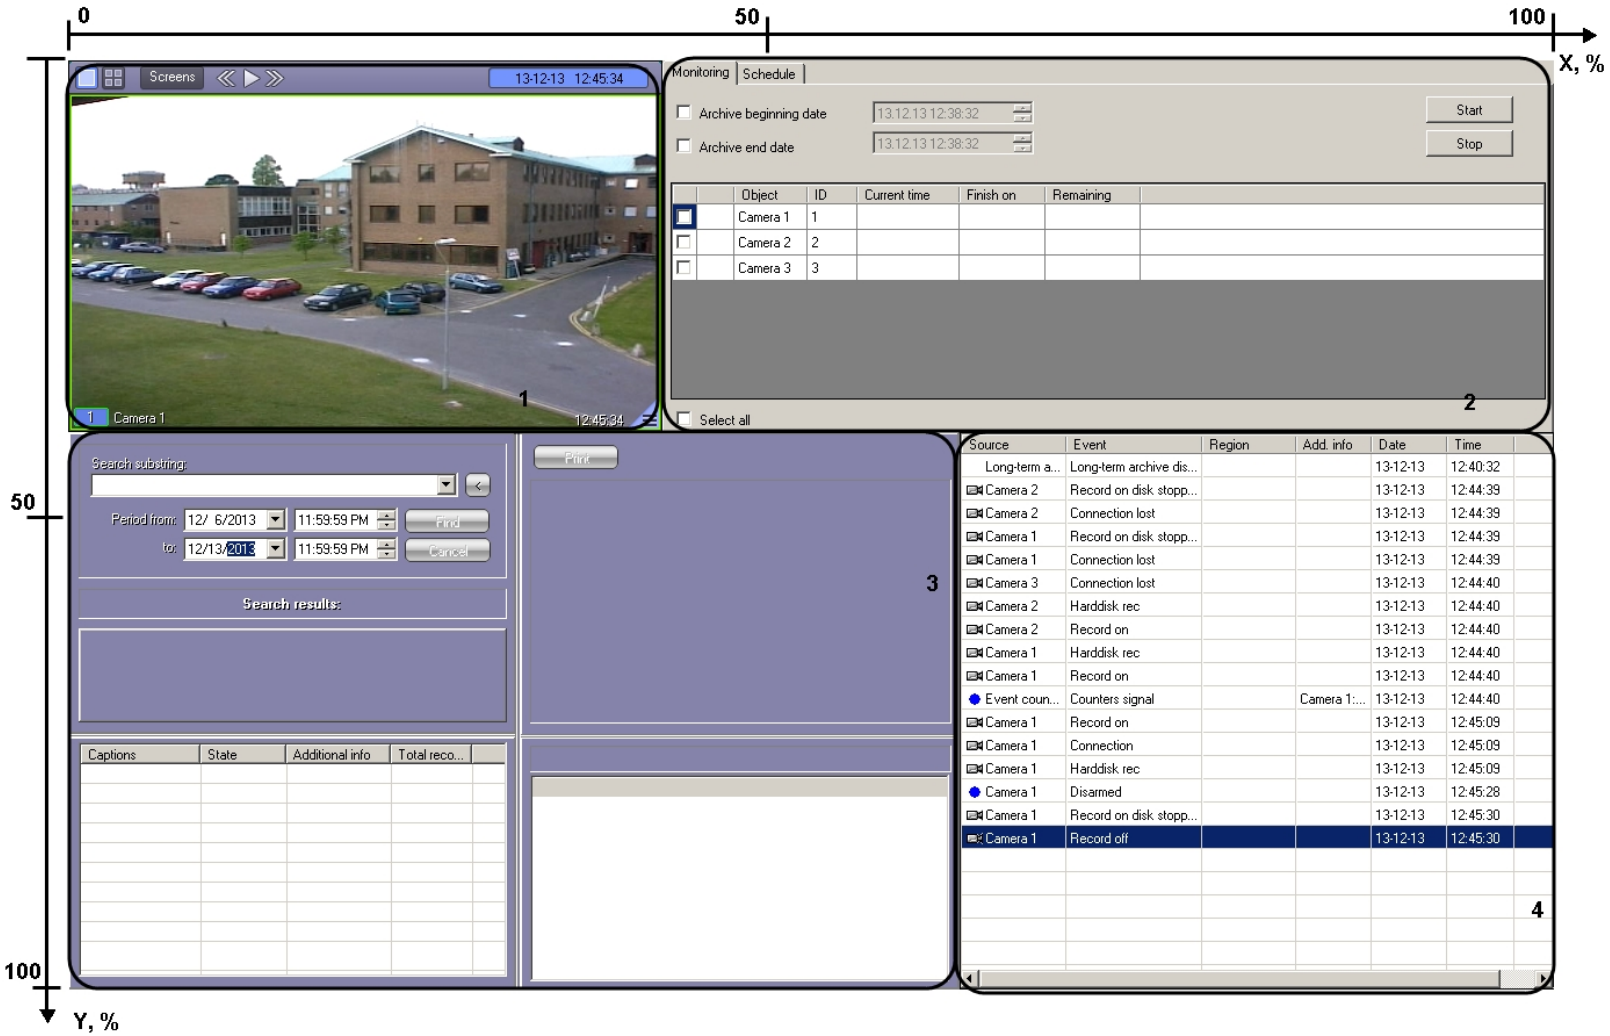

Configuration of video display

Video signal display settings

General information on video signal displaying

With different video signal transmission modes, different video monitors are used:

1. Video server surveillance Monitor.
2. Video surveillance Monitor of the Remote Workstation, connected to the videoserver via TCP/IP net.

3. Video monitor of the web-server, displayed in web browsers on Remote Workstations, connected to the videoserver via the web-server module by HTTP protocol.
4. Video monitor of the mobile client based on iOS operation system.

Video surveillance monitors on the server and Remote Workstations, connected to the videoserver via TCP/IP local net, are identical. Video surveillance monitors on the videoserver and on Remote Workstations are set up with the **System Setting** dialog box and is described below.

To set up the video surveillance monitor of the Web-server module, Java-applet settings of its home page are changed (see the chapter Configuring the Web-server module).

The video monitor is used to:

1. display video signals;
2. play back the archives;
3. change the sequence of displaying video signals (surveillance windows layout, selection of video signals to be displayed in the surveillance windows, windows slide show, etc.);
4. process the displayed signals (deinterlacing, zooming, image sharpening and changing contrast);
5. export and hardcopy selected frames, export video and audio records;
6. control detectors, including camera alarm detectors (main motion detectors);
7. control video recording;
8. control PTZ devices and microphones.

Video surveillance monitor operation

Video monitor setup sequence

To configure the **Monitor** object, do the following:

1. Select the **Display** and create the **Monitor** object for it (see Creating the Monitor object).

   Note.
   Display objects are created on the **Interfaces** tab of the **System setting** dialog box (see Creating a Display object).
2. Set the parameters of the **Monitor** interface box (see Selecting the parameters of the Monitor interface box).
3. Select and configure cameras for displaying in the **Monitor** box (see Selecting and configuring video cameras or Selecting and configuring video cameras as a package).
4. Configure an auto selection of video stream for displaying (see Configuring an auto select of video stream for displaying).
5. Configure the camera displaying mode (see Configuring the display mode for camera boxes).
6. Select overlay type for video displaying (see Selecting the overlay mode).
7. Set the priority of PTZ device control (see Setting the Telemetry control priority using the Monitor object).
8. Configure the captions showing (see Configuring the captions showing).
9. Bind an Audio player to the Monitor (see Binding Audio player to the Monitor).
10. Configure a rotation angle of video image (see Configuring a rotation angle of video image).

Creating the Monitor object

To create the **Monitor** object, do the following:

1. Select the required **Display** object in the Interfaces tab of the **System settings** dialog box.

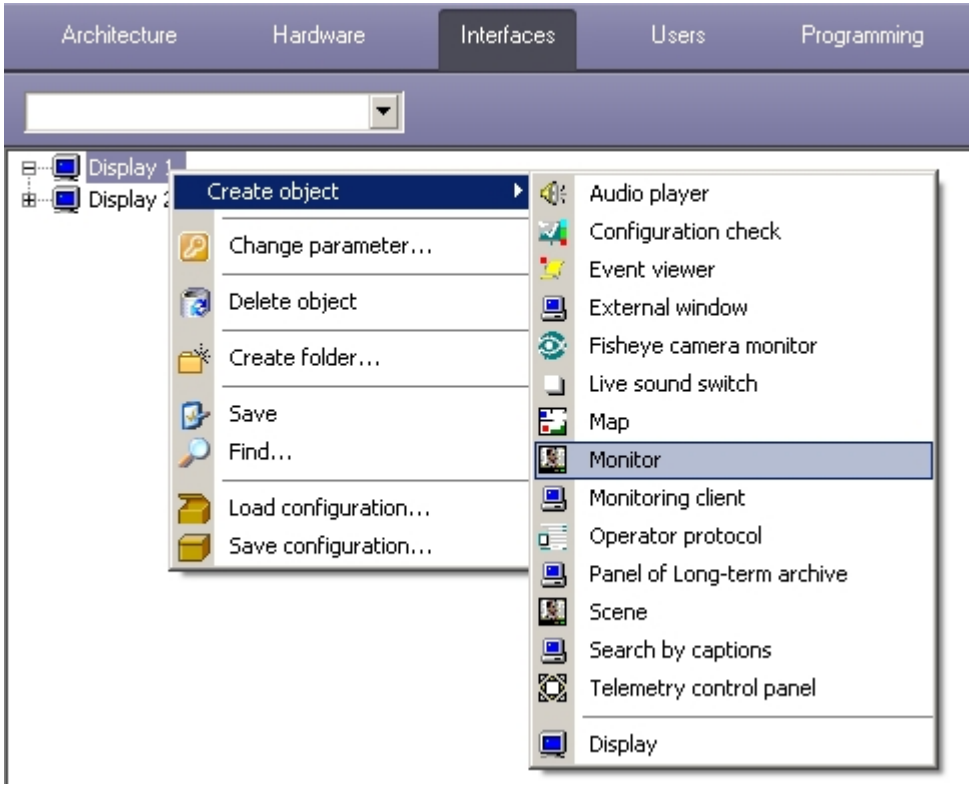

2. Double-click the right mouse button upon the selected **Display** object and select **Create object > Monitor** in the contextual window.
3. Set the number and name of the **Monitor** object and click the **Apply** button.

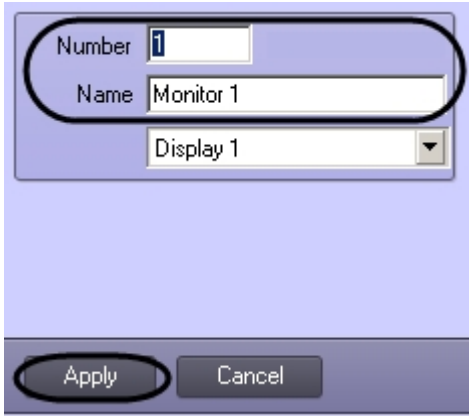

Note.

As a result the settings panel for the **Monitor** object will be displayed.

4. Repeat steps 1-3 for all required **Display** and **Monitor** objects.

The **Monitor** object is now created.

Selecting the parameters of the Monitor interface box

It is possible to set the following parameters of the **Monitor** interface box:

1. Window position.
2. Window size.
3. Toolbar (only in the List mode of camera's windows displaying - see Configuring the display mode for camera boxes section).
4. Enable and disable displaying the number, name, time, menu and camera frame as well as additional info on the camera in the Surveillance window on the Video surveillance monitor.

To set the parameters of the **Monitor** interface box, do the following:

1. Go to the settings panel for the **Monitor** interface object.

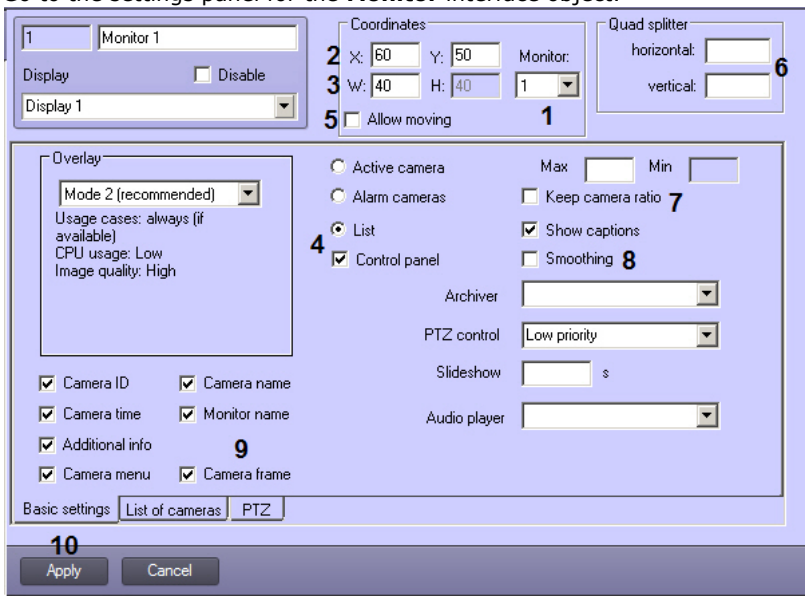

2. In the **Monitor** drop-down list select the monitor number in the operating system for which coordinates are to be set further (1).
3. Set coordinates of the left upper corner of the **Monitor** interface box: fields **X** (horizontal indent from the left edge of the image) and **Y** (vertical indent from the upper edge of the image) (2). Coordinates are set in percentage relative to the screen size horizontally and vertically correspondingly.
4. Set the dimensions of the Monitor interface box: **W** (window's width) and **H** (window's height) fields (3). Sizes are set in percentage relative to the screen size horizontally and vertically correspondingly.
5. To display a toolbar in the **Monitor** interface box the **List** group is to be switched in the **Basic settings** tab and the **Control panel** check box is to be set (4).

Note.
If the toolsbar is on, window's height **H** is automatically equal to the window's width **W**.

6. If moving the **Monitor** interface box is to be enabled, set the **Allow moving** check box (5).

> **Note.**
> This setting is relevant only when the toolbar is in use.

7. In the **horizontal:** and **vertical:** fields of the **Quad splitter** group enter the number of video surveillance windows which will be displayed in the Monitor in horizontal and vertical directions correspondingly (6). If one of these values is not specified then default grid of video surveillance windows depending on the selected layout is displayed on the Monitor.

> **Note.**
> Fields in the **Quad splitter** group are inactive if the **Alarm cameras** mode is selected (see the Configuring the display mode for camera boxes section).

8. If one wants to save the ratio of the width and height of the video coming from the camera when displaying in the Surveillance window, then set the **Keep camera ratio** checkbox checked box on the **Basic settings** tab (7). If the checkbox is set checked, there may be some empty space in the Surveillance window. If the checkbox is set unchecked, the video fits the entire area of the Surveillance window while the ratio may be affected.

> **Note**
> Necessity to use other window proportions can occur while working with widescreen monitors, monitors of portrait orientation or in any other cases. The Monitor<monitor_id>_cw, monitor<monitor_id>_ch, monitor<monitor_id>_w43, monitor<monitor_id>_h43 registry keys are used in these cases. Detailed information about these registry keys is given in the Registry keys reference guide.

9. Set the **Smoothing** checkbox to display video with greater resolution on which the ladder effect appears while displaying in the small window (8).

> **Note.**
> When using the smoothing function, the load on the CPU of the computer where the video is displayed increases significantly (up to 30%). As a result, if the computer does not have enough resources to use this function, the video display speed (fps) decreases, the response to telemetry commands slows down, etc. So, this setting is recommended only for displaying video from analog cameras or low-resolution video.
>
> The function affects only displaying the video in the Video surveillance monitor. The original video stream from the camera is streamed to the archive and to detection tools.

Video image with the Smoothing function

Video image without the Smoothing function

10. By default all elements of the Surveillance window (such as number, name, time, menu and camera frame, additional info on the camera as well as the name of video surveillance monitor) are displayed. To disable displaying these elements set the corresponding checkboxes unchecked (9).

> **Note.**
> These parameters were set using ShowName, ShowTime, ShowTitle, ShowBorder, ShowButtons and ShowID registry keys (see Registry keys reference guide) until *Inte*

llect version 4.10.1.

11. To save all the changes click the **Apply** button (10).

The parameters of the **Monitor** interface box are now set.

Selecting and configuring video cameras

One can select and configure cameras for displaying in two ways:

1. Separately. The settings panel for the **Monitor** object is in use.
2. As a package. The **Add/Edit Camera Objects** dialog box is in use.

> **Note.**
> Order of selecting video cameras as a package todisplay in the **Monitor** interface box is described in Selecting and configuring video cameras as a package section.

To select video cameras on the settings panel of the **Monitor** object, do the following:

1. Go to the **List of cameras** tab.
2. Select the number of the required camera in the drop-down list of the **Number** column (1).

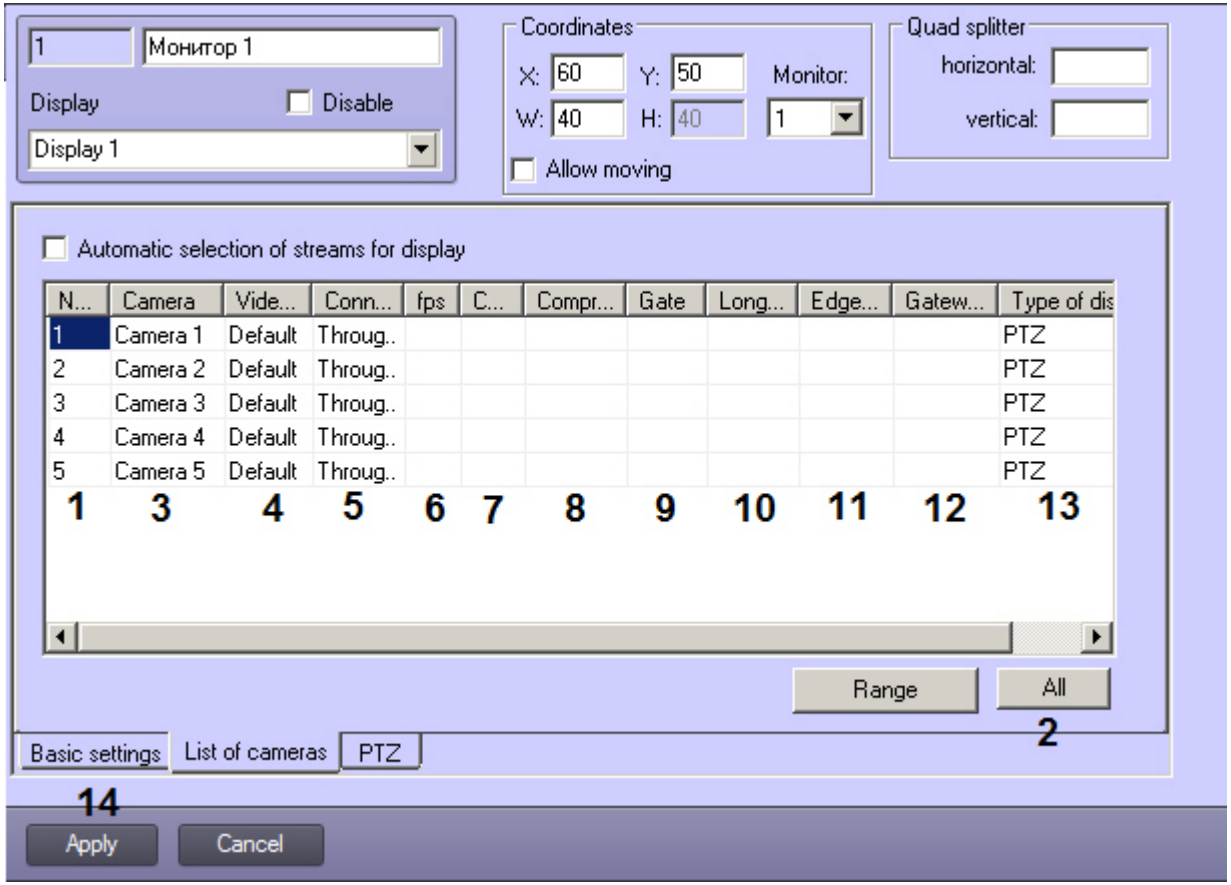

> **Note.**
> To select all the cameras, registered in the system, click the **All** button (2).

3. As a result the name of the selected camera is automatically displayed in the **Camera** column (3).
4. If multistream mode has been selected for a camera, in the **Video stream** drop-down list, select the number of the video stream that you want to display in the Monitor (4). If no stream is indicated, the default stream is used.

> **Note.**
> Configuration of Server video streams is described in the section Configuration of multistream video. The selected video stream is requested when receiving a video signal both from the Server and via the Videogate (see item 9).

5. By default, the Video Surveillance Monitor receives a video stream through the Server. If it is necessary to get the video stream not through a Server, but from a camera directly, in the **Connection** drop-down list select **Direct** (5).
6. If a video signal is to be thinned for its transmitting to the Monitor of the Client, then select the required frame rate of video signal in the drop-down list of the **fps** column (6).

Attention!
It is strongly not recommended to use additional thinning and / or compression of video signal which is displayed on the Monitor of a Server as it will lead to additional spending of Server resources and deterioration of video quality.

Note.
The selected fps value is to be less than the frame rate for video digitising by a video capture card. Otherwise the frame rate of video signal will be the same as the fps of digitising.

Note.
For correct thinning of a video stream compressed with the help of H.264 or MPEG4 codecs, the **fps** value is to be equal to keyframe rate specified in the device (IP-camera) or INTELLECT settings (see Configuring video compression section).

Note.
Four streams for a chip are processed on SC300Q16 (FX4) video capture card. If the chip processes a stream without a signal (blue screen), then total fps is 10 (4 x 2,5fps) for one chip.

7. If video compression level is to be changed for transmitting to the Monitor of the Client, select the required level of video signal compression in the drop-down list of the **Compression** column (7). Compression level is increased from 0 (no compression) to 5 (maximum compression).

Note.
If the compression level is set for the Client, a video signal on the Server is to be preliminary decompressed, that results in a great load increase on CPU of the Server.

8. To change the procedure of video signal compression during displaying on the Monitor, select the required procedure of compression from the **Compressor** drop-down list (8).The value in the **Compression** list is to be selected if the compressor is specified (7).

Note.
Compression is performed at the Gate.

9. If the Monitor is to receive live and archive video from the selected camera via the **Gate** object, then select the name of this object in the drop-down list of the **Gate** column (9).
10. If a video archive from the selected camera is to be transmitted to the Monitor from the **Backup archive** object, then select the name of this object in the drop-down list of the **Backup archive** column (10).

Note.
In case of access to the Backup archive is performed through the Video gate, specified value is to be coincide with selected value for this video camera while configuring the **Video gate** object – see the Selecting and configuring the cameras for the Long-term archive section.

11. If the selected video camera is used for video archive viewing from the external storage, then select the required **External storage** object in the **External storage** drop-down list (11).
12. If the tansmission from the **Backup archive** object is performed via the **Gate** object, then select the name of this object in the drop-down list of the **Gateway for Backup Archive** column (12).
13. If there is a fisheye or anamorphic lens on the camera (see Configuring fisheye cameras), then in the **Display type** dropdown list select the way of displaying video from camera on the viewing tile: virtual telemetry or panorama (13).

Note.
Conversion is enabled in the Video surveillance monitor when zooming-in (see Mouse PTZ control) or in the feature menu of the Surveillance window (see Enabling fisheye).

Note.
This feature will be invalid if:

- only alarm cameras are displayed on the monitor (see Configuring the display mode for camera boxes);

- PTZ control on the Video surveillance monitor is forbidden (see Setting the Telemetry control priority using the Monitor object).

14. Repeat steps 2-13 for all required video cameras.
15. To save all the changes click the **Apply** button (14).

Video cameras on the settings panel of the **Monitor** object are now selected.

Selecting and configuring video cameras as a package

One can select and configure video camera parameters as a package to display them in the **Monitor** interface box.

To select video cameras as a package, do the following:

1. Go to the settings panel for the **Monitor** interface object.
2. Click the **Range** button in the **List of cameras** tab (1).

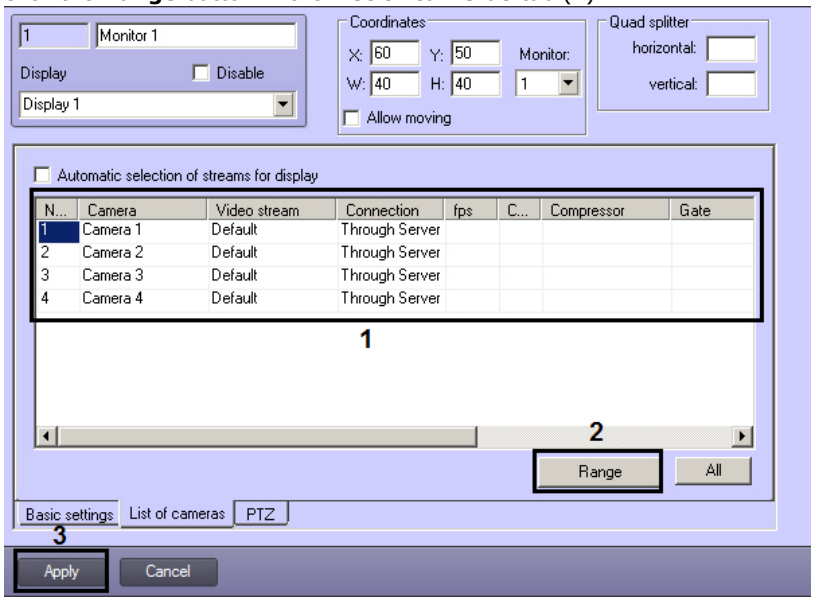

3. As a result the **Add/Edit Camera Objects** dialog box is displayed.

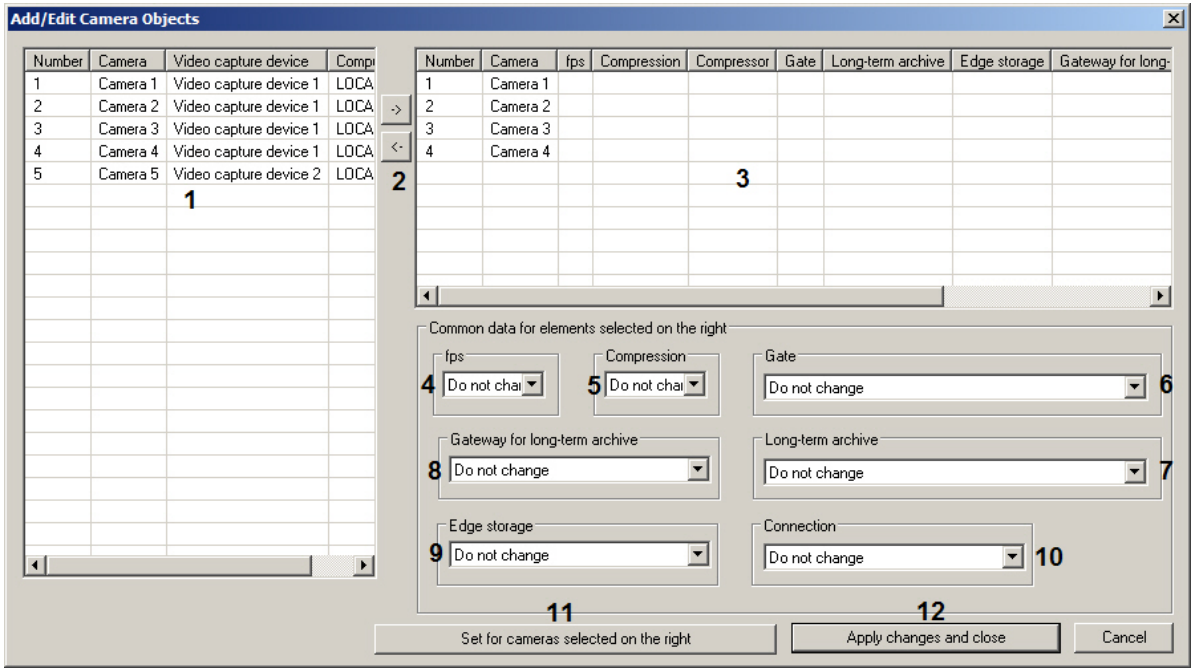

4. Select the required cameras in the left list of the **Add/Edit Camera Objects** box (1).
5. Move the selected cameras to the right list by clicking the -> button (2).

> **Note.**
> The right list is the list of cameras selected for displaying in the Monitor interface box.
>
> The <- button is used for inverse action, i.e. for moving the selected video cameras from the right list to the left one (2).

6. As a result the selected cameras will be displayed in the list on the right of the the **Add/Edit Camera Objects** box (3).
7. If it is necessary select the names of required cameras in the right list for complex editing of their parameters (3).

> **Attention!**
> The same parameters will be set for all selected cameras.

8. If a video signal is to be thinned for transmitting to the Monitor of the Client, then select the required frame rate of a video signal in the fps drop-down list (4).

> **Note.**
> The selected fps value is to be less than the frame rate for video digitising by a video capture card. Otherwise the frame rate of video signal will be the same as the fps of digitising.
> The **fps**, **Compression**, **Gate**, **Backup archive** and **Gateway for Backup Archive** settings are in the **Common data for the elements selected in the list on the right** group.

For correct thinning of a video stream compressed with the help of H.264 or MPEG4 codecs, the fps value is to be equal to keyframe rate specified in the device (IP-camera) or INTELLECT settings (see Configuring video compression section).

9. If video compression level is to be changed for transmitting to the Monitor of the Client, select the required level of video signal compression in the drop-down list of the **Compression** column (5). Compression level is increased from 0 (no compression) to 5 (maximum compression).

> **Note.**
> If the compression level is set for the Client, a video signal on the Server is to be preliminary decompressed, that results in a great load increase on CPU of the Server.

10. If the Monitor is to receive live and archive video from the selected cameras via the **Gate** object, then select the name of this object in the **Gate** drop-down list (6).
11. If a video archive from the selected camera is to be transmitted to the Monitor from the **Backup archive** object, then select the name of this object in the **Backup archive** drop-down list (7).
12. If the tansmission from the **Backup archive** object is performed via the **Gate** object, then select the name of this object in the **Gateway for Backup Archive** drop-down list (8).
13. Select the required object from the **External storage** drop-down list if cameras are in use to view the video archive from the external storage (9).
14. By default, the Video Surveillance Monitor receives a video stream through the Server. If it is necessary to get the video stream not through a Server, but from cameras directly, in the **Connection** drop-down list select **Direct** (10).
15. To save the set parameters, click the **Save for the cameras selected in the list on the right** button (11).
16. As a result set parameters will be displayed in the list on the right of the **Add/Edit Camera Objects** box (3).
17. Repeat steps 6-12 for complex editing of all required cameras.
18. To save all the canges and close the **Add/Edit Camera Objects** box, click the **Apply** changes and close button (12).
19. Set camera settings will be displayed in the **List** table on the settings panel of the **Monitor** object (2).
20. To save all the changes click the **Apply** button (3).

Video cameras are now selected as a package.

Configuring an auto select of video stream for displaying

In the Intellect software it is possible to use scaling while video signal displaying on the Video surveillance monitor. This function allows choosing the optimal stream depending on the size of video image. For example, if a large number of cameras are simultaneously displayed on the Video surveillance monitor, it is not needed to receive the video from them in high resolution. Increasing the video image the video stream should be requested in a higher resolution.

Video stream properties can be specified through the *Intellect* interface (see the section Configuration of multistream video) or through a camera's web interface.

For automatic video stream selection to work, the **Video stream setting** check box must be selected in the configuration panel of the **Camera** object (see the section Configuration of multistream video) and more than one video stream from the camera must be integrated (refer to the list of IP devices integrated with Intellect, on the Drivers Pack documentation page).

If function of video stream auto select is enabled, the *Intellec*t software selects video stream the following way:

1. The streams indicated on the **Advanced settings** tab of the **Camera** object are selected (all streams that are not disabled).
2. From the streams chosen during the previous step, the streams that have a resolution greater than the resolution requested by the Client are selected. If no such streams exist, the streams with the highest resolution are selected.
3. From the streams chosen during the previous step, the streams that have a frame rate higher than the frame rate requested by the Client are selected. If no such streams exist, the streams with the highest frame rate are selected.

> **Note.**
> The requested frame rate is specified during selection and configuration of cameras for the **Monitor** interface object, in the **fps** column on the **List of cameras** tab (see the section Selecting and configuring video cameras).

4. If multiple streams were selected during the previous steps, the stream among these that has the highest bitrate is selected.

Note.
If a stream is selected because it has the highest bitrate, another stream will be selected only if the new stream's bitrate is higher than the current bitrate by more than 5% (to avoid constant back-and-forth switching when bitrates are approximately equal).

When video stream properties change, a decision to display a different stream is made only if confirmation for making a change is received within 35 seconds. This feature is also designed to avoid constant back-and-forth switching between video streams.

If automatic stream selection is enabled, selection will be performed for the cameras for which the **Default** video stream has been selected.

Note.
When the layout of a viewing tile is changed in the Video Surveillance Monitor, the width of the viewing tile may change, causing another stream to be selected for display.

To enable the function of auto select of video stream for displaying, do the following:

1. Go to the settings panel of the **Monitor** interface object.
2. Go to the **List of cameras** tab (1).

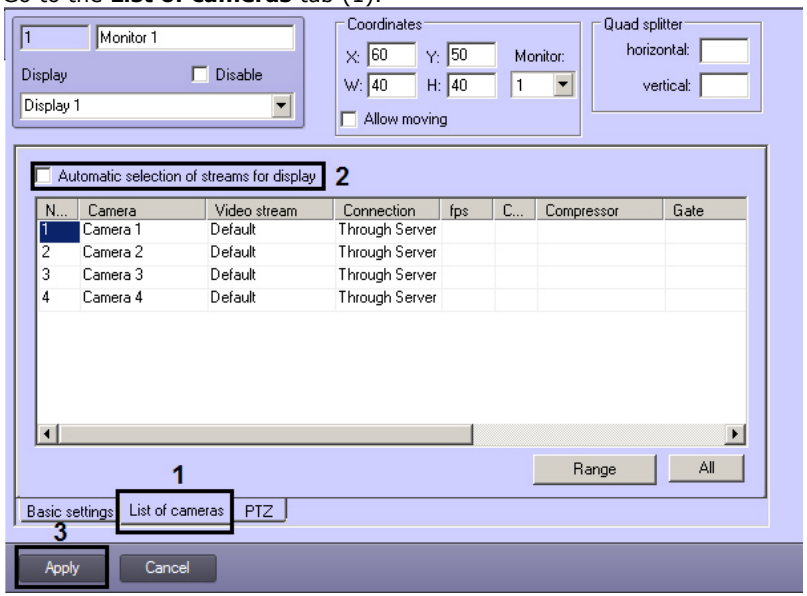

3. Set the **Auto selection of streams for display** checkbox (2).
4. Click the **Apply** button (3).

Configuring an auto select of video stream for displaying is completed.

Configuring the display mode for camera boxes

To display camera boxes (windows with video images) one of the following modes is in use:

1. The **Active camera** mode. Only active camera box is displayed in the Monitor interface box.

Note.
To make camera box active click upon it with the left mouse button. A camera box is switched to the active mode using another Video surveillance monitor. So, when the **Active camera** display mode is in use, more than one **Monitor** object is to be created in the system. If only one **Monitor** object is created and the **Active camera** display mode is selected for it, then surveillance windows won't be displayed on the monitor.
Video from camera selected on Map or Operator Protocol created based on the same **Display** object as the **Monitor** object is also displayed on the Video surveillance monitor in the **Active camera** mode.

2. The **Alarms cameras** mode. The boxes of alarm cameras are displayed in the **Monitor** interface box.
3. The **List** mode. Camera boxes are displayed in the **Monitor** box according to the selected layout.

Functions available in the **List** mode:

1. Control panel;
2. Slideshow.

The control panel is displayed in the the **Monitor** interface box and enables the following operations:

1. Select the number of dislayed cameras;
2. Set and use the layouts of cameras;
3. Control the slideshow.

Current date and time are also displayed on the control panel.

Slideshow is used for successive close-up displaying of camera boxes on the Monitor. Slideshow is performed with the help of the buttons on the toolbar of the Monitor in two ways:

1. Manually. Buttons of switching to the previous or next camera box are in use.
2. Automatically.Switching to the next camera box is performed automatically in a set period of time.

To set the display mode for camera boxes, do the following:

1. Go to the settings panel for the **Monitor** interface box.

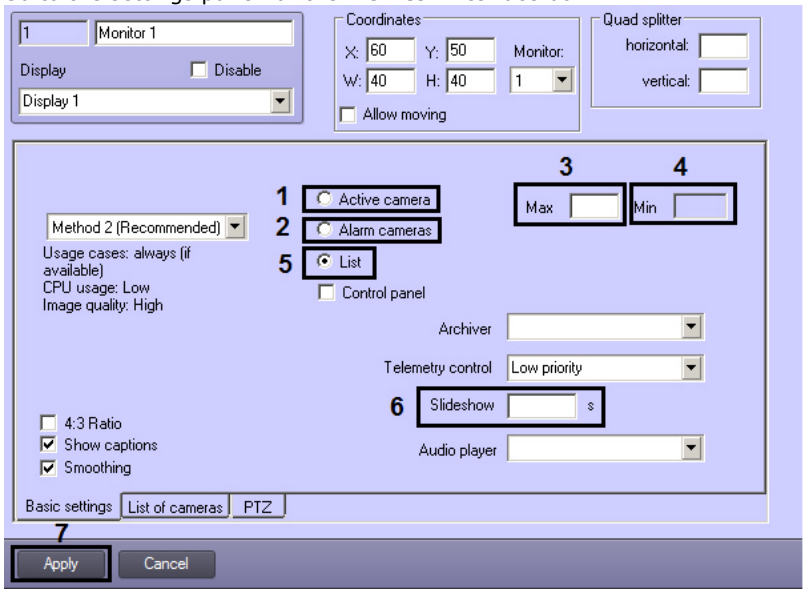

2. To activate the **Active camera** mode, set the **Active camera** switch in the **Basic settings** tab (1).
3. To activate the **Alarm cameras** mode, set the **Alarm cameras** switch in the **Basic settings** tab (2). As a result the **Min.** field is available.
4. In the **Max** field specify the required maximum number of cameras boxes which are to be displayed on the Monitor (3). If the number of alarm cameras exceeds the maximum one, then displaying of camera boxes, alarms on which have been registered earlier, is stopped.

> **Example.**
> The **Monitor** object is set for operation with maximum number of alarm cameras, equal to 5. Boxes of 4 alarm cameras are displayed in the Monitor box. Alarms on these cameras have been registered in the following sequence: Camera 1, Camera 2, Camera 3 and Camera4. When alarm has been registered on three more cameras, seven cameras are alarmed at the same time.This exceeds a maximum acceptable number, so the displaying of Camera 1 and Camera 2 boxes is stopped.

5. In the **Min** field specify the required minimum layout to be displayed on the Monitor (4). If the number of alarm cameras is less than a minimum one, then less than minimum boxes of cameras are displayed on the Monitor while size of boxes stays according to the **Min.** field. The following layouts (number of camera boxes) are available: 1, 4, 9, etc.

> **Example.**
> The **Monitor** object is set for operation with minimum number of alarm cameras, equal to 3. Boxes of 5 alarm cameras are displayed in the Monitor box. When alarm on 4 cameras is stopped in the consequence: Camera 1, Camera 2, Camera 3 and Camera 4, one camera is in the alarm mode. This is less than a minimum number, so Camera 5 is displayed on the Monitor in a size corresponding to layout with 4 camera boxes.

6. On no- alarm if the default value (0) of the **Min** parameter is set, camera boxes are not displayed in the Monitor box.
7. To activate the **List** mode, set the **List** switch in the **Basic settings** tab (5).
8. If necessary specify the required value (in seconds) of automatic slideshow for camera boxes in the **Slideshow** field (6).

> **Note.**
> This setting is relevant only if the toolbar is in use in the **List** mode.

9. To save all the changes click the **Apply** button (7).

The display mode for camera boxes is now configured.

Selecting the overlay mode

Overlay is used for image processing using the Direct X video card and libraries, before it is displayed.

Overlay allows improving the image due to optimization of the pixel color settings. At the same time, the CPU's load is reduced, as the video image is processed with the resources of the video card.

There are three overlay modes in INTELLECT™ software:

1. **Method1**.Video signals from cameras are processed as a single video stream.This mode has the following features:
   a. In this mode repositioning (using the mouse) of the **Viewing tile** is not available. So if this mode is in use, then the **Allow moving** checkbox stays unchecked on the Monitor settings panel.
   b. In this mode the layout displaying 6 viewing tiles is unavailable.
2. **Method2 (Recommended)**. Video signals from cameras are processed independently from each other.
3. **None**. Video signals from cameras are not processed by a video capture card.

As a rule, the **Method2** is the optimal mode for overlay operation. This mode is supported by the most of video capture cards. If a video capture card doesn't support the chosen overlay mode, then a video signal is displayed with a big slowing-down.

> **Note.**
> For correct overlay operation in INTELLECT™ software, installed as a Server, set the 0 value for the NoDesktop text parameter in the HKEY_CURRENT_USER\Software\Microsoft\Windows\CurrentVersion\Policies\Explorer registry section. This parameter is for displaying icons on the user desktop.

To select an overlay mode, do the following:

1. Got to the settings panel for the **Monitor** interface object.

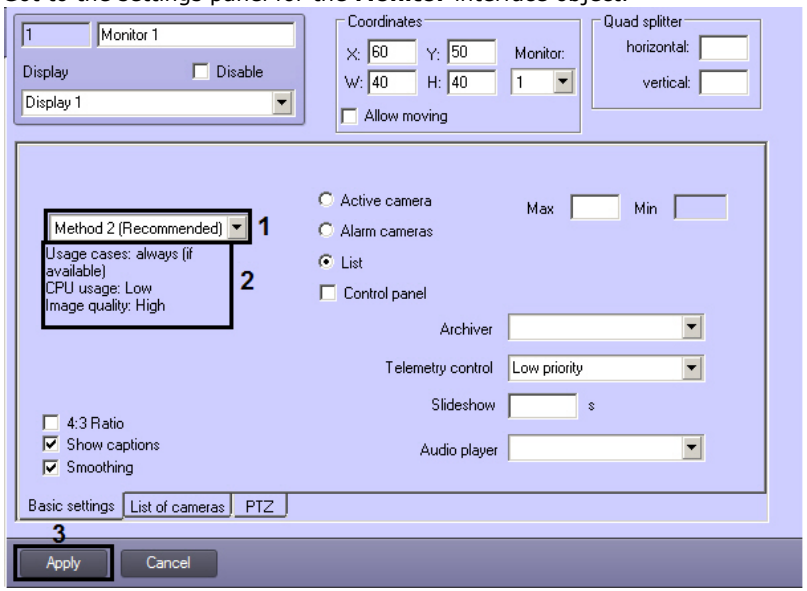

2. Select the required overlay mode in the **Overlay** drop-down list in the **Basic settings** tab (1).

> **Note.**
> There is a description of the selected overlay mode in the field below the drop-down list (2).

3. To save all the changes, click the **Apply** button (3).

The overlay mode is now selected.

Setting the Telemetry control priority using the Monitor object

INTELLECT™ software has an option of Telemetry control using the **Monitor** object. The control is performed with the help of a mouse or joystick.

By default, the **Telemetry control** option with the use of the **Monitor** object is disabled. To enable the **Telemetry control** option, the control priority is to be set for the **Monitor** object (see Installing and configuring security system components guide).

To set **Telemetry control** priority using the **Monitor** object, do the following:

1. Go to the settings panel for the **Monitor** interface object.

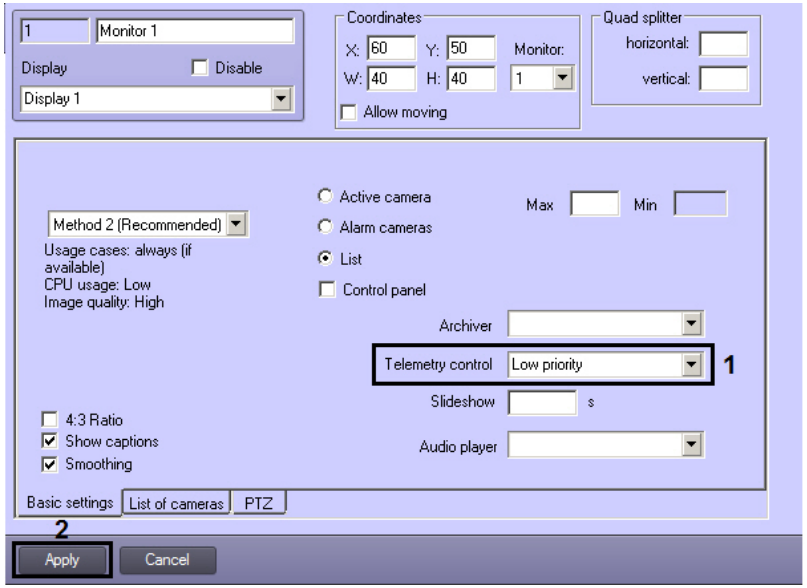

2. Select the required Telemetry control priority in the **Telemetry control** drop-down list in the **Basic settings** tab (1).

> **Note.**
> To disable **Telemetry control** option using the **Monitor** object, select the **Forbidden** value.

3. To save all the changes, click the **Apply** button (2).

Telemetry control priority using the **Monitor** object is now set.

Configuring the captions showing

Enabling the captions showing

INTELLECT™ software has the option of showing captions for a list of cameras that are displayed in the **Monitor** interface box. This option is enabled by default. In large distributed systems it is recommended to disable captions on those monitors where captions are not planned to be shown in order to decrease the number of redundant events.

To disable the option of captions showing, do the following:

1. Go to the settings panel for the **Monitor** interface object.

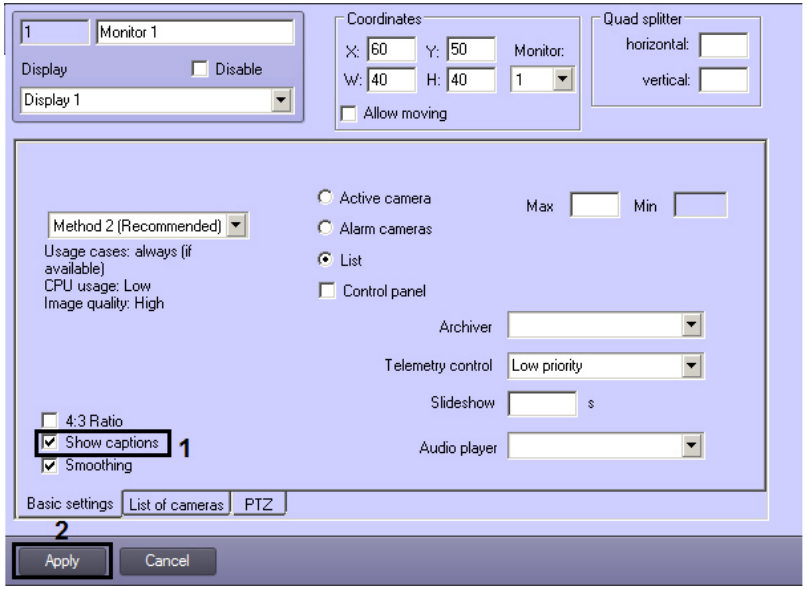

2. To disable the titles showing menu, uncheck the **Show captions** checkbox in the **Basic settings** tab (1).
3. Click the **Apply** button to save the changes (2).

The option of captions showing is disabled.

Configuring captions display on a video image

The **Captioner** object is a child object of the **Camera** system object. It is designed for configuring titles display on a video recording and maintaining titles database.

This object allows setting the limits of titles output, font parameters and color of words. Titles are output into the field on a video recording from a camera.

If the **Captioner** object is not created in the system, then titles are not displayed.

> **Note.**
> Titling on a video recording can be performed, for instance, using the scripts or programs in INTELLECT™ embedded language (see Programming Guide (JScript)).

To configure the **Captioner** object, do the following:

1. Go to the **Hardware** tab of the **System settings** dialog box (1)
2. Create the **Captioner** object on the base of the **Camera** object (2).

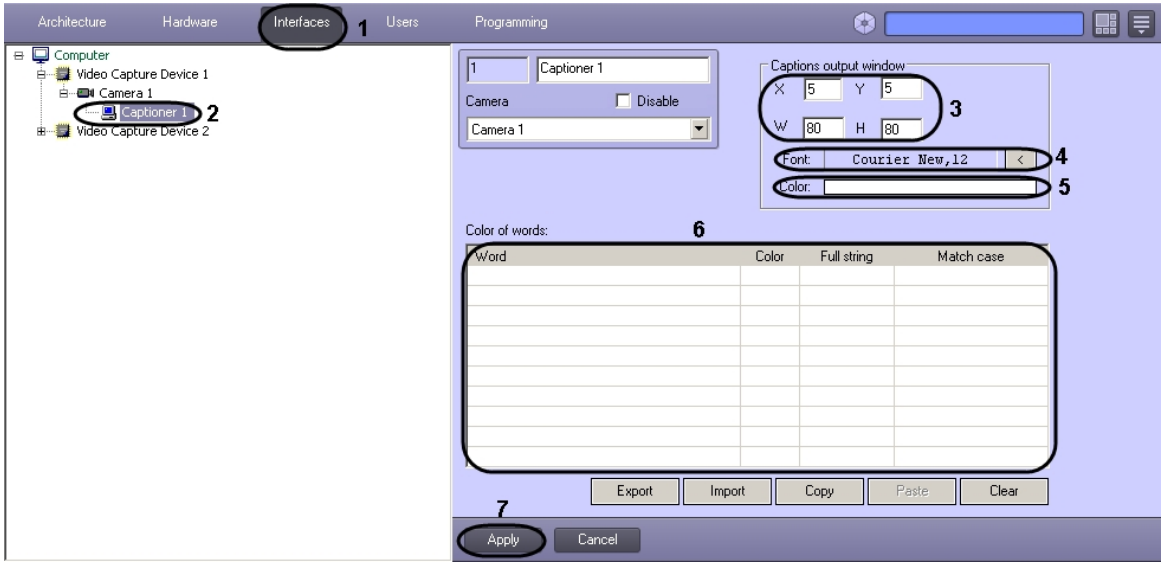

3. Specify the parameters of the titles output window (3):
    a. Set coordinates of the upper left corner of the titles output window: **X** (horizontal indent from left border of screen) and **Y** (vertical indent from top border of screen) fields.
    b. Set measurement of the titles output window: **W** (width of the titles output window) and **H** (height of the titles output window) fields.
4. Specify the parameters of font used for titles output:
    a. Click the < button (4).
    b. In the appeared Windows dialog box, specify font parameters and click **OK.**
    c. Double left-click the **Color** field (5)
    d. In the appeared Windows dialog box, select color and click **OK.**
5. Specify the parameters for words highlighting (6):
    a. Right-click the **Color** of words field and select **Add** in the appeared context menu.

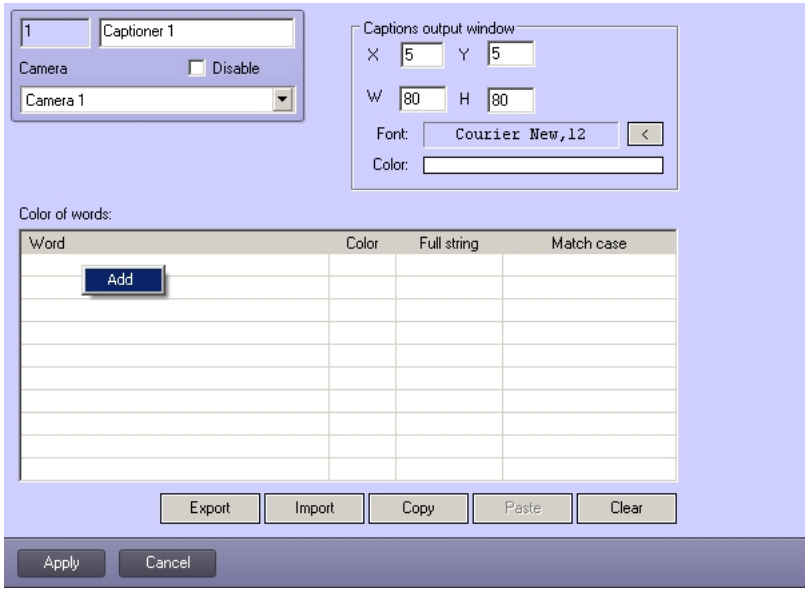

b. In the appeared dialog box, type-in a required word and click **OK**. The word is added to the **Color** of words table.

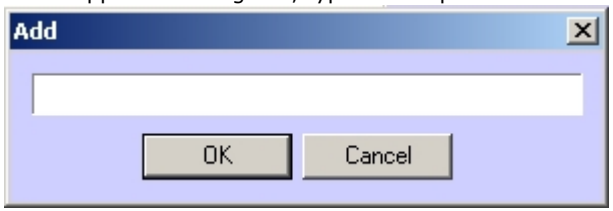

c. Specify the color with which the word will be highlighted by double left-clicking the **Color** field next to the specified word. In the appeared Windows dialog box, select color and click **OK.**
d. If the full string with a word is to be highlighted, then set the **Full string** checkbox.
e. If the case of word characters is to be matched, then set the **Match case** checkbox.
f. Repeat steps 5.1-5.5 for all required words.

> **Note.**
> Use the context menu for operations with words in the table (right-click a word). If the table is to be cleared, then click **Clear**.

6. Click the **Apply** button (7)

The **Captioner** object is now configured.

> **Note.**
> Use the **Copy** and **Paste** buttons to import all settings from one **Captioner** object to another.

The **Color of words** table can be saved and imported from a file. The **Export** and **Import** buttons are used to save and import the table.

Binding Audio player to the Monitor

Audio player binding to the video surveillance monitor is for playback and export video with audio from the **Monitor** interface. Bind the Audio player, configured to playback audio received from microphones bound to cameras on which the playback and export are to be performed, to the video monitor.

Information on how ho create and configure the **Audio player** object is given in the Configuring audio signals playback using the Audio player object section.

To bind the Audio player to the video surveillance monitor, do the following:

1. Go to the settings panel for the **Monitor** object.

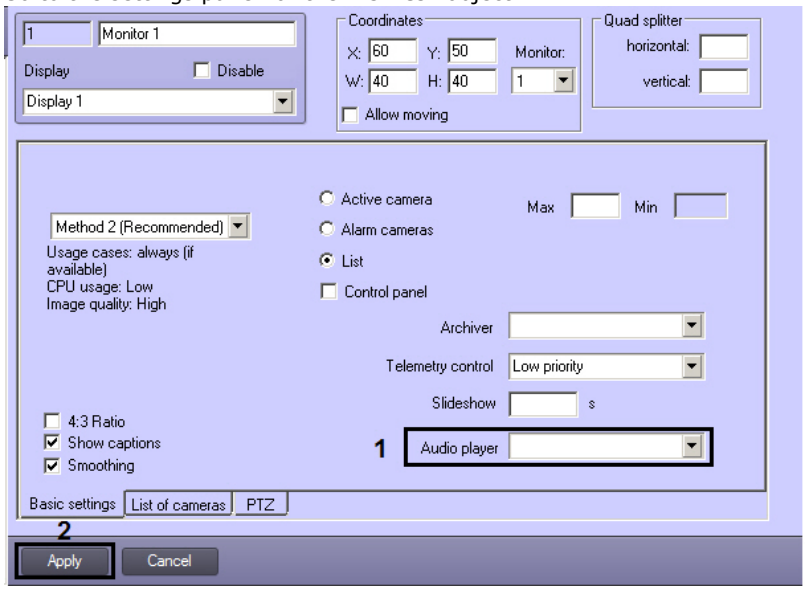

2. In the **Audio player** dropdown list, select the previously created **Audio player** object that is to be used for playback and export of video with sound from the Monitor interface (1).
3. Click the **Apply** button (2).

The Audio player is now bound to the Monitor.

Configuring a rotation angle of video image

In the Intellect software the image from the video camera can be panned while displaying it on the Video surveillance monitor and viewing the video archive. Available rotation angles are 90, 180 and 270 degrees.

To configure the rotation angle do the following:

1. Go to the **Hardware** tab of the **System settings** dialog box (1).

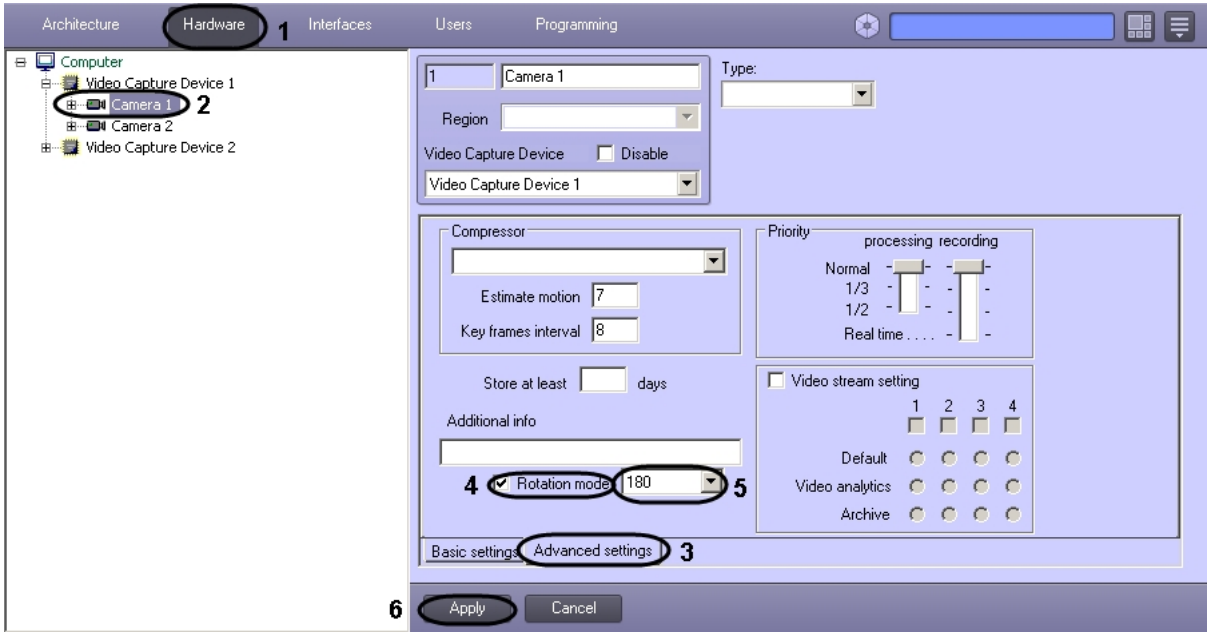

2. Select the **Camera** object corresponding to the video camera from which the video image is to be rotated while displaying (2).
3. Go to the **Advanced settings** tab (3).
4. Set the **Rotation mode** checkbox to activate the rotation function (4).
5. From the drop-down list select the rotation angle (5).
6. To save settings in the Intellect software click the **Apply** button (6).

> **Note.**
> On default the video signal is displayed in the Video surveillance window in initial non-rotated state. To rotate the video image select the **Pan** function in the **Processing** sub-menu of the Video surveillance window - see the Operator's Guide document.

Configuring a rotation angle of the video image is completed.

Configuring object's panoramic view by means of the Scene object

Panoramic view window is designed for creating and using the panoramic image, composed from several cameras' view fields. Setting up the panoramic view window is performed by **S cene** object settings panel.

The **Scene** object setup is performed in the following way:

1. Select a screen and create the **Scene** object.
2. Set the parameters of the **Scene** interface box.
3. Select and setup cameras for displaying in the **Scene** window.

> **Note.**
> Working with Panoramic view window is described in detail in Operator's Guide.

Creating the Scene object

To create the **Scene** object, do the following:

1. Select the required **Display** object in the **Interfaces** tab of the **System settings** dialog box.

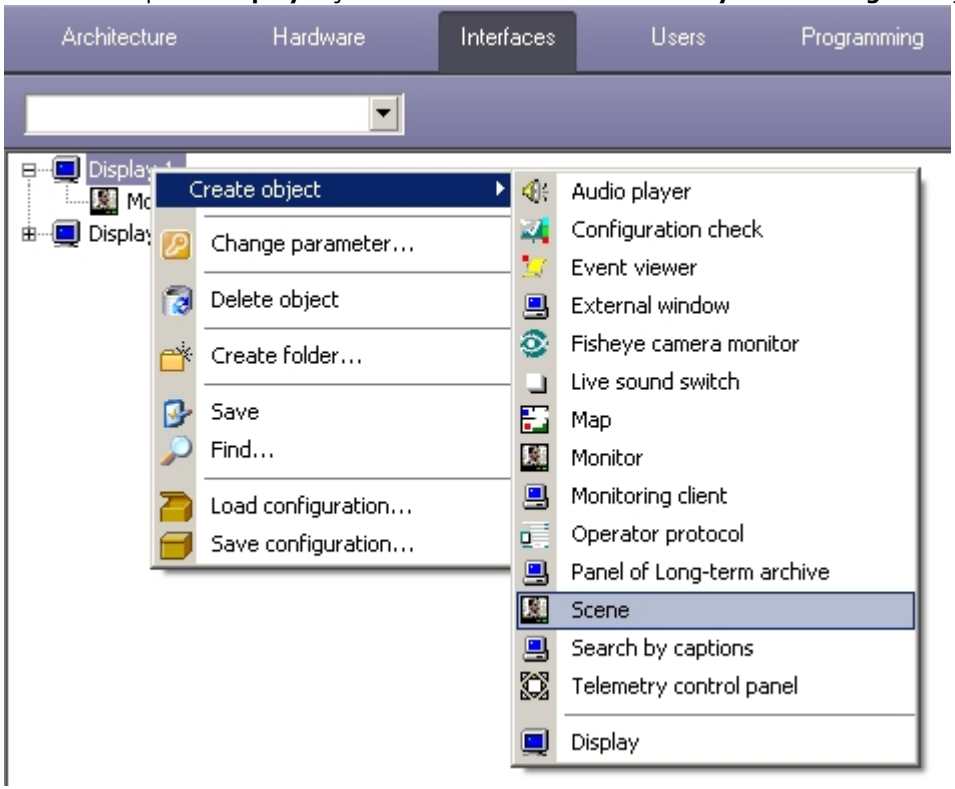

2. Make a right mouse click upon the selected **Display** object and select **Create object -> Scene** in the appeared context menu.
3. Set the name and number of the **Scene** object in the appeared window and then click the **Apply** button.

> **Note.**
> The settings panel for the **Scene** object will be displayed as a result.

4. Repeat steps 1-3 for all required **Display** and **Scene** objects.

The **Scene** object is now created.

Setting the parameters of the Scene interface box

Setting the parameters of the **Scene** interface box is done in the following way:

1. Go to the settings panel for the **Scene** object.

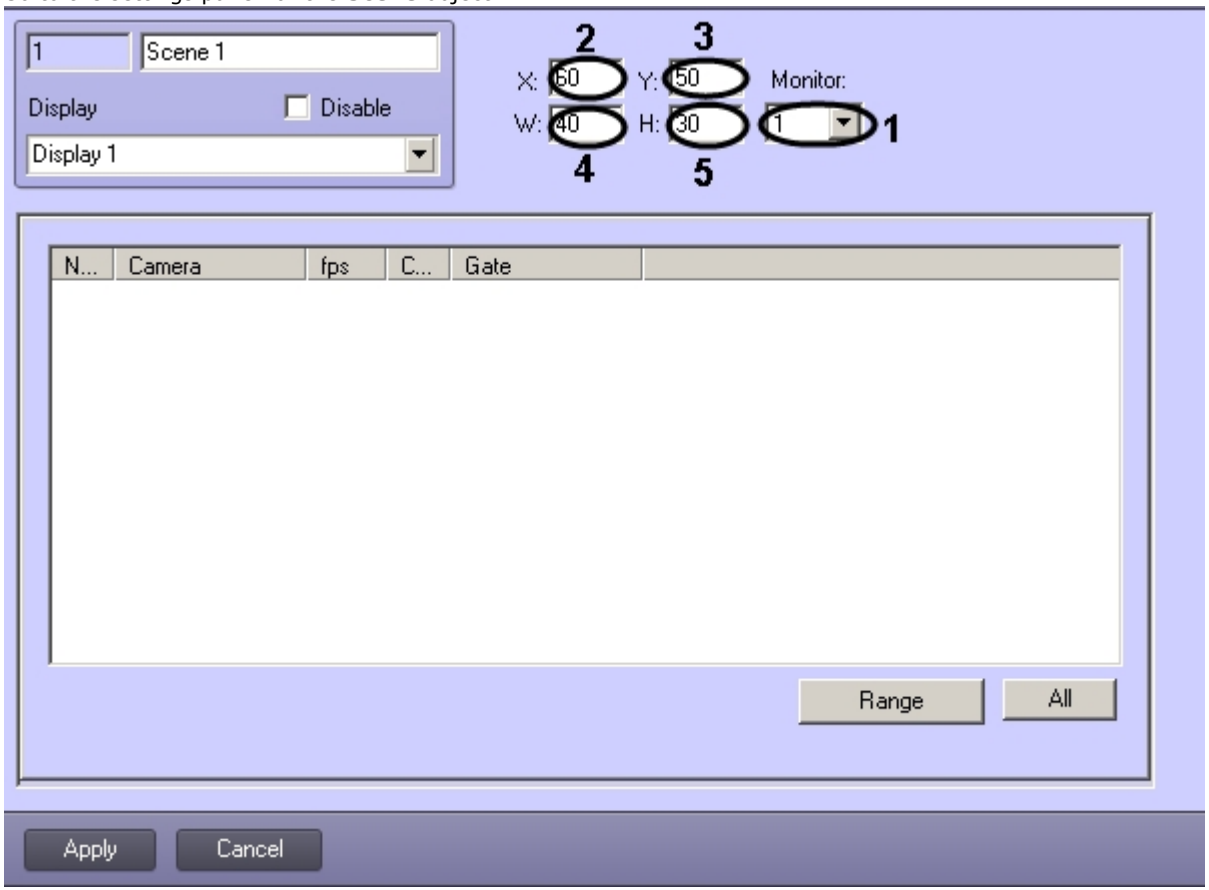

2. Select the number of physical monitor on which screen there will be displayed the panoramic view from the **Monitor** dropdown list (1).
3. Set the coordinates of the left upper corner in the **Scene** interface box: fields **X** (horizontal shift from the left image border) and **Y** (vertical shift from the upper image border) – see 2-3. The coordinates are given in percentage according to vertical and horizontal screen size.
4. Set the sizes of the **Scene** interface box: fields **W** (window's width) and **H** (window's height) – 4-5. The sizes are given in percentage according to vertical and horizontal screen size.
5. Click the **Apply** button to save the changes.

Parameters of the **Scene** interface box are now set.

Selecting and configuring cameras for the Scene object

One can select and configure cameras for displaying in the interface box in two ways:

1. Separately. The settings panel of the **Scene** object is used.
2. In a complex way. The **Add/edit cameras** dialog box is used.

To select a camera on the settings panel of the **Scene** object, do the following:

1. Go to the settings panel of the **Scene** object.
2. Select the number of required camera from the **Number** dropdown list (1).

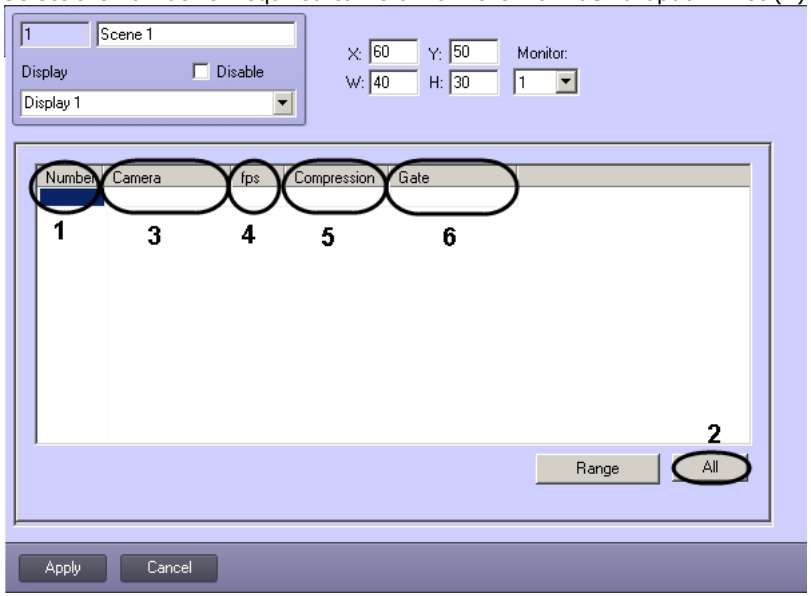

> **Note.**
> To select all the cameras, registered in the system, click the **All** button (2).

3. The name of selected camera will automatically be displayed in the **Camera** column (3)
4. If a signal is to be thinned, the required fps is to be selected from the fps dropdown list (4).

> **Note.**
> It's not recommended to change **fps** value while using H.264 codec

5. If a compression level of video signal is to be changed, the required compression level is to be selected from the **Compression** dropdown list (5). The compression level increases from 0 (no compression) to 5 (maximum compression).
6. If the archive from the selected camera is to be received via the **Gate** object, then select the name of this object from the **Gate** dropdown list (6)
7. Repeat steps 2-6 for all the required cameras.

> **Note.**
> To add a new camera, go to the last line in the selected cameras list and press "down" on the keyboard.

8. Click the **Apply** button to save the changes.

Cameras selection on the settings panel of the **Scene** object is completed.

There is possibility to select and edit parameters of cameras for displaying in the **Scene** interface box in a complex way.

Complex cameras selection is performed in the following way:

1. Go to the settings panel for the **Scene** object and click the **Range** button (1)

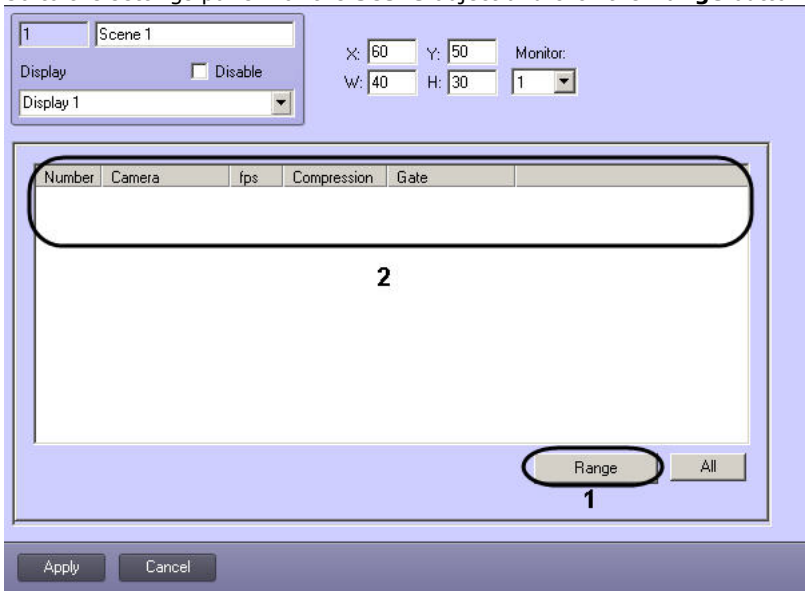

2. The **Add/edit cameras** dialog box will open as a result.

> **Note.**
> The **Add/edit cameras** dialog box is described in the Selecting and configuring video cameras as a package section.

3. Cameras settings, set in the **Add/edit cameras** dialog box will be displayed on the settings panel of the **Scene** object (2).
4. Click the **Apply** button to save the changes.

Complex cameras selection is completed.

Configuring video transmission to Remote Workstations

INTELLECT™ software supports transmitting the digital video signal from the Server to the Remote Workstations for remote video surveillance, archiving, routing via the video gate, transmitting via the Web-server by HTTP protocol (Internet), to a mobile device with iOS operation system. Both real-time and archive video signals may be transmitted to the Remote Workstations.

Real-time video signals are transmitted by Remote Workstation demand for displaying, archiving, routing via the video gate or transmitting via the Web-server by HTTP protocol (Internet), to a mobile device with iOS operation system. By default, transmitted video signals have the same parameters (resolution, color depth, frame rate etc.) as they have during digitizing and processing by the video capture card or IP-device.

Prior to transmitting to Remote Workstations, video signals are compressed. By default, video signals, transmitted to the TCP/IP place via local net, and archived video signals are compressed at the same rate. For the setup procedure of video signal compression rate, see Configuring video compression section.

Real-time video displaying may lag if the connection is unstable and/or transmitting rate via network connection is low. To eliminate or minimize this effect, use the following registry keys:

- AcsStdLimit – the registry key used for setting the upper frame sequence limit in MJPEG format. It possesses the values from 1 to 30.

- AcsMpegLimit – the registry key used for setting the upper frame sequence limit in H.264/MPEG4 format. It possesses the values from 1 to 30.

If sequence of frames transmitted to a Remote Workstation rises to the value specified in the registry key, then scaling is enabled.

> **Note.**
> Keys are to be created in the HKEY_LOCAL_MACHINE\SOFTWARE\ITV\INTELLECT\Video for 32-bit system (HKEY_LOCAL_MACHINE\Software\Wow6432Node\ITV\INTELLECT\Video for 64-bit system) registry section on the Server.The process of key creation is described in Working with Windows OS registry section.

When video signals are transmitted to Remote Workstations for displaying, archiving and routing with video gate, it is possible to reduce their frame rate and to increase their compression rate.

When video signals are transmitted to Remote Workstations for displaying, their frame rate reduction and their compression rate increase are set on the settings panel of the Monitor object for each camera individually.

When video signals are transmitted to Remote Workstations for archiving, their frame rate reduction and compression rate increase are set on the settings panel of the **Backup archive** object for each camera individually.

When video signals are transmitted to the video gate, their frame rate is reduced and compression rate is increased on the settings panel of the **Video gate** object for each camera individually.

When video signals are transmitted via a web-server by HTTP protocol to a Remote Workstation, a mobile device with iOS operation system, its compression rate is set on the settings panel of the **Web-server** object that corresponds to the Web-server module. For the setup procedure of the video signal compression rate, see the chapters on Web-server or the documentation on the mobile clients.

Configuration of audio

Configuring audio signals playback using the video monitor

The video monitor has the facility to play back audio signals only from the microphones that have been set to synchro video and audio recording. INTELLECT™ software provides an audio playback option for real-time audio signal and for audio signals, archived in the synchro recording mode.

To enable the option of audio signals playback by the video monitor, do the following:

1. Configure synchro video and audio recording with a camera - see Configuring audio and video synchro recording.
2. Bind the **Audio player** object to the **Monitor**. The configuration of binding is described in Binding Audio player to the Monitor section.

This option is deactivated automatically, when the synchro video and audio recording option is disabled for the selected camera and microphone or when the Audio player binding to the video surveillance monitor is disabled.

> Synchronous playback of video and audio recordings

Configuring audio signals playback using the Audio player object

Audio player setup sequence

Audio player object is a subclass of the **Display** interface object and is designed for implementing the following functions:

1. perform recording of sound activated audio signals;
2. record audio signals by Operator command;
3. play back input audio signals;

4. play back audio signals, recorded by sound level or by Operator command;
5. perform voice notification.

To set **Audio player** object do the following:

1. Select the screen and create for it **Audio player** object.
2. Set the parameters of **Audio player** interface object.
3. Set the recording and playback of audio signals from microphones.
4. Set the voice notification during alarms registration by cameras' motion detectors (see Setting up the voice notification using Audio player object).

Note.
Setup sequence of **Audio player** object for transmition of audio signals to IP-device is described in the Setting up the transmission of video signals to IP-devices and the Setting up the transmission of audio signals to IP-device Bosch.

Audio player operation

Creating the Audio player object

To create the **Audio player** object do the following:

1. Select the required object **Display** on the tab **Interface** of **System settings** dialog window .

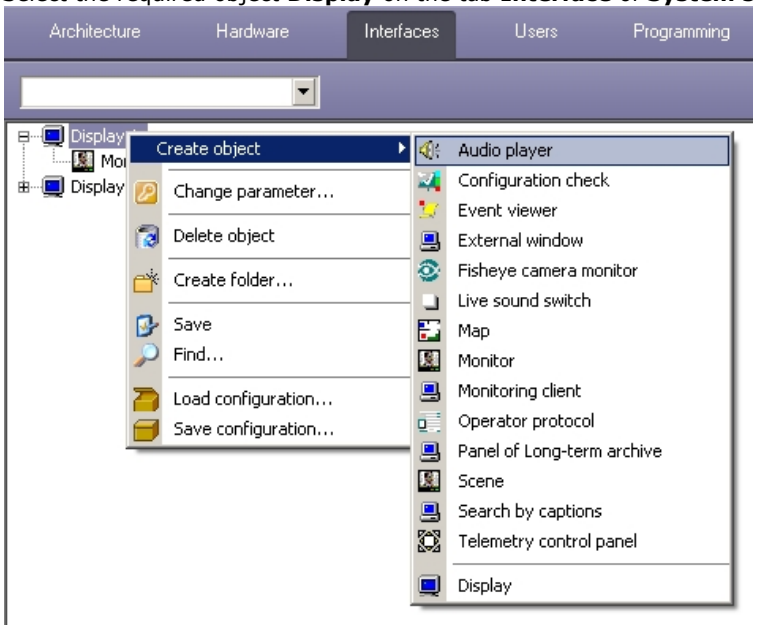

2. Click with the right mouse button upon the selected object **Display** and in the contectual menu , that will open, select **Create object -> Audio player** (1).
3. In the window, that will open, set the name and number of the object **Audio player** and then click **Apply** button.

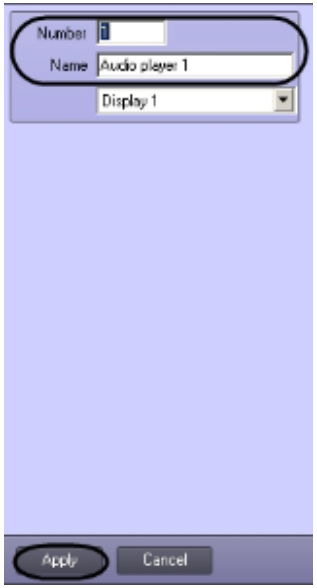

> **Note.**
> In result Settings panel of **Audio player** object will be shown.

4. Repeat steps 1-3 for all the required objects **Display** and **Audio player.**

Creation of **Audio player** object is over.

Setting the parameters of the Audio player interface box

To set the parameters of the **Audio player** interface box, do the following:

1. Go to the settings panel of the **Audio player** interface box.

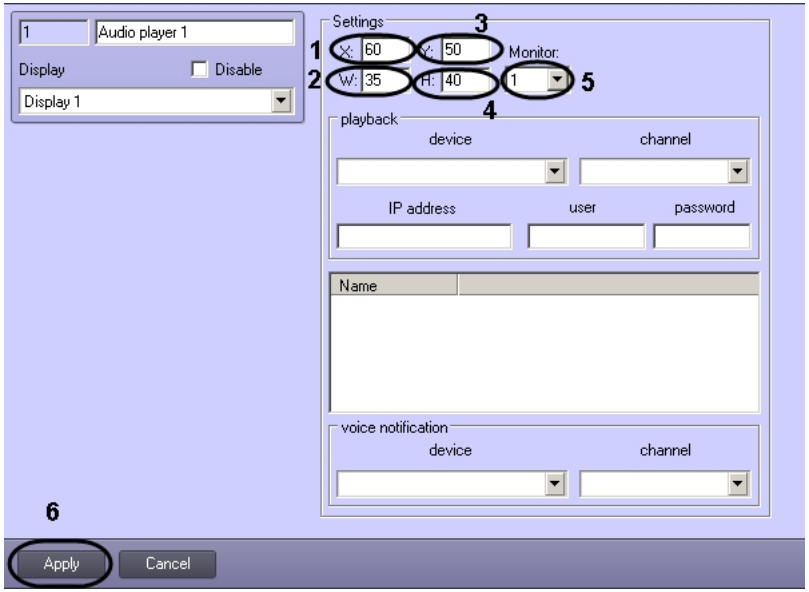

2. Set the coordinates of **Audio player** window's left upper corner: fields **X** (horizontal indent from the left image border) and **Y** (vertical indent from the upper image border - 1 and 2. Coordinates are given in percentage in relation to screen size horizontally and vertically.
3. Set the dimensions of the **Audio player** interface box: fields **W** (window's width) and **H** (window's height) – 3 and 4. Dimensions are given in percentage in relation to screen size horizontally and vertically.

> **Note.**
> Minimal allowed value of parameter **W** is 35%, **H** – 40%. With lesser value displayed width or height of the window will correspond to minimal allowed value.

4. From the **Monitor** drop-down list select the number of monitor for which coordinates are specifying (5).
5. Click **Apply** button to save all the changes (6).

Setting the parameters of the **Audio player** interface box is completed.

Setting up the recording and audio signals' playback

With the help of **Microphone** object the following opportunities of **Audio player** object are realized:

1. Playback of audio signals from the microphones.
2. Recording of audio signals by sound level or by Operator command.

To set up the recording and playback of audio signals from the microphones do the following way:

1. Go to the settings panel of **Audio player** interface object.

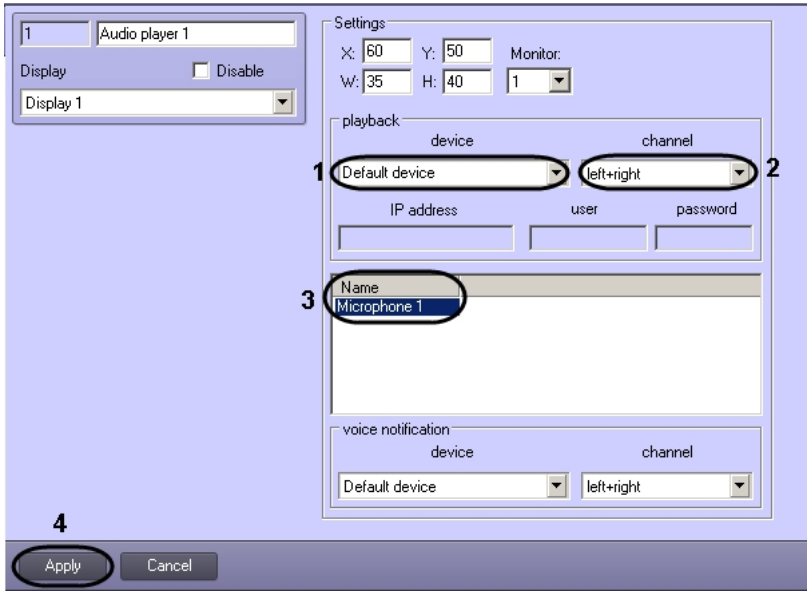

2. From the dropdown list **Device** of **Playback** group select the required device of audio signals backup (1).

> **Note.**
> Standard sound map corresponds to to the value **Default device**.

3. From the dropdown list **Channel** of **Playback** group select the required channel of audio signals backup (2).
4. Form the dropdown lit in the column **Name** select the name of **Microphone** object, which audio signals are suggested to be recorded/played back (3).
5. Repeat step 4 for all the required **Microphone** objects.
6. Click **Apply** button to save all the changes (4).

Setting up the recording and playback of audio signals from the microphones is completed.

Features of audio signals export using the video monitor

The video monitor has the facility to export audio signals only from the microphones that have been set to synchro video and audio recording.

In order to provide synhro audio export when a video recording is exported from the video monitor interface, the **Audio player** object is to be bound to the **Monitor**. The configuration of binding is described in Binding Audio player to the Monitor section. If audio player is not bound, then video from the **Monitor** interface will be exported without sound even if the archive is recorded with sound. Information on how to create and configure the **Audio player** object is given in the Configuring audio signals playback using the Audio player object section of this manual.

Detailed information on how to export video recordings from the video monitor interface is given in the Export of video recording supported with sound section of Operator's Guide.

Setting up the audio signal transmission to Remote Workstations and servers

INTELLECT™ software has the facility to transmit audio signals both from microphones and from the archive to Remote Workstations and servers.

Audio signal transmission to Remote Workplaces and servers, connected by the TCP/IP net, is performed only via **Video surveillance monitor** or **Audio player** interface objects.

The video monitor has the facility to transmit only audio signals from the microphones that have been set to synchro video and audio recording. The Audio player may be configured to

transmit audio signals from all video surveillance system microphones to the Remote Workstations and servers.

To enable audio signal transmission to Remote Workplaces and servers, follow the steps:

1. Go to the **Interfaces** tab in the **System Settings** dialog box.
2. Create the **Display** object , if it was not created before.

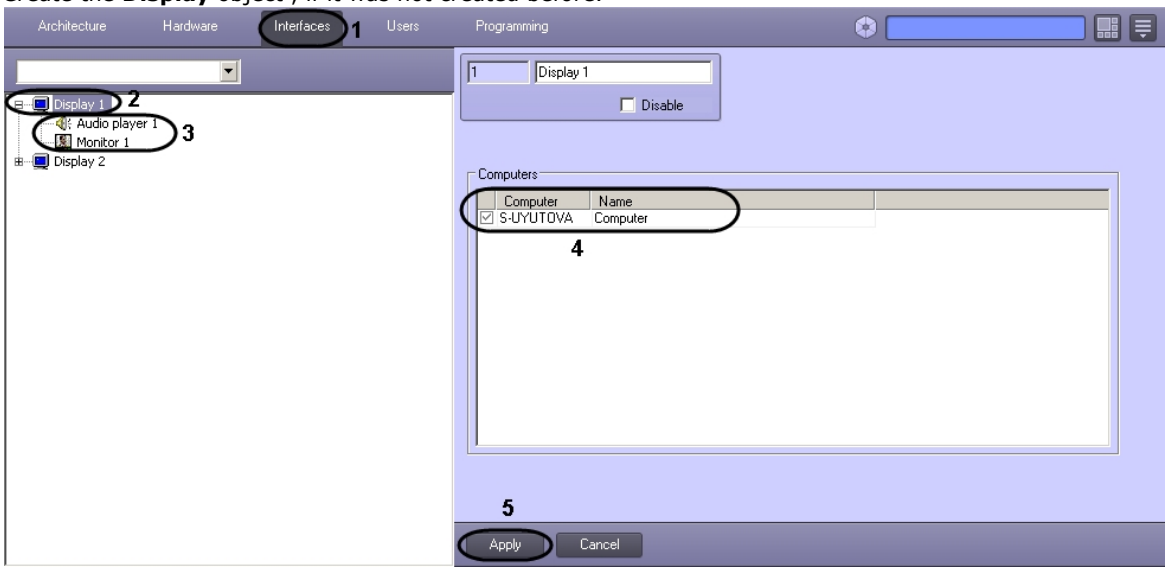

3. Set the checkmarks in the **Computers** table for those Remote Workplaces and servers, where audio signals should be transmitted.
4. Click the **Apply** button.
5. Create and set up **Monitor** and/or **Audio player** objects (for description of setting up these objects see the relevant sections).

Setup of audio signal transmission to Remote Workplaces and servers is completed.

Configuring the interactive map for object state indication and controlling the objects

General information on the structure of the interactive map of the guarded location

The interactive map of the *Intellect* system uses graphical diagrams of the guarded territory to navigate among the surveillance system components. The interactive map allows controlling the objects from the context menus of the graphical symbols on the map showing the states of the corresponding objects.

The interactive map can be comprised of a set of plans (layers) made of photographs, maps, diagrams, drawings in BMP format. The size and resolution of the images is not limited.

Note.
We recommend creating the images in third-party graphical software packages (Microsoft Paint, Adobe Photoshop, etc), as the standard delivery configuration of *Intellect* softw are does not include tools for image editing.

Note.
A plan (map layer) may be an image in BMP format.

There are no limitations on the image size and resolution, so a large image may not fit into the screen, or the objects shown on it may look indiscernible.

Working with the map

Configuring the interactive map

Setup procedure for the interactive map

To configure interactive map do the following:

1. Create and set the **Map** interface object (see Setting up the location of the map on the screen).
2. Create and set objects Layer on the basis of interface object **Map** (see Creating the layers of the interactive map).
3. Attach required objects to the Layers of interactive map (see Attaching objects to the layers of interactive map).
4. Place the object symbols of the assigned objects on the map's layers (see Operations with objects in the Map editor utility).
5. Set up the links between the layers, to be used for interactive card navigation (see Linking the layers of the interactive map).
6. Configure object ID displaying (see Configuring object ID is displaying).

Setting up the location of the map on the screen

To register the interactive map in the *Intellect* system, create the **Map** interface object.

When setting up the **Map** object, specify the position of the map on the screen.

To register the map and specify its position on the screen, do the following:

1. Open the **Interfaces** tab of the **System Settings** window.
2. Create a **Map** object under the **Display** object in the tree, or choose an existing **Map** object.

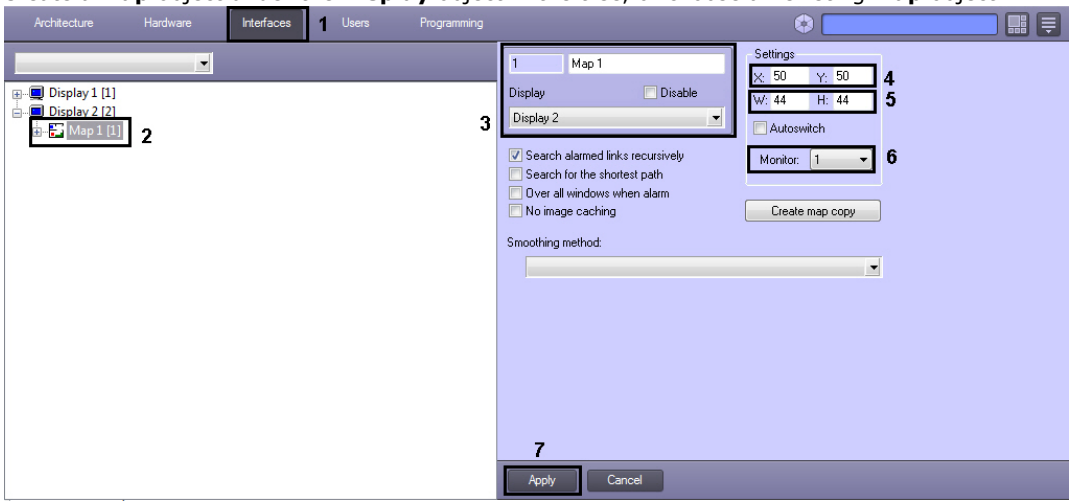

3. Specify an id and name for the **Map** object, and choose the **Display** object to become the parent of the map.
4. Set the coordinates **X** and **Y** of the upper left corner of the **Map** window, as a percentage of the corresponding screen dimensions.
5. Specify the width (**W**) and height (**H**) of the **Map** window, as a percentage of the corresponding dimensions of the screen.
6. From the **Monitor** drop-down list select the number of monitor for which coordinates are specifying.

7. Press the **Apply** button to save all changes made to the settings.

This completes the setup of the map position on the screen.

Creating the layers of the interactive map

You can locate several graphical plans of guarded objects on one interactive Map. Each graphical plan is represented by a Layer object.

To create and set up the **Layer** object, do the following:

1. Go to the **Interfaces** tab of the **System settings** dialog box (1).
2. Create a **Layer** object on the base of the **Map** object or select the existing **Layer** object in the objects tree if the Interfaces tab of the **System settings** dialog box (2).

3. Specify the id and name for the **Layer** object, and select the **Map** object to become the parent of the layer (3).
4. To edit the image represented by the **Layer**, click the **Edit** selected layer button (4). The **Map** editor utility will open allowing the graphical image to be edited.

> **Note.**
> When the **Map editor** utility is started, then the **System settings** dialog box is inactive. Close the **Map editor** utility to continue working with the **System settings** di alog box.
> You cannot start the **Map editor** utility for several layers.

5. To display this layer on top of all other layers, click the **Activate on map** button (5).
6. To save all the changes click the **Apply** button (6).

After a new layer is created and set up, a graphical image of the area is to be attached to it.

> **Note.**
> The graphical area plan should be saved as a BMP image file.

To attach the image, do the following:

1. Move to the settings panel of the **Layer** object.
2. Open the **Map editor** application.

> **Note.**
> The Map editor application allows selecting the plan of guarded area, creating the symbols for devices and placing them on the map, as well as other settings.

To open the **Map editor**, click the **Edit** selected layer button on the settings panel of the **Layer** object.

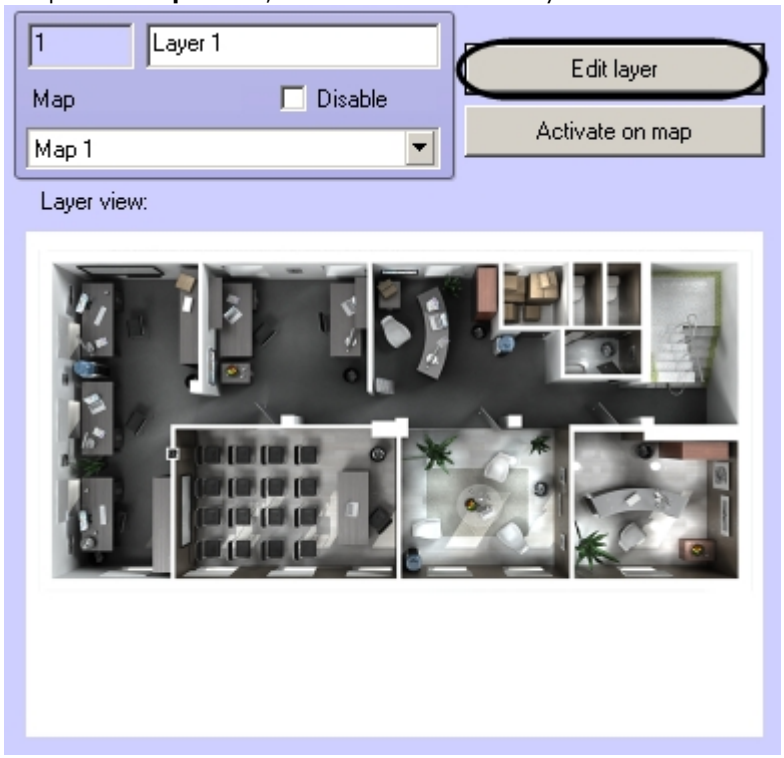

In the main menu of the **Map editor**, select **Map** -> **General settings**.

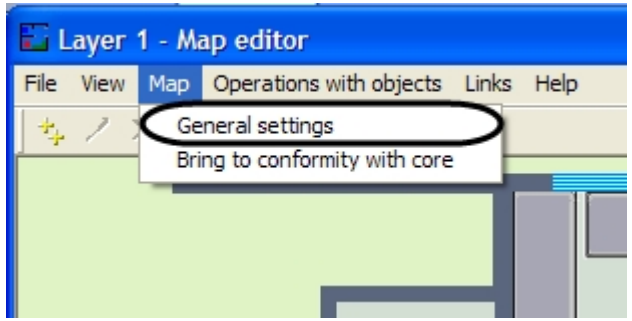

A dialog box, allowing selecting the image file for the layer, will open.

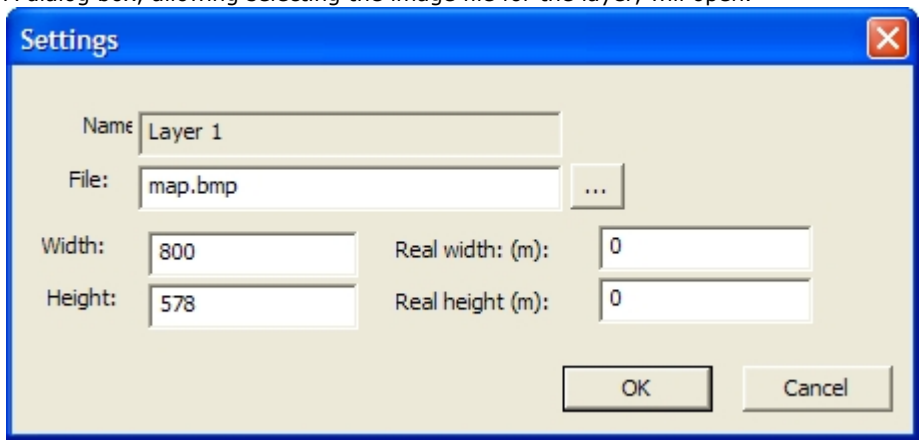

This dialog box can also be accessed from the **Set background** item of the context menu of the map area.

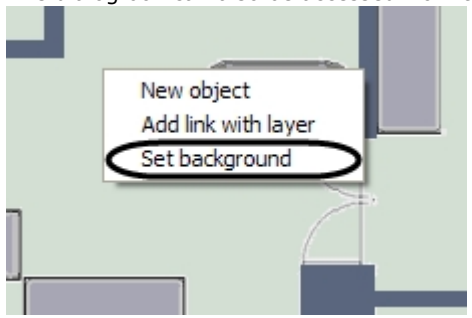

3. Press the button in the **Settings** dialog box.

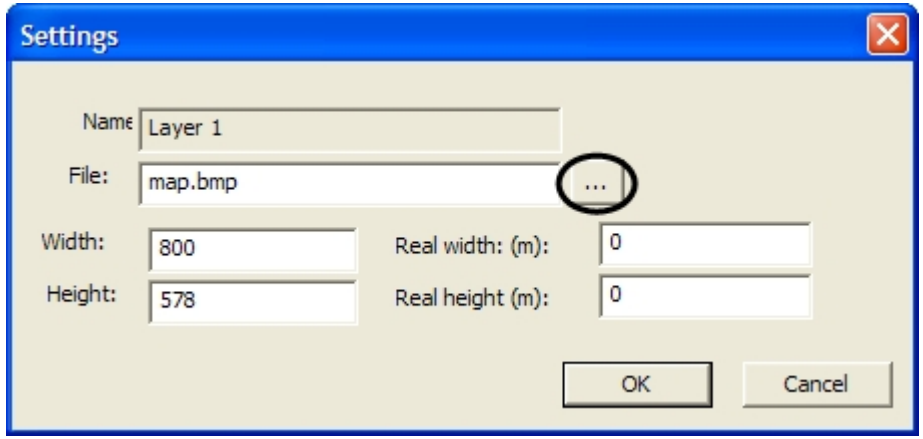

A standard dialog box, allowing to select the image file for the layer, will open.

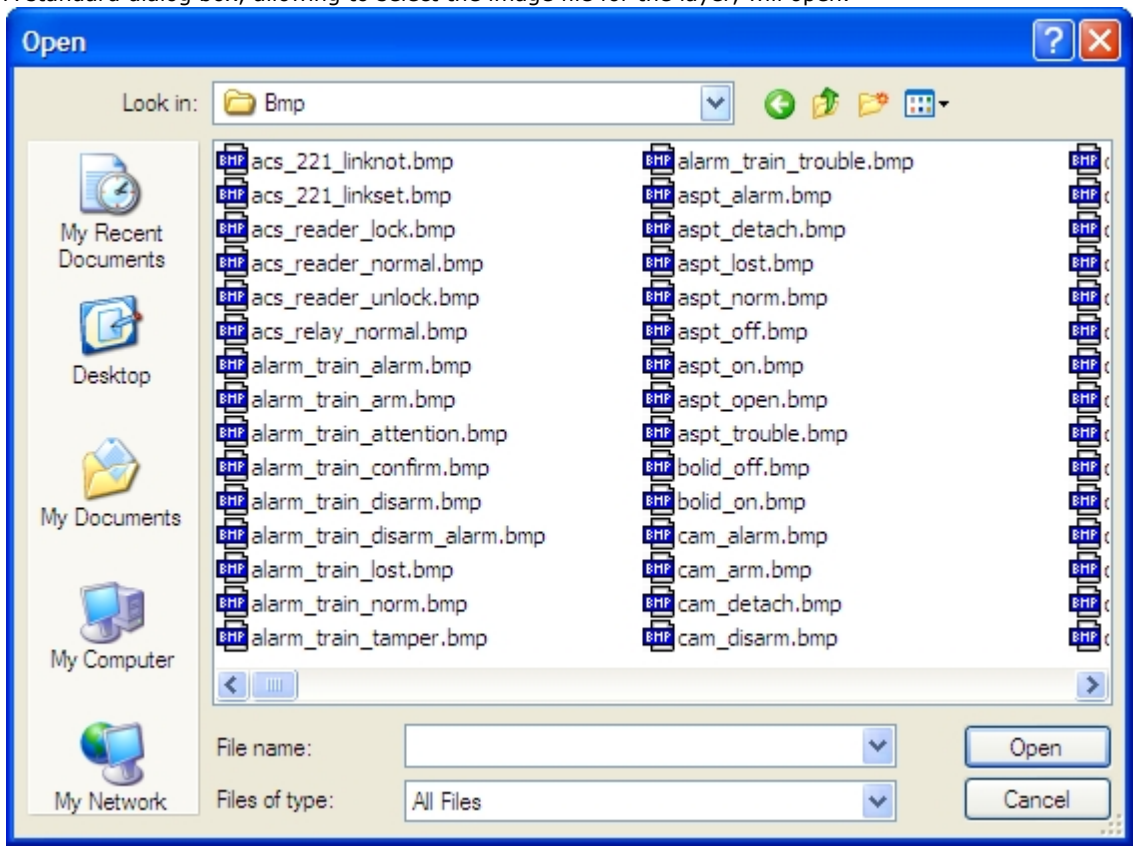

Open the BMP file and click the **Open** button.
When the layer file is selected, it is copied to the **Bmp** folder in INTELLECT™ installation folder.

> ⚠ **Attention!**
> For proper operation of the interactive map in the distributed configuration, the **Bmp** folders are to be synchronized at all computers in the distributed system. Folders are synchronized manually – by copying their contents.

Specify the resolution of the image in pixels.

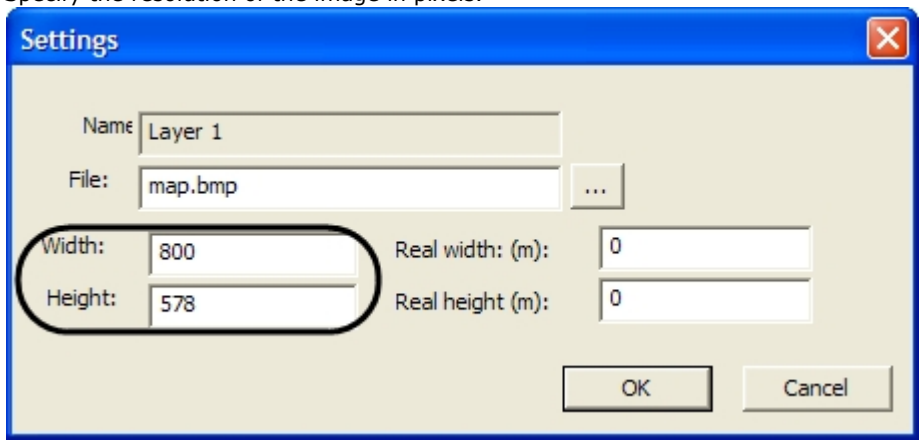

The values specified in the **Width** and **Height** fields are to match actual resolution of the image file.

4. Specify the dimensions of the real area represented by the image, in meters.

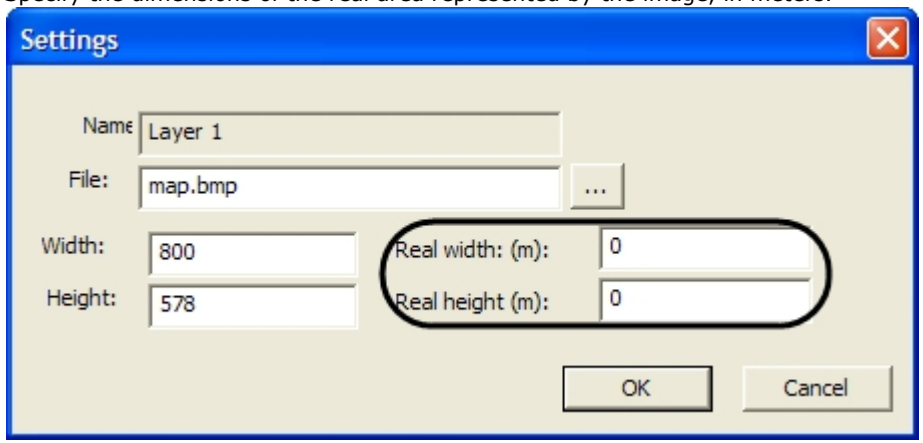

5. To apply all changes click the **OK** button.

The **Map editor** will display the new graphical plan of the guarded area.

Attaching objects to the layers of interactive map

Attachment of objects to the layers of interactive map is performed with the use of **Map editor** utility.

> **Note.**
> To open utility window **Map editor** click **Edit layer** button in the settings panel of object **Layer** (See Creating the layers of the interactive map).

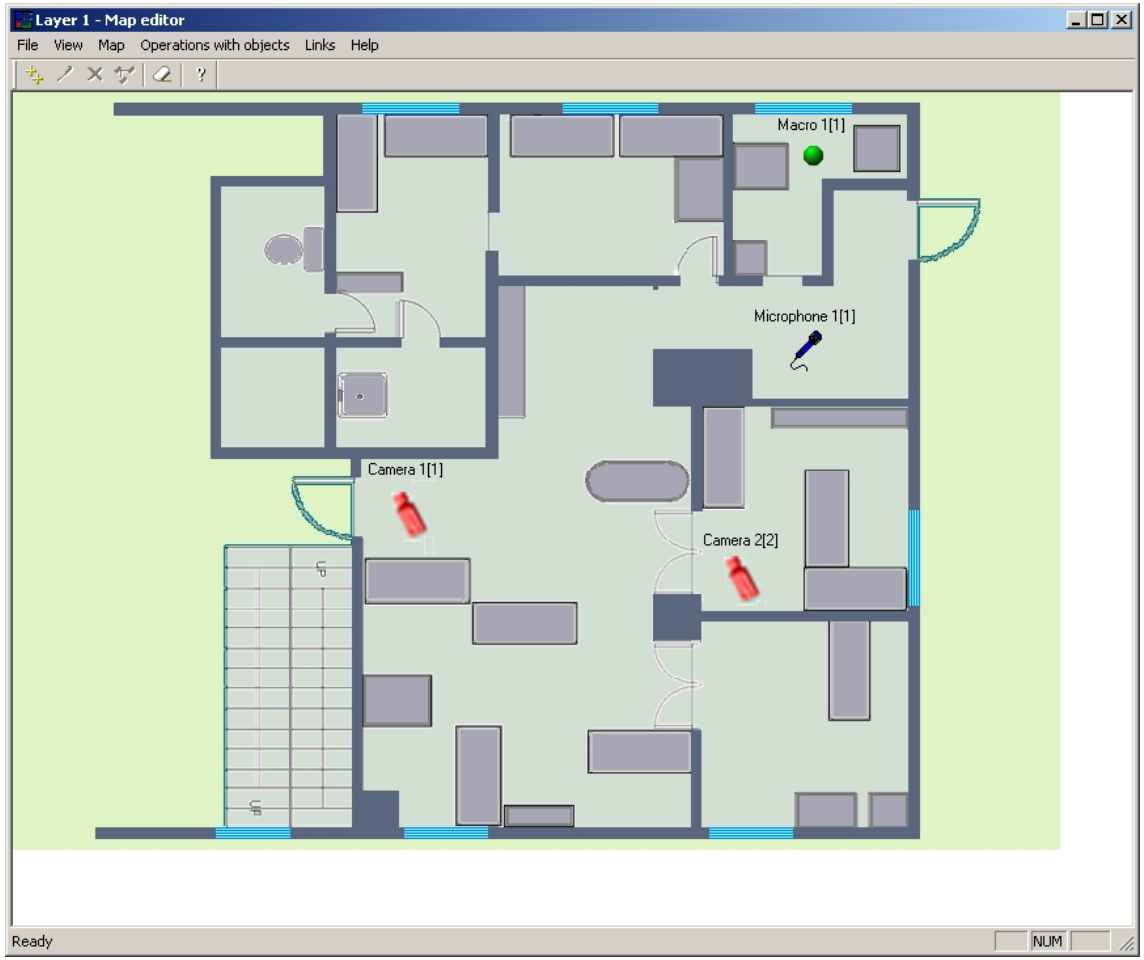

To attach objects to the layers of interactive map do the following:

1. Activate dialog window **New object** of **Map editor** utility with one of the three possible ways:
   a. Execute instruction of the main menu **Objects operations** -> **New object**.
   b. Click button on the tools panel.
   c. Execute instruction of the context menu **New object** (is activate with the right mouse click upon any graphical area).

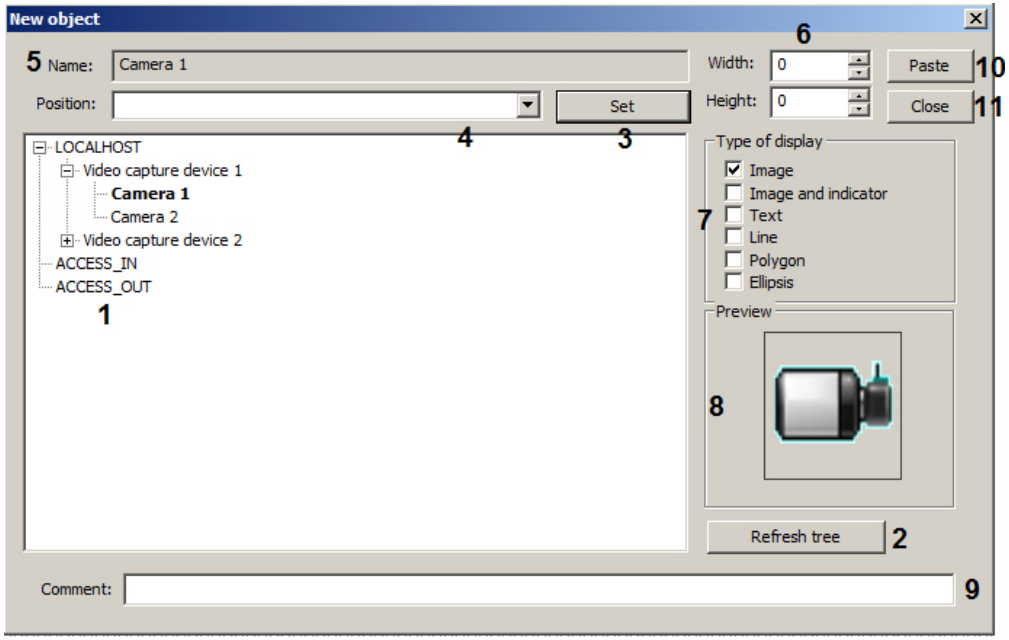

2. Select the required object in the objects tree of the **New objec**t dialog box (1)

> **Note.**
> In case when objects tree is to be refreshed, click the **Refresh tree** button (2).

> **Note.**
> Objects added to some layer of a map will be put in bold in the objects tree when pressing the **Set** (3) button. When selecting the object in the tree of **Position** drop-d own list, all maps and layers on which the selected object will be added will display (4).

3. In result of operation in the field **Name**, name of the selected object is automatically displayed (5).
4. Set the dimensions of object's symbol: fields **Width** (symbol's width) and **Height** (symbol's height) – See 4. Symbol's dimensions are expressed in pixels.

> **Note.**
> When value "o" is set in the fields **Width** and **Height**, object's symbol is displayed in its original size.

5. Set the required checkboxes checked in the **Type of display** group (7). If several types are selected, then several icons of the selected object will be added to the map. These icons can then be removed and edited independently of one another.

Position of switch Type of display	Type of object's symbol display	Usage
Image	Object's schematic view	Objects of main configuration

Image and indicator	Object's schematic view and indicator of object's state	SCADA objects
Text	Object name and text defined by script (see the Examples of scripts in JScript language section of the Programming Guide (JScript)).	SCADA objects
Line	Objects' images in the form of straight line or polyline	SCADA objects
Polygon	Object representation as the polygon with specified color and transparency with arbitrary number of apexes.	SCADA objects
Ellipsis	Object representation as the ellipse with specified color and transparency.	SCADA objects

Note.
Object's symbol is automatically displayed in the field **Preview** in accordance with selected type of display (8)

6. Set additional information about the object if necessary in the field **Comment** (9).
7. Click **Paste** button to attach object to the layer of interactive map (10).
8. Repeat steps2-7 for all the required objects.
9. Click **Close** button to close **New object** dialog window (11).

Attachment of objects to the layers of interactive map is over.

Operations with objects in the Map editor utility

On the page:

- Operations with the objects, added to the layer
- Editing the additional data and type of object's displaying
- Editing the font, color or background of object's name
- Editing the object's size
- Editing the object's position
- Editing color and transparency (polygon and ellipse)
- Adding apexes to polygon or polyline
- Setting order of displaying objects on map
- Configuring object states displaying

Operations with the objects, added to the layer

The **Map editor** utility toolbar is shown on the figure:

The **Map editor** utility enables to carry out the following operations with the objects, added to the layer (see the table).

Description of operation	Call for operation			Note
	In the Operations with objects main menu	In the context menu	On the toolbar	
Deletes the selected object	Delete object	Delete	The 1 button	-
Copies the selected object. The copy is placed above the original	Copy object	Make a copy	The 2 button	-
Edits additional data and type of displaying the sign for the selected object	Edit object	Edit	The 3 button	Is implemented by the **Edit object** dialog box
Set the displaying of the selected objects on the Map only in alarmed state (when there is no alarm, the objects are hidden)	Hide the selected	Hide	-	-
Cancels the hiding of the selected objects	Show the selected	Unhide	-	-
Edits the font for the selected object's name	Set the font	-	-	Is implemented by the **Font** standard Windows dialog box
Restores the deleted name of the selected object	Restores the title object	-	-	-
Edits the size of the selected object	Objects' sizes	-	-	Is implemented by the **Object size** dialog box
Edits the position of the selected object	Object's position	Object's position	-	Is implemented by the **Object position** dialog box or with the help of the mouse
Selects objects of one group	-	Selects all the identical	-	For example: all the **Camera** objects are selected
Selects all the identical objects within a group	-	Selects all the identical	-	For example: all the **Sensor** objects of the **Gerkon** ty pe are selected

Edit map utility enables to carry out the operations with a group of objects. For selecting the several objects it is necessary to hold the Ctrl key on the keyboard.

Note.
Operation **Object position** with a group of objects is not performed.

Editing the additional data and type of object's displaying

Editing the additional data and type of object's displaying is done in the following way:

1. Select an object that is to be edited. Green-pointed frame will appear around the image in result.
2. Call for **Edit object** dialog window of **Edit map** utility by one of the three ways:
   a. Carry out the command of the main menu **Operations with objects -> Edit object**;
   b. Click button on the toolbar;
   c. Carry out the **Edit** command of the context menu (is called by clicking the right mouse button over the object's image).

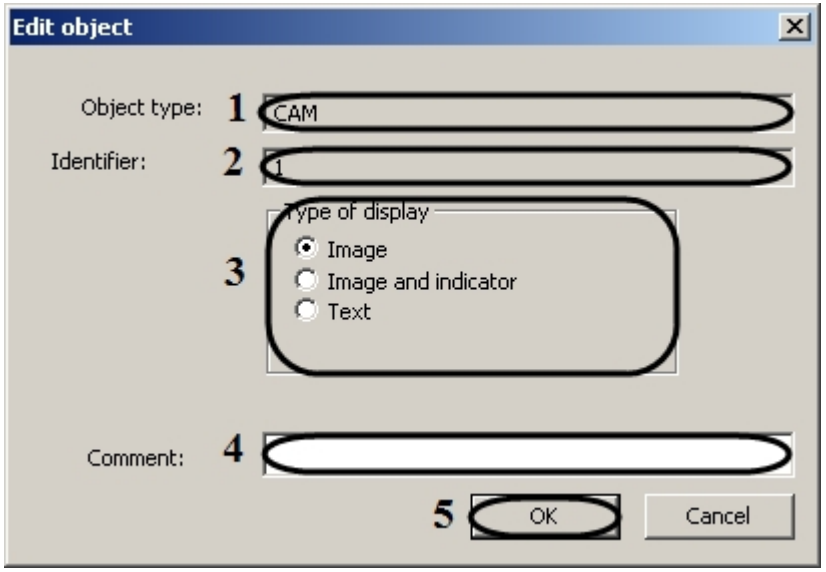

3. The type of the selected object is automatically displayed in the field **Object's type** (1).
4. Identification number of the selected number is automatically displayed in the field **Identifier** (2).
5. Change the type of object's displaying with the help of the switch **Displaying type** when necessary (3, see the table).

The switch position	**Type of object's displaying**	**Note**
«Image»	Schematic object's image	Basic configuration objects
«Image and indicator»	Schematic image and identifier of object's state	Objects SCADA
«Text»	Object name and text defined by script (see the Examples of scripts in JScript language section of the Programming Guide (JScript)).	objects SCADA
«Line »	Object's image in the form of straight line	objects SCADA

6. Change object's additional data in the field **Comment** when necessary (4).
7. To save the changes click **OK** (5).

Editing the additional data and type of object's displaying is completed.

Editing the font, color or background of object's name

Editing the font, color or background of object's name is done in the following way:

1. Select object's name which font or color should be edited. Green-pointed frame will appear around the image in result.
2. Open the **Properties** panel (see Editing object properties using the Properties panel).

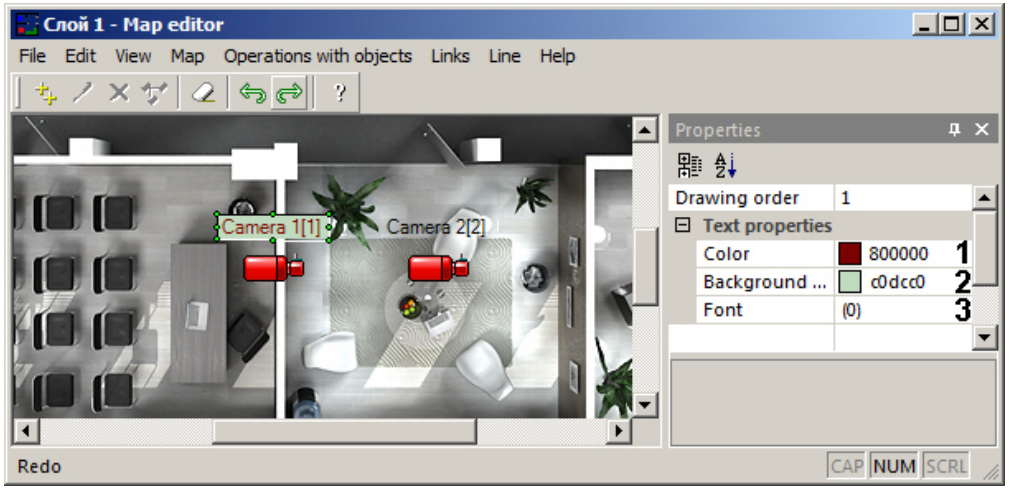

3. In the **Color** field select the object's name font color (1).
4. In the **Background color** field select the object's name background color (2).
5. Click ... in the **Font** field (3). The standard Windows dialog window **Font** of the **Map edit** utility is opened. This dialog box can also be called by main menu command **Operations with objects > Set the font**

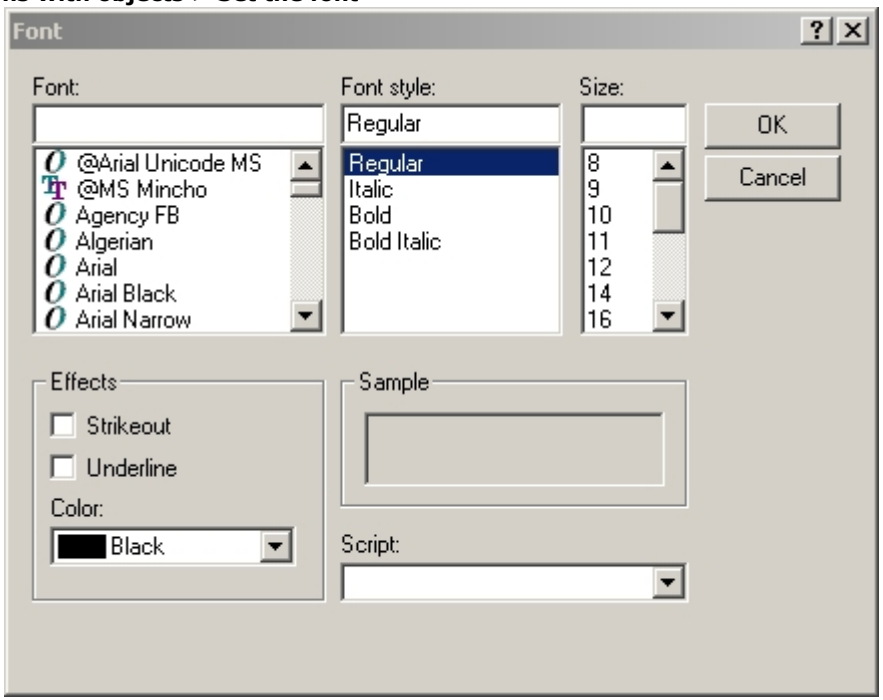

6. In the opened dialog window set the required font or color parameters.

7. Click **Ok** to save the changes

Editing the font, color or background is over.

Editing the object's size

Editing the object's size is done in the following way:

1. Select the object which size should be edited. Green-pointed frame will appear around the image in result.
2. Call for a **Object's size** dialog window of **Edit map** utility by the main menu command **Operations with objects** > **Object's size**.

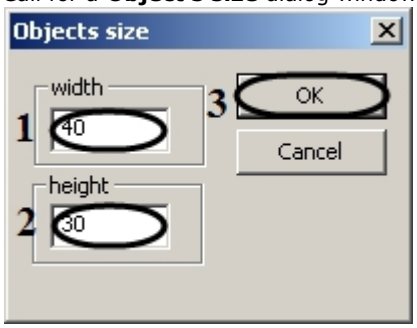

3. Enter the size of the image: fields **Width**(sign's width) and **Height** (sign's height)– 1, 2. Sign's size is expressed in pixels.

> **Note.**
> If 0 value is entered in the fields **Width** and **Height** , object's sign will be displayed in original size.

4. Click **Ok** to save the changes (3)

Editing the object's size is completed.

Editing the object's position

Editing the object's position with the help of Position of object dialog window is done in the following way:

1. Select object, which position should be edited.
2. Call for a dialog window **Position of object** Of **Map Edit** utility by one of the two ways:
   a. Carry out the command of the main menu **Operations with objects > Object's position** ;
   b. Carry out the command of the context menu **Object's position** (is called by clicking the right mouse over the object's image).
3. Enter the coordinates of object's center: fields **X** (horizontal indent from the left border of graphic plan) and **Z** (horizontal indent from the bottom border of graphic plan) (1-2). To set the coordinates in pixels the switch should be set to **In pixels** position (3), to set the coordinates in meters – the switch should be set to **In meters** position (4).

> **Note.**
> The switch position **In Meters** is actual in case, when set the real parameters of the guarded object, to which this layer corresponds. (see. Creating the layers of the interactive map).

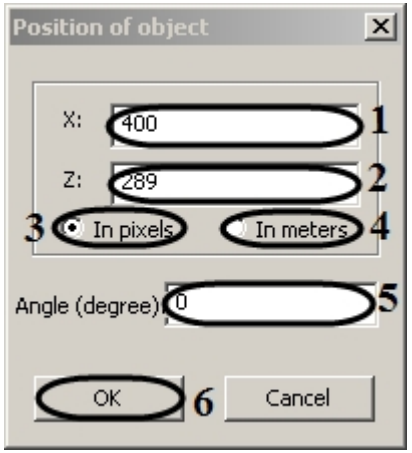

4. Enter the angle in degrees of object's image turn on the **Angle (degree)** field. The angle is set counterclockwise from contour line (5).
5. To save the applied changes click **OK** (6).

> **Note.**
> In case when at least one coordinate oversteps the bounds of the map, message window will be displayed. Click **OK** and then repeat step 3.

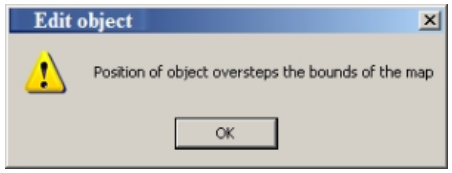

Editing the object's position with the help of **Object's position** dialog window is completed.

Map edit utility also enables to edit the object's position with the help of the mouse.

To set the position of the symbol, click and hold the mouse on the symbol. Then drag the symbol to the desired location and release the mouse.

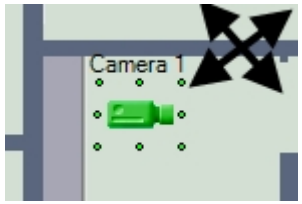

To rotate the symbol, click and release the mouse on the symbol. The symbol will be enclosed in a frame made of green dots. Click and hold the mouse on one of the corner dots. A bended arrow will appear. Move the mouse in the desired direction to rotate the symbol and release the mouse.

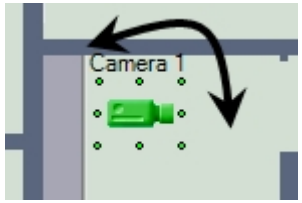

Editing color and transparency (polygon and ellipse)

Edit color and transparency of objects added to the map as polygons and ellipses as follows:

1. Open the **Properties** panel (see Editing object properties using the Properties panel).

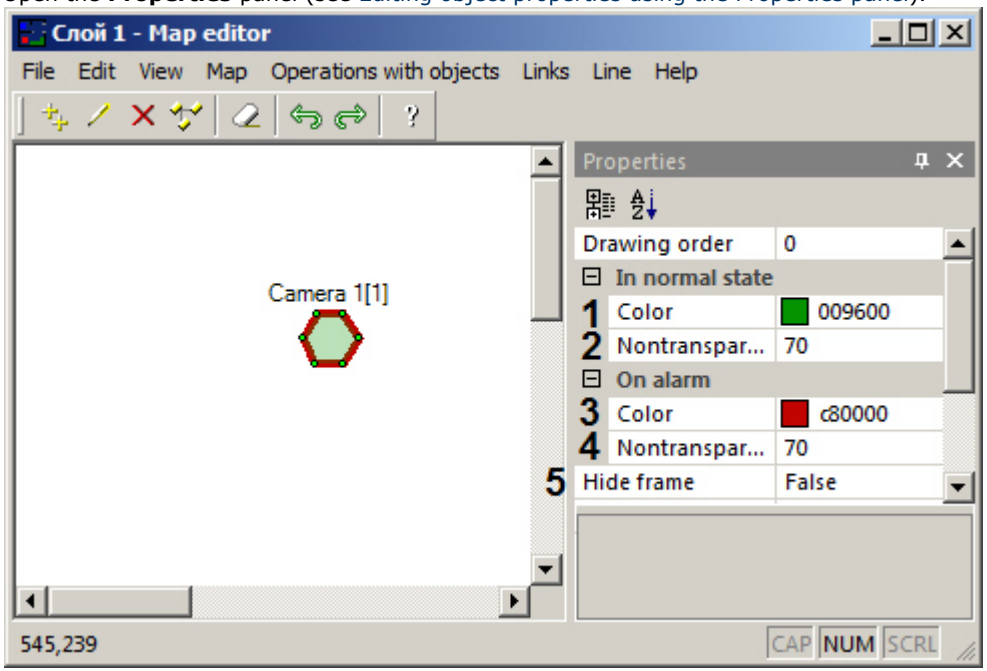

2. In the dropdown list select the fill color of the polygon or ellipse (1).
3. Set the degree of transparency of the polygon or ellipse in the normal state (2). The smaller the number, the higher the degree of transparency. 0 corresponds to full transparency, 255 - full opacity.
4. In the dropdown list select the fill color of the polygon or ellipse in case of alarm (3).
5. Set the degree of transparency of the polygon or ellipse in the alarm state (4). The smaller the number, the higher the degree of transparency. 0 corresponds to full transparency, 255 - full opacity.
6. If the frame framing the polygon is to be hidden, then set the value to **True** in the **Hide frame** field (5).

Adding apexes to polygon or polyline

Add apexes of object icon as follows:

1. Call the context menu of the object icon by right clicking and holding the Ctrl key in the polygon area or on polyline.

2. Select **Add apex**.
3. Select the required position of a new apex and left-click.
4. The apex will be added to the polygon.

Apexes of object icon are now added.

To remove the apex, right-click it holding the Ctrl key and select **Remove apex**.

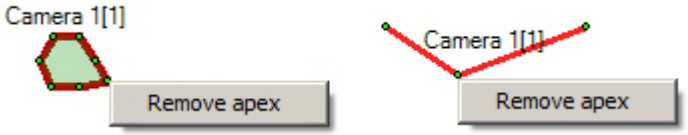

Setting order of displaying objects on map

The order of displaying object icons when they are laid over can be set. For this:

1. Open the **Properties** panel of the required object (see Editing object properties using the Properties panel).

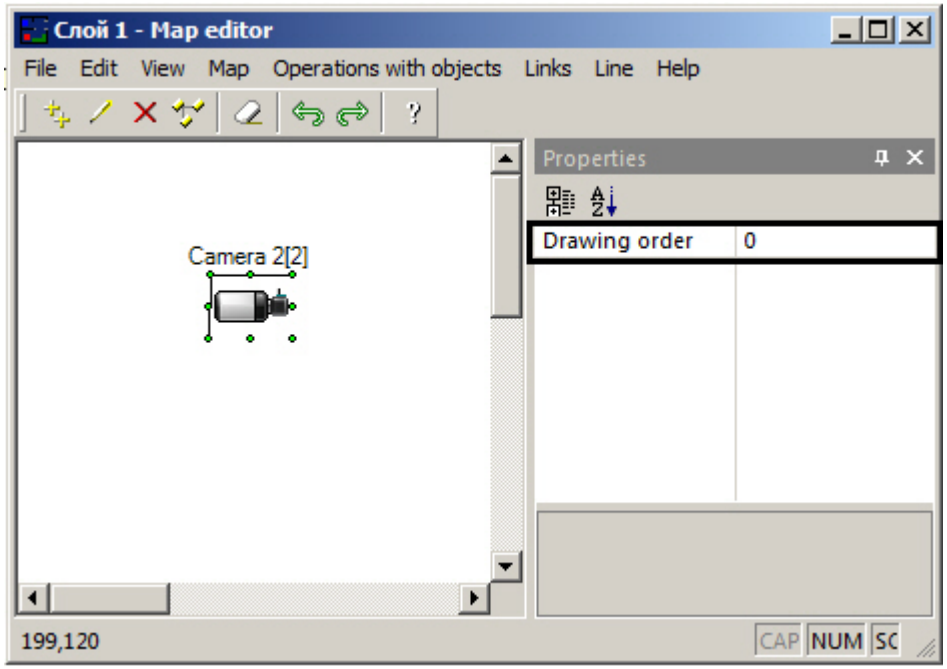

2. Set the value of the **Drawing order** parameter. Icons with bigger value of this parameter will be displayed over icons with smaller value.

The order of displaying objects on map is now set.

Configuring object states displaying

By default if the object is in several states at the same time, the device icon changes according to these states in a short time, and when the object is selected on the map all its states are displayed as the thumbnails next to it (see Graphic objects on the Map section in Operator's Guide).

It is possible to disable displaying states thumbnails. For this:

1. Open the **Properties** panel for the required object (see Editing object properties using the Properties panel).

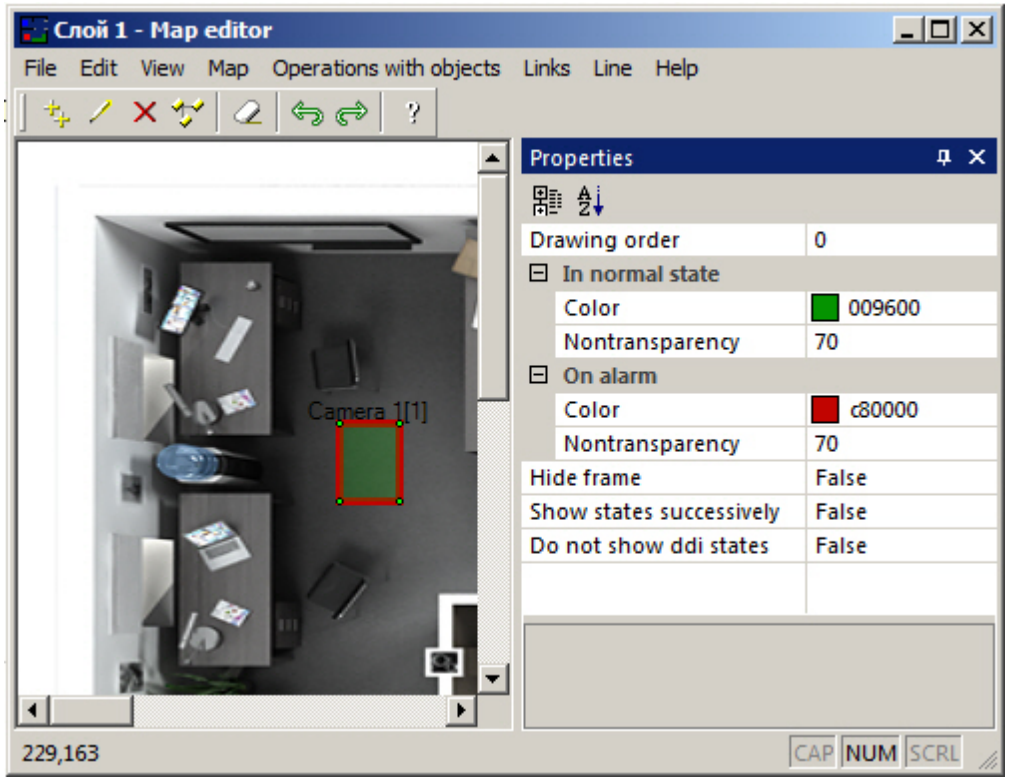

2. To disable the display of the thumbnails, select the **True** value in the **Show states successively** dropdown list. To enable their display, select the **False** value in this dropdown list.

The display of the state of objects is configured.

Linking the layers of the interactive map

Intellect system allows creating multilevel maps comprised of several layers.

In case of multiple layers, the links should be established between the layers. These links help move to other layers for operative control and viewing of the device objects located on them.

The links are created in the **Map editor**. To run the **Map editor**, click **Edit selected layer** in the settings panel of the **Layer** object. When a link is established, a special symbol appears on the map. Clicking on this symbol takes the operator from the current layer to another layer.

> **Note.**
> The link symbols also notify the operator about alarms coming from devices located on the linked layer.

To create a new link from the current layer to another, do the following:

1. Select **Links** in the **Map editor** main menu, then select **Add link with layer**.

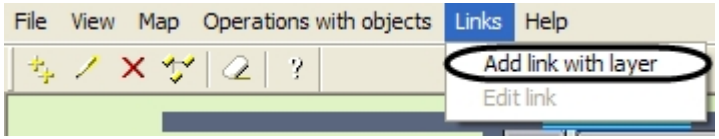

The **Link to layer** window opens, allowing to choose the layer to link to.
There is another way of opening the **Link to laye**r window. In the **Map editor,** click anywhere on the layer map. The context menu will open. Select **Add link with layer** from this menu.

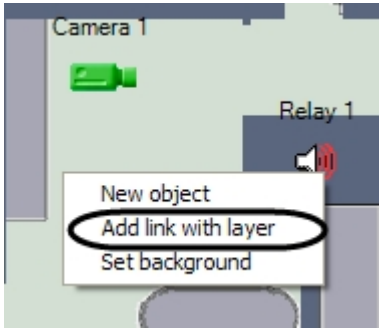

2. Do the following in the **Link to layer** window:
    a. If the switch to the layer of another map is to be performed, then select the required **Map** object in the **Link** dropdown list (1). If the switch to the layer of the same map is to be performed, then select an empty value in the dropdown list.

> **Note.**
> The layer of another map is opened in this map box and not in the box where there is the layer the switch is performed from.

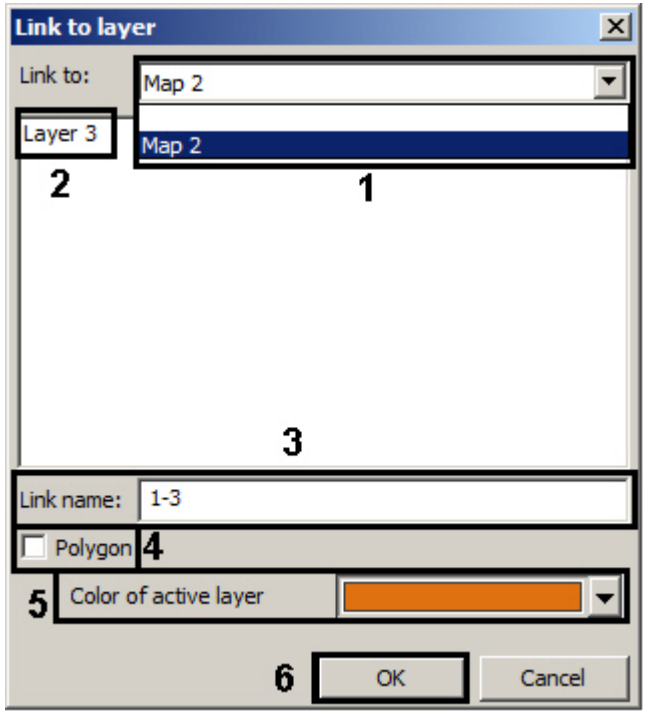

b. Select a layer the switch is to be performed to (2).
c. Enter the name for this link in the **Link name** field (3).
d. If the link on the map is to be displayed as a polygon, set the **Polygon** checkbox checked (4).

> **Note.**
> The color and shape of the polygon are set after adding it to the layer. By default, the link is represented by a green hexagon.

e. If the selected layer the switch will be performed to, is on another map, then in the **Color of active layer** dropdown list select the color the link will be marked when this layer is active on the map (5).
f. Click the **OK** button to create the link (6).

A symbol will appear on the map representing the link. The icon of the link is represented by a red triangle or a polygon if the **Polygon** checkbox was checked (see step 2.d):

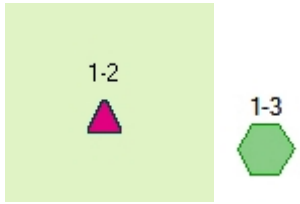

The feature menu appears when right clicking the polygon holding down the Ctrl key. The following features are available:

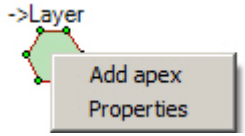

1. **Add apex** – add a new apex to the polygon. A new apex appears when selecting this menu item. One is to locate it left clicking on the map.
2. **Properties** – display the properties panel of the icon on the right of the **Map editor**. Using this panel one can set the color and opacity of the normal and alarm states of the layer icon, as well as configure whether to hide frame limiting the polygon.

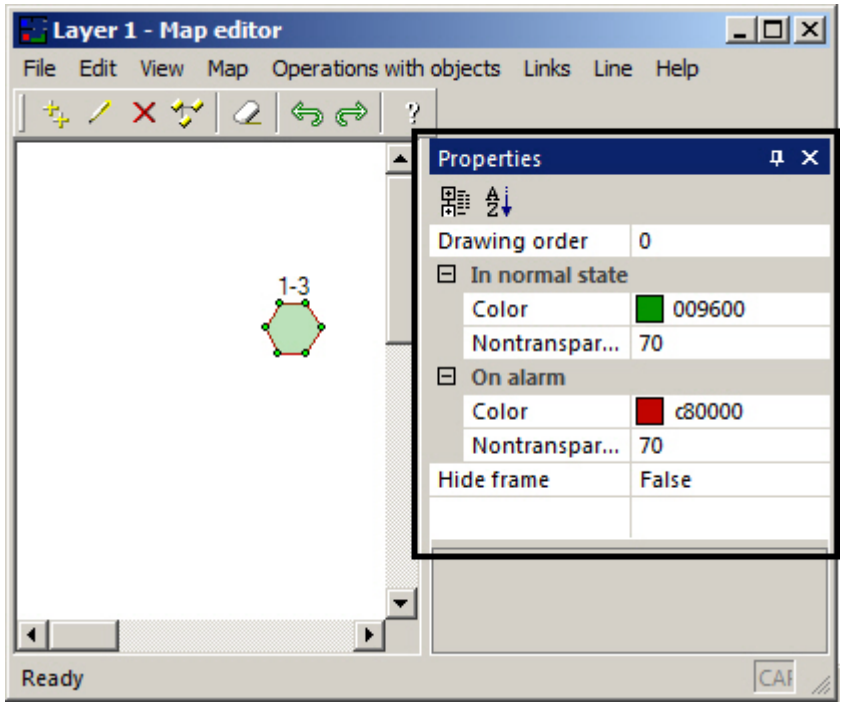

By default the symbol of connection with this layer starts to flash if alarm is detected on the layer. If additional indication is required it is possible to configure alarm symbol of connection with layer. To do this place the file link_alarm.bmp containing some image characterizing alarm on the layer to the <*Intellect* installation directory>/Bmp folder. If such file is in the Bmp folder then symbol of connection with this layer will changed to image from the link_alarm.bmp file and start to flash while alarm on this layer.

Note.
If the link with the layer is represented by the polygon, then it starts changing its color (blinking) when there is an alarm on the layer.

Switch-over between Map layers

Cancelling the last action in Map editor

While configuring interactive map in the *Map editor* utility it's possible to cancel the last action and redo the last cancelled action in one of the following ways:

1. Using the corresponding buttons on the toolbar of the *Map editor* utility.

2. Using combination of Ctrl+Z and Ctrl+Y buttons.
3. Using the corresponding commands in the **Edit** menu.

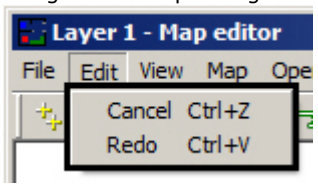

It is possible to cancel not more than 30 actions.

Configuring object ID is displaying

By default the object ID is displayed in square brackets next to the object name on the interactive map.

One can hide object IDs on each layer of the interactive map. For this set the **Hide object ID** checkbox checked in the **Map** menu of *Map editor*.

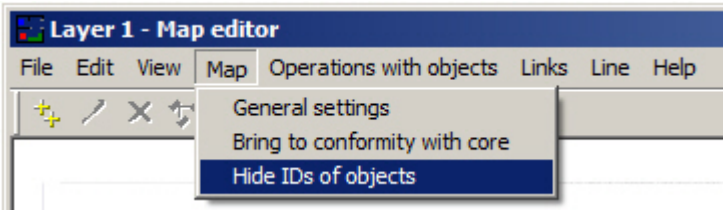

As a result object IDs are hidden on the layer that being edited on the interactive map.

Editing object properties using the Properties panel

The **Properties** panel is displayed on the right of the **Map editor** utility box when the **View -> Properties** is selected.

This panel can also be opened by selecting the **Properties** item in the context menu of any object.

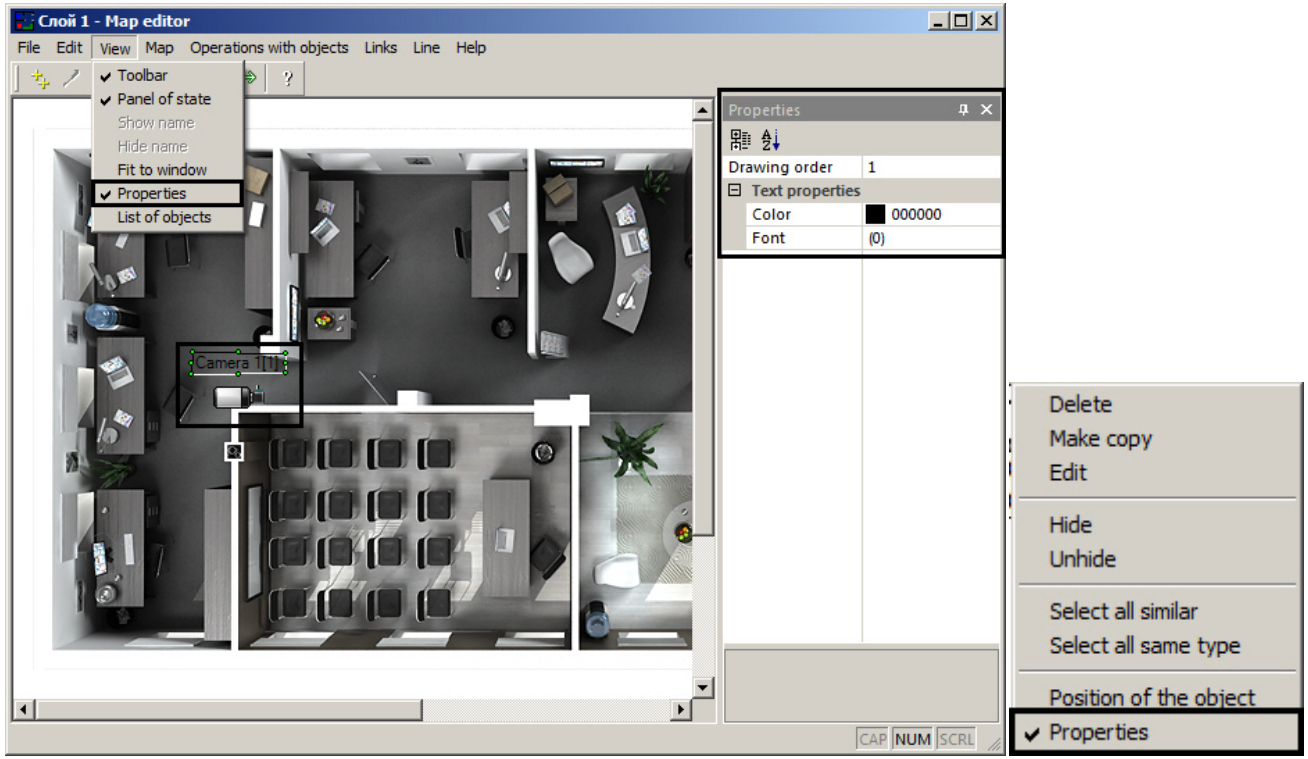

When selecting the object on the layer of the interactive map, the list of object parameters is displayed on the **Properties** panel. These parameters can be also edited with the help of this panel.

For instance, the color and font of the object caption as well as the color and other parameters of the object icon (in the form of polygon) can be set using this panel.

Configuring viewing Map editor utility

Configuration of viewing the *Map editor* window is performed using the **View** menu.

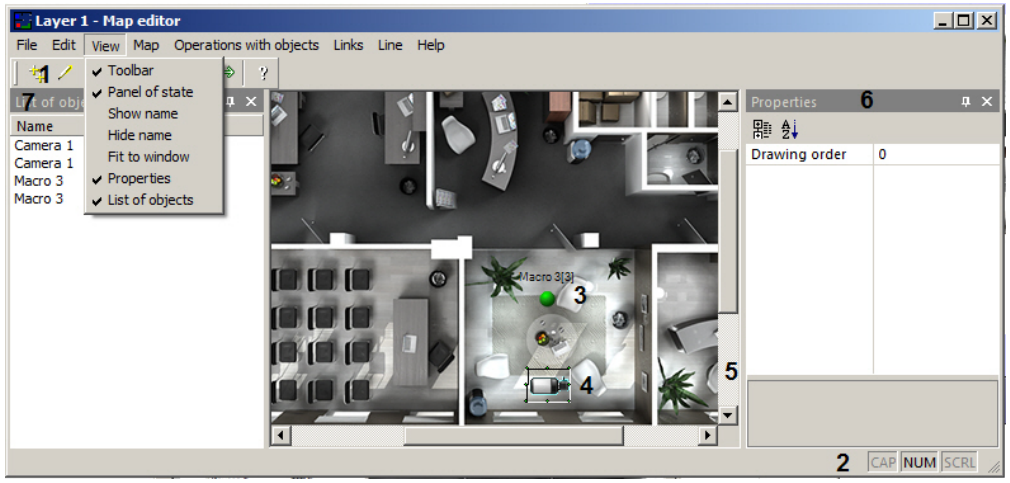

Find the description of menu items in the table.

Menu item	**Function**
Tools panel	Show and hide the tools panel (1).
State panel	Show and hide the state panel (2).
Show name	Enable showing the name of selected object (3).
Hide name	Disable showing the name of selected object (4).
Fit the window	To change the image scale this way set the checkbox unchecked. Set a scale at which the image of the Map fits perfectly into the window of the *Map editor* utility (5). If this checkbox is set checked, the scale of the map image cannot be changed by scrolling with the Ctrl key held down on the keyboard. The checkbox is to be set unchecked to change the scale this way. *Note. Setting this checkbox checked does not affect the scale of the Map image in the Map window. This scale is set independently.*
Properties	Displaying the Properties panel (6).
List of objects	Displaying the list of objects added to the map (7).

Searching object in the Map editor utility by its name and ID

To search for an object in the *Map editor* utility by its name or ID, press Ctrl+F on the keyboard. The **Search** box is displayed in the upper-left corner of the **Map editor** window.

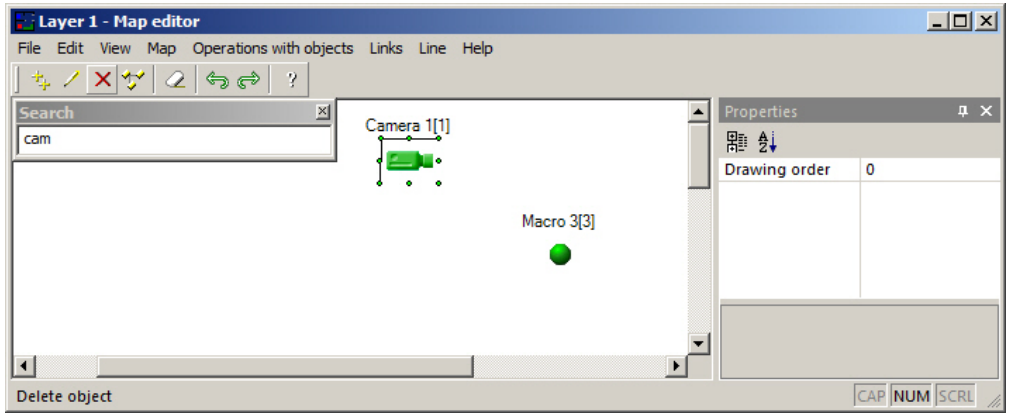

Specify the name or ID of the object and press Enter. If an object ID is specified for the search, then the search is performed both by the ID and by name. Press F3 on the keyboard to show the next search result, press Shift+F3 to show the previous result.
The found objects are outlined with green dots, while the icon of the object is positioned in the center of the **Map editor** window. After the object is found, its icon flashes for a few seconds.

Setting up the display of the alarm signals on multilevel maps

The rules for transition to the layers with alarmed devices can be set up for multilevel maps.

The following ways of displaying the layer with an alarmed device exist in the system:

1. When an alarm occurs, the **Map** window opens above all other active windows showing the layer containing the alarmed device.
2. The link symbols recursively lead to the layer containing the alarmed device.

To open the **Map** window above all other windows, set the **Bring Window on Top if Alarm** checkbox in the settings panel of the **Map** object. The **Map** window will now open on top of other windows in case of alarm registration.

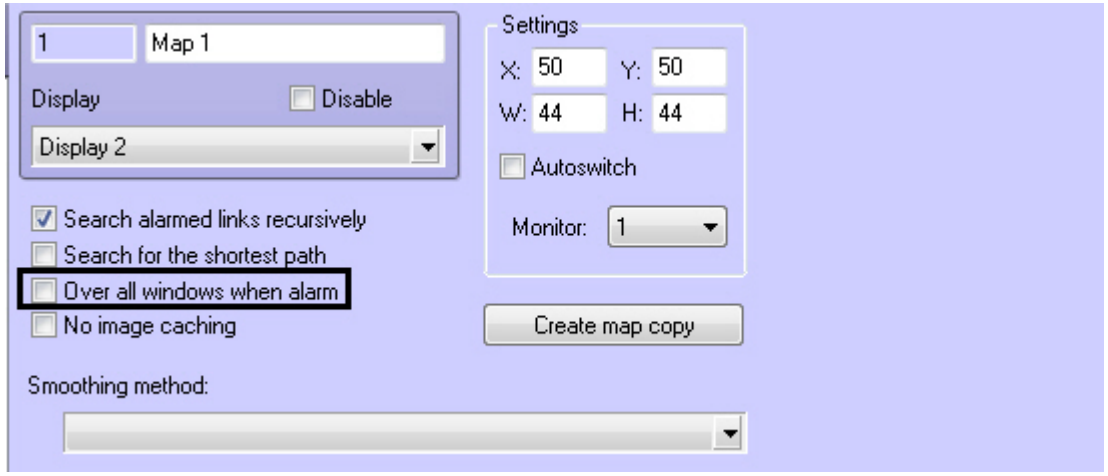

To make it possible to move from the current layer to any other layer, the links should be established in the multilevel maps. If the links recursively connect all layers of the map, they can be used for recursive transition to the alarmed layer. To enable this option, check the **Seek Alarmed Links Recursively** checkbox in the settings panel of the **Map** object.

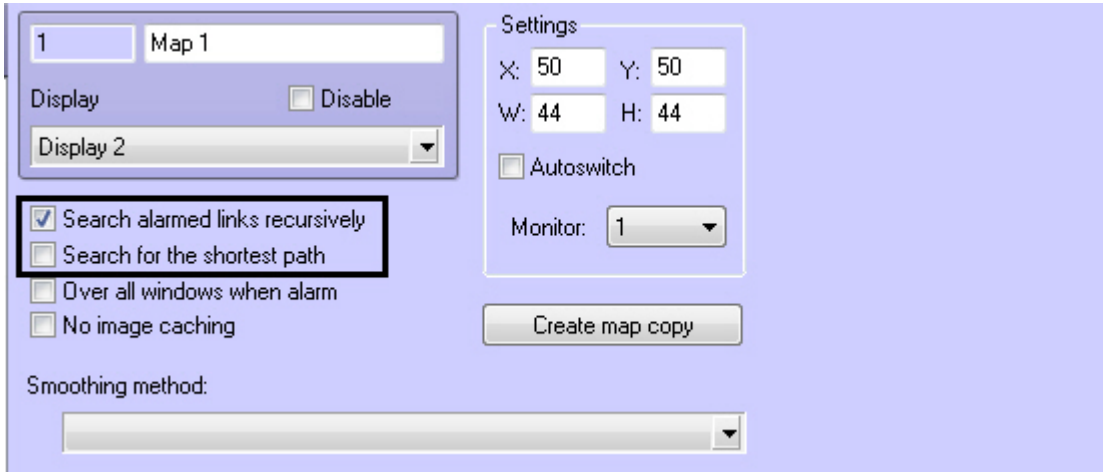

When the recursive search is on, the blinking links on each layer eventually lead the operator to the alarmed layer. If the **Seek Shortest Path** checkbox is checked, shortest path to the alarmed layer will be chosen.

Example
The 1st layer contains the link to the 2nd layer, and the 2nd layer contains the link to the 3rd layer. The 1st layer is currently active. An alarm is triggered on the 3rd layer. If the recursive search is on, the link from the 1st to the 2nd layer will blink, and the link from the 2nd to the 3rd layer will blink. If the recursive search is off, only the link from the 2nd to the 3rd layer will blink, not allowing the operator to see the alarm if the 1st layer is active.

Example
The 1st layer contains the links to the 2nd and 3d layer, and the 2nd layer contains the link to the 3d layer (i.e. there are to ways to reach the 3d layer from the 1st layer: directly or via the 2nd layer). Let's the 1st layer is currently active. An alarm comes from the 3d layer. If both checkboxes are checked, only the link to the 3d layer will blink on the 1st layer. If the **Seek Shortest Path** checkbox is unchecked, both links (to the 2nd and 3d layers) will blink.

Configuring image caching on the map

In case when images overlay each other on the map problems with displaying them can occur. To eliminate these problems disable image caching.

Important!
Disabling image caching can result in high CPU usage.

Note.
Cashing can be disabled using the NotUsingCash registry key – see Registry keys reference guide.

Disable cashing as follows:

1. Go to the settings panel of the **Map** object (1).

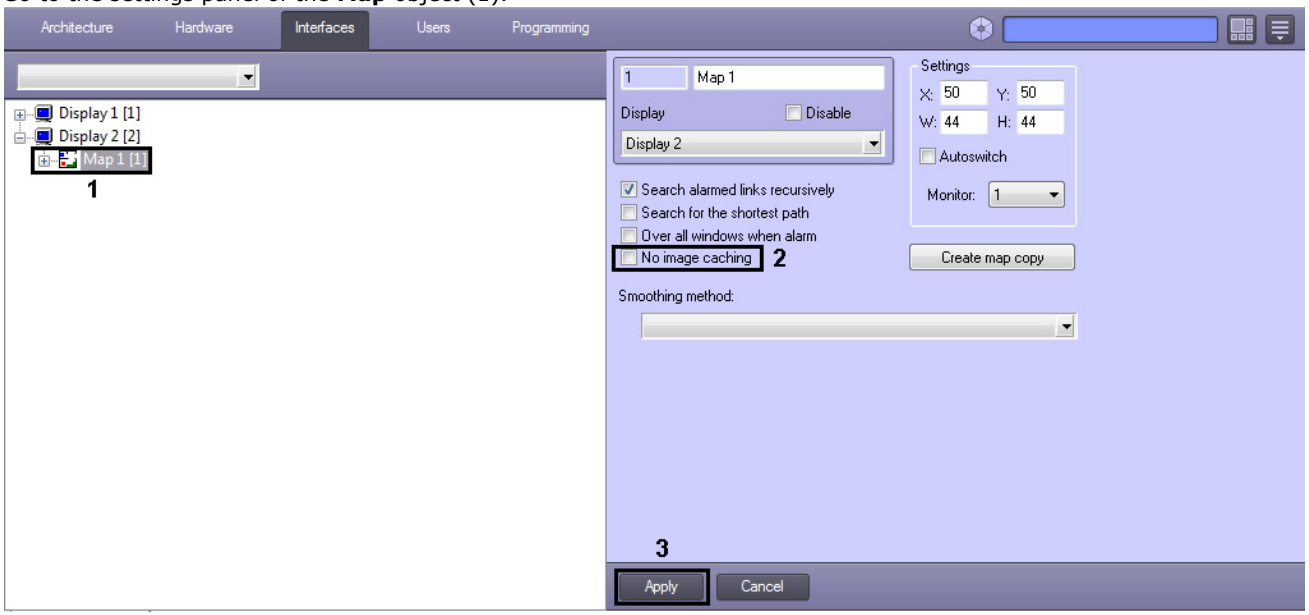

2. Set the **No image caching** checkbox checked (2).
3. Click the **Apply** button (3).

Image caching is now disabled.

Configuring the order of reactions in the object menu

The object management on the map is performed using the feature menu (see Graphic objects on the Map section in Operator's Guide). If one needs to put the most frequently used commands (reactions) at the top of the menu for ease of use, then it is possible to customize the sorting of commands. For this use the **map_react_sort.ini** file created in the *Intellect* installation directory when the Map is started.

Initially, this file contains an unsorted list of reactions:

[CAM]

REC_STOP=0

MUX1=1

ARM=2

REC=3

SIP_DISCONNECT=4

DISARM=5

SIP_CONNECT=6

The number after the "=" sign indicates the command number in the feature menu.

Change the order of commands in the menu as follows:
1. Shut down *Intellect*.
2. Number the reactions in the **map_react_sort.ini** file as required. The smaller the number, the higher the command will be in the list. If there are two identical values, the corresponding commands will follow one another.
3. Save the changes in the **map_react_sort.ini** file.
4. Start *Intellect*.

After starting the Map, this file will be rewritten: the reactions will be numbered according to sorting, starting with 0, the same numbers will be eliminated.

Configuring number of events shown in the Map window

Several last events of the selected object can be shown in the Map window (see Viewing last object events on the map).

Configure the number of events to be shown as follows:

1. Go to the settings panel of the **Map** object.

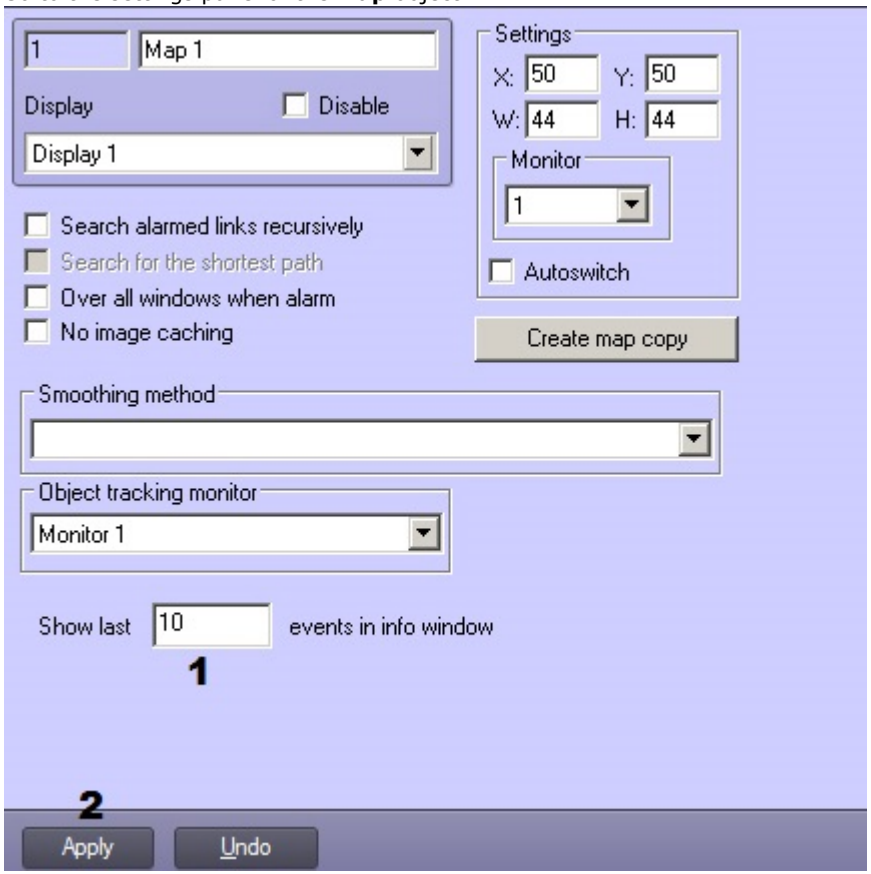

2. In the **Show last _____ events in info window** field specify the number of events that are to be shown in the info window on the Map (1).
3. Click the **Apply** button (2).

The number of events to be shown in the Map window is now configured.

Configuring the Long-term archive panel object

The **Long-term archive panel** interface object is designed for configuring the Long-term archive panel, which is used for starting the backup archiving, changing its parameters and monitoring the backup process.

To configure the main parameters of the **Long-term archive panel** object, do the following:

1. Go to the **Interfaces** tab in the **System Settings** dialog box (1)
2. Select the **Long-term archive panel** object in the objects tree of the **Interfaces** tab (2). The settings panel for this object opens on the right of the **Interfaces** tab.

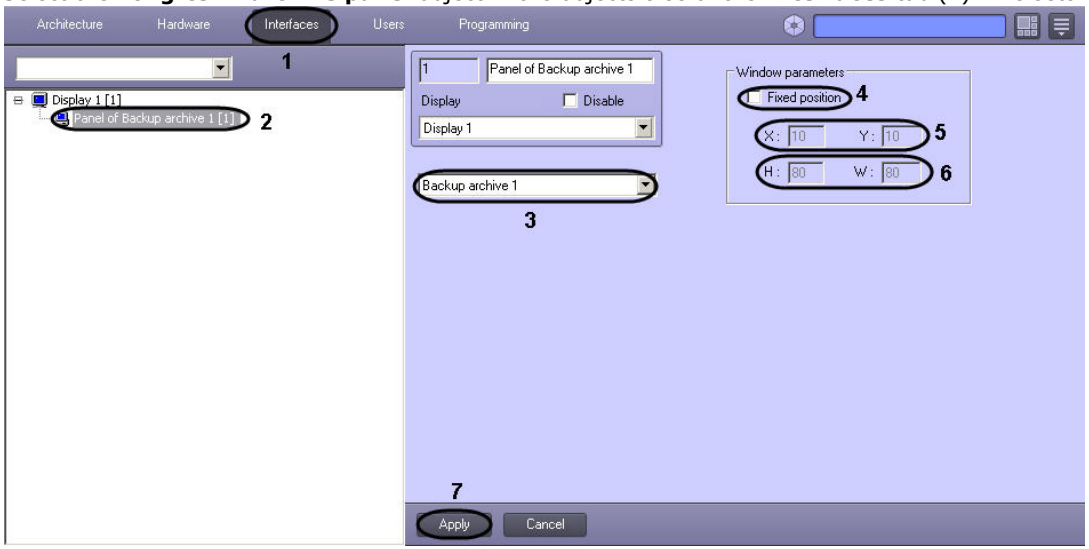

3. In the object list, select that **Long-term archive** object for which this panel is to be created (3).
4. To set the exact position of the **Long-term archive panel** box on the screen, set the **Fixed position** checkbox (4).
   As a result the **X, Y, W** and **H** fields are available for editing.
5. Specify **X** and **Y** coordinates of the upper left corner of the box, in percentage of the corresponding screen dimensions (5).
6. Specify the width (**W**) and height (**H**) of the window, in percentage of the corresponding dimensions of the screen (6).
7. Click the **Apply** button (7).

The **Long-term archive panel** interface object is now configured.

Copying video sequence to the Long-term archive

Configuring long-term archiving

Configuring the Operator protocol interface object

The **Operator protocol** object is for processing events from security system objects and searching in an event archive.

The **Operator protocol** object performs the following features:

1. Displaying the events registered by the security system objects in the interface box.
2. Assigning a status (type) to a registered event.
3. Adding a comment to an event.
4. Recording events to an archive.
5. Searching events in an archive.
6. Viewing video of an event.
7. Escalating non-processed events to an operator protocol of a higher level.

Configuration procedure for the **Operator protocol** object is as follows:

1. Creating the Operator protocol object.
2. Configuring the Operator protocol object.
3. Configuring the database server connection in an online mode.

Event processing using the Operator protocol

Creating the Operator protocol object

To create the **Operator protocol** object, do the following:

1. Select the Interfaces tab in the **System Settings** dialog box (1).

2. In the context menu of the **Display** object on which the created object is to be based, select the **Operator protocol** item in the **Create** object submenu (2).
3. Set the number and name of the created object (3).

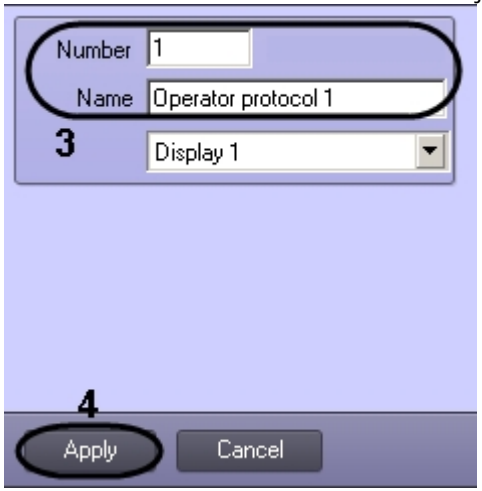

4. To create an object, click the **Apply** button (4).

As a result the settings panel for the Operator protocol is displayed.

Configuring the Operator protocol object

To configure the **Operator protocol** object, do the following on the settings panel of the object:

1. Configure displaying of the **Operator protocol** interface box.

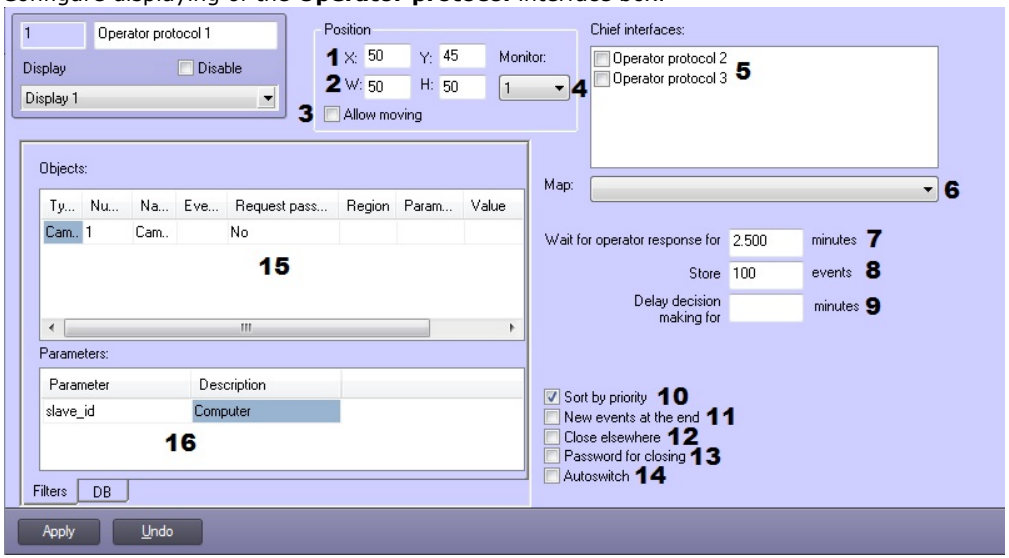

   a. Set the **X** (horizontally indented from screen's left border) and **Y** (vertically indented from screen's upper border) coordinates of the upper left corner of the **Operator protocol** interface box. Coordinates are set as a percentage of the corresponding screen dimensions horizontally and vertically as follows (1).
   b. Set the dimensions of the **Operator protocol** interface box: window's width «**W**» and window's height «**H**». Dimensions are set as a percentage of the corresponding screen dimensions horizontally and vertically as follows (2).
   c. Set the **Allow moving** checkbox if the position and size of the **Operator protocol** interface box are to be changed manually (3).
   d. In the **Monitor** dropdown list select the the system ID of a monitor for which the coordinates are set and on which the **Operator protocol** interface box is to be displayed (4).
2. In the **Chief interfaces** list set the checkboxes chacked next to **Operator protocol** objects to which events are to be sent when the specified time period expires (5).
3. In the **Map** dropdown list select the precreated **Map** object for event monitoring (6).
4. In the **Wait for the operator response** field specify the time period at the end of which an event will have the **Non-processed** event type or it will be escalated (7). Time period is set in minutes – non-integer values can be set (use the decimal point to separate integer and fractional parts). For instance, specify 0.5 to set the waiting period for response equal to 30 seconds.
5. In the **Store ___ events** field, set the maximum of events displayed in the Operator protocol interface box (8).

> **Important!**
> The number of events displayed in the Operator protocol interface box affects the main memory capacity. If 100 non-processed events are displayed in the interface box, then the **Operator protocol** module can use up to 200 Mb of main memory. When the value of the **Store ___ events** parameter is increased, the main memory capacity is increased too.

6. If the decision on the event classification is to be delayed once for the operator, then in the **Delay decision making for _____ minutes** field specify the time period (in minutes) for which the event procession will be delayed (9). The time period is specified in minutes, though noninteger values can be set - in this case the dot is used to separate integer and noninteger parts of the number. For instance, to delay decision making for 15 seconds 0.25 is to be specified in the field.

7. If events are to be sorted by priority (not by time they are received) in the Operator protocol, then set the **Sort by priority** checkbox checked (10). The descending sorting is performed in this order: Escalated, Alarm, Information and Standard (three latest event parameters can be set in the DDI file - see The Events tab).
8. Set the **New events at the end** checkbox checked if new events are to be added to the end of the list of current events (11).
9. If after processing an event in one of Operator protocols it is to be removed from other Operator protocols, then set the **Close elsewhere** checkbox checked (12).
10. If the processing of all events is to be confirmed with a password, set the **Password for closing** checkbox checked (13).
11. If autoswitch to the **Current events** tab when a new event occurs is to be performed in the Operator protocol, then set the **Autoswitch** checkbox checked (14).
12. In the **Objects** table specify the objects the events from which are to be received and processed (15).
    a. Select the object type in the list of the **Type** column.

> **Note.**
> Only objects for which the "INFORMATION" or "ALARM" value is selected in the **Processing messages** column on the **Events** tab in the ddi.exe utility are available for selection (see The Events tab section).

    b. In the list of the **Number** column select the object id. The object name will be set automatically. If the object number is not specified, then events from all objects of selected type will get to the protocol.
    c. In the list of the **Event type** column select events that are to be displayed in the protocol box. If the event type is not specified, then all events registered by the selected object will get to the protocol.
    d. If the processing of an event is to be confirmed with a password, select the **Yes** value in the **Request password** dropdown list. If there is no need to confirm the processing with a password, select the **No** value in this dropdown list.

> **Note.**
> If the processing of all events is to be confirmed with a password, set the **Password for closing** checkbox checked (13).

    e. In the **Region** dropdown list select the **Section** object corresponding to the object.
    f. If an event of specified type is to be received and processed only when its specific parameter has a specific value, then set the parameter and value in the **Parameter** an d **Value** fields respectively.
13. Repeat actions described in step 9 for all required objects. To add a line go to the last line of the table and click the key.

> **Note.**
> To remove the lines from the table use the Ctrl + Del key combination.

14. In the **Parameters** table specify additional settings for an object event. These settings are to be displayed in the **Operator protocol** interface box (16).
    a. In the **Parameter** field set the parameter name. To specify the parameters sent by the event use a debug box or a ddi file.
    b. In the **Description** field set a short description of the parameter.
15. In the DB tab configure the connection to the database server (5).

Note.
Parameters set at INTELLECT ™ software installation are used by default to connect to the database server.

a. In the **Server** field set the name of the database server to connect to (1).

Note.
Working in the distributed configuration it is needed to enter the name of computer without the (local) value where the database is stored. For example, "WS1\SQLEXPRESS", where WS1 is the name of computer on which the database is stored.

b. In the **Folder** field set the name of the database to store events (2).
c. In the **User** field set the username for the authorization on the database server (3).
d. In the **Password** field set the password for the authorization on the database server (4).

16. To save the settings click the **Apply** button.

The **Operator protocol** object is now configured.

Configuring the database server connection in an online mode

To configure the database server connection in an online mode, do the following:

1. Go to the **DB** tab on the settings panel of the **Operator protocol** object (1).

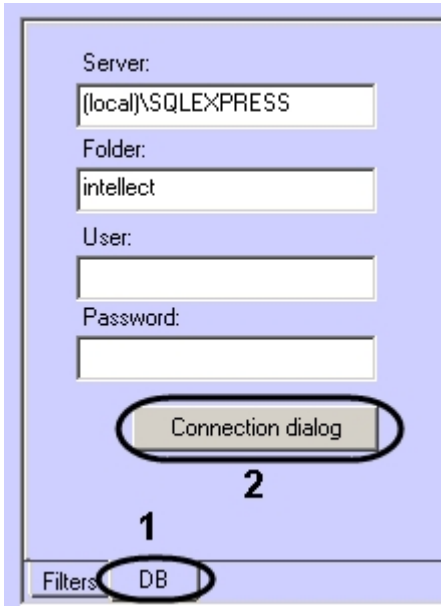

2. Click the **Connecting dialog** button (2).
   The **SQL Server Login** dialog box will be displayed.

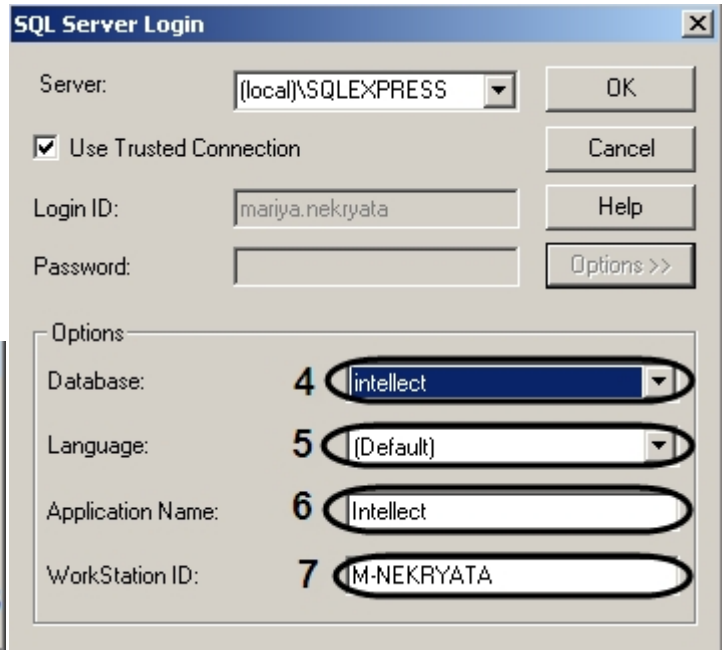

3. In the **Server** list, specify the SQL Server to connect to (1).

> **Note.**
> If the required SQL Server is in the **Server** list, then there is no need to further configure the connection.

> **Note.**
> Working in the distributed configuration it is needed to enter the name of computer without the (local) value where the database is stored. For example, "WS1\SQLEXPRESS", where WS1 – the name of computer on which the database is stored.

4. If you need to specify the login and password to authorize the SQL Server, then set the **Use Trusted Connection** checkbox unchecked (2). As a result the **Login ID** and **Pass word** fields are available for editing.

> **Note.**
> If the **Use Trusted Connection** checkbox is set, then the authorization on the SQL Server will be provided using Windows account information.

5. To set advanced connection options, click the **Options >>** button (3).
   a. In the **Database** drop-down list, select the database to store events (4).
   b. In the **Language** list, select the language of SQL system messages 5).
   c. In the **Application Name** field, set the application name (Intellect by default) (6).
   In the **WorkStation ID** field, set the computer name (WindowsID by default) (7).
6. To save the settings, click **OK.**

> **Note.**
> To view the supplemental information about the **SQL Server Login** dialog box, click the Help button.

The database server connection is now configured.

Configuring the Event Viewer interface object

Order of configuring the Event Viewer interface object

The **Event viewer** object is a child-object of the **Display** interface object and is used for displaying information about registered events in the interface box. Events may be registered both locally and on the computers in the distributed system.

> **Note.**
> Events transmission among computers is set in the Architecture tab in the Systems settings dialog box (see the Configuring the interaction of distributed system components s ection).

The **Event viewer** interface object is created and configured in the **Interfaces** tab of the **System settings** dialog box.

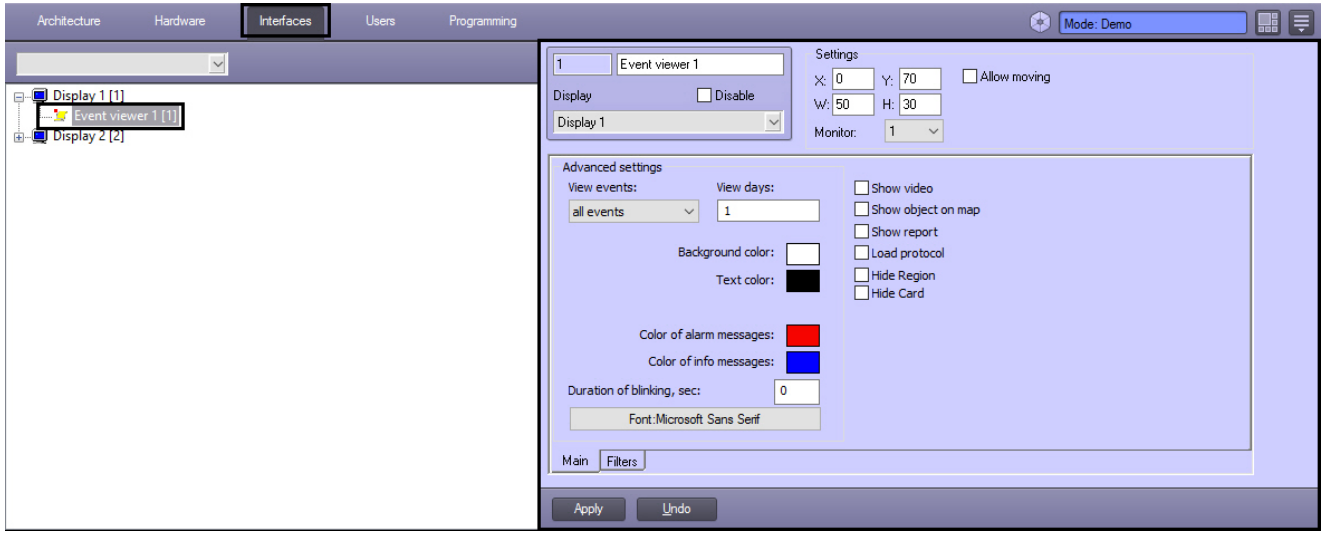

To configure the **Event viewer** interface object, do the following:

1. Choose the events, information on which should be logged to the **Events viewer** interface object in case of its registration in the system (see Configuring event filters for displaying in the Event viewer).
2. Set the parameters of the event viewer (see Event viewer parameters).
3. Configure the displaying of the **Event viewer** interface box (see Parameters of displaying the Event Viewer interface box).

Event control via event log

Configuring event filters for displaying in the Event viewer

To select the events that are to be logged in the **Events viewer** interface object, do the following:

1. Go to the **Filters** tab on the settings panel of the **Event viewer** object (1).

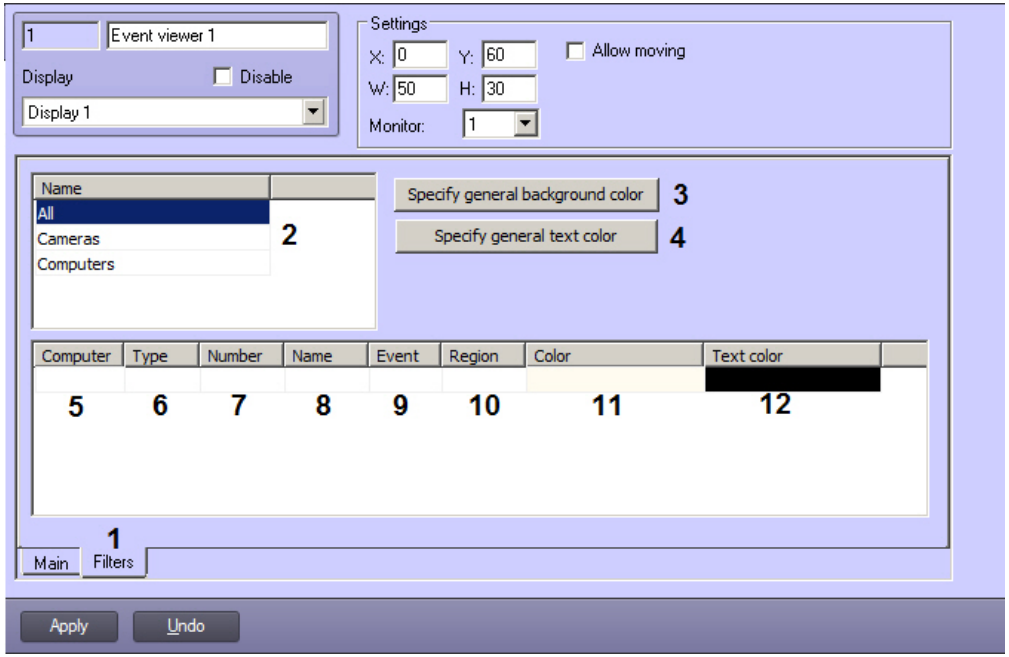

2. Set filter name in the **Name** field (2).

> **Note.**
> By default **Filter1**, **Filter2**, etc. are created. To add a new filter select the end line in the list of filters and click the "down" key on the keyboard.

> **Note.**
> The created filters can be copied by selecting the filter name, using Ctrl + C and Ctrl + V

3. To set the background color that will be used by default for all filter events, click the **Specify general background color** (3) button and select the required color in the standard dialog box. The default background color is white.
4. To set the text color that will be used by default for all filter events, click the **Specify general text color** (4) button and select the required color in the standard dialog box. The default text color is black.
5. In the **Computer** dropdown list select the **Computer** object under which the objects included in the filter are to be created (5). If filtering by computer is not required or the required object is created not under the Computer object, then the empty value is to be selected in this dropdown list.
6. In the drop-down list of the **Type** column in the **Objects** tab select the type of an object for which the required event may be logged (6). If the field is empty, the Events viewer will display all the events for all the objects in the system.

> **Note.**
> Activation of the drop-down list in the **Objects** tab and in the **Areas** list is made by LMC upon the corresponding cell. Detailed description of actions with tabs and lists is in the Object settings panel.

> **Important!**

A blank filter (i.e. filter with blank columns) is to be created in order to display all events for all objects in the system in the Event viewer. All events are also displayed in the Event viewer when there is no filter at all.

7. In the drop-down list of the Number column in the **Objects** tab specify the ID for an object of the type selected in step 1 (7). If the field is empty, the interface **Events viewer** will log all the events of the specified type.
8. Object name is set automatically on the basis of the values selected in step 1-2 and displayed in the Number column of the **Objects** tab (8). You can not edit the **Name** column.
9. In the drop-down list of the **Event** column of the **Objects** tab specify the required event for the selected object in step 1-2 (9). If the field is empty, the interface **Events viewer** will log all the events of the specified type.
10. In the **Areas** table select the region which object's events are to be logged (10). If the objects are identified (see step 3) or no region is set, then the events are logged without object's belonging to any region.
11. In the **Color** dropdown list select the background color for the message about event in the Event viewer (11).
12. In the **Text color** dropdown list select the text color of the event message in the Event Viewer (12).
13. Repeat steps 3-9 for all required objects and sections in the filter.
14. Repeat steps 2-10 for all required objects and regions.
15. Click the **Apply** button to save all the changes.

Events for logging to the **Events viewer** interface object are now selected.

Event control via event log

Event viewer parameters

To set the event viewer parameters, do the following:

1. Go to the **Main** tab on the settings panel of the **Event viewer** object (1).

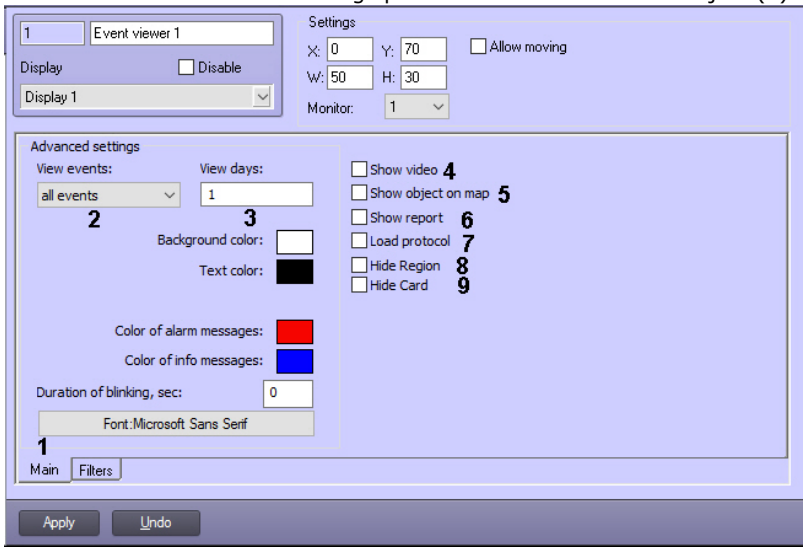

2. If it is necessary to display only one latest event or all latest events in **Event Viewer** interface box, select **One latest** or **All events** in the **View events:** list (2).

Note.
If **All events** item is selected and the event is repeated for the object, there is time changing of present event recording and a new recording line is not created.

Note.
By default all events are displayed in the **Event Viewer** interface box.

3. In the **View days** text field specify the time period (in days) over which the events are to be displayed in the Event Viewer interface window if there are more than 10,000 events (3).
   If there are less than 10,000 events in the Event Viewer, events will be displayed for all days, regardless of this setting. And the events are excluded from being displayed until their number becomes 10,000. Verification of the fulfillment of this condition and exclusion of events from being displayed happens every 50 events.
4. Set the **Show video** checkbox to enable viewing the video recordings from the **Event viewer** interface box (4). Viewing the events of the **Record to disk** type of the **Camera** objects is only possible.
5. Set the **Show object on map** checkbox to enable viewing the logged events on the map (5).
6. Set the **Show report** checkbox to enable creating a printed report about events in the **Events viewer** interface box for a specified time period (6).
7. If the last 1000 logged events are to be displayed in the Event Viewer interface box, then set the **Load protocol** checkbox (7).

Note.
When the **Load protocol** checkbox is set, the events of those objects that have been deleted without giving a source (the name of a deleted object is not displayed) can be displayed. Such operation of the Event Viewer allows the extra control over system objects.

Note.
A thousand of last events for each object or each object type is loaded when the **Load protocol** checkbox is set if the filter of Event log is configured for displaying events from several objects or several object types.
For example, if the Event log is receiving events from **Camera 1** object and from all **Macros** objects, a thousand of events from **Camera 1** object and a thousand of events from **Macros** objects will be loaded.

8. Set the **Hide Region** checkbox checked if there is no need to show the **Region** column in the **Event viewer** (8).
9. Set the **Hide Card** checkbox checked if there is no need to show the **Card** column in the **Event viewer** (9). This column is in use for displaying the access card number for events coming from ACS integration modules included in *ACFA Intellect* subsystem. See Card number displaying in the Event viewer window for access events section in Access Manager Module Settings and Operation Guide.
10. Click the **Apply** button to save all the changes.

Event viewer parameters are now set.

Parameters of displaying the Event Viewer interface box

To configure displaying the Event viewer interface box, do the following:

1. Go to the **Main** tab on the settings panel of the **Event viewer** object (1).
2. Set the **X** (horizontally indented from screen's left border) and **Y** (vertically indented from screen's upper border) coordinates of the upper left corner of the Event Viewer interface box (2). Coordinates are set as a percentage of the corresponding screen dimensions horizontally and vertically as follows.

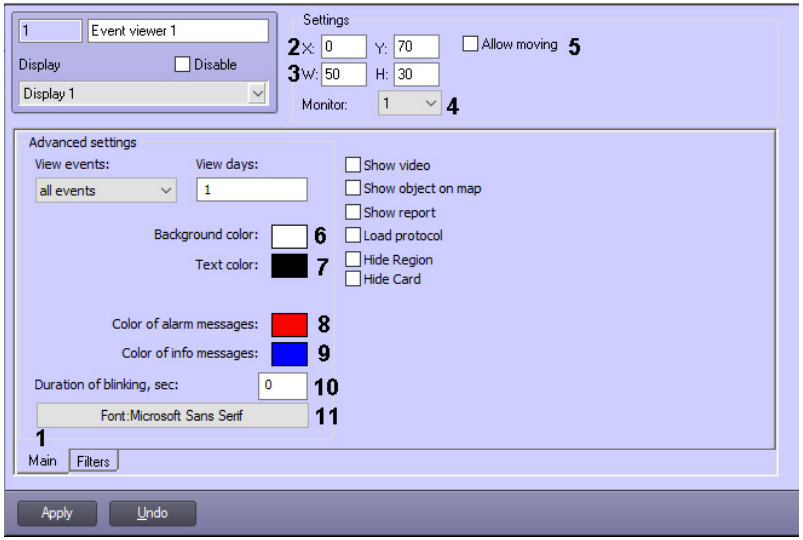

3. Set the dimensions of the **Event Viewer** interface box: window's width «**W**» and window's height «**H**» (3). Dimensions are set as a percentage of the corresponding screen dimensions horizontally and vertically as follows.
4. From the **Monitor** drop-down list select the number of monitor for which coordinates are specifying (4).
5. By default the position of the **Event Viewer** interface box is fixed. If the **Operator** is to be allowed moving the **Event Viewer** by left-clicking on it, then set the **Allow moving** checkbox (5) checked.
6. Set the background color of the Event viewer box (6).
7. Set the text color in the the Event viewer box (7).
8. Set the color of alarm messages in the **Event Viewer** interface box (8). For this double-click upon the **Color of alarm messages** field. Standard Windows dialog box will open, select the required color and click **OK.**
9. Specify the color of information messages in the **Event Viewer** interface box (9). For this double-click upon the **Color of information messages** field. Standard **Color** Window s dialog box will open, select the required color and click **OK.**
10. Enter the duration of blinking for alarm messages in seconds in the **Duration of blinking**, sec field of the **Event Viewer** interface box (10).
11. Set the font of messages displayed in the **Event Viewer** interface box. For this click the **Font:** current font button (11). Standard **Font** Windows dialog box will open, set the font and click **OK.**
12. Click the **Apply** button to save all the changes.

Parameters of displaying the **Event viewer** interface box are now set.

Setting up the sound switch

You can direct audio signal that arrives from any sound source (microphone) to any sound detector (speaker) in order to play it back in INTELLECT™ software. The **Live sound switch** object is used for that.

Creating and configuring the Live sound switch object

The **Live sound switch** object is created on the basis of **Display** object in Interfaces tab of **System setting** dialog box.

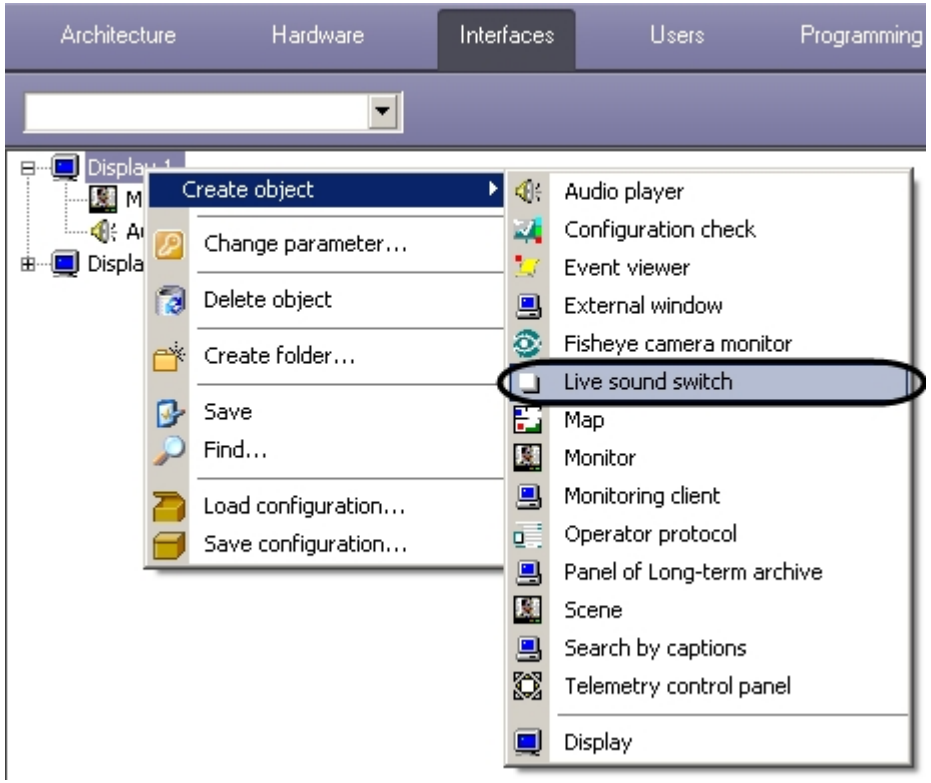

To set up the Live sound switch object do the following:

1. Go to the setting panel of the **Live sound switch** object .

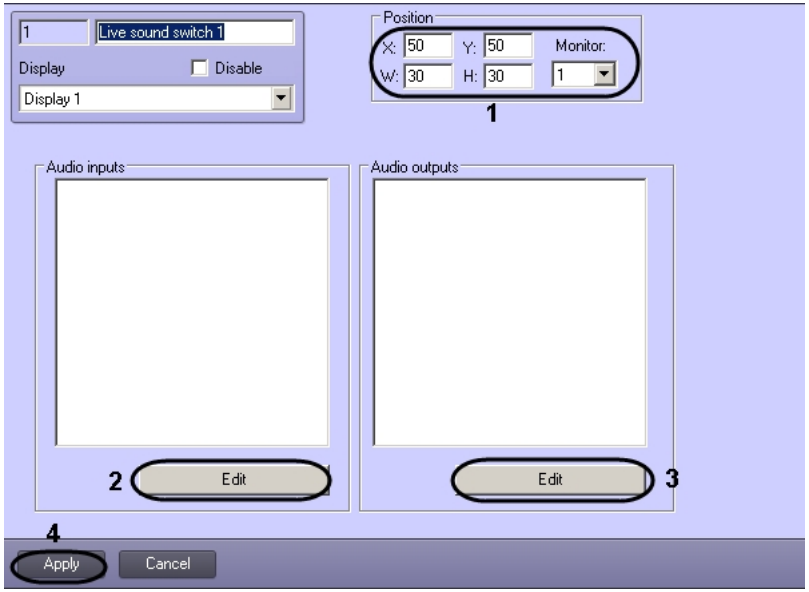

2. To set the position of the **Live sound switch** object dialog box, set a value of the position data of the left upper corner in **X:**, **Y:** fields and value of width and height of the box in **W:, H:** fields (1).
3. To add sound sources click **Edit** in **Audio inputs** (2).
   The window of sound sources list editing is displayed.

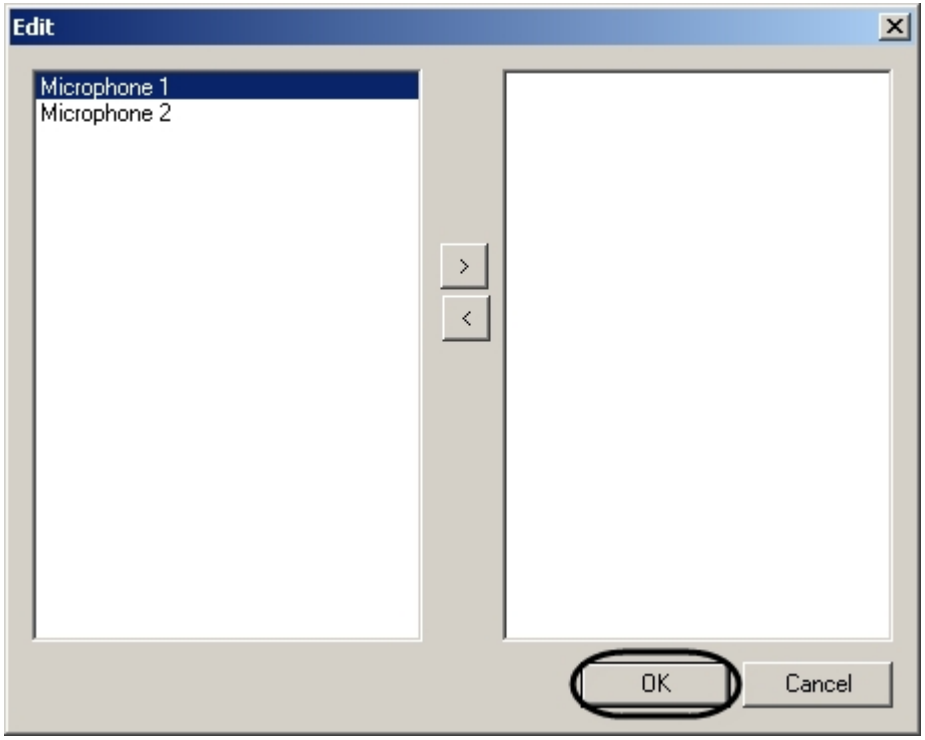

4. Select the required sound sources in the left list and click .
   As a result the selected sound sources are moved to the right list

> **Note.**
>
> To remove the sound sources from the right list select them and click .

5. Click **OK** to save the changes.
6. To add the sound detectors click **Edit** in **Audio outputs** (3). The sound detectors adding is made by analogy with sound sources adding (item 4-5).
7. Click **Apply** to save all the changes (4).

The dialog box of the **Live sound commutator** object is displayed.

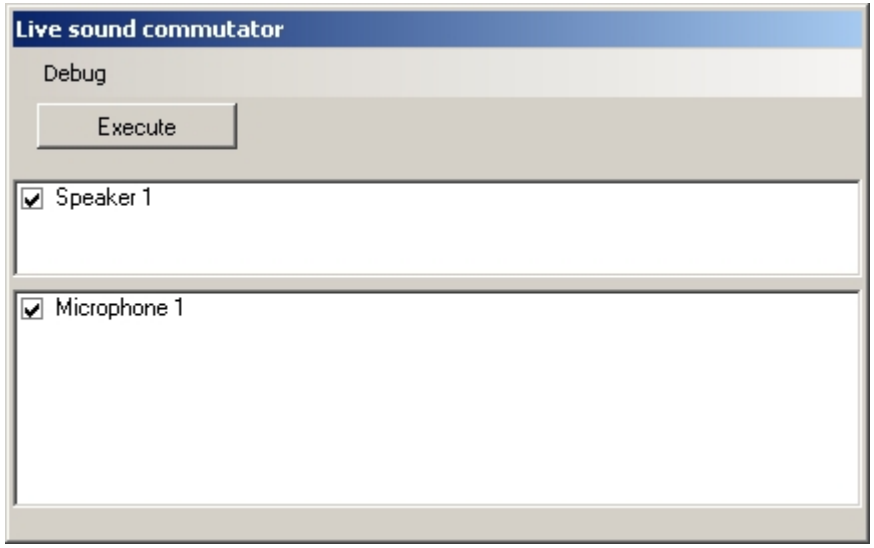

Setting up the **Live sound commutator** object is completed.

Using the Live sound switch object

Working with the **Live sound switch** object is carried out in the dialog the following way:

1. Set the check boxes against the microphones from which you want to receive the sound (1).

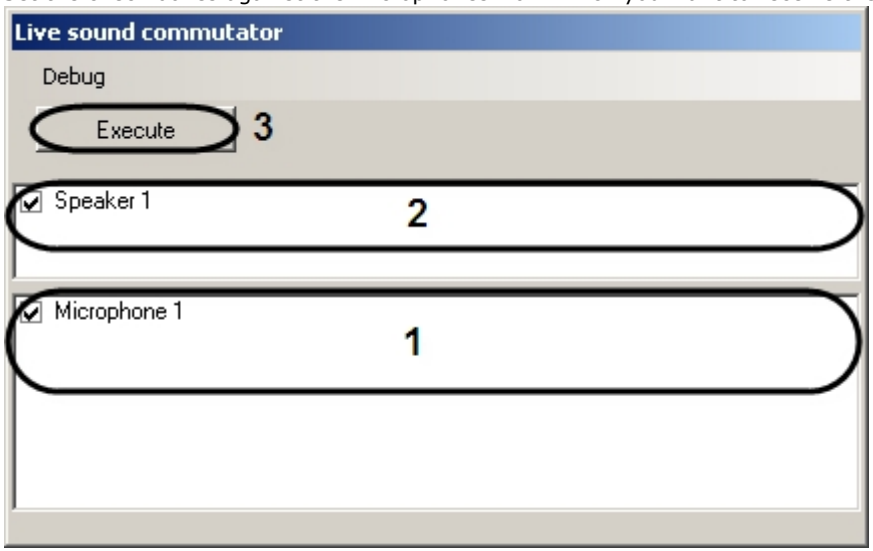

2. Set the check boxes against the speakers on wich the sound should be played (2).
3. Click **Execute** (3).

As a result the sound from selected microphones will go to the selected speakers.

> **Note.**
> Sound in the speaker is mixed (overlayed) if several microphones are selected.

Setting up the Captions search window

The Captions search window setup procedure

The **Captions search** object is a child of the **Screen** object; it is used for creating user queries on the titles database.

To create and set up the **Captions search** object, use the **Interfaces** tab in the **System Settings** window.

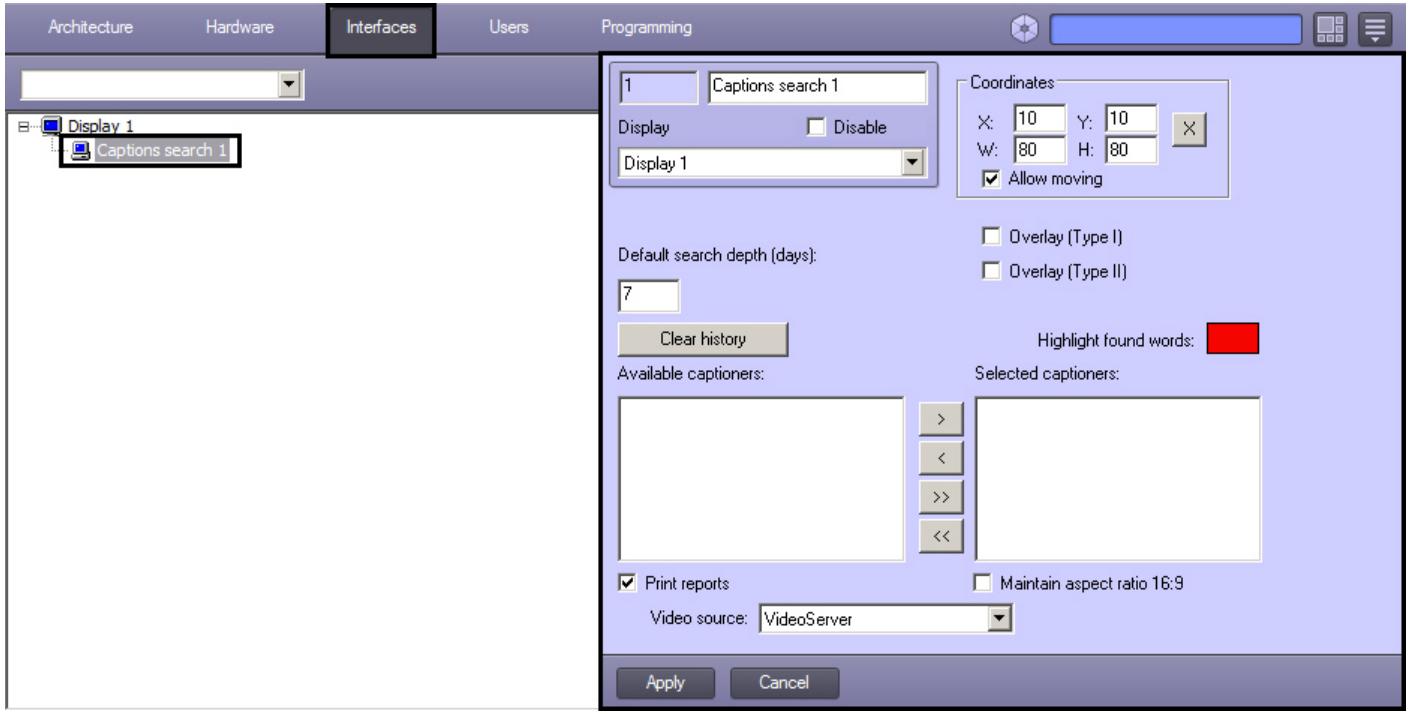

The **Captions search** object setup includes the following steps:

1. Select the captioners
2. Specify the search criteria
3. Set up the **Captions search** window

> Working with Captions search interface object

Selecting the captioners

Select the captioners to be used for searching the data. To select the captioners, do the following:

1. Select the desired items in the **Available captioners** list (1).

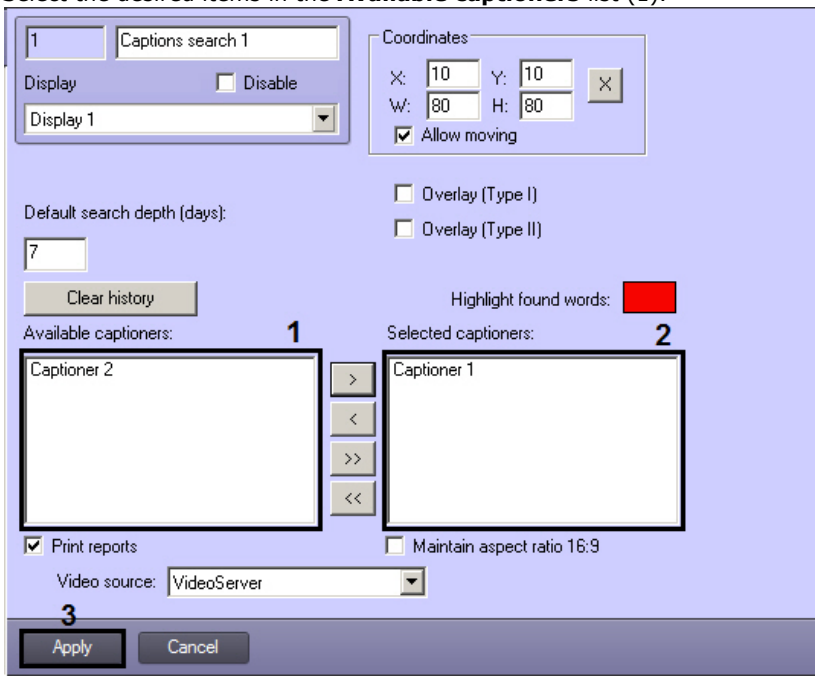

2. Click the > button to move the selected captioners, or the >> button to move all captioners from the list of available captioners to the **Selected captioners** list (2).

> **Note.**
>
> Alternatively, the < and << buttons are used to remove the selected or all captioners from the Selected captioners list.

3. Click **Apply** (3).

The captioners are now selected.

Specifying the captions search criteria

To set up the captioner search, the following parameters should be specified:

1. **search depth** – the captioner search depth;
2. **highlighting a found word** – the option for highlighting the found words in the search results;

3. **video source** – select an archive from which video data is received: main or backup archive.

To specify the captioner search criteria, do the following:

1. Enter the archive search depth (in days) in the **Default search depth** field (1).

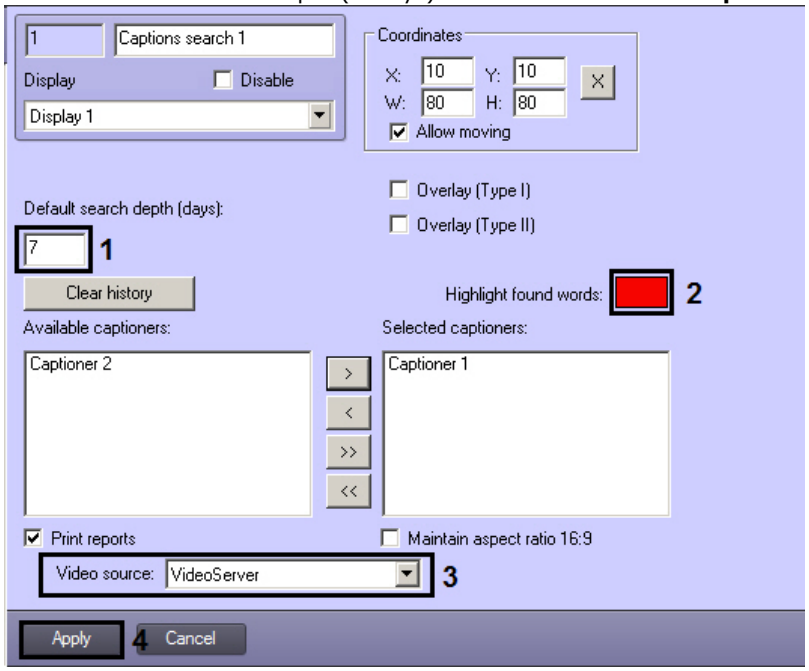

2. To enable highlighting of found words, double-click the **Highlight found words** color box and select the color in the standard Windows color selection box that opens (2).

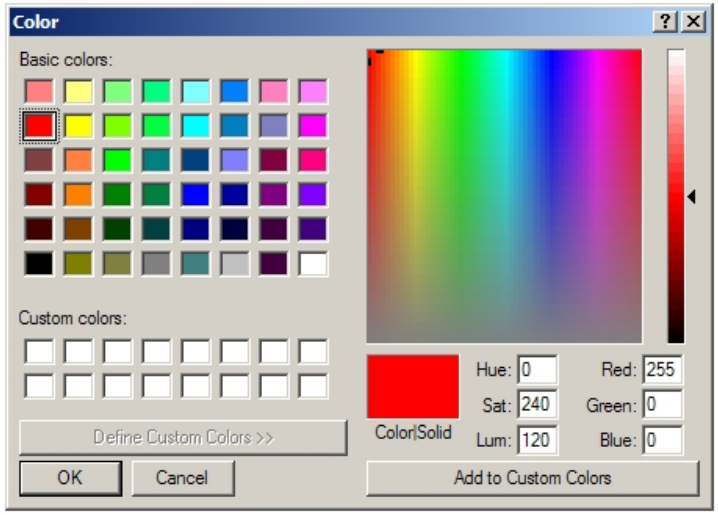

3. In the **Video source:** dropdown list select an archive from which video data is displayed as search results: video server main or backup archive (3).
4. Click **Apply** (4).

The captioner search criteria are now set.

Setting up the Captions search window displaying

To set up the **Captions search** window, the following parameters should be specified:

1. coordinates – the position and size of the window;
2. overlay type – the type of the overlay of the synchronous display of video image and search results;
3. print reports – the user can print the search results.

To set up the **Captions search** window, do the following:

1. Specify the position and size of the **Captions search** window (1): **X** is the indent relative to the left border of the video image, **Y** is the indent relative to the top border of the video image, **W** is the window width, **H** is the window height.

   The coordinates can be set up using the visual method. Click the button and use the mouse to set the location and size of the sample window, then click OK. The coordinates of the sample window will be filled in the X, Y, W and H fields automatically.

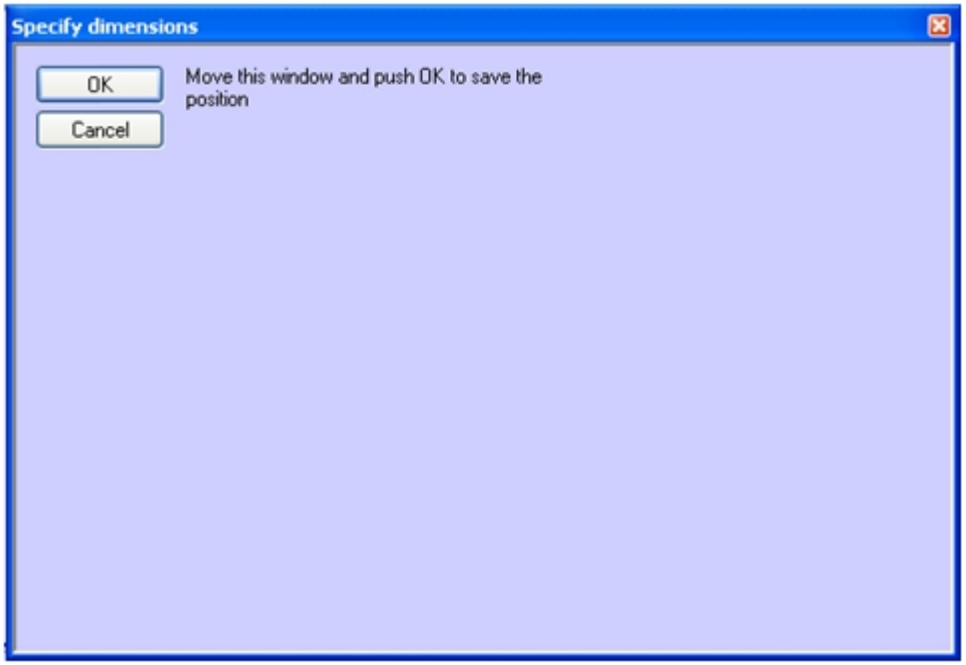

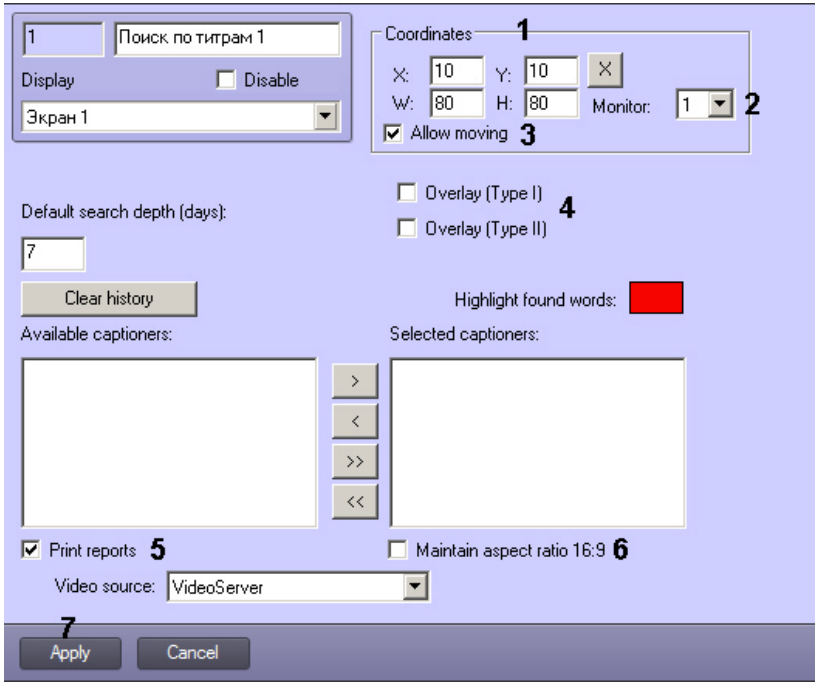

2. In the **Monitor** drop-down list, select the number of the computer monitor to display the **Captions search** window (2).
3. By default, the option of moving the **Caption search** window by dragging with left mouse button is enabled. To disable it, uncheck the **Allow moving** checkbox (3).
4. Set the overlay type by checking the **Overlay (Type I)** or **Overlay (Type II)** checkbox (4).

> **Note.**
> In most cases, optimal mode of processing the video is **Overlay (Type II)**. If this mode is not supported by video card, **Overlay (Type I)** should be selected or the Overlay should be completely disabled.
> If the **Overlay (Type I)** value is selected, then repositioning (using the mouse) of the **Captions search** box is not available.

5. To allow the operator to print the search results, check the **Print reports** checkbox (5).
6. If archive video is to be displayed in the **Captions search** window in the 16:9 format, then set the **Maintain aspect ratio 16:9** (6) checkbox checked. If the checkbox is set unchecked, then 4:3 aspect ratio is set even for HD video.
7. Click **Apply** (7).

The **Captions search** window is now set.

> **Note.**
> To clear the history of user queries in the **Captions search** window, click the **Clear history** button.

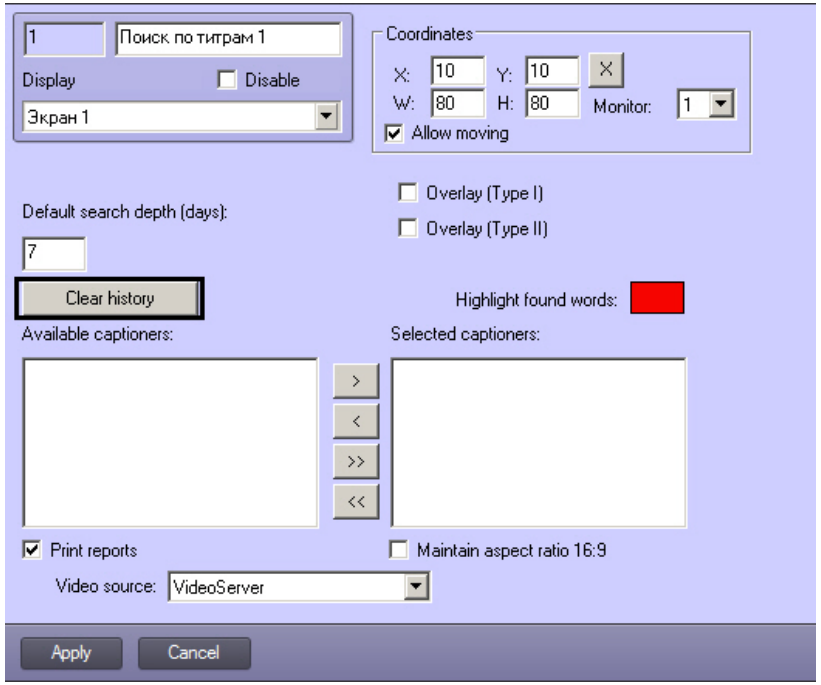

Configuring HTML interface

General description of HTML interface in Intellect software

The HTML interface object is designed for displaying web-pages, text files, images and more data, displaying of which is supported by Internet Explorer browser, in the *Intellect* interface window. It is possible to create one or several html-pages performing the following functions on the basis of the **HTML interface** object:

1. Loading web-pages and other files by URL or from the file.
2. Saving web-pages and other files and images to the file.

Note.
Web-page creating and editing is performed using the specialized editor programs.

If there is video displaying or sound playing back on the web-page, it will be also available in the **HTML interface** window.

HTML interface

Procedure of HTML interface configuring

To configure HTML interface in the *Intellect* software, do the following:

1. Create the **HTML Interface** object and set its position.

2. Create and configure one or several **HTML page** objects.
3. Select start page for displaying in HTML interface.
4. Select objects to track their states in HTML interface window.

Creating HTML interface object and setting its position

The **HTML interface** object is created on the basis of the **Display** object on the **Interfaces** tab of the **System settings** dialog window.

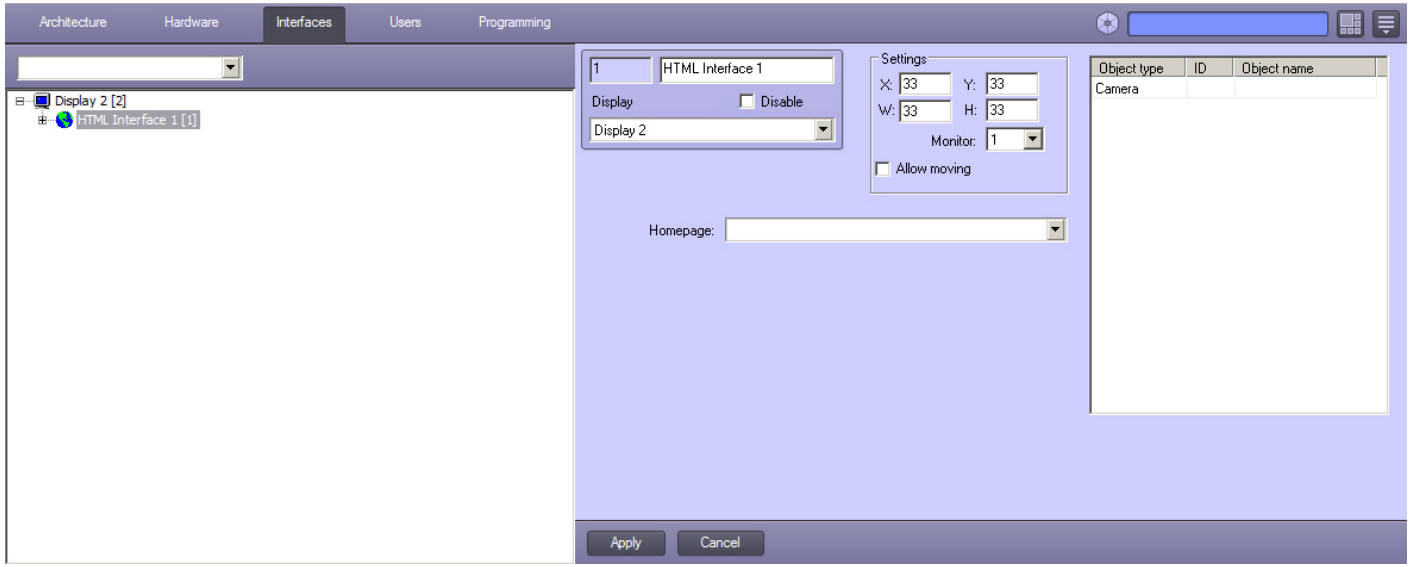

Object's settings panel will display on the right part of the **System settings** dialog window after the object creation.

To set position of the **HTML Interface** object on the screen, do the following:

1. Go to the settings panel of the **HTML Interface** object.

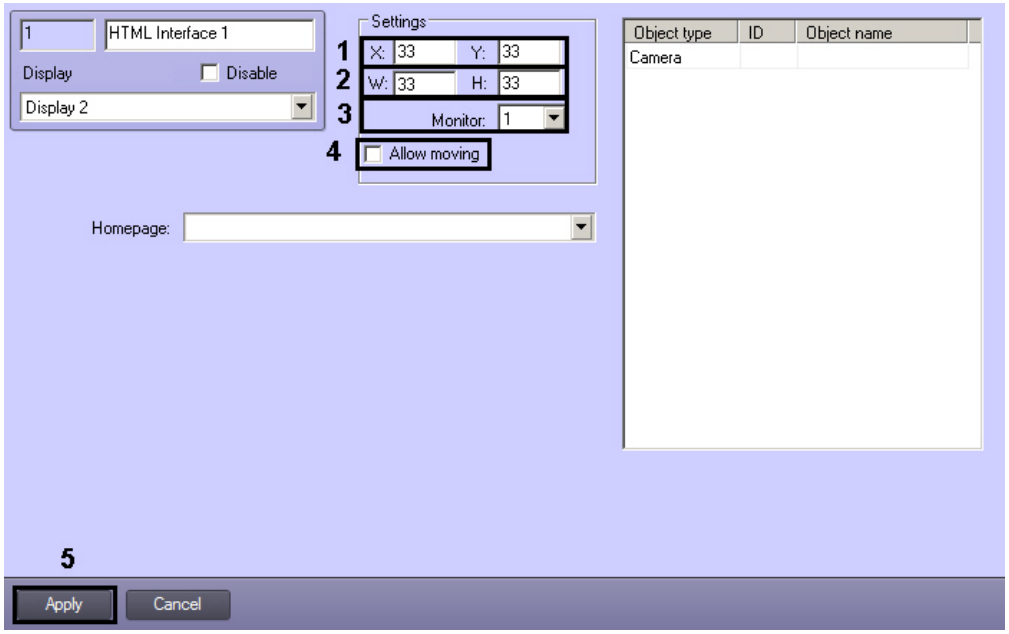

2. In the **X:** and **Y:** fields specify coordinates of the interface window's upper left corner (1). Coordinates are counting from the display's upper left corner and expressing as a percentage of the screen width and height respectively.
3. In the **W:** and **H:** fields specify width and height of the HTML interface window as a percentage of the screen width and height respectively (2).
4. From the **Monitor** drop-down list select number of the monitor on which the **HTML Interface** object is to be displayed via a mouse click (3).
5. Set the **Allow moving** checkbox to allow operator changing position of the **HTML Interface** window via a mouse click (4).
6. Click **Apply** button (5).

Setting position of the **HTML Interface** object on the screen is completed.

Creating and configuring the HTML page object

Creating the HTML page object

The **HTML page** object is created on the basis of the **HTML Interface** object on the **Interfaces** tab of the **System settings** dialog window.

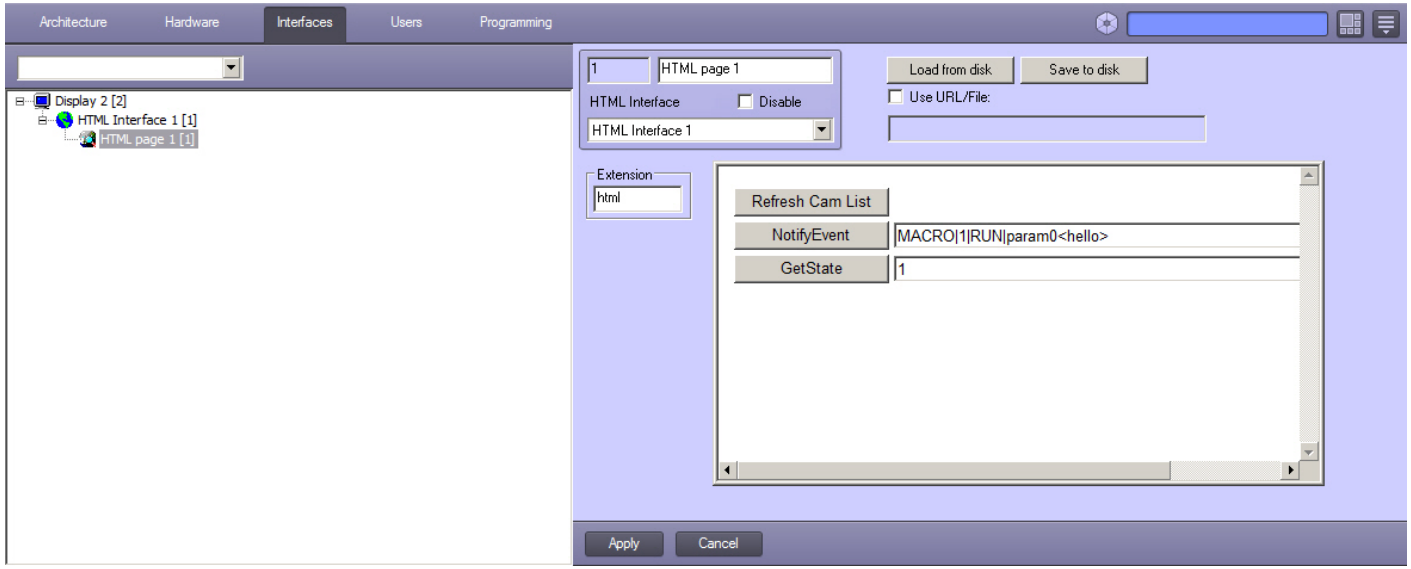

Object's settings panel will display on the right part of the **System settings** dialog window after the object creation.

Default HTML page contains example of code allows to arm and disarm cameras. To check out this example it's required to save the page (see Loading file from the disk and saving to disk) and open it in text editor.

Open web-page by URL

To go to the specified URL while opening web-page in the **HTML Interface** window, do the following:

1. Go to the settings panel of the **HTML page** object.

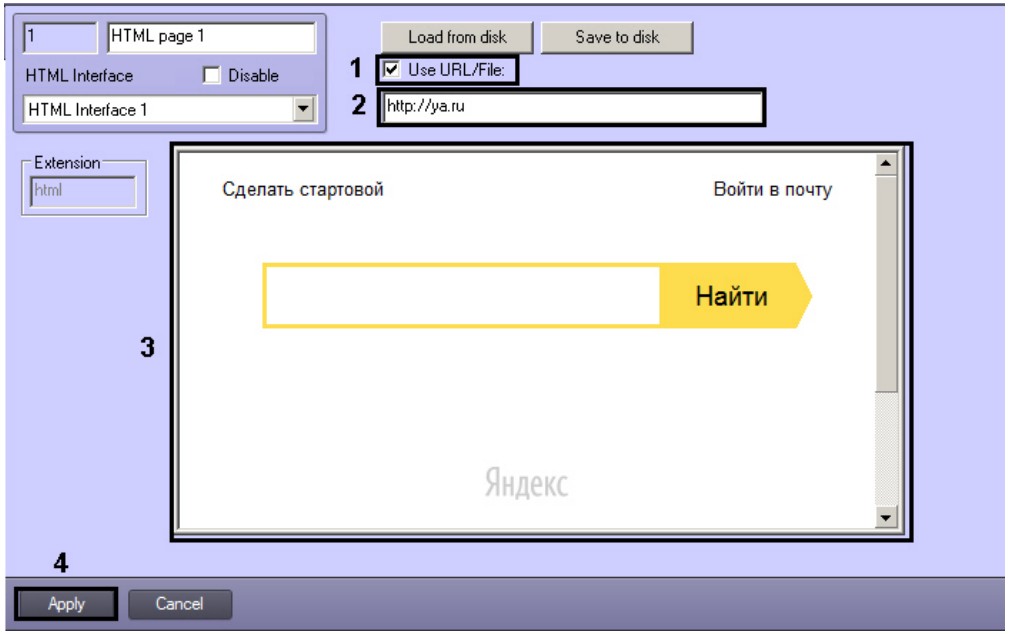

2. Set the **Use URL/File** checkbox (1).
3. In the text field enter the URL-address of required page (2).
4. Click **Apply** button (3). As a result the page content will display in the preview box (4).

Configuring of opening web-page by specified URL is completed.

Loading file from disk and saving to disk

To load the specified file of the web-page, text file or image while opening web-page in the **HTML Interface** window, do the following:

1. Go to the settings panel of the **HTML Interface** object.

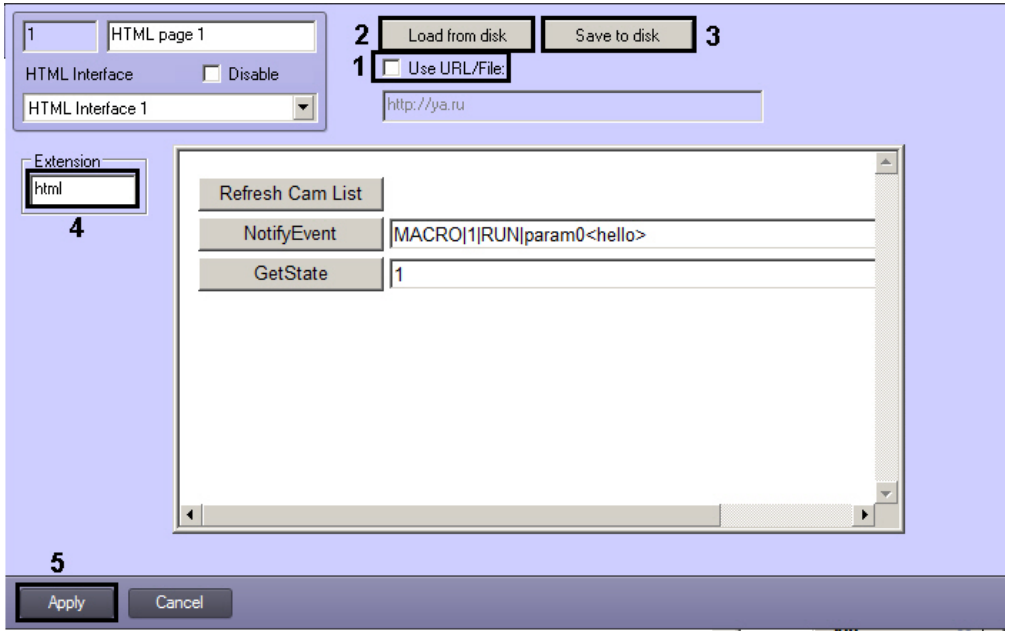

2. Deselect the **Use URL/File** checkbox if it was set (1).
3. Click the **Load from disk** button (2).
4. In standard dialog window select the required file. As a result, its content will display in the preview window (3).

> **Note.**
> Extension of the selected file will display in the **Extension** field (4).

5. Click **Apply** button (5).

> **Note.**
> To save opened file click the **Save to disk** button.

Configuring of loading file from disk is completed.

Link to the HTML page object

When apply settings, i.e. while clicking the **Apply** button or going to the settings panel of other object, the web-page is saving in the OPCIEPAGE<id of HTML page object>_<id of HTML Interface object>.html, for example OPCIEPAGE2_1.html file in the <Directory of the *Intellect* software installation>\OPCIEFolder\ folder.

It is possible to refer to such page in the normal way using the <a> tag, for example:

HTML page 2

> **Note.**
> If web-page is not opened by URL, the empty file will be saved.

Selecting start page for displaying in HTML interface

To select the start page for displaying in the HTML interface, do the following:

1. Go to the settings panel of the **HTML Interface** object.

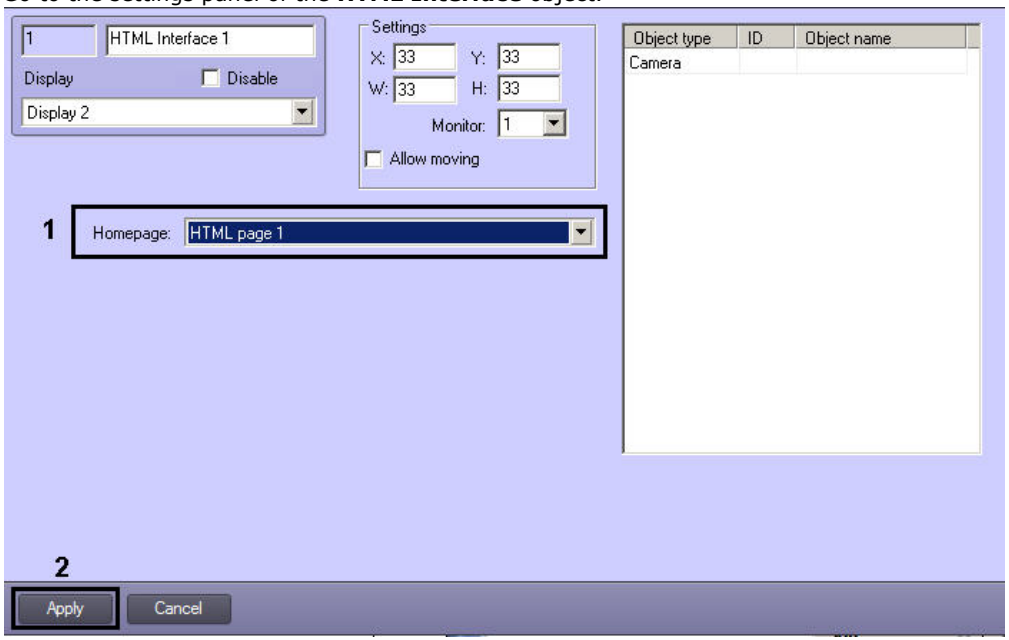

2. From the **Homepage** drop-down list select the created HTML page object (1).
3. Click **Apply** button (2).

Configuring the start page is completed.

Selecting objects to track their states

An HTML page created by default has OnObjectState and GetState functions aimed to get object states. GetState function requires object state and OnObjectState function aims to get info on states.

Select objects states of which are to be tracked using these functions as follows:

1. Go to the settings panel of the **HTML Interface** object.
2. Select the object type in the **Object type** dropdown list (1).

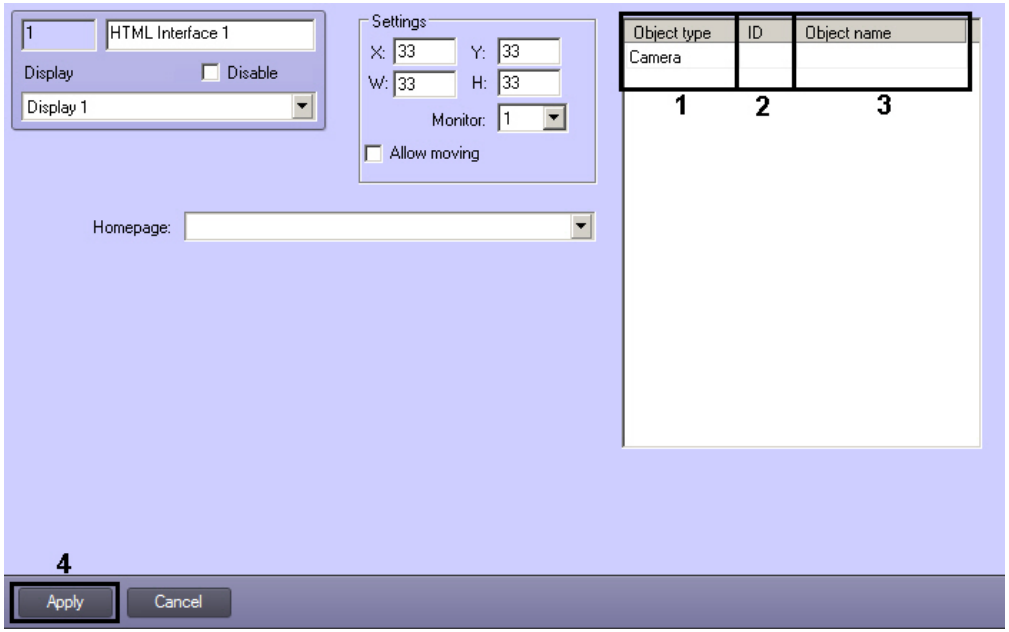

3. If states from the specific object are to be received, then select its ID in the **ID** dropdown list (2).
4. When left clicking in the **Object name** field it is automatically filled with the name of the object with this ID (3).
5. Repeat steps 2-4 for all required objects.
6. To save the settings click the **Apply** button (4).

Objects states of which are to be tracked are now selected.

Setting up the voice notification

It is possible to transmit voice notification with the registration of alarms by main motion detectors of cameras.

When motion detector works, audio file which is situated in Wav subdirectory in INTELLECT™ software root directory, is played. The files have .wav extension and are called cam_alarm_N, where N is a number of a video camera.

> **Note.**
> By default INTELLECT™ software provides 16 audio files for 16 cameras, respectively. You can add your own audio file if the number of cameras is greater one specified by default. It is enough to move a new audio file (wav format required) to a Wav subdirectory and change its name to: cam_alarm_N, where N is a number of a video camera (> 16). If there is no file with name corresponding to camera, then there is a standard sound of Windows OS - **Ding**.

Before setting up the voice notification it's necessary to make sure that the following conditions are carried out:

1. Standard sound card is installed on the required computer (also integrated into the motherboard);
2. The devices of audio signals playback (dynamics and headphones) are connected to audio outputs of the sound card.

Setting up the voice notification is carried out in two ways:

1. Using **Audio player** object;

2. Using **Sound notification** object.

It’s recommended to use only one variant.

Setting up the voice notification using Audio player object

To set up the voice notification using **Audio player** object do the following:

1. Go to the setting panel of **Audio player** object.

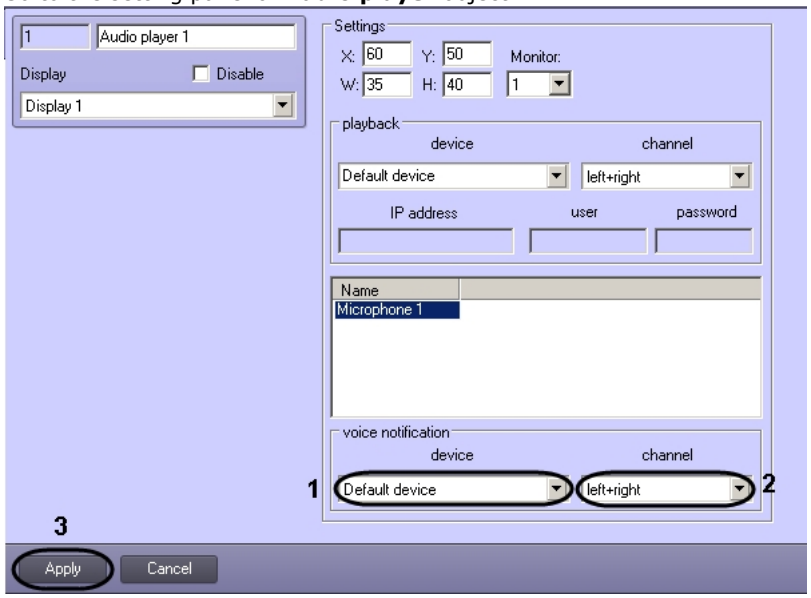

2. Select required voice notification device in **Device** dropdown list of **Voice notification** group (1).

> **Note.**
> Standard sound card corresponds to **Default device**.
> To switch the voice notification off select **Switch off**.

3. Select required voice notification channel in **Channel** dropdown list of **Voice notification** group (2).
4. Click **Apply** button to save all the changes (3).

Setting up the voice notification using **Audio player** object is completed.

Setting up the voice notification using Sound notification object

To set up the voice notification using **Sound notification** object do the following:

1. Create **Sound notification** object on the basis of **Computer** object in **Hardware** tab of **System setting** dialog box.

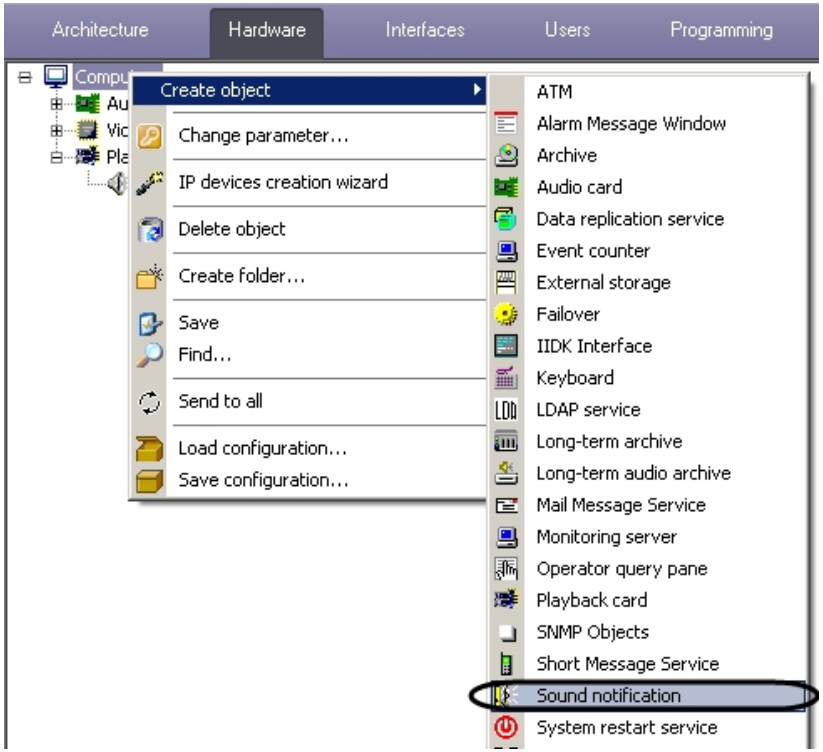

2. Go to the setting panel of **Sound notification** object.

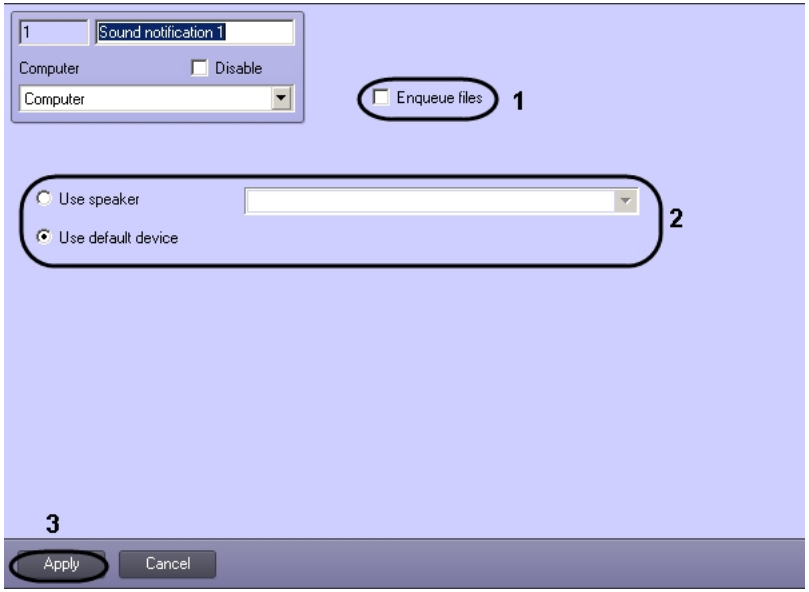

3. If it's necessary, set **Enqueue files** check box in order to play alarm sound notification files that appear simultaneously one after another (1).
4. If the voice notification device is a standard sound card, set the switch into **Use default device** mode. Otherwise set the switch into **Use speaker** mode and select the voice notification device in the dropdown list (2).
5. Click **Apply** button to save all the changes (3).

Setting up the voice notification using **Sound notification** object is completed.

Intellect Software System's interface language

To change the interface language of the *Intellect* Software System, a language must be installed. This is done using a language pack. Language packs are available on the ITV website at http://www.itv.ru/

Note.
A language pack may be released later than the corresponding version of the Intellect Software System.

A language pack is collection of LP.msi files, each of which installs the localized product in one of the supported languages. Each file is located in a separate folder named using the ISO 639-1 two-letter code for the installer's language. Languages can be installed during the installation of the base product (see Installing INTELLECT™ software) or separately for each language (see Installing the language).

Installed languages are enabled in the *Intellect* Software System using the system's advance settings utility tweaki.exe (see Switching languages in the Intellect Software System).

Attention!
Localization files for Intellect-based vertical solution modules are not included into the language package

Installing the language

To install a new interface language for the *Intellect* Software System, do the following:

1. Download the latest version of the language pack from the ITV official website: http://www.itv.ru.
2. Unzip LP.zip in any directory, i.e. D:\LP\.
3. Go into the folder corresponding to the language you want to install, i.e. D:\LP\en to install English.
4. Launch LP.msi.
5. A window displaying the progress of the installation will be shown.

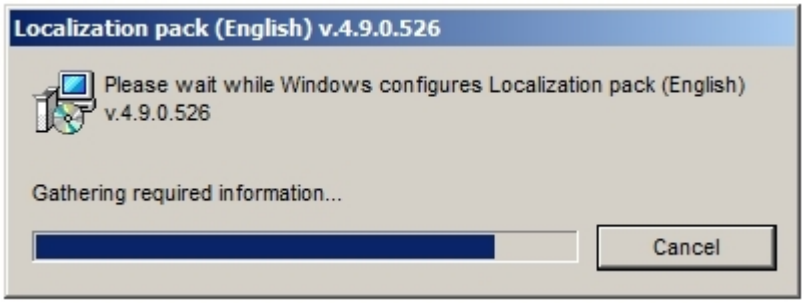

A language cannot be installed if the base product has not been installed. If the *Intellect* Software System has not been installed, a message indicating the need to install it will be shown.

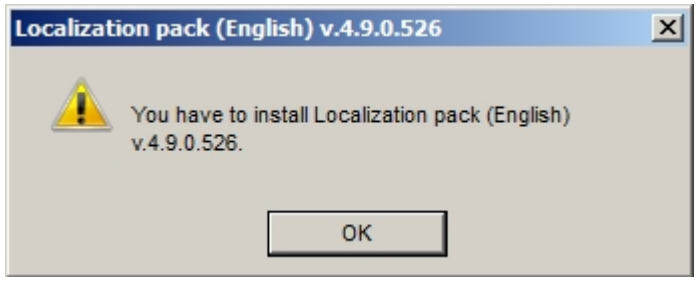

Click **OK** to cancel the installation.

When the installation process is complete, a folder containing the required language files will be created in <*Intellect* installation directory>\Languages. Additionally, help files in the desired language will be placed in <*Intellect* installation directory>\Help.

Documentation in the installed language will also become available through **Start** –> **All Programs** –> **Intellect**–> **Documentation**.

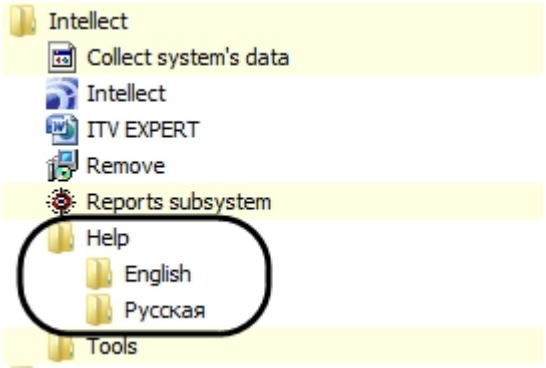

Languages are uninstalled when the *Intellect* Software System is uninstalled.

Switching languages in the Intellect Software System

Before switching languages, be sure the desired language has been installed (see see Installing INTELLECT™ software or Installing the language).

To switch the *Intellect* Software System's interface language, do the following:

1. Shut down the *Intellect* Software System.
2. Launch the system's advanced settings utility tweaki.exe. The utility is accessed through **Start** –> **All Programs** –> **Intellect** –> **Utilities**, or by going to <*Intellect* installation directory>\ Tools\.

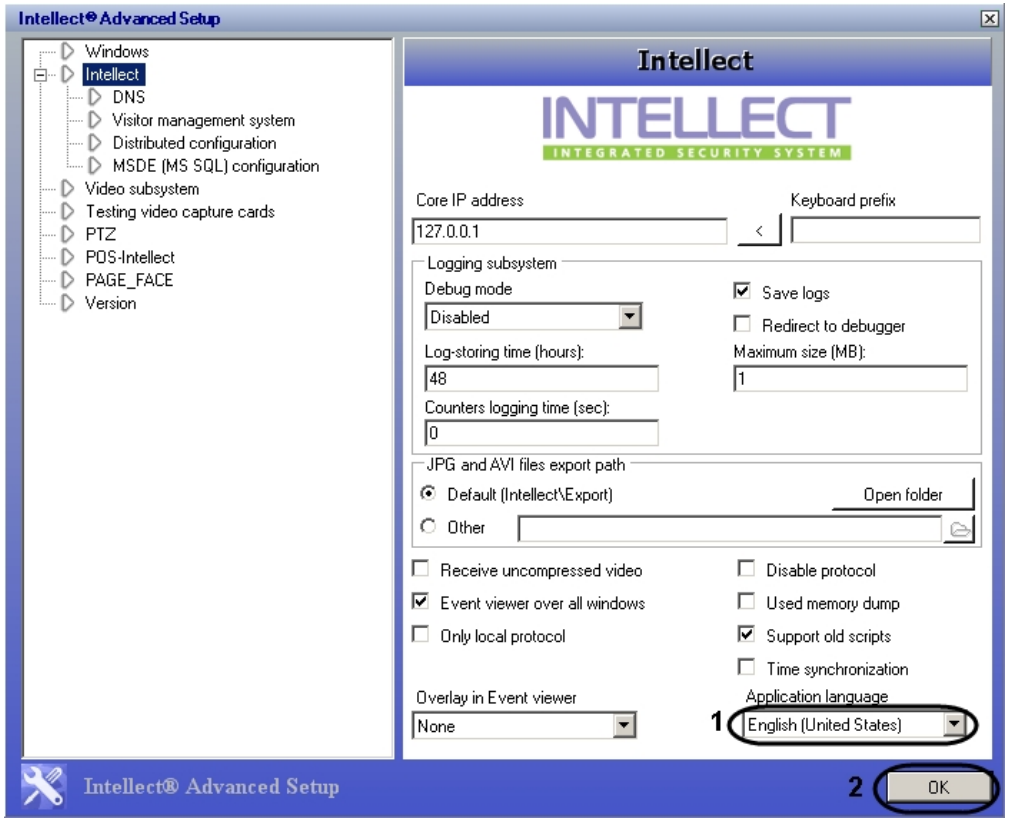

3. From the **Application language** dropdown list, select the desired interface language for the *Intellect* Software System (1).
4. Click **OK** (2).
5. Launch the *Intellect* Software System.

This completes the process of switching languages.

Configuration of users and permissions

Rights administration

The users` rights

The following user categories are available in the surveillance system based on the Intellect software:

1. Administrator.
2. Operator who may optionally be granted some rights for administration, control and viewing.

The administrator has full control over the set up and usage of all components of the system.

Any other registered user of the system is an operator who may optionally be granted the rights for administration, controlling and viewing of particular components of the system.

To register an operator, a user account is created which holds this user's rights for administration, control and viewing. A password is assigned to each user at the time of registration, used for authorization at system start-up and exit. An operator may be optionally forbidden to shut the system down.

User registration and removal

General information about user registration in Intellect software

The registration procedure depends on the user category.

To register an administrator, an administrator password should be specified. An administrator password gives access to administrative functions of all system components. Only one administrator password may be registered in the system.

No account is created for the administrator, so the administrator password cannot be used for authorization on system start-up. The administrator password is used to access the **System Settings** window and the settings panels of system objects, to change the current user and to shut the system down.

To register operators, the corresponding accounts should be created. A **Person** system object is created for each operator account. Each operator has his (her) own user account which holds all the data about the rights and authorization password.

The account also indicates to which department the operator belongs. A **Department** system object is created for each department of the company.

The **Department** and **Person** objects form a hierarchy of two levels.

User registration procedure

The following user registration procedure is recommended for setting up the system:

1. Administrator password registration.

   Note.
   You must register the administrator password prior to registering the operators and granting the rights to them. This is a mandatory system requirement.

2. Registering departments by creating the **Department** objects.
3. Registering operators by creating the **User** objects.

Administrator password registration

The administrator password gives access to administrative functions of all system components. Only one administrator password can be registered in the system. The administrator password is to be registered on the administration server when the system is configured.

To register the administrator password, do the following:

1. Go to the **Programming** tab in the **System setting**s dialog box (1).
2. Select the **Security zone** object in the objects tree of the **Programming** tab (2). The settings panel for this object opens on the right of the **System settings** box.

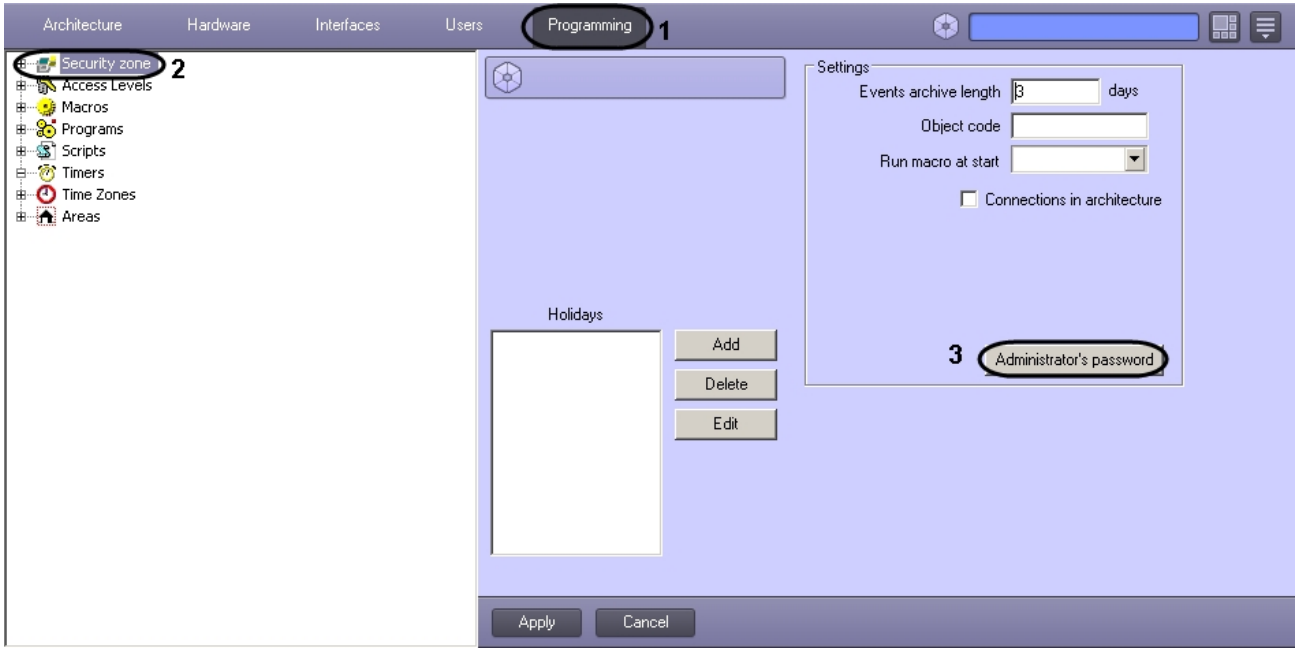

3. Click the **Administrator's** password button (3).
4. The **Set password** box appears.

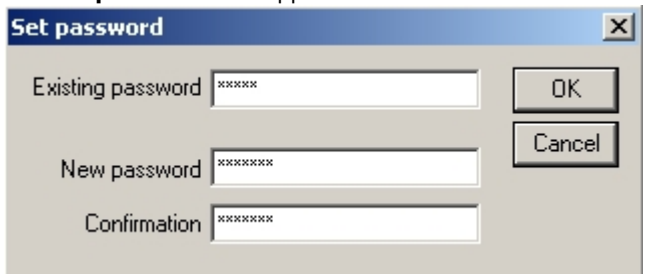

5. Specify the existing administrator's password in the **Existing password** field. If there is no administrator's password, this field is left empty
6. Type-in the sequence of letters and figures, that will be used as administrator's password in the **New password** field.
7. Retype-in the new administrator's password in the **Confirmation** field.
8. Click the **OK** button. The **Set password** box is closed.
9. Click the **Apply** button in the **System settings** box (8).

The administrator's password is now registered.

When the administrator's password is registered one with restricted access rights can access the **System settings** dialog box:

1. Call the **Main** control panel.
2. Press the Ctrl key on the keyboard.
3. Select the **System settings** item in the menu.

4. Type-in the administrator’s password and click the **OK** button.

Department registration

To register departments, the **Department** objects should be created. The **Department** account consists of the department name and the list of its employees.

A separate account is created for each department. To register a department account, do the following:

1. Open the **Users** tab in the **System Settings** window (1).
2. Create a **Department** object in the objects tree of the **Users** tab (2).

The settings panel for this object opens on the right of the **System settings** box.

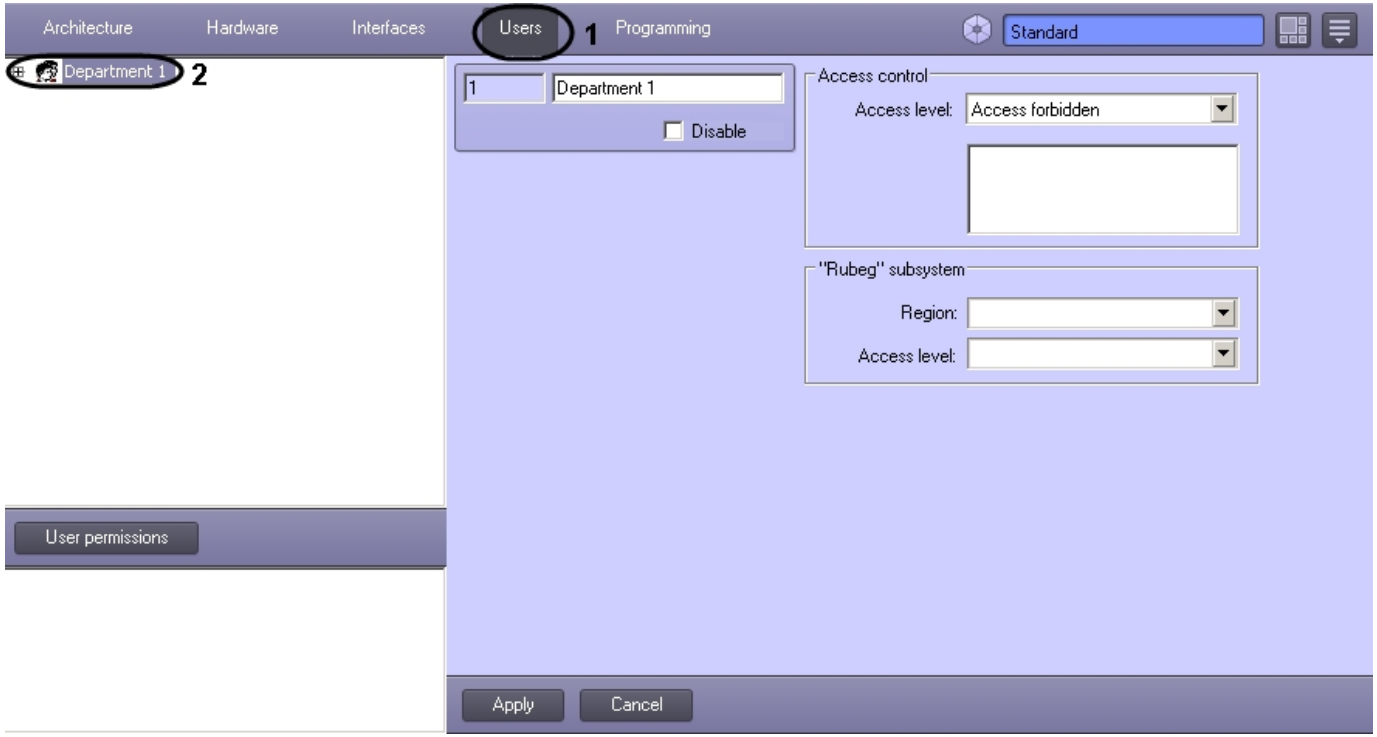

This completes registration of the department account.

> **Note.**
> Settings on the settings panel of the **Department** object are used to configure the access control system (see Visitor Management System Module Settings and Operation Guide).

Registration of Operator accounts

To register Operator accounts, the **User** objects are to be created.

An individual account is to be created for each Operator. To register an Operator account, do the following:

1. Open the **Users** tab in the **System Settings** dialog box.
2. Create a **User** object under the **Department** object in the objects tree.

> **Note.**
> Do not use **rs** as username when registering Operator accounts as this name is used by default in *Intellect Web Report System*. If the user with such name is careted in *Intellect*, then the error can occur when *Intellect Web Report System* is started.

The created object appears in the objects tree, and the settings panel for this object opens on the right side of the **System Setting** dialog box.

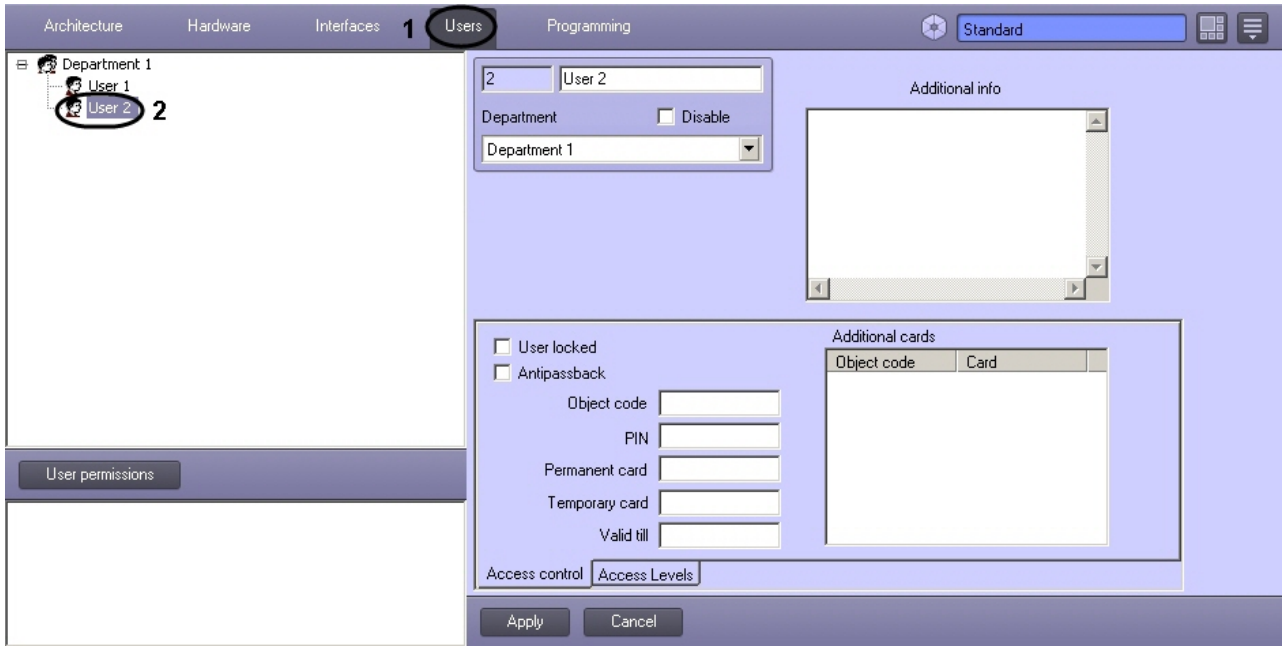

The operator account is now registered.

Note.
The settings on the settings panel of the **User** object are used to configure the access control system (see Visitor Management System Module Settings and Operation Guide).

Removing user accounts

The removal procedure depends on the user category.

To remove operator accounts, delete the corresponding **User** objects from the objects tree of the **Users** tab.

To remove the administrator account, remove the administrator password. The administrator password is removed in the same way as it is created. To remove the administrator password, specify the current Administrator password in the **Old Password** field and then clear the **New Password** and **Confirmation** fields in the **Set Password** box.

Registration of users' rights

Registration of operator rights

To register the rights for an operator account, do the following:

1. Open the **Users** tab in the **System Settings** window.
2. Create a **User permissions** object. If no **User permissions** objects have been created, click the **User permissions** button in the lower part of the window to create one.

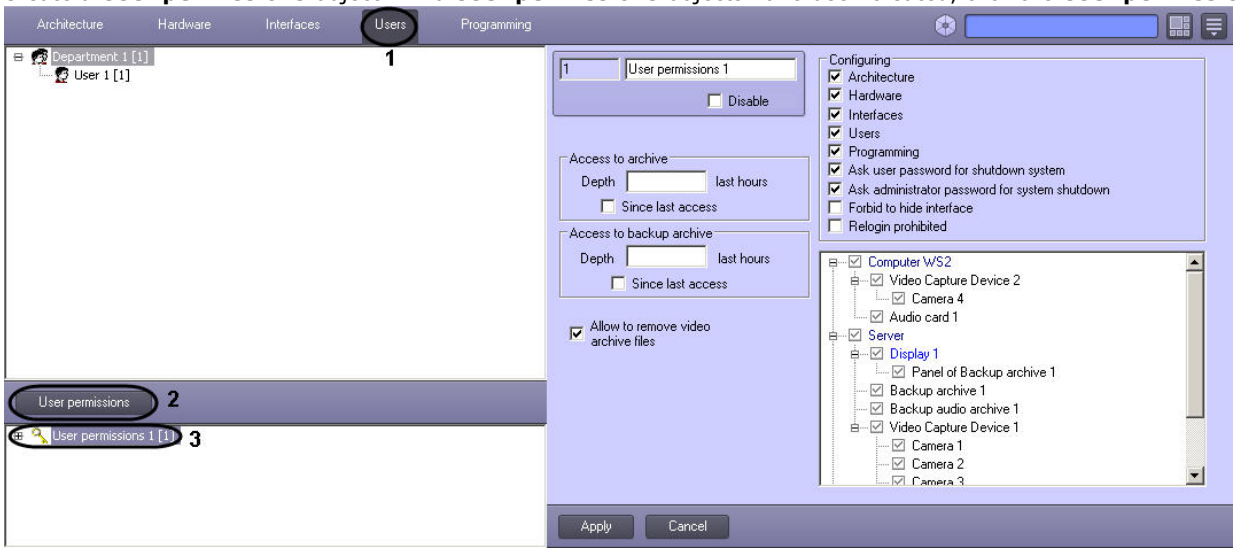

   If at least one registered rights object exists, which is shown in the objects tree below the **User permissions** button, the new rights object can be created from the context menu of the existing object.
3. The object appears in the objects tree under the **User permissions** button, and the settings panel for this object opens on the right side of the **System Setting** window.

This completes registration of the operator rights.

General information on the limits to the administrative functions

The administrative functions include:

1. Creation or removal of system objects;
2. Editing the settings of the system objects;
3. Moving the system objects across the objects tree.

By default, the operator has access to all administrative, control and viewing functions of all system objects. Administration of specific objects and groups of objects can be forbidden for an operator.

The objects are grouped according to the tabs of the **System Settings** window.

When an operator receives administration rights for an object, he (she) also receives the control and viewing rights for that object. The forbidden tabs are blacked out in the System Settings window

Figure below shows a tabs panel of the **System Settings** window where the **Architecture**, **Hardware**, **Interfaces** and **Users** tabs are allowed for editing by the current operator, while the objects in the **Programming** tab cannot be edited by the current operator.

If an operator is forbidden to access any of the tabs, he (she) cannot open the **System Settings** window altogether, and cannot use any of the administrative functions.

> **Note.**
> Lack of administrative rights for the **System Settings** tabs does not imply any limitation on control or viewing of the corresponding objects.

Limiting access to the tabs of the System Settings window

By default, the operator has no access to the administrative functions of the system objects in the **System Settings** tabs.

An operator can be granted administrative rights to the system objects of one or more tabs. In this case the operator will be able to open the **System Settings** window.

To allow an operator to administer objects in one or more tabs, do the following:

1. Open the **Users** tab in the **System Settings** window.
2. Open the required **User permissions** object in the objects tree under the **User permissions** button.
3. The settings panel for this object opens at the right side of the **System Settings** window.

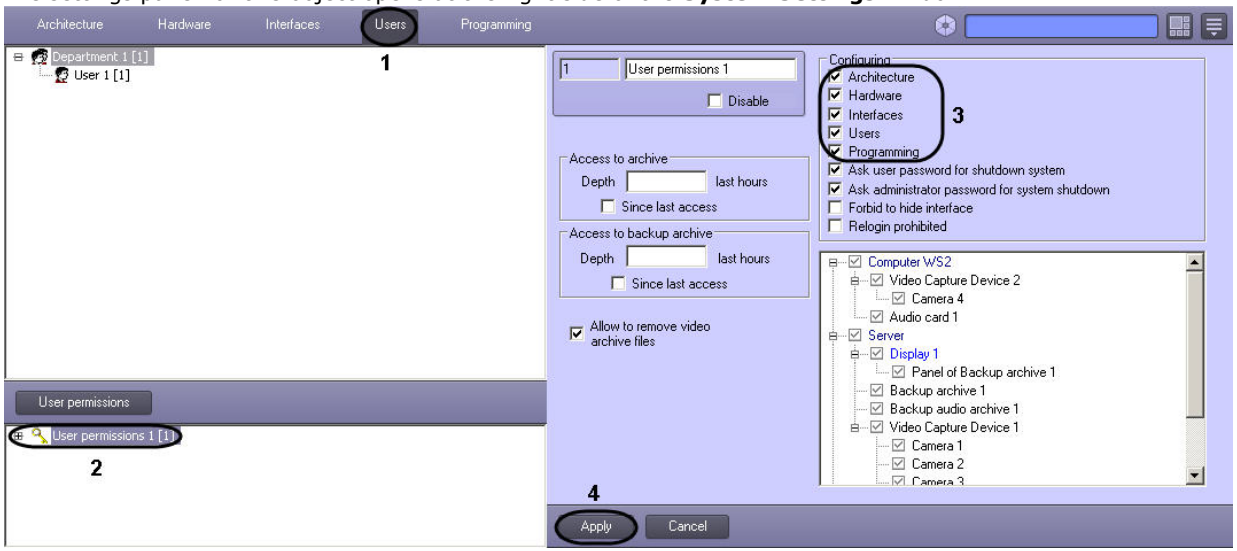

   The first 5 checkboxes of the **Configuring** group correspond to the tabs of the **System Settings** window. Check the checkboxes for the tabs that the operator will be allowed to access.
4. Press the **Apply** button.

This completes the setup of the operator access to the **System Settings** tabs.

Limiting access to the administration of the system objects, control and viewing functions

By default, an operator is forbidden to administer any objects. If an operator is granted access to one or more tabs of the **System Settings** window, he (she) automatically receives the rights to administer, control and view all system objects on these tabs.

When the operator has the rights for control functions, he (she) can use the buttons, menu items and other interface elements allowing to control the corresponding objects (cameras, microphones, telemetry, event viewer, etc).

Viewing functions allow the operator to view the interface components (user screens, surveillance monitors, Backup archive window, microphone indicators, etc.).

By default, operator can have a full access to administrator, operator and control functions of the objects with the given functions. It is possible to ban the operator to administer one or several objects, limit the list of available functions of object control and also limit monitor opportunities.

To limit operator access to the administration of certain objects of Intellect program software do the following:

1. Open the **Users** tab in the **System Settings** window.
2. Open the required **User permissions** object in the objects tree under the **User permissions** button.
   The settings panel for this object opens at the right side of the **System Settings** window.

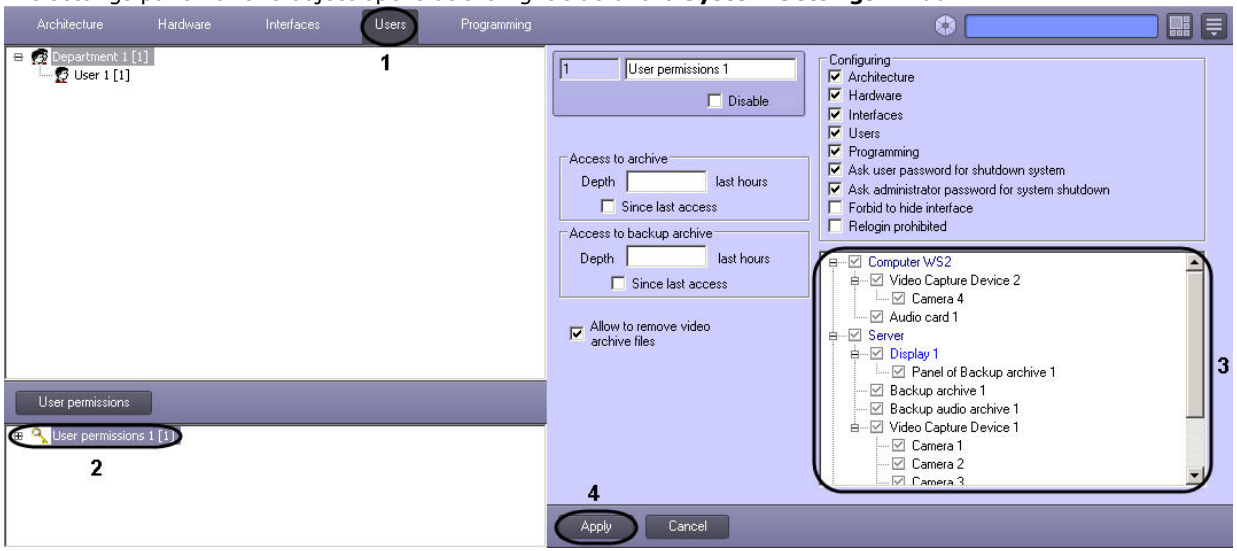

   The tree in the lower part of the settings panel represent the rights of the current operator. Checkboxes to the left of the objects indicate and allow changing the administrative, control or viewing rights for these objects. The components of the tree represent the system objects which the current user can administer according to his (her) rights' settings. Name of marks corresponds to object names, which administration, control and monitoring may be accessible to Operator with proper rights (3).
   Correspondence of mark type to Operator rights is given in the table.

Type of mark	Right to administer	Right to control the object	Right to monitor the object
A gray mark	Yes	Yes	Yes
A green mark	No	Yes	Yes
An **M** mark	No	No	Yes
A cross mark **x**	No	No	No

The following hotkeys can be used for objects tree control:

Key	Function

+ on the numeric keypad	Grants all rights to the selected objects (sets the gray mark)
- on the numeric keypad	Forbids the selected object (sets the red cross)
Space	Sequential change of the rights to the selected object in the direction of increasing (forbidden-monitoring-control-administration and then cyclically).
"Left" and "right" arrows	Expand / collapse the selected tree branch.
/ on the numeric keypad	Fully collapse the objects tree
* on the numeric keypad	Fully expand the objects tree

3. After finishing the setting, click **Apply** (4).

Setting up the administration of the system objects, control and viewing functions is completed.

Limiting access to shutting the system down

To eliminate unauthorized shutdown of the surveillance system, the shutdown function can be protected by a password. The following options for system shutdown are available:

1. Shutdown by the password of any registered operator.
2. Shutdown by the password of the current authorized user only.
3. Shutdown by the administrator password.
4. An operator cannot shut the system down.

If the operator is forbidden from shutting the system down, the **Run** menu of the **Main Control Panel** does not contain the **Shut Down** option. This menu item appears only after opening the administrator password window and entering the valid administrator password. To shut the system down, the password should be entered once more. Thus, it is recommended to use the option for shutdown by the administrator password, as well.

By default, the system is set for shutdown by any registered operator's password, regardless of the current authorized user.

To change the shutdown option, do the following:

1. Open the **Users** tab in the **System Settings** window.
2. Open the required **User permissions** object in the objects tree under the **User permissions** button.
   The settings panel for this object opens at the right side of the **System Settings** window.

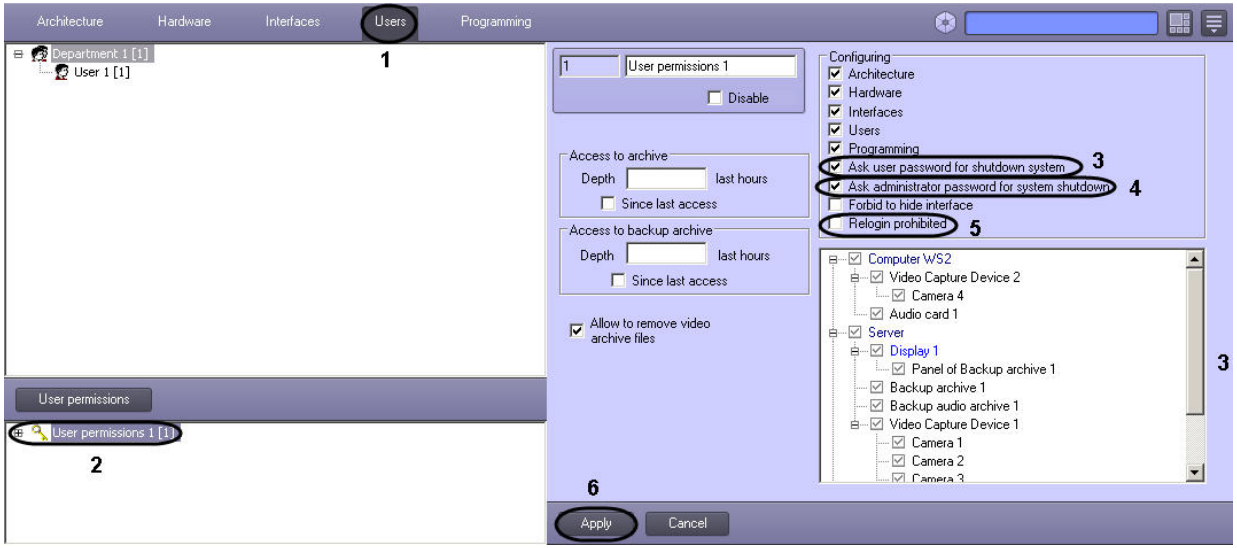

3. To enable system shutdown by the current operator's password only, check the **Ask User Password for Shutdown System** checkbox.
4. To enable system shutdown by the administrator password only, check the **Ask Administrator Password for System Shutdown** checkbox.
5. To forbid the current operator from shutting the system down, check the **Ask Administrator Password for System Shutdown** and the **Relogin prohibited** checkboxes.
6. To revert to the default shutdown option, deselect all the related checkboxes: **Ask User Password for Shutdown System**, **Ask Administrator Password for System Shutdown**, **Relogin prohibited**.
7. Press the **Apply** button.

This completes the setup of the system shutdown options.

Limiting the rights to hide the interface components

Hiding all interface components can be forbidden. In this case the **Hide All** button in the **Main Control Panel** becomes disabled, and at least one **Display** object allowed for the current user will stay open.

By default, the operator is allowed to hide all interface components. To forbid the operator to hide all interface components, do the following:

1. Open the **Users** tab in the **System Settings** window.
2. Open the required **User permissions** object in the objects tree under the **User permissions** button.
   The settings panel for this object opens at the right side of the **System Settings** window.

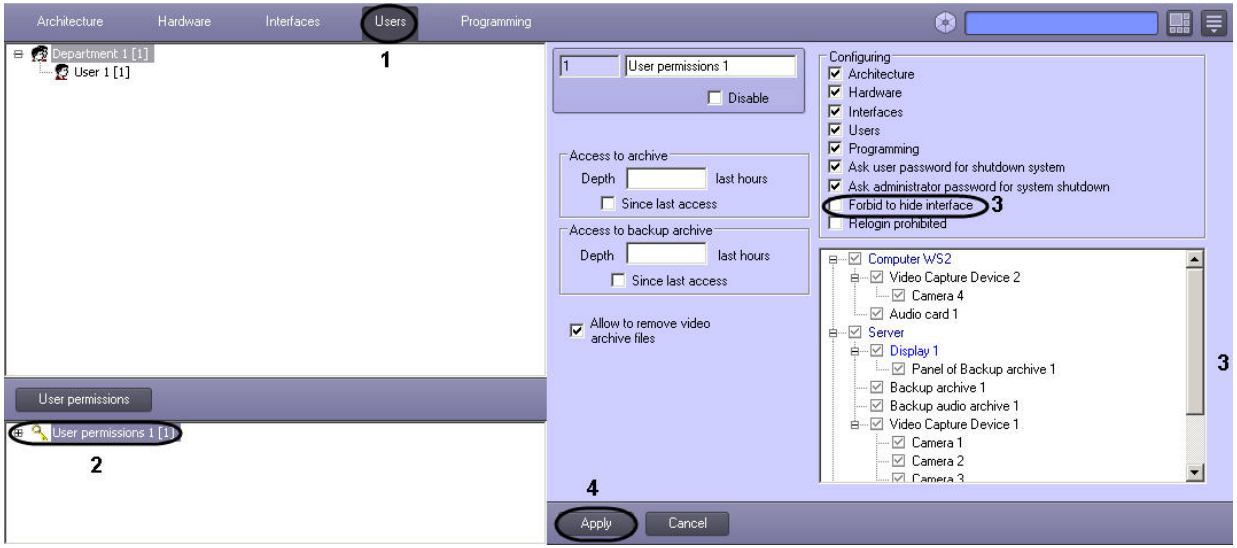

3. Check the **Forbid to Hide Interface** checkbox.
4. Press the **Apply** button.

This completes the process of forbidding the hiding of all interface components.

Permissions for working with archives

The operator can be forbidden to play the video recordings (from the videoserver, Long-term archive or Archiver) in the surveillance monitor.

In this case, the button for entering the archive on the surveillance monitor will not be displayed, and the functions for viewing, exporting and frame printing will be unavailable.

By default, the operators are allowed to play the archives.

Limiting access to archive playback

To limit access for Operator to playback the archive, do the following:

1. Go to the **Users** tab in the **System Settings** dialog box (1).
2. In the objects tree that is below the **User permissions** button in the the **Users** tab, select an object with the same name as the permissions to be changed (2).
   The settings panel for the **User permissions** object is displayed in the right part of the **System Settings** dialog box.

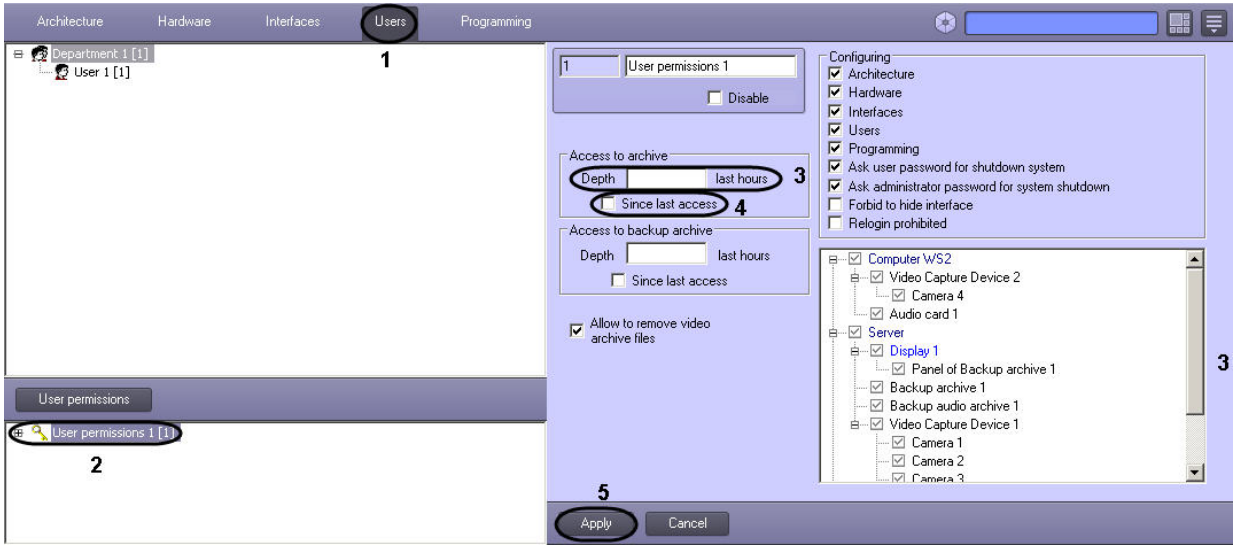

3. Specify the number of hours for viewing in the **Depth ___ last hours** field (3).

> **Note.**
> The number of last video archive hours for viewing is to be whole.

> **Note.**
> Input the 0 value in the **Depth ___ last hours** field todisable access to the archive.

4. If the hours since the last entrance to the system are counted, set the **Since last access** checkbox (4). If the hours are to be counted since the current moment, then leave the the **Since last access** box unchecked.

> **Note.**
> If the **Since last access** box is checked and the number of hours for viewing is specified, then last hours are counted till the registration moment.

> **Note.**
> If the **Since last access** box is checked, but the **Depth ___ last hours** field is left blank, the access to the main archive playback is not limited.

5. Click the **Apply** button (5).

The access to archive playback is now limited.

Limiting access to Long-term archive playback

To limit access for Operator to playback the Long-term archive, do the following:

1. Go to the **Users** tab in the **System Settings** dialog box (1).
2. In the objects tree that is below the **User permissions** button in the the **Users** tab, select an object with the same name as the permissions to be changed (2).

The settings panel for the **User permissions** object is displayed in the right part of the **System Settings** dialog box.

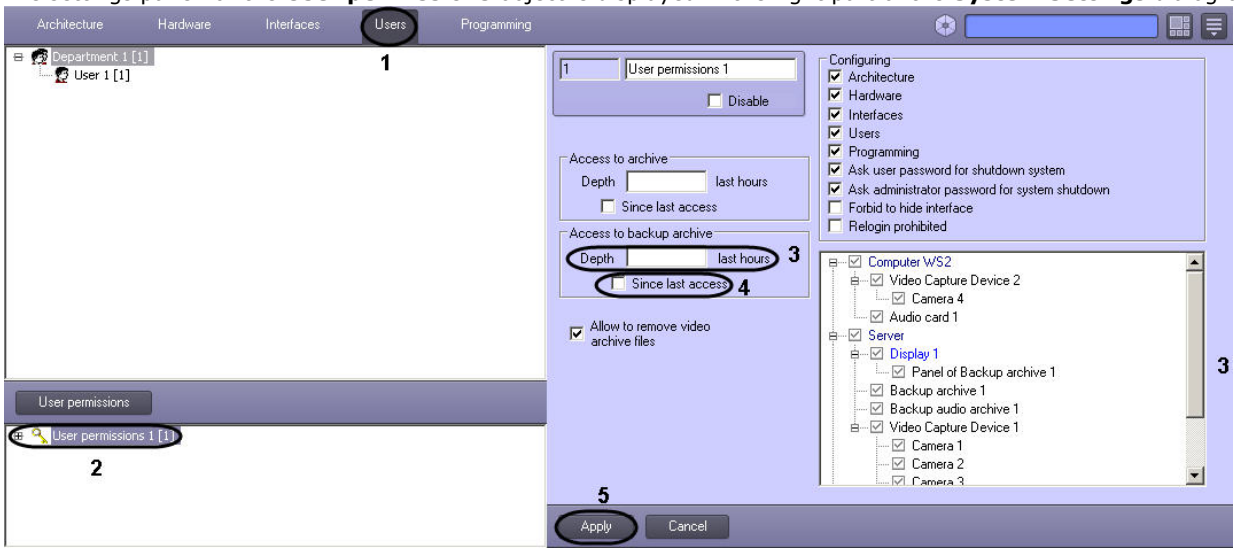

3. Specify the number of hours for viewing in the **Depth ___ last hours** field (3).

> **Note.**
> The number of last video archive hours for viewing is to be whole.

> **Note.**
> Input the 0 value in the **Depth ___ last hours** field todisable access to the Long-term archive.

4. If the hours since the last entrance to the system are counted, set the **Since last access** checkbox (4). If the hours are to be counted since the current moment, then leave the the **Since last access** box unchecked.

> **Note.**
> If the **Since last access** box is checked and the number of hours for viewing is specified, then last hours are counted till the registration moment.

> **Note.**
> If the **Since last access** box is checked, but the **Depth ___ last hours** field is left blank, the access to the Long-term archive playback is not limited.

5. Click the **Apply** button (5).

The access to Long-term archive playback is now limited.

Permission protecting archive files from rewriting

Recording to archive is performed on a loop in the *Intellect* software package (see the General information on video archiving section). Therefore, old archive recordings can be replaced by new ones. But sometime it is required to protect important recordings from loop recording. In such case permissions to protect files from rewriting are needed.

Protected files are moved to the PROTECTED folder in the VIDEO folder on the disk with archive. When the file is deprotected it is moved back to the folder from which it was taken (if it exists). If this folder was removed because of all files in it were rewritten, then the file will stay in the PROTECTED folder but won't be displayed in the Monitor. Later this file will be deleted by loop recording.

Give permissions to protect archive files from rewriting as follows:

1. Go to the **Users** tab in the **System settings** dialog box (1).

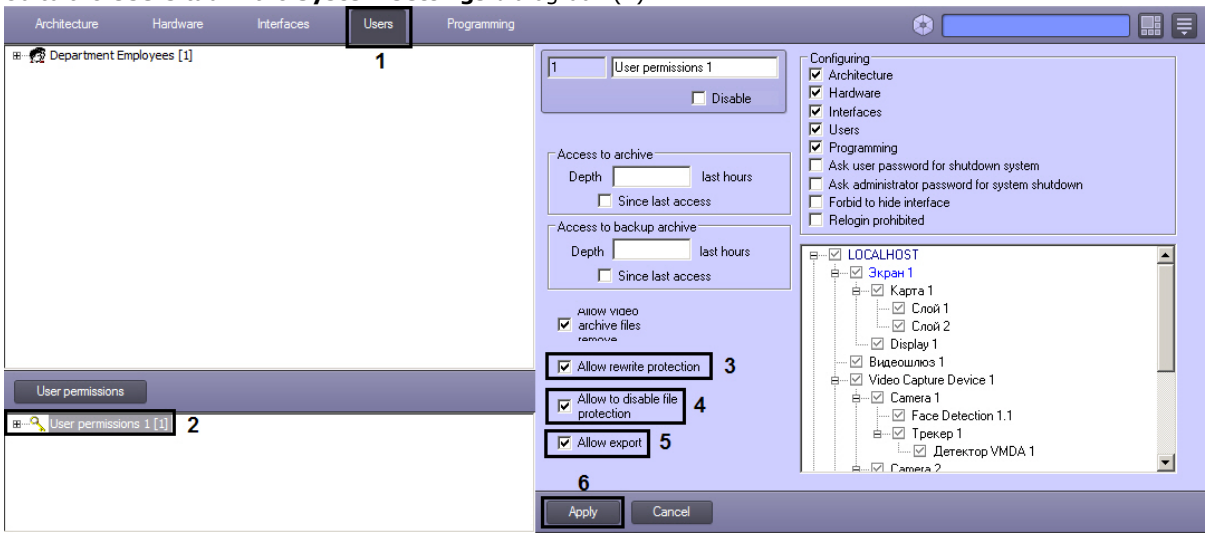

2. In the objects tree located under the **User permissions** button in the **Users** tab select the same-name object corresponding to the Operator access permissions which are to be changed (2).
3. The settings panel of the **User permissions** object will display on the right of the **System settings** dialog box.
4. To allow Operator to protect archive files from rewriting, set the **Allow rewrite protection** checkbox checked (3). Don't set this checkbox checked if the operator should not have this permission.
5. To allow Operator to disable protection of files protected from rewriting set the **Allow to disable file protection** checkbox checked (4). Don't set this checkbox checked if the operator should not have this permission.
6. To allow Operator to export protected files, set the **Allow export** checkbox checked (5). Don't set this checkbox if the operator should not have this permission.
7. Click the **Apply** button.

Permissions for the Operator to protect archive files from rewriting are now set.

Permissions to export archive

By default, the Operator is allowed to export archive files.

Forbid export of video files as follows:

1. Go to the **Users** tab in the **System settings** dialog box (1).

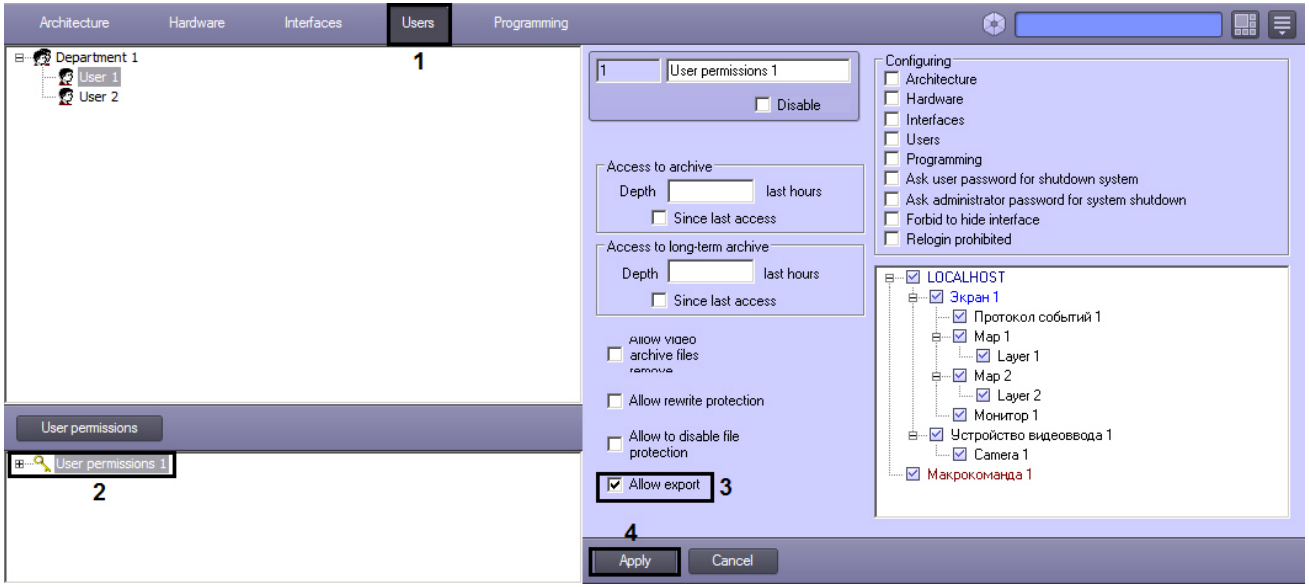

2. In the object tree located under the **User permissions** button in the **Users** tab select the same-name object corresponding to the Operator access permissions which are to be changed (2).
3. The settings panel of the **User permissions** object will display on the right of the **System settings** dialog box.
4. In order to forbid the Operator to export archive files, set the **Allow export** checkbox unchecked (3).
5. Click the **Apply** button (4).

Archive export permissions are now set.

Permission to remove archive video files

To allow the Operator to remove archive (both main and active) video files, do the following:

1. Go to the **Users** tab in the **System Settings** dialog box (1).
2. In the objects tree that is below the **User permissions** button in the the **Users** tab, select an object with the same name as the permissions to be changed (2).
   The settings panel for the **User permissions** object is displayed in the right part of the **System Settings** dialog box.

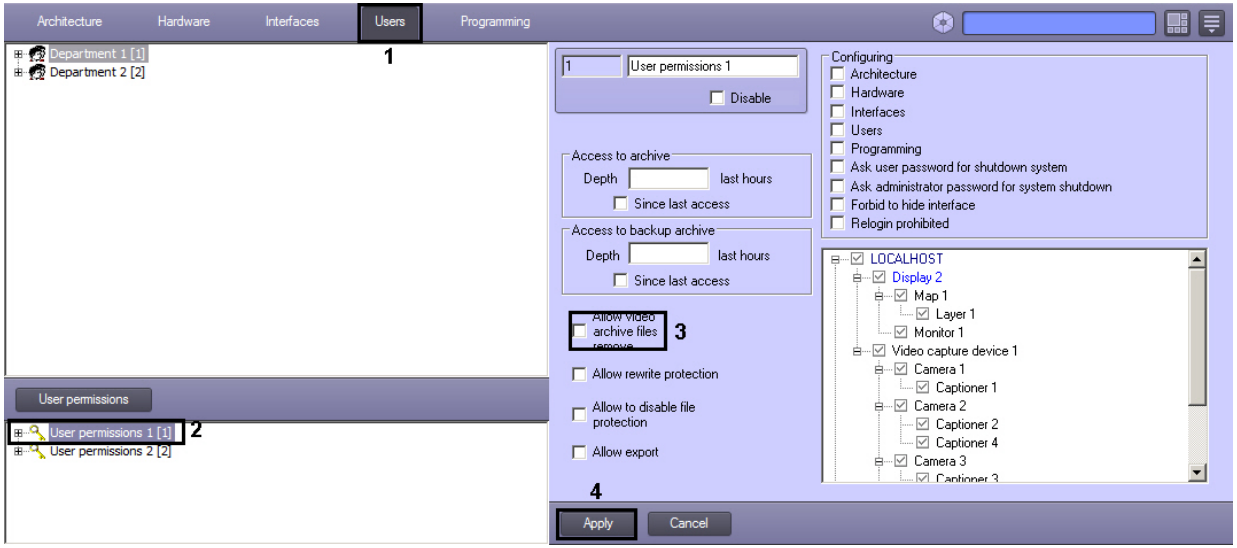

3. To allow an Operator remove video archive files, set the **Allow to remove video archive files** checkbox (3). If the Operator is not allowed to remove video archive files, leave this box unchecked.
4. To save the changes in INTELLECT ™ software, click the **Apply** button (4).

An Operator now can remove video archive files.

Note.
Video recordings are deleted as follows:

1. From the Video surveillance monitor interface – see Deleting video recordings from the archive section of Operator's Guide.
2. Using ARCH_DEL_RECORD reaction of the CAM object that is executed using the script or program – see *CAM* section of *Programming Guide* (not available in English).

Assigning the rights and password to operators for authorization in the Intellect

User accounts are stored separately from operator accounts in INTELLECT™ software. The same rights may be assigned to several operators. But the operator may be assigned only single rights.

To assign the rights and password to the operator for authorization in INTELLECT™, do the following:

1. Go to the **Users** tab in the **System settings** dialog box (1).
2. Select an object, corresponding to the rights account that have to be assigned to the operator, in the objects tree under the **User permissions** button (2).
3. Call the context menu by right-clicking upon the selected **User permissions** object (3). Select the **Add to rights** command in the menu.

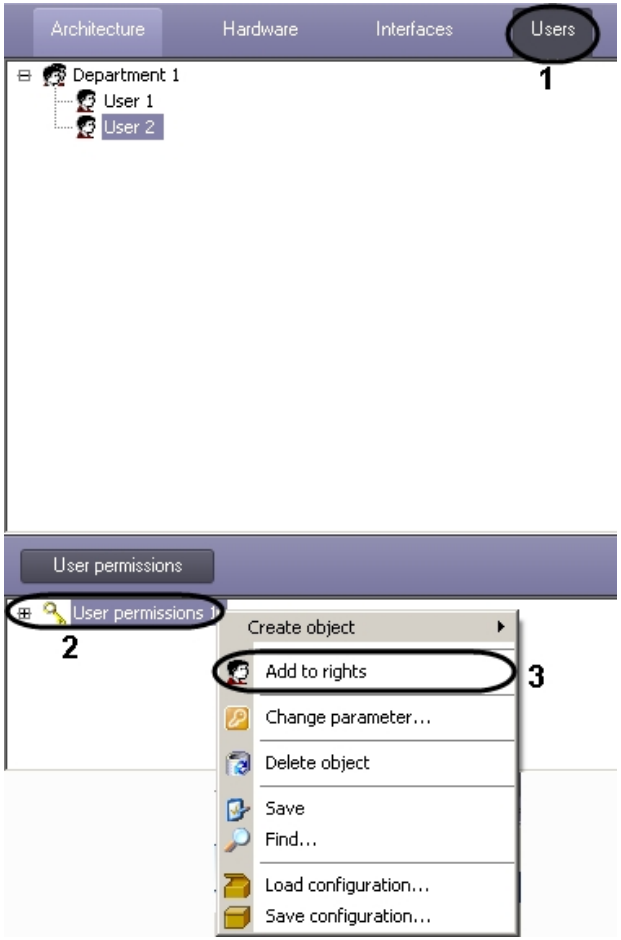

4. The **Add user** dialog box is displayed.

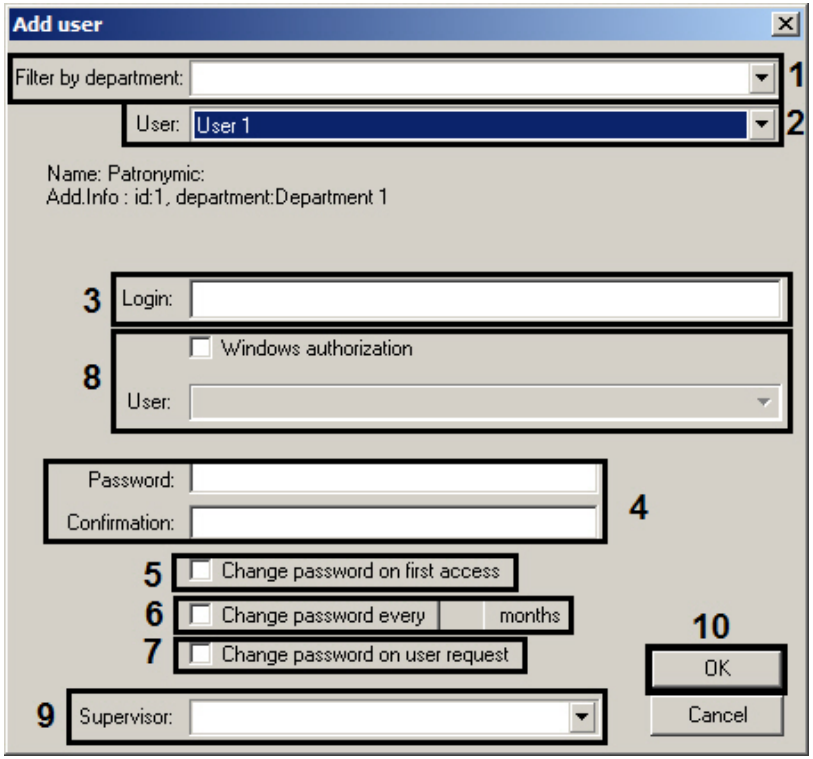

5. In the **Department** dropdown list select the department the user belongs to (1). If the department is selected, then accounts of users belonging to the department will be displayed in the **User** dropdown list. If the department is not selected, then accounts of all users registered in the system will be displayed in the **User** dropdown list.
6. Select the account name registered for operator in the **User** list (2).
7. In the **Login** field specify the login that will be assigned to the operator for authorization in INTELLECT™ (3).
8. In the **Password** field specify the password that will be assigned to the operator for authorization in INTELLECT™ (4).

> **Note.**
> If the password has not been specified, then access rights will not be assigned to the operator.

9. Respecify the password in the **Confirmation** field (4).
10. Configure the rules of password change by the user:
    a. Set the **Change password on first access** checkbox to ask the user to change the password on the first login to the system (5).
    b. Set the **Change password every __ months** checkbox to ask the user to change the password periodically (6). After setting the checkbox the text field becomes editable. Enter the period (in months) of request to change the password in this field.
    c. Set the **Change password on user request** checkbox to allow the user changing the password at any start system (7).
11. If the Windows account is to be used for user authorization in INTELLECT™, then set the **Windows authorization** checkbox checked and select the name of account in the **Use r** list (8).

> **Note.**
> When this way of authorization is selected, no other data is to be specified in the login and password fieldswhen INTELLECT™ is started and shut down. To start INTELLECT™ when password is requested, click the **Register** button. To shutdown INTELLECT™, click the **Log off** button.

12. If user log-in to the system shall be confirmed by another user, select the user which has to do the confirmation from the **Supervisor** drop-down list (9).

> **Note.**
> The user-supervisor has to be added to rights.

> **Attention!**
> All system users including supervisors have to log-in to the system by login and password instead of Windows user account in case of the authorization type by four-eyes rule (i.e. with the supervisor confirmation) is in use in the system (see 7-10 steps).

13. Click the **OK** button (10).
14. The object of the same name as the user account registered for the operator will be displayed in the child branch of the **User permissions** object.

This completes the process of assigning the rights and passwords to the operator for authorization in INTELLECT™.

Setting up the default user

To allow starting the system without specifying the password, default user is to be set up. The administrative, controlling and viewing functions will be limited according to the rights of the default user.

The user is to be registered in the system before becoming the default user.

To set the default user, do the following:

1. Go to the **Hardware** tab in the **System settings** dialog box (1).
2. Select the **Computer** object, representing the workstation the default user will be assigned to (2).
   The settings panel for this object opens on the right of the **System settings** dialog box.

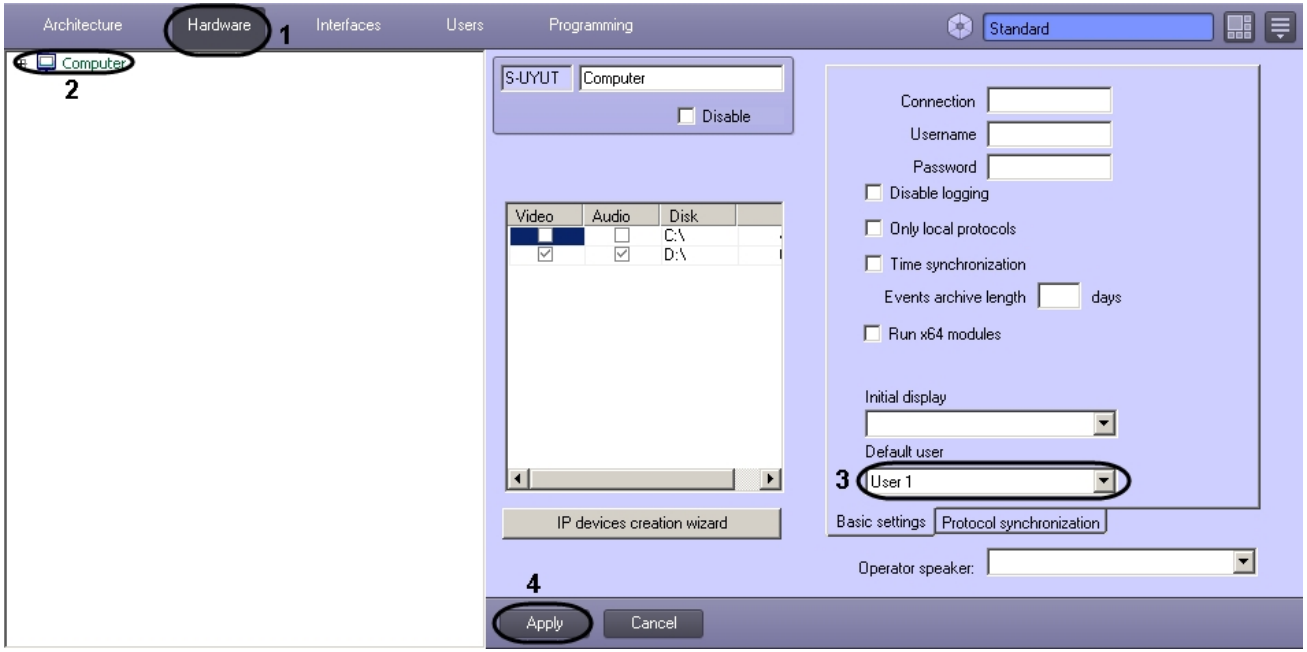

3. Select the user account in the **Default user** list (3).
4. Click the **Apply** button (4).

The administrative, controlling and viewing functions will then be limited according to the rights of the default user.

Configuring session auto termination when user is inactive

It is possible to configure the session auto termination when the operator is inactive for some period of time.

For this do the following:

1. Go to the settings panel of the **User permissions** object.

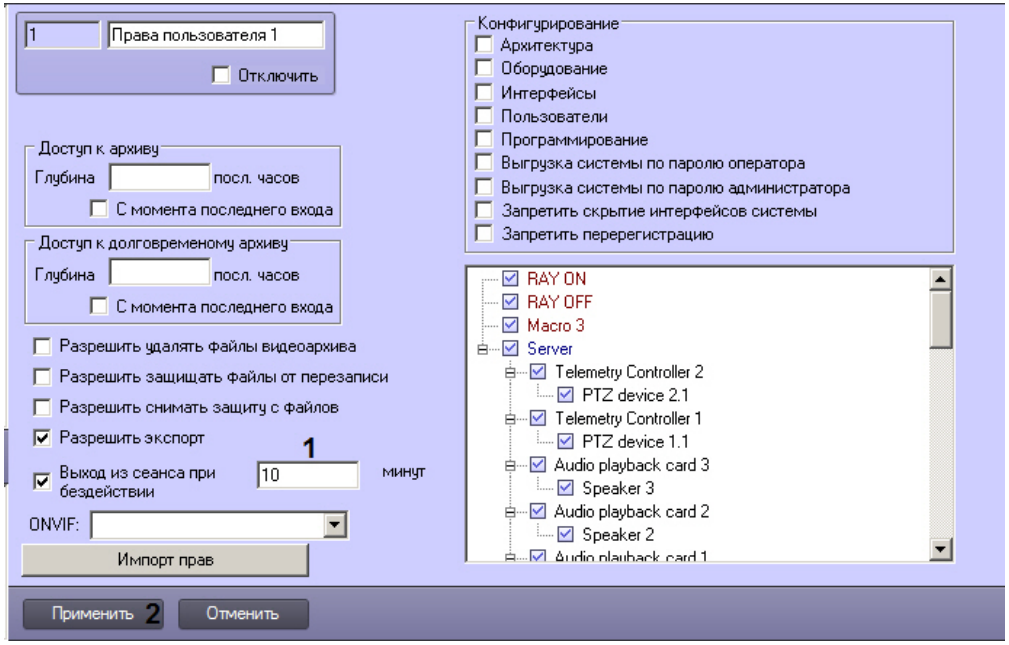

2. Set the **Terminate session when inactive __ minutes** (1) checkbox checked and in the corresponding field specify the time period (in minutes) at the end of which the session is to be terminated after the latest action of the user and the login window is to be displayed (see Intellect software start and shutdown section in Operator's Guide).
3. Click the **Apply** button (2).

The session auto termination when the user is inactive is now configured.

Configuration of the LDAP Service

General information about the LDAP Service module

The *LDAP Service* module offers the ability to perform the following actions:

1. Import data from an LDAP address book into the *Intellect* database.
2. Synchronize the *Intellect* database with an LDAP address book.

Important!
All entries stored in an LDAP directory have uid (unique user id) and ou (department) attributes. If these attributes are absent, then LDAP service fails to import and synchronize users between LDAP address book and *Intellect* DB.

If other attributes are used as unique id and department name in the address book, then these attributes are to be specified while configuring **LDAP Service** – see Configuration of correspondence between address attributes and Intellect DB fields.

When importing or synchronizing, users which have been manually created in the *Intellect* Software System before or after the import operation are not affected.

Importing data and synchronizing the *Intellect* database with an LDAP address book are accomplished using macros (the **LDAP Service** object's **Get all employees** action; see Creating and using macros for detailed information about macros). Use a **Timer** object for scheduled synchronization (see Creating and using the Timer object).

The following LDAP attributes are supported by *Intellect:*

LDAP attribute	Field in Intellect	Commentary
User		
sn	Surname (the **User** object, the name parameter)	If there is no sn attribute in return data, then this entry is ignored.
givenname	Name (the **User** object, the surname parameter)	
uid	ID in the external DB (the **User** object, the, external_id parameter)	If there is no uid attribute in return data, then a new employee is created i.e. there is duplication of employee. If another attribute is used as uid in the address book, then this attribute is to be specified while configuring **LDAP Service** – see Configuration of correspondence between address attributes and Intellect DB fields.
mail	E-mail address (the **User** object, the email parameter)	
telephoneNumber	(the **User** object, the phone parameter)	
title	(the **User** object, the post parameter)	
Department		
ou	Department name (the **Department** object, the name parameter)	If another attribute is used as ou in the address book, then this attribute is to be specified while configuring **LDAP Service** – see Configuration of correspondence between address attributes and Intellect DB fields.

Configuring the connection to the LDAP address book

The connection to an LDAP address book is configured on the **LDAP Service** object's settings panel. This object is created based on a **Computer** object on the **Hardware** tab of the **System Settings** dialog.

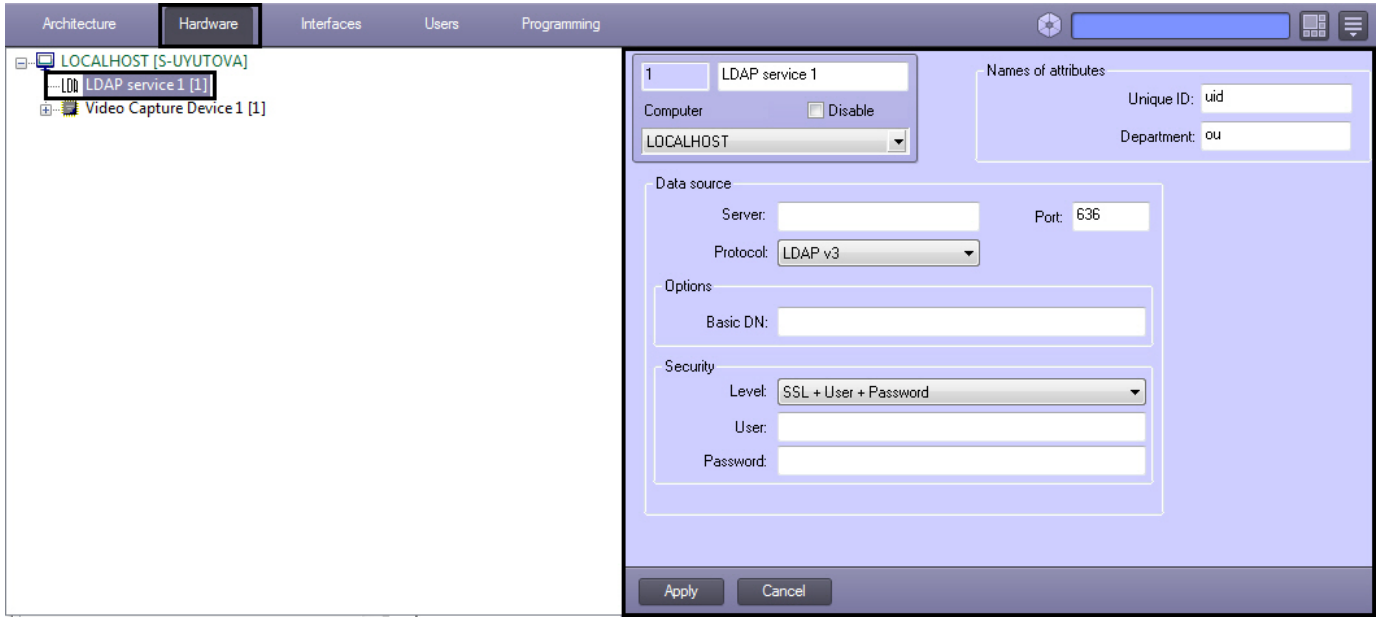

The connection to an LDAP address book is configured as follows:

1. Go to the **LDAP Service** object's settings panel.

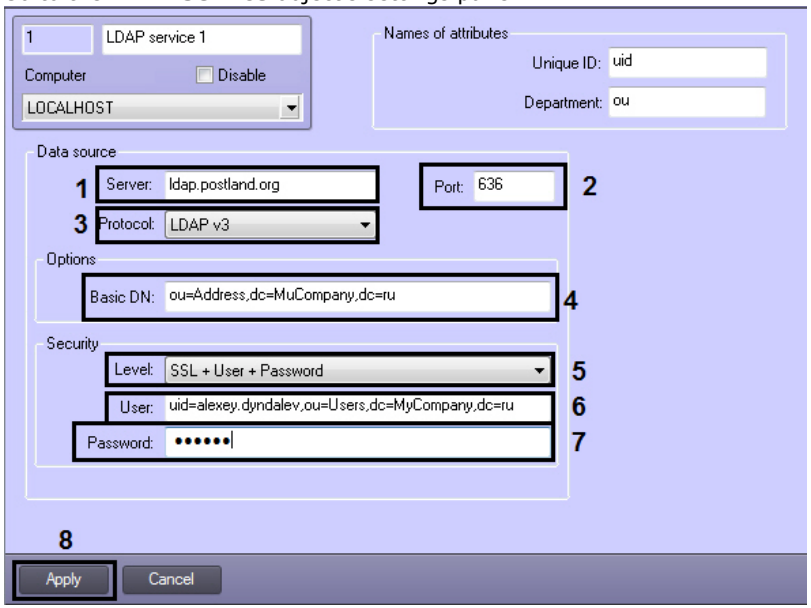

2. In the **Server** field specify then name of the server on which the LDAP is started (1).
3. In the **Port** field enter the number of the LDAP server port, specified in the previous step, designed to receive incoming connections (2).
4. Select the version of the LDAP protocol being used from the **Protocol** dropdown list (3).
5. In the **Basic DN** field specify the unique identifier of the LDAP base entry that will be the first when the search for users starts (4).

> **Example.**
> The example of how to fill in the **Basic DN** field: ou=Address,dc=MyCompany,dc=com

6. Select the connection security method being used by the LDAP server from the **Level** dropdown list (5).
7. In the **User** field specify the unique name of the user with rights to access the LDAP address book (6). *Intellect* will access the LDAP address book under this username.

> **Example.**
> The example of how to fill in the **User** field: uid=user.name,ou=Users,dc=MyCompany,dc=com

8. Enter the user's LDAP address book password in the **Password** field (7).

> **Note.**
> The username and password should not be entered if the selected connection security method does not require them.

9. To save the settings, click the **Apply** button (8).

This completes the process of configuring the connection to an LDAP address book.

Configuration of correspondence between address attributes and Intellect DB fields

Default correspondence between address attributes and *Intellect* DB fields is given in General information about the LDAP Service module section. The correspondence between attributes and fields for unique ID and department name can be modified.

Configure correspondence between address attributes and *Intellect* DB fields as follows:

1. Go to the settings panel of the **LDAP Service** object.

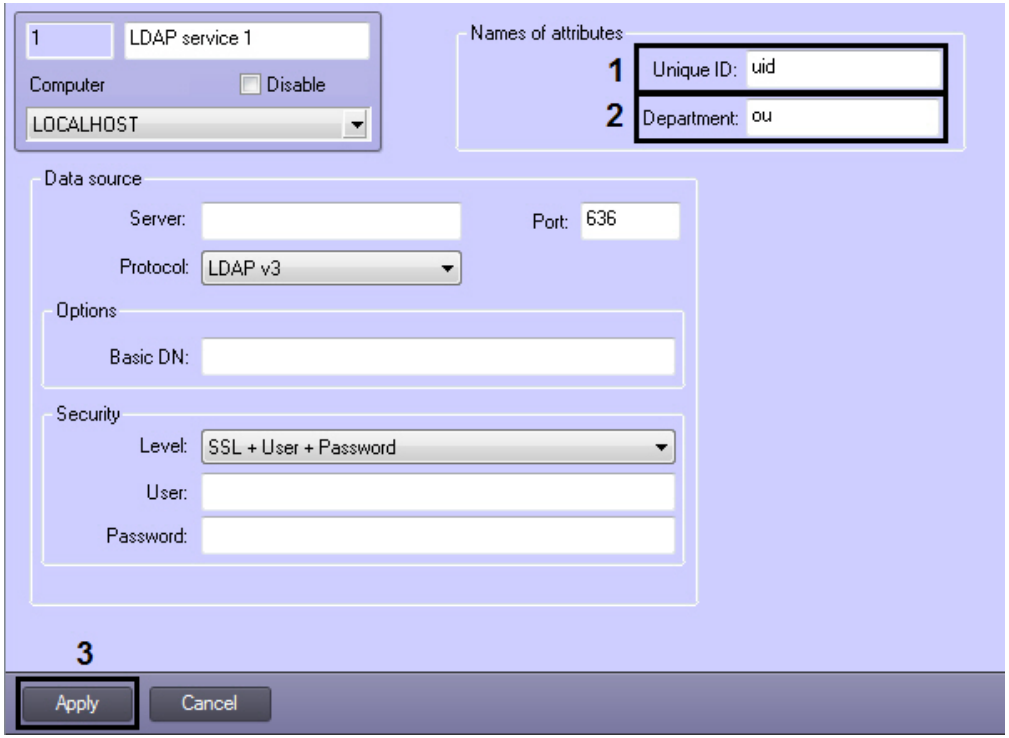

2. In the **Unique ID** field specify the attribute name that is a unique ID corresponding to external_id parameter of the **User** object in *Intellect* (1).
3. In the **Department** field specify the attribute name that is the name of the department and corresponding to the name field of the **Department** object in *Intellect* (2).
4. To save the changes click the **Apply** button (3).

Configuration of correspondence between address attributes and *Intellect* DB fields is now complete.

Examples of LDAP Service configuration

Find below some examples of the LDAP Service object configuration for use with different systems:

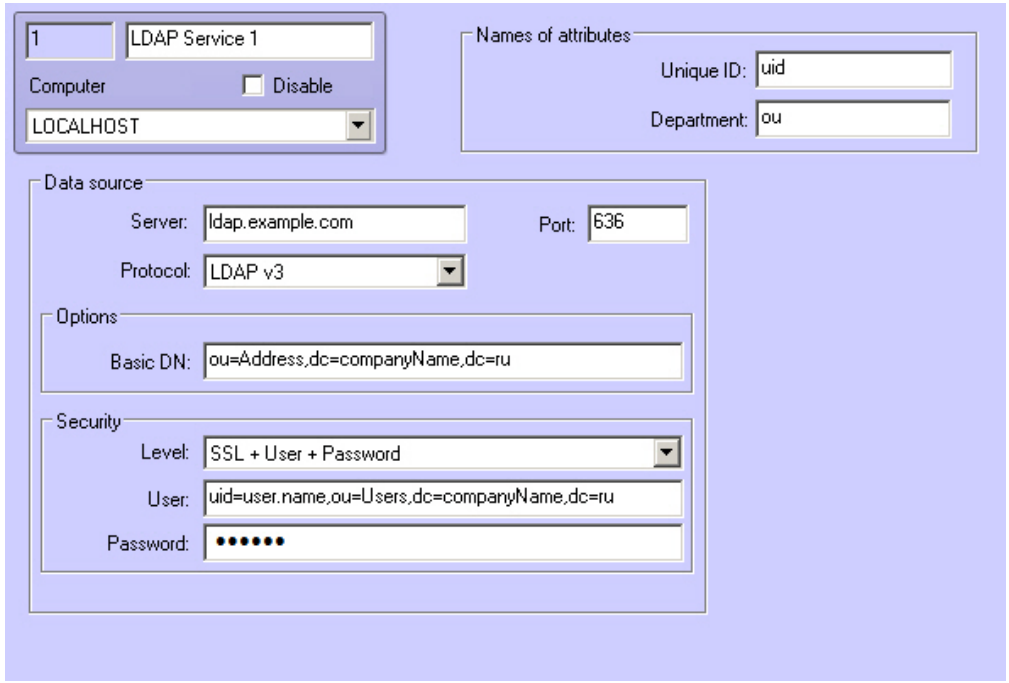

For LDAP address book

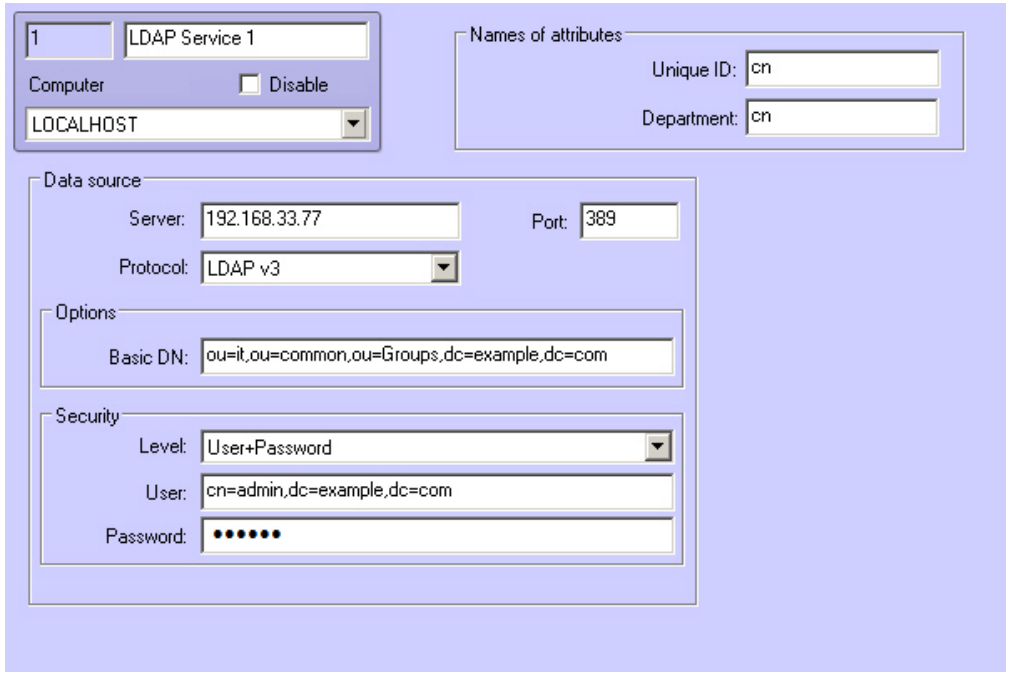

For OpenLdap

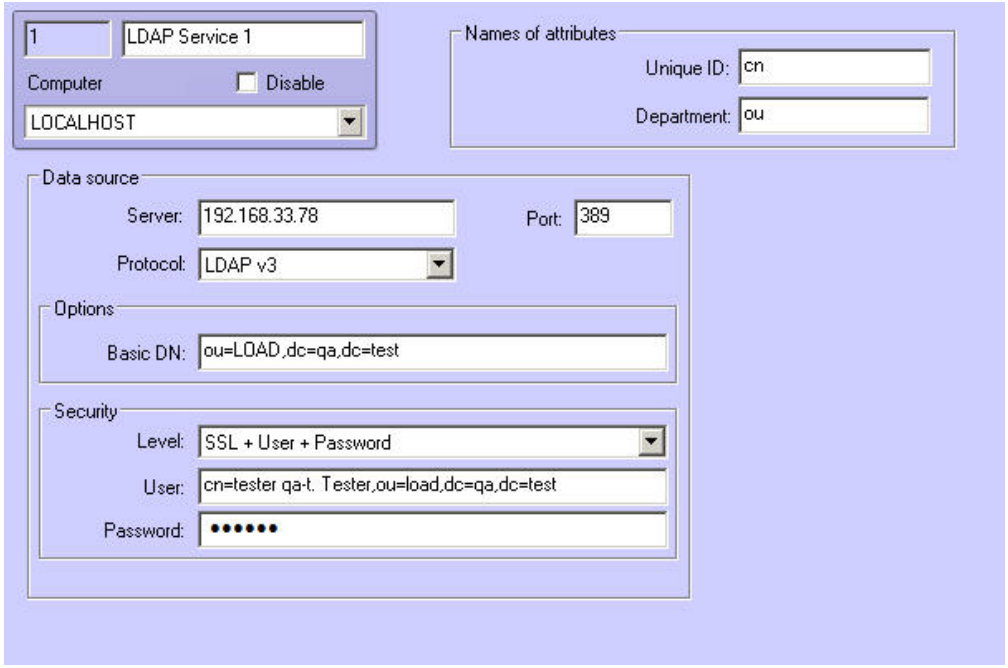

For Active Directory based on Windows Server 2012 R2

System settings (the Programming tab)

Configuring internal synchronization

By default *Intellect* uses internal synchronization, i.e. there is data interchange between computers in the distributed configuration (see Configuring the interaction of distributed system components):

1. If a computer is in the distributed system, then all the events are sent just as they appear. This is online synchronization.
2. If a computer lost connection with the distributed system and cannot interchange the events with other computers, then events that are to be sent to this computer are stored in the database and sent on it after the computer is reconnected. This is offline synchronization.

If the computer has not been in the distributed system for too long, then the accumulated sequence of events can be quite long and processing of all these events can take much time. Thus offline synchronization can be disabled.

Online synchronization can also be disabled, i.e. events won't be sent.

Note.
Internal synchronization, both offline and online, can be enabled and disabled for all computers in the distributed system.

Important!
DB synchronization must be configured when any internal synchronization mechanism is disabled — see Database synchronization setup and Configuring the Event Viewer

databases synchronization.

Configure internal synchronization as follows:

1. Go to the **Programming** tab of the **System settings** dialog box (1).

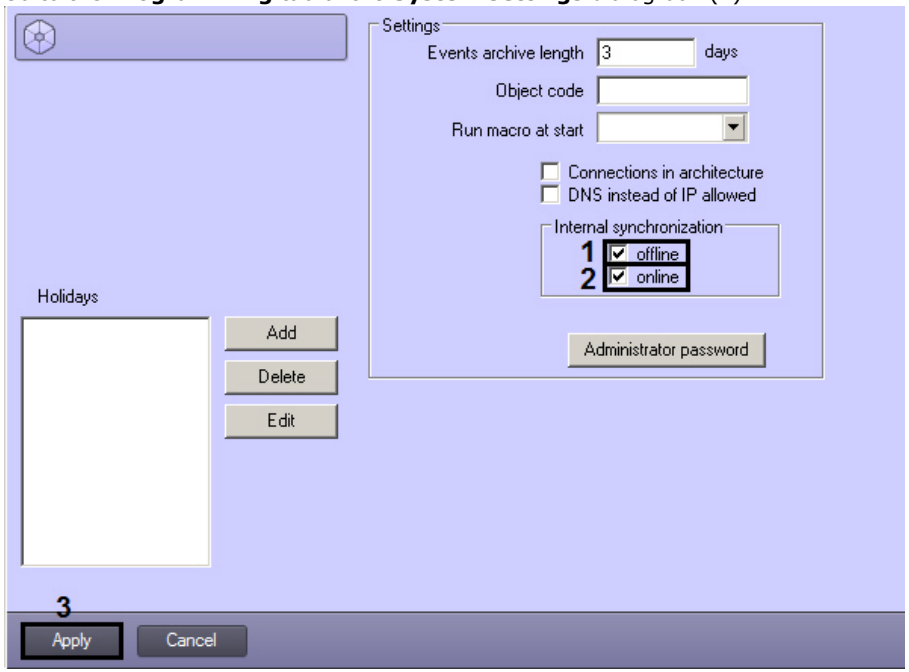

2. Select the **Security zone** object in the tree (2). The settings panel of this object is displayed on the right side of the **System settings** dialog box.
3. To disable offline synchronization, set the **offline** checkbox unchecked in the **Internal synchronization** group (3).
4. To disable online synchronization set the **online** checkbox unchecked in the **Internal synchronization** group (4).
5. Click the **Apply** button (5).

Internal synchronization is now configured.

Connection of objects with cameras

In the Intellect software package it is possible to link cameras to objects.

Objects assigning is performed on the settings panel of the **Objects connection** object on the **Programming** tab of the **System settings** dialog window.

It is possible to link several cameras to each object and several and several objects to each camera. Also it is possible to link groups of objects and cameras.

To configure connection of objects with cameras, do the following:

1. Go to the settings panel of the **Objects connection** object.

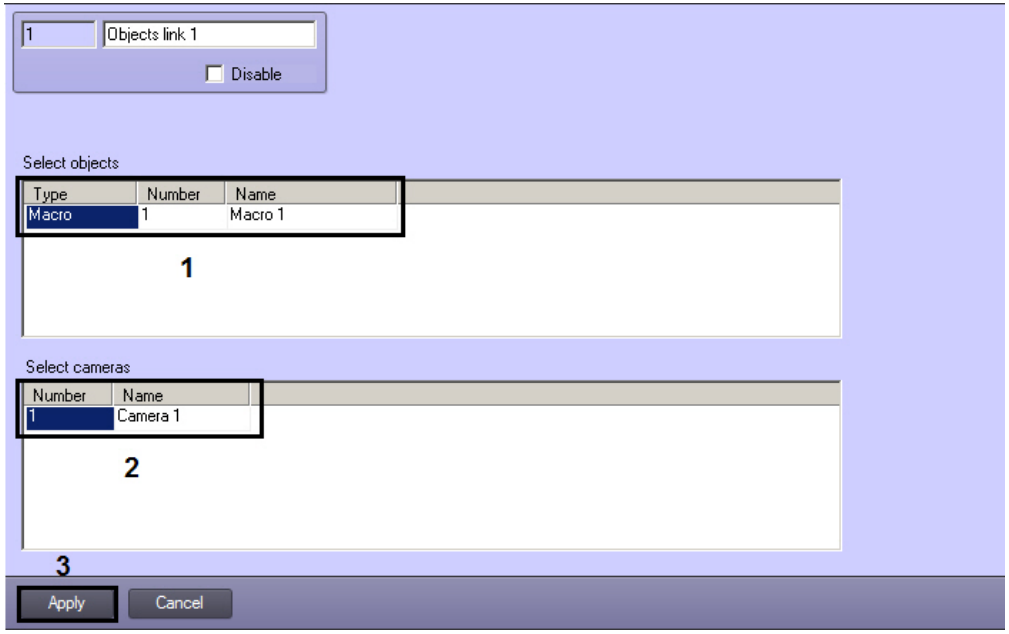

2. In the **Select object** table specify type, identification number and name (is entered automatically after select type and id of camera) of all required objects.
3. In the **Select camera** table specify identification number and names of all required cameras.
4. To save changes click the **Apply** button.

To get list of objects linked to camera and list of cameras linked to object, use the script (see The GetLinkedObjects method section).

Configuring of connection objects with cameras is completed.

Creating and configuring Macro events

Macro events are designed for controlling required events in the defined time interval and for generating new events in the system in case of appearing or not some chain of events.

Macro events are presented by **Macro event** objects in the *Intellect* software.

Generated macro event can be used in macros or scripts to perform some actions.

The **Macro event** object is created and configured on the basis of **Macro events** object on the **Programming** tab of the **System settings** dialog box.

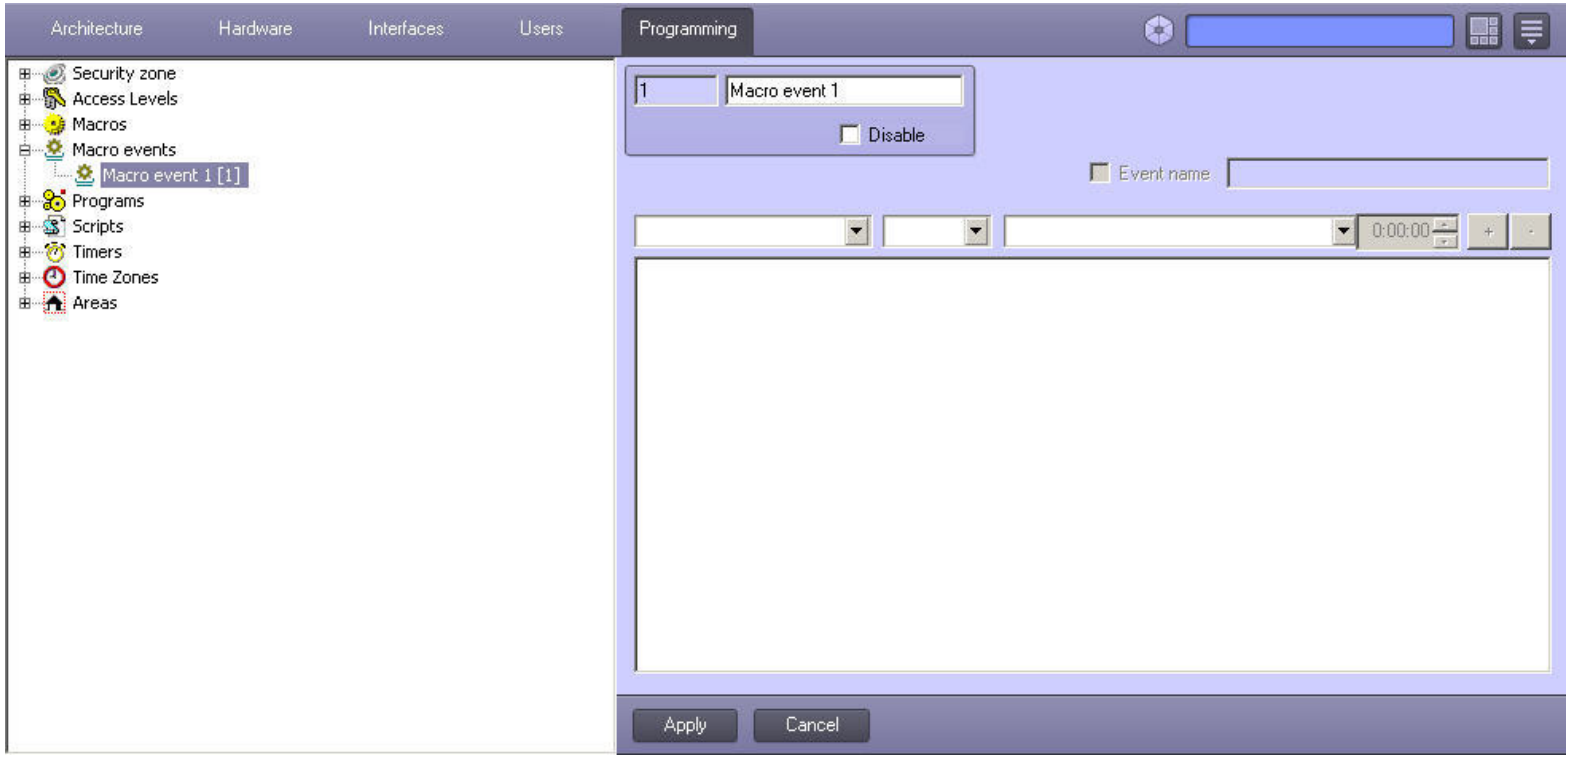

Configuring the macro events

To configure macro events, do the following:

1. Go to the **Macro event** object's settings panel.

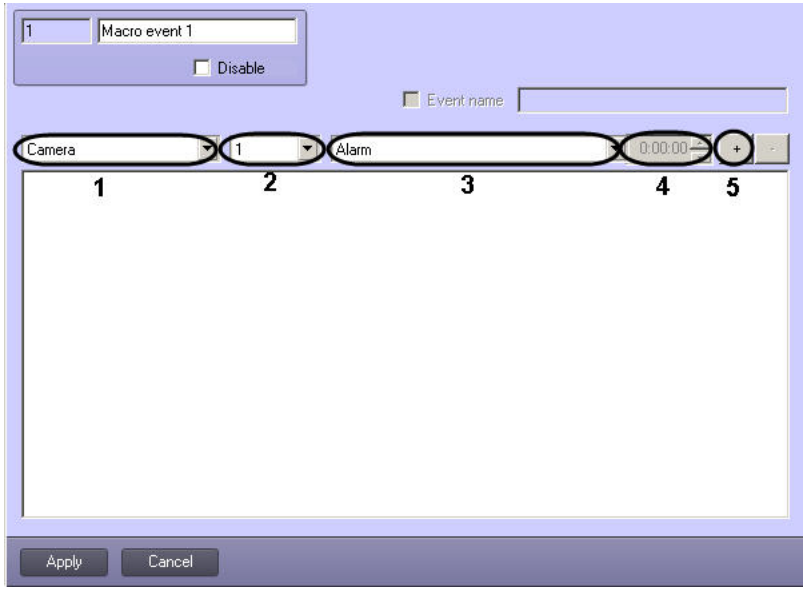

2. Select the object type from the drop-down list (1).
3. Select the object ID from the drop-down list (2) if it's required. If the object ID is not selected, then events from all objects of such type will be considered in.
4. Select the event type from the drop-down list (3). All events from the selected object or objects will be considered in if the event type is not selected.
5. In the field (4) enter the time period in HH:MM:SS format during which the selected event occurrence after occurrence the previous one is waiting for. The occurrence time for the first event in the chain is not specified. For other events the time of waiting is 15 seconds on default.

Note.
To edit the time-out period select the occurrence time of event in the chain and enter the time again in the text field.

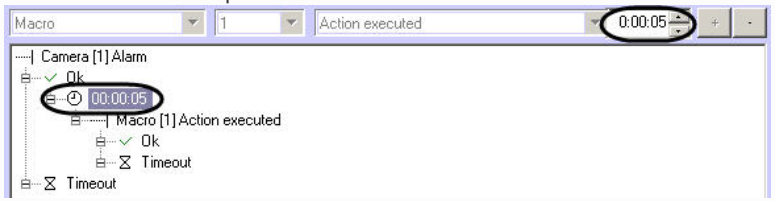

6. Click the **+** button (5). The event will be added to the chain with name in the "Object type [object number] Event type" format. Nodes corresponding to the event occurrence on the specified time interval (**Ok**) and nodes corresponding to the expiration of time-out the event waiting (**Timeout**) will be created on the basis of the event.

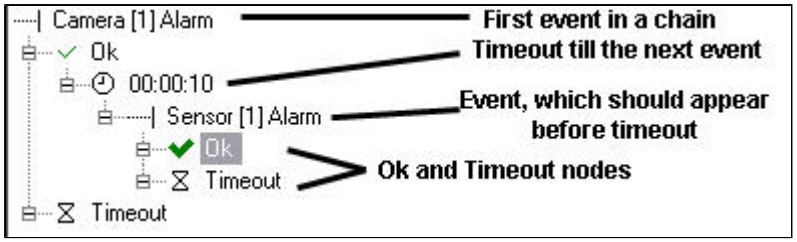

7. Set the next event in the chain in case of performing the previous chain of conditions:
   a. Select the **Ok** node (6).

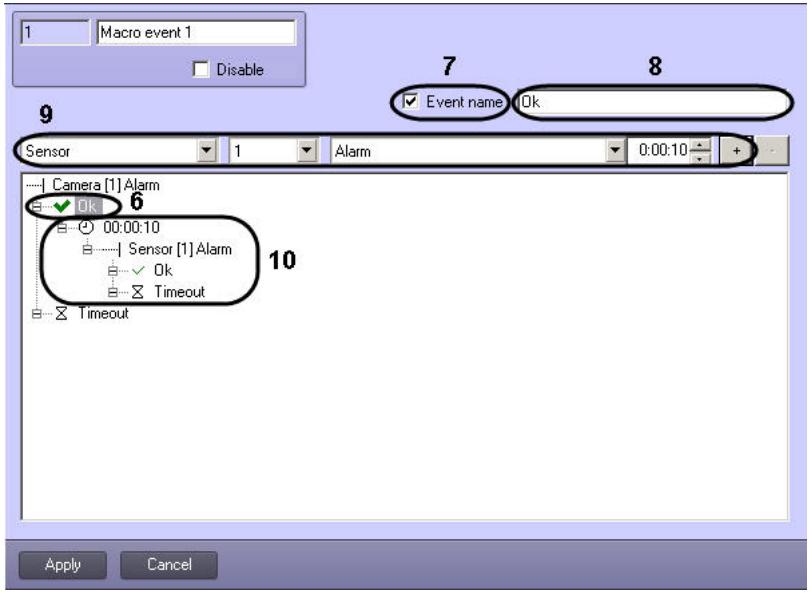

   b. Set the **Event name** (7) checkbox and enter the name of generated event in the text field (8) in case of macro event is to be generated when all previous events in the chain have occurred. The node will be marked by ✔ sign.

> **Note.**
> The **Event name** is limited by 120 symbols.

   c. Set the Event type (9) as it was performed in 1-5 steps.

   The event will be added to the chain on the basis of the **Ok** node (10).

8. Set the next event in the chain in case of the time-out of waiting the performing previous chain of conditions was expired:
   a. Select the **Timeout** node (11).

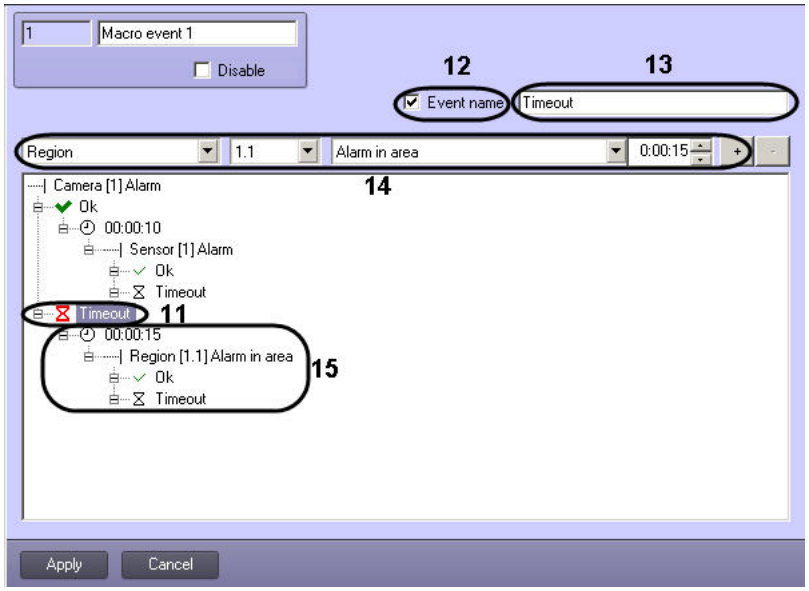

b. Set the **Event name** (12) checkbox and enter the name of generated event in the text field (13) in case of macro event is to be generated when all previous events in the chain except the last one have occurred. The node will be marked by ⧖ sign.

> **Note.**
> The **Timeout** condition created on the basis of the first event in the chain is performed if only the first event of the chain has occurred for the specified time.

> **Note.**
> The Event name is limited by 120 symbols.

c. Set the **Event** type (14) as it was performed in 1-5 steps.

The event will be added to the chain on the basis of the **Timeout** node (15).

9. Repeat steps 7 and 8 with **Ok** and **Timeout** nodes created on the basis of new events if it's required.
10. Click the **Apply** buttons.

> **Note.**
> To delete the event from the chain select its name or occurrence time and click the **–** button. All underneath events in the chain will be also deleted.

Configuring the macro events is completed.

Example of macro event

It is required to generate events with the “Alarm by camera and sensor” name, when alarm by Sensor 1 is initiated less than in 5 seconds after alarm by Camera 1. Generate the event with the “Time-out of alarm by sensor” name if alarm by sensor is not initiated or initiated more than in 5 seconds after alarm by camera.

To perform it, create the **Macro event** object and configure the chain of events by one of the following ways:

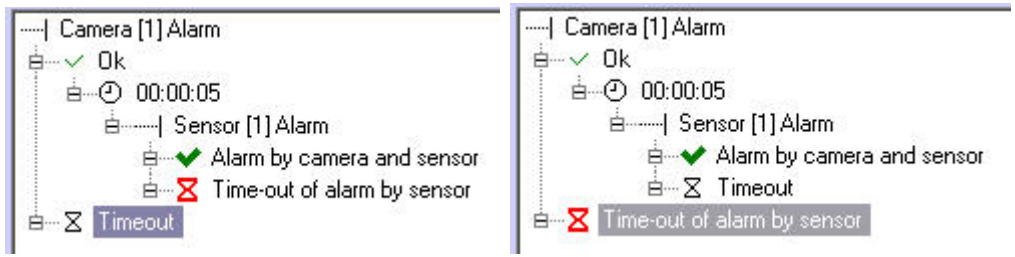

Creating and using macros

A macro in the *Intellect* system is a system object, designed to maintain logic interaction among other system objects. The **Macro** object settings define the conditions and the corresponding actions. The **Macro** objects are used for automatic controlling of the surveillance system.

Creating macros

To create a macro, do the following:

1. Create the **Macro** object.
2. Choose the **Macro** object in the objects tree of the **Programming** tab.
3. Specify the name of the **Macro** object.
4. Press the **Apply** button.

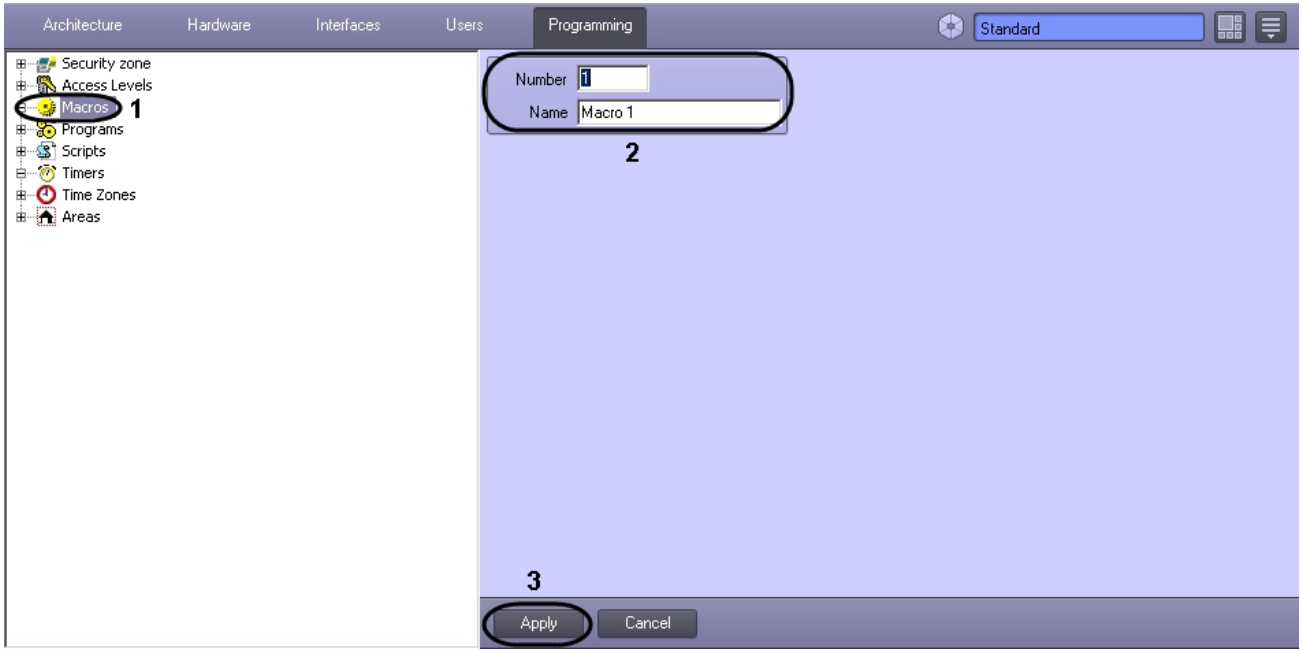

After the **Macro** object is created, its settings panel opens.

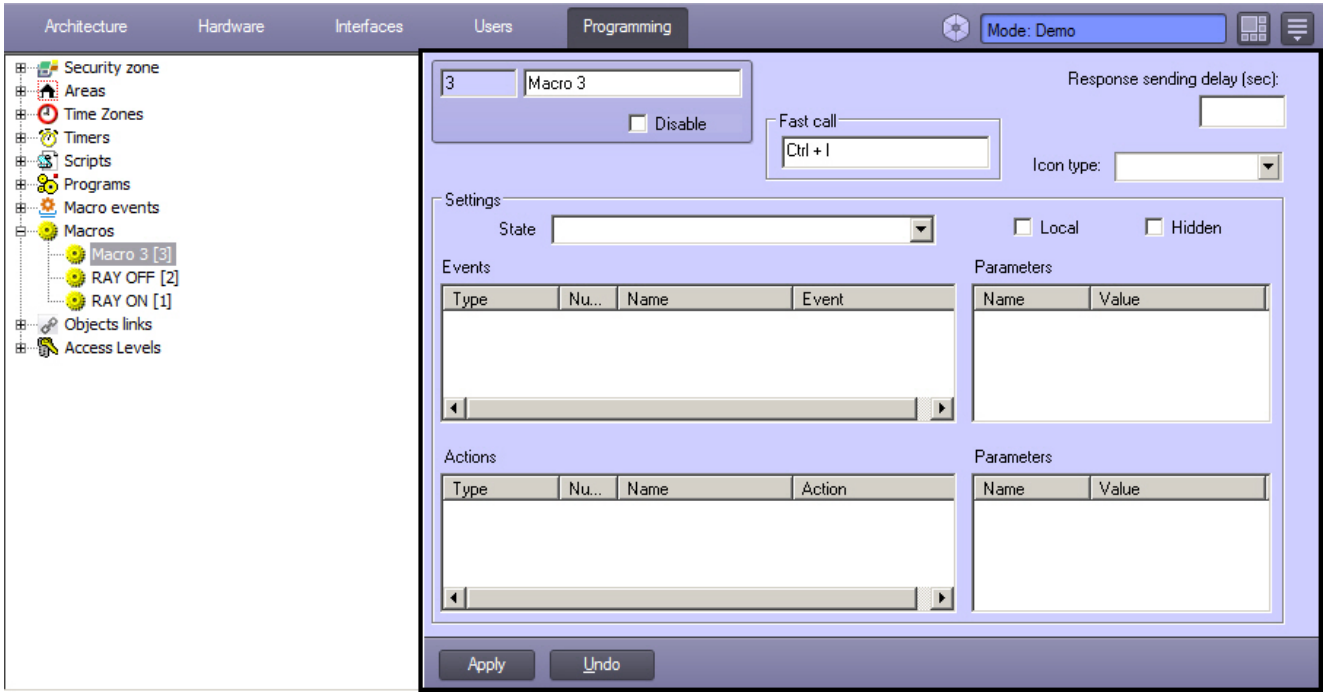

5. Specify the parameter values. Table below gives the description of the parameters.

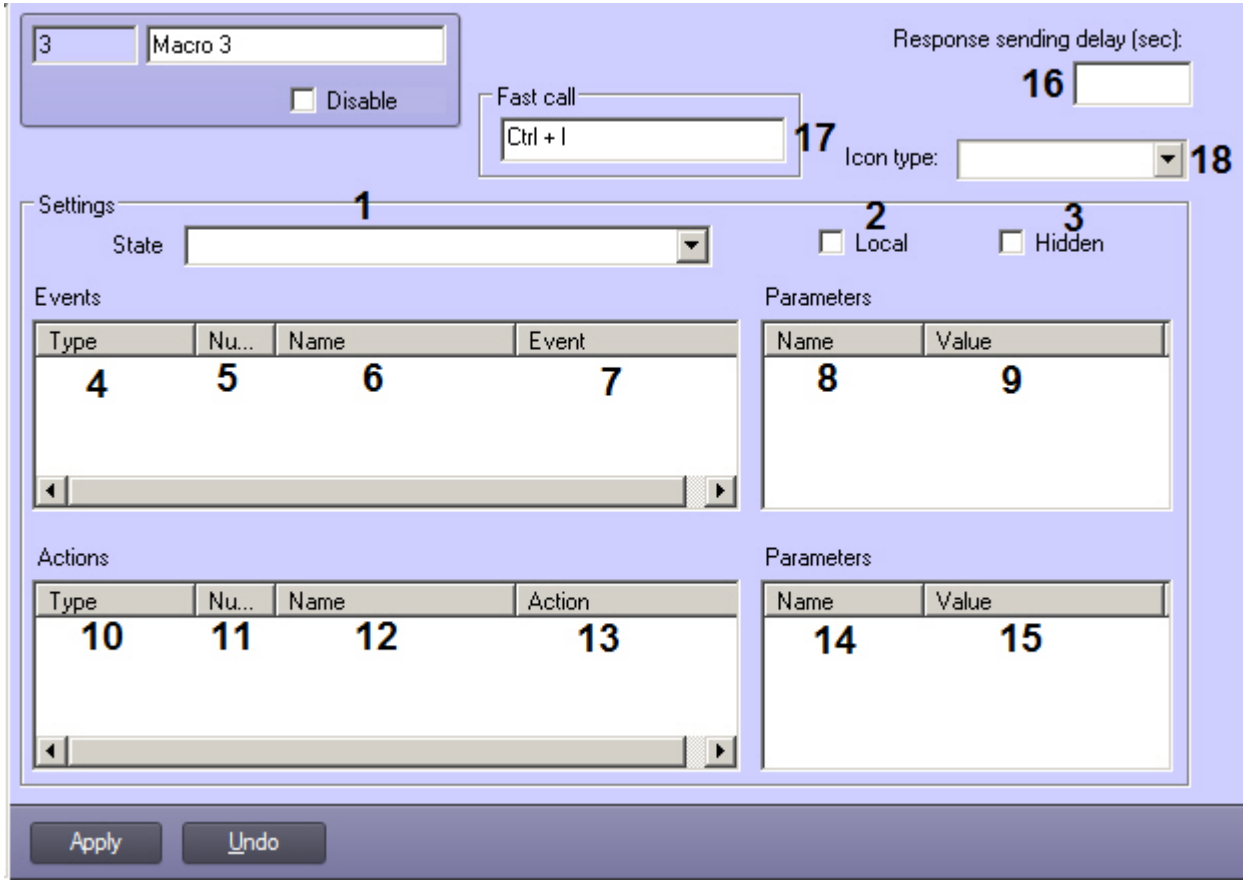

Table 8.23—1

№	Name	Field type	Description	Format	Default value	Value range
			Settings group			
1	State	Select from drop-down list, or type in	The message to display during macro execution. A Standard value is selected, no message is displayed.	-	Empty	A list of available messages plus Standard.
2	Local	Checkbox	If the checkbox is checked, the macro can be executed on the local computer only.	-	No	**Checked** - local only. **Unchecked** – any computer.
3	Hidden	Checkbox	If the checkbox is checked, the macro cannot be executed manually.	-	No	**Checked** – execute. **Unchecked** – don't execute.

4	Events table					
	Type	Drop-down list	Defines the object to be the source of the event that will trigger this macro.	-	Empty	All active device and module objects
5	Number	Drop-down list	Defines the number of the object to be the source of the event that will trigger this macro.	-	Empty	The numbers of all active device and module objects. If the **Computer** object is selected in the **Type** column, enter its name here.
6	Name	Enters automatically on right-click	Information type	-	Empty	Enters automatically according to the **Type** a nd **Number** values
7	Event	Drop-down list	Event type	-	Empty	The list of registered event types
Parameters table (is set, when parameter should be set for events, selected in Events table)						
8	Name	Automatically	Displays name of event's parameter	Latin alphabet, digits and characters	Empty	Depends on the event, selected in **Events** ta ble
9	Value	Entering of the text into the field	Set the value of event's parameter	Latin alphabet, digits and characters	Empty	A line of any characters. The number of characters is from 1 to 250.
	Actions table					
10	Type	Drop-down list	Defines the object to be the source of the event that will trigger this macro.	-	Empty	All active devices and module objects
11	Number	Drop-down list	Defines the number of the object to be the source of the event that will trigger this macro.	-	Empty	The numbers of all active devices and module objects. If the **Computer** object is selected in the **Type** column, enter its name here.
12	Name	Automatically	Displays name of the selected object	Name of objects, registered in the system and of specified type	Empty	A line of any characters. The number of characters is from 1 to 60.
13	Action	Drop-down list	Reaction to be executed for the selected object when the event is registered	-	Empty	The list of registered reaction types for the selected object type
Parameters table (is set, when parameter should be set to perform action, selected in **Actions** table)						
14	Name	Automatically	Displays name of action's parameter	Latin alphabet, digits and characters	Empty	Depends on the action, selected in **Actions** t able
15	Value	Entering of the text into the field	Set the value of action's parameter	Latin alphabet, digits and characters	Empty	A line of any characters. The number of characters is from 1 to 250.
Outside the groups						
16	Response sending delay (sec)	Entering of the value into the field	Sets time period (in seconds) that must pass after events specified in the **Even ts** column occur and before executing reactions specified in the **Actions** colum n. ***Note.*** *If the events reoccur before the specified time period expires, the reaction execution wait period is prolonged, i.e. reactions will be executed only once when events do not reoccur over the specified period.*	Integer number	-	>0

17	The **Fast call** field	Left-click in the field and click the required key combination	Sets a shortcut for a macro. *Note. When creating macros with the same combination of hot keys, the behavior is not defined: when clicking a key combination, one of these macros will work, but not both.*	Key combinations	No	Some keys of the main or numeric keyboard, as well as these keys in combination with Shift, Ctrl and Alt.
18	The **Icon type** drop down list	Select in the dropdown list.	Sets a set of icons for displaying a macro on the map. *Note. Changing the icon appearance will take effect after restarting the map interface. To restart the interface, restart Intellect or log in once again under the corresponding Operator account.*	Available icon appearances on the map	-	Macro 1 - Macro 7, empty value.

Note.
As action's parameter **Play sound file** may be used only files of WAV format. Otherwise action **Play sound file** is not carried out.

Note.
If required action, event or parameter is absend in the corresponding table, add it in the ddi-file with the ddi.exe utility (see Editing the external setting file (intellect.ddi) using the ddi.exe utility)

Note.
Compressed sound in WAV format may be played back incorrectly, that's why it is strongly recommended to play back only PCM WAV files. Maximum values of frequency and depth of files digitization for playing back are determined by technical characteristics of digital to analog converter of the installed video card.

6. Click the **Apply** button to save the settings.

Examples of macros

Macros are used to automate the actions of the operator. They inform the operator or administrator about software failures, automate the backup process, etc.

Let's consider the macro that generates the voice message and sends it to the specified telephone number. The message should be sent on a condition – the 'write to disk' error. To create the macro for sending the voice message, do the following:

Create a **Macro** object in the objects tree of the **Programming** tab .

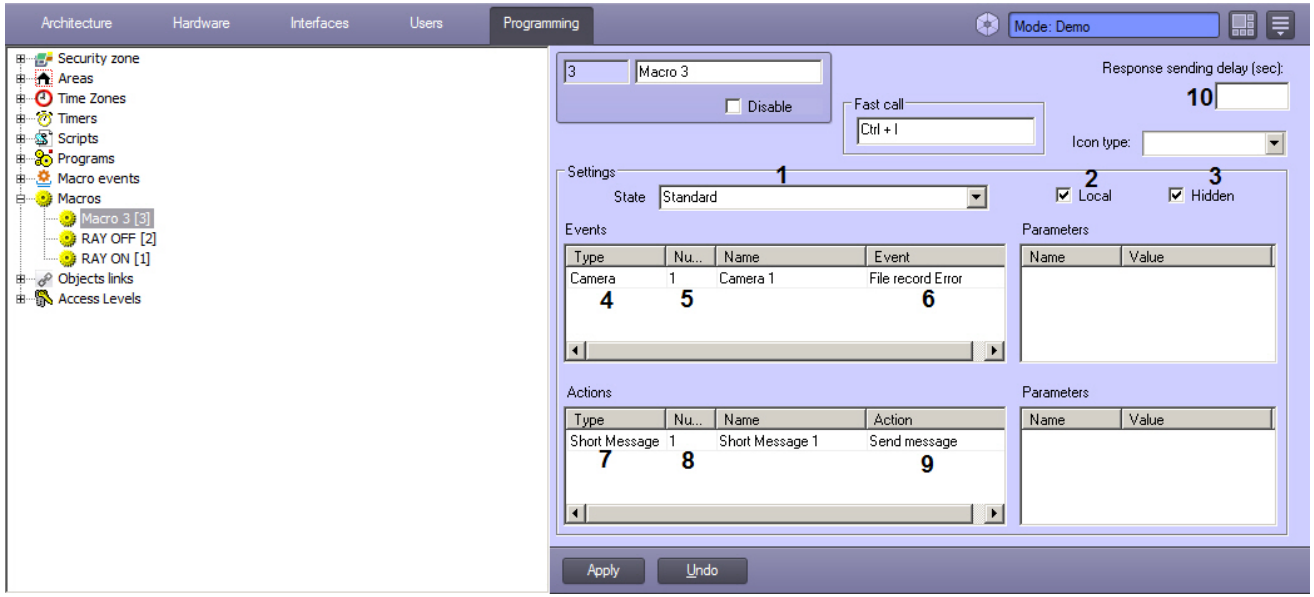

1. Specify the **State** parameter (1).
2. Check the **Local** checkbox if the macro should be sent from the local computer only, if necessary (2).
3. Check the **Hidden** checkbox if the macro should be sent automatically, if necessary (3).
4. If the manual start of macros from the main control panel of Intellect software should be forbidden, set the **Hidden** checkbox (3).
5. Select the number of the object to be the source of the event generating the message (4, 5).
6. Select the name of the event to activate sending of the message (6).
7. Choose the **Voice Message** object in the **Type** column (7).
8. Choose the number of the **Voice Message** object to be sent by the macro (8).
9. Choose **Send Message** in the **Action** column (9).
10. If a voice message is to be sent soma time later the event occurs, specify the **Response sending delay (sec.)** parameter value (10).
11. Press the **Apply** button.

If the **Hidden** checkbox is not checked, the macro will need manual activation, which is done by clicking the **Run** button in the **Main control** menu and by selecting the macro in the list.

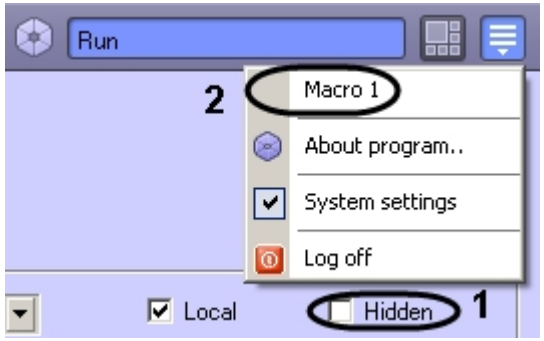

Note.

The **System settings** item is also available in the menu that appears on clicking the icon in the Windows notification area (system tray), or by short-time holding the "hot" button F8.

Manual activation of the macro is indicated by the tick next to the macro name in the **Run** menu.

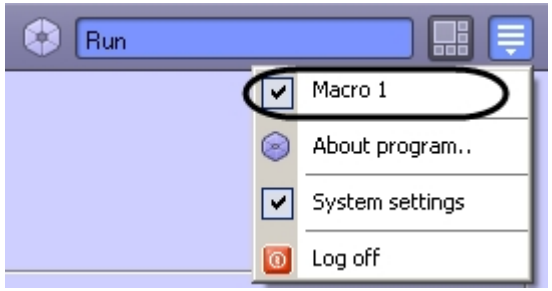

Creating and using the Timer object

The **Timer** object sets a time point upon reaching which an action (a macro) is executed. Thus, the **Timer** object is used together with the **Macro** object and for other objects setup.

Creating and configuring the Timer object

To create a **Timer** object, do the following:

1. Open the **Programming** tab.
2. Create a **Timer** object under the **Timers** object in the objects tree.
3. Enter the number and name for the **Timer** object in the corresponding field of the settings panel.
4. Click the **Apply** button.

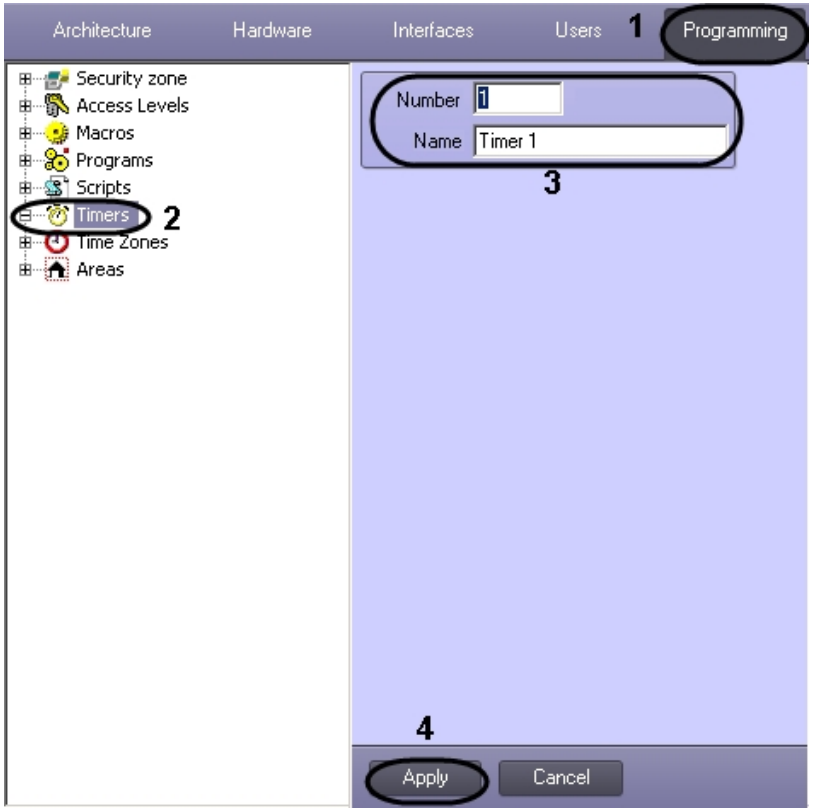

The **Timer** object will appear in the objects tree.

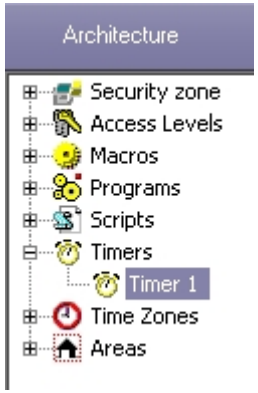

To set up the **Timer** object, do the following:

1. Select the **Timer** object in the objects tree.
2. Set the time point using one of the following methods:
    a. select the day of the week from the drop-down list (2) and the exact time (hour, minute, second) in the corresponding fields (5);
    b. select the exact date (year, month, day) from the corresponding fields (4) and the exact time (hour, minute, second) in the corresponding fields (5).
3. Check the **Holidays** checkbox to take into account the holidays set in the Common settings (3).
4. Click the **Apply** button.

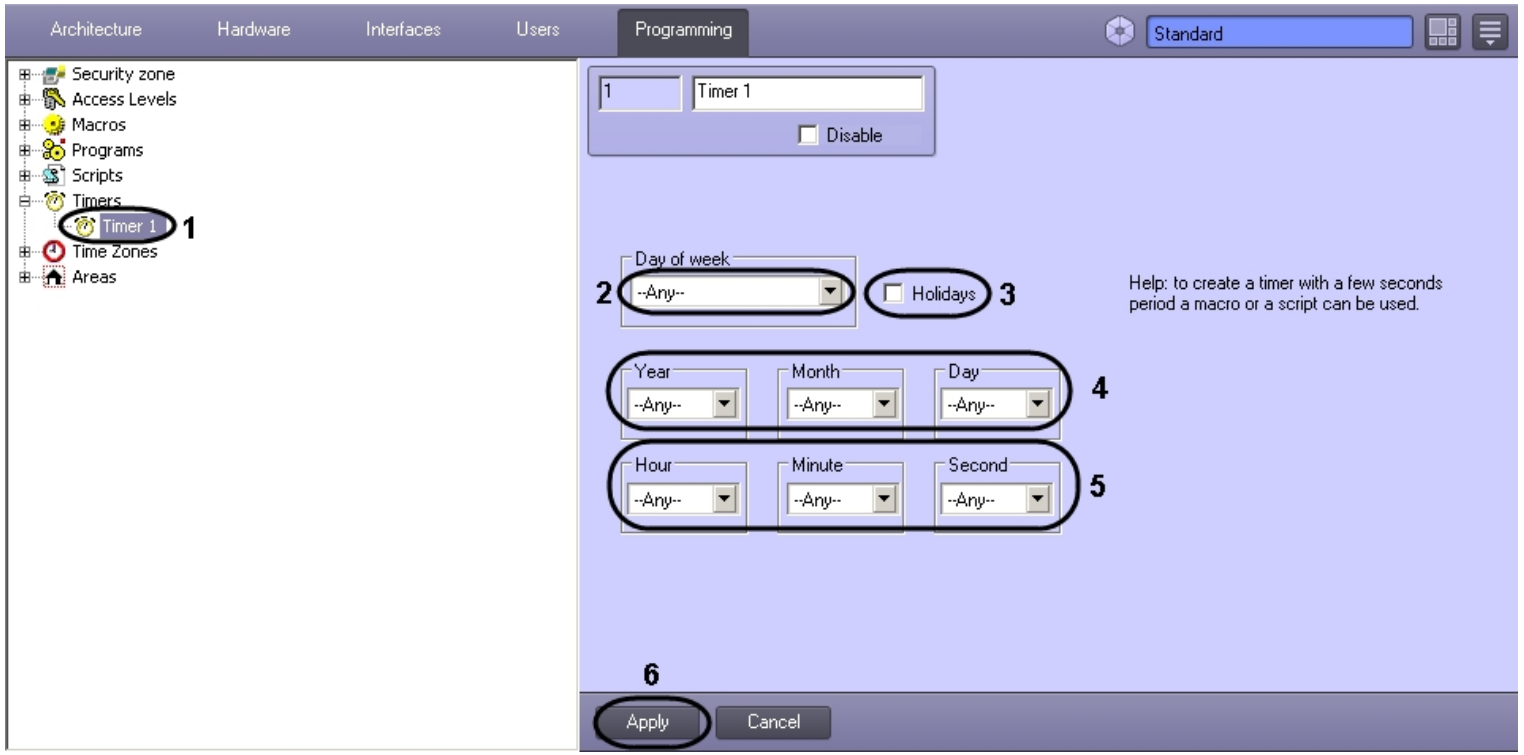

To create the list of holidays, do the following:

1. Open the **Programming** tab.

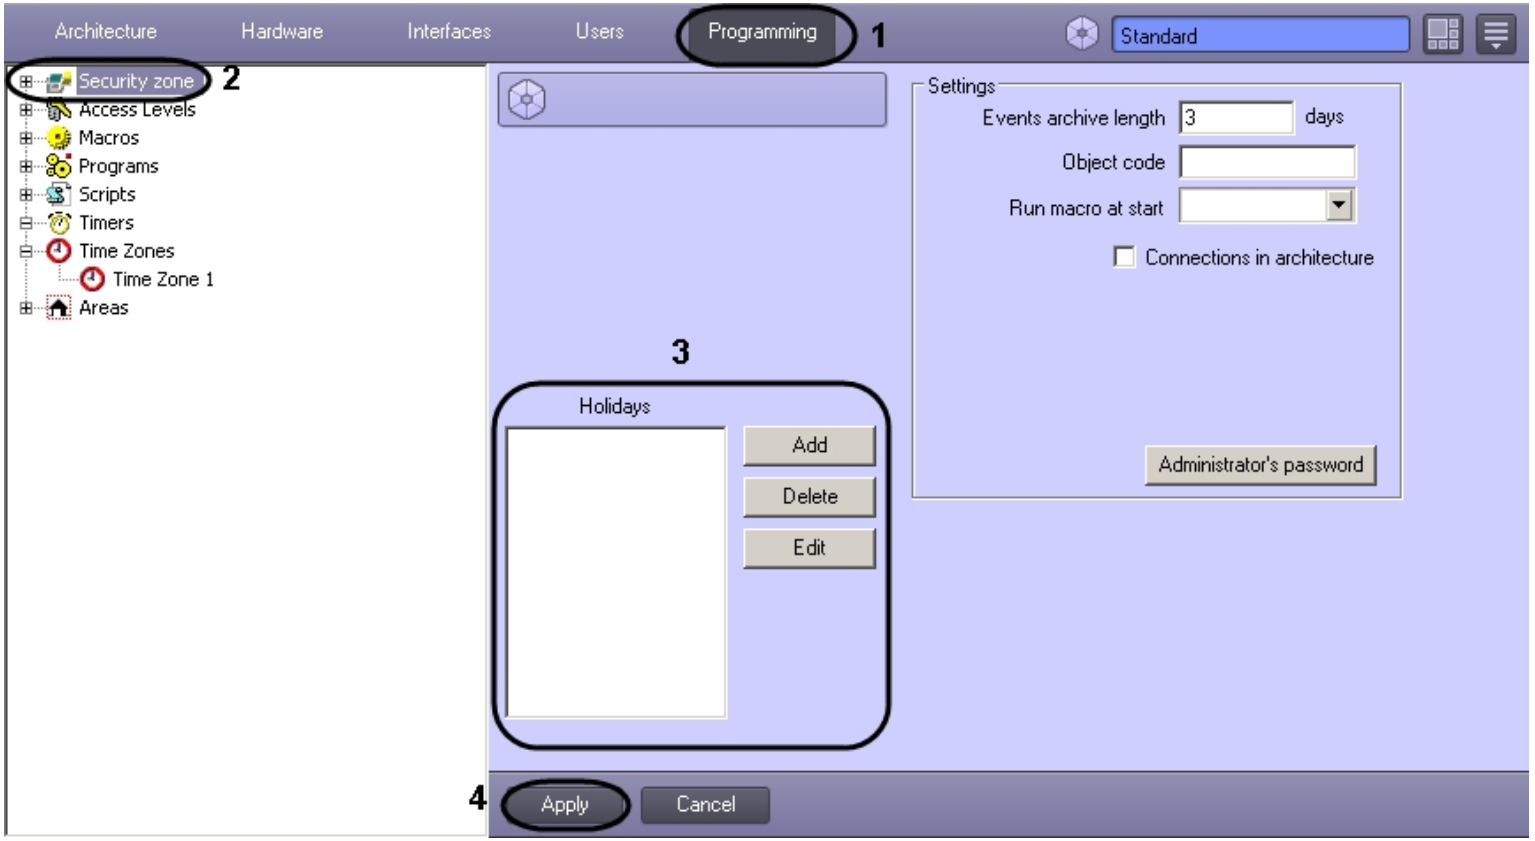

2. Select the **Security zone** object.
3. Enter a holiday date in the DD.MM.YYYY format.
4. Click the **Apply** button.

Using the Timer object

Example 1. Consider a macro that activate an arming mode in selected camera when the timer triggers.

No	Event	Action
1	The timer triggered (1).	Activate an arming mode (2)

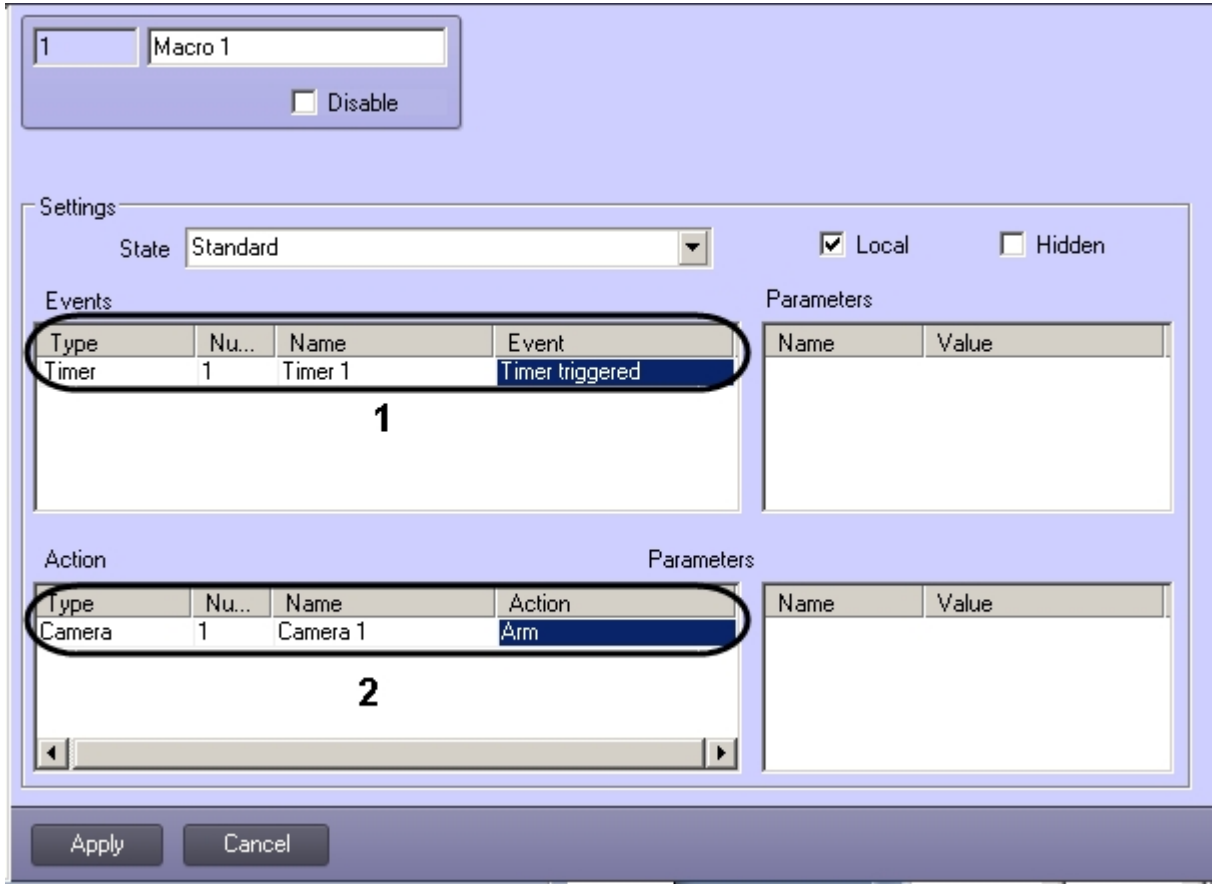

Example 2. Consider macros that allow to set the timer with trigger period of several seconds.

Macro	Event	Action	Parameters
1		Start counter of Timer 1 (1)	Trigger value is 5 seconds (2)
2	The timer 1 triggered (1)	Macro 1 execution (2)	

Macro 1 object setting window

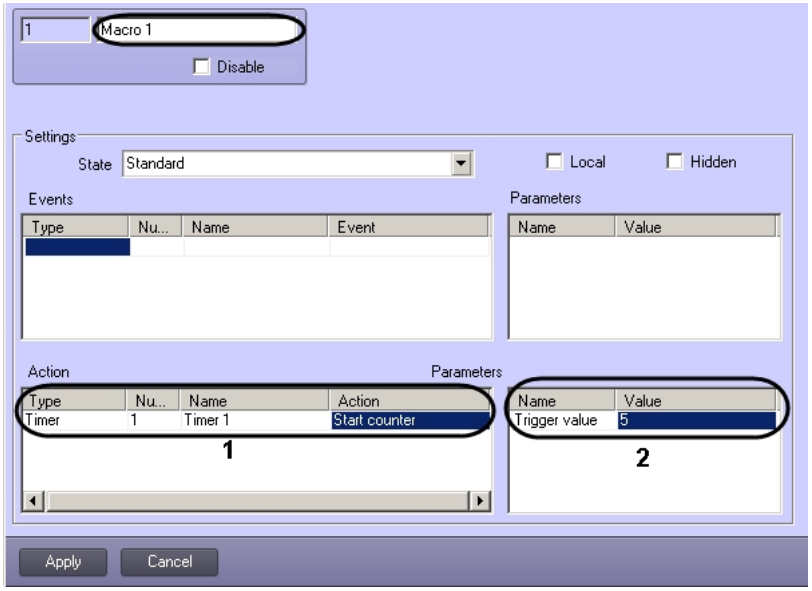

Macro 2 object setting window

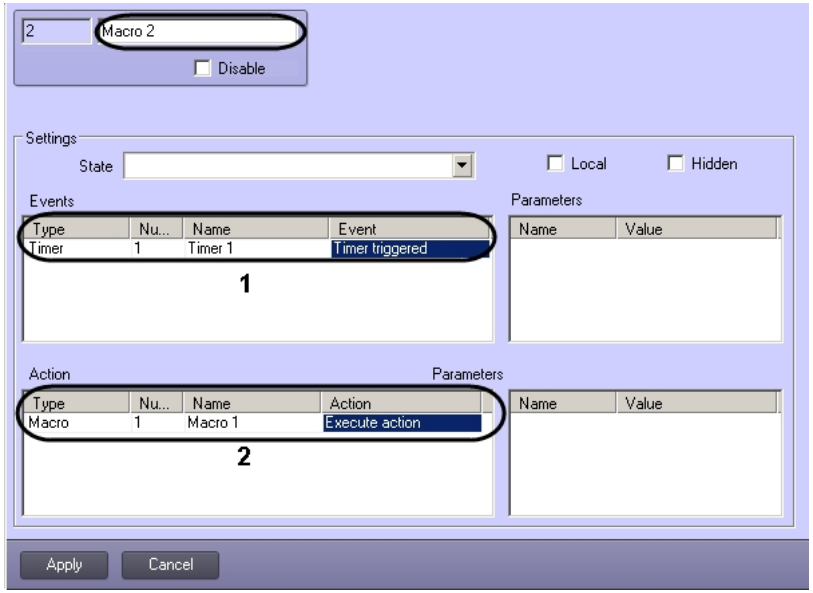

Note.

After starting the macro (**Macro 1**) in menu of Intellect software main control panel, the timer will trigger every 5 seconds and also in accordance with the **Timer 1** object settings which are specified on its seting panel. To avoid the timer triggering in the latter case, it is necessary to specify the date of triggering in the past.

Note.
To stop the timer set **Disable** check box in **Timer 1** object setting window.

Creating and using time zones

A time zone is comprised of a set of any number of time intervals during a day (24 hours) defined for several days (1 to 366), and the time intervals during specific dates.

The **Time Zone** object is used in conjunction with the **Macro** object and for setting up other system objects.

Creating and configuring time zones

To create a **Time Zone** object, do the following:

1. Open the **Programming** tab (1).
2. Create the **Time Zone** object under the **Time Zones** node in the objects tree (2).
3. Specify the number and name of the time zone into the corresponding fields of the settings panel (3).
4. Click the **Apply** button (4).

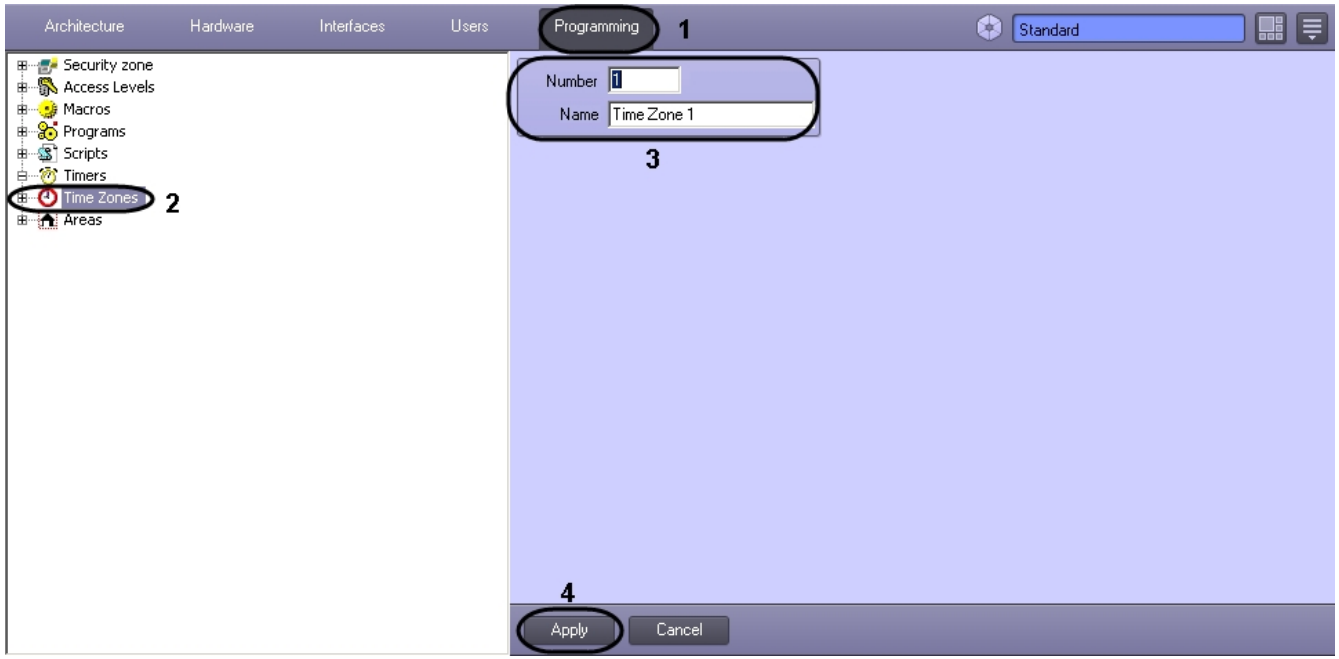

The **Time Zone** object will appear in the objects tree.

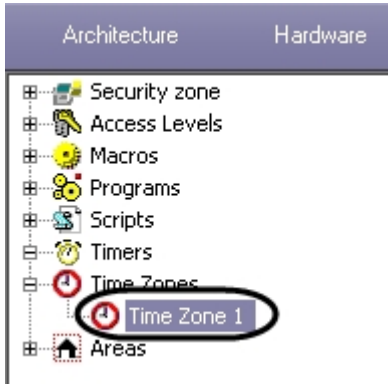

To configure the **Time Zone object**, specify the values of the following parameters:

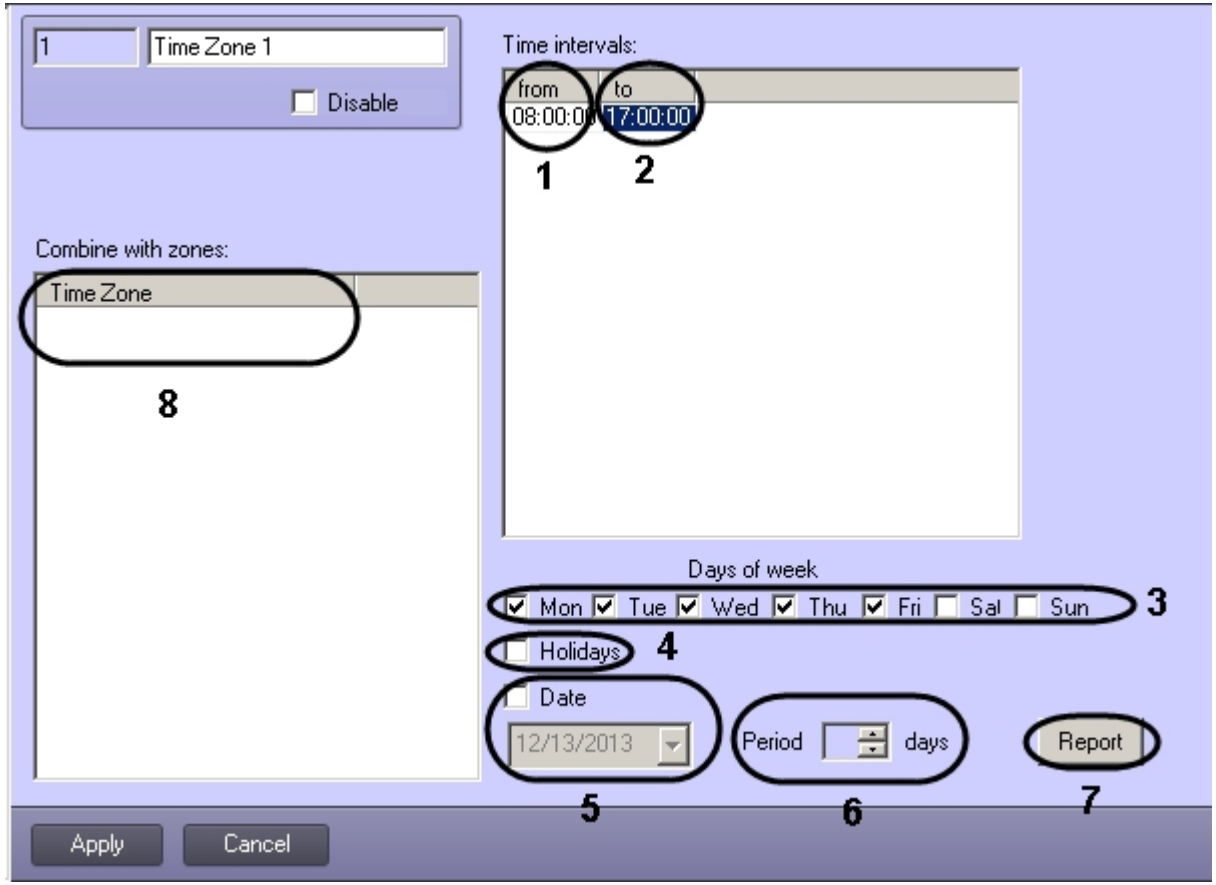

No	Parameter name	Field type	Description	Format	Default value	Value range
The **Time intervals** group						
1	The from column	Enter the value	Exact time of starting the macro execution	HH:MM:SS	00:00:00	00:00:00 to 23:59:59
2	The to column	Enter the value	Exact time of ending the macro execution	HH:MM:SS	00:00:00	00:00:00 to 23:59:59
The **Days of week** group						
3	Checkboxes: Mon Tue Wed Thu Fri Sat Sun	Checkbox	Adds days to the timetable. The days of the week are added individually y for each time interval.	-	No	**Checked** – the day of the week is included in the timetable. **Not checked** – the day of the week is not included in the timetable.

The **Holidays** group*							
4	**Holidays**		Checkbox	Adds holidays to the timetable. The holidays are added individually for each time interval.	-	No	**Checked** – the list of holidays is included in the timetable. **Not checked** – the list of holidays is not included in the timetable.
The **Date** group							
5	**Date**	Check-box	Checkbox	Enables the **Period__days** field. If set, the Days of week group is disabled. The days are added individually for each time interval.	-	No	**Checked** – enable the **Period__days** field. **Not checked** – disable the **Period__days** field .
		Field	Enter the value	Specifies the exact date. The days are added individually for each time interval.	DD.MM.YYYY	Current date	00.00.0000 to 31.12.9999
6	**Period**		Enter the value	Sets the cyclicity in N-days, time zone triggers from the specified date (i.e. time zone responses every N-day)	Numeric value	Disabled	0 to 999999999999999. Cyclicity is set individually for every time interval
7	The **Report** button		-	Displays the box with the table of time zone activity	-	-	-
The **Combine with zones** table							
8	The **Time zone** dro pdown list		Selected from the list	Sets the time zone with which the given time zone is to be combined	Names of the registered **Time zone** objects	-	Depends on the number of registered **Time zone** objects

* The **Holidays** checkbox adds the list of the days specified in the **Security zone** object in the **Programming** tab.

If the moment of time interval beginning is set later than the moment of ending, then time zone will cover the present day (from the time interval beginning) and part of the following day (to the time interval ending) on conditions that the Time zone is set for the present and following day. If the Time zone is set only for the present day, then the Time zone will end at 0:00:00.

Note.
Time zone combination can be used for correction of the main time zone into specia days, for example, days before holidays.The date of a special day and time interval, that should be added to the interval of the main zone, should be set on the settings panel of the additional time zone.

Attention!
The duaration of additional time zone usage in days is not set on the settings panel. So, time zones combining is to be disabled right after its application.

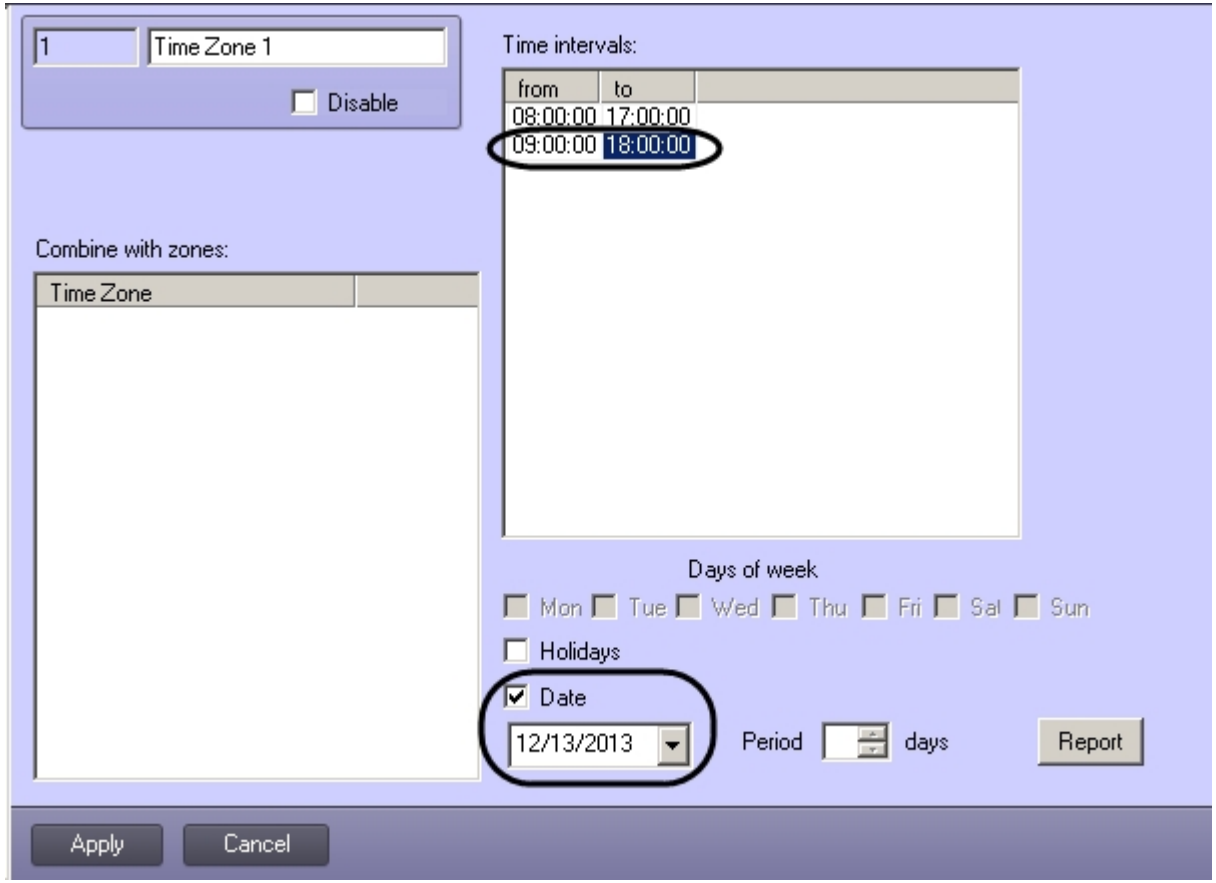

To create the list of holidays, do the following:

1. Open the **Programming** tab (1).

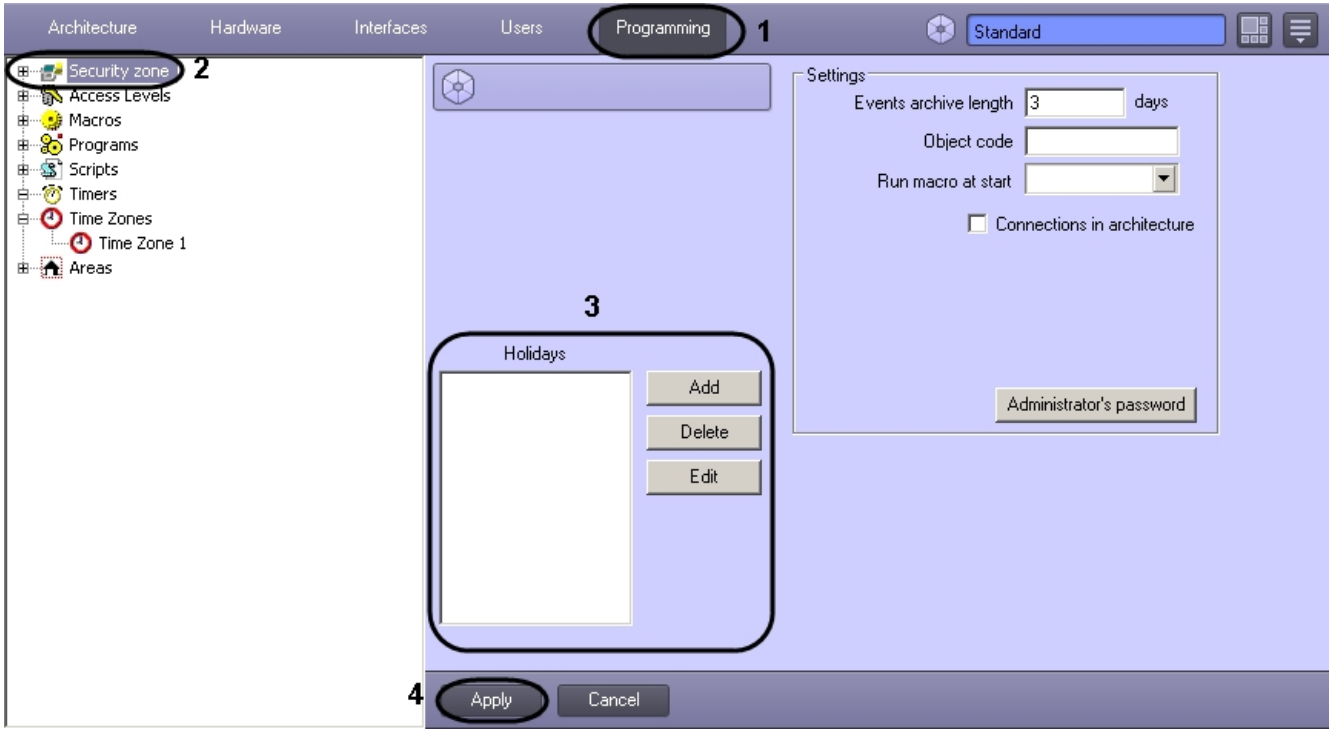

2. Select the **Security zone** object (2).
3. Specify the holiday date in the following format: DD.MM.YYYY (3).
4. Click the **Apply** button (4).

Viewing time-zones states

In INTELLECT™ one can view time-zones states by all specified time intervals.

To view time-zones states, do the following:

1. Click the **Report** button on the settings panel of the **Time Zone** object.
   The **Time-zones activity calculation** box appears.

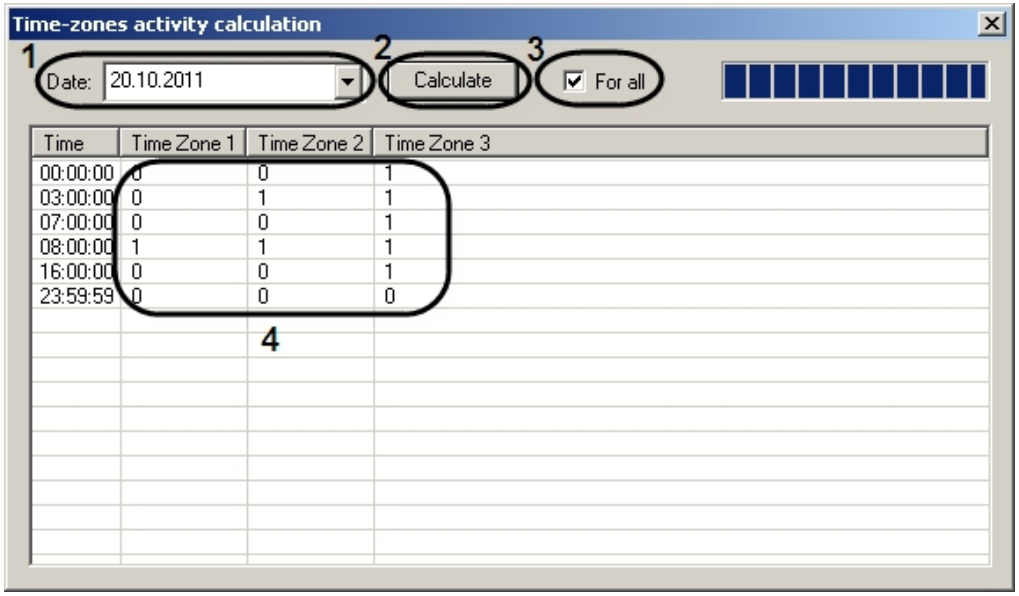

2. Select the required date in the **Date** list (1).
3. If the data on all time zones created in the system is to be displayed, then set the **For all** checkbox (3).
4. Click the **Calculate** button (2).

As a result the table with active time zones (marked 1) and inactive time zones (marked 0) is created (4).

Examples of time zones usage

Example 1. Consider two micros which work together and allow recording a video within the time zone limits.

Set the events and actions values in **Macro** setting window that is given in the table.

№	Event	Action
1	Time Zone 1 begin (1)	Start recording from Camera 1 (2)
2	Time Zone 1 end (1)	Stop recording from Camera 1 (2)

Example of a macro with a time zone. Time zone begining

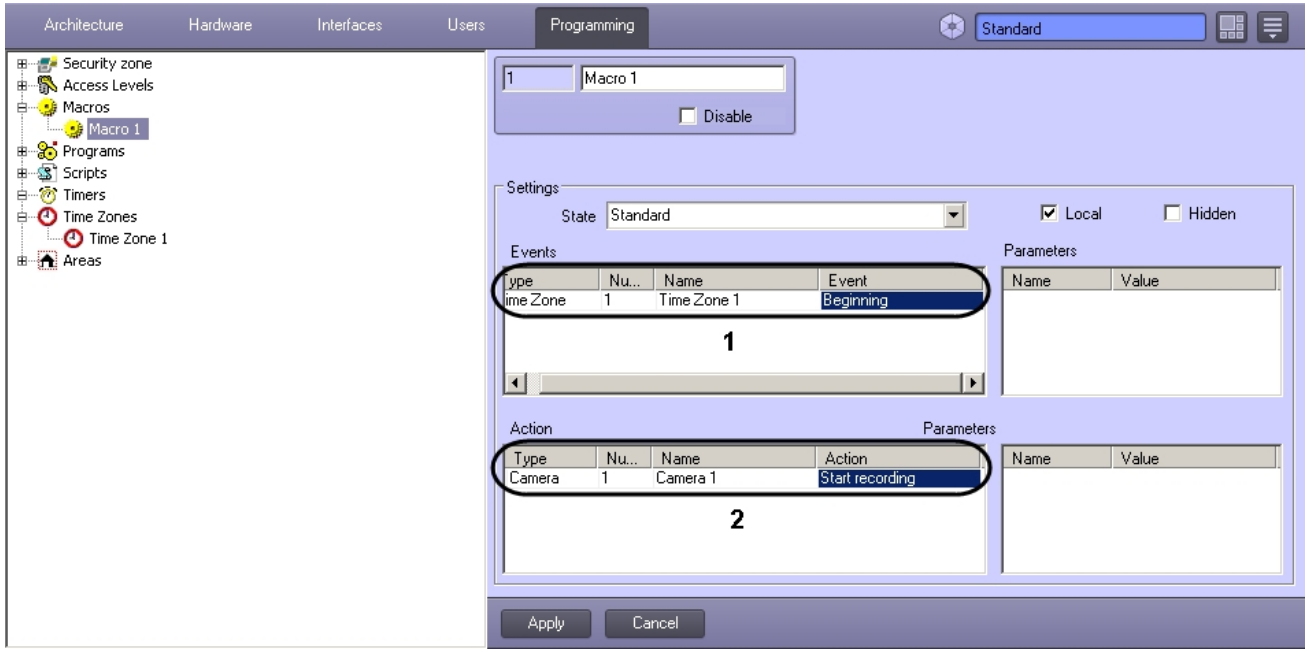

Example of a macro with a time zone. Time zone ending

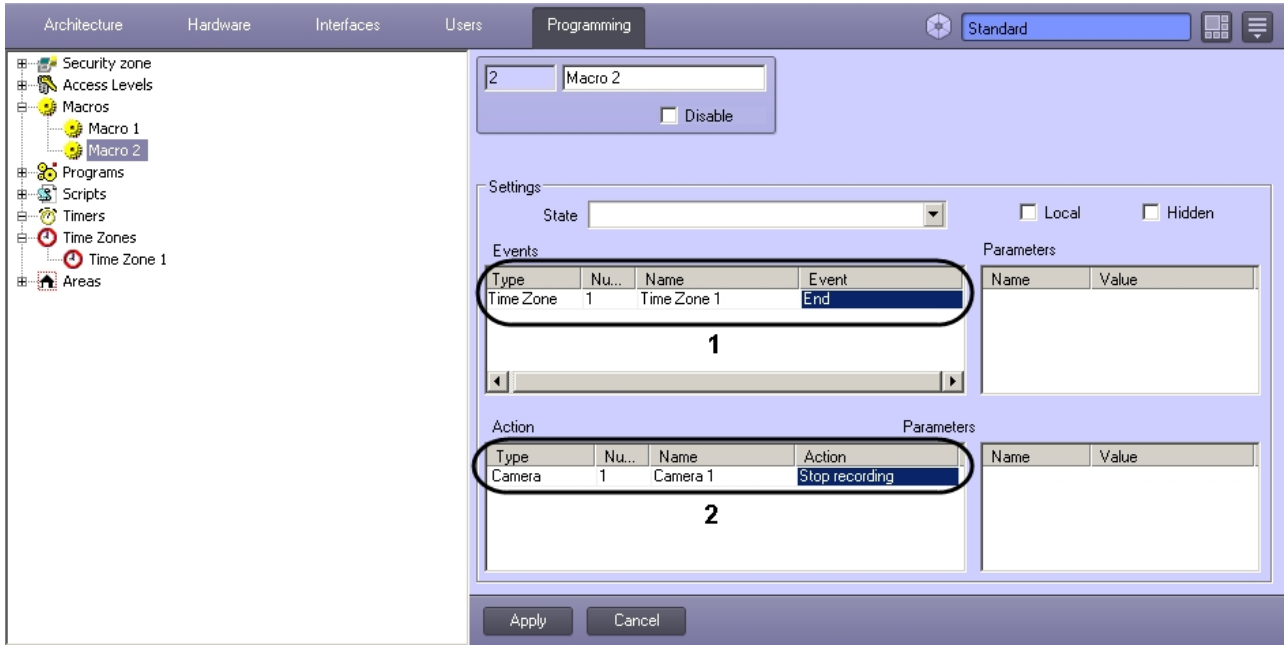

Example 2. Time zones can be used for the Backup archive. Consider an example of scheduling the archiving of the video feed from a camera at a specific time.

To configure the Backup archive object, do the following:

1. Open the **Hardware** tab (1).

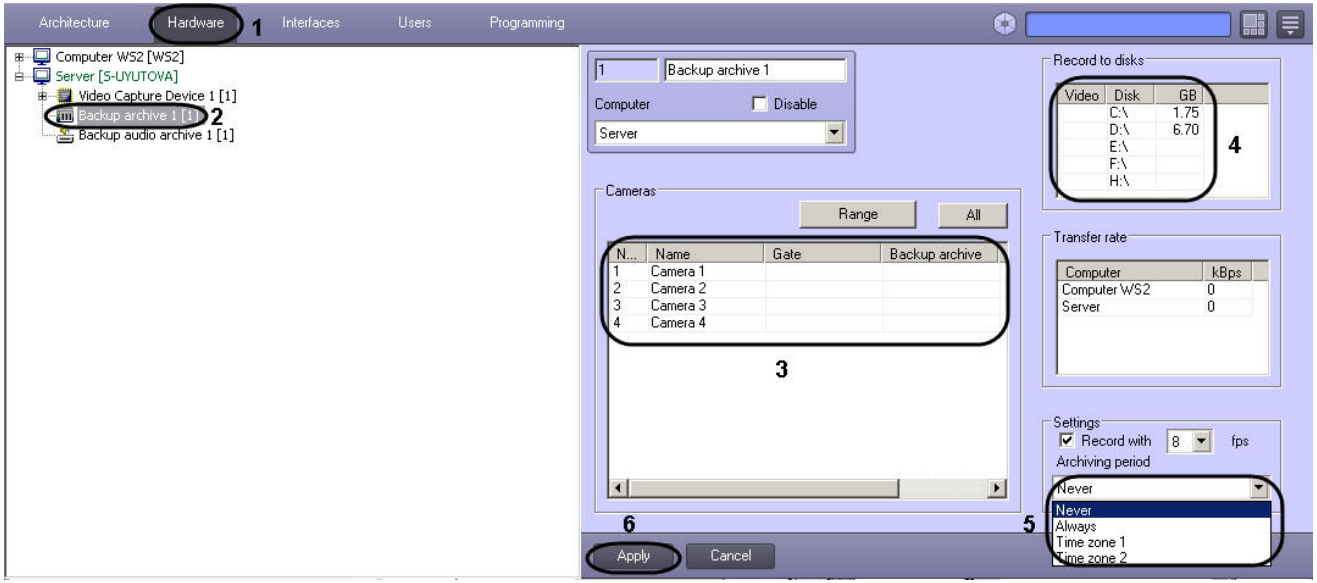

2. Select the **Backup archive** object (2).
3. Select the disk to record the video to (3).
4. Specify the camera to record from (4).
5. Select the **Time Zone 1** value in the **Archiving period** list (5).
6. Click the **Apply** button (6).

Subdivision of the guarded location into areas and regions

About areas and regions

If the *Intellect* system is used to guard the large territory of complex topology (buildings, groups of buildings), we recommend to divide the whole territory into smaller zones. This allows to group relevant devices by location and makes it easier to view and control them, as well as to analyze the reports.

There are two levels of division: area and region. The region is the smallest element. The area is a set of regions grouped by location or by function. For example, if the guarded territory is the building, it can be divided in this way: the floors make the areas, while the rooms become the regions.

We recommend dividing the guarded territory into areas and regions at the time of designing the video surveillance system, before the actual system configuration.

Creating areas

The areas are represented by **Areas** objects created in the **Programming** tab. The **Areas** object has no parameters of its own and is used to group the **Region** objects only. Figure below shows the process of creating an **Areas** object.

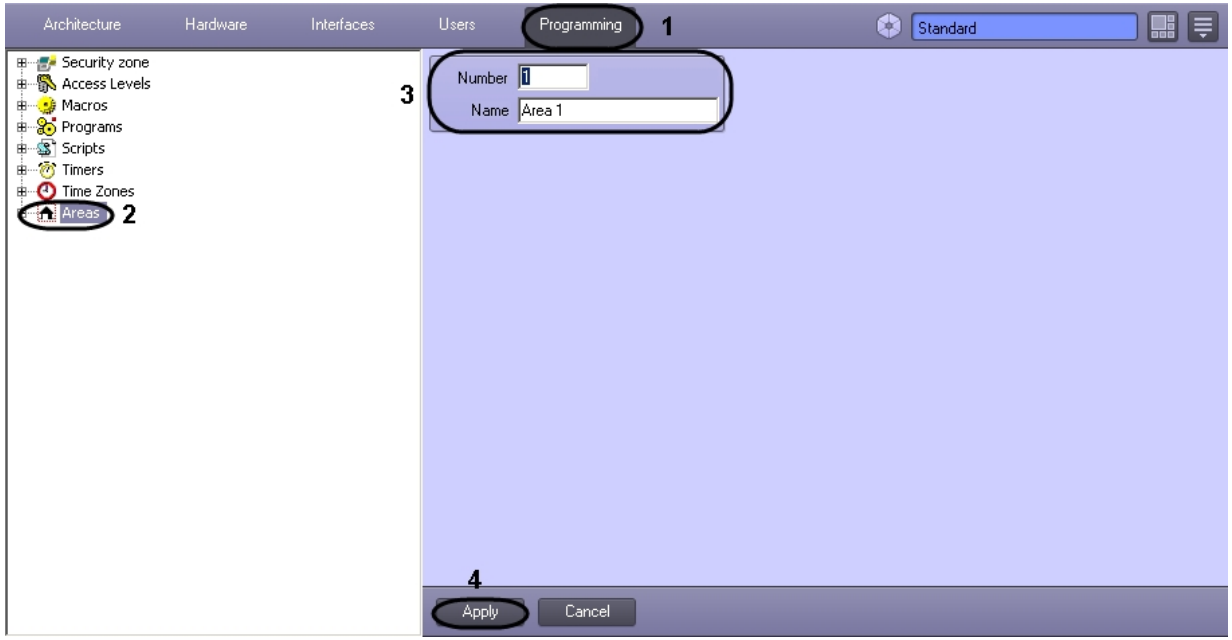

Creating regions

To create a region, do the following:

1. Create a **Region** object.
    a. Select **Create object => Region** in the context menu of the **Area** object.

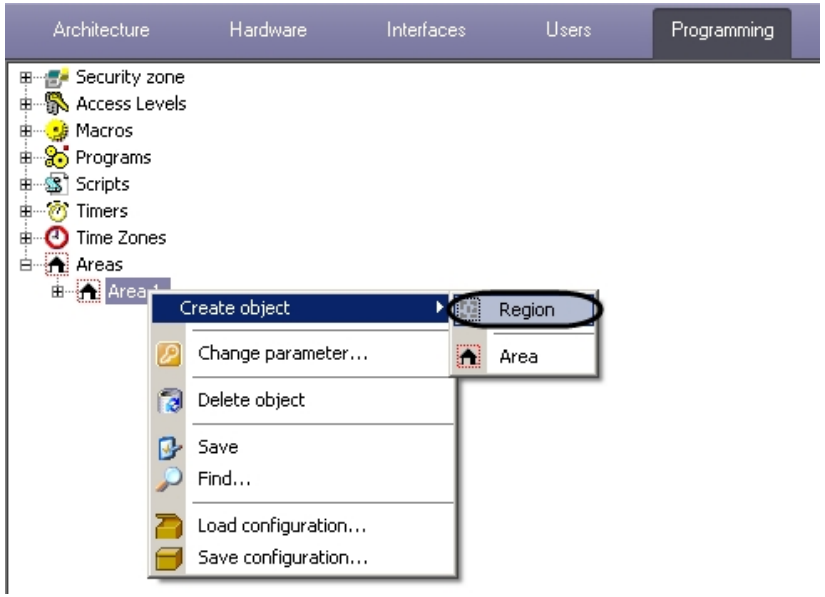

b. Type-in the number and name of the object in the corresponding fields (1).

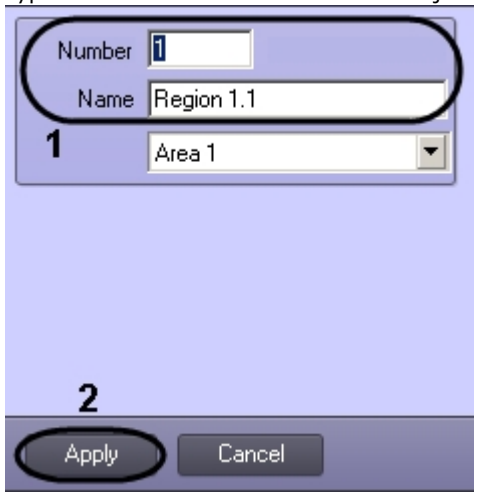

c. Click the **Apply** button (2).

> **Note.**
> As a result the settings panel for the **Region** object appears.

2. Configure the created **Region** object.
   a. Type-in general description of the **Region** in the **Description** field (1).

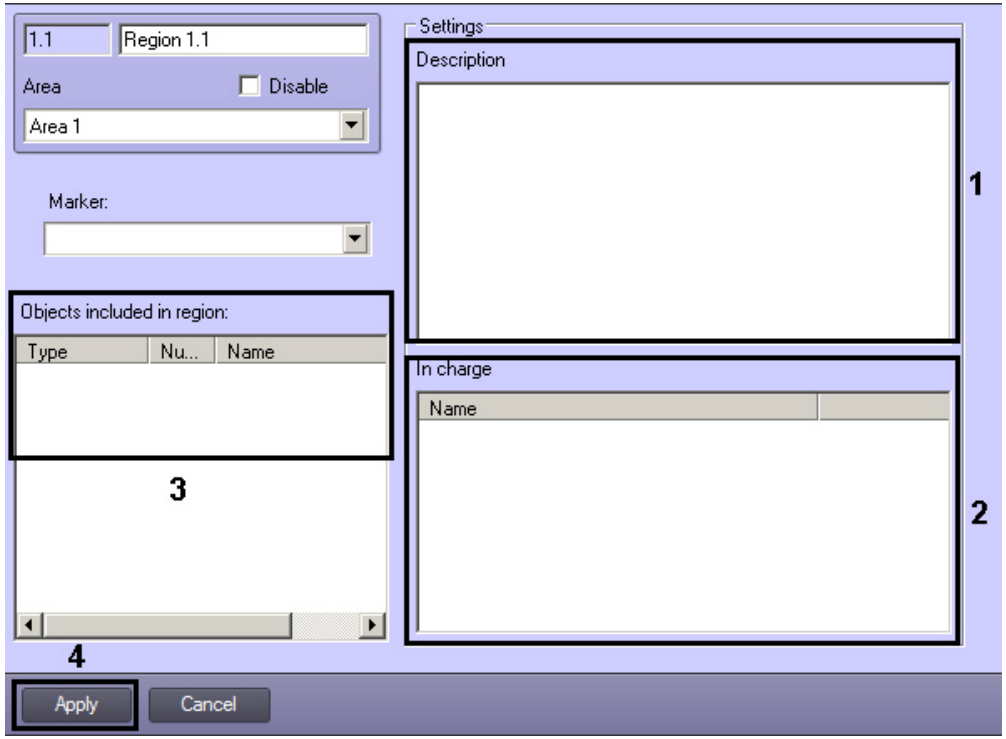

b. In the **Name** list of the **Responsible** table select the user responsible for this region (2).

> **Note.**
> The **Name** list consists of the usernames registered in the system (see User registration and removal section).

c. To save the changes click the **Apply** button (4).

3. Create links between **the Region** object and objects in the **Hardware** tab that are to be included into the **Region**. For this select the name of the created **Region** object on the settings panel of the object selected in the **Region** list (see Examples of using areas and regions section).
4. After creating the links listed above the list of objects added to the region is displayed in the **Objects included into region** table (3). This table cannot be edited.

The **Region** is now created.

Creating rules of states transition

To create a rule of states transition, do the following:

1. Create a **Rule of states transition** object.
   a. Select **Create object => Rule of states transition** in the context menu of the **Region** object.

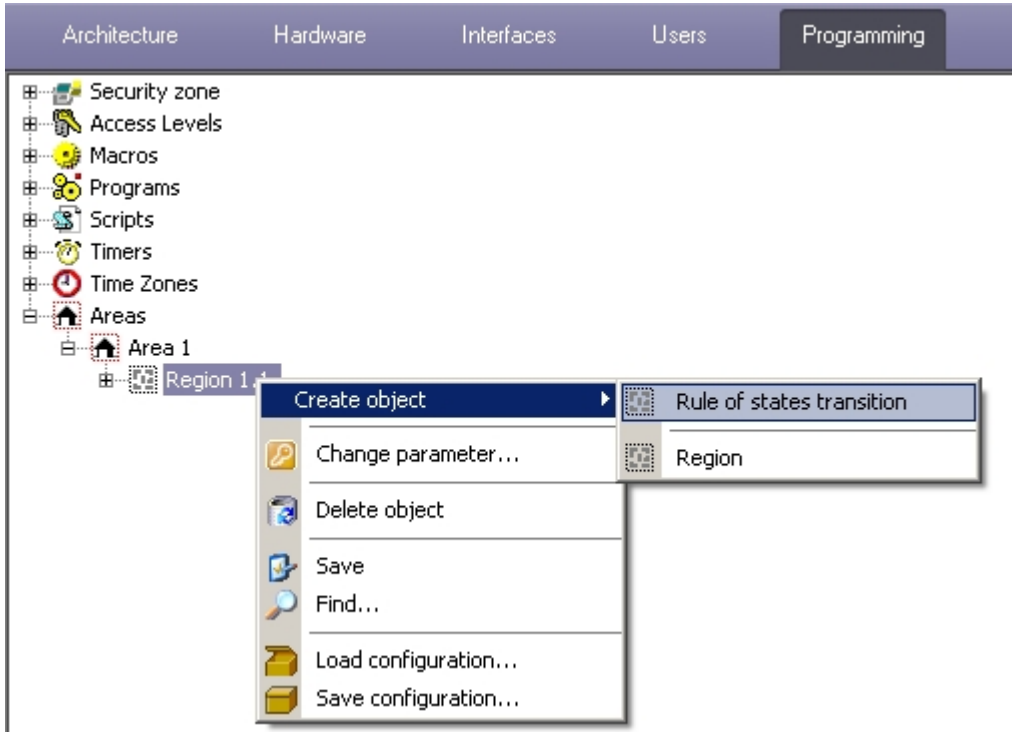

b. Type-in the number and name of the object in the corresponding fields (1).

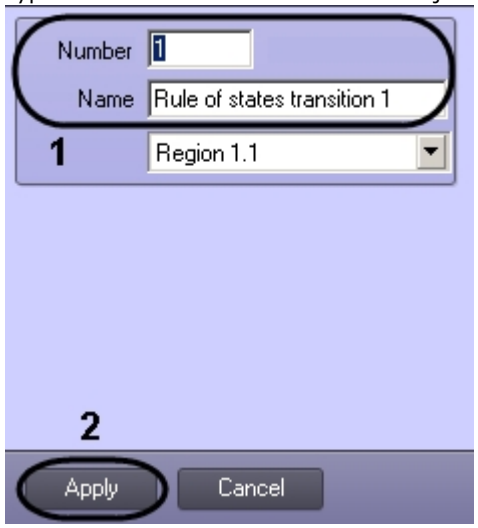

c. Click the **Apply** button (2).

Note.
As a result the settings panel for the **Rule of states transition** object appears.

2. Set the condition of rule activation on the settings panel of the **Rule of states transition** object.
   a. Select the object type in the **Type** list of the **Object's states** table (1) and in the **State** list (2) specify the state of this object at which the **Region** state is to be changed.

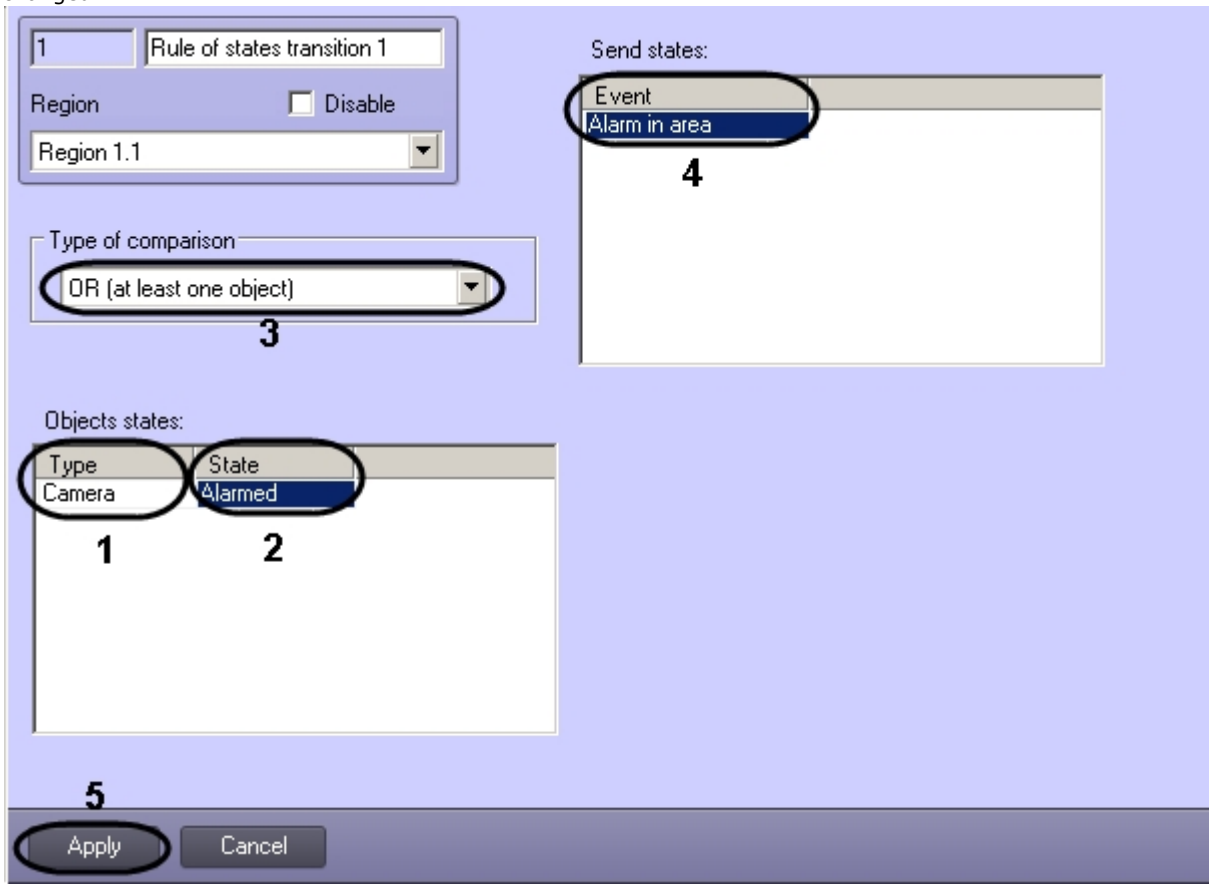

Note.
Repeat step 2.1 for all required object types.

   b. If the state of the **Region** is to be changed when all objects of types added to the **Object's states** table are in these states, select the **AND** (all objects) value in the **Type of comparison** list (3).
   c. If the state of the **Region** is to be changed when at least one object of type added to the **Object's states** table is in this state, select the **OR** (at least one object) value in the **Type of comparison** list (3).
   d. In the **Event list** of the **Send states:** table select the event generated by the **Region** object when the rule condition is met (4).
   e. To save the changes click the **Apply** button (5).

The **Rule of states transition** is now created.

Examples of using areas and regions

Example 1. The regions created in the system are used to group the system objects, representing the devices by their location on the secure territory.

To include a device into a Region, select an appropriate region in the **Region** field of the settings panel of the corresponding object.

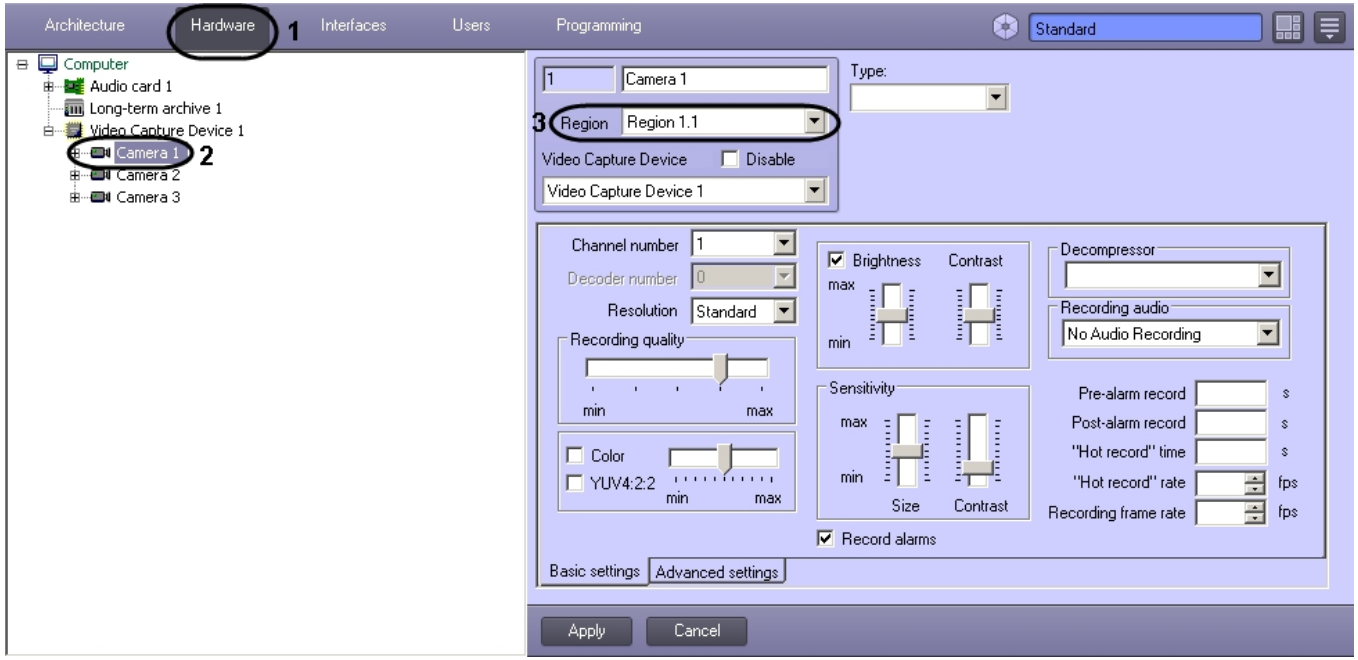

Example 2. Arming all cameras included into **Region** 1 when **Macro** 2 is run. Parameters of macro (**Macro** 1) essential for this operation are given in the table.

Event	**Action**	**Parameters**
Macro 2 is executed (1)	The **Control objects** action of **Region** 1 is executed (2)	Reaction type = «ARM» Object type = «CAM» (3)

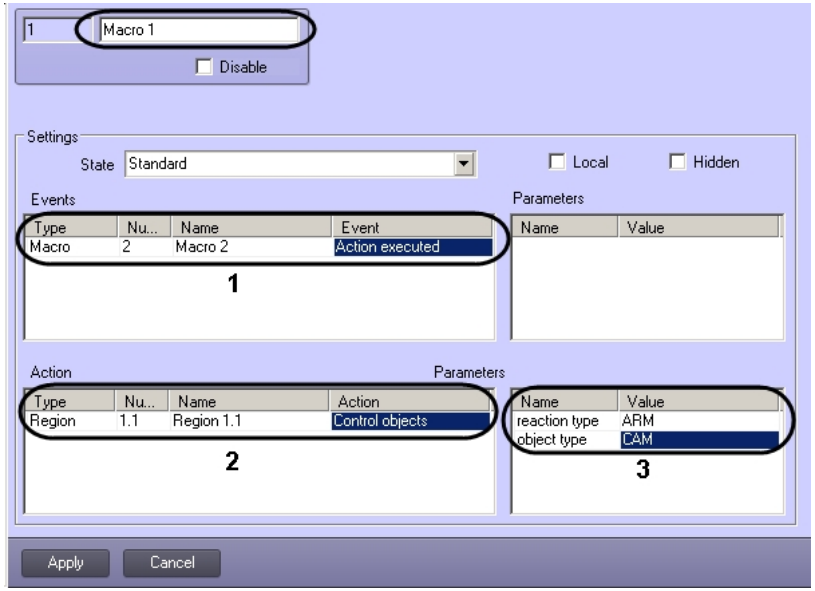

Example 3. INTELLECT™ allows displaying reports about devices grouped in Regions.

Figure below shows the Event Viewer object configuration to display a report on the **Alarm in area** event on any of the devices in **Region 1**.

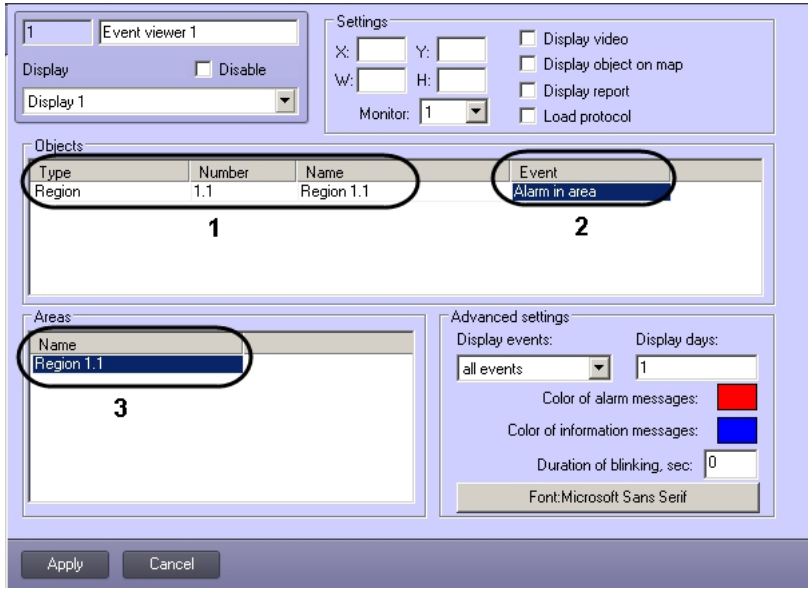

The Report System

General information on the Report System

The Report system of the Intellect software package is designed for the following purposes:

1. Creating and printing the reports on the events registered in the surveillance system and on the actions taken in response to these events.
2. Viewing the video archive starting from the time of the event registered in the report.

The Report system supports the following functionality:

1. Selecting the objects (or groups of objects) from those available for reporting (objects include hardware and software modules).
2. Selecting the events to be included in the report for each object selected.
3. Creating the report templates.
4. Creating the screen reports.
5. Creating the printed reports.
6. Exporting the printed report to a file.
7. Viewing the video archive from the screen report using the surveillance window or converter.exe utility.
8. Handling the cameras of the ATM-Intellect system (automatic banking machine surveillance system) using the X.25 protocol.

Starting and shutting-down the Report system

Starting the Report system

The Report system can be started in the following ways:

1. Using the Windows **Start** button: Click the **Start** button, then select **Programs**, then Intellect, then **Report system**.

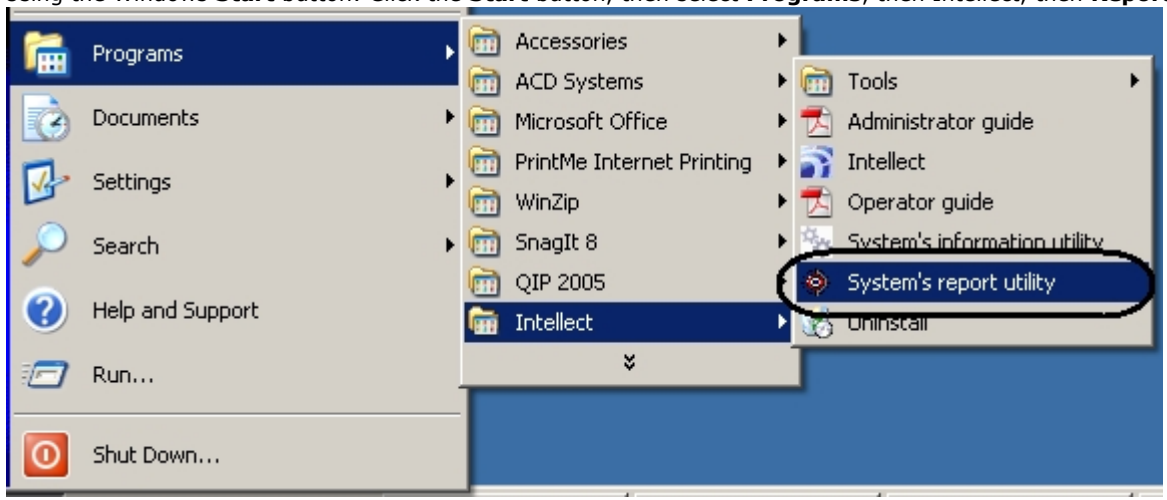

2. Using the program folder of the *Intellect* software: open the **Report** folder in the program folder of the *Intellect* system, then double-click the report.exe file.

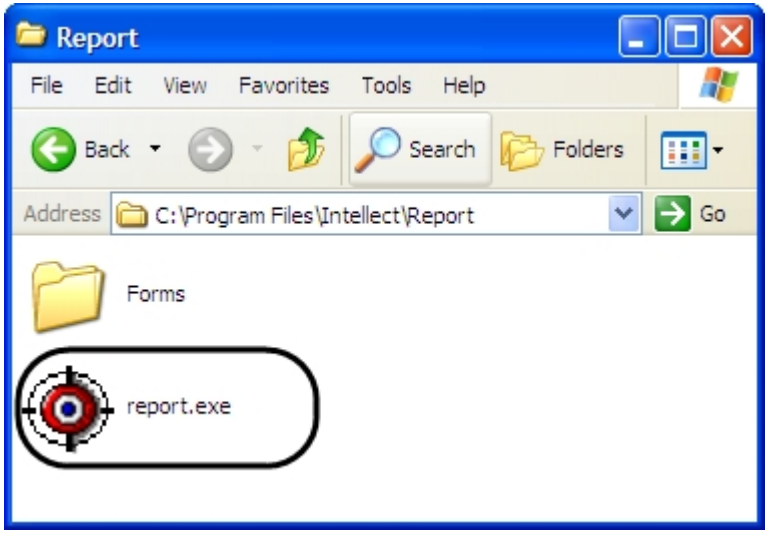

The Report system will start.

The notification window will appear, indicating that the system configuration is being read from the database.

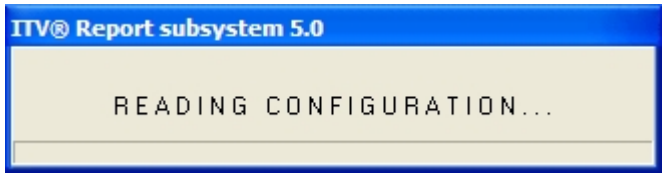

Shutting-down the Report system

The Report system is shut down using the standard Windows procedure for applications shutdown. Click the **Shutdown** button in the top right corner of the window.

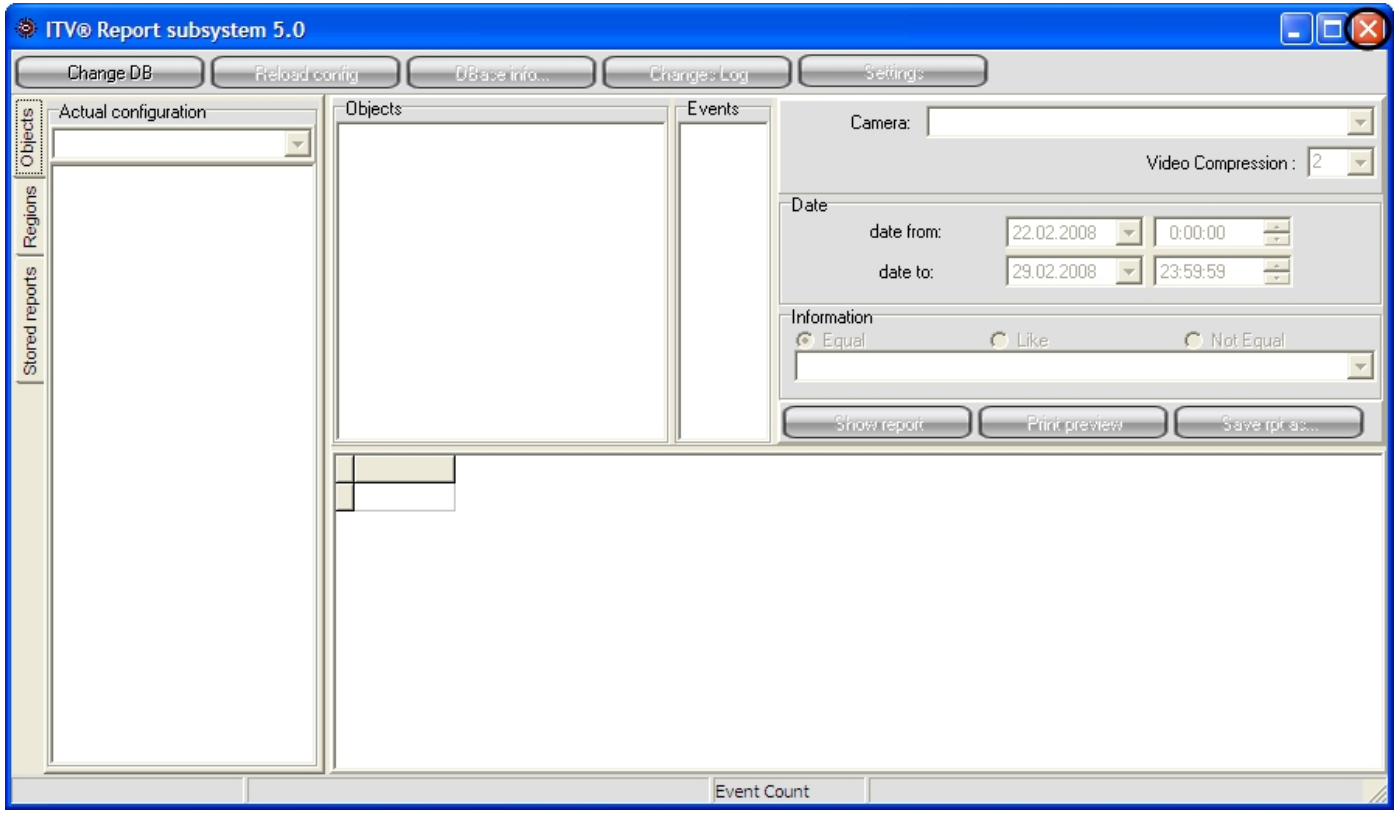

The Report system window will shutdown.

The Report window

The Report system window contains the following sections: the main control panel, the report creation panel, and the report view panel.

Figure below shows an example of the Report window.

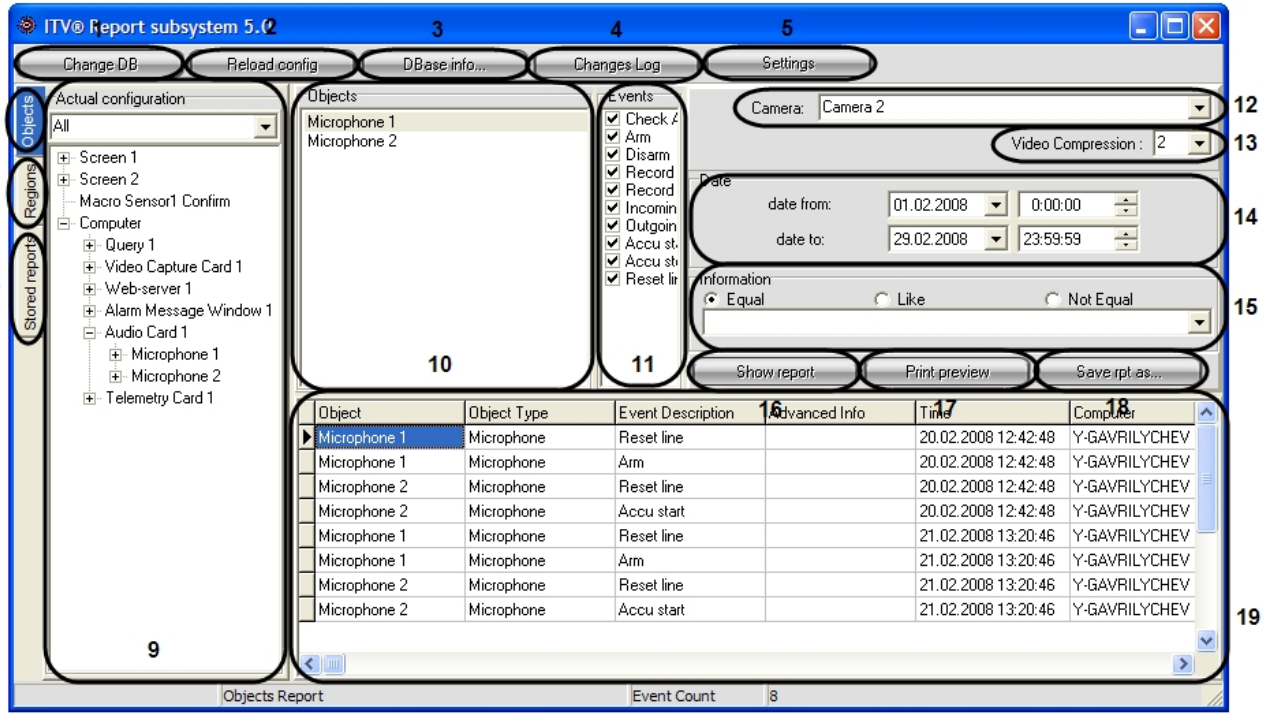

The Report window includes the following interface elements (numbered according to the screenshot on the figure):

1. The **Change DB** button allows changing the current configuration database of the Intellect system.
2. The **Reload Config** button reloads the system configuration and registered events from the current database.
3. The **DBase Info** button opens the **Base Info** window containing the following information about the events archive: the dates of the first and last registered event, the archive depth and the total number of events in the database.
4. The **Changes Log** button allows viewing the information on the changes made to the *Intellect* configuration.
5. The **Settings** button opens the **OptionsForm** window allowing to introduce new Events Log parameter settings.
6. The **Object** button opens the **Actual Configuration** tab allowing to select the objects to become the sources of the events to be included in the report.
7. The **Regions** button opens the **Regions** tab allowing to select the objects in the chosen region. The reports are then created on these objects.
8. The **Shared Reports** button opens the tab for selecting the existing report templates. A report template is a list of objects and events to be included in the report.
9. The **Actual Configuration** tab allows selecting the objects to become the sources of the events to be included in the reports.
   This tab opens when the **Objects** button is clicked.

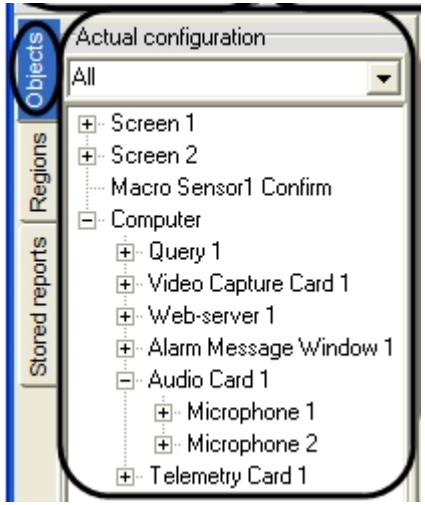

The **Regions** button opens the **Regions tab** allowing to select the objects in the chosen region. The reports are then created based on these objects.

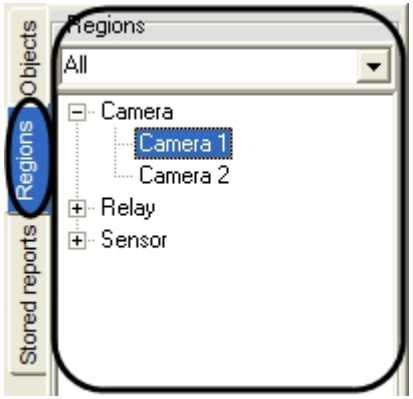

The **Shared Reports** button opens the tab showing the list of all existing report templates. A report template is a list of objects and events to be included in the report.

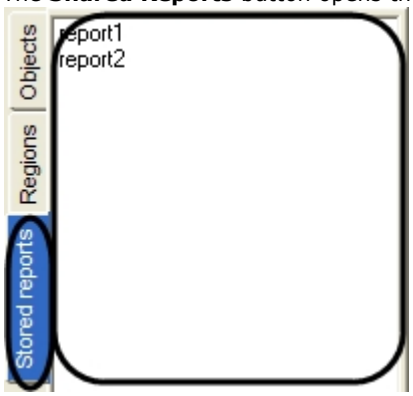

10. The list of selected objects to create the reports for.
11. The list of available events for the object selected in step 10. Select the events to be included in the report. By default, all events of the chosen object are selected.
12. The **Camera** list is designed for selecting the camera, archive of which is playing from the screen report form if it's required to change default camera.
13. The **Video Compression** list allows setting the compression level of the video played in the Report system.
14. The **Date** group allows specifying the time interval for the report.
15. The **Information** group allows setting the string criteria to be searched for in the **Advanced Info** column of the report.

> **Note.**
> In case of first start of Web-report subsystem this panel unavailable for edit. Restart the Web-report subsystem

The Information field group contains the following fields:

a. Text field. Enter the character string to be searched for.
b. **Equal** radio-button. When selected, the system looks for exact case-sensitive matches only.
c. **Like** radio-button. When selected, the system looks for the rows where the **Advanced Info** column contains the search string, case-sensitive.
d. **Not Equal** radio-button. When selected, the system looks for the rows where the **Advanced Info** column does not match the search string, case-sensitive.

16. The **Show Report** button. Creates the screen form of the report (see the Creating a screen report section).

17. The **Print Preview** button. Creates the printed report (see the Creating a printed report section).

> **Note.**
> If the screen report has not been created before the printed report is activated, the screen report is automatically created.

18. The **Save Rpt As** button. Saves the report template, i.e. the list of objects (see p. 10) and corresponding events (see p.11).
19. The screen report panel. Shows the screen report. The panel includes the following columns:
    a. **Object** – the name of the object where the event occurred.
    b. **Object type** – the type of the object where the event occurred.
    c. **Event Description** – the name of the event registered by the system.
    d. **Advanced Info** – additional information on the event.
    e. **Time** – date and time when the event started.
    f. **Computer** - the name of the computer that registered the event.

The OptionsForm window

The **OptionsForm** settings window allows specifying additional parameters for the Report system: archive viewing mode, database connection, etc. To open the **OptionsForm** window, click the **Settings** button in the Report window (see The Report window section).

Figure shows the **OptionsForm** window.

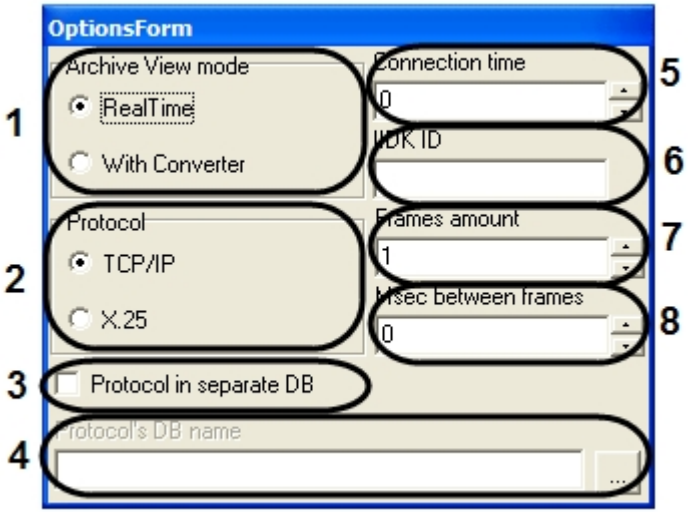

The **OptionsForm** window includes the following interface elements (numbered according to the screenshot in the figure):

1. **Archive View Mode** group allows selecting the mode of playing the recordings from the video archive in the Report system:
2. The **RealTime** radio-button activates the playback via the viewing window of the *Intellect* system.

> **Note.**

This option is available if the *Intellect* software is currently running on the server where the archive is stored.

3. The **With Converter** radio-button activates the playback via the Converter.exe program.
4. The **Protocol** group allows to select the data exchange protocol for the connection with the videoserver:
   a. TCP/IP protocol;
   b. X.25 protocol .

> **Note.**
> This protocol is used in the *ATM-Intellect* system (banking machine surveillance system).

5. The **Protocol in Separate DB** checkbox allows connecting a separate event database.

> **Note.**
> This checkbox should be checked if the table with the registered events (the PROTOCOL table) is stored in a separate database outside of the *Intellect* system.

6. The **Protocol's DB Name** field allows to select the name of the database.
   To select the database, click the "**...**" button. The **Data Link Properties** window will open. Specify the database type, its pathname and access parameters (similar to changing the current database of the Report system).

> **Note.**
> This field is enabled if the **Protocol In Separate DB** checkbox is checked.

7. The **Connection Time** field sets the waiting time for the connection with the videoserver.
8. The **IIDK_ID** field sets the id of the **IIDK Interface** object in the system settings. This object is used to receive the video feed from surveillance cameras of the *ATM-Intellect* system via the X.25 protocol.
9. The **Frames Amount** field sets the total number of frames requested from the videoserver when working via the X.25 protocol.
10. The **Msec Between Frames** field sets the time delay in milliseconds between the frames received from the banking machine archive. This parameter helps decrease the traffic in the communications channels working via the X.25 protocol.

Connecting to databases

The Report system can be connected to another database of the *Intellect* system. It can also be connected to the events database, if such database exists.

Connecting to the main database of the Intellect system

By default, the Report system loads the data from the main database of the *Intellect* system on the local computer. However, the database used by the Report system can be changed.

To change the main database used in the Report system, click the **Change DB** button in the Report window .

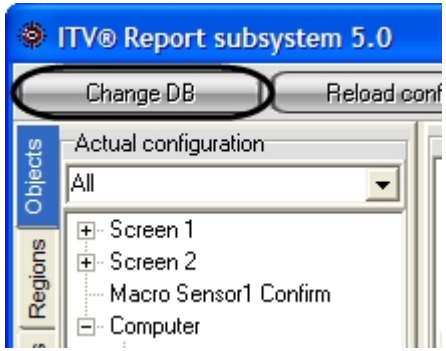

The **Data Link Properties** window will open allowing to select the name and access parameters of the database to connect to.

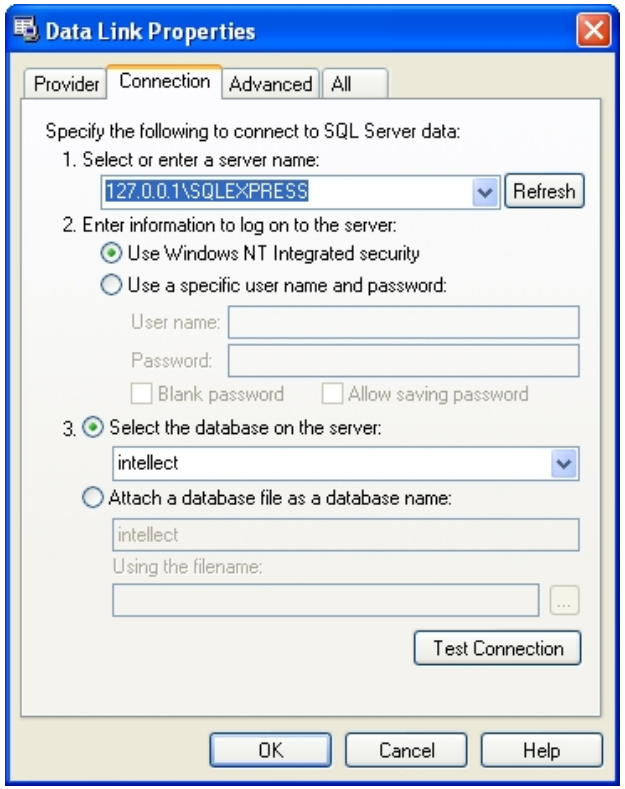

The *Intellect* system uses two types of database: SQL and Access. The connection procedure for each database type is described below.

Selecting an Access database and setting up the connection

This section describes the connection to an Access database as the main *Intellect* database.

To connect to an Access database, open the **Data Link Properties** window. To set the main database in the Access format, do the following:

1. Select the **Microsoft Jet 4.0 OLE DB Provider** line in the **Provider** tab and click the **Next** button or move to the **Connection** tab.

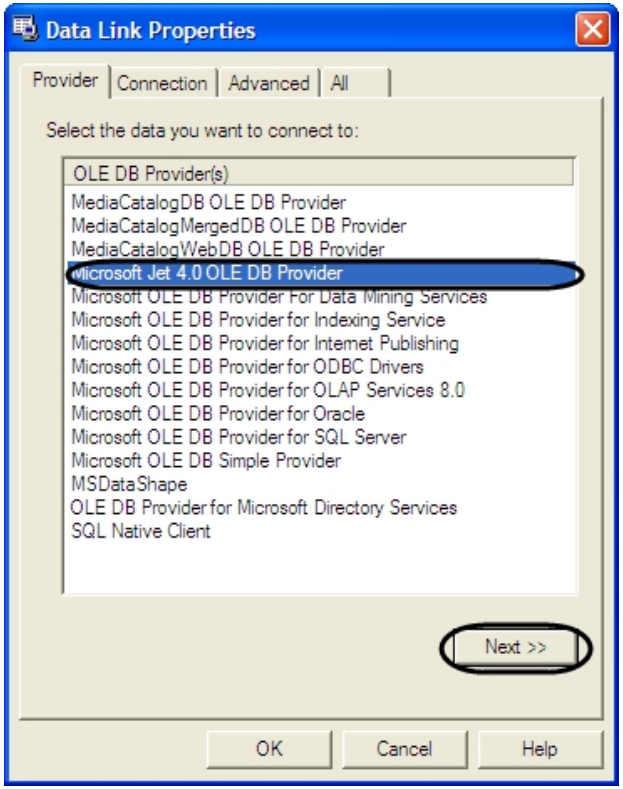

2. Select or enter the pathname of the database file in the **Select or Enter a Database Name** field of the **Connection** tab. To enter the pathname, do one of the following:
    a. manually enter the pathname;

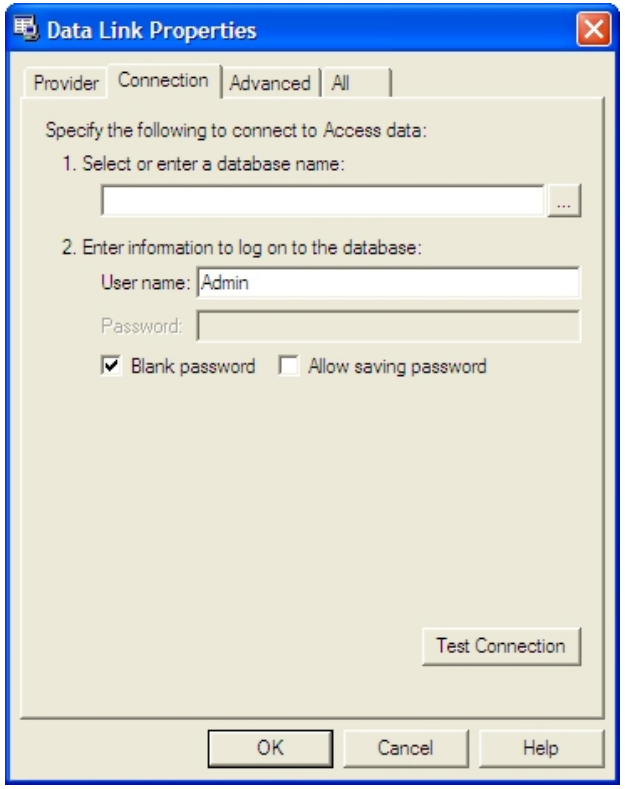

b. Click the **...** button to open the standard dialog box for file selection.

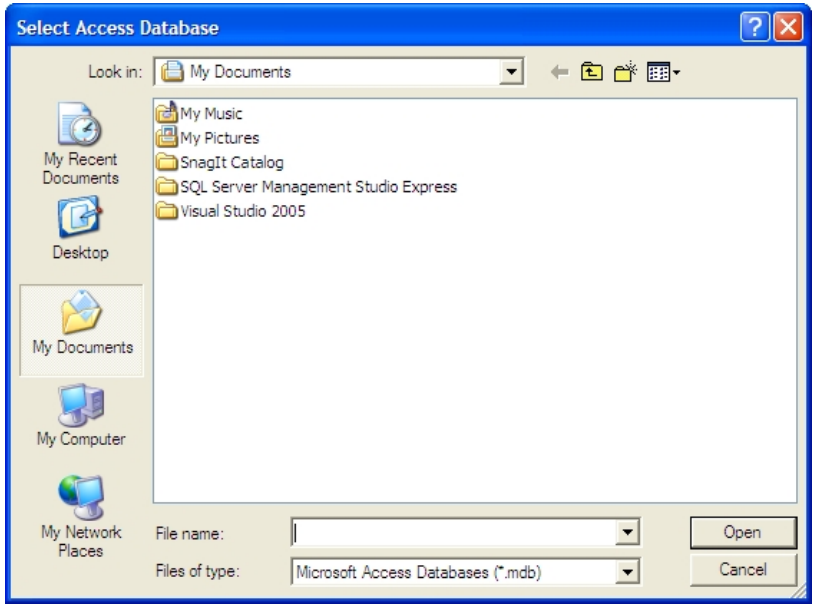

c. To connect to the main Access database located on the remote computer, the pathname should have the following format: \\<IP address (or name) of the computerð\\Intellect\Data\intellect.mdb.

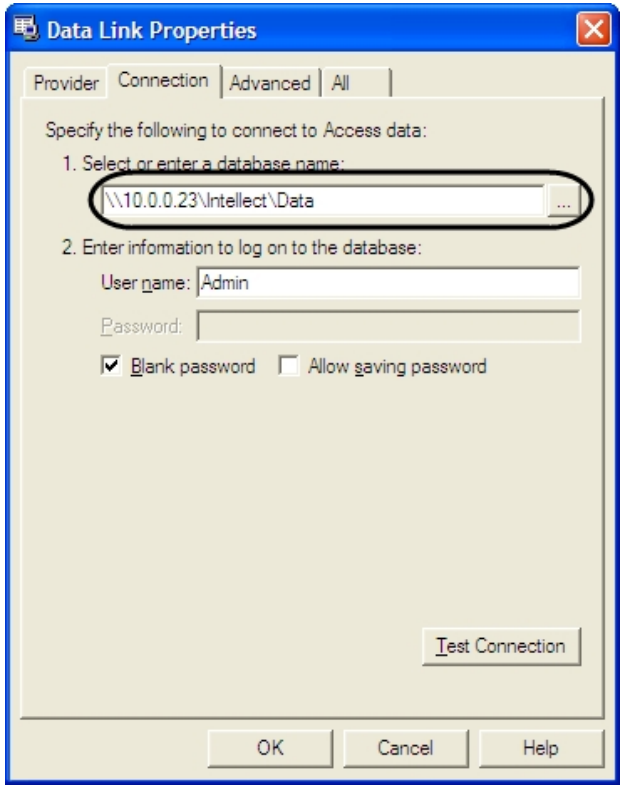

3. Test the connection to the database. To do this, click the **Test Connection** button.

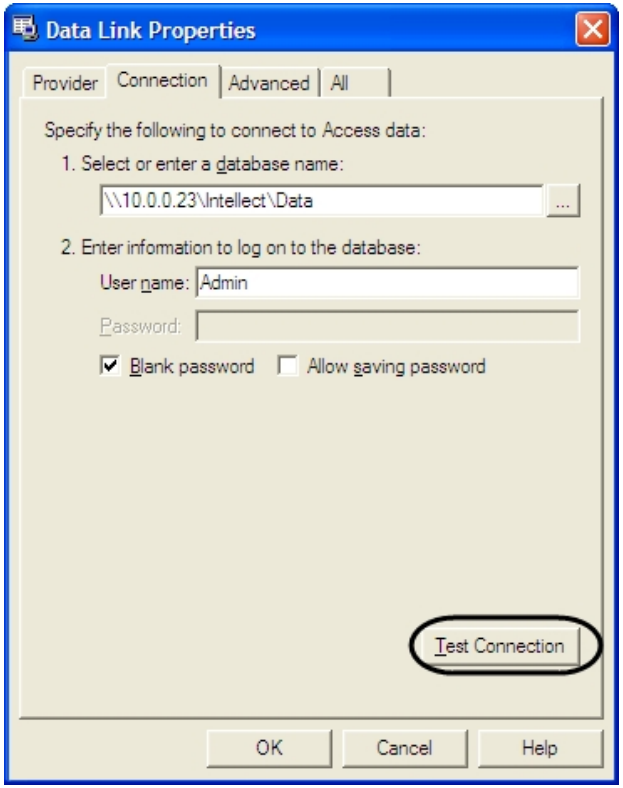

4. The information box with the text **Test connection succeeded** will appear in case of successful connection.

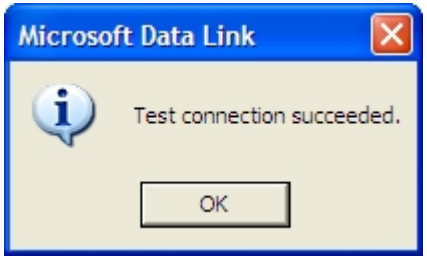

5. An information box with the error description will appear in case of a connection error.

> **Example:**
> If an invalid database address has been supplied, the following warning will open:

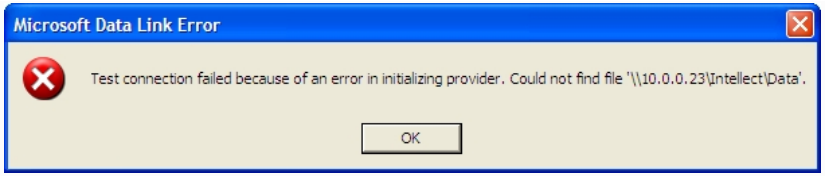

Note.
In case of connection error, check the connection parameters in the **Provider** and **Connection** tabs.

6. In case of a successful test, confirm the database change by clicking the **OK** button.

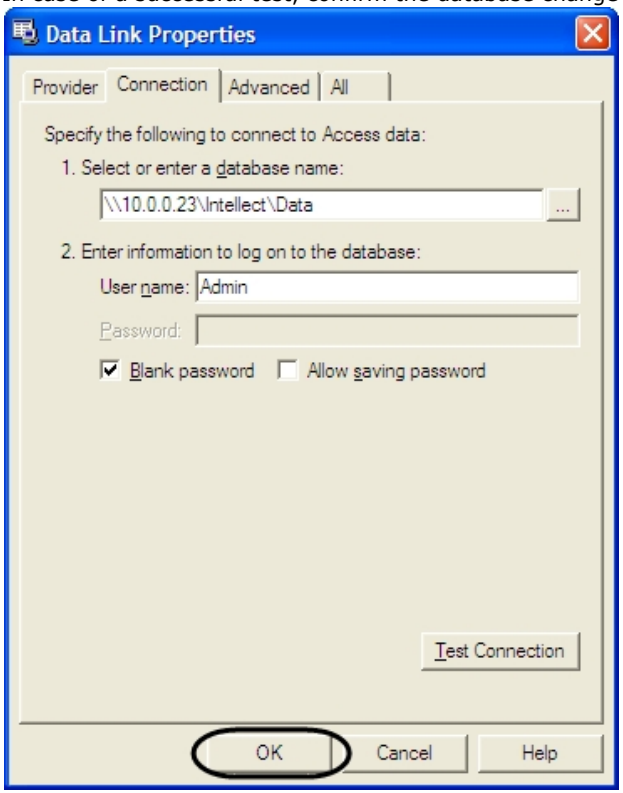

This completes the selection of the main database in Access format. The information from the selected database is now loaded into the Report system.

Selecting an SQL database and setting up its parameters

This section describes the connection to a Microsoft SQL database as the main *Intellect* database.

To connect a Microsoft SQL database, open the Data Link Properties window. To set the main database in Microsoft SQL format, do the following:

1. Select the **Microsoft OLE DB Provider for SQL Server** line in the **Provider** tab and click the **Next** button or move to the **Connection** tab.

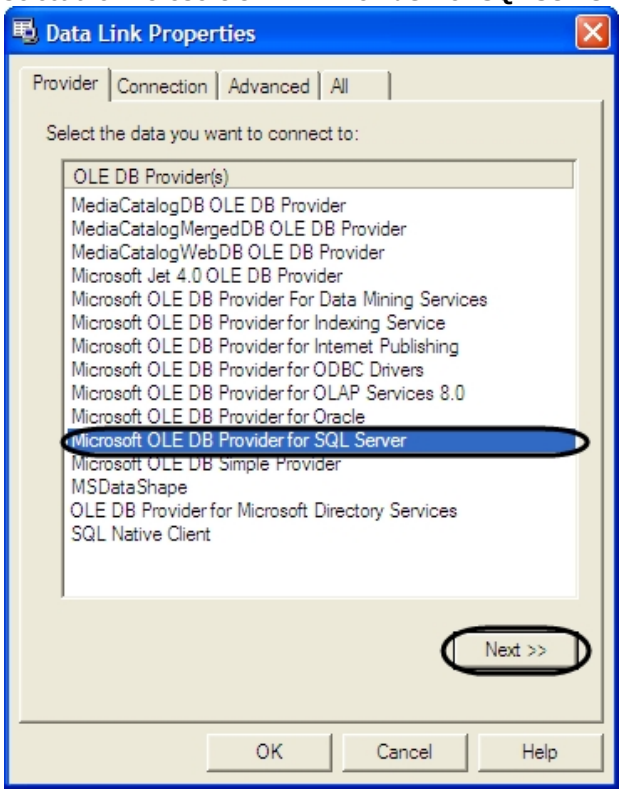

2. Specify the name of the database SQL server in the **Connection** tab. This can be done using the **Select or Enter a Server Name** field.
   To enter the SQL server name, do one of the following:
   a. manually enter the name of the SQL server of the main *Intellect* database in the **Select or Enter a Server Name** field.

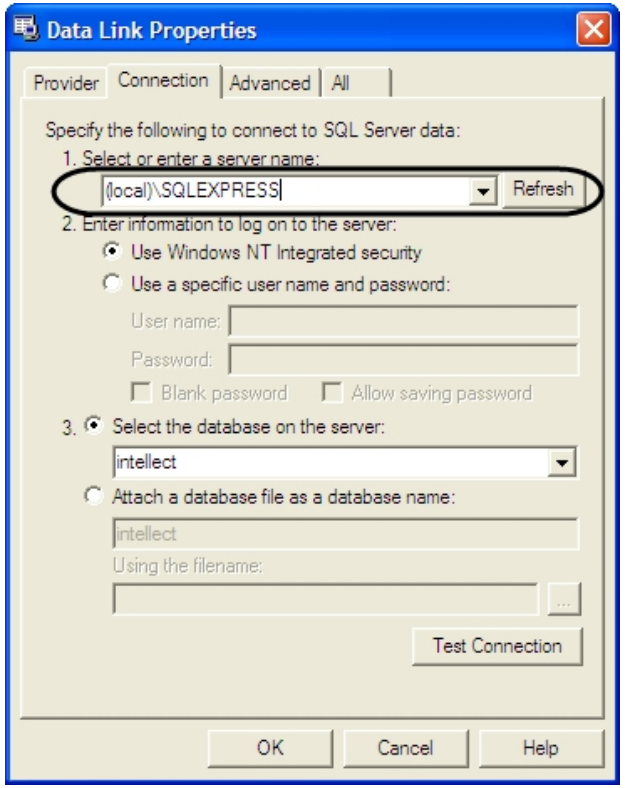

b. select the SQL server in the drop-down list of all available SQL servers. The list opens by clicking the button.

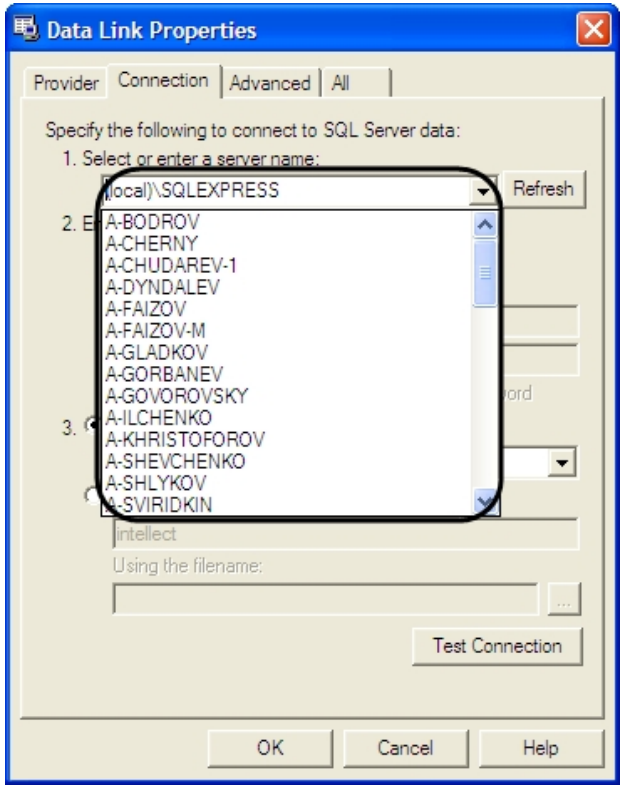

> **Note.**
> By default, the local server is selected named <local>\SQLEXPRESS.

> **Note.**
> To refresh the list of available servers, click the **Refresh** button next to the list field.

3. Specify the authorization parameters for logging onto the SQL server. The following options are available:
   a. The **Use Windows NT Integrated Security** radio-button. The Windows login information is used for authorization on the SQL server.

> **Note.**
> Used mostly to connect to the local SQL server.

   b. The **Use Specific User name and Password** radio-button. The specific user name and password are used to connect to the SQL server.

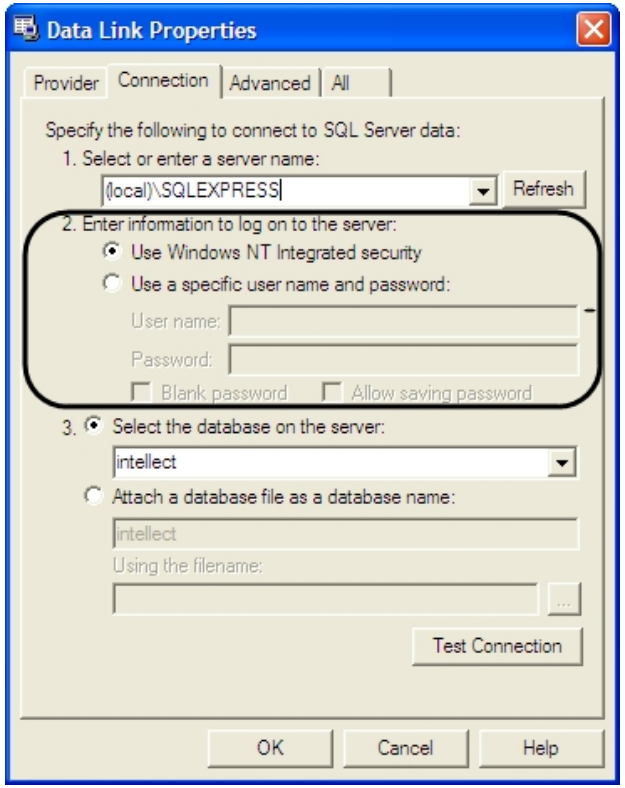

4. When the **Use Specific User name and Password** radio-button is selected, enter the information into the following fields: **User Name** and **Password**.

> **Note.**
> By default, the following information is set up during Intellect software installation: user name “sa”, password “axxonsoft” (see the Installing INTELLECT™ software section).

> **Note.**
> By default while installing the *Intellect* complex, the user(login) «sa» and Administrator password SQL Server (is registered while installing SQL Server, see Installing INTELLECT™ software) are set for authorization on SQL server

5. When the **Use Specific User name and Password** radio-button is selected, the **Blank Password** and **Allow Saving Password** checkboxes become enabled.

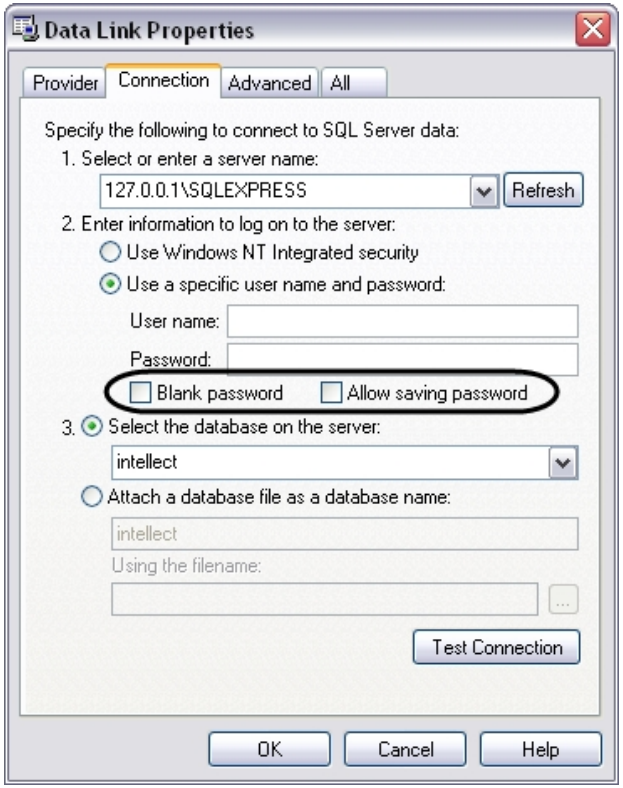

The **Blank Password** checkbox allows to enable connection to the SQL server with no password.
The **Allow Saving Password** button saves the password for the next connection to the SQL server.

6. Select the database to be used as main in the **Select the Database on the Server** drop-down list. To open the list of available databases on the SQL server, click the button.

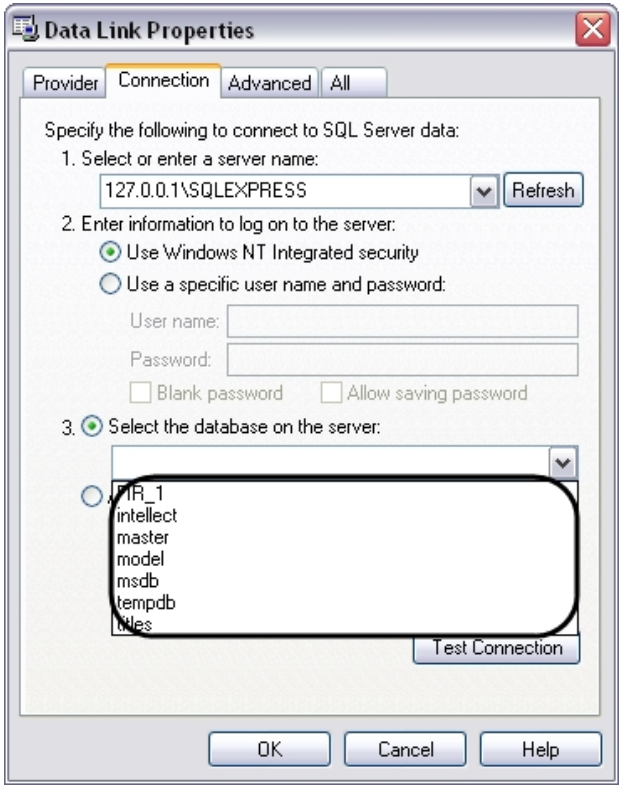

Note.
If necessary, the name of the database to connect to can be entered in the **Attach Database File** as **Database Name** field, or in the **Using the Filename** field.

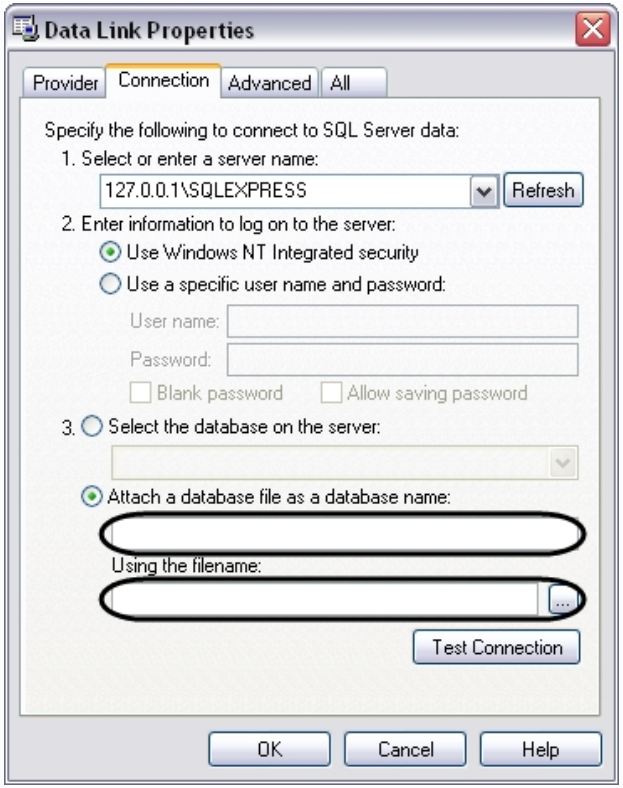

7. Test the connection to the SQL server by clicking the **Test Connection** button.

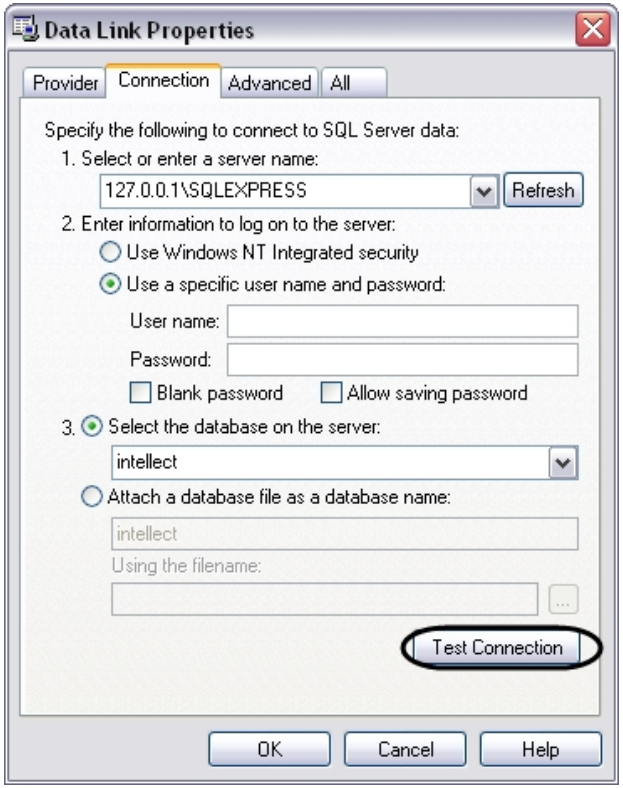

The information box showing the message "Test connection succeeded" will appear in case of successful connection.

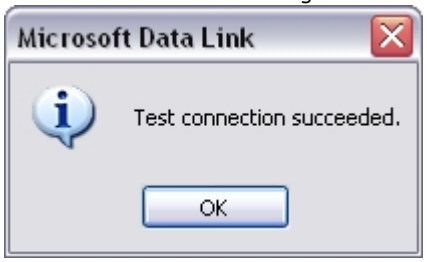

An information box with the error description will appear in case of connection error.

> **Note.**
> In case of connection errors, check the connection parameters in the **Provider** and **Connection** tabs.

8. In case of a successful test, confirm the database change by clicking the **OK** button.

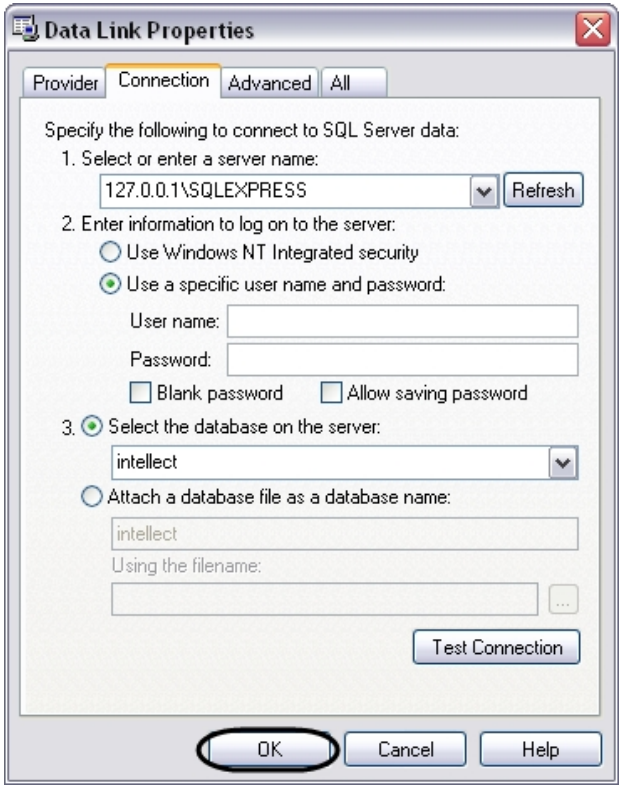

This completes the selection of the main database in Microsoft SQL format. The information from the selected database is now loaded into the Report system.

Connecting to the Events Log (PROTOCOL table)

By default, the information on registered events is stored in the PROTOCOL table in the main database. However, there is an option to set up the events to be logged into a separate events database, that is, the PROTOCOL table to be separate from the main database. The creation of the separate events database is described in the corresponding sections.

To connect the events database to the Report system, do the following:

1. Click the **Settings** button in the main Report system window to open the **OptionsForm** window.

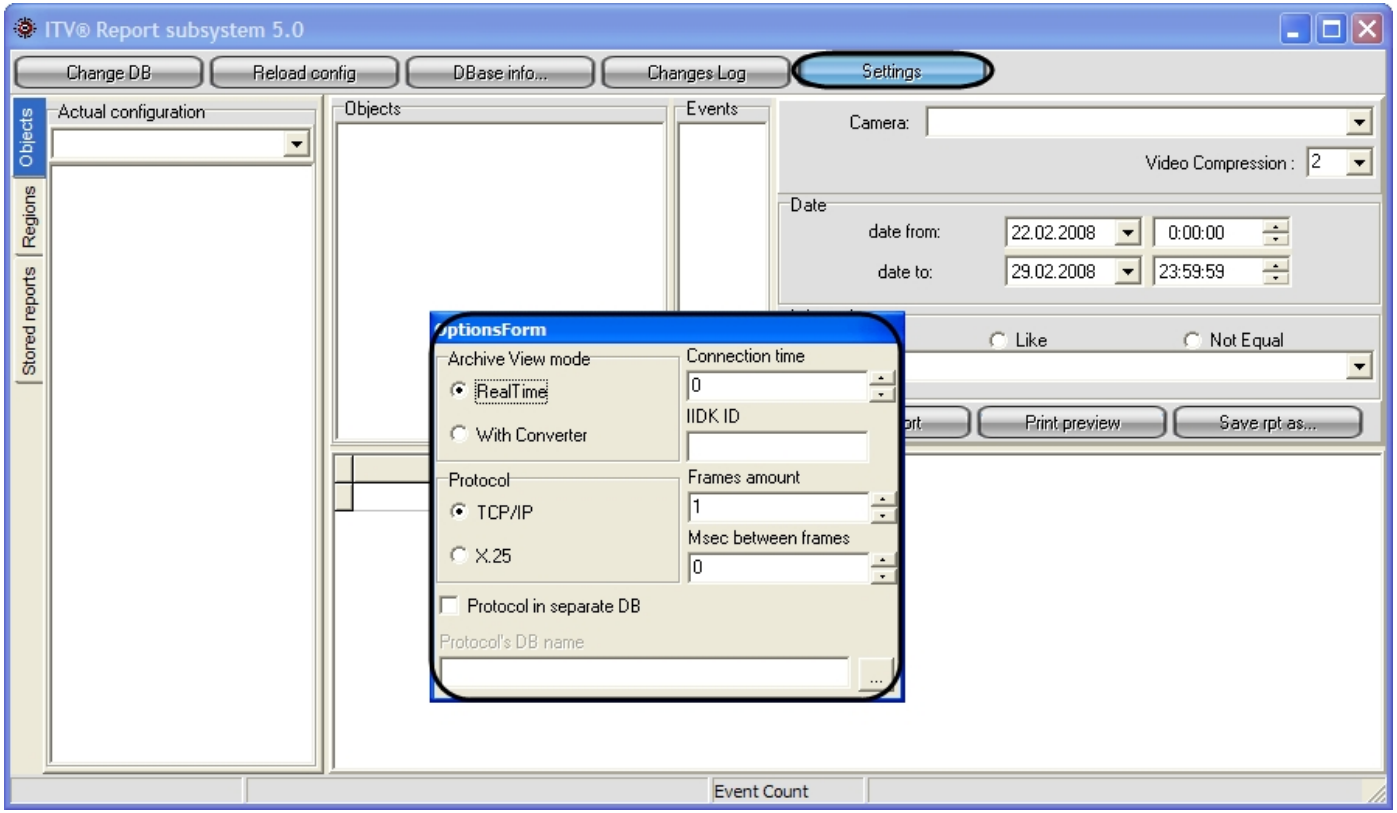

2. Check the **Protocol in Separate DB** checkbox to enable connection to a separate event database. Specify the name of the database in the **Protocol's DB Nam**e field.

3. To select the events database, click the button . The **Data Link Properties** window will open. Specify the type of events database, its pathname and access parameters (similar to changing the main database of the Report system).

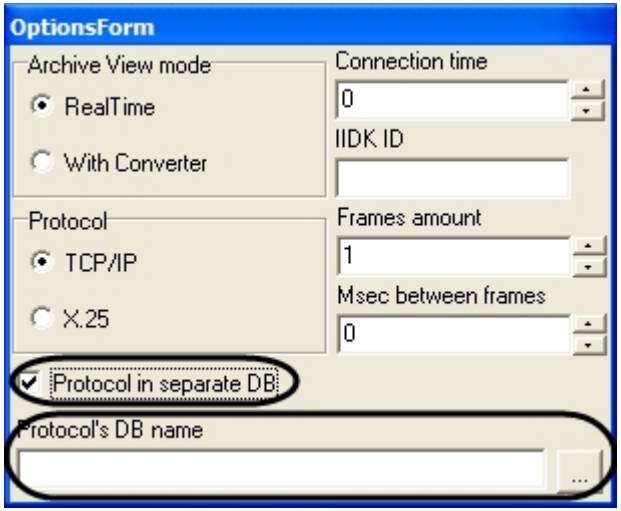

4. Press the **Escape** key on the keyboard to close the **OptionsForm** window.

This completes the selection of the events database in the Report system. The information from the selected database is now loaded into the Report system.

Manual loading of the configuration and registered events from the database

The system configuration and registered events are loaded from the database into the Report system in the following cases: Report system start-up, connection to the database, changing the database.

The configuration and events database can be loaded manually, as well. To reload the configuration and events database, click the **Reload Config** button on the main control panel of the Report window.

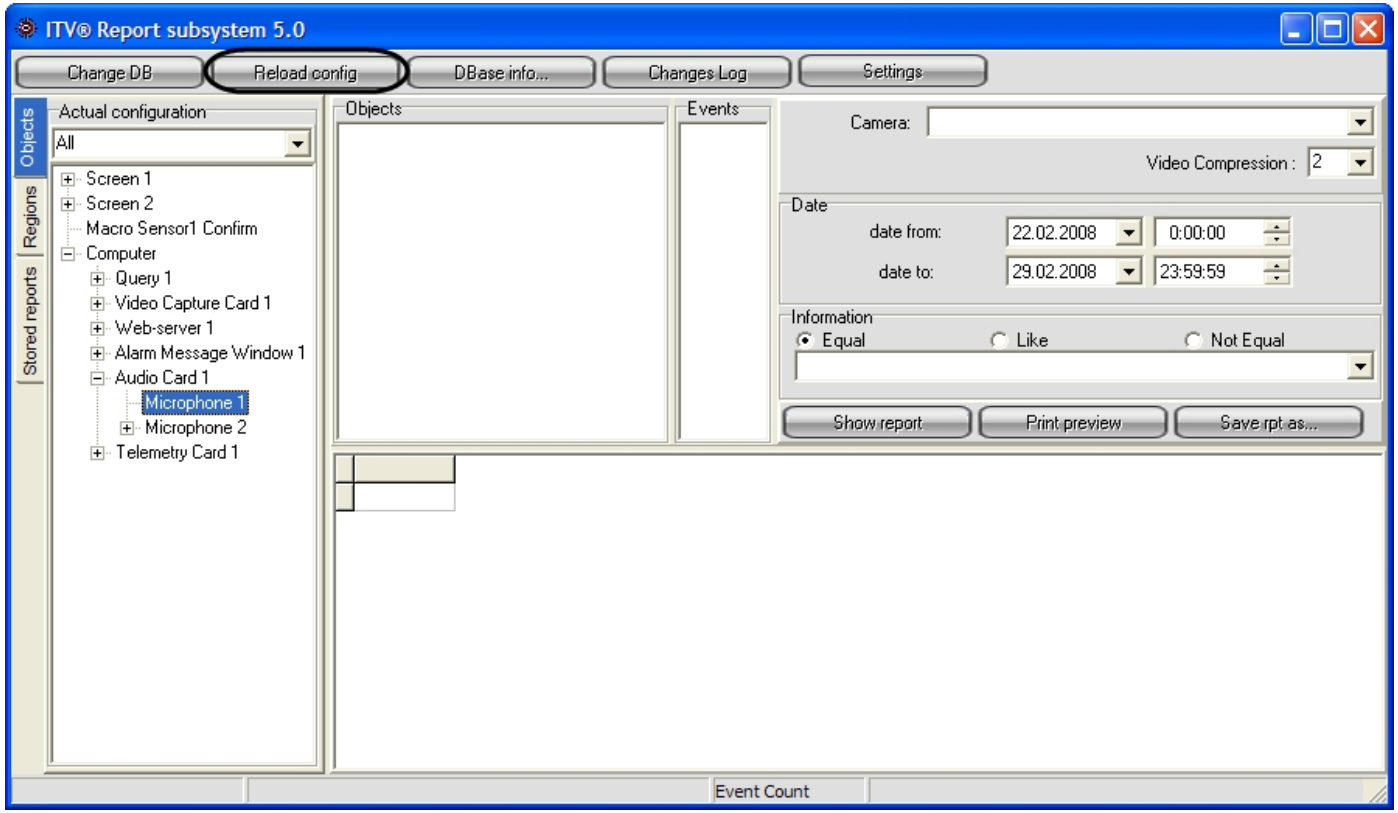

The objects tree, the regions list, the report templates list, and the registered events list will be refreshed according to the new system configuration.

Viewing the general information on the events in the database

To view the general information on the events stored in the current database, click the DBase Info button on the main control panel.

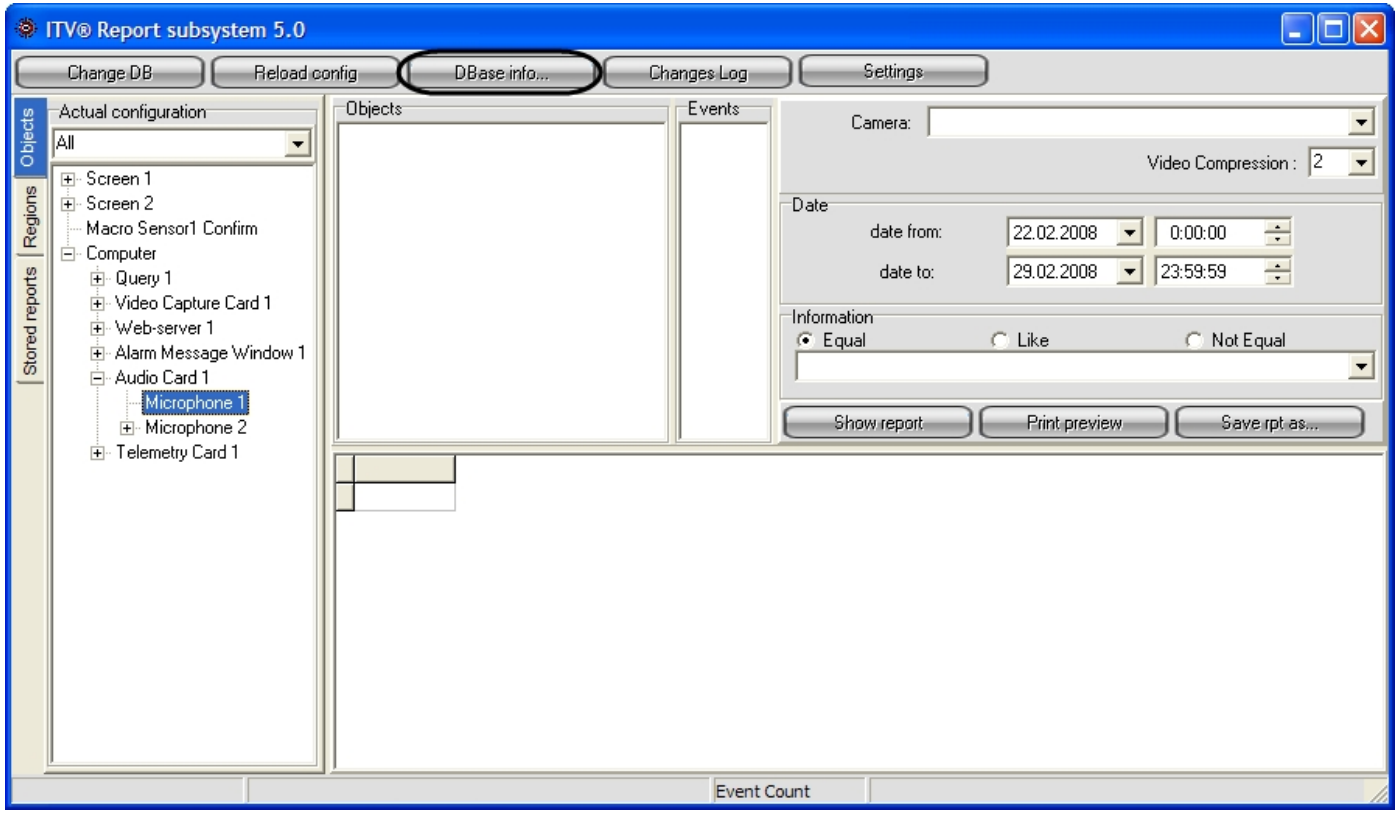

The **Base Info** information box will open showing the general information about the database.

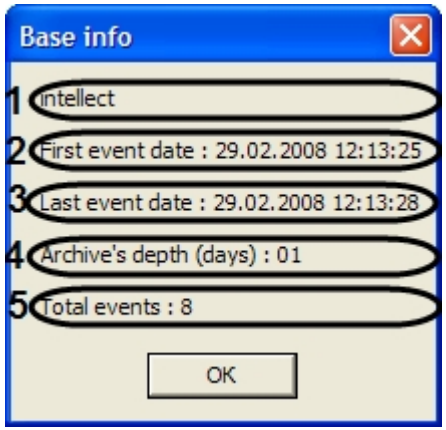

The following information is displayed:

1. The name of the current database.
2. The date of the first registered event in the current database.
3. The date of the last registered event in the current database.
4. The number of days between the first and the last event.
5. Total number of events in the database.

Creating the log of changes made to the system configuration

The Report system allows viewing the log of all changes made to the system configuration.

To view the configuration changes, click the **Changes Log** button on the main control panel.

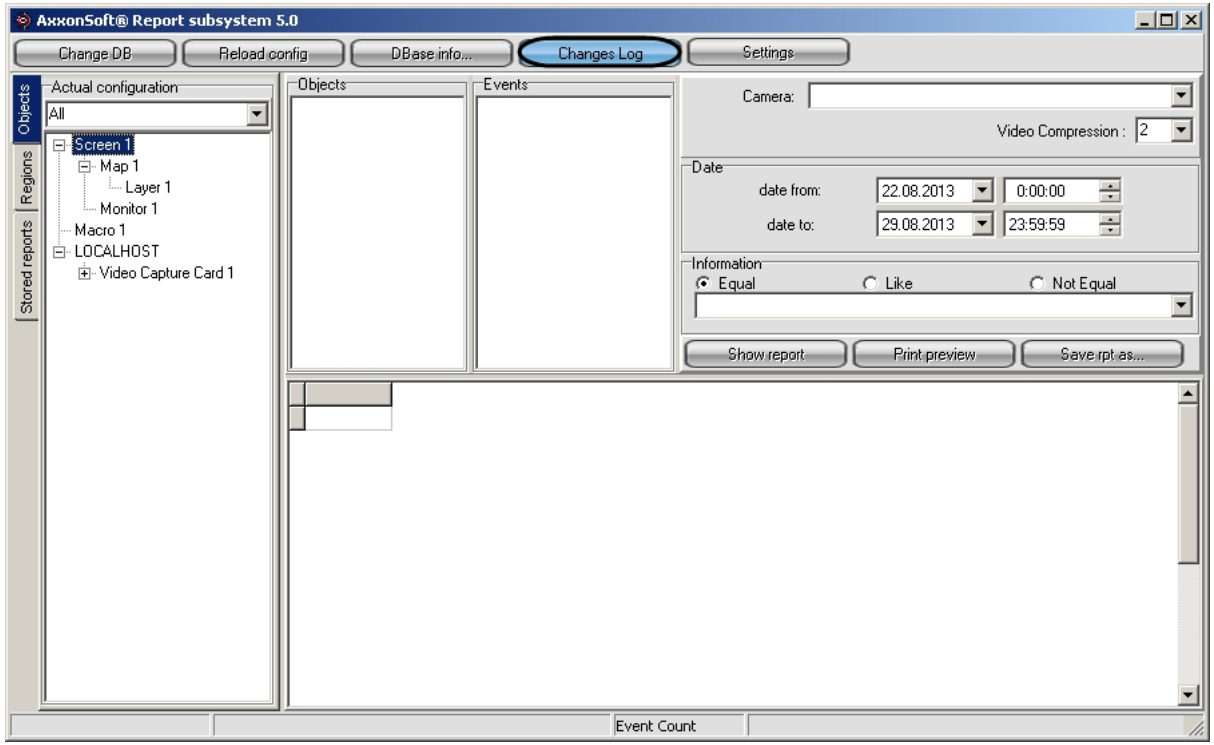

The screen report section of the window will show the list of changes made to the system configuration.

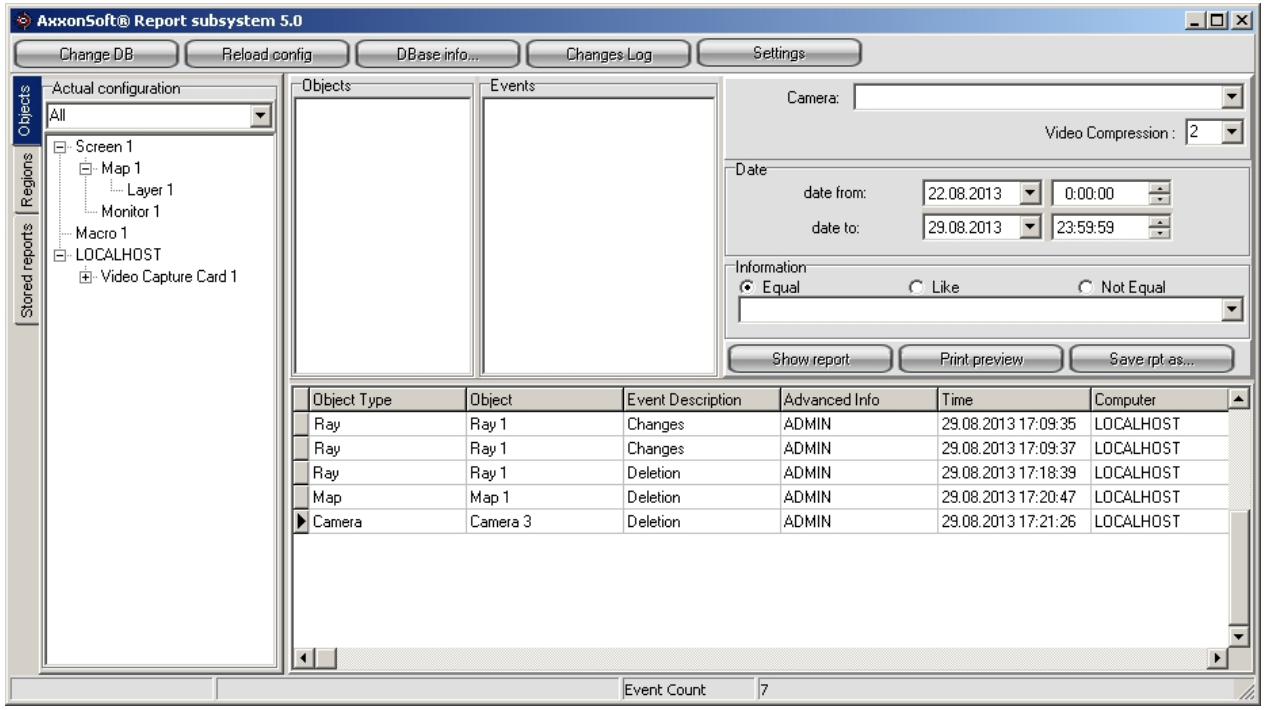

The changes log includes the following columns:

1. **Object Type** —the type of the object that has been changed.
2. **Object** — the name of the object that has been changed.
3. **Event Description** — the type of the change made to the object.
4. **Advanced Info** — additional information on the change.
5. **Time** — date and time of change.
6. **Computer** — the name of the computer where the change has been made.

Using the report templates in the Report system

The report templates can be created in the Report system. The templates help automate the process of creating the screen and printed reports for a selected list of objects for particular time periods.

A report template comprises of a list of objects and events related to these objects. When the template is created, the list of objects and events is formed. To create a particular screen or printed report based on this template, only the time interval should be specified.

Recommendations for template creation

We do not recommend including too many objects in a template. If the template includes too many objects, the request on all events related to these objects, will take a very long time to execute, or will fail.

We recommend creating smaller templates that group the objects according to different regions of the guarded area.

We do not recommend including more than 200 objects in one template.

Creating a report template

To create a report template, the object list should be formed. This can be done using the **Objects and Regions** tabs, and the **Objects** panel. The list of events for each object can be formed using the Events panel.

The Figure shows the stages of template creation.

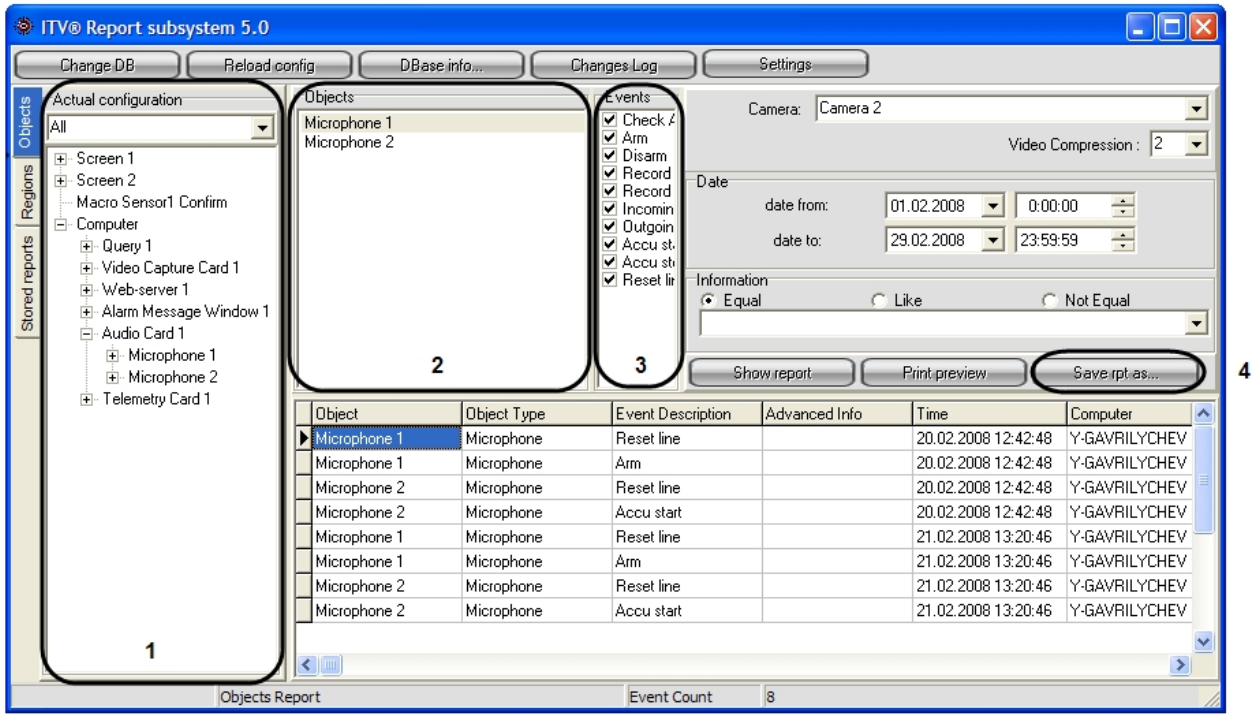

To create the template, do the following:

1. Click the **Objects** tab, then choose the complete objects tree or just one object type (ex., **Camera**) in the **Actual Configuration** drop-down list.

To select objects in regions, click the **Regions** tab and choose the required region type in the **Regions** drop-down list.

1. Place the required objects into the **Objects** panel. Select an object in the objects tree (**Actual Configuration** panel of the **Objects** tab or **Regions** panel of the **Regions** tab) and do one of the following:
    a. double-click the object;
    b. select the object and press Enter on the keyboard;
    c. drag the object to the **Objects** panel.

> **Note.**

Only the objects with their own events can be placed onto the Object panel and thus included in the report. For example, the **Audio Card** object does not have any events of its own, so it cannot be included in the report template.

To remove the object from the report list, select the object in the **Objects** panel and press Delete on the keyboard.

2. Select the events in the **Events** panel, to be included in the report for each object in the **Objects** panel.
   By default, all events for selected objects are included. To remove particular events from the report, select an object in the **Object** panel and uncheck the checkboxes next to the events in the Events panel, which should not be included in the report template.
   To simplify editing of the events list for similar objects, a common list can be created for a group of objects. Select a group of objects in the **Objects** panel and edit the list of events. This list will relate to each of the selected objects.

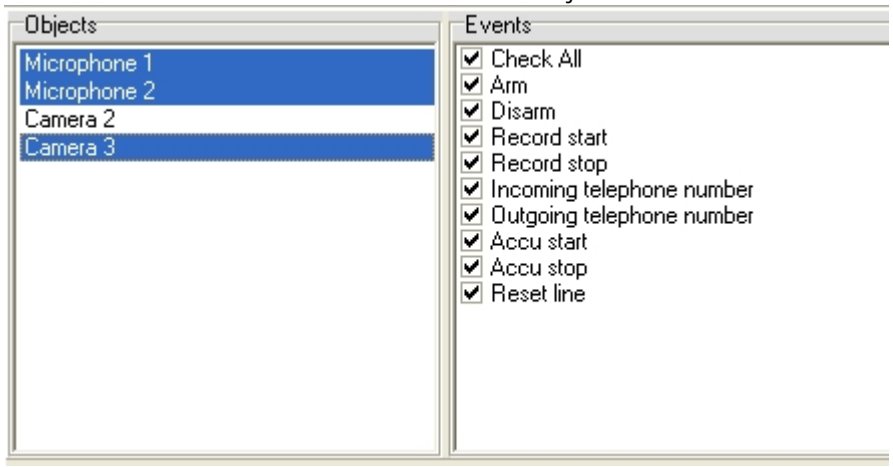

Note.
If no events are selected in the **Events** panel for an object, then ALL events for this object will be included in the report.

3. Click the **Save Rpt As** button. The **Please Input Report Name** dialog box will appear, allowing to specify the name of the report template.

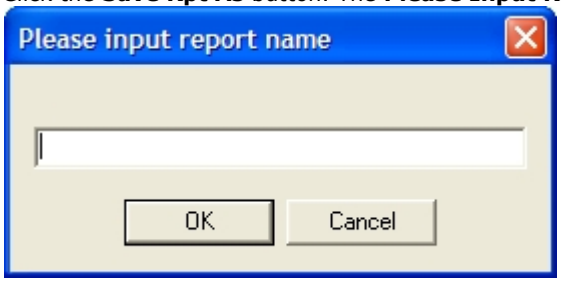

Type in the template name and click **OK**.

This completes the creation of the report template.

The template will appear in the objects tree of the **Shared Reports** tab. To view the template, use the **Objects** and **Events** panels. These panels are populated automatically upon template selection in the **Shared Reports** objects tree. These panels allow editing the events list and removing the objects from the list. The changes will be saved in the template.

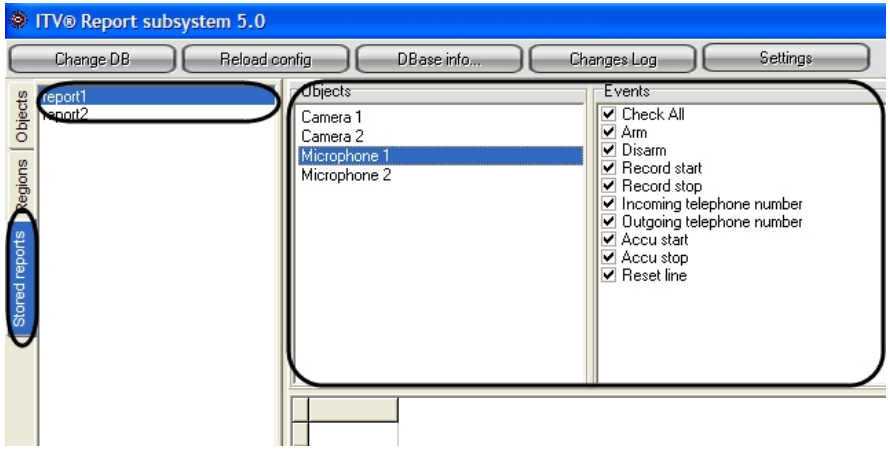

Deleting the report templates

To delete the template, do the following:

1. Open the **Shared Reports** tab;
2. Select the template to be deleted;
3. Press Ctrl+Delete on the keyboard;
4. Click **Yes** in the confirmation dialog box.

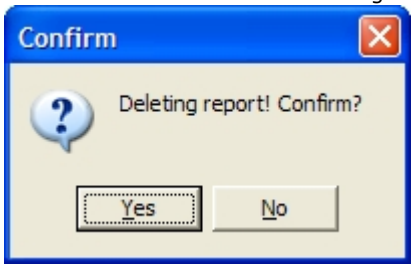

This completes deletion of the report template.

Using screen and printed reports

The screen and printed reports can be created in the Report system.

A screen or printed report is a table showing the dates of the registered events, the videoservers that generated the event, and other relevant information.

The screen report allows viewing the information on the objects and events in the Report window. The screen report allows playing the recordings from the videoserver for each of the records in the report. The video archive can be played from the screen report using the surveillance window or converter.exe utility.

Note.
The playing of the recording in the surveillance window is possible if the *Intellect* software is running on the videoserver.

The printed report is used for printing the report or exporting it into one of the common file formats. When the printed report is created, all information about the selected objects and events is displayed in a separate window.

Creating a screen report

The screen report provides the means for convenient viewing of the registered events and playback of the video recordings from the videoserver archive.

Figure shows the stages of the screen report creation.

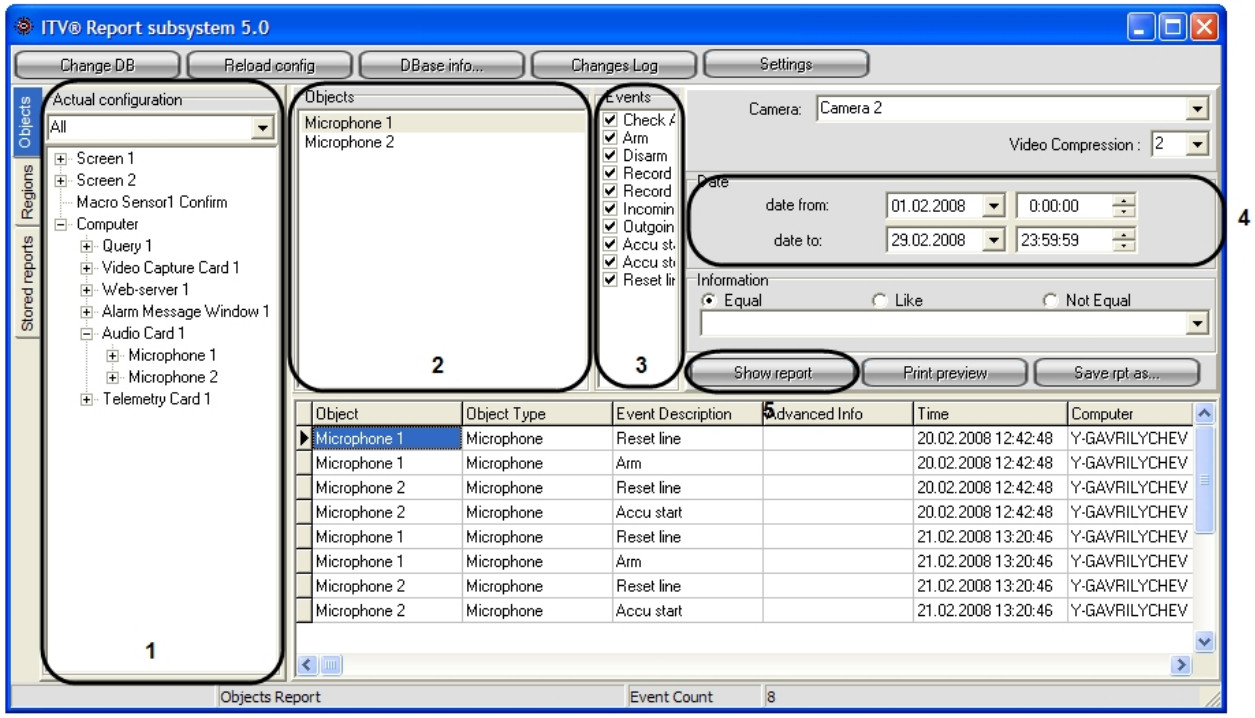

To create the screen report, do the following:

1. Click the **Objects** tab, then choose the complete objects tree or just one object type (ex., **Camera**) in the **Actual Configuration** drop-down list.
   To select objects in regions, click the **Regions** tab and choose the required region type in the **Regions** drop-down list.
2. Place the required objects into the **Objects** panel. Select an object in the objects tree (**Actual Configuration** panel of the **Objects** tab or **Regions** panel of the **Regions** tab) and do one of the following:
   a. double-click the object;
   b. select the object and press Enter on the keyboard;
   c. drag the object to the **Objects** panel.

> **Note.**
> Only the objects with their own events can be placed onto the **Object** panel and thus included in the report. For example, the **Audio Card** object does not have any events of its own, so it cannot be included in the report template.

To remove the object from the report list, select the object in the **Objects** panel and press Delete on the keyboard.

3. Select the events in the **Events** panel, to be included in the report for each object in the **Objects** panel.
   By default, all events for selected objects are included. To remove particular events from the report, select an object in the **Object** panel and uncheck the checkboxes next to the events in the **Events** panel, which should not be included in the report template.
   To simplify the editing of the events list for similar objects, a common list can be created for a group of objects. Select a group of objects in the **Objects** panel and edit the list of events. This list will relate to each of the selected objects.

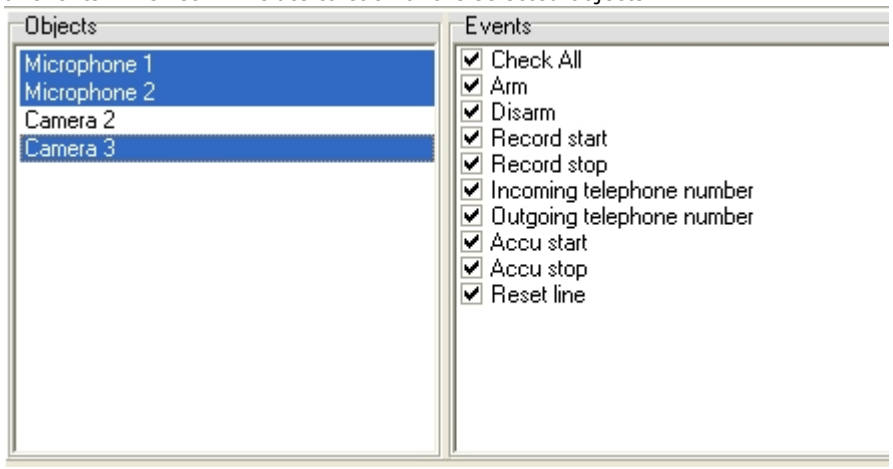

> **Note.**
> If no events are selected in the **Events** panel for an object, then ALL events for this object will be included in the report.

4. Specify the time period to create the report for, in the **Date** group of fields.
5. Click the **Show Report** button to create the screen report.

> **Note.**
> Clicking the **Show Report** button is equivalent to pressing F5 on the keyboard.

This completes the creation of the screen report. The screen report will be displayed in the lower part of the Report window.

Creating a screen report from the report template

The report templates can be created in the Report system. The templates help automate the process of creating the screen and printed reports on a selected list of objects for particular time periods.

A report template comprises of a list of objects and events related to these objects. When the template is created, a list of objects and events is formed. To create a particular screen or printed report based on this template, only the time period should be specified.

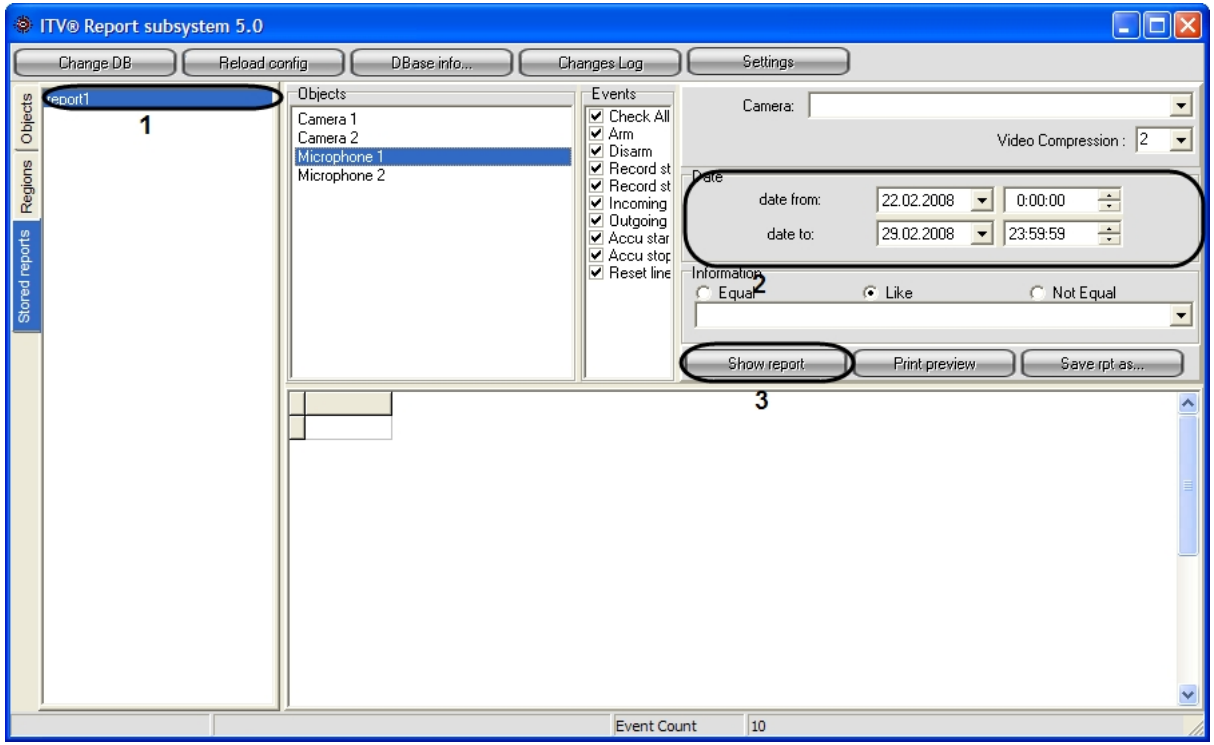

To create a screen report from the template, do the following:

1. Click the **Shared Reports** tab and select the required report template from the list.
2. Specify the time period to create the report for, in the **Date** group of fields.
3. Click the **Show Report** button to create the screen report.

> **Note.**
> Clicking the **Show Report** button is equivalent to pressing F5 on the keyboard.

This completes the creation of the screen report from the template. The screen report will be displayed in the lower part of the Report window.

Creating a printed report

The printed report allows convenient viewing of the report in a separate window or printing the report on paper.

Figure shows the stages of creation of the printed report.

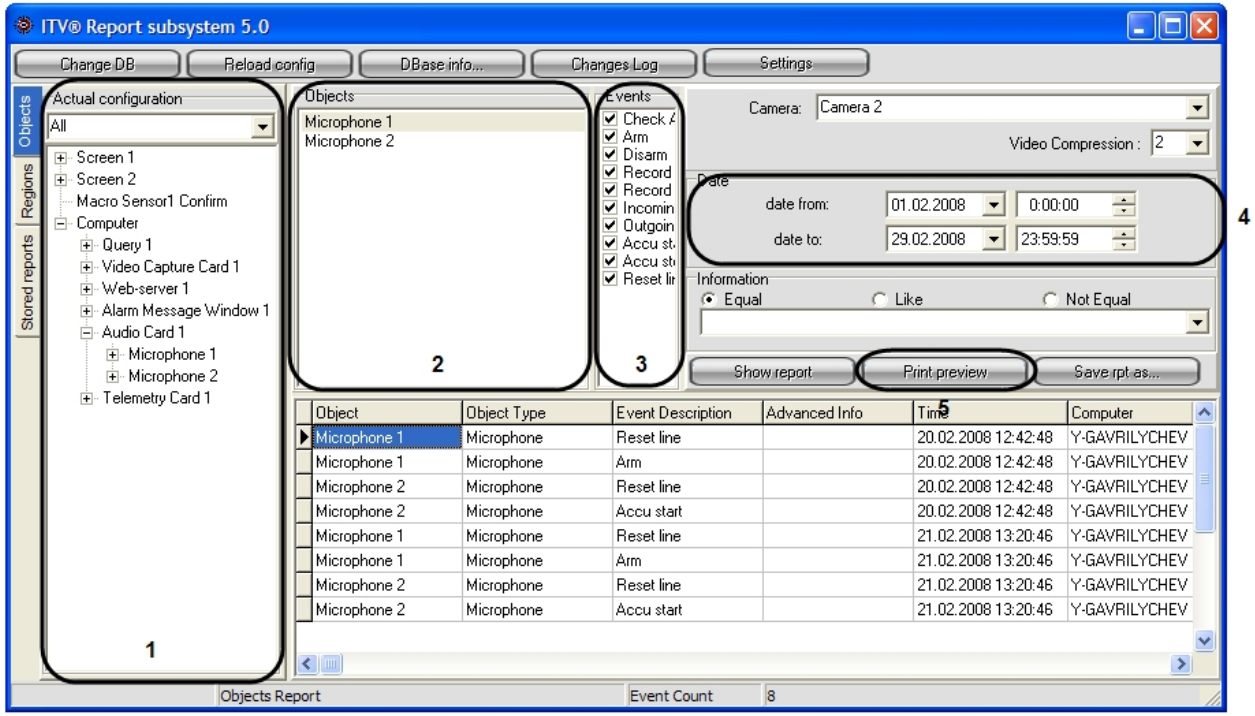

Creating a printed report is similar to the screen report creation procedure in p. 1 to 4 (see sections above).

To create a printed report, click the **Print Preview** button in p.5.

> **Note.**
> Clicking the **Print Preview** button is equivalent to pressing F6 on the keyboard.

This completes the creation of the printed report. The report will open in a separate window.

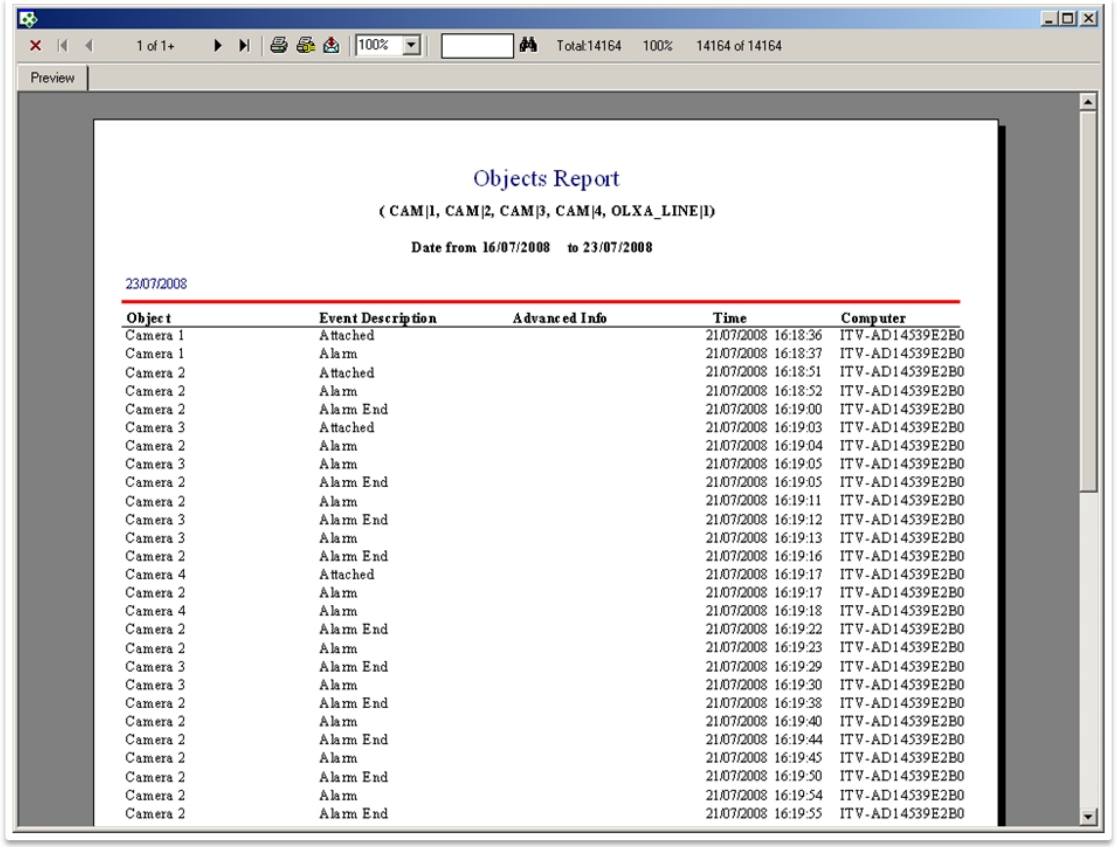

Creating a printed report from a report template

The report templates can be created in the Report system. The templates help automate the process of creating the screen and printed reports on a selected list of objects for particular time periods.

A report template comprises of a list of objects and events related to these objects. When the template is created, a list of objects and events is formed. To create a particular screen or printed report based on this template, only the time period should be specified.

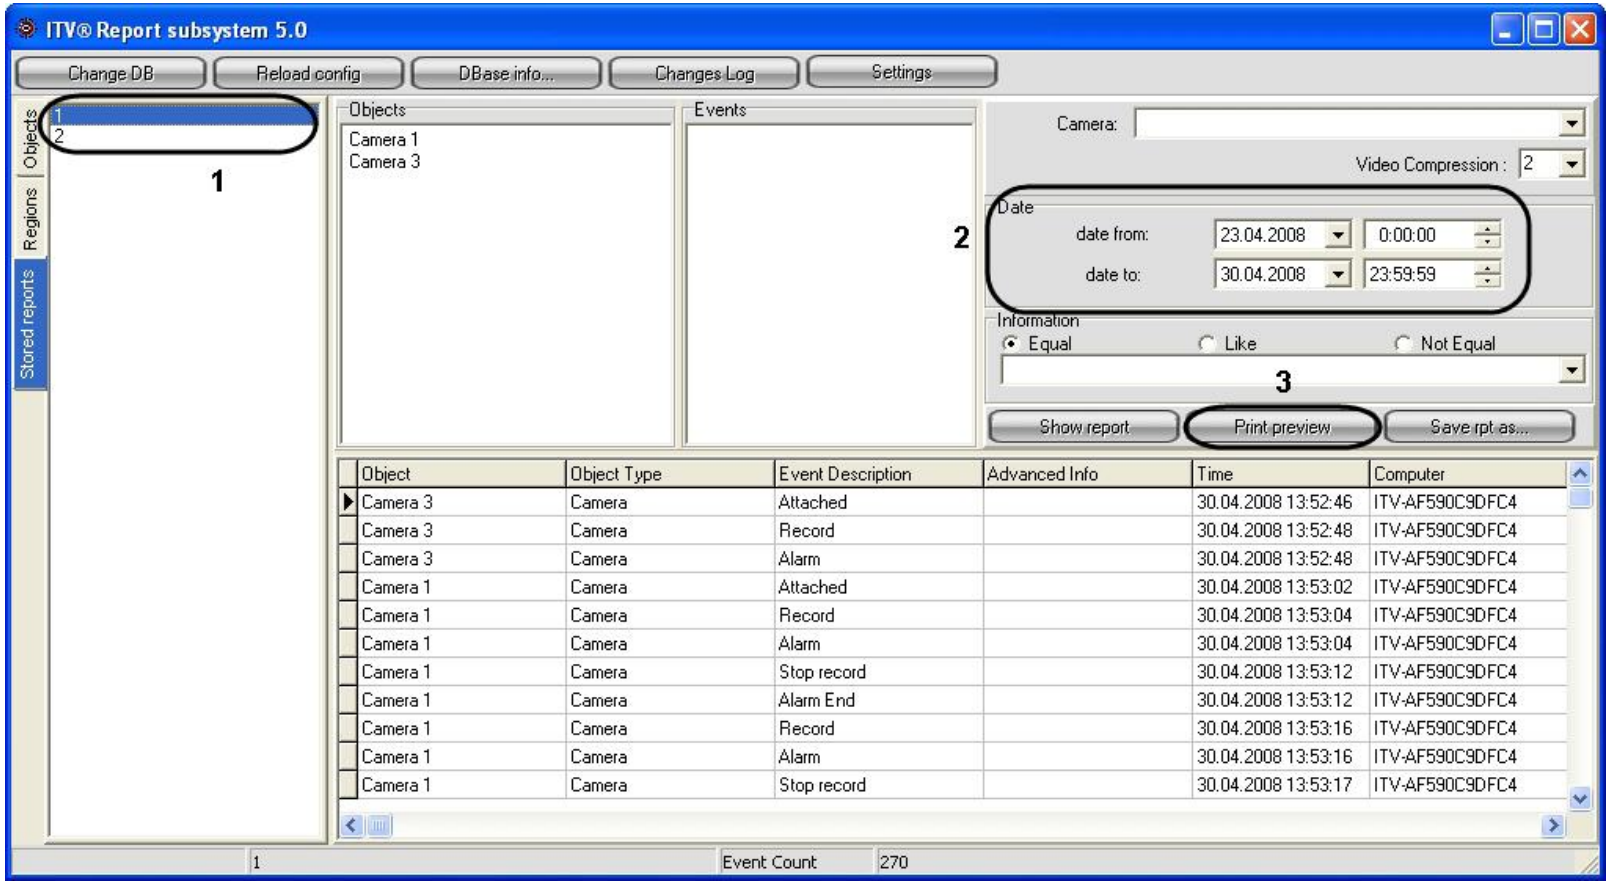

Creating a printed report is similar to the screen report creation procedure in p. 1 to 2 (see the Creating a screen report from the report template section above).

To create a printed report from the template, click the **Print Preview** button in p.3.

> **Note.**
> Clicking the **Print Preview** button is equivalent to pressing F6 on the keyboard.

This completes the creation of the printed report from the template. The report will open in a separate window.

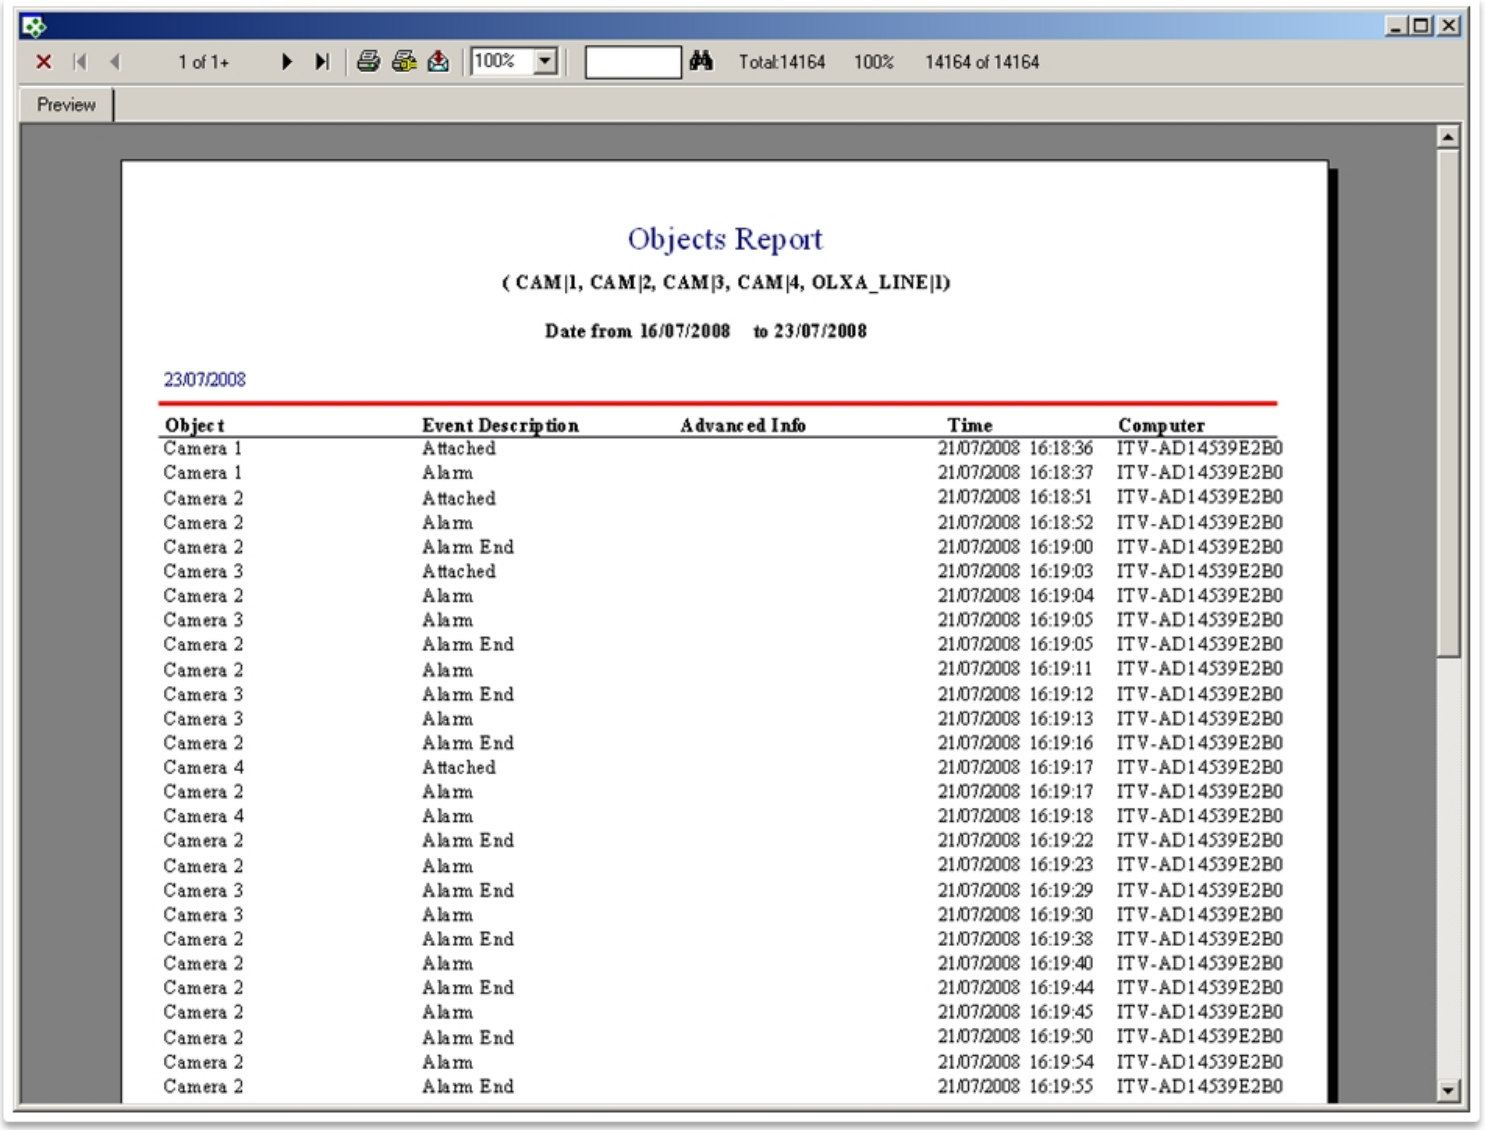

Printing the report

The report templates can be created in the Report system. The templates help automate the process of creating the screen and printed reports on a selected list of objects for particular time periods.

A report template comprises of a list of objects and events related to these objects. When the template is created, a list of objects and events is formed. To create a particular screen or

printed report based on this template, only the time period should be specified.

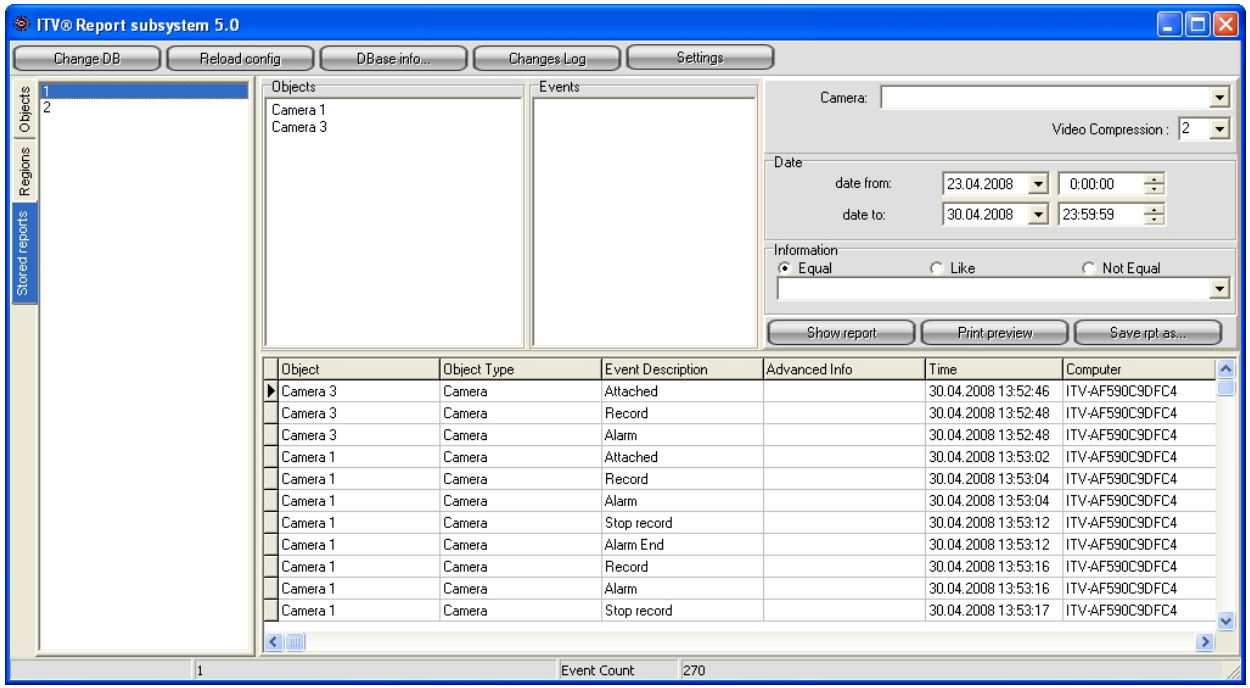

Creating a printed report is similar to the screen report creation procedure in p. 1 to 2 (see the Creating a screen report from the report template section above).

To create a printed report from the template, click the **Print Preview** button in p.3.

> **Note.**
> Clicking the **Print Preview** button is equivalent to pressing F6 on the keyboard.

This completes the creation of the printed report from the template. The report will open in a separate window.

Exporting the report to a file

The Report system allows exporting the created report into one of the commonly used file formats.

The report to be exported opens in a separate window .

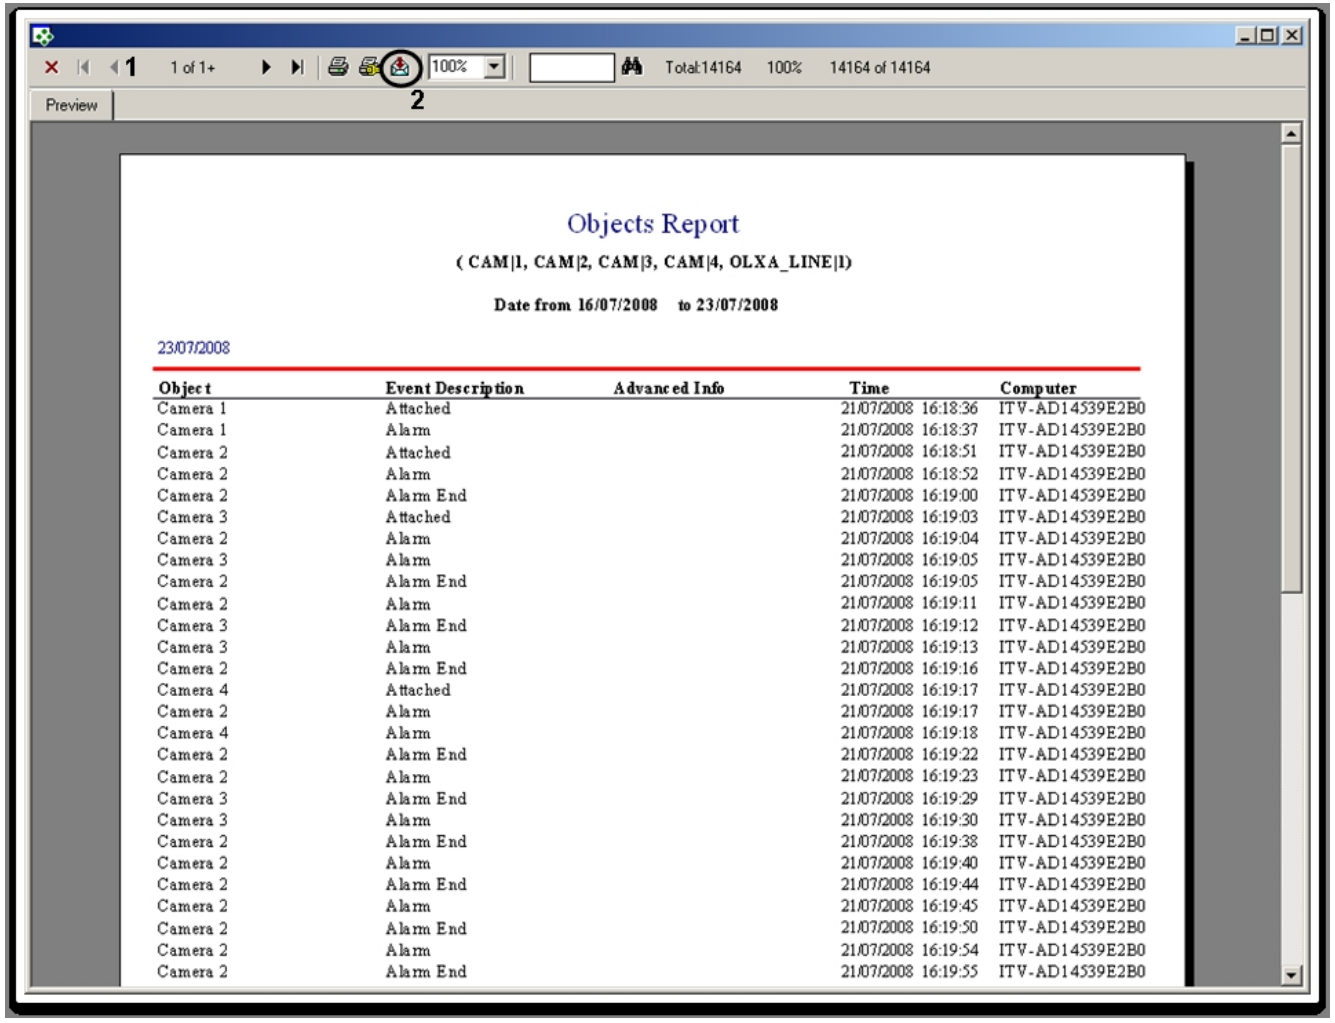

The report is exported from the printed report window. To export the report, do the following:

1. Create the printed report (see the Creating a Printed Report section).
2. Click the **Export** button in the window showing the report.
3. Specify the following in the **Export** dialog box:
    a. in the **Format** drop-down list, select the format to export the report to

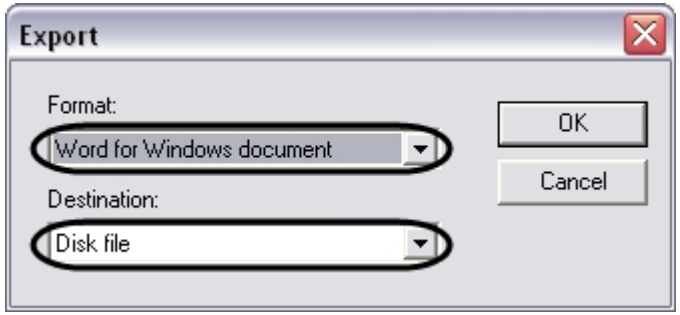

b. in the **Destination** drop-down list, select the action to be taken. The **Destination** list contains the following options:
   i. **Application** – open the exported file in the corresponding application.
   ii. **Disk File** – save the exported file to disk in a specified format.
   iii. **Exchange Folder** – send the file to Microsoft Exchange project.
   iv. **Lotus Domino** – send the file to Lotus project.
   v. **Microsoft Mail (MAPI)** – send the file via Windows mail client.

> **Note.**
> The Destination list is disabled for some formats.

4. Click the **OK** button in the Export window.
5. If **Disk File** is selected in the **Destination** list, the **Choose Export File** dialog box will appear. Select the folder and filename to save the report to.

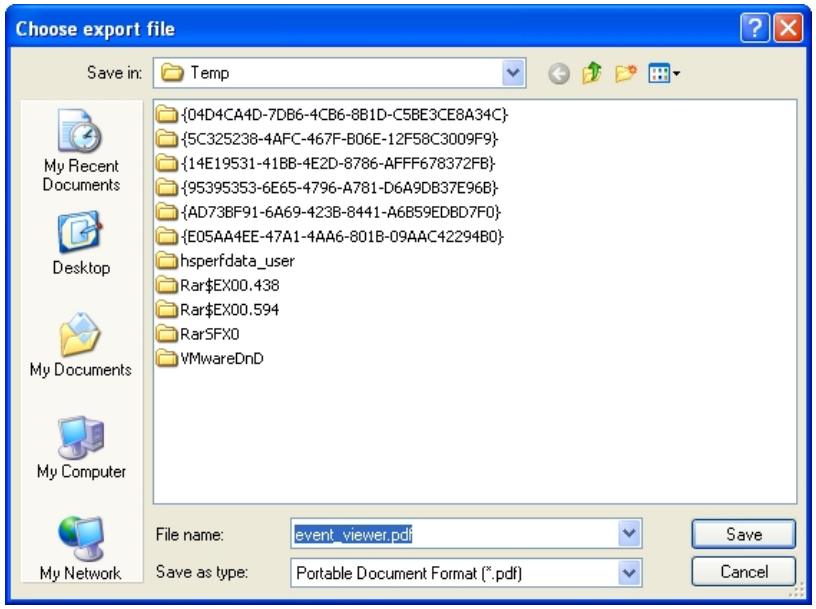

Specify the filename and folder and click the **Save** button.

Note.
The **Choose Export File** window does not open for some file formats.

This completes the exporting of the report into a file.

Video recording playback from the Report system

The Report system allows playback of the video recordings related to a selected event from the screen report. The video playback starts from the moment the event occurred.

The recordings are played using the Converter.exe utility or the surveillance window of the corresponding camera. The playback option is selected in the Report system settings window (See the OptionsForm Window section).

Note.
To play the video recordings directly in the surveillance window, start the *Intellect* software, and create and set up the surveillance window.

Playback of the video recordings from the Report system

To play the video recordings from the Report system, do the following:

1. Create the screen report (see the Creating a screen report section).

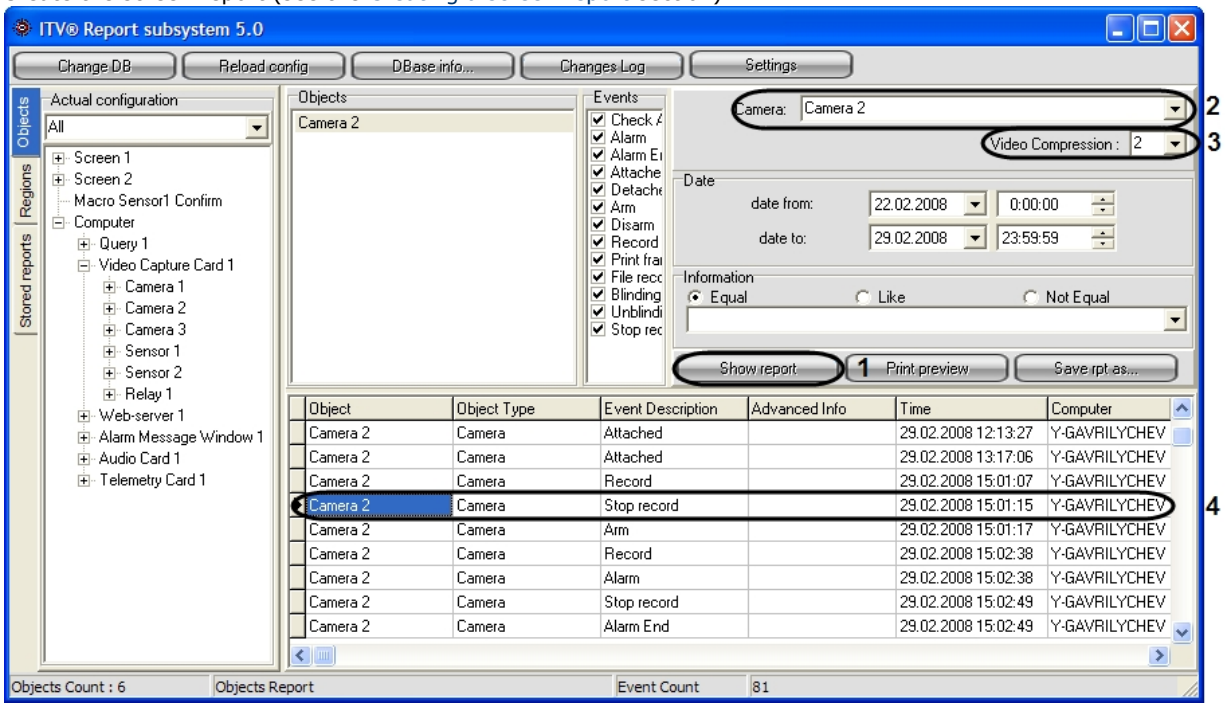

2. Select the camera from the list of all camera names in the system.
By default, only the recordings from the **Camera** objects are played from the screen report. The recording from the camera that generated the event shown in the **Event**

Description column, is played. No recording is played for other objects.
The camera whose archive will be played, should be selected in the **Camera** field.

3. Specify the compression level for the playback.
4. Double-click the event in the screen report.

The converter.exe utility or the surveillance window will open, showing the recording for the time specified in the **Data** column of the screen report for the selected event.

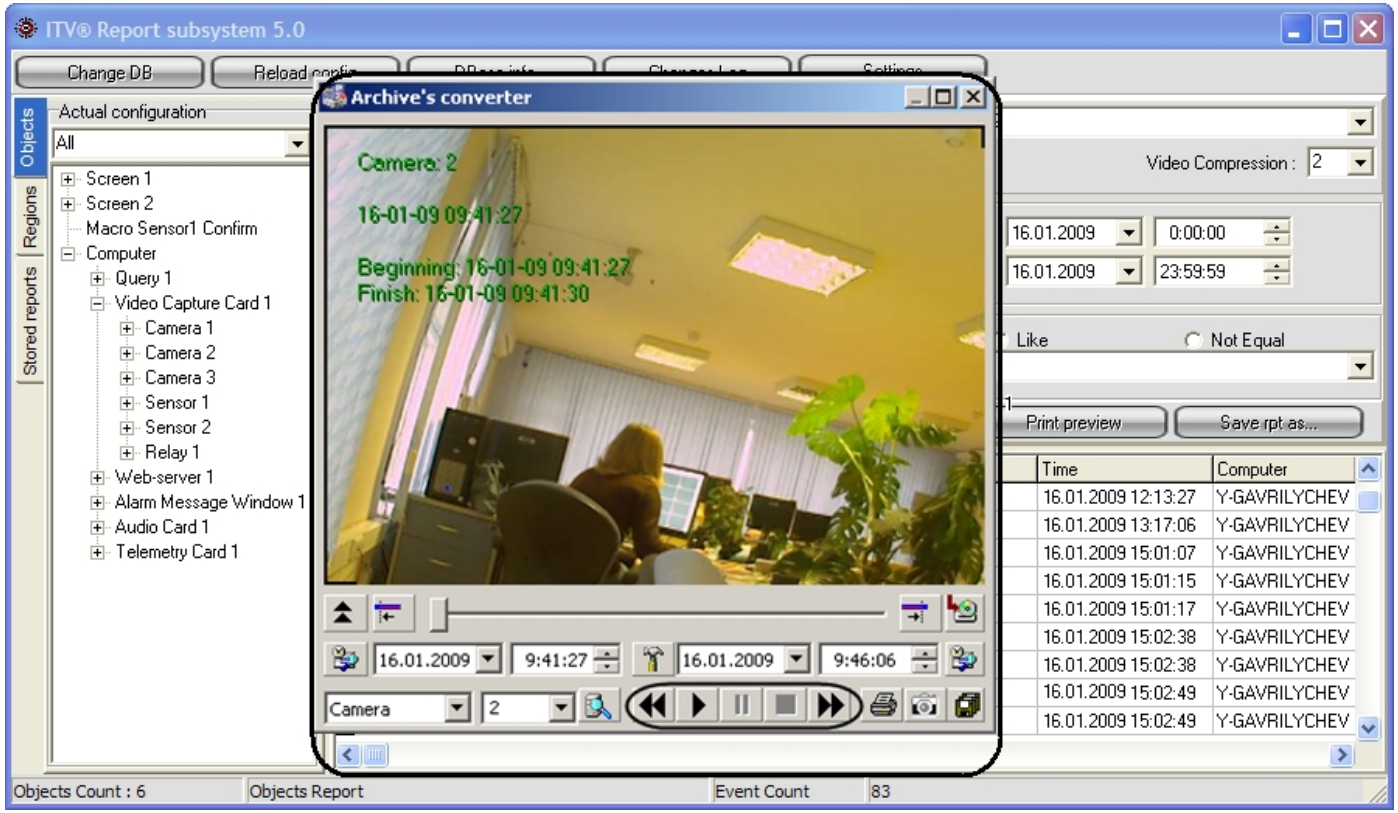

Selecting the playback mode of video recordings

The Report system provides twoways of playing the video recordings: using the Converter.exe utility or the surveillance window of the *Intellect* system.

> **Note.**
> To play the video recordings in the surveillance window, the Intellect system should be running on the server where the archive is taken from.

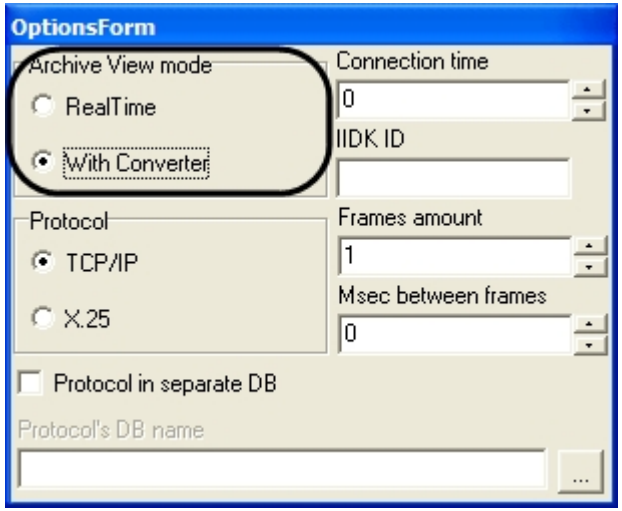

If the **RealTime** radio-button is selected, the archive will be played in the surveillance window. If the **With Converter** radio-button is selected, the archive will be played using the Converter.exe utility.

Filtering the events in the screen report according to the additional information

The Report system allows to show only the rows of the screen report containing particular additional information.

By default, the screen report contains all events that fit the report settings. To display only the rows that contain particular information, do the following:

> **Note.**
> The list is filtered by the **Advanced Info** column.

1. Create the screen report (see the Creating a screen report section).

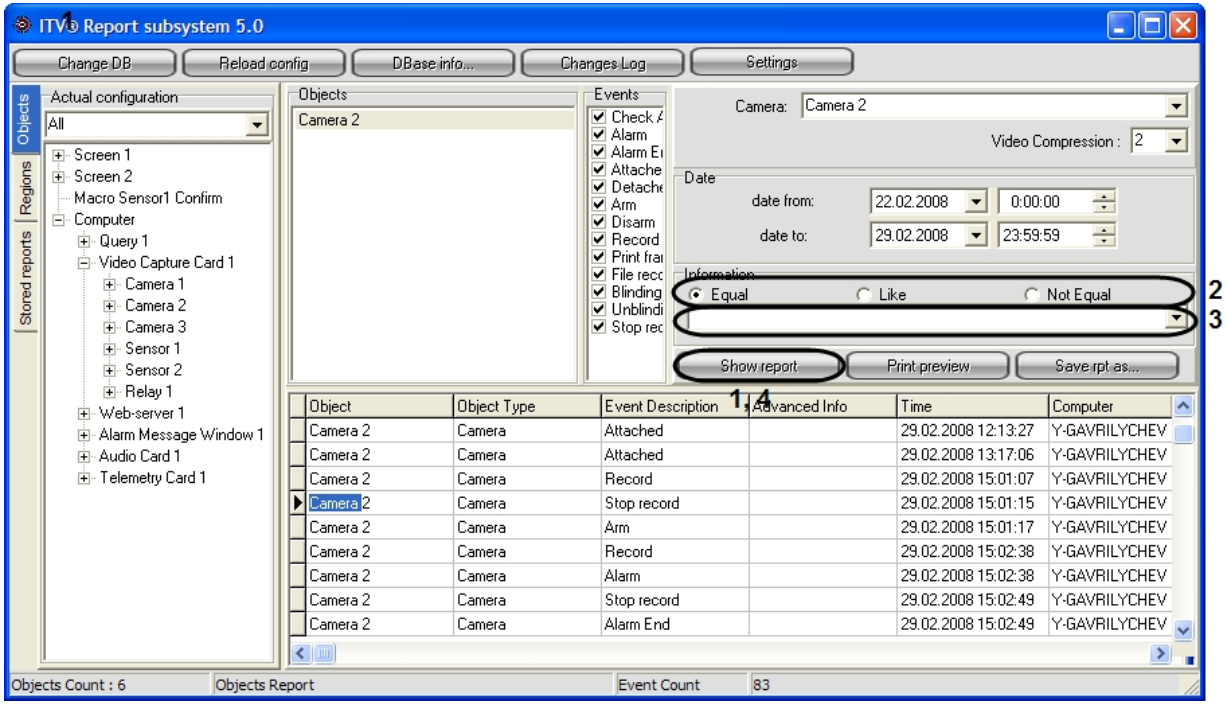

2. Select the filtering method using the Information radio-buttons.

> **Note.**
> In case of first start of Web-report subsystem this panel unavailable for edit. Restart the Web-report subsystem

   a. **Equal** radio-button. When selected, the system looks for exact case-sensitive matches only, between the string in the Information field and the **Advanced Info** column .
   b. **Like** radio-button. When selected, the system looks for the rows where the **Advanced Info** column contains the search string, case-sensitive.
   c. **Not Equal** radio-button. When selected, the system looks for the exact case-sensitive matches, only between the string in the Information field and the **Advanced Info** column.
3. Enter the character string to filter the report by.
4. Click the **Show Report** button to run the filter.

Only the filtered rows will be displayed in the screen report.

The keyboard shortcuts list

The following keyboard shortcuts are available in the Report system:

1. All panels:
   a. F5 – creating the screen report.
   b. F6 – creating the printed report.
   c. Del – deleting an object from the **Objects** panel.

    d. Ctrl+A – selecting all objects in the list in the **Objects** panel.
2. **Objects** panel:
    a. Ctrl+F – searching the tree for an object by name or any part of the name.
    b. Enter – adding the selected object to the report.
3. The **Regions** panel:
    a. Ctrl+F – searching the tree for an object by name or any part of the name.
    b. Enter – adding the selected object to the report.
4. The **Shared Reports** panel
    a. Ctrl+Del - deleting the selected report template.

Administrator's Guide. Conclusion

More detailed information on the Intellect software package is presented in the documents titled:

1. Operator's Guide;
2. Programming Guide (JScript).
3. Installing and configuring security system components guide;

If while operating the given software product you have faced difficulties and problems, you are welcome to contact us. However before addressing us, we kindly ask you to answer the following questions:

1. What is the problem?
2. When did the problem occurr and what had happened before it occurred?
3. Which conditions gave rise to the problem?

Remember, that the more detailed and precise information you give us, the faster our experts will resolve your problem.

We are striving to improve the quality of our products, and hence welcome any proposals and suggestions how to improve our software and documentation.

Please send your comments or requests concerning this Guide to the AxxonSoft Training and documentation development division at (documentation@itv.ru).

Appendices

Appendix 1. Interface

Description of the Main Control Panel Interface

The Main control panel as part of the **System settings** interface box has a fixed position and is located in the upper right corner of the **System settings** interface box.

The INTELLECT™ Main control panel has been designed to be small (to save on the usable monitor area) and contains only the information window and two menu buttons to the right of it.

INTELLECT™ Main control panel elements and descriptions thereof are given below:

1.

Information windows or help window. This window displays comments (brief information) to the UI elements, and system error information, when pointed at with the mouse.

2. The **Screens** button. The button is designed for control of virtual screens.
3. The **Execute** button. Designed to display the **System settings** dialog box on the monitor and manual execution of the macro commands and quitting system operation.

Description of the System settings dialog box

Tabs panel

The Tabs panel is displayed in the upper left corner of the **System settings** dialog box and is designed for shifting between INTELLECT™ software groups of objects. The Tabs panel is shown in figure.

A list and brief description of tabs comprising the **System settings** dialog box are given in table.

№	Section (Tab) of the System settings dialog box	Key functionalities of the section (tab)
1	**Hardware**	The tab is designed for connection and configuration of hardware and program modules. Also, this tab is used for connection and configuration of customer-tailored components of the Operator UI, i.e., such objects as the **Operator query panel** and **Alarm message window**.
2	**Interfaces**	The tab is designed for the creation and configuration of virtual screens and UI components in them, i.e., Video Monitor, audio players and control panels of various devices and modules.
3	**Architecture**	The tab is designed for describing the system structure, network settings defining PC links and parameters for data exchange between the PCs of the distributed network.
4	**Programming**	This tab is designed for the creation of macro commands and scripts, as well as for the creation of time zones, shift timetables, delineation of secured object areas, access levels for the access points, which are equipped with readers.
5	**Users**	The tab is designed for the creation of user accounts (registration) of the digital video surveillance and audio monitoring system, classification of the levels (rights) of their access to the system resources and assigning passwords to the users.

To transfer from one tab to another, use the mouse. For the above purpose, follow the next steps:

1. Drag the mouse cursor to the tab.
2. Click the left mouse button.

Object tree

The system is based on the tree-like structure of the objects layout (object tree). The object tree is arranged as a multi-level list of embedded objects.

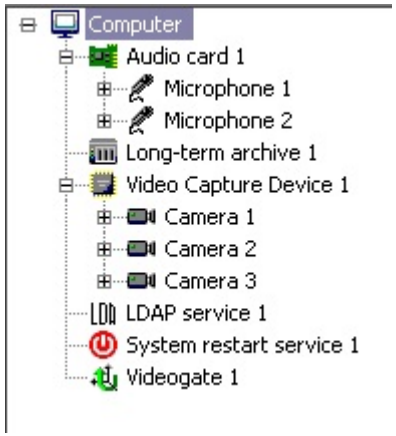

The objects structure is configured as a hierarchy, where low-order (daughter) objects can only be created on the basis of the higher-order (parent) object.

The object tree can be viewed in expanded form, embedded groups (branches) can be viewed or hidden, if not required to be controlled currently.

To get down the branch of the object tree, containing daughter objects, click the left mouse button pointing at«-» symbol appearing to the left of the parent object.

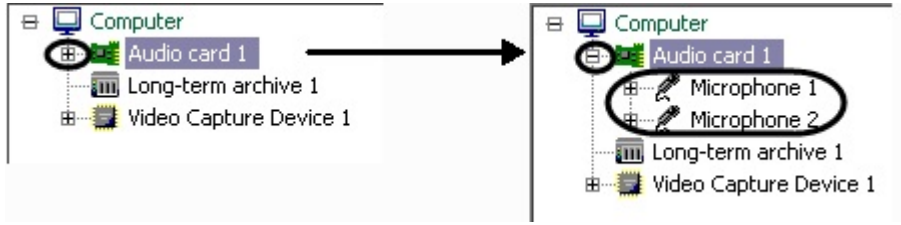

To collapse the daughter objects, click the left mouse button pointing the cursor at the minus symbol.

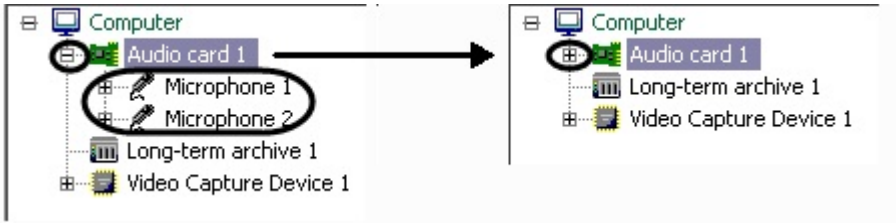

Context menu of the system object

The context menu is displayed within the objects tree. To display the menu on the monitor, click the right mouse button, pointing the cursor at the system object in the objects tree.

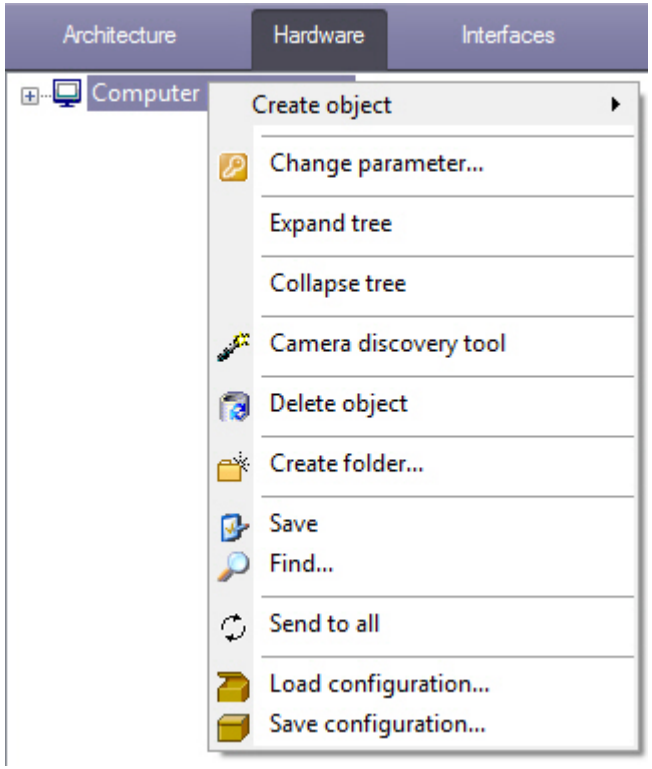

The number of menu lines depends on the video surveillance system configuration and object tasks. The context menu of a system object is described below.

The Create object function

The **Create object** function, which is used to create a new system object in the Hardware objects tree, is selected from the context menu of the parent system object.

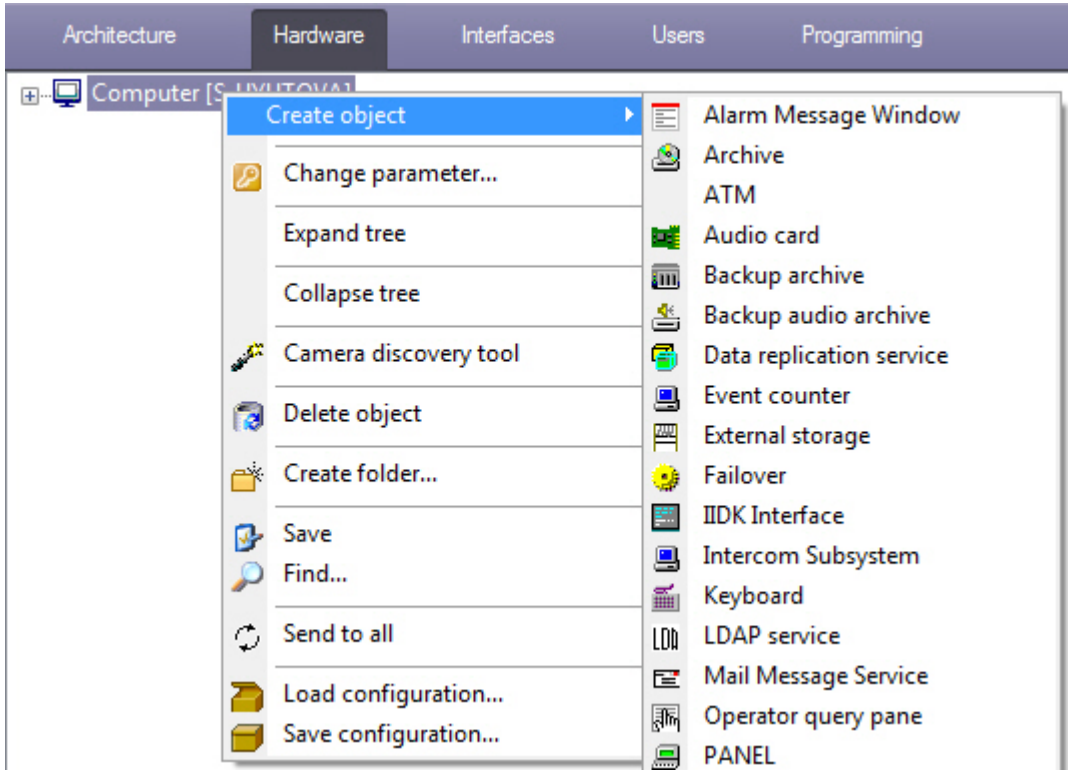

When the **Create object** function is selected, the menu will display a list of embedded objects. Figure shows an example of a list of objects which can be created on the basis of a **Com puter** object.

The Change parameter function

The **Change parameter** function is to edit the parameters of INTELLECT™ objects in the database. This function is not recommended to be used by new users.

When the **Change parameter** function is selected in the context menu of the system object, the **Change parameter** box appears.

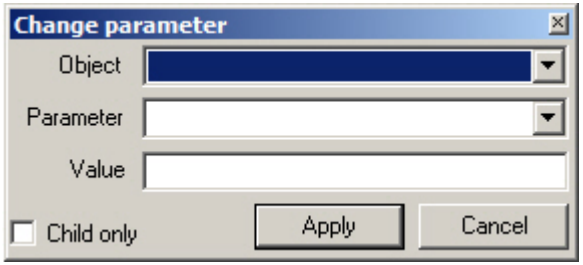

In the **Object** dropdown list select the type of system objects the parameter of which is to be edited. This list contains only objects that are child objects of that one the context menu of which was used to call the box. To change parameters of the **Computer** object, select the **Change parameter** item in the context menu that appears when the area with no objects

of INTELLECT™ objects tree is right-clicked.

In the **Parameter** dropdown list select the object parameter that is to be changed in the INTELLECT™ database.

> **Attention!**
> The parameter will be changed for all objects of selected type in the distributed configuration.

In the **Value** field specify a new value for the parameter in the format in which it will be stored in the database. One can learn about the type of parameter using the ddi.exe utility (see Editing intellect.dbi and intellect.ext.dbi database templates using the ddi.exe utility section). One can learn about the format of parameter while viewing INTELLECT™ database (see Viewing INTELLECT™ software database section).

If the parameter is to be changed for child objects only then set the **Only child objects** checkbox checked. For instance, this checkbox allows changing the parameter only on the computer selected in the tree.

Example. All cameras in the system are to be set for displaying black-and-white video.

For this do the following:

1. Call the **Change parameter** box in the context menu of the **Video Capture Device** or **Camera** object.
2. Fill in the fileds in the **Change parameter** box as shown in the figure.

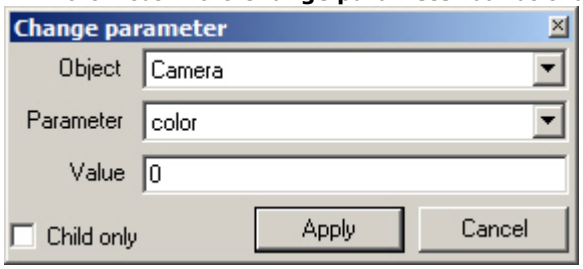

3. Click the **Apply** button.

As a result the black-and-white mode of displaying video is set for all cameras in the system.

The Camera discovery tool function

When the **Camera discovery tool** function is selected in the context menu of the **Computer** system object, *Camera discovery tool* starts. Its operation is described in INTELLECT™Software Package. Installing and configuring security system components guide in the section of the same name.

The Delete object function

To delete an object from the tree, drag the cursor pointer to the object and, with the context menu opened, select the **Delete object** option. Now the PC monitor will show a dialog box requesting to confirm that the system object be deleted.

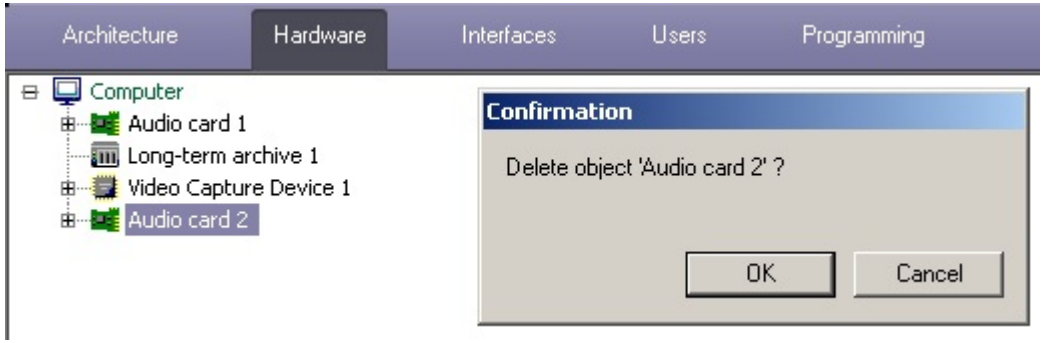

To confirm that the object should be deleted, click **OK** or, if you want to quit the delete function, click **Cancel**. As soon as deletion is confirmed, the object, as well as its daughter objects, will be removed.

The function **Delete** system object applies to all objects, including the **Computer** object, created by default when Intellect™ system is installed.

Note
Please be aware, that, a deleted **Computer**- local computer parent object can hardly be restored. That is why the developer does not recommend deleting objects such as **Co mputer**, created by Intellect™ system.

The Create folder function

The **Create folder** function is used to properly arrange the system objects displayed in the objects tree, in cases when there are many types of objects. Objects are grouped into folders at the user's discretion.

To create a folder, display the object context menu in the monitor and select the **Create folder** option.

Note.
A folder can be created on the base of the object that has child objects. For instance, a folder can be created on the base of the **Computer** or **Video Capture Device** object, but it is not possible to create a folder on the base of the **Captioner** or **Detection zone** object.

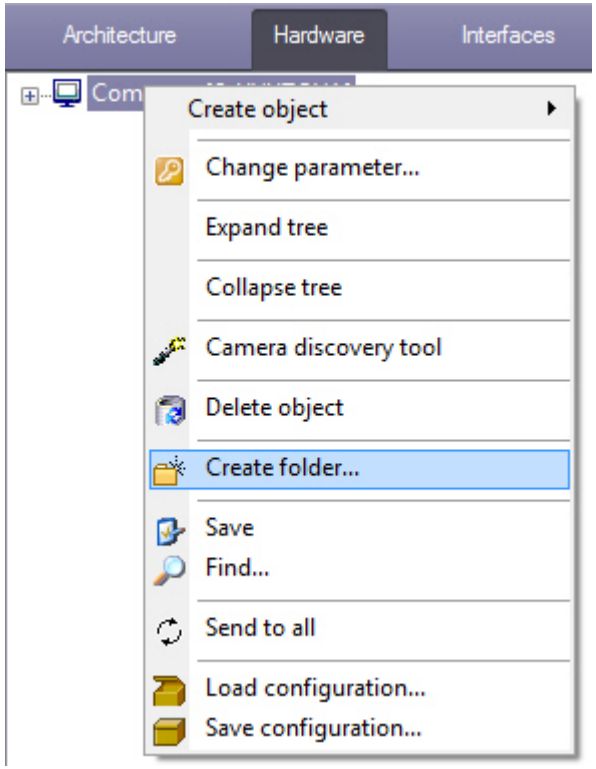

Now the PC monitor will show a dialog box requesting to enter a **Folder name**. Having entered the folder name in the dialog box, click **OK**.

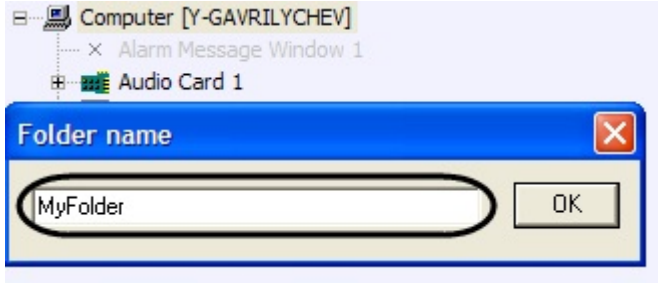

As a result the folder is created in the objects tree.

The Move to folder function

This function allows moving system objects to the objects tree folder. To move objects to the folder, select the object, which you need to move, display the context menu and select the **Move to folder** option.

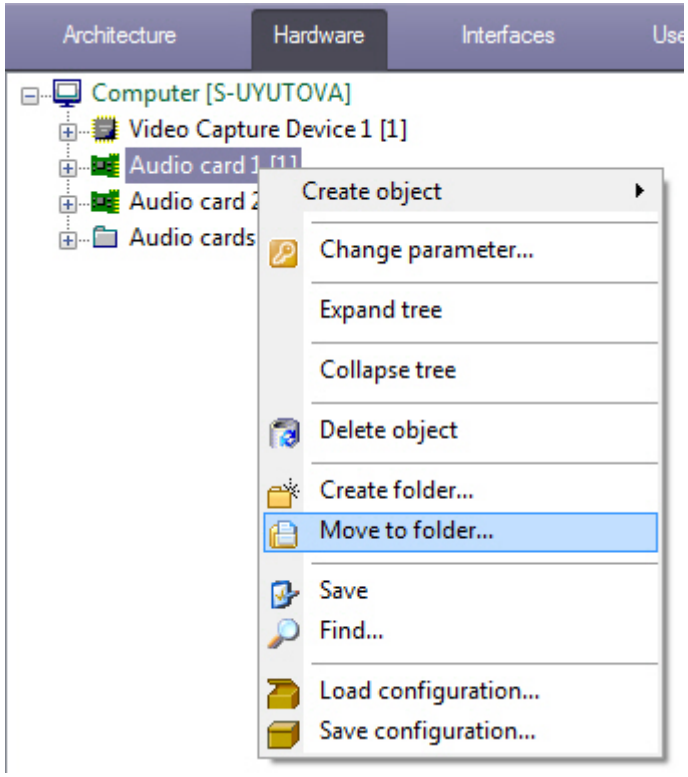

The monitor will display a window for selecting a folder, where you will move the selected system object.

To confirm the selected folder, click **OK**. The object will be moved to the given folder.

The Save function

INTELLECT™ system allows creating objects based on a template. A template is created using the **Save** function accessible in the main functional menu.

Note.
Objects can also be copied and pasted using the Ctrl+C and Ctrl+V keys.

Below we describe how to create the **Camera** object on the basis of a template using the **Save** function.

First of all select an object that has already been created and configured, for instance, the **Camera 1** object. Figure shows a setting panel with highlighted parameters of the **Camera 1** object which have been modified (differ from the default settings).

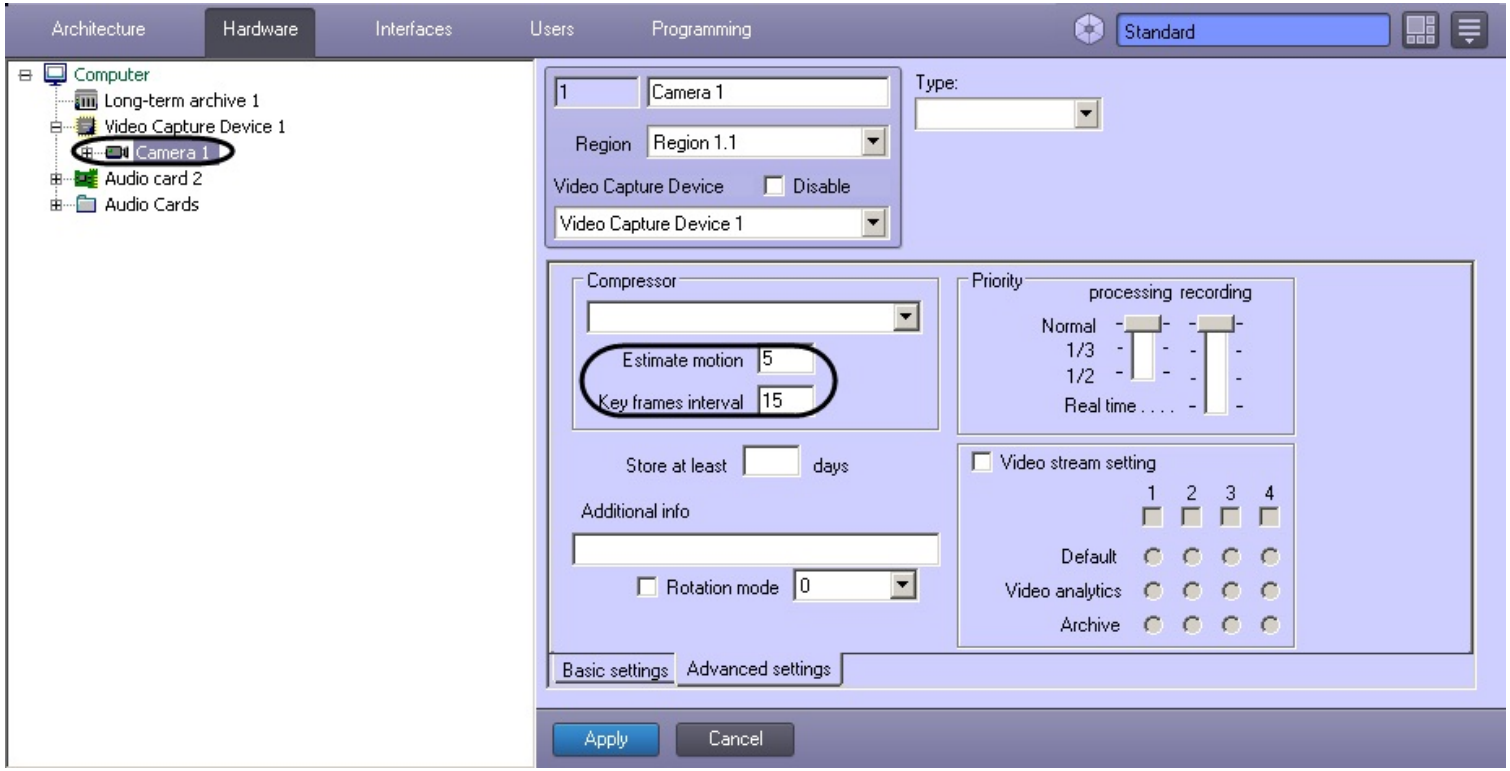

To create a template based on this object, do the following:

1. Call the context menu of the **Camera 1** object.
2. Select the **Save** menu item.

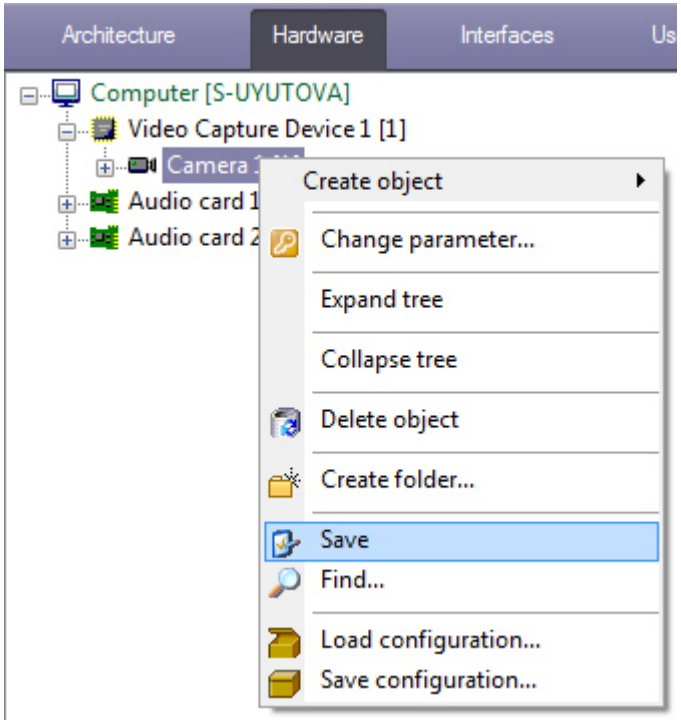

The template of the **Camera** object (with the settings of the **Camera 1** object) has been created.

Now create the **Camera 2** object based on the **Video Capture Device 1** object (see The Create object function section). By default the **Camera 2** object will have the same settings as the **Camera 1** object.

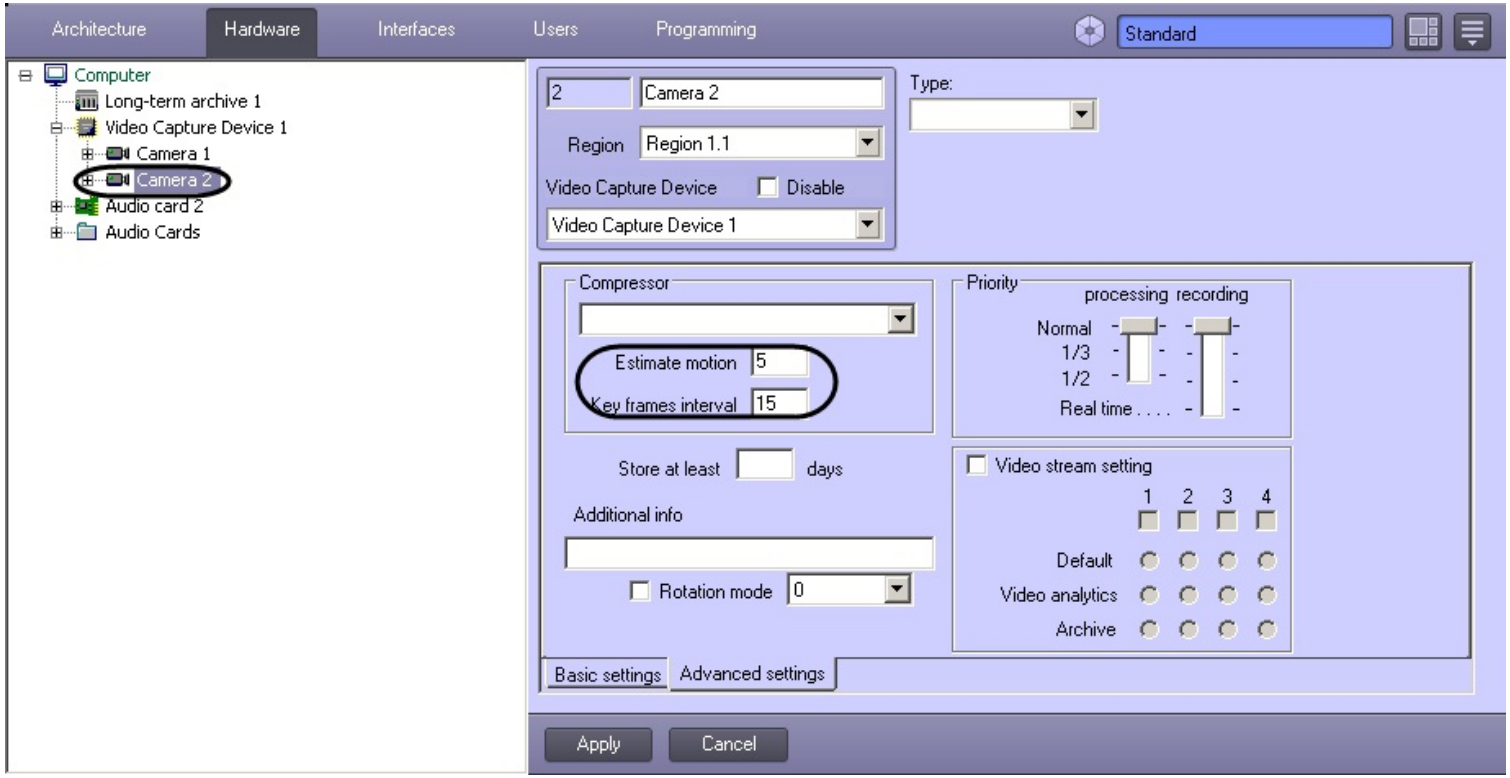

The Find function

The **Find** option of the menu is designed to search for an object in a tree. Intellect™ system uses two methods of searching for an object:

1. Searching within a tree. This method is used when only an object name (type) is known. In this case, to find an object, follow the next steps:
    a. display the context menu for the objects tree on the monitor;
    b. select **Find** in the menu;

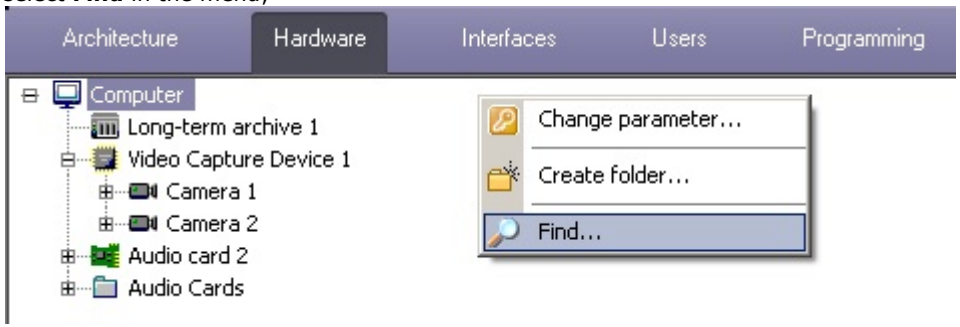

Now the monitor will display a box to enter the name of the required object.

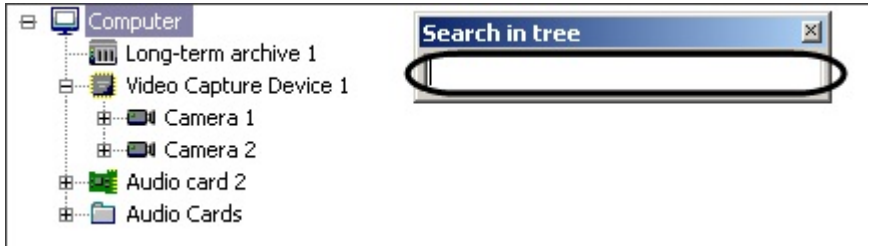

Note.
It is possible to open this window using Ctrl+F hotkeys combination.

c. enter the name of the required object.

d. press **Enter** on the keyboard to start searching.
If the object is found, it will be highlighted grey in the objects tree.

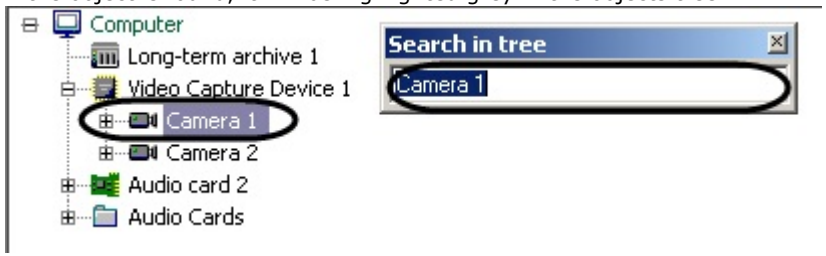

If the system finds no objects, there will be no highlighted objects in the tree.

To close the window for entering the object name, when the search is complete, click the left mouse button, pointing at the window field displaying the objects tree.

2. Search from a selected object.
To find an object, whose location in the objects tree is approximately known, the next steps can be followed:
   a. select an object, located above of the search field.

> **Note**
> Object search across the tree is more effective, if the required object is a daughter object of the **Computer** object. Otherwise, the search will go down the branch of the selected object

b. display the context menu for the objects tree field on the monitor;
c. select **Find** in the menu.

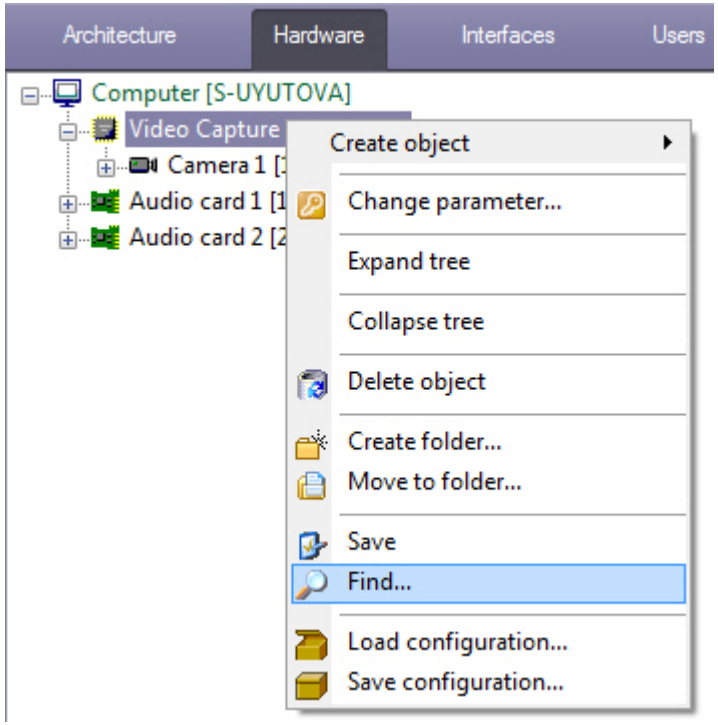

To proceed further follow method 1 (described above).

The Reconnect function

This line is displayed on the monitor in cases, when, apart from the base **Computer**, there is at least one (additional) **Computer** object, available for connection to the base **Computer** , communication with which fails, due to unknown reasons.

To install a link between two **Computer** objects, display the context menu of the additional **Computer** object, available for connection to the network and select **Reconnect** from the menu.

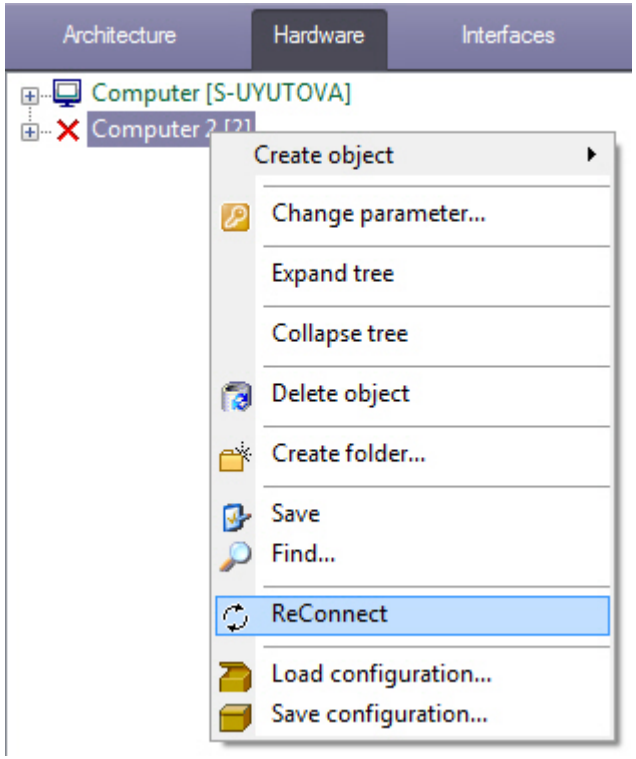

Now the object of the base and remote computer will be connected to the network.

The Send to all function

This function allows broadcasting intellect.sec, the key file, governing the system configuration, to all PCs which have the distributed digital video surveillance and audio monitoring system. If the system functional has been updated and a new key file was received, it should be updated in all system PCs, using the **Send to all** function.

This function is accessible only from the context menu of the **Computer** object, corresponding to the given local computer, which performs administrator functions.

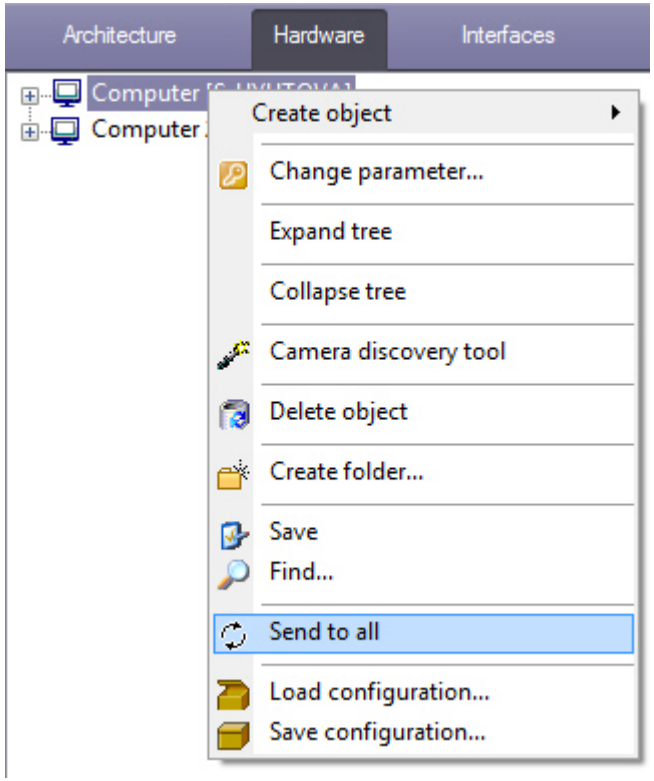

Note
If an updated key file is not broadcast in due time to all system computers, the Intellect™ system will not get started, when the PC is switched on, since the key file data will not match the information contained in the database.

The Send key function

This function allows updating the key file in the remote computer of the system and can be accessed only from the Main menu of the object, such as **Computer**, corresponding to the remote computer.

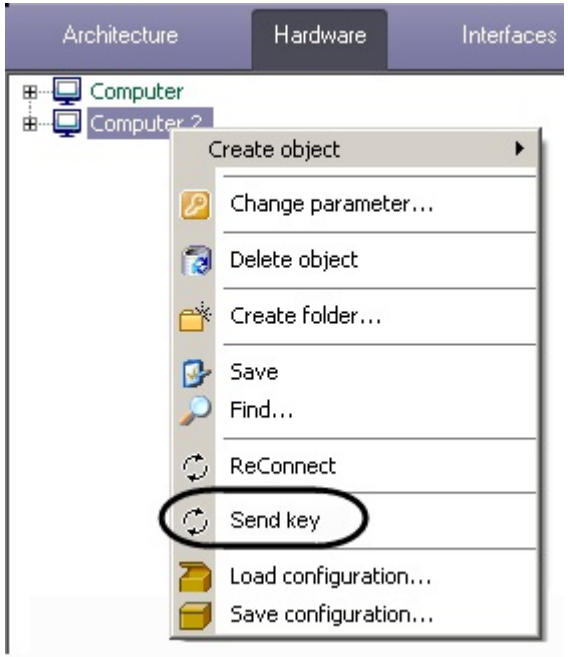

Note
If an updated key file is not broadcast in due time to the given computer, the Intellect system will not get started, when the PC is switched on, since the key file data will not match the information contained in the database.

The Save configuration function

The **Save configuration** function allows saving the current configuration parameters of an object to a file with the extension .cfg, so that the parameters can be re-used to configure other objects or to restore configuration parameters after unexpected loss (for example, if an object is accidentally deleted).

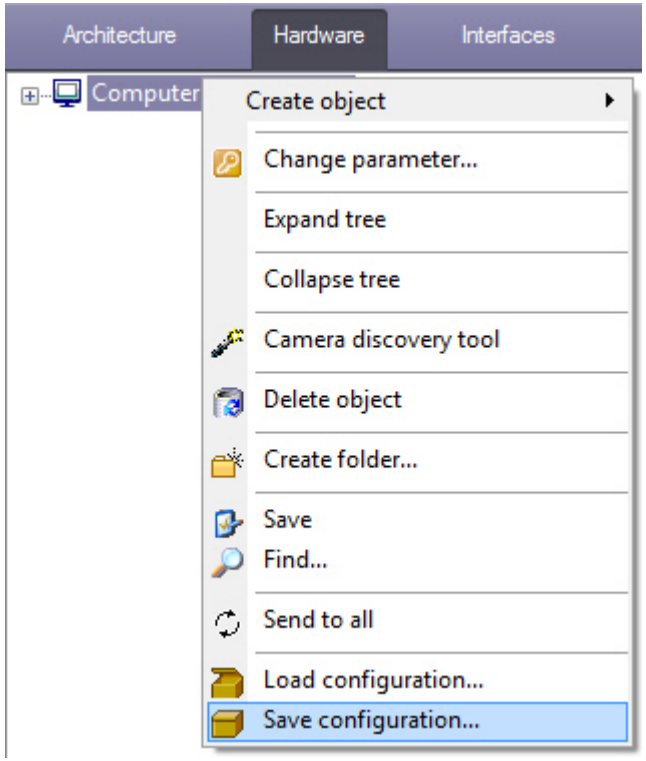

After **Save configuration** is selected in the menu, a standard Windows dialog box appears, in which you can specify the name of the configuration file and location in which you want to save it. By default, the file name includes the name of the object type and its number, for example **CAM.1.cfg** or **GRABBER.3.cfg**.

The saved configuration can be applied to any object of the type used to create the configuration file. To do so, use the **Load configuration** function (see the section The Load configuration function).

The Load configuration function

The **Load configuration** function allows loading configuration parameters from a file with the .cfg extension that has been created using the **Save configuration** function (see the section Save configuration function). Configuration parameters can be applied only for objects of the type used to create the configuration file.

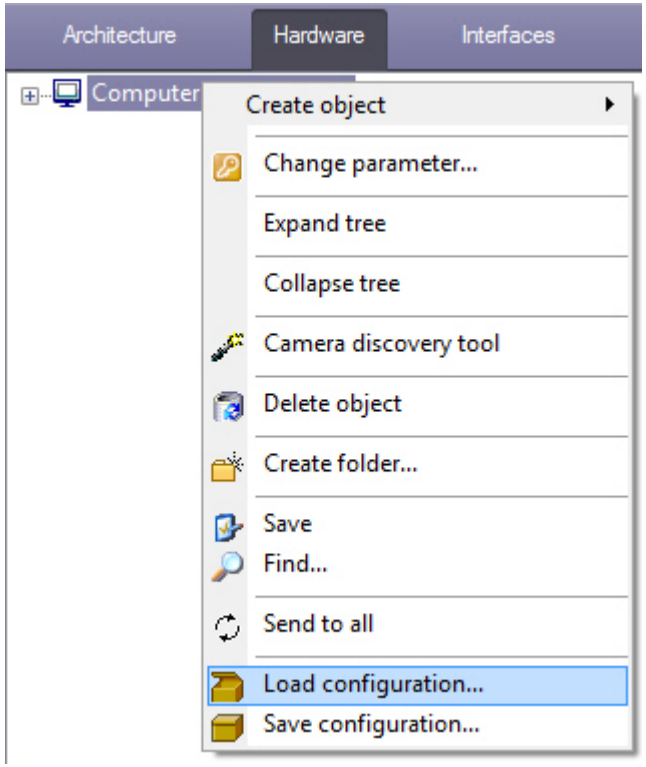

After **Load configuration** is selected in the menu, a standard Windows dialog box appears, in which you can navigate to the necessary configuration file.

Note.
Some configuration parameters that must be unique for objects of the given type are not applied when a configuration is loaded.

For example, the **PCI channel** parameter for the **Video Capture Device** object is not changed to the value given in a configuration file if an existing **Video Capture Device** object in the device tree already has the same **PCI channel** value. For more information on allocation of PCI channels between **Video Capture Device** objects, go to the section Creating and configuring the Video Capture Device object in the Installing and configuring security system components guide.

Collapsing the tree

The **Collapse tree** feature allows collapsing the object tree (see Object tree).

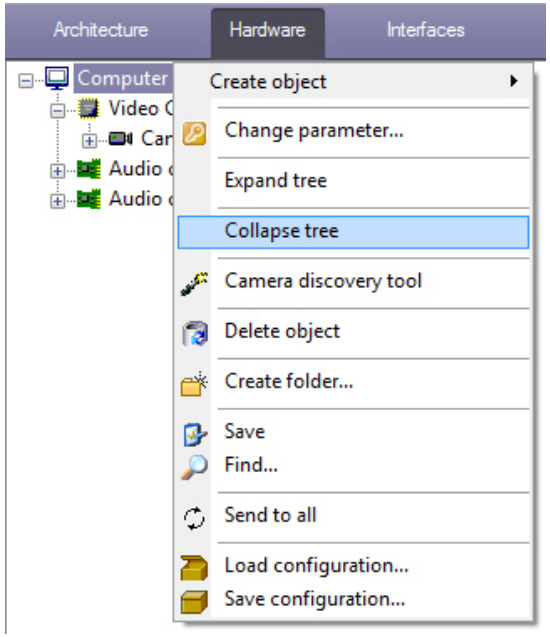

Only branch of the object tree under the object from functional menu of which the function is triggered will be collapsed using this function.

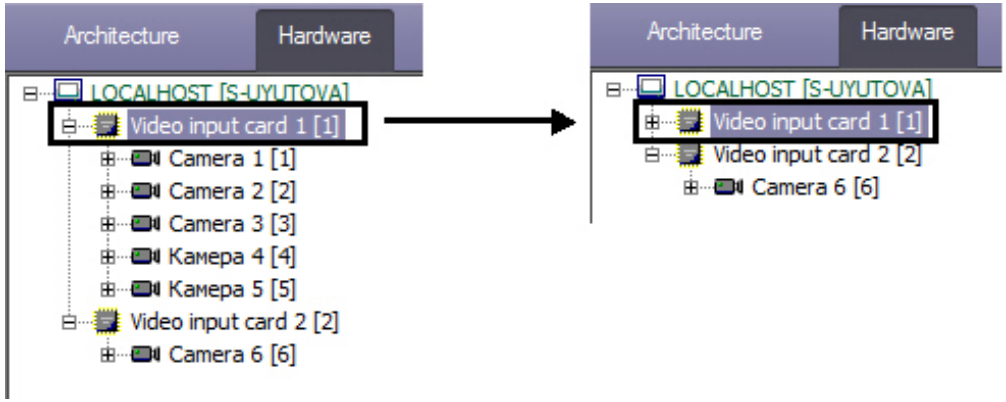

To collapse all object tree branches, select the **Collapse tree** menu item holding down the Shift key.

Expanding the tree

The **Expand tree** feature allows expanding the object tree (see Object tree).

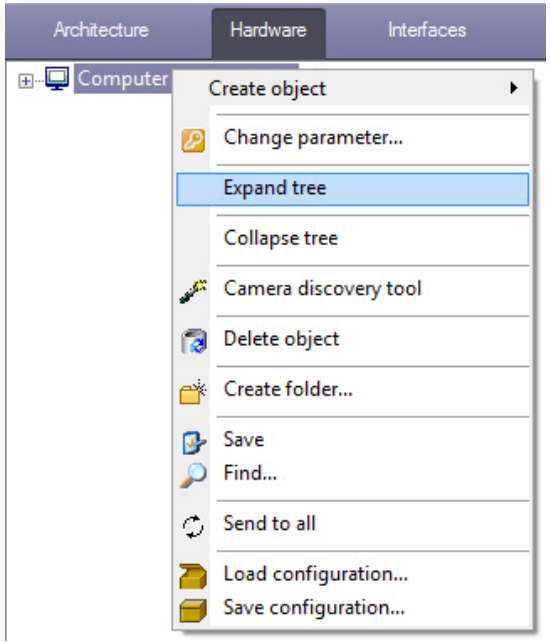

Only branch of the object tree under the object from functional menu of which the function is triggered will be expanded using this function.

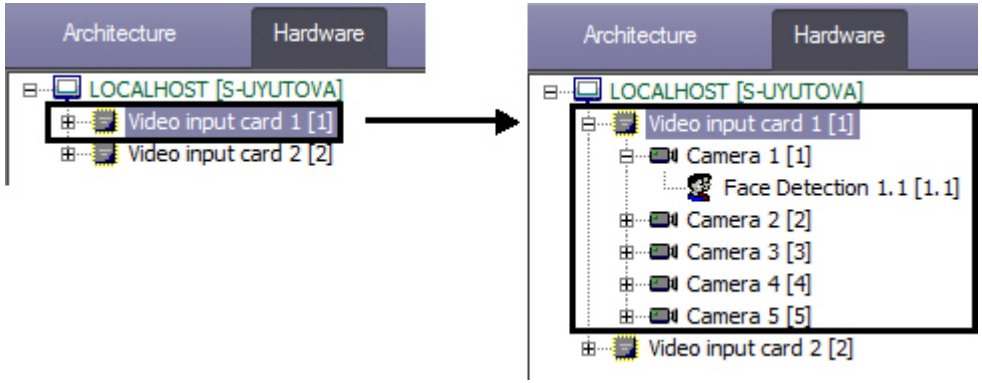

To expand all object tree branches, select the **Expand tree** menu item holding down the Shift key.

The Object setting panel

The setup panel of the system object can be found in the right hand side of the **System settings** dialog box and is designed to displayed and configure the object selected in the tree.

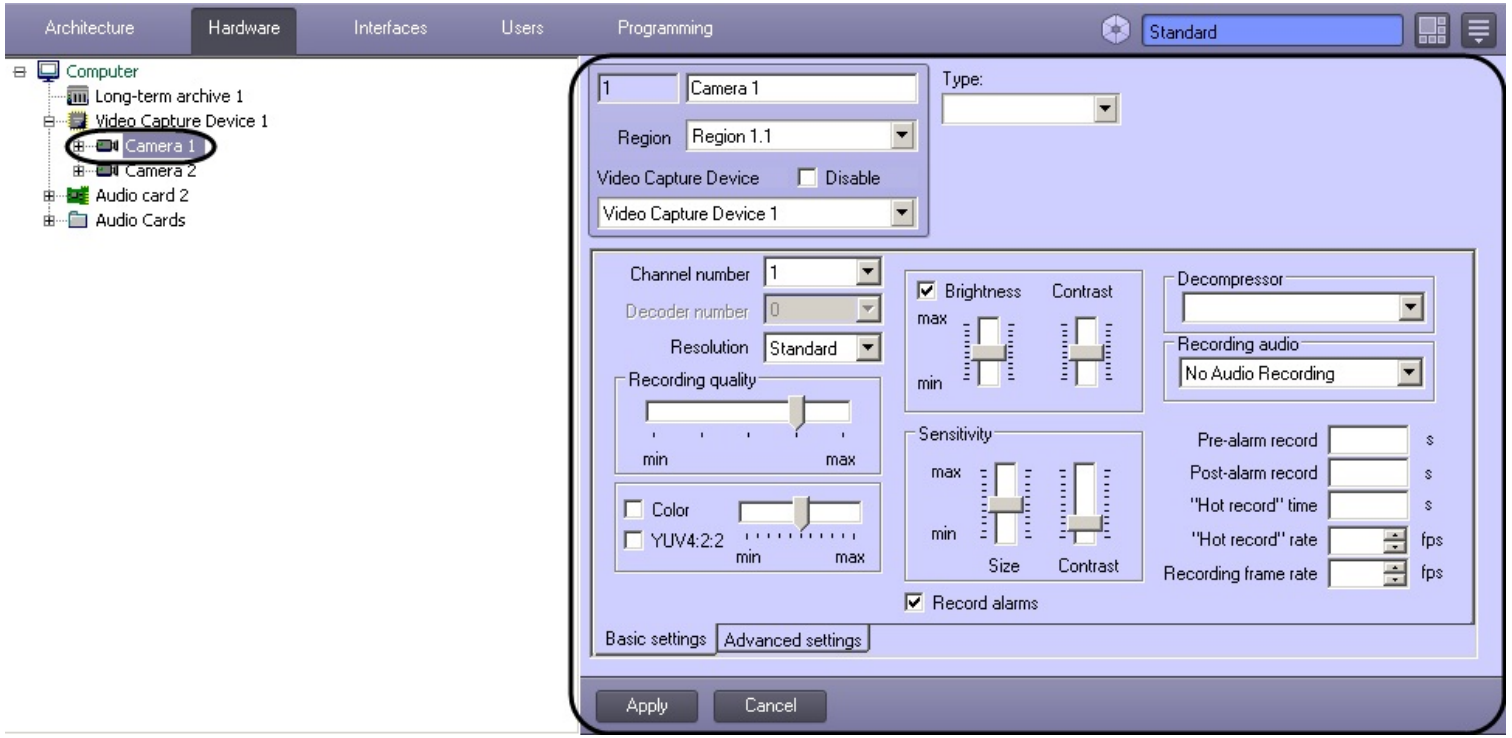

Depending on the type of object selected, the settings panel of the given object displays the field for entering certain parameters – the elements of the settings panel.

Elements of the settings panel are given below:

1.
   The field for entering the numerical value of the parameter
2.
   The field for entering the line value of the parameter
3.
   Check mark

4. 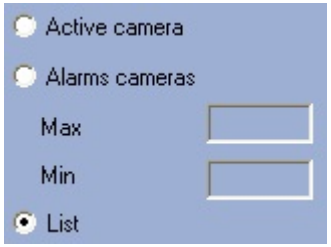

Selector
5.

Slide
6. 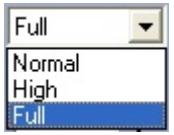

Dropdown list
7.

Data table
8. 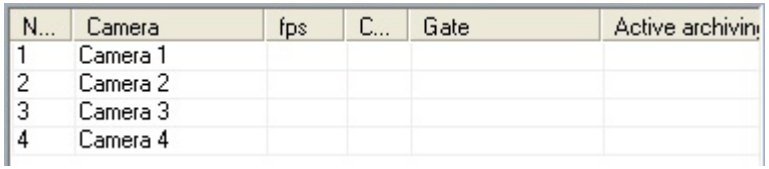

Table
9. 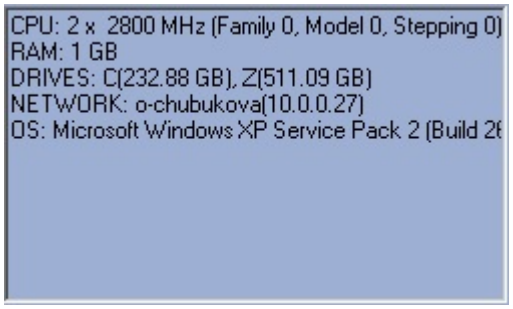

Data field

10. All

Button

11. 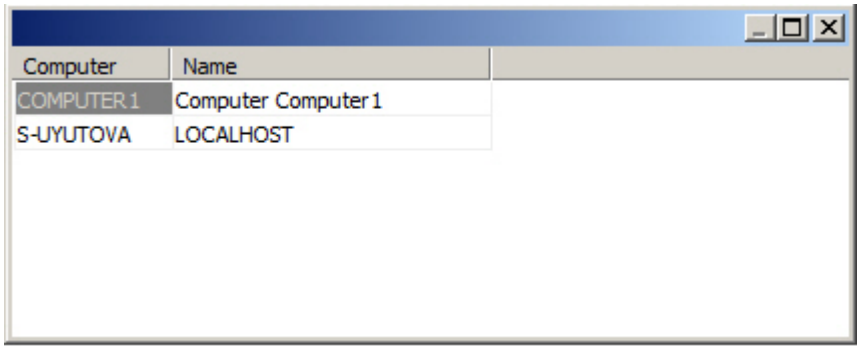

Extended data table

Element name	Options for using the element
The field for entering the numerical value of the parameter	Enter the numerical value of the parameter Drag the mouse cursor to the field, click the left button and enter the required number in the keyboard
The field for entering the line value of the parameter	Enter the line value of the parameter Drag the mouse cursor to the field and enter the required number in the keyboard
Check mark	Check/un- check the box To check the box, click on it with the left mouse button, to remove the check mark – click it again.
Selector	Set the selector in the required position To select the required option, click on it with the left mouse button. All other fields in this case get cleared automatically.
Slide	Set the slide in the required position. Drag the pointer along the scale with the mouse.
Dropdown list	Select the required line in the dropdown list. The list drops down as soon as you click the down arrow, which, as a rule, is displayed in the right hand side of the element and is configured as a triangle. To select a line, click on it with the left mouse button.

Data table	The table displays the fields, which have been automatically filled in previously. To use the table, check the box corresponding to the required line (column). The fields containing text may not be edited. The number of lines may not be edited. *Note. The table for archive storage selection is an exception – new lines can be added to this table when configuring storing to network disks.* When right-clicking on any area of the information table an advanced window with information appears (see item 11 above). This window is designed to ease dealing with small tables. In order to set all the checkboxes checked in the data table select a checkbox in the column and click Ctrl+A. In order to set all the checkboxes unchecked in the data table select a checkbox and click Shift +A.
Table	The data is entered as follows: 1. Drag the cursor to the table cell. 2. Enter/select the required value in the field/from the list in the column lines of the table. As you move to the next cell, the data you have entered is retained in the table. 3. To add new lines in the table, select any field in any filled out line available and press the down arrow on the keyboard. 4. To delete a line from the table, press the Ctrl+Delete key combination.
Data field	The data field allows displaying various information messages. It cannot be edited.
Button	The start up function button. To click the button with the mouse, drag the mouse cursor to the button, then click on it with the left mouse button.
Extended data table	See Data table.

The Apply and Cancel buttons

The **Apply** and **Cancel** buttons are displayed at the bottom part of the **System settings** dialog box and are used to confirm or cancel the entry of values for the object settings.

The **Apply** button is used to save the assigned object identification and setting parameters. The **Cancel** button is used to return to the previous object identification and setting parameters.

Note
The parameters entered with the **Apply** button cannot be cancelled with the **Cancel** button.

The elements of the System settings dialog box

The **System settings** dialog box interface contains the following elements:

1. Main Control Panel.
2. Tabs panel.
3. Objects Tree.
4. Context menu of the system object.
5. Settings panel of the objects.
6. Connection settings table.
7. **Apply** and **Cancel** buttons.

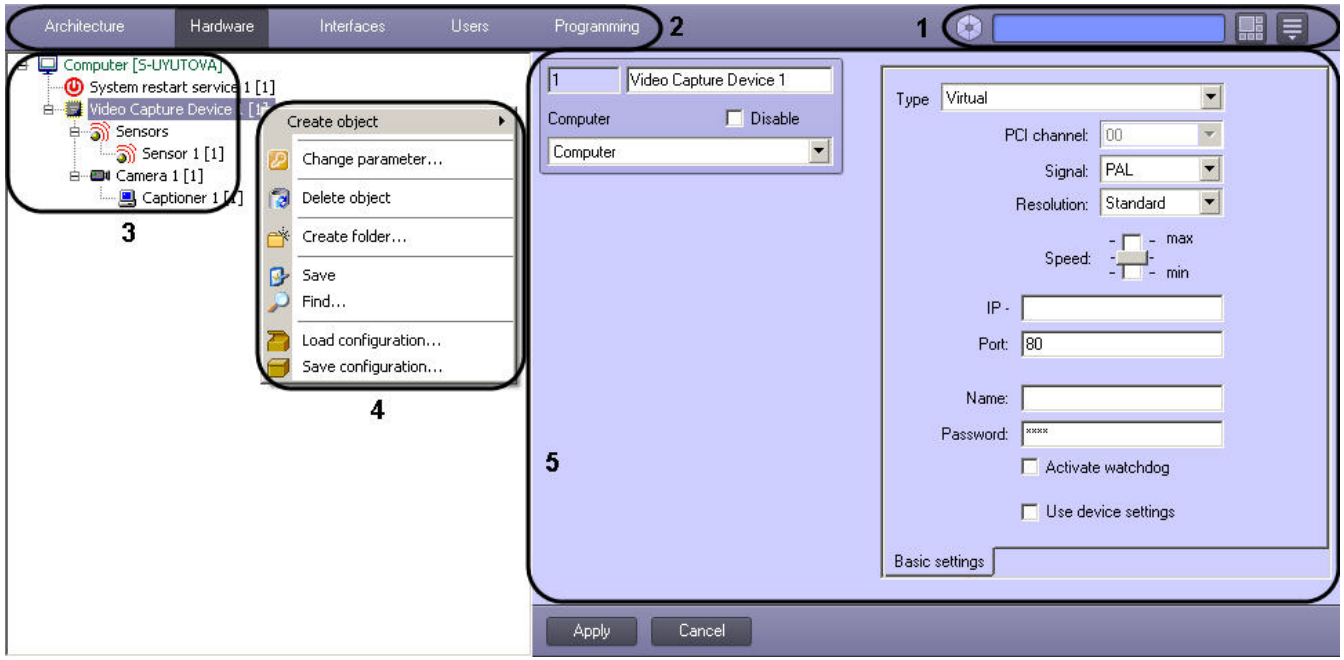

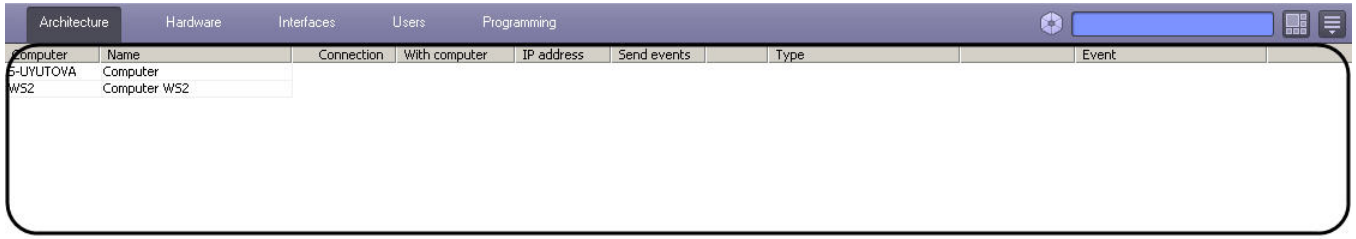

6

7

The **System settings** dialog box contains the following tabs:

1. **Architecture**;
2. **Hardware**;
3. **Interfaces**;
4. **Users**;
5. **Programming**.

These tabs are used while creating and configuring the digital video and audio surveillance system.

The Architecture tab

The **Architecture** tab allows creating a distributed video surveillance and audio monitoring system and is used to configure connections and data exchange between various system components.

Connection settings table

The Connection settings table can be accessed from the **Architecture** tab. This table is used to configure connections between computers of the distributed system and distribute the information about the events registered by the system. The connection settings table is shown in the figure.

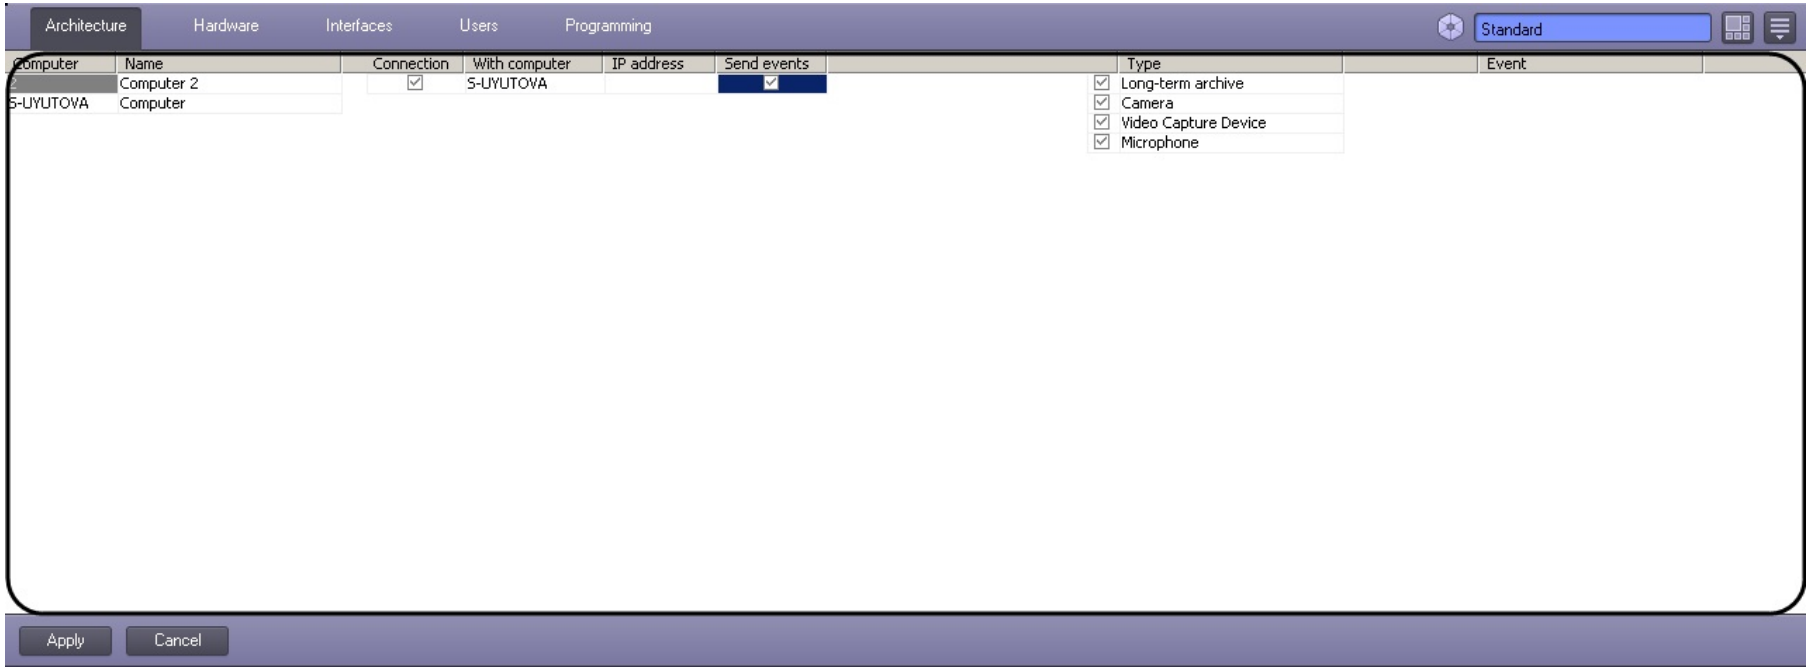

Table describes the elements of the connection settings table.

№	Column	Description	Value
1	**Computer**	Network name of the computer	Is defined by the OS
2	**Name**	Computer name in the system	Is defined in the Hardware settings tab
3	**Connection**	Check mark	If the box is checked, it means that the computer is connected. If the box is not checked, it means that connection was not established.
4	**With computer**	List of names of the network computers	Is defined by the OS

5	**IP-address**	IP-address of the computer in the local network (if connected via the Internet, then public IP-address)	Is either defined by the OS or assigned manually. When IP-address of the Server/RAW is edited, then IP-address only for the current Server/RAW is changed. For other Servers/RAWs IP-addresses are to be changed individually. In case of the entered address is already specified to a computer in the system, the address will be set to the configured computer and the corresponding warning message will be displayed. Address of the computer which previously had this address will be discarded.
6	**Send messages**	Checkbox	A checked box means there is permission for sending the messages to the computer it is connected to. A non-checked box means there is no permission for sending the messages.
7	**Type**	List of the system objects, from which the events will be broadcast to the selected computers.	Is defined by the list of the registered objects.
8	**Event**	A check mark in the list across each point of the event list, corresponding to the hardware selected in the Type column.	A checked box means that the given event will be broadcast. A non-checked box means that the given event will not be broadcast.

The Hardware tab

The **Hardware** tab is used to create and configure the system objects corresponding to different hardware types, used as components of the video surveillance and audio monitoring system, which will be created.

Hardware tab components

The **Hardware** tab displays the tree of system objects referred to the Hardware group and the settings panel of the object selected in the tree. The settings panels of each object used in the video surveillance and audio monitoring system are described in the following sections.

The Settings panel of the Computer object

The settings panel of the **Computer** object is shown in the figures.

The **Basic settings** tab:

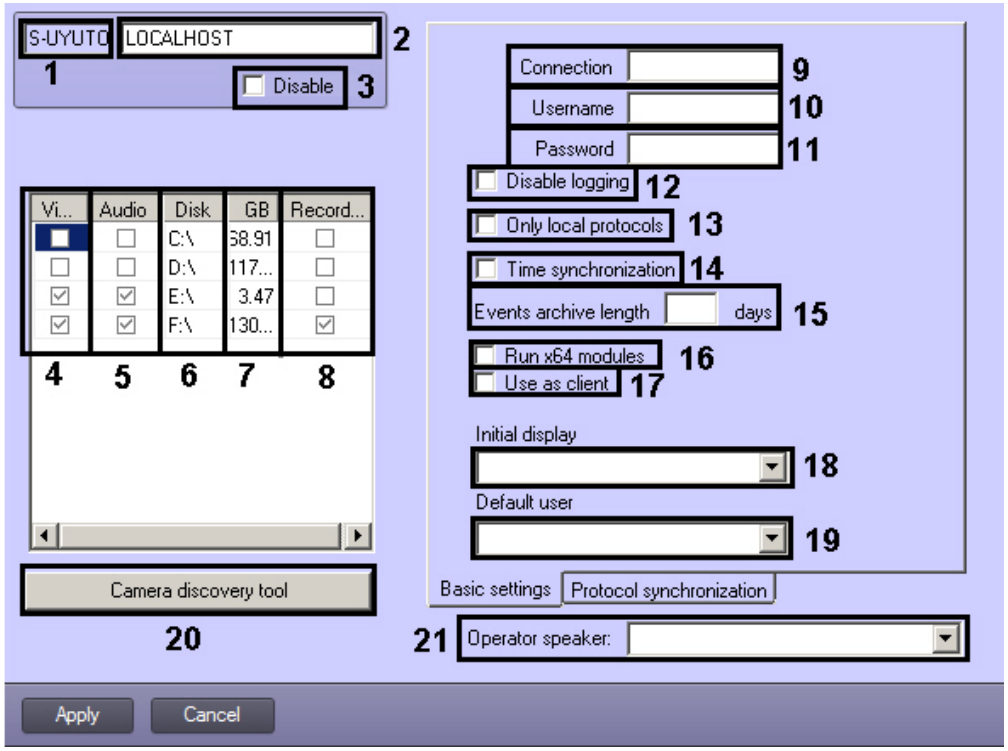

The **Protocol synchronization** tab:

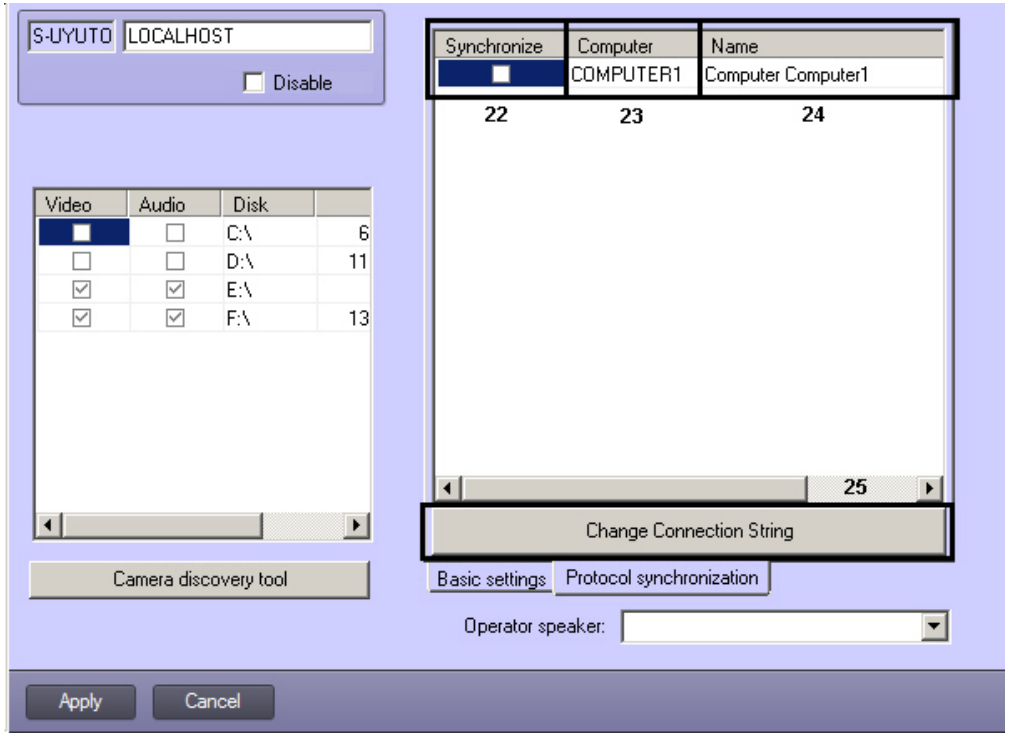

The **Archive synchronization** tab:

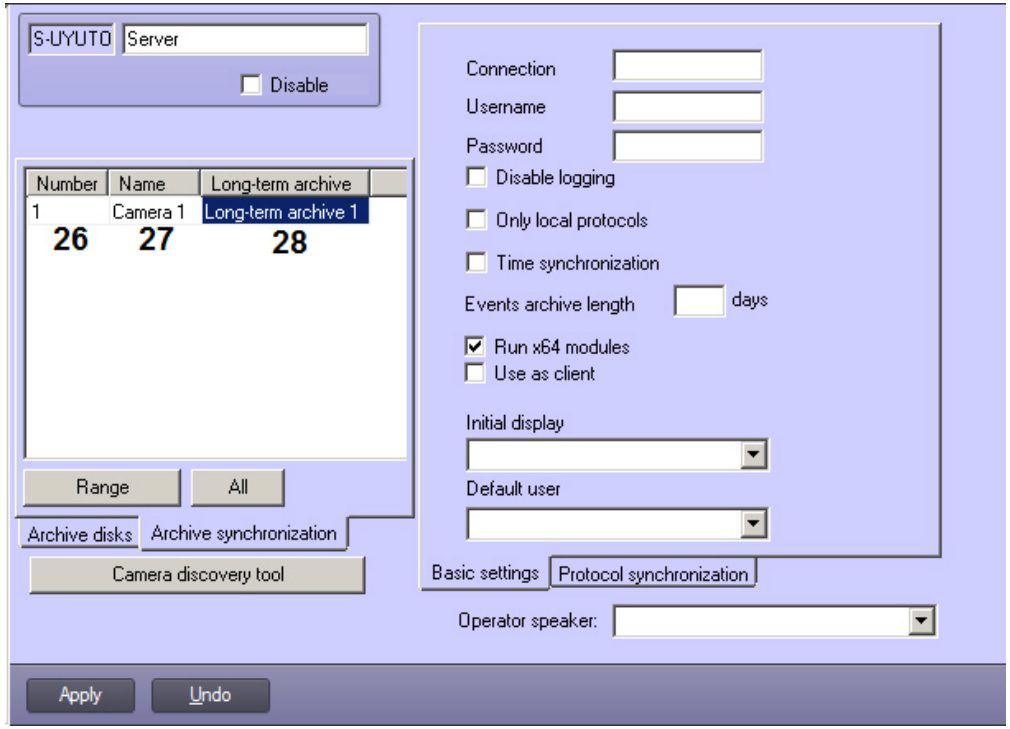

The table describes the parameters of the **Computer** object settings.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	**Network name***	Automatically	Displays the computer name in the local network	Latin and service characters	-	Depends on the number of **Computer** objects registered in the system Number of symbols – from 1 to 15.
2	**Name***	Enter the value in the field	Set the name of the **Computer** object in the system	Latin, Cyrillic and service characters	Computer	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.

3	**Disable**	Is identified by the check mark	Defines the condition of the Computer object (enabled or disabled) in the system	Boolean type	No	Yes – the Computer is disabled and is not in use No – the Computer is enabled and is in use.
Disks for Archive Storage						
4	**Video**	Is identified by the check mark	Set the disk for storing video archive from cameras and also audio archive during synchronous audio and video recording	Boolean type	No	Yes – the disk is used for video archive storing No- the disk is not used for video archive storing
5	**Audio**	Is identified by the check mark	Set the disk for storing audio archive from microphones	Boolean type	No	Yes – the disk is used for video archive storing No- the disk is not used for video archive storing
6	**Disk**	Automatically, specify the value in the field	Displays the names of local disks, accessible for storing video and audio archive, and also used to specify the network disks used for archive storing.	Names of local disks (Latin characters), names of network disks (UNC-pathes)	-	Depends on the total number of local and network disks
7	**GB**	Automatically	Contains information about free space on the every accessible disk	Disk space in GB	-	Depends on the total free disk space
8	**Recording**	Automatically, set the checkbox checked	Show current disk for storing archive	Boolean type	No	**Yes** – the archive is currently stored on the specified disk. **No** – the archive is not currently stored on the specified disk.
Settings Group						
9	**Connection**	Enter the value in the field	Gives the name to the modem connection used in the Windows OS.	Latin, Cyrillic and service characters	-	A line containing a sequence of any symbols (letters, digits, service characters) Number of symbols – from 1 to 30.
10	**Username**	Enter the value in the field	Sets the login name for the existing Windows modem connection.	Latin, Cyrillic and service characters	-	A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 30.
11	**Password**	Enter the value in the field	Sets the password for the existing Windows modem connection	Latin, Cyrillic and service characters	-	A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 30.

12	**Disable record-keeping**	Is identified by the check mark	Switches off storing of events to the Event viewer database on the local computer.	Boolean type	No	Yes - events are not stored to the Event viewer database No - events are stored to the Event viewer database
13	**Only local protocols**	Is identified by the check mark	Activates logging to the database the Events viewer only information about events, registered on the given computer	Boolean type	No	Yes – only events, registered at this computer are logged to the database the Events viewer No – events, registered at this computer are not logged to the database the Events viewer
14	**Time synchronization**	Checkbox	Set time synchronization of all computers in the distributed system with system time of this computer. Time is automatically synchronized at midnight every 24 hours or when INTELLECT™ is started on the Server that is the source of time synchronization.	Boolean type	No	Yes – time is synchronized No – time is not synchronized
15	**Events archive length**	Type-in the value in the field	Sets the period of time for the events to be stored in the Event viewer database	Days	-	More than 1
16	**Run x64 modules checkbox**	Setting checkbox	Specifies the way of launch of 64-bits modules	Boolean type	Up to 4.10.2 – No From 4.10.3 – Yes	**Yes** - 64-bits module launches when the module launch attempt. If such variant is not found the 32-bits module launches. **No** - 64-bits modules are not launch
17	**Use as client** ch eckbox	Checkbox	Computer is used as the Client in the distributed video surveillance system	Boolean type	No	**Yes** – computer is used as Client. **No** – computer is used as Server or RAW.
18	**Initial display**	Is selected from the list	Set the screen to be displayed on default after starting of the Intellect digital video surveillance system. The last active **Display** is displayed after the Intellect restart if no one screen is selected.	Names of the **Display** objects registered in the system	-	Depends on total number of **Displa y** objects registered in the system.
19	**Default user**	Is selected from the list	Defines a default user, i.e., the user, the rights and authorities of which will be used to launch Intellect™ software without a password.	Names of the users registered in the system.	-	List of users registered in the Intellect™ system.
20	**Camera discovery tool**	Press the button	Access to creating, settings and editing of IP devices.	-	-	-
21	**Operator speaker**	Is selected from the list	Allows switching the speaker that is to be in use for audio playback	Names of the **Speaker** objects registered in the system	-	Depends on number of the **Speaker** objects registered in the system
Protocol synchronization						

22	**Synchronize**	Is identified by the check mark	Set the synchronization of database The Events viewer of local and remote computers	Boolean type	No	Yes– database the Events viewer of local and remote computers are synchronized No– database the Events viewer of local and remote computers are not synchronized
23	**Computer**	Automatically	Displays the net name of remote computer with which database the Events viewer must be synchronized	Latin alphabet and service characters	-	Depends on the number of computers, registered in the system
24	**Name**	Automatically	Displays the name of remote computer in the net	Latin, Cyrillic and service characters		A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 60.
25	**Change connection string**	Press the button	Access to settings and editing the parameters of connection to the database the Events viewer of remote computer	-	-	-
The **Archive synchronization** tab						
26	**Number**	Select in the list	Sets the ID of camera the archive of which is to be synchronized when restoring the main Server (see also Configuring archive synchronization of main and backup Servers).	IDs of the **Camera** objects created in the object tree of the main Server	-	Depends on the number of the **Camera** objects registered in the system
27	**Name**	Select in the list	Sets the name of camera the archive of which is to be synchronized when restoring the main Server (see also Configuring archive synchronization of main and backup Servers).	Names of the **Camera** objects created in the object tree of the main Server	-	Depends on the number of the **Camera** objects registered in the system
28	**Long-term archive**	Select in the list	Sets the **Long-term archive** object configured to cooperate with the Failover service and used for synchronization of archive of the main and backup Servers.	Names of the **Long-term archive** objects registered in the system	-	Depends on the number of the **Long-term archive** objects registered in the system

The Settings panel of the Video Capture Device object

The settings panel of the **Video Capture Device** object is shown in figure.

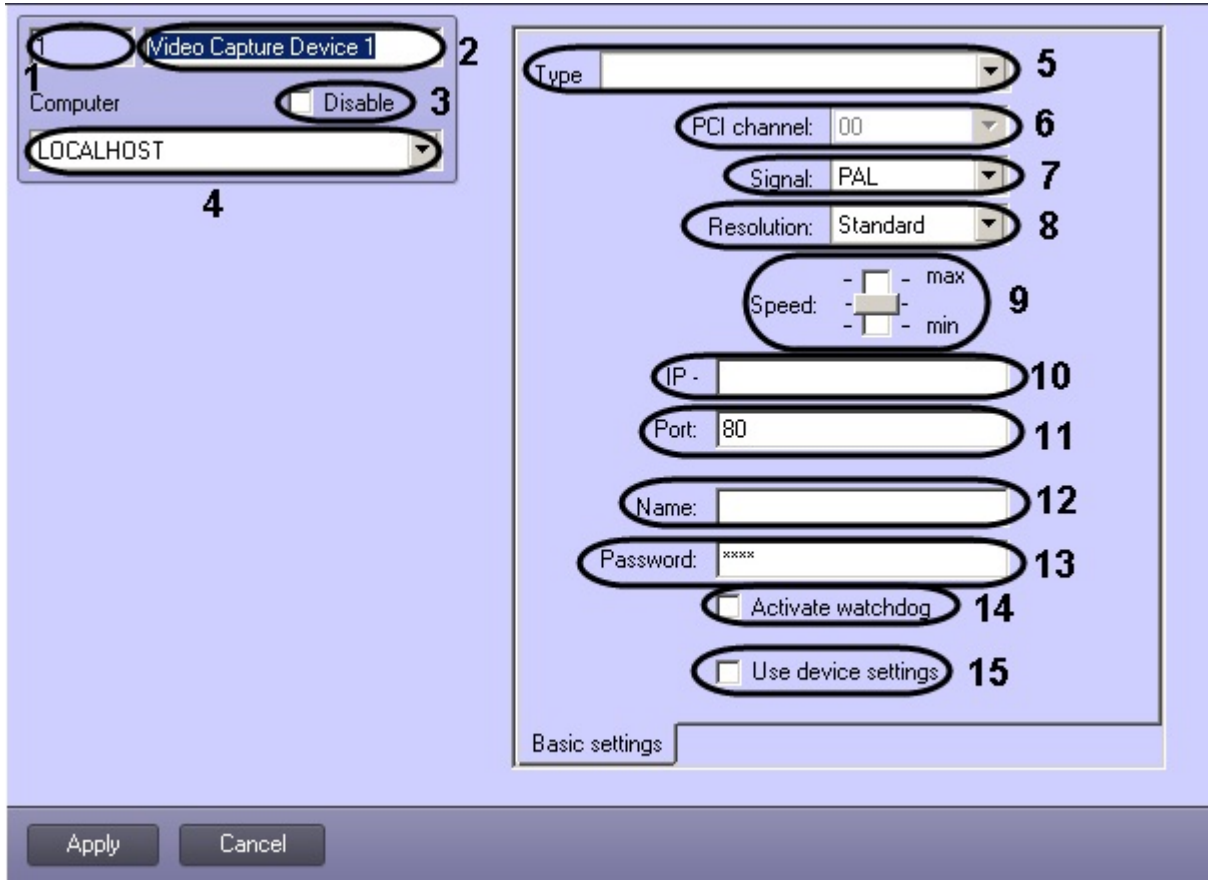

Table describes the parameters of the **Video Capture Device** settings panel.

№	Parameter	Method for setting the parameter value	Description	Presented as	Default value	Range of values
1	The **Identification number** field	Automatically	Shows the identification number of the **Video Capture Device** object in the system.	Sequence of numbers	-	Depends on the number of the **Video Capture Device** objects in the system.

2	The **Name** fiel d	Enter the value in the field	Assigns a name to the **Video Capture Device** object in the system.	Latin, Cyrillic letters and service characters	Video Capture Device	A line representing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	The **Disable** c heckbox	Is set with a checkbox	Shows the status (enabled or disabled) of the **Video Capture Device** object in the system.	Boolean type	-	Yes – the **Video Capture Device** object is disabled and is not in use. No – the **Video Capture Device object** is enabled and is in use.
4	The **Compute r** dropdown list	Is selected in the list	Assigns the parent **Computer** object for the **Video Capture Device** object.	Name of the **Computer** o bjects registered in the system.	Name of the parent **Computer** object	Depends on the number of the **Computer** objects in the system.
The Basic settings group						
5	The **Type** drop down list	Is selected in the list	Sets the type of the Video Capture Device	Types of Video Capture Devices	Is not defined	Video capture cards (FS-3, FS-5, FS-6, FS-8, WS–4, WS-7/17, etc.). Network video hubs (WaveHub, LinuxHub) Network devices (Axis, Panasonic, etc.) Virtual
6	The **PCI channel** drop down list	Is selected in the list	Assigns the PCI channel number of the video capture card’s ADC.	List of active channels available for video input.	-	From 0 to 31, depending on the number of PCI channels in the video server and the number of installed ADCs.
7	The **Signal** dr opdown list	Is selected in the list	Sets the format of the incoming video signal.	List of video signal formats	PAL	PAL, NTSC
8	The **Resolutio n** dropdown list	Is selected in the list	Sets resolution of the video frames.	List of available video frame resolutions	Standard	**Standard** **High**. **Full** Specific values depend on camera model.

9	The **Speed** slider	Is set in the required position.	Sets the frame rate of the video stream	Permitted deviations of the total video signal frame rate transmission.	Average	Depends on possibilities of used IP-camera or video capture card. For cards with program compression: **Max** – maximum permitted total video signal frame rate. **Average** – half of the maximum permitted total video signal frame rate. **Min** – one third of the maximum permitted total video signal frame rate.
10	The **IP** field	Enter the value in the field	Sets the IP address of a network device.	IP address	-	A line presented as xxx.xxx.xxx.xxx Contains the values: 0.0.0.0 – 255.255.255.255 Depends on network settings of IP devices registered in the system. When configuring getting live video from ECHD Server the *<ECHD Server address>:<camera GUID>:<external account>* line is specified.
11	The **Port** field	Enter the value in the field	Sets the connection port of IP-device	Nonnegative integer		From 0 to 65535 Depends on net settings of IP devices
12	The **Name** field	Enter the value in the field	Set the user's name for connection to the net IP-device	-	-	Depends on net settings of IP-device
13	The **Password** field	Enter the value in the field	Sets the password required for connection to the network device.	-	-	Depends on net settings of IP devices
14	The **Activate WatchDog** checkbox	Is set with a checkbox	Activate Windows OS reset, if the main modules of the Intellect video surveillance system hang up	Boolean type	-	Yes – reset of Windows OS is activated No - reset of Windows OS is not activated
15	The **Use device settings** checkbox	Is set with a checkbox	Allows using settings specified in Web server or another software of IP device	Boolean type	No *Note. Value of checkbox depends on settings performed in the wizard while creating the **Video input card** object using the* Camera discovery tool*.*	Yes – settings of IP device are in use. No – settings of INTELLECT™ are in use

The Settings panel of the Camera object

The settings panel of the **Camera** object is shown in figures.

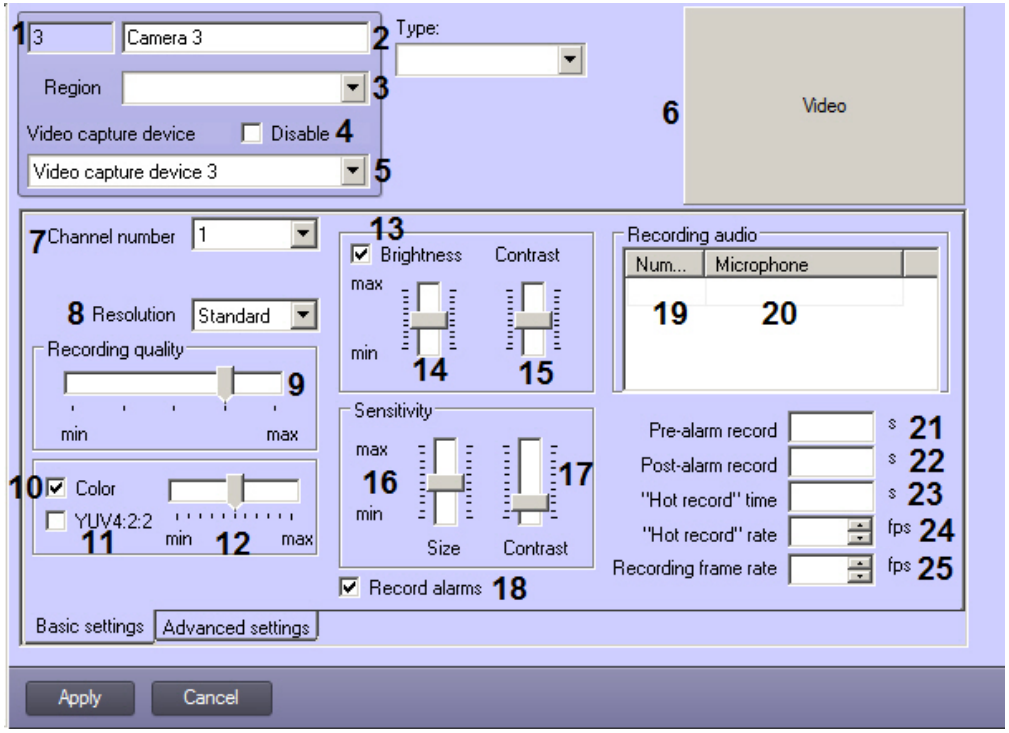
1
3
Camera 3
2
Type:
Region
3
Video capture device
Disable
4
Video capture device 3
5
6
Video
7
Channel number
1
8
Resolution
Standard
Recording quality
9
min
max
10
Color
YUV4:2:2
11
min
12
max
13
Brightness
Contrast
max
min
14
15
Sensitivity
max
16
min
17
Size
Contrast
Record alarms
18
Recording audio
Num...
Microphone
19
20
Pre-alarm record
s
21
Post-alarm record
s
22
"Hot record" time
s
23
"Hot record" rate
fps
24
Recording frame rate
fps
25
Basic settings
Advanced settings
Apply
Cancel

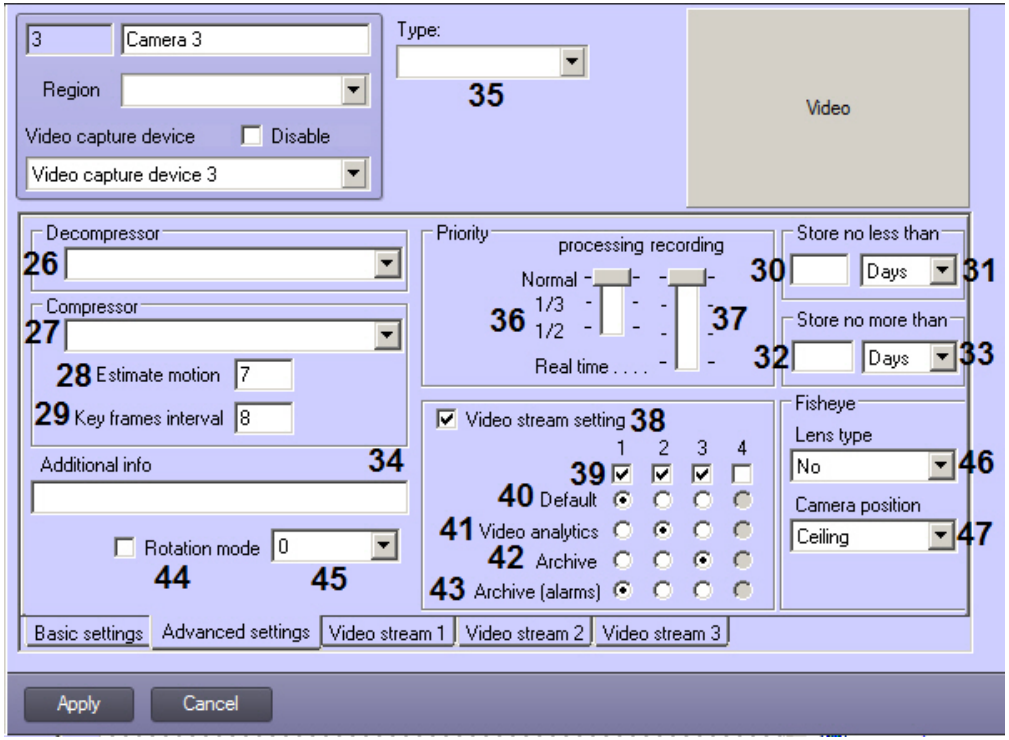
3
Camera 3
Region
Video capture device
Disable
Video capture device 3
Type:
35
Video
Decompressor
26
Compressor
27
28 Estimate motion
7
29 Key frames interval
8
Additional info
34
Rotation mode
0
44
45
Priority
processing recording
Normal
36
1/3
1/2
Real time . . . .
37
Video stream setting
38
1 2 3 4
39
40 Default
41 Video analytics
42 Archive
43 Archive (alarms)
Store no less than
30
Days
31
Store no more than
32
Days
33
Fisheye
Lens type
No
46
Camera position
Ceiling
47
Basic settings
Advanced settings
Video stream 1
Video stream 2
Video stream 3
Apply
Cancel

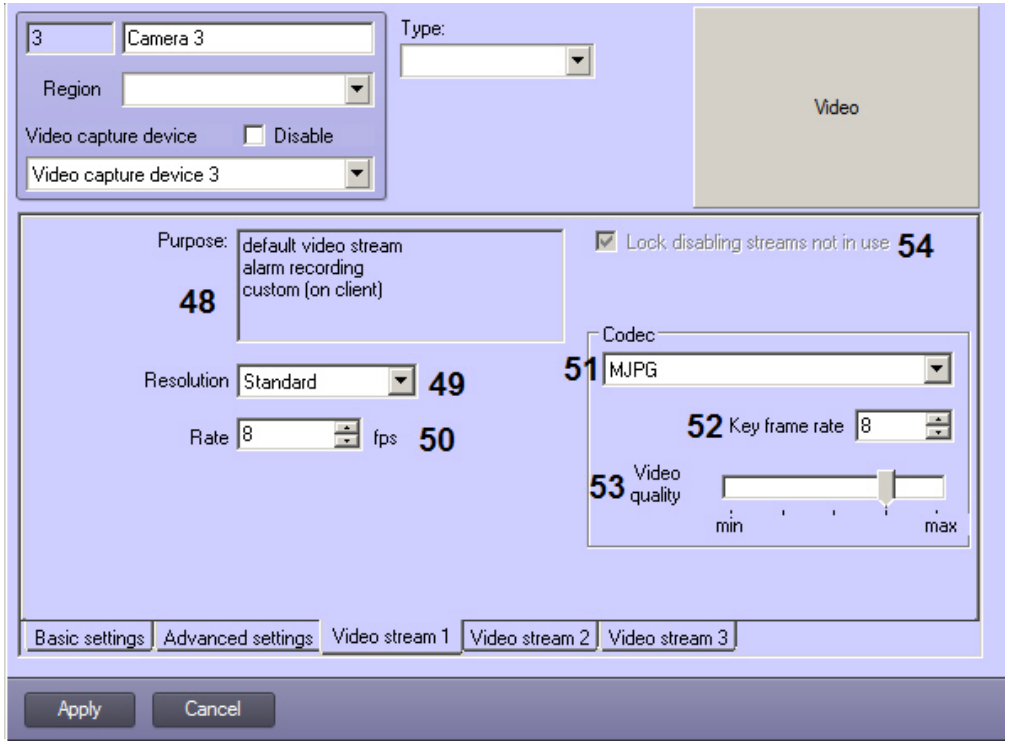

Table describes the settings parameters of the **Camera** object.

№	Parameter	Method for setting the parameter value	Description	Presented as	Default value	Range of values
1	The **Identification number** field *	Automatically	Shows the identification number of the **Camera** system object in the system.	Sequence of numbers	-	From **1** to **FaceCamOffset,** by default FaceCamOffset = 50000. FaceCamOffset value is set with the help of the registry key of the same name (see Registry keys reference guide).
2	The **Name** field *	Enter the value in the field	Set the name of the **Camera** object in the system	Latin, Cyrillic letters and service characters	Camera	A line representing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	The **Region drop-down** list	Is selected from the list	Assigns the **Section** structural element, to which the given **Camera** object refers.	Name of the **Section** objects registered in the system.	Section	Depends on the number of created **Section** objects registered in the system.

4	The **Disable** checkbox	Is set with a checkbox	Set the status (enabled or disabled) of the **Camera** object in the system.	Boolean type	Not available	**Yes** – the **Camera** object is disabled and is not in use. **No** – the **Camera** object is enabled and is in use.
5	The **Video Capture Device** drop-down list	Is selected from the list	Set the parent **Video Capture Device** object for the given **Camera** object.	Name of the **Video Capture Device** objects registered in the system.	Name of the parent **Video Capture Device** object.	Depends on the number of the **Video Capture Device** objects in the system.
6	The **Video** box	Left-click	Displays video with settings. A webpage of *Web server* of IP device appears in default browser when pressing and holding Shift (not available in Internet Explorer).	Video	-	-
			The **Basic settings** tab			
7	The **Channel number** drop-down list	Is selected from the list	Defines the number of the channel used to connect a video camera to the video capture card. Corresponds to the BNC-adapter number.	Sequence of numbers	1	Depends on the type of the video capture card. Maximum 16 channels.
8	The **Resolution** drop-down list	Is selected from the list	Set the resolution of the frame.	List of available resolutions of the frames.	Standard	**Standard**. **High**. **Full**. Particular values depend on the camera model.
9	The **Recording quality** slider	The slider is set in the required position	Set the quality of the recorded frame. Is a value reciprocal to the level of video signal compression.	-	Above average	**Min** – maximum compression level and the lowest video signal quality. **Max** – the lowest compression level and the highest video signal quality.
10	The **Color** checkbox	Is set with a checkbox	Set the type of video image received from the camera (color or black and white)	Boolean type	Yes	**Yes** – the video will be color. **No** – the video will be black and white.
11	The **YUV 4:2:2** check box	Is set with a checkbox	Set the format of the video signal color image.	Boolean type	No	**Yes** – the video signal will be displayed in the YUV 4:2:2 format. **No** – the video signal will be displayed in the YUV 4:2:0 format.
12	The **Color** slider	The slider is set in the required position	Set the color saturation of the colored video	From maximum color saturation to a black and white video.	Average	**Max** – corresponds to the maximum color saturation of the video. **Min** – corresponds to the black and white video.
13	The **Brightness-Contrast** checkbox	Is set with a checkbox	Set the mode for setting brightness and contrast of the video	Types of modes for setting brightness and contrast of the video	Automatic	**Automatic** (Position 1***) - brightness and contrast are set automatically. **Manual** (Position 2***) - brightness and contrast are set manually. **Manual setting with automatic optimization** (Position 3***) - brightness and contrast are set manually and followed by automatic optimization.

14	The **Brightness** slider	The slider is set in the required position	Set the video brightness	From maximum brightness (white video) to minimum brightness (black video)	Average	**Max** – corresponds to the maximum brightness of the video. **Min** – corresponds to the minimum brightness of the video.
15	The **Contrast** slider	The slider is set in the required position	Set the video contrast	-	Average	**Max** – corresponds to the maximum contrast of the video. **Min** – corresponds to the minimum contrast of the video.
16	The **Size** slider	The slider is set in the required position	Set the minimum object size triggering the main motion detector.	% in relation to the screen elevation	Average	**Minimal** – 0% of the video surveillance box size. **Maximum** – 100% of the video surveillance box size
17	The **Contrast** slider	The slider is set in the required position	Set the minimal contrast of the object triggering the main motion detector	-	Less than average	**Max** – correspond to maximal contrast of the object **Min** – corresponds to the minimal contrast of the object
18	The **Record alarms** c heckbox	Is set with a checkbox	Starts automatic video recording on the alarm from the camera (alarm on the Main motion detector)	Boolean type	Yes	**Yes** – automatic video recording on the alarm from the camera is active. **No** – automatic video recording on the alarm from the camera is not active.
19	The **Number** drop-do wn list	Is selected from the list	Sets the number of Microphone audio from which is recorded simultaneously with video from the camera.	Number of the **Micro phone** objects registered in the system.	-	Depends on the number of the **Microphone** o bjects in the system.
20	The **Microphone** dro p-down list	Is selected from the list	Sets the name of Microphone audio from which is recorded simultaneously with video from the camera.	Name of the **Microp hone** objects registered in the system.	-	Depends on the number of the **Microphone** o bjects in the system.
21	The **Pre-alarm record** field	Enter the value in the field	Set the pre-alarm time period for video recording, during which there is pre-event recording	Time (in sec)	-	Recommended time – from 0 to 20
22	The **Post-alarm record** field	Enter the value in the field	Set the time period for video recording after alarm registration.	Time (in sec)	-	Recommended time – from 0 to 20
23	The **Hot-record time** field	Enter the value in the field	Set the time period from the alarm registration or the start of record, during which the frame rate of recording will comply with the value entered in the Hot record rate field	Time (in sec)	-	Recommended time – from 0 to 30
24	The **Hot-record rate** field	Enter the value in the field / select from the list	Set the frame rate of alarm's hot recording	fps	-	Depends on the capabilities of the camera. Recommended time – from 0 to 20
25	The **Recording frame rate** field	Enter the value in the field/ select from the list	Set the frame rate for video recording	fps	-	Depends on the capabilities of the camera Recommended time – from 1 to 25 for PAL From 1 to 30 for NTSC
The **Advanced settings** tab						

26	The **Decompressor** drop-down list	Is selected from the list	Set the technology using which the compressed video stream will be decompressed while displaying video signal on the monitor. *Note. By default the parameter is not available for editing. To change the value of this parameter set the "1" value for the EnableCodecSettings registry parameter (see Registry keys reference guide).*	The list of available decompressors	No	BOSCH FfmpegAllInOneDecoder H263IppDecoder H264InterlacedIppDecoder H264IppDecoder MJPEGIpp Motion Wavelet 3.5 Motion Wavelet 7.1 MPEG2IppDecoder MPEG4IppDecoder MxPEG Mobotix RGB24toYUV420 StreamLabs VWV WMVIppDecoder
27	The **Compressor** drop-down list	Is selected from the list	Set the algorithm of video stream compression *Note. By default the parameter is not available for editing. To change the value of this parameter set the "1" value for the EnableCodecSettings registry parameter (see Registry keys reference guide).*	The list of available algorithms	No	Depends on the camera model
28	The **Estimate motion** field	Enter the value in the field	Set threshold of camera's sensivity to motion depending on the change of object's brightness. Delta frame of video signal is created by this criterion.	Sequence of numbers	7	From 2 to 255
29	The **Key frames interval** field	Enter the value in the field	Set the key frames rate.	Sequence of numbers	8	Depends on the capabilities of the camera
The **Store at least** group						
30	The **Store at least** field	Enter the value in the field	Set the time period for keeping the video archive from the camera and also audio archive(with the synchro records) on the Server. Parameter allows saving the large archive for selected camera due to size of other cameras archive. *Note. It is better to set the **Store at least** parameter not for more than 30% of cameras as this setting is a RECOMMENDED one. If there is not enough space for recording the archive, the setting is ignored and recording is not stopped anyway.* *If more than 10 cameras are created in the system, then while attempting to set this parameter for more than 30% of cameras in the system, the corresponding warning appears after the **Apply** button is pressed. It can be disabled using the NotifyAbout_arch_days registry key (see Registry keys reference guide).*	Day	-	More than 1
31	The **Store at least** dropdown list	Select value from the list	Sets units for time period specified in the **Store at least** field	The list of available time units	Days	Days Hours
The **Store no longer** group						

32	The **Store no longer** field	Enter the value in the field	Sets the time period for storing the archive – when it is expired, the archive is removed. *Note. The archive can be removed before the specified time if it is required for loop recording.*	Day or hour depending on the value selected in the dropdown list	-	More than 1
33	The **Store no longer** dropdown list	Select value from the list	Sets units for time period specified in the **Store no longer** field	The list of available time units	Days	Days Hours
Not in groups						
34	The **Additional info** f ield	Enter the value in the field	Set the information displayed on the monitor above the camera name. This information is added to the export file and when the frame is printed, as to the event log	The line not longer than 100 characters	Blank line	Latin, Cyrillic letters and service characters
35	The **Type** drop-down list	Is selected from the list	Set the type of the camera. The setting affects the type of the icons used to represent the camera on the map	The list of available camera types	-	Fisheye PTZ Standard
36	The **Processing priority** slider	The slider is set in the required position	Set the priority of video processing	The order of video processing	Normal	Normal – normal video procession order 1/3 – 1/3 procession order 1/2 – 1/2 procession order
37	The **Recording priority** slider	The slider is set in the required position	Set the priority of video processing in the recording mode	The order of video processing in the recording mode	Normal	Normal – normal video record order 1/3 – 1/3 procession order 1/2 – 1/2 procession order All resources – all ADC resourses are in use for video recording
38	**Video stream setting** checkbox	Checking the box	Enables the multistream feature	Boolean	None	**True** – multistreaming is enabled; different streams can be used for analytics, archiving, and display. **False** – multistreaming is disabled; a single stream is used for analytics, archiving, and display.
39	**Active videostreams** check box group*	Setting required checkboxes	Sets video streams that are enabled and disabled	Available video streams	All checkboxes are set	**True** - video stream is in use **False** - video stream is disabled
40	**Default** radio button	Setting the radio button to the desired position	Assigns the video stream to be displayed both as locally and on remote clients	List of available streams	1	1, 2, 3, 4 Depends on the **Active videostreams** setting . Disabled video stream can not be selected
41	**Video analytics** radi o button	Setting the radio button to the desired position	Assigns the video stream used for video analytics (including main motion detection tool). This stream is used by all *Intellect* detection tools (except embedded video camera detection tools) – including tracking detection tools, motion detection tool, face detection tool, facial recognition tools and detection tools that are the part of *Detector Pack*.	List of available streams	1	1, 2, 3, 4 Depends on the **Active videostreams** setting . Disabled video stream can not be selected
42	**Archive** radio button	Setting the radio button to the desired position	Sets video stream recorded to the archive not upon alarm – the continuous recording is performed.	List of available streams	1	1, 2, 3, 4 Depends on the **Active videostreams** setting . Disabled video stream can not be selected

43	**Archive (alarms)** radio button	Setting the radio button to the desired position	Sets video stream recorded to the archive upon alarm.	List of available streams	1	1, 2, 3, 4 Depends on the **Active videostreams** setting . Disabled video stream can not be selected
44	**Rotation mode** checkbox	Setting checkbox	Enables a function of rotation the video image displayed on the Video surveillance monitor	Boolean type	No	**Yes -** rotation mode is enabled **No** - rotation mode is disabled
45	**Rotate on** drop-down list	Select value from the list	Specifies an angle of video image rotation when the rotation mode is enabled	Numbers	0	0, 90, 180, 270
46	The **Lens type** dropdown list	Select value in the list	Sets the type of lens in use	Supported lens types	No	**No** – select if there are no fisheye or anamorphic lenses on the camera. **Standard fisheye lens** – select if there is a fisheye lens on the camera. **Autocalibration** – select if there is a fisheye lens on the camera and auto detection of video conversion parameters in order to eliminate artifacts is to be performed. **A0*V, A1UST, A8TRT, B0QQV, B4QQV, B5SST, B6SST** – types of panomorph lens.
47	The **Camera location** dropdown list	Select value in the list	Sets the camera location	Supported camera location modes	Ceiling	**Ceiling** **Wall** **Floor**
			Video stream tab			
48	**Purpose** field	-	Displays a description of how the video stream is used	String	Depends on the video stream's designated purpose	Most Latin and Russian characters, numbers
49	**Resolution** dropdown list**	Selected from a list	Assigns the video stream's resolution	List of -supported-video- resolutions	Standard	**Standard** **High** **Full** Particular values depend on the camera model.
50	**Speed** spinbox**	Typed into a field	Assigns the frame rate of the video stream	Frame rate (fps)	25	Depends on the capabilities of the camera
51	**Codec** dropdown list**	Selected from a list	Assigns the technology to be used to encode and decode the video stream	List of supported codecs	Depends on the camera model	Depends on the camera model.
52	**Key frame rate** spin box**	Typed into a field	Assigns the key frames rate.	Set of natural-numbers	8	Depends on the capabilities of the camera
53	**Video quality** slider**	Moving it to a position	Assigns the frame quality	-	Maximum	**Min** – maximum compression and minimum video quality **Max** – minimum compression and maximum video quality

54	Lock disabling streams not in use checkbox	Setting a checkbox	This checkbox is to be set checked if the purpose is not specified for the configured stream but is is in use for recording on command or script.	Boolean	No	**Yes** – if the stream value is not selected, then the stream is in the sleep mode and it cannot be in use for recording on command or script. **No** – if the stream purpose is not selected, then it can be in use for recording on command or script.

*Name of the interface element is not shown on the setting panel

Equivalent settings on the **Basic Settings and **Advanced settings** tabs, as well as on the settings panel of the **Video Capture Device** object, are ignored.

*** Position 1 -

Position 2 -

Position 3 -

The Settings panel of the Detection zone object

The **Detection zone** object is used to register and configure intelligent video detectors. The settings panel of the **Detection zone** object is shown in figure.

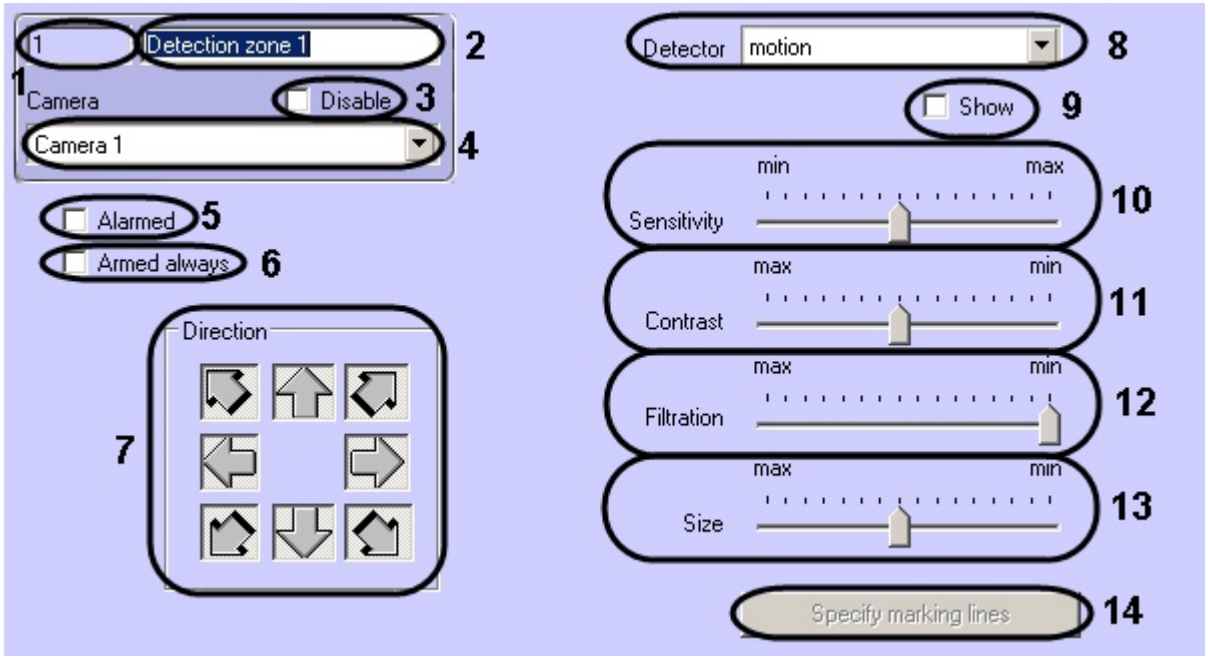

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Detection zone** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range

1	Identification number*	Automatically	Displays the identification number of the **Detection zone** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of **Detection zone** objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the field	Defines the name of the **Detection zone** object in the digital distributed video surveillance system.	Latin, Cyrillic letters and service characters	Detection zone	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Detection zone** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the **Detection zone** is disabled and is not in use No – the **Detection zone** object is enabled and is in use.
4	Camera	Is selected from the list	Defines the parent **Camera** object of the digital distributed video surveillance system, to which the given **Detection zone** object refers.	Name of the **Camera** objects registered in the system	Name of the parent **Camera** object.	Depends on the number of **Camera** objects in the digital distributed video surveillance system.
5	Alarmed	Is identified by the check mark	Starts automated recording of the video signal from the camera with the alarm received from the selected detector.	Boolean type	Not available	Yes – automated recording of the video signal with the alarm received from the selected detector is in progress. No – automated recording of the video signal with the alarm received from the selected detector is not in progress.
6	Always armed	Is identified by the check mark.	Defines the condition of the selected detector as Always armed.	Boolean type	Not available	Yes – the detector should always be armed. No – the operator may disarm the detector.
Direction Group						
7	Direction of search*	Press the arrow buttons.	Defines the direction of search for the motion detector.	8 possible directions to follow an object within the frame.	Pressed: up, down, to the left, to the right Pulled out: up and to the left, up and to the right, down and to the left, down and to the right.	Up, down, to the left, to the right, up and to the left, up and to the right, down and to the left, down and to the right.
Out of the groups						
8	Detector	Is selected from the list	Is used to define the type of the detector in use.	List of the detectors in the system.	Motions	Motion Focus Stability Background change Blind Cover Abandoned objects Infrared
9	Show	Is identified by the check mark	Defines the frame border in the observed scene. This parameter is active only with the following detectors selected from the **Detector** list: motion, abandoned objects, infrared.	Boolean type	Yes.	Yes – the object border is displayed in the observed scene. No – the object border is not displayed in the observed scene.

10	Sensitivity	Set the slide in the required position.	The function depends on the type of the selected detector: **Motion detection tool** The value of this parameter corresponds to the minimum value of the averaged brightness of the moving object, at which the detection tool will trigger only act at its motion, and not at the video signal noise (including snow, rain, etc.). The HIGHER the sensitivity value, the more sensitive the detection tool is. **Focus detection tool** The value of this parameter characterizes the minimum degree of accuracy loss, expressed in the difference between the average number of outlines and the number of outlines in the incoming frame at which the detection tool should trigger. **Video signal stability detection tool** The value of this parameter characterizes the minimum degree of reduction in the resolution of the frame, expressed in the difference between the average number of outlines and the number of outlines in the incoming frame at which the detection tool should trigger. **Background change detection tool** This parameter characterizes the deviation of the integral brightness of the frame from the average value at which the detection tool should trigger. **Camera blinding detection tool** This parameter corresponds to the rate of illumination of the video expressed in the difference between the positions of medians of the brightness chart of the incoming frame and the reference illumination frame at which the detection tool should trigger. **Cover detection tool** This parameter corresponds to the rate of narrowing of the brightness chart of the frame, i.e. estimation of the frame filling with gray color, at which the detection tool should trigger. **Abandoned objects detection tool** The value of this parameter corresponds to the minimum value of the averaged brightness of the abandoned (or disappeared) object, in which the detection tool will trigger only if it appears in the frame (not the other types of objects). **Infrared detection tool** The value of this parameter corresponds to the minimum value of the averaged brightness of the moving object, at which the detection tool will trigger at its motion.	-	Average	-
11	Contrast	Set the slide in the required position.	Specifies the minimum contrast of the object at which the detection tool triggers at its motion. The HIGHER the specified contrast value, the more different the neighboring b/w pixels should be, so that the detection tool considers them as different objects. Is not applicable for all detector types.	-	Average	-
12	Filtration	Set the slide in the required position.	**Motion detection tool, Infrared detection tool** The value of this parameter corresponds to the threshold of color processing of objects, at which the detection tool should trigger. The HIGHER the filtering, the more different the neighboring pixels should be, so that the detection tool considers them as different objects. **Abandoned objects detection tool** The value of this parameter corresponds to the time interval after which the object in the frame is considered as abandoned (or disappeared). **Background change detection tool, video signal stability detection tool** The value of this parameter corresponds to the contrast threshold of the detected object. Is not applicable for all detector types.	-	Minimal	-
13	Size	Set the slide in the required position.	The value of this parameter corresponds to the minimum size of the detection object relatively to the frame sizes. Is not applicable for all detector types.	-	Average	-

14	Set delimitation lines	Is not used	-	-	-	-

*Name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Audio card object

The **Audio card** object is designed to register and configure audio signal digitization devices installed on the videoserver of the Intellect™ system.

The settings panel of the **Audio card** object is shown in figure.

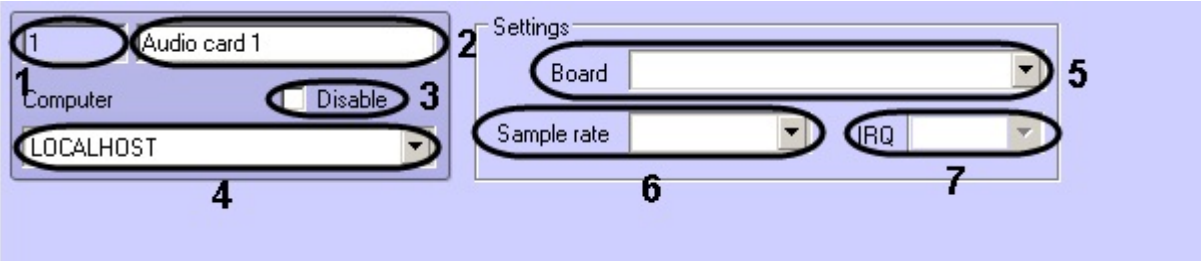

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Audio card** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Audio card** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of **Audio card** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Audio card** object in the digital distributed video surveillance system.	Latin, Cyrillic letters and service characters	Audio card	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Audio card** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the **Audio card** object is disabled and is not in use. No – the **Audio card** object is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Audio card** object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system.
Settings Group						

5	Board	Is selected from the list	Defines the device for sound digitization. Digitization devices include various sound cards, such as SoundBlaster, AD converters of the video capture cards, USB of the audio signal digitization.	List of audio digitization devices.	Not defined	Depends on the number of audio signal digitization devices installed on the videoserver. For SoundBlaster type audio cards - the name of the card For the AD converters of the video capture cards – the name of the video capture card, including the number of the audio channel. For the USB – the name of the video capture card, including the number of the audio channel. For network devices – the type of network device: AX, LH. IpCamAxis
6	Digitization frequency	Is selected from the list	Defines the frequency for audio signal digitization.	Hz	For SoundBlaster type audio cards - 8000. For the AD converters of the video capture cards - 8000.	For SoundBlaster type audio cards - the frequency range of the digitization depends on the type of the audio card 48 000 is the maximum value for any card. For the AD converters of the video capture cards - 8000, 16000, 32000. For USB devices – the frequency range of the digitization depends on the type of device used; 48 000 is the maximum value.
7	IRQ	Is not used	-	-	-	-

*Name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Microphone object

The settings panel of the **Microphone** object is shown in figure.

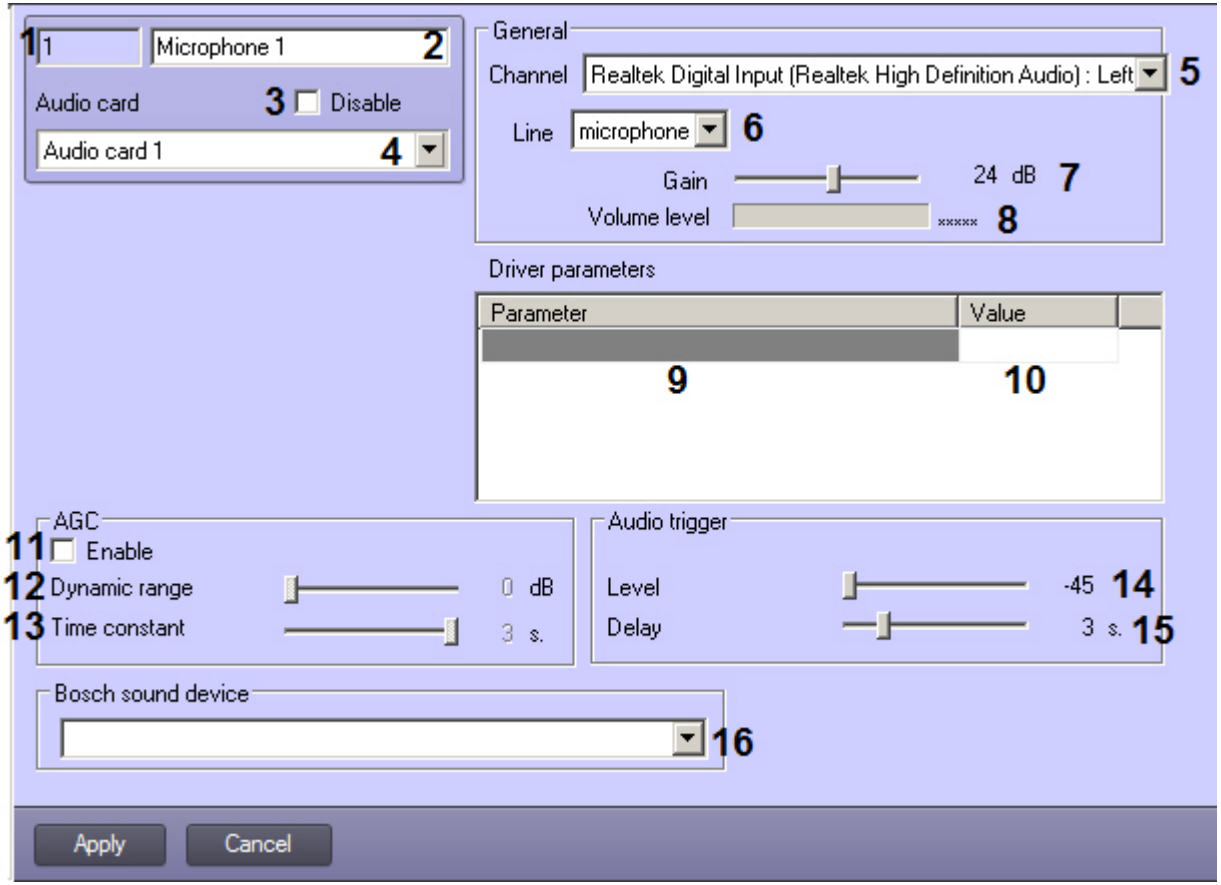

Table describes the settings parameters of the **Microphone** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbol used	Default value	Value range
1	Identification number	Automatically	Displays the identification number of the **Microphone** object in the system.	Sequence of numbers	-	Depends on the number of **Microphone** objects in the system
2	Name	Entering the value in the field	Set the name of the **Microphone** object in the system	Latin, Cyrillic letters and service characters	Microphone	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.

3	Disable	Is set by a check box	Defines the condition of the **Microphone** object (enabled or disabled) in the system.	Boolean type	No	Yes – the **Microphone** is disabled and is not in use. No – the **Microphone** is enabled and is in use.
4	Audio card	Select from the list	Defines the parent **Audio card** object for the given **Microphone** object	Name of **Audio card** objects registered in the system	Name of **Audio card** parent object	Depends on the number of Audio cards in the system.
General group						
5	Channel	Select from the list	Defines the number of the channel for the audio signal input in compliance with the RCA-F pin to which the microphone is connected.	Right,left chanel	0	Depends on the type of audio signal digitization card. For AxxonSoft AD converters of the audio signal digitization cards and SoundBlaster type audio cards: 0 – Left channel. 1 – Right channel.
6	Line	Select from the list	Set the source of audio signal	Source type of audio signal	Microphone	Microphone – audio signal comes from the microphone. Phone – the audio signal comes from the telephone line.
7	Volume	Is set in the position	Defines the volume of the audio signal	Volume of the sound in Db	24	From 0 to 45
8	Level	Automatically	Displays the volume of the incoming audio signal.	Volume of the sound in Db	-	From 0 to 45
The **Driver parameters** group						
9	Parameter	Automatically	Shows available parameters of IP device driver	-	-	Depends on the connected IP device.
10	Value	Select the value in the list	Sets values of IP device parameters	-	-	Depends on the connected IP device and parameter.
AGC group **(is set with the use of Olkha sound cards:«Olkha-9P», «Olkha-10LP», «Olkha-12U», «Olkha-14»)**						
11	Enable	Is set by a check box	Enables automatic adjustment of audio signal volume	Boolean type	No	Yes – automatic adjustment of audio signal volume is enable No – automatic adjustment of audio signal volume is disabled
12	Dynamic range	Is set in the position	Set the level of audio signal volume after the automatic adjustment	Sound volume in Db	0	From 0 to 45

13	Time constant	Is set in the position	Defines the time period, during which audio signal is leveled to the required volume with automatic adjustment	Time in sec	3	From 0,1 to 6
Audio trigger						
14	Level	Is set in the position	Set the volume of the sound, which exeeding leeds to auto recording of audio signal (registration of alarm)	Sound volume in reference units	-45	-45 – audio trigger is on From -44 to 0 –audio trigger is off
15	Delay	Is set in the position	Defines the time period, during which the threshold of audio signal after the end of alarm is being performed	Time in sec	3	From 1 to 16
Bosh sound device group (is set for sound cards IP-cameras Bosch)						
16	Bosh sound device	Select from the list	Set the sound device, audio signals from which shoul be transmitted to loudspeakers of the given IP-camera Bosch	Names of registered sound devices	-	Depends on sound devices, registered in the system

*Name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Telemetry controller object

The **Telemetry controller** object is designed to register and configure serial ports (COM) used for connecting the PTZ units of the Intellect™ system.

The settings panel of the **Telemetry controller** object is shown in figure.

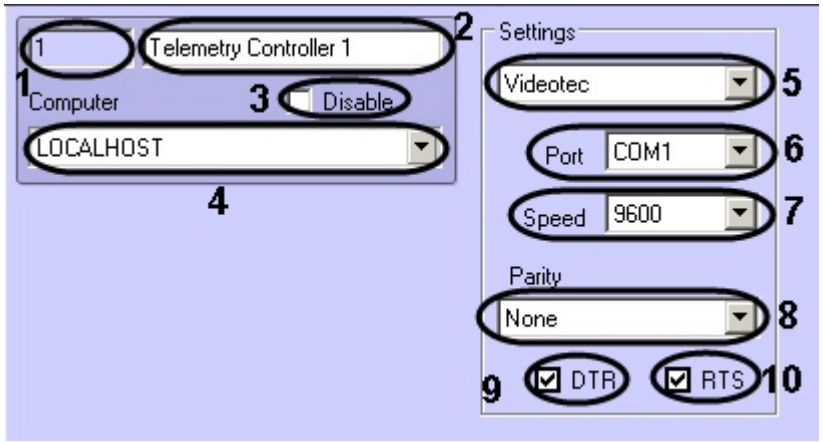

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Telemetry controller** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range

1	Identification number*	Automatically	Displays the identification number of the **Telemetry controller** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of Telemetry controller objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Telemetry controller** objec t in the digital distributed video surveillance system.	Latin, Cyrillic letters and service characters	Telemetry controller No.	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Telemetry controller** o bject (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the **Telemetry controller** object is disabled and is not in use No – the **Telemetry controller** is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Telemetry controller** object refers.	Name of the **Comp uter** objects registered in the system	Name of the parent **Com puter** object .	Depends on the number of **Computer** objects in the digital distributed video surveillance system
				Settings Group		
5	Controller type*	Is selected from the list	Defines the data communication protocol with the PTZ unit over the serial port (COM). Data communication protocols are supplied by the PTZ vendors.	Name of the PTZ units integrated in the system.	Videotec	Corresponds to the list of the PTZ units integrated in the system.
6	Port	Is selected from the list	Defines the number of the COM port of the computer, to which PTZ will be connected.	List of COM ports available	COM1	Depends on the number of COM ports in the videoserver or Remote administrator workstation. If a non-empty value is selected, then the local COM port priority while handling PTZ device commands is higher than other devices. Otherwise, the COM port priority is set to the default value.
7	Speed	Is selected from the list	Defines the data communication rate for the COM port.	Kb/sec	9600	From 300 to 256000.
8	Parity	Is selected from the list	Defines the parity check mode for the data transmission over the COM port.	List of parity check modes.	None	Even, Odd, None, Mark, Space.
9	DTR	Is identified by the check mark.	Defines the power supply to the PTZ unit via the DTP COM port.	Boolean type	Yes	Yes – the power will be supplied via the DTR port. No – the power will not be supplied via the DTR port.
10	RTS	Is identified by the check mark.	Defines the power supply to the PTZ unit via the RTS COM port.	Boolean type	Yes	Yes – the power will be supplied via the RTS port. No – the power will not be supplied via the RTS port.

*Name of the element is not displayed in the settings panel of the given object.

The Settings panel of the PTZ device object

The **PTZ device** object is designed to register and configure the PTZ device in the Intellect™ system.

The settings panel of the the **PTZ device** object is shown in figure.

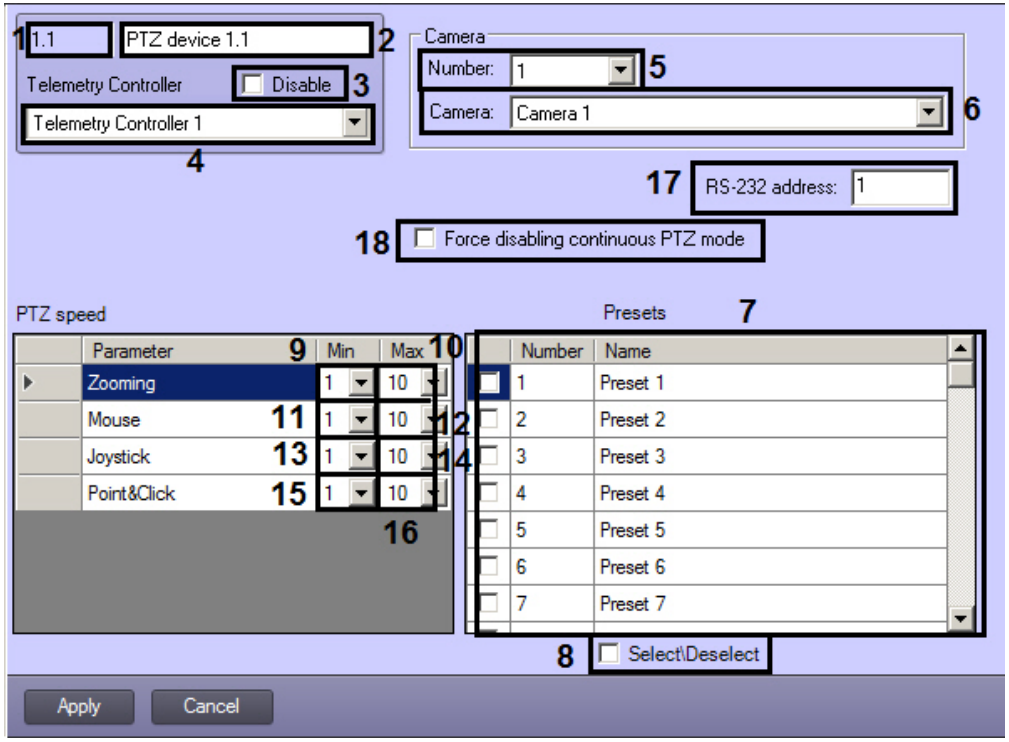

Table describes the parameters of the settings corresponding to the elements of the settings panel of the PTZ device object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number	Automatically	Display the identification number of the **PTZ device** object in the digital distributed video surveillance system	Sequence of numbers	-	Depends on the number of the **PTZ device** objects in the digital distributed video surveillance system
2	Name	Enter the value in the field	Set the name of the **PTZ device** object in the digital distributed video surveillance system	Latin, Cyrillic letters and service characters	PTZ device	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of characters – from 1 to 60.
3	Disable	Is set with the checkbox	Set the status of the **PTZ device** object (enabled or disabled) in the digital distributed video surveillance system	Boolean type	No	Yes – the PTZ device is disabled and is not in use No – the PTZ device is enabled and is in use.

4	Telemetry controller	Is selected from the list	Set the parent **Telemetry controller** object of the digital distributed video surveillance system, to which the given **PTZ device** object refers.	Name of the **PTZ device** objects registered in the system	Name of the parent **Telemetry controller** object.	Depends on the number of **Telemetry controllers** in the digital distributed video surveillance system
The Camera group						
5	Number	Is selected from the list	Set the identification number of the surveillance camera, where the **PTZ device** is installed.	Sequence of numbers	Not defined	Depends on the number of surveillance cameras in the digital distributed video surveillance system
6	Camera	Is selected from the list	Match the **PTZ device** with the surveillance camera, where it is installed. The parameter is used by the Video Monitor and telemetry window for the purposes to control the **PTZ device**.	Name of the **Camera** objects registered in the system	No	Depends on the number of the **Camera** objects in the digital distributed video surveillance system
7	Presets	Is set with the checkbox	Select the presets that are to be displayed in the **Telemetry control box**	Boolean type	No	Yes – the preset name is displayed in the **Telemetry control box** No – the preset name is not displayed in the **Telemetry control box**
	Name	Enter the value in the field	Set the preset name to display it in the **Telemetry control box**	Latin, Cyrillic letters and service characters	Preset	A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive
8	Select/Deselect	Is set with the checkbox	Check/Uncheck all the elements in the **Presets** table	Boolean type	No	Yes – select all the presets No – uncheck all the presets
Zooming speed group						
9	**Min**	Enter the value in the field	Sets the minimal practical speed of optical zoom on the PTZ device	Speed in standard units	0	1 – 10
10	**Max**	Enter the value in the field	Sets the maximal practical speed of optical zoom on the PTZ device	Speed in standard units	0	1 – 10
Mouse group						
11	**Min**	Enter the value in the field	Sets the minimal practical rotation speed of PTZ devices from the Monitor	Speed in standard units	0	1 – 10
12	**Max**	Enter the value in the field	Sets the maximal practical rotation speed of PTZ devices from the Monitor	Speed in standard units	0	1 – 10
Joystick group						
13	**Min**	Enter the value in the field	Sets the minimal practical rotation speed of PTZ devices using joystick	Speed in standard units	0	1 – 10
14	**Max**	Enter the value in the field	Sets the maximal practical rotation speed of PTZ devices using joystick	Speed in standard units	0	1 – 10
Point&Click group						
15	**Min**	Enter the value in the field	Sets minimal practical rotation speed of PTZ device in direction of mouse click (Point&Click)	Speed in standard units	0	1 – 10

16	**Max**	Enter the value in the field	Sets maximal practical rotation speed of PTZ device in direction of mouse click (Point&Click)	Speed in standard units	0	1 – 10
Outside the groups						
17	**RS-232 address**	Enter the value in the field	Sets address of the PTZ device configured via hardware (with jumpers on the PTZ device board) or software (through a special softw are for PTZ devices firmware upgrade).	Non-negative integer	1	Integer 1 to 255. Depends on PTZ device protocol.
18	**Force disabling continuous PTZ mode**	Set the checkbox	Sets the PTZ control mode: continuous or discrete.	Boolean type	0	0 – the continuous PTZ mode is enabled. 1 – the discrete PTZ mode is enabled.

The Settings panel of the Control panel object

The **Control panel** object is designed to register and configure a specialized control panel used for PTZ control in the Intellect™ system.

The settings panel of the **Control panel** object is shown in figure.

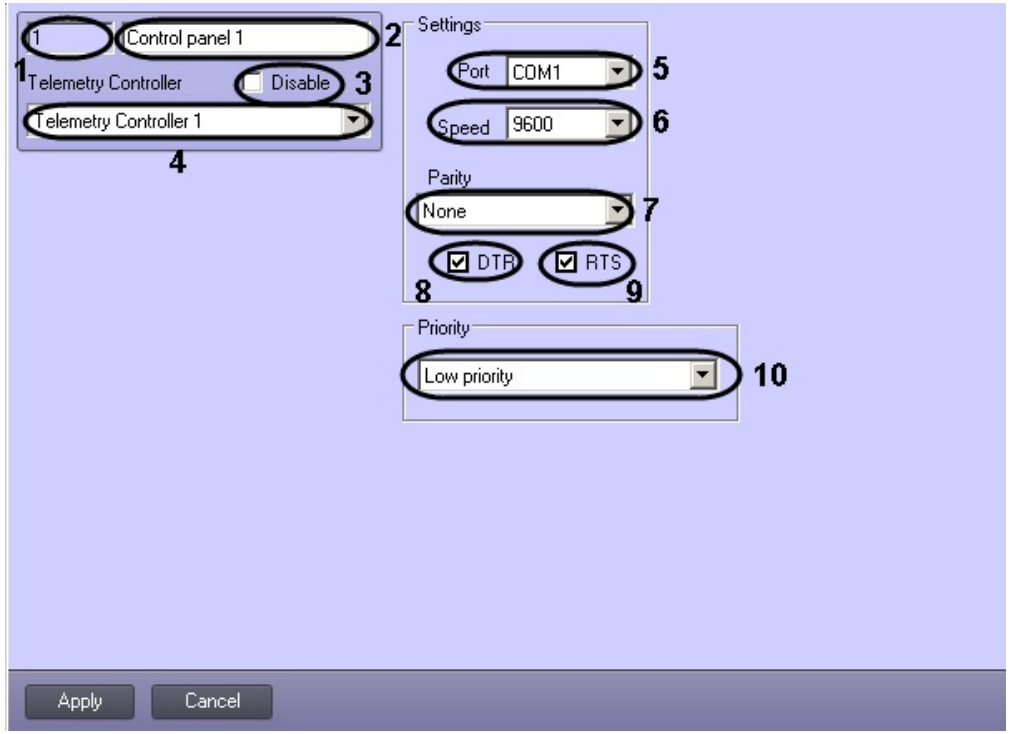

Table describes the parameters of the settings corresponding to the elements of the settings panel of the Control panel object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Control panel** obj ect in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of **Control panel** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the fieldhe	Defines the name of the **Control panel** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Control panel	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Control panel** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the Control panel object is disabled and is not in use No – the Control panel is enabled and is in use.
4	Telemetry controller	Is selected from the list	Defines the parent **Telemetry controller** object of the digital distributed video surveillance system, to which the given **Control panel** object refers.	Name of the **Telemetry controller** objects registered in the system	Name of the parent **Telemetry controller** object.	Depends on the number of **Telemetry controller** objects in the digital distributed video surveillance system
Settings Group						
5	Port	Is selected from the list	Defines the number of the COM port of the computer, to which the **Control panel** will be connected.	List of COM ports available	COM1	Depends on the number of COM ports in the video server or Remote Administrator Workstation.
6	Speed	Is selected from the list	Defines the data communication rate for the COM port.	Kb/sec	9600	From 300 to 256000.
7	Parity	Is selected from the list	Defines the parity check mode for the data transmission over the COM port.	List of parity check modes.	None	Even, Odd, None, Mark, Space.
8	DTR	Is identified by the check mark.	Defines, whether or not power should be supplied to the control panel via the DTA COM port.	Boolean type	Yes	**Yes** – the power will be supplied via the DTR port. **No** – the power will not be supplied via the DTR port.
9	RTS	Is identified by the check mark.	Defines, whether or not power should be supplied to the control panel via the RTS COM port.	Boolean type	Yes	**Yes** – the power will be supplied via the RTS port. **No** – the power will not be supplied via RTS port.
10	Priority	Is selected from the list	Defines priorities for control of the PTZ units using the **Cont rol panel**.	Names of priorities used to control PTZ units.	Low	**Control prohibited** – the PTZ unit cannot be controlled using the **Control panel**. **Low** – the given PTZ can be controlled no sooner than when the PTZ with standard or high priorities has been controlled. **Standard** – the given PTZ can be controlled no sooner than when the PTZ with high priority has been controlled. **High** – the PTZ with the given priority will be controlled first.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Long-term archive object

The settings panel of the **Long-term archive** object is shown in figure.

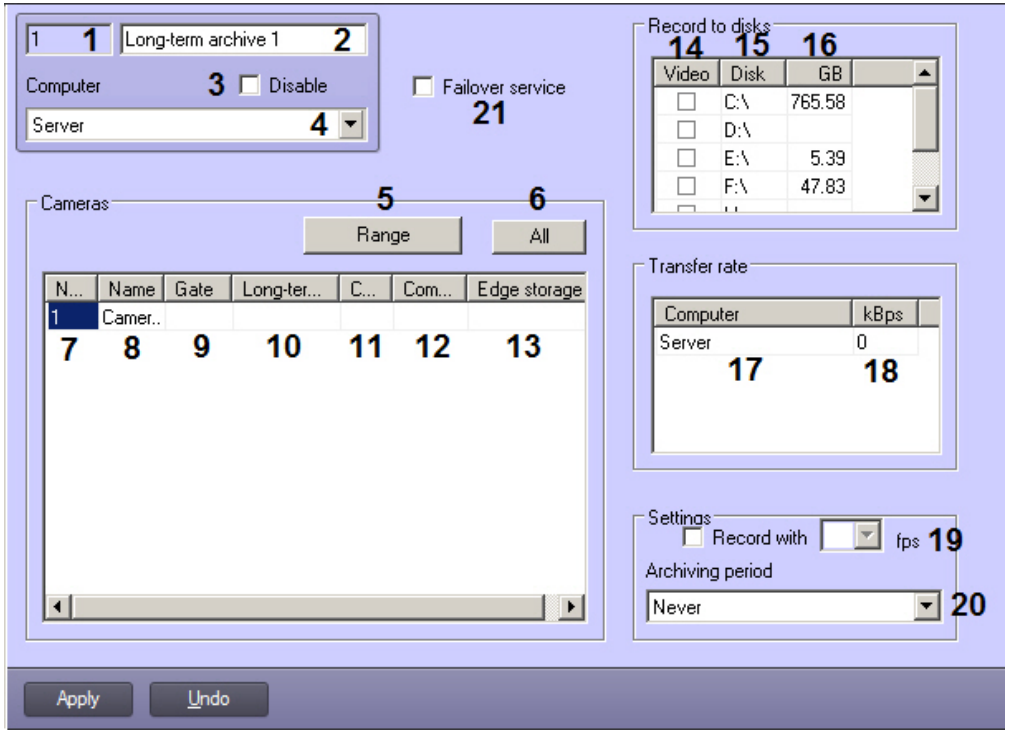

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Long-term archive** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	The **Identification number** field	Automatically	Displays the identification number of the Long-term archive object in the system.	Sequence of numbers	-	Depends on the number of **Long-term archive** objects in the system.
2	The **Name** field	Type-in the value in the field	Sets the name of the **Long-term archive** object in the system.	Latin, Cyrillic and service characters	Long-term archive	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.

3	The **Disable** checkbox	Checkbox is set	Sets the state of the **Long-term archive** object (enabled or disabled) in the system.	Boolean type	No	Yes – the **Long-term archive** object is disabled and is not in use. No – the **Long-term archive** object is enabled and is in use.
4	The **Computer** dropdown list	Selected in the list	Sets the parent **Computer** object of the system for the given **Long-term archive** object	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object	Depends on the number of **Computer** objects in the system
The Cameras group						
5	The **Range** button	The button is pressed	Access to the complex selection of video cameras for copying of video archive to the **Long-term archive**	-	-	-
6	The **All** button	The button is pressed	Selection of all cameras registered in the system for copying of video archive to the **Long-term archive**	-	-	-
7	The **Number** dropdown list	Selected in the list	Sets the identification number of the surveillance camera for copying of video archive to the **Long-term archive**	Sequence of numbers	-	Depends on the number of cameras registered in the system
8	The **Camera** dropdown list	Is selected from the list	Sets the name of the camera for copying of video archive to the **Long-term archive**	Names of cameras registered in the system	-	Depends on the number of cameras registered in the system
9	The **Gate** drop down list	Selected in the list	Sets the Videogate object through which video archive from the selected camera has to be transferred to the **Long-term archive**	Name of the Gate objects registered in the system	-	Depends on the number of **Gate** objects registered in the system
10	The **Long-term archive** dropdown list	Selected in the list	Sets the **Long-term archive** object which will supply the data to the given **Long-term archive**	Name of the Long-term archive objects registered in the system	-	Depends on the number of **Long-term archive** objects registered in the system
11	**Compression** drop-down list	Select value from the list	Specifies the level of video signal compression to record to **Long-term archive**	Numbers	-	As increasing the compression level 0, 1, 2, 3, 4, 5 0 – no compression 5 – maximum compression
12	**Compressor** drop-down list	Select value from the list	Specifies the procedure of video stream compression which is in use for video signal recompression at record to the Long-term archive. The value is to be selected in the **Compression** list if the compressor is specified.	List of available procedures	-	MJPEG, Motion Wavelet 3.5, Motion Wavelet 7.1
13	The **External storage** dropdown list	Select value from the list	Set the **External storage** object used for the archive import from the external storage on IP device	Names of **External storage** objects registered in the system	-	Depends on the number of the **External storage** objects registered in the system
The Record to drives group						
14	The **Video** checkbox	Checkbox is set	Sets the drive to store the **Long-term archive**	Boolean type	No	Yes - the Long-term archive is stored to the drive No - the Long-term archive is not stored to the drive

15	The **Disk** column	Automatically	Displays names of local (network, USB) disks, available for storing the **Long-term archive**	Name of available disks (Latin characters)	-	Depends on the total number of available disks
16	The **GB** column	Automatically	Diaplays information about free space on the every available disk	Disk space in GB	-	Depends on free disk space
The **Transfer rate** group						
17	The **Computer** column	Automatically	Sets the list of computers wrom which video is transferred to the **Long-term archive**	Names of competers in the hardware tree	-	Depends on the number of **Computer** objects in the system and list of cameras selected for transferring archive
18	The **kBps** column	Type-in the value in the field	Sets the maximum bandwith of transmitting video from the computer to the **Long-term archive** via the LAN.	Kbytes/sec	100	Depends on the bandwidth of the local network and resources used by the computer. 0 – bandwidth is not limited
The Settings group						
19	The **Scaling** checkbox	Checkbox is set	Enables scaling of video archive for transmitting it to the **Long-term archive**	Boolean type	-	Yes – the scaling function is enabled. No – the scaling function is disabled.
	The **Scaling** dropdown list	Selected in the list	Sets the frame rate of video archive while scaling	Frame/sec	-	1, 2, 3, 4, 6, 8, 12, 25
20	The **Archiving period** dropdown list	Selected in the list	Set the timetable of copying video archive to the **Long-term archive**	Name of **Time zone** objects registered in the system Never Always	Never	Never – there is no copying of video archive to the **Long-term archive**. Always – there is copying of video archive to the **Long-term archive**. **Connection lost** – the video archive is copied to the Long-term archive from the external storage when the connection is restored. Time zone – copying of video archive to the Long-term archive is performed according to the time zone.
21	The **Failover service** check box	Set the checkbox	Enables cooperation of the Long-term archive with the Failover service (see also Configuring archive synchronization of main and backup Servers).	Boolean type	No	**Yes** – the *Long-term archive* module is in use for synchronization of archive of the main and backup Servers in the Failover mode. **No** – the *Long-term archive* module operates as usual.

The Settings panel of the Keyboard object

The **Keyboard** object is designed to register and configure a special keyboard used for on-line control of major functions of the Intellect™ digital distributed video surveillance system.

The settings panel of the **Keyboard** object is shown in figure.

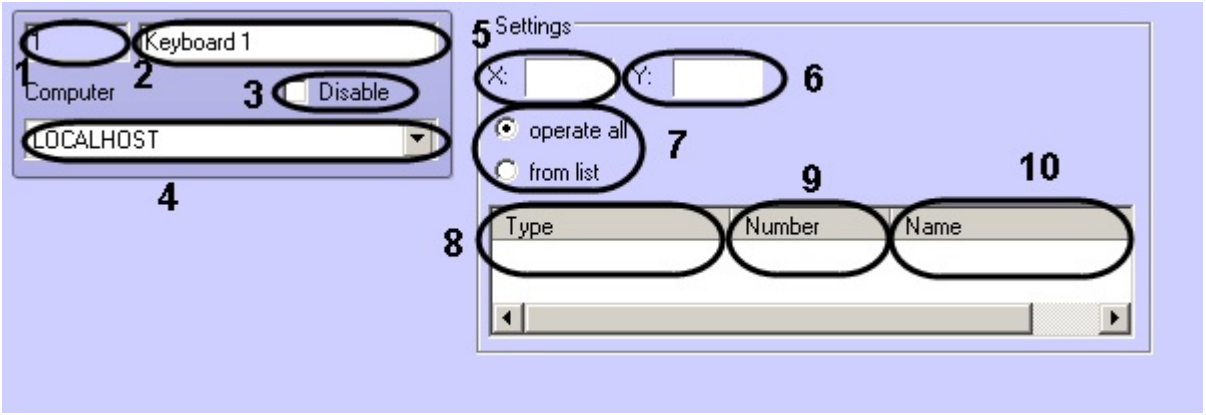

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Keyboard** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Keyboard** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Keyboard** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Keyboard** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Special keyboard	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Keyboard** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the **Keyboard** object is disabled and is not in use No – the **Keyboard** object is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Keyboard** object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
Settings Group						
5	X	Entering the value in the field.	Defines the coordinate on the X horizontal axis for the upper left corner of the object selection window, to which the given command refers.	% of the screen width.	Not defined	From 0 to 100.
6	Y	Entering the value in the field.	Defines the coordinate on the Y vertical axis for the upper left corner of the object selection window, to which the given command refers.	% of the screen height.	Not defined	From 0 to 100.

7	Control devices*	Set the selector in the required position	Defines the interface objects, which will be controlled with the special keyboard.	Types of controllable devices	Operate all	Operate all – the Operator may operate all interface objects according to the settings in the Special keyboard configuration. From list – the Operator may operate only those interface objects, which are defined in the list below.
8	Type	Is selected from the list	Defines the type of interface object, which may also be operated using the **Keyboard**.	Types of objects registered in the system.	Not defined	Depends on the number of interface objects created in the digital distributed video surveillance system.
9	Number	Is selected from the list	Defines the identification number of an interface object, which may also be operated using the **Keyboard**.	Sequence of numbers	Not defined	Depends on the number of created devices, selected in item 8 of the digital distributed video surveillance system.
10	Parameter	Automatically	Defines the device selected in item 9.	Name of the objects of the same type registered in the system	Not defined	Depends on the number of created devices, selected in item 8 of the digital distributed video surveillance system.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the System restart service object

The settings panel of the **System restart service** object is shown in figure.

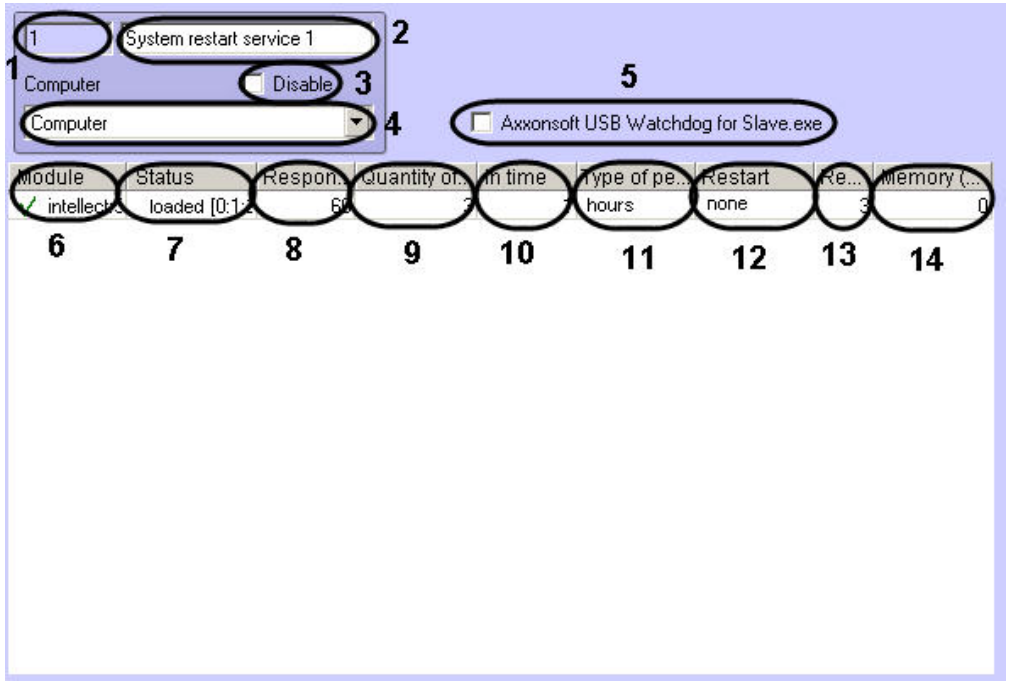

Table describes the parameters of the object settings **System restarting service**.

№	Name of parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Field **Identification number**	Automatically	Displays the object's identification number **System restart service** in the system	Sequence of numbers	-	From 1 and above. Depends on the number of objects **System restart service** in the system
2	Field **Name**	Enter the value in the field	Defines the name of the object **System restart service** in the system	Latin, Cyrillic and service characters	System restarting service	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive Number of symbols – from 1 to 60.
3	Checkbox **Disable**	Is identified by the check mark	Defines the condition (enabled or disabled) of the **System restart service** in the system	Boolean type	No	**Yes** – the **System restart service** is disabled and is not in use **No** – the **System restart service** is enabled and is in use.
4	Dropdown list **Computer**	Is selected from the list	Defines the parent **Computer** object in the system , to which the given object **System restart service** refers	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Name of the parent **Computer** object(object System restarting service must not be edited remotely)
5	Checkbox **AxxonSoft USB Watch Dog for Slave.exe**	Is identified by the check mark	Activates computer system of automatic restarting with the albescence of slave.exe. process's activity	Boolean type	No	**Yes** – system of automatic restarting is activated **No** – system of automatic restarting is deactivated
Control table of Intellect modules operation						
6	Column **Module**	Automatically	Displays the list of started modules at the computer	Name f started modules	-	Depends on the number of modules, registered in the system
7	Column **Status**	Automatically	Displays current state of modules	Name of current states and modules	-	**Loaded**–module operates **Unloaded** (red field) – on the expiry of waiting time interval module's response is abscent **Unloaded** – module is unloaded. ***Note**. In the square brackets the time of module working since the last restartin the HH:MM:SS format is displayed*

8	Column **Response time, sec**	Entering of text in the field	Set waiting time interval of module's response in seconds. With the absence of response on the expiry of set time interval the system may be restarted.	Nonnegative integers	60	From 0 and above
9	Column **Quantity of restarts**	Entering of text in the field	Set the maximal quantity of restarts for a period of time, specified in the column **In time** and **Period type**	Nonnegative integers	3	From 0 and above
10	Column **In time**	Entering of text in the field	Set period of time for which maximal quantity restarts of the system may be performed	Nonnegative integers	1	From 0 and above
11	Column **Period type**	Selection of value from the list		Unit s of time measurement	hours	**hours** –time period is measured in hours **days** – time period is measured in days
12	Column **Restart**	Selection of value from the list	Set the type of system's restarting	Name of possible types of restarts	Nothing	**Nothing** – restarting is not being performed **Module** – module's restarting is being performed **Core set** – restarting of the Intellect core set is being performed
13	Column **Remains of restarts**	Automatically	Displays remains or restarts for a time period, set in the columns **In time** and **Type of period**	Nonnegative integers	-	Depends on the maximal quantity of restarts and on the fact how many restarts have been performed for a current time period
14	**Memory (Mb)** colu mn	Setting the value in the field	Specifies the threshold of memory consumed by module. When this threshold exceeded the restart is required	Integer non-negative numbers	0	From 0 and above

The Settings panel of the Voice Notification Service object

The **Voice notification service** object is designed for the registration of the program module, which supports voice notification of the surveillance system operation, upon occurrence of certain events.

The settings panel of the **Voice notification service** object is shown in figure.

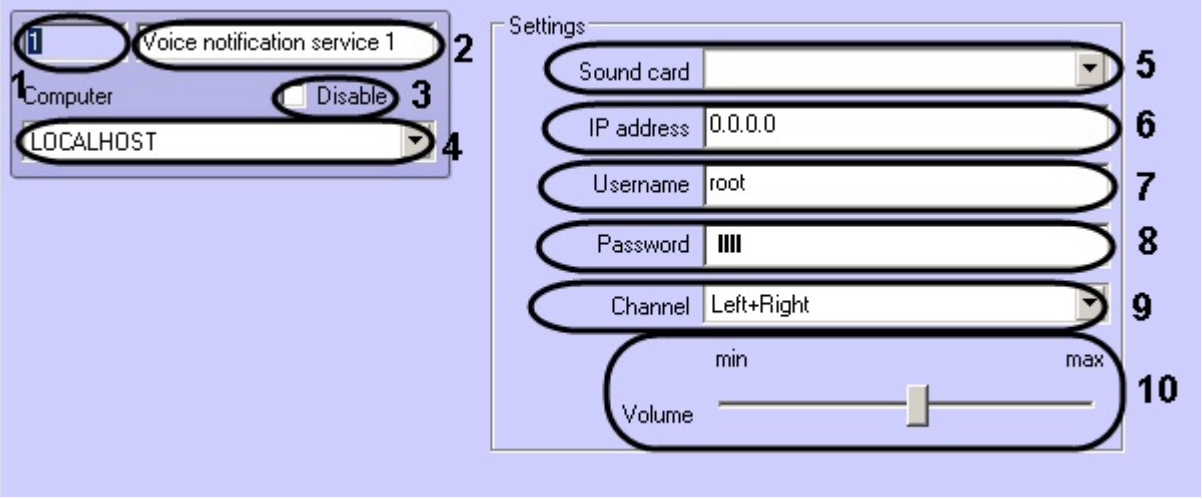

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Voice notification service** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Voice notification service** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Voice notification service** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name to the **Voice notification service** ob ject in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Voice notificati-on service	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Voice notification service** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Voice notification service** is disabled and is not in use **No** – the **Voice notification service** is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given Voice notification service object refers.	Name of the **Comput er** objects registered in the system	Name of the parent **Comp uter** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
Settings Group						
5	Audio card	Is selected from the list	Defines the device, which will receive an audio signal for voice notification.	Types of audio devices registered in the system.	Name of the audio card installed.	Name of the installed audio card – defines the audio card in the video server of Remote Administrator Workstation, which will process the audio signal of the voice notifications. **LinuxHub** – defines the LinuxHub type device, which will reproduce the audio signal of the voice notification. **Axis** – defines the Axis type device, which will reproduce the audio signal of the voice notification.
6	IP-address	Enter the value in the field	Defines the IP-address of LinuxHub and Axis devices. ***NOTE**. This field is active, if LinuxHub and Axis options are selected in the Audio card menu.*	Sequence of numbers	0.0.0.0	Sequence of symbols like: xxx.xxx.xxx.xxx From 0.0.0.0 to 255.255.255.255 depending on the local network settings.
7	User	Enter the value in the field	Defines the user name used for connection to LinuxHub and Axis devices. ***NOTE.** This field is active, if LinuxHub and Axis options are selected in the Audio card menu.*	Latin characters, digits and service characters.	root	A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 60.
8	Password	Enter the value in the field	Defines a password used for connection to LinuxHub and Axis devices. ***NOTE**. This field is active, if LinuxHub and Axis options are selected in the Audio card menu.*	Latin characters, digits and service characters.	root	A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 60.

9	Channel	Is selected from the list	Defines a channel in the audio card of the video server to reproduce the audio signal.	Name of the audio channel, where the sound is transmitted.	Left+Right	Left+Right – the audio notification signal is transmitted to both channels of the audio card. Left – the audio notification signal is transmitted to the left channel of the audio card. Right – the audio notification signal is transmitted to the right channel of the audio card.
10	Volume	The slide is placed in the required position.	Defines the volume of the audio signal, transmitted to the audio card. ***NOTE.*** *The option is active, if the Audio board option is selected in the audio card menu.*	Db	24 Db	Min - 0 Max - 45

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Voice Message Service object

The **Voice message service** is designed for registration of the program module, which supports transmission of voice messages through telephone lines. This service provides automatic redial of pre-defined telephone numbers and playback of audio files.

The settings panel of the **Voice message service** object is shown in figure.

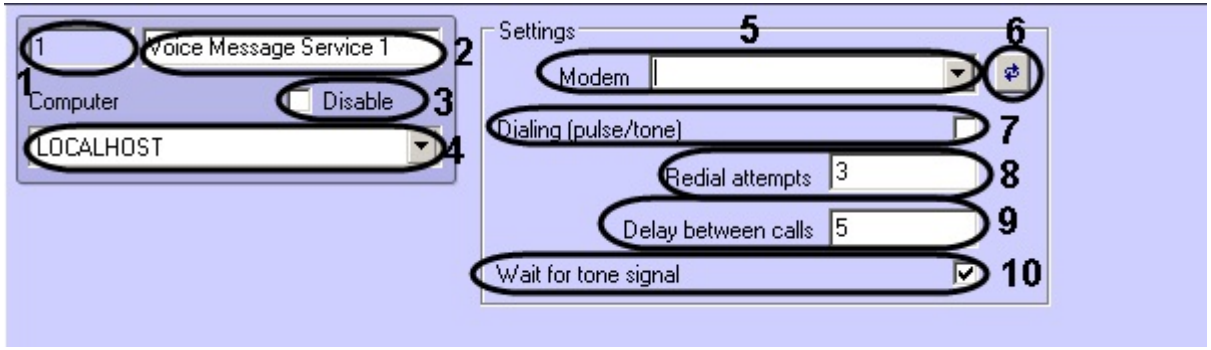

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Voice message service** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Voice message service** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Voice message service** obj ects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Displays the name of the **Voice message service** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Voice messages service	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.

3	Disable	Is identified by the check mark	Shows the status (enabled or disabled) of the Voice messages service object in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Voice message service** is disabled and is not in use **No** – the **Voice message service** is enabled and is in use.
4	Computer	Is selected from the list	Assigns the parent **Computer** object of the digital distributed system, to which the given **Voice message service** object refers.	Name of the **Computer** objects registered in the system.	Name of the parent **Computer** object	Depends on the number of **Computer** objects in the digital distributed video surveillance system
Settings Group						
5	Modem	Is selected from the list	Defines the voice modem for transmitting the voice messages.	Name of the voice modem registered by the Windows OS.	Not defined	Depends on the number of connected voice modems.
6	-	Press the button.	All connected modems are scanned to identify voice modems and to make up a list of modems.	-	-	-
7	Dial (pulse/tone)	Is identified by the check mark	Defines number dialling mode: pulse or tone.	Boolean type	Not available	**Yes** – tone dialling. **No** – pulse dialling.
8	Redial attempts	Enter the value in the field	Defines the maximum number of redial attempts to establish a connection.	Sequence of numbers	5	From 1 to 10. (recommended – from 1 to 5).
9	Delay between calls	Enter the value in the field	Defines a time period between redial attempts.	from	3	Recommended number from 30 to 120.
10	Wait for dial tone	Is identified by the check mark	Waits for a dial tone before redialling the number.	Boolean type	Yes	**Yes** - waiting for a dial tone before number redial is required. **No** - waiting for a dial tone before number redial is not required.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Voice message object

The **Voice message** object is designed to create a voice message transmitted to the telephone lines. The settings panel of the **Voice message** object is shown in figure.

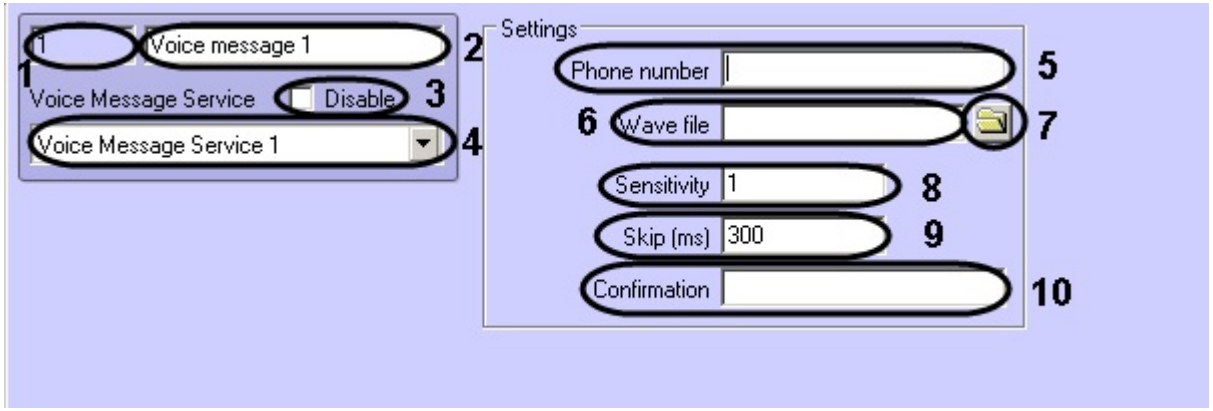

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Voice message** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Voice message** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Voice message** objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the field	Displays the name of the **Voice messages** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Voice message	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Shows the status (enabled or disabled) of the **Voice message** object in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Voice messages** object is disabled and is not in use. **No** – the **Voice message** object is enabled and is in use.
4	Voice messages service	Is selected from the list	Assigns the parent V**oice messages service** object of the digital distributed system, to which the given **Voice message** object refers.	Name of the **Voice messages service** objects registered in the system.	Name of the parent **Voice messages service** object.	Depends on the number of **Voice message service** objects in the digital distributed video surveillance system
Settings Group						
5	Phone number	Enter the value in the field	Defines the phone number of the voice message recipient.	Sequence of numbers	Not defined	A line, containing a sequence of digits. Depends on the voice modem in use.
6	Audio file	Enter the value in the field	Defines the route to the audio file, which will be played back, when the recipient picks up the phone.	Latin, Cyrillic and service characters.	Not defined	A line containing a sequence of symbols (letters, digits, service characters), not case-sensitive
7	Wave file	Press the button.	Defines the route to the audio file, which will be played back when the recipient picks up the phone, by selecting a file directly from the standard file select menu.	-	-	-

8	Sensitivity	Enter the value in the field	Defines the maximum noise level in the phone set, which prevents false identification of the noise as a reply of the voice message recipient.	Sequence of numbers	1	From 1 to 10.
9	Skip (ms)	Enter the value in the field	Defines a time period between redial attempts.	ms	300	More than 1
10	Confirmation	Enter the value in the field	Defines a digital code, which the recipient should enter to confirm voice message receipt.	Sequence of numbers	Not defined	A line, containing a sequence of digits. Number of symbols should be equal to 1.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Short Message Service object

The **Short message service** object is designed to register and configure the program module, which supports short message (SMS) transmission to a mobile phone via a cellular network.

The settings panel of the **Short message service** object is shown in figure.

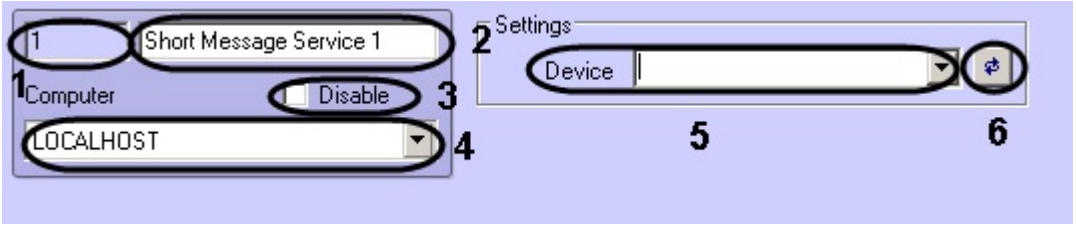

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Short message service** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Short message service** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Short message service** o bjects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Short message service** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Short message service	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Short message service** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Short message service** is disabled and is not in use **No** – the **Short message service** is enabled and is in use.

4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Short message service** object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
Settings Group						
5	Device	Is selected from the list	Defines the GSM device, which will be used to transmit SMS.	Names of the GSM devices registered in the Windows OS.	Not defined	Depends on the number of connected GSM devices.
6	Select device*	The button is pressed.	Scans connected devices to find GSM devices and includes them into the **Devices** list.	-	-	-

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Short Message object

The **Short message** object is designed to create short messages (SMS) for transmission to mobiles phones via a mobile network.

The settings panel of the **Short message** object is shown in figure.

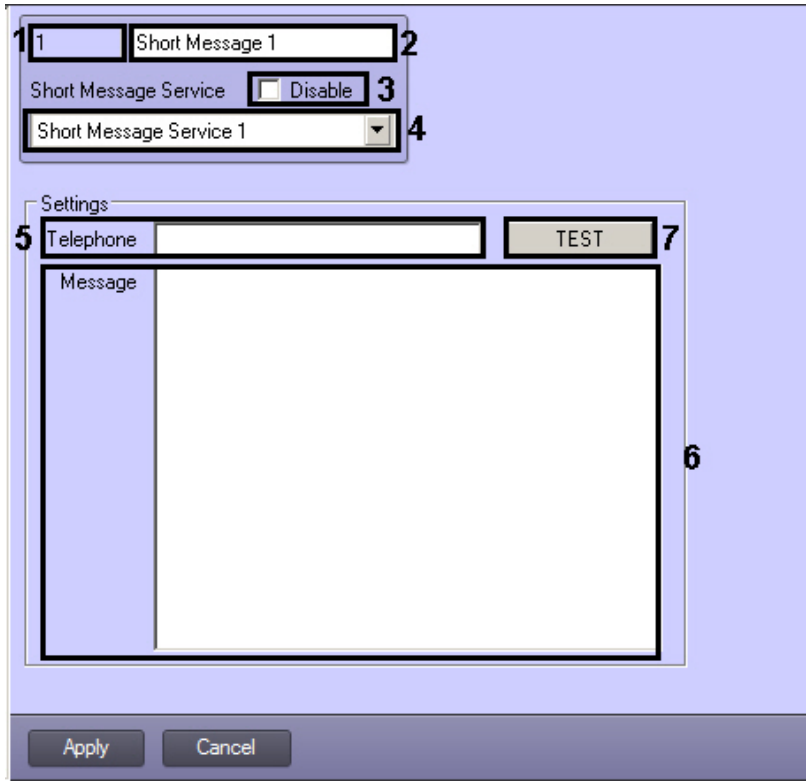

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Short message** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Short message** o bject in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of Short message objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the field	Defines the name of the **Short message** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Short message	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Short message** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Short message** object is disabled and is not in use **No** – the S**hort message** object is enabled and is in use.
4	Short message service	Is selected from the list	Defines the parent **Short message service** object of the digital distributed video surveillance system, to which the given **Short message** object refers.	Name of the **Short message service** objects registered in the system	Name of the parent **Short Message Service** object	Depends on the number of **Short message service** objects in the digital distributed video surveillance system
Settings Group						
5	Phone	Enter the value in the field	Defines a mobile phone number for receiving SMS.	Sequence of numbers	Not defined	Number according to the international dial plan: Example: +79061234567)
6	Message	Enter the value in the field	Defines SMS text, which will be transmitted over the mobile network.	Latin, Cyrillic and service characters	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 60.
7	TEST	Click the button	Forced sending of a short message to the specified number.	-	-	-

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Mail Message Service object

The **Mail message service** object is designed to register the program module, which supports mail message transmission to the e-mail boxes of the remote system users. The settings panel of the **Mail message service** object is shown in figure.

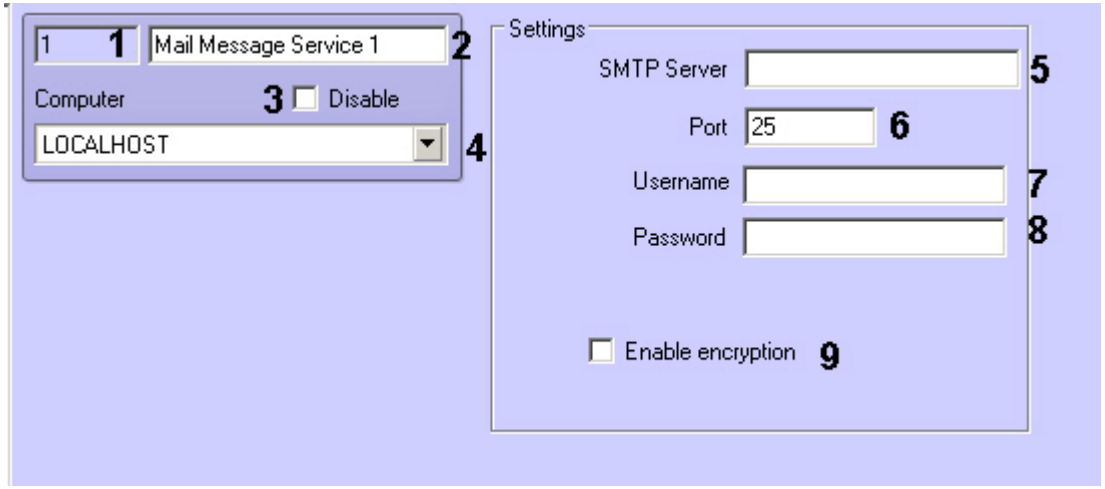

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Mail message service** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Mail message service** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Mail message service** obj ects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Mail message service** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Mail message service	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Mail message service** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not availab-le	**Yes** – the **Mail message service** is disabled and is not in use **No** – the **Mail message service** is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Mail message service** object refers.	Name of the **Compute r** objects registered in the system	Name of the parent **Compu ter** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
Settings Group						
5	SMTP server	Enter the value in the field.	Defines the SMTP server address, which will transmit SMS.	Latin, Cyrillic and service characters	Not defined	A line containing a sequence of symbols (letters, digits, service characters), not case-sensitive, number of symbols – from 1 to 60.
6	Port	Enter the value in the field	Defines the number of the SMTP server port, which will transmit SMS.	Sequence of numbers	25	To be defined by the system administrator.

7	User name	Enter the value in the field.	Defines the user name (login) for authorization on the SMTP-server. User name matches a unique mail box name in the mail server.	Latin, service characters and digits.	Not defined	A line containing a sequence of symbols (letters, digits, service characters), case-sensitive, number of symbols – from 1 to 60.
8	Password	Enter the value in the field.	Defines a password for authorization on the SMTP-server.	Latin, service characters and digits.	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), case-sensitive. Number of symbols – from 1 to 60.
9	Enable encryption	Set the checkbox	Enables TLS encryption	Boolean type	No	**Yes** – encryption enabled. **No** – encryption disabled.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Mail Message object

The **Mail message** object is designed to create mail messages (e-mail messages) for transmission to the mail boxes of the remote system users. The settings panel of the **Mail message** object is shown in figure.

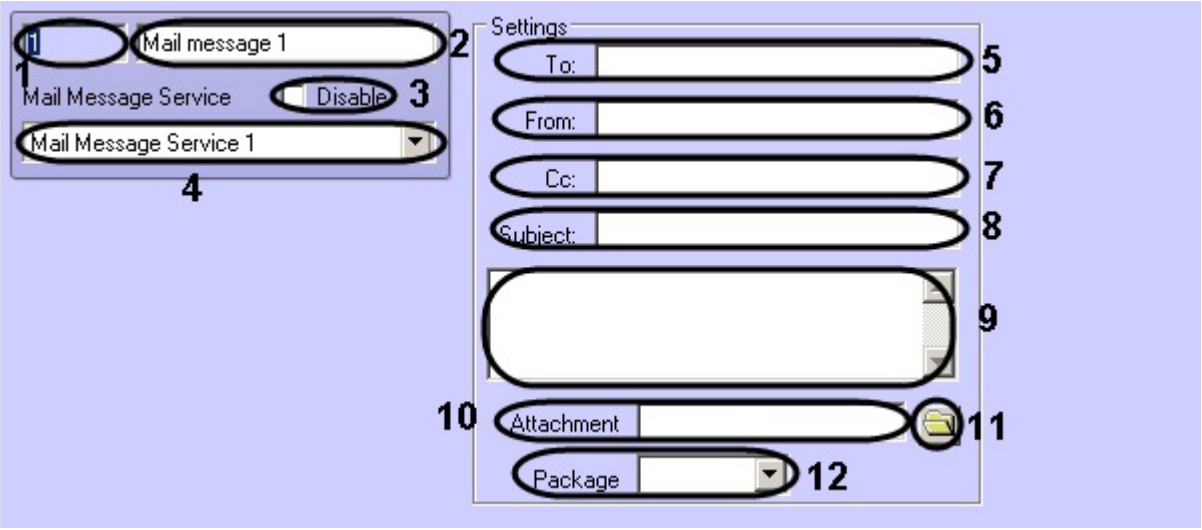

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Mail message** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Mail message** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Mail message** objects in the digital distributed video surveillance system.

2	Name*	Enter the value in the field	Defines the name of the **Mail message** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Mail messa-ge	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Mail message** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not availab-le	Yes – the Mail message object is disabled and is not in use No – the Mail message object is enabled and is in use.
4	Mail message service	Is selected from the list	Defines the parent **Mail message service** object, to which the given **Mail message** object refers.	Name of the **Mail message service** objects registered in the system	Name of the parent **Mail Message Service** object	Depends on the number of **Mail message service** o bjects in the digital distributed video surveillance system
Settings Group						
5	To	Enter the value in the field.	Defines the mail box address of the mail message recipient.	Latin and service characters	Not defined	A line containing a sequence of symbols (letters, digits, service characters), not case-sensitive, number of symbols – from 1 to 30.
6	From	Enter the value in the field.	Defines the mail box address of the mail message sender.	Latin and service characters	Not defined	A line containing a sequence of symbols (letters, digits, service characters), not case-sensitive, number of symbols – from 1 to 30.
7	CC	Enter the value in the field.	Defines the mail box address of the mail message copy recipient.	Latin and service characters	Not defined	A line containing a sequence of symbols (letters, digits, service characters), not case-sensitive, number of symbols – from 1 to 60. If a mail message needs to be copied to a few mail addresses, the said addresses should be entered separated with a comma.
8	Subject	Enter the value in the field	Defines the subject of the mail message	Latin, Cyrillic and service characters	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 60.
9	Text message*	Enter the value in the field	Defines the text contents of a mail message.	Latin, Cyrillic and service characters	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 250.
10	Attachment	Enter the value in the field	Defines a path to the file, which will be attached to the mail message.	Latin, Cyrillic and service characters	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 250.
11	Select file*	The button is pressed.	Defines a path to the file, which will be attached to the mail message, through selecting the file directly from the standard file select menu.	-	-	-
12	Package	Is selected from the list	Defines the compression format for archiving the file, which will be attached to the mail message.	Archiving type	Empty field	Empty field – the file attached to the mail message is transmitted without compression. GZIP – a file attached to the mail message will be compressed in the gzip archive before transmission.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Web-server object

The **Web-server** object is used for viewing the video surveillance information from an Internet browser and TCP/IP communication environment. The settings panel of the **Web-server** object is shown in figure.

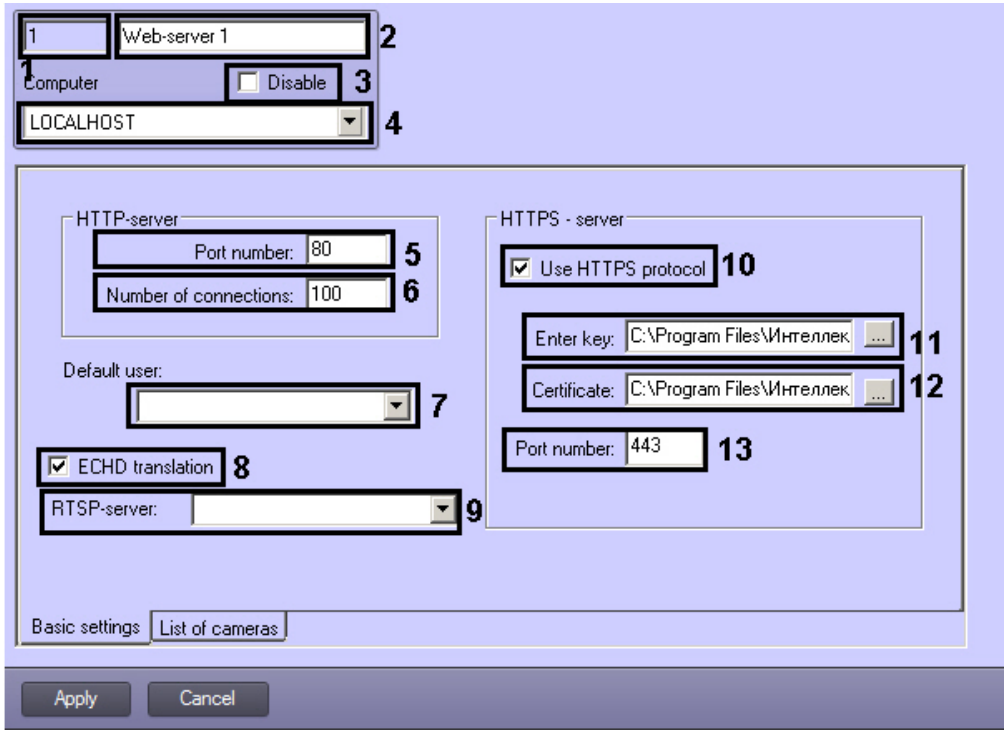

Basic settings tab

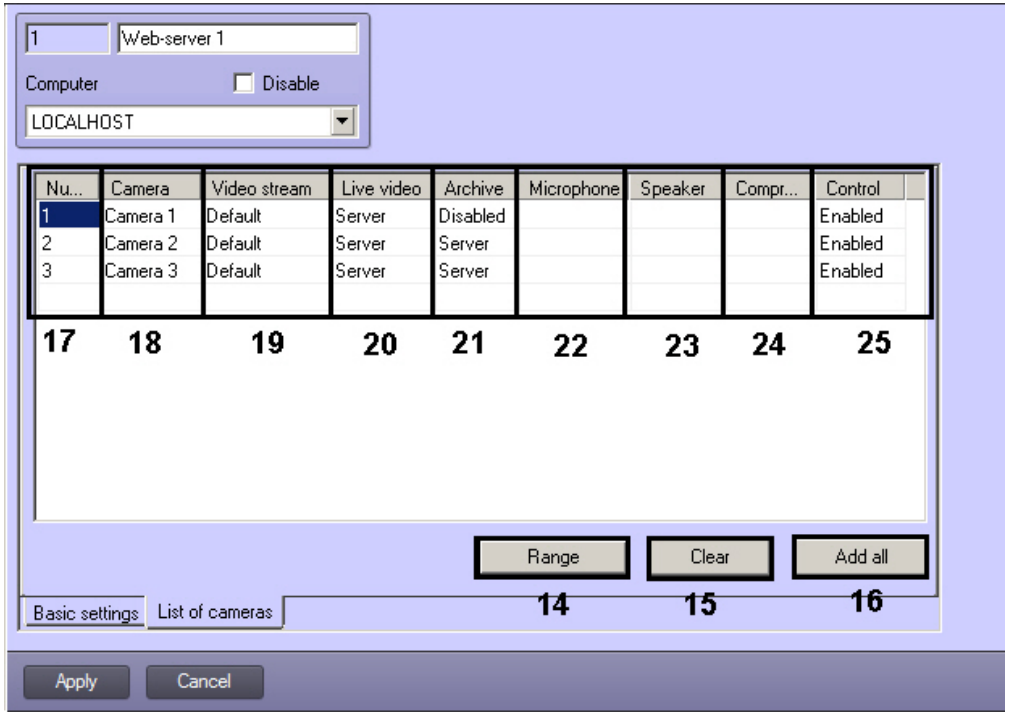

List of cameras tab

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Web-server** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Web-server** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of the **Web-server** objects in the digital distributed video surveillance system.
2	Name*	Type-in the value in the field	Sets the name of the **Web-server** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Web- server	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.

3	Disable	Checkbox	Sets the state of the **Web-server** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	No	Yes – the **Web-server** object is disabled and is not in use No – the **Web-server** object is enabled and is in use
4	Computer	Selected in the list	Sets the parent **Computer** object of the digital distributed video surveillance system, to which the given Web- server object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object	Depends on the number of the **Computer** objects in the digital distributed video surveillance system
The HTTP-server group						
5	Port's number	Type-in the value in the field	Sets the number of the port used by the HTTP server (for video surveillance with the Web-browser via the Internet).	Sequence of numbers	80	Any allowable port numbers which are not in use. The number of ports is defined by the system administrator.
6	Amount of connections	Type-in the value in the field	Sets the maximum allowable number of connections to the video server via the Web-server module. Each request to view the camera feed and each request to control all PTZ devices is considered as a user connection.	pcs	100	Any integer. In the case where 0 value is specified, video signals will not be displayed on the Web-server monitor.
Without a group						
7	Default user	Selected in the list	Sets the user with rights and authorities to conduct video surveillance from the Remote Workstation via the Web-server	The names of users registered in the system and added to the rights	Not set	Depends on the number of users registered in INTELLECT™
8	ECHD translation	Set the checkbox	Enables http requests used for integration with ECHD.	Boolean type	No	**Yes** – requests used for integration with ECHD are performed for the **Camera** objects under which the **ECHD channel** objects are created. **No** – requests used for integration with ECHD are not performed.
9	RTSP-server	Select value from the list	Sets rtsp server to process ECHD requests	Names of **rtsp Server** objects registered in the system	Not set	Depends on the number of **rtsp Server** objects in distributed digital surveillance system.
The **HTTPS server** group						
10	HTTPS protocol	Set checkbox	Enabling HTTPS protocol when transferring data via Web-server.	Boolean type	No	**Yes** – HTTPS protocol is in use. **No** – HTTPS protocol is not in use.
11	Key	Enter the value in the field	Key for data communication via HTTPS protocol.	Latin, Cyrillic letters and service characters	C:\Program Files (x86)\ Intellect\Modules\SSL\ssl_itv.key	Depends on the location of data encryption key when transferring data via HTTPS protocol.
12	Certificate	Enter the value in the field	Certificate for data communication via HTTPS protocol.	Latin, Cyrillic letters and service characters	C:\Program Files (x86)\Intellect\Modules\SSL\ssl_itv.cert	Depends on the location of certificate file when transferring data via HTTPS protocol.

13	Port number	Enter the value in the field	Sets the number of the port used for HTTPS server (used for video surveillance in the web browser and in the Internet).	Natural number series	443	Any allowable port numbers that are not in use. The number of ports is specified by the system administrator.
The **List of cameras** tab						
14	Range	Click the button	The box for adding cameras as a group is opened.	-	-	-
16	Clear	Click the button	The list of added cameras is cleared.	-	-	-
15	Add all	Click the button	All **Camera** objects created in the system are added to the list.	-	-	-
17	Number	Selected in the list	Sets the number of the camera video from which is transmitted to the remote workstation using the Web-server module.	IDs of the **Camera** objects registered in the system	Not specified	Depends on the number of cameras in the distributed video surveillance system.
18	Camera	Selected in the list	Sets the name of the video camera video from which is transmitted to the Remote Workstation via the Web-server module.	Names of the **Camera** objects registered in the system	Not set	Depends on the number of video surveillance cameras in the digital distributed video surveillance system
19	Video stream	Selected in the list	Sets the number of the video stream used for displaying in the Web-server interface	Numbers of video streams enabled on the camera and the By default value	By default	Depends on the number of enabled streams on the camera.
20	Live video	Selected in the list	Sets the source of live video to be displayed in the Web-server interface	Available means to get live video	Server	Server – live video is received from the Server to which the camera is connected. Videogate – live video is received from the Videogate. If a camera is not configured to transmit video through the Videogate, then this item is unavailable in the list.
21	Archive	Selected in the list	Sets the source of archive footage to be displayed in the Web-server interface	Available means to get archive video	Server	Server – archive footage is received from the Server to which the camera is connected. Videogate – archive footage is received from the Videogate. If a camera is not configured to transmit footage through the Videogate, then this item is unavailable in the list. Backup archive – archive footage is received from the Backup archive
22	Microphone	Select from a list	Specifies the name of microphone associated with the camera from which the sound will be passed through the Web-server	Names of registered **Microphone** objects in the system	Not specified	Depends on the number of microphones in the video surveillance system

23	Speaker	Select from a list	Specifies the name of speaker associated with the camera which will be in use to playback sound received from the client	Names of registered **Speaker** objects in the system	Not specified	Depends on the number of speakers in the video surveillance system
24	Compressionn	Selected in the list	Sets the compression ratio for video transmitted to Remote Workstations via the Web-server module. The higher the compression ratio the worse the video signal is.	Reference compression ratios	Not specified	Not specified, 1 – 5. Value "1" corresponds to minimum compression ratio, "5" – to maximum. If the compression ratio is not specified, video signal is transmitted with the same compression ratio as set for recording and transmitting video
25	Control	Selected in the list	Sets the camera control (arm/disarm, PTZ, recording to the archive) in accordance with user rights.	Boolean type	Enabled	Enabled – camera control in accordance with user rights is enabled. Disabled – camera control is disabled regardless of the user rights.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the rtsp Server object

The settings panel of the **rtsp Server** object is shown in figure.

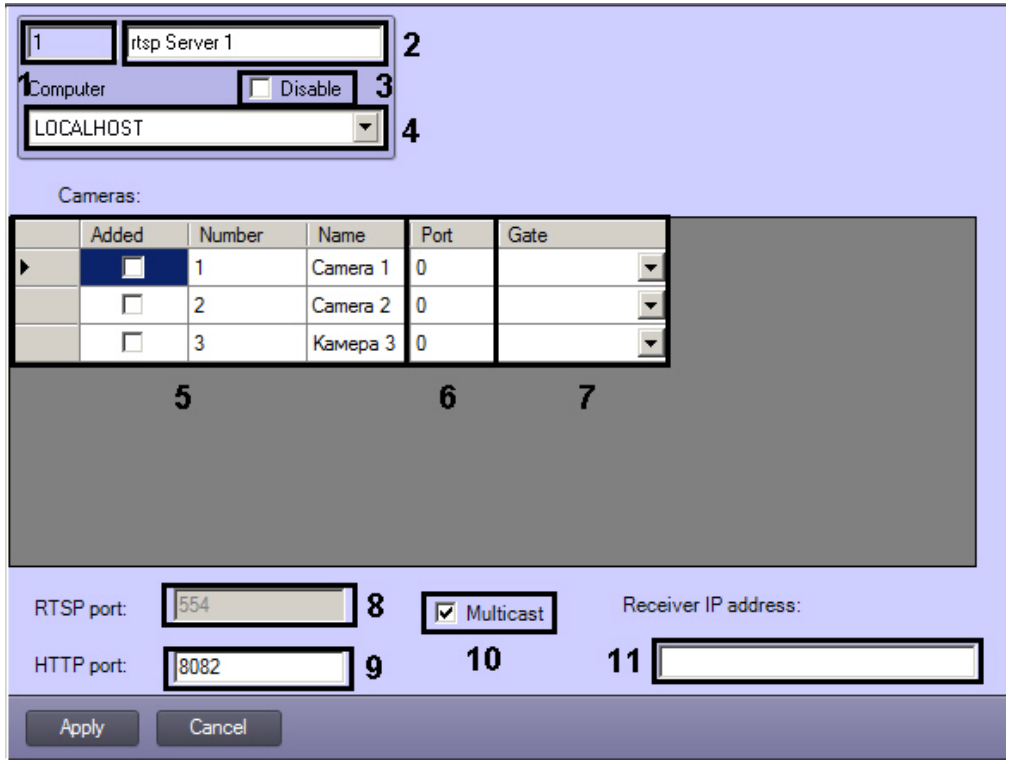

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **rtsp Server** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	ID*	Automatically	Displays the ID of the **rtsp Server** object in the video surveillance system	Sequence of numbers	-	Depends on the number of the **rtsp Server** objects in the video surveillance system
2	Name*	Type-in the value in the field	Sets the name of the **rtsp Server** object in the video surveillance system	Latin, Cyrillic and service characters	rtsp Server	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Checkbox	Sets the state (enabled or disabled) of the **rtsp Server** object in the video surveillance system	Boolean type	No	**Yes** – the **rtsp Server** object is disabled and is not in use. **No** - the **rtsp Server** object is enabled and is in use.
4	Computer	Selected in the list	Sets the parent **Computer** object to which the **rtsp Server** object relates	Names of the **Computer** objects registered in the system	Name of the parent **Computer** object	Depends on the number of Servers in the video surveillance system with distributed architecture

5	Cameras	Checkbox	Specifies cameras video from which is to be transmitted to remote workstations	Boolean type	No	**Yes** – video stream can be viewed at remote workstation. **No** – video stream cannot be viewed at remote workstation
6	Port	Type-in the value in the field	Sets a port via which a video signal from the camera is transmitted. *Note. This column is available only if is the **Multicast** check box is set checked (10).*	Sequence of numbers	-	Any numbers of ports that are not in use. The number of ports is specified by the system administrator.
7	Gate	Select the value in the list	Specifies the **Video gate** through which video is received from the camera	The names of the **Video gate** objects registered in the system	-	Depends on the number of the **Video gate** objects registered in the system
8	RTSP port	Type-in the value in the field	Sets the port via which video is transmitted	Sequence of numbers	554	Any numbers of ports that are not in use. The number of ports is specified by the system administrator.
9	HTTP port	Type-in the value in the field	Sets the port which is to be in use for transmitting video via http-protocol	Sequence of numbers	8081	Any numbers of ports that are not in use. The number of ports is specified by the system administrator.
10	Multicast	Checkbox	Enables video transmission via different RTSP ports. The **Multicast** mode allows reducing Server load due to transmitted data reduction.	Boolean type	No	**Yes** – video is transmitted via several RTSP ports. **No** – video is transmitted via one RTSP port.
11	Receiver IP address	Type-in the value in the field	Set the address from which the broadcast in **Multicast** mode will be performed	IP address	224.0.1.150	From 224.0.0.0 to 239.255.255.255

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Operator query panel object

The **Operator query panel** object is the interface frame used to perform user specified functions with a user's set of elements. The elements are configured by the *Intellect* administrator in the *ArpEdit* utility (see the User's Manual for ArpEdit). The settings panel of the **Operator query panel** object is shown in figure.

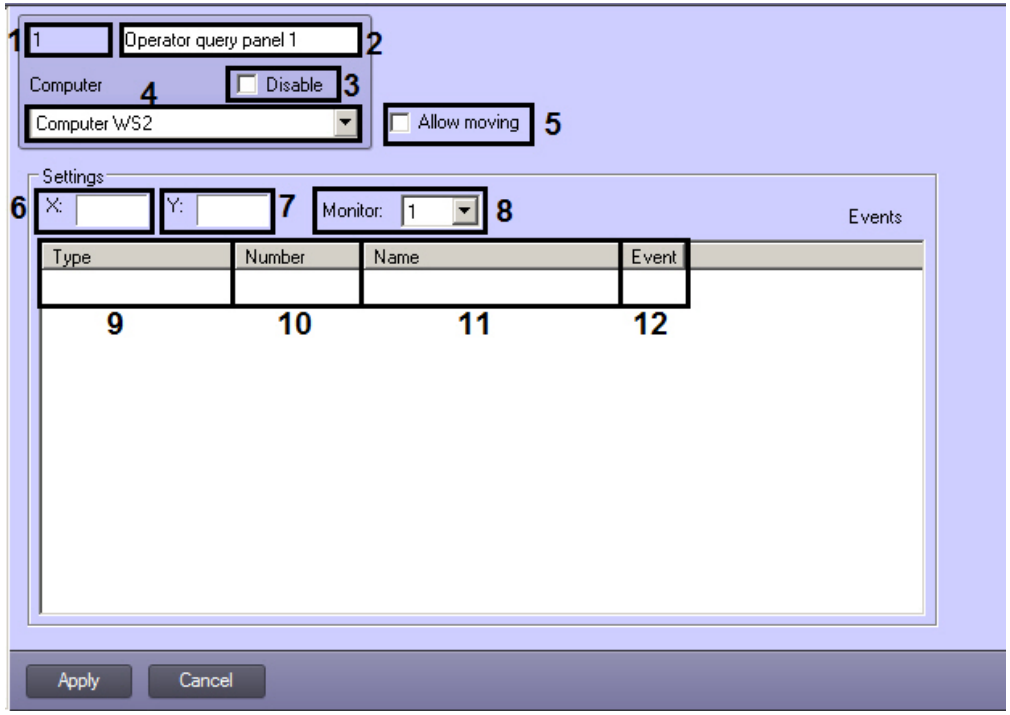

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Operator query panel** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identifier*	Enter the value in the field	File name designed for certain PTZ unit control. The filename is usually the same as the name of the PTZ unit.	Latin, Cyrillic and service characters	-	A line containing a sequence of symbols (Latin and service characters, digits), not case-sensitive Number of symbols – from 1 to 16.
2	Name*	Enter the value in the field	Defines the name of the **Operator query panel** object in the digital distributed video surveillance system. To ensure user friendliness, the object name is usually given the same name as the name of the PTZ unit.	Latin, Cyrillic and service characters	Operator query panel	A line containing a sequence of symbols (Latin and service characters apart from > and < symbols, digits), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the status of the **Operator query panel** object (enabled or disabled).	Boolean type	Not available	**Yes** – the **Operator query panel** object is disabled and is not in use. **No** – the **Operator query panel** object is enabled and is in use.

4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Operator query panel** object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
5	Allow moving	Is identified by the check mark.	Allows moving the **Operator query panel** over the screen using the mouse.	Boolean type	Not available	**Yes** – movement is allowed. **No** – movement is prohibited.
Settings Group						
6	X	Enter the value in the field.	Defines the coordinate in the X horizontal axis for the upper left corner of the **Operator query panel** on the screen.	% of the screen width.	Not defined	From 0 to M*100, where M is the number of surveillance monitors installed.
7	Y	Enter the value in the field.	Defines the coordinate in the Y vertical axis for the upper left corner of the **Operator query panel** on the screen.	% of the screen height.	Not defined	From 0 to M*100, where M is the number of surveillance monitors installed.
8	Monitor	Is selected from the list	Sets the computer monitor number, the to which coordinates are assigned	Sequence of numbers	1	1 to 16
9	Type	Is selected from the list	Defines the object type for displaying the **Operator query panel**.	Types of the objects registered in the system	Not defined	Depends on the number of types of objects created in the digital distributed video surveillance system.
10	Number	Is selected from the list	Defines the number of the object for displaying the **Operator query panel**.	Sequence of numbers	Not defined	Depends on the number of objects created in the digital distributed video surveillance system.
11	Name	Automatically	Defines the name of the object for displaying the **Operator query panel**.	Names of the objects of the selected type registered in the system	Not defined	Depends on the number of objects types created in the digital distributed video surveillance system.
12	Event	Is selected from the list	Defines the event, after which the **Operator query panel** is displayed	Types of events for the given types of devices.	Empty	Empty – the **Operator query panel** is not displayed. List of available events depends on the selected object.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Alarm Message Window object

The **Alarm Message Window** object is designed to display an interface box showing the alarm event, which is initiated by the Intellect digital video surveillance system.

The settings panel of the **Alarm Message Window** object is shown in figure.

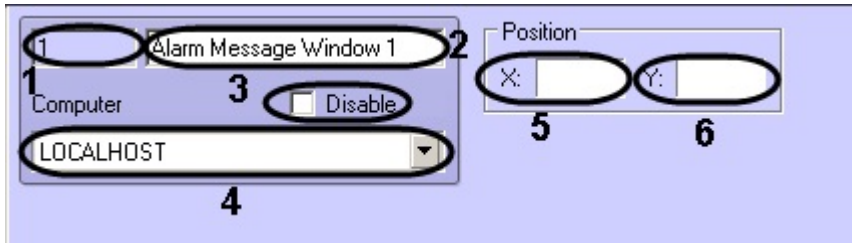

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Alarm Message Window** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Alarm Message Window** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Alarm Message Window** objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the field	Defines the name of the **Alarm Message Window** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Alarm notification window	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Alarm Message Window** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not availab-le	**Yes** – the **Alarm Message Window** object is disabled and is not in use. **No** – the **Alarm Message Window** object is enabled and is in use.
4	Computer	Is selected from the list	Defines the parent **Computer** object of the digital distributed video surveillance system, to which the given **Alarm Message Window** object refers.	Name of the **Compute r** objects registered in the system	Name of the parent **Compu ter** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
5	X	Enter the value in the field.	Defines the coordinate in the X horizontal axis for the upper left corner of the **Alarm Message Window** on the screen.	% of the screen width.	Not defined	From 0 to M*100, where M is the number of surveillance monitors installed.
6	Y	Enter the value in the field.	Defines the coordinate in the Y vertical axis for the upper left corner of the **Alarm Message Window** on the screen.	% of the screen height.	Not defined	From 0 to M*100, where M is the number of surveillance monitors installed.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Videogate object

The settings panel of the **Videogate** object is shown in figure.

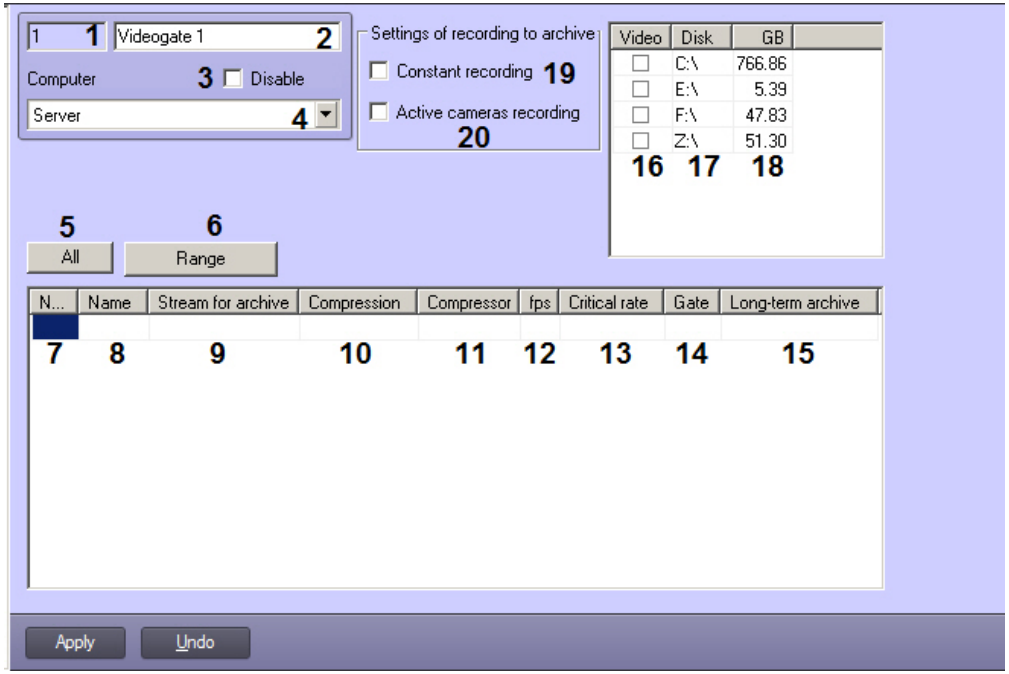

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Videogate** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Videogate** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of **Videogate** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Defines the name of the **Videogate** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Archiver.	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Videogate** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Videogate** is disabled and is not in use **No** – the **Videogate** is enabled and is in use.

4	Computer	Is selected from the list	Defines the parent **Computer** object for the given **Videogate** object	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of **Computer** objects in the digital distributed video surveillance system
5	All	The button is pressed.	Selection of all video cameras registered in the system for transmitting video signals through the video gate	-	-	-
6	Range	The button is pressed.	Access to the complex selection of video cameras for transmitting video signals through the video gate	-	-	-
7	Number	Is selected from the list	Defines the number of the camera for transmitting video signals through the video gate	Sequence of numbers	-	Depends on the number of surveillance cameras in the digital distributed video surveillance system
8	Name	Is selected from the list	Sets the name of the video surveillance camera for transmitting video signals through the video gate	Name of the **Camera** objects registered in the system	-	Depends on the number of surveillance cameras in the digital distributed video surveillance system
9	Stream for archive	Is selected from the list	Set the video stream for record of the archive of the Videogate module	Names of streams transmitted by Server	-	Depends on the number of video streams enabled on Server
10	Compression	Is selected from the list	Sets the level of video signal compression for transmitting video signals through the video gate. With the given value there is additional consumption of Server's resources.	Sequence of numbers	-	In order of rising compression level 0,1,2,3,4,5 (0 – without compression, 5 – maximum compression).
11	Compressor	Select value from the list	Specifies the procedure of video stream compression which is in use for video signal recompression when transmitting video signals through the video gate. The value is to be selected in the **Compression** list if the compressor is specified.	List of available procedures	-	MJPEG, Motion Wavelet 3.5, Motion Wavelet 7.1. If the compression level is specified but **Compressor** is not selected, the MotionWavelet compressor is in use.
12	fps	Enter the value in the field	Sets the video signal rate for transmitting video signals through the video gate.	Sequence of numbers	-	Not more than digitizing of video signal by video capture card. Not less than 0.01.
13	Critical rate	Enter the value in the field	Set the minimum permissible rate of the video signal, when received by the Videogate to control the transmission of video signal through the local net	Sequence of numbers	-	Not more than the frame rate of the video signal, that is transmitted to the Videogate
14	Gate	Is selected from the list	Set the **Videogate** object from which video signal from the selected camera has to be transmitted to the given Videogate ***Important!*** *The selected **Videogate** object must differ from the configured one, otherwise there will be no video transmission via the Videogate.*	Name of the **Videogate** objects registered in the system	Not defined	Depends on the number of **Videogate** objects, registered in the digital distributed video surveillance system
15	Backup archive	Is selected from the list	Set the object **Backup archive**, from which video signal from the selected camera has to be transmitted to the given **Videogate**	Name of the **Backup archive** objects registered in the system.	Not defined	Depends on the number of **Backup archive** objects registered in the digital distributed video surveillance system.

16	Video	Is identified by the check mark	Set the didsk for storing the archive of video signals, going through ther **Videogate**.	Boolean type	-	Yes – the disk is used for storing the **Videogate** module. No – the disk is not used for storing the **Video gate** module
17	Disk	Automatically	Displays the names of local (net, USB) disks, accessible for storing archive of **Videogate** module.	Names of available disks(Latin characters)	List of available hard disks	Depends on the total number (both local and network) of accessible disks.
18	GB	Automatically	Contains information about free space on every available disk	Disk space in GB	-	Depends on the free disk space
19	Constant recording	Setting the checkbox	Enables permanent recording on all video cameras added to the Videogate	Boolean	No	**Yes** – permanent recording is enabled on all video cameras added to the Videogate. **No** – Videogate module archive is recorded only on cameras that are configured for archive recording on Server.
20	Active cameras recording	Setting the checkbox	Enables recording only on cameras requested (displayed) on clients	Boolean	No	**Yes** – Videogate module archive is recorded only on cameras requested (displayed) on clients. **No** – Videogate module archive is recorded on cameras that are configured for archive recording on Server.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Event Counter object

The **Event counter** object is designed to register and count events of a certain type, occurring at the pre-defined objects and registered by the INTELLECT™ system.

The settings panel for the **Event counter** object is shown in figure.

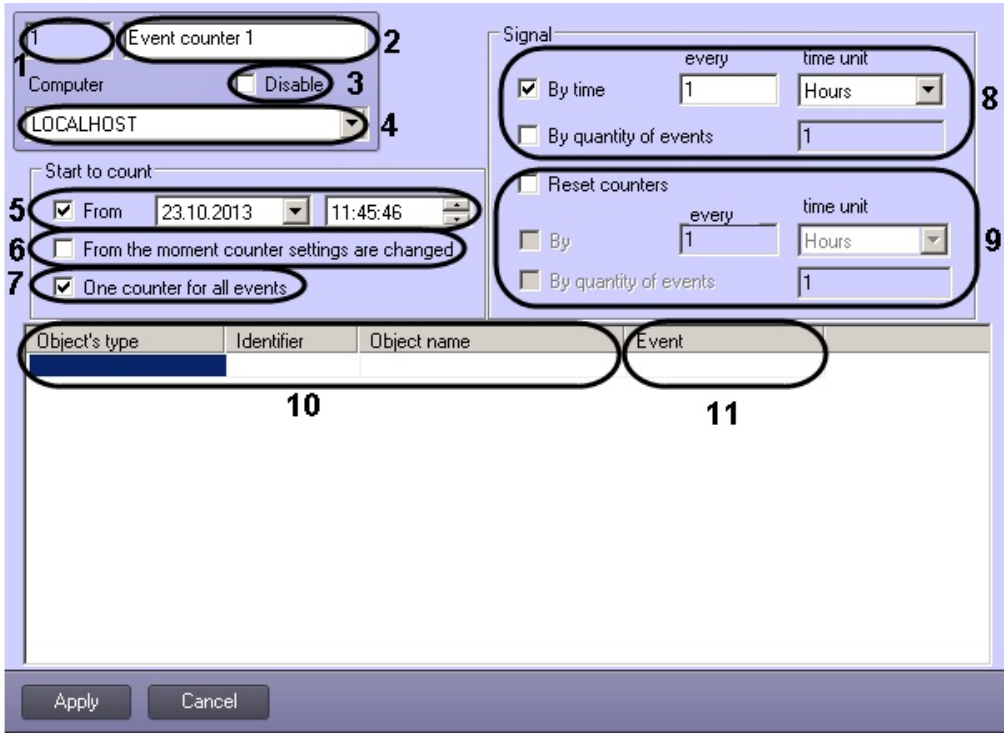

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Event counter** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Event counter** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of the **Event counter** objects in the digital distributed video surveillance system.
2	Name*	Specify the value in the field	Sets the name of the **Event counter** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Event counter	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Set the checkbox	Sets the state of the **Event counter** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	No	**Yes** – the **Event counter** object is disabled. **No** – the **Event counter** object is enabled.

4	Computer	Select in the list	Sets the parent **Computer** object of the digital distributed video surveillance system, to which the given **Event counter** object refers.	Name of the **Computer** objects registered in the system	Name of the parent **Computer** object.	Depends on the number of the **Computer** objects in the digital distributed video surveillance system
			The Start to count group			
5	From the date of (activation)	Set the checkbox	Allows setting the start to count date and time manually.	Boolean type	Yes	**Yes** – the **Start to count** date and time are set manually. **No** – The **Start to count** date and time are set at the date and time, when the **Event counter** object was last modified.
	From the date of (date)	Specify the value in the field or select it in the dropdown list.	Sets the **Start to count** date.	DATE:MONTH:YEAR	Current system date	09.1752 – 12.9999
	From the date of (time)	Specify the value in the field	Sets the **Start to count** time.	HOURS:MINUTES:SECONDS	Current system time	00:00:0 - 23:59:59
6	From the moment of counters settings changing	Set the checkbox	Sets the **Start to count** date and time at the date and time, when the **Event counter** object was last modified.	Boolean type	No	**Yes** – the **Start to count** date and time are set at the date and time, when the **Event counter** object was last modified. **No** – the **Start to count** date and time are set manually.
7	One counter for all events	Set the checkbox	Sets the counter for all events referred to the **Objects and events** group of the given **Event counter** object.	Boolean type	Yes	Yes – Only one counter will be used for counting all events specified in the **Objects** group. No – the events are counted by different counters (each event is counted by an individual counter).
			The Counter notification group			
8	On time (activation)	Set the checkbox	Enables a regular notification in preset periods of time.	Boolean type	Yes	**Yes** – on time notification is enabled. **No** – on time notification is disabled (notification by quantity of events is enabled).
	On time (every)	Specify the value in the field	Sets a notification period as a time period. Notification is performed irrespective of on time at 00 minutes 00 seconds of every hour (or at 00 hours 00 minutes 00 seconds of every day – depending on the time unit settings)	Sequence of numbers	0	0 - 2147483648
	On time (time unit)	Select the value in the list	Sets a time unit for the given notification.	Line	Hours	Hours Days

	By quantity of events (activation)	Set the checkbox	Enables a regular notification about events starting from the preset one.	Boolean type	No	**Yes** – notification by quantity of events is enabled. **No** – notification by quantity of events is disabled (on time notification is enabled).
	By quantity of events (quantity of events)	Specify the value in the field	Sets a number of event starting from which the notification will be performed. Example: if the parameter has 5 value, then notification will be performed by every event starting from 5 (5,6,7,8, etc.)	Sequence of numbers	0	0 - 2147483648
			The Reset counters group			
9	On time (activation)	Set the checkbox	Enables a cyclic counter reset in a preset time period.	Boolean type	Yes	**Yes** – a cyclic reset in a preset time period is enabled. **No** – a cyclic reset in a preset time period is disabled (By quantity of events (cyclic reset by quantity of events is enabled).
	On time (every)	Specify the value in the field	Sets a reset period as a time period. Reset is performed irrespective of on time at 00 minutes 00 seconds of every hour (or at 00 hours 00 minutes 00 seconds of every day – depending on the time unit settings).	Sequence of numbers	0	0 - 2147483648
	On time (time unit)	Select in the list	Sets a time unit for the given reset.	Line	Hours	Hours Days
	By quantity of events (activation)	Set the checkbox	Enables a counter reset performed upon occurrence of a preset number of events.	Boolean type	No	**Yes** – a cyclic reset upon occurrence of a preset number of events is enabled. **No** – a cyclic reset upon occurrence of a preset number of events is disabled (a cyclic reset on time is enabled).
	By quantity of events (quantity of events)	Specify the value in the field	Sets a reset period for counters as a number of events.	Sequence of numbers	0	0 - 2147483648
			The Objects and events group			
10	Object type	Select in the list	Sets the type of object for which the events are to be counted.	Types of objects registered in the system.	Not set	Depends on the number of object types registered in the digital distributed video surveillance system.
	Identifier	Select in the list	Sets the identification number of an object of the preset type for which the events are to be counted.	Sequence of numbers	Not set	Depends on the number of objects of the given type in the digital distributed video surveillance system.

	Object's name	Automatically	Displays the identification number of the selected object.	Latin, Cyrillic and service characters	Not set	Object name aith the preset identifier.
11	Event	Select in the list	Sets an event that is to be counted.	Latin, Cyrillic and service characters	Not set	Depends on the number of types of objects registered in the digital distributed video surveillance system.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Data replication service object

The **Data replication service** object is for archive replication from unconnected servers.

The settings panel of the **Data replication service** object is shown in figure.

Description of setting parameters relevant to element on the settings panel of the **Data replication service** object is given in table.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default v alue	Value range
1	Replicator's status	Select in the list	Specifies status of Server – whether it is a data source or a target	Names of present replication roles	Export	**Export** – Server is the source **Target** – Server is the target
2	Target disk	Select in the list	Specifies removable storage used for data transmission	Letter of drive connected to the Server	-	Depends on the number of drives connected to the Server

The Settings panel of the Failover object

The **Failover service** object is used to ensure operation of distributed system in the failover mode.

The settings panel of the **Failover service** object is shown in figure.

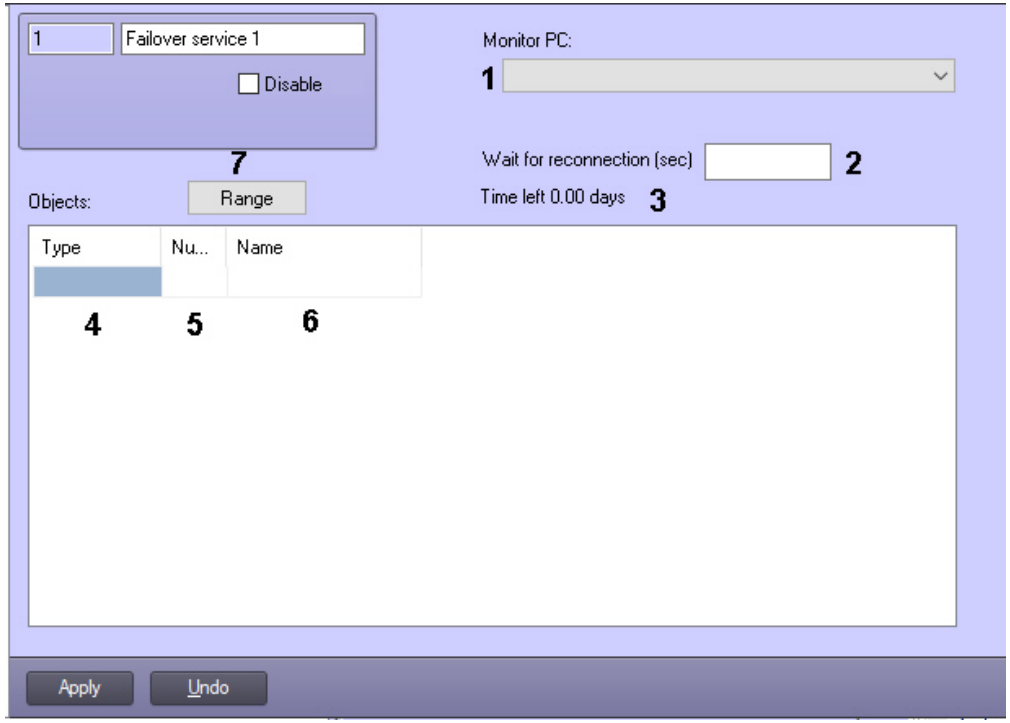

Description of setting parameters relevant to elements on the settings panel of the **Failover service** object is given in table.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	Monitor PC	Select in the list	Sets the name of the Server the state of which is to be under control	Names of the **Computer** objects registered in the system	-	Depends on the number of the **Computer** o bjects registered in the system
2	Expect reconnection (sec)	Type-in the value in the field	Sets the time period (in seconds) at the end of which configuration will be transferred to backup Server	Sequence of numbers	-	From 0 to 65535
3	Time left __ days	Automatically	Shows the period of time (in days) remaining for restoring the configuration from backup Server and restoring the license	Days	0.00	From 0.00 to 60.00
4	Type	Select in the list	Sets the object type in Server configuration that is to be transferred to backup Server in case of connection failure	Types of objects registered on the base of the main Server	-	Depends on the configuration created on the base of the main Server
5	Number	Select in the list	Sets the ID of object of selected type that is to be transferred to backup Server in case of connection failure	ID of objects of selected type that are in Server configuration	-	Depends on the number of objects of selected type in the configuration of main Server
6	Name	Automatically	Sets the object name that is to be transferred to backup Server in case of connection failure	Names of objects of selected type that are in Server configuration	-	Depends on the configuration created on the base of the main Server

7	Range	Click the button	Opens the dialog box for integrated selection of tracking objects	-	-	-

The Settings panel of the Backup audio archive object

The settings panel of the **Backup audio archive** object is shown in figure.

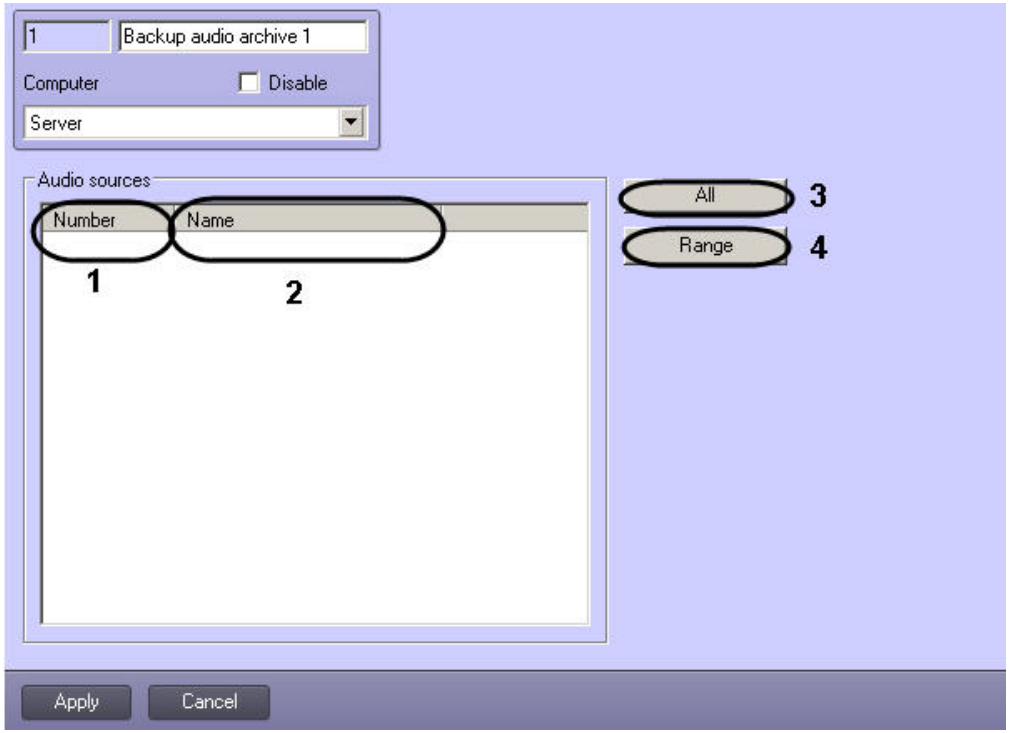

Table describes the parameters of the settings corresponding to the elements of the settings panel of the **Backup audio archive** object.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	**Number** drop-down list	Select the value from the list	Sets the ID number of **Microphone** object to copy video archive from	Non-negative integer	-	Depends on the number of **Microphone** objects in the system.
2	**Name** drop-down list	Select the value from the list	Sets the name of the **Microphone** to copy video archive from	Names of the **Microphone** objects registered in the system	-	Depends on the number of **Microphone** objects in the system.
3	**All** button	Click the button	Adds all **Microphone** objects created in the system to the list	-	-	-
4	**Range** button	Click the button	Opens the window for complex adding microphones to the list of **Backup audio archive**	-	-	-

The Settings panel of the Web Server 2.0 object

The appearance of the configuration panel of the **Web Server 2.0** system object is shown in the figure.

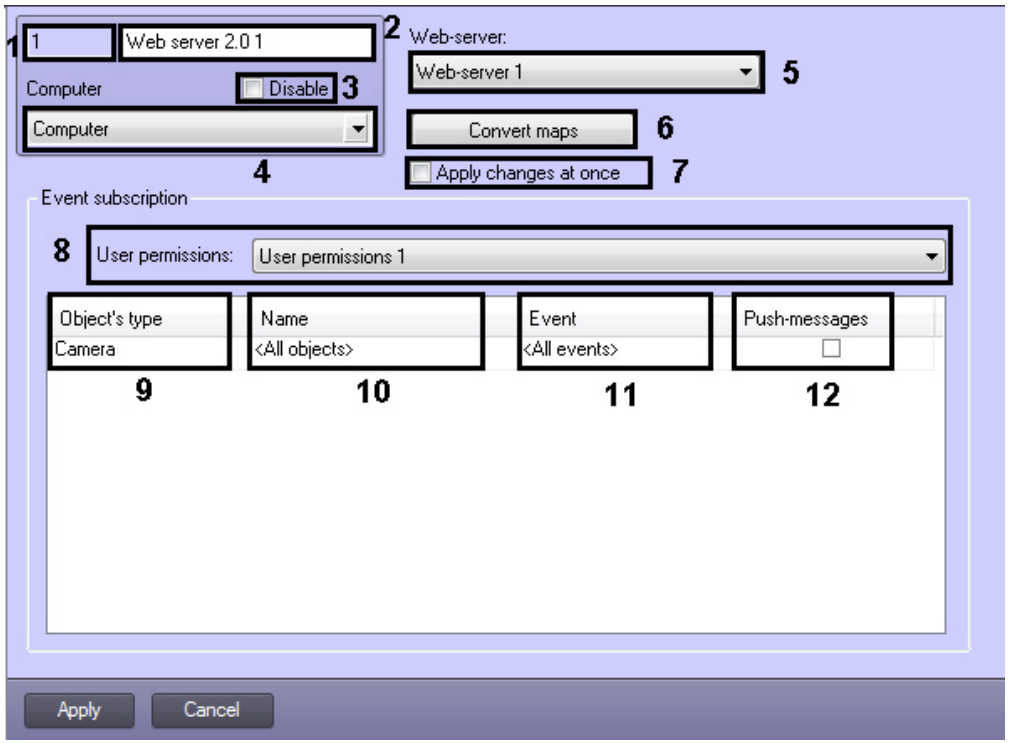

Configuration parameters of the **Web Server 2.0** system object are described in the table.

No.	Parameter name	Parameter configuration method	Description of parameter	Representation	Default value	Possible values
1	**ID number** field	Automatic	Displays the ID number of the **Web Server 2.0** system object in the system	Natural whole numbers	-	Depends on number of **Web Server 2.0** objects in the system
2	**Name** field	Value entered in field	Sets the name of the **Web Server 2.0** object in the system	Latin letters, Cyrillic letters, and miscellaneous characters	Video capture device	Line containing a sequence of any characters (letters, numbers, miscellaneous characters apart from > and < symbols), not case-sensitive From 1 to 60 characters
3	**Disable** check box	Select/clear check box	Sets the state (enabled or disabled) of the **Web Server 2.0** object in the system	Boolean	No	**Yes**: **Web Server 2.0** object is disabled and is not used **No**: **Web Server 2.0** object is enabled and is used

4	**Computer** drop-down list	Value selected from list	Sets **Computer** parent object for the given **Web Server 2.0** object	Name of **Computer** objects registered in the system	Name of parent **Computer** object	Depends on number of **Computer** objects in the system
5	**Web server** drop-down list:	Value selected from list	Sets the **Web server** object whose settings will be used for Web Server 2.0	Names of **Web server** objects registered in the system	-	Depends on number of **Web server** objects registered in the system
6	**Convert maps** button	Button click	Opens dialog for converting maps	-	-	-
7	**Apply changes at once** checkbox	Checkbox	Enabling the **Apply changes at once** feature	Boolean type	No	Yes – **Web-server 2.0** object will immediately apply these changes of user rights. No – when user rights are changed, access rights are not changed in **Web-server 2.0** object until the **Apply** button is clicked on the settings panel of the **Web-server 2.0** object or *Intellect* is restarted
8	**User permissions** drop-down list	Value selected from list	Sets the **User permissions** object for which events filter is to be configured	Names of **User permissions** objects registered in the system	-	Depends on number of **User permissions** objects registered in the system
9	**Object type** drop-down list	Value selected from list	Sets type of objects from which events are to be sent to clients	Names of types of objects registered in the system that are included in the selected user permissions	-	Depends on selected user permissions
10	**Name** drop-down list	Value selected from list	Sets name of object from which events are to be sent to clients	Names of objects of the selected type that are registered in the system	-	Depends on number of objects of the selected type that are registered in the system
11	**Event** drop-down list	Value selected from list	Sets event type that is to be sent to clients	Name of events that are available for objects of the selected type	-	Depends on the selected object type.
12	**Push notifications** check box	Select/clear check box	Specifies whether to send push notifications to clients about events of the selected type	Boolean	No	**Yes**: push notifications are sent **No**: push notifications are not sent

The Settings panel of the Edge storage object

The **Edge storage** object is designed for viewing the video archive in edge storage on IP-devices.

The figure shoes the **Edge storage** object settings panel.

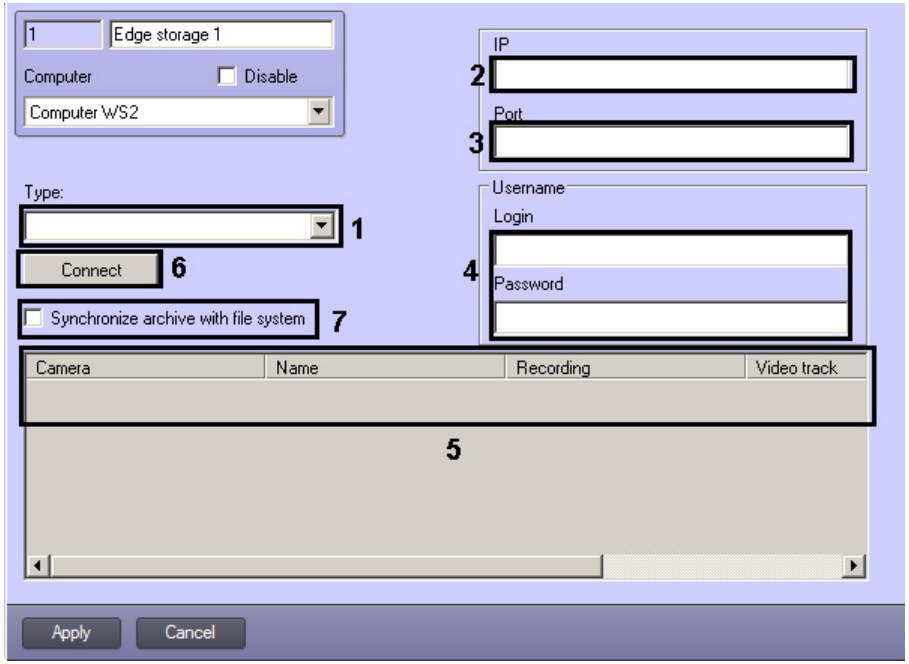

The table describes the settings parameters corresponding to elements of the **Edge storage** settings panel.

№	Parameter name	Method for setting the parameter value	Description	Presented as	Default value	Value range
1	**Type**	Select value from the list	Specifies the protocol of interaction with connected device	Names of supported protocols	-	Devices supported in the *Intellect* software package
2	**IP**	Enter the value in the field	Specifies the device IP-address	IP-address	-	String like xxx.xxx.xxx.xxx Contains values: 0.0.0.0 – 255.255.255.255 Depends on network settings of device. When configuring getting archive from ECHD Server the *<ECHD Server address>:<camera GUID>:<external account>* line is specified.
3	**Port**	Enter the value in the field	Specifies the connection port for the device	Integer positive numbers	-	From 0 to 65535 Depends on network settings of device
4	**Login**	Enter the value in the field	Specifies the user name for connecting to device	-	-	Depends on network settings of device
	Password	Enter the value in the field	Specifies the password for connecting to device	-	-	Depends on network settings of device

5	**Camera**	Select value from the list	Specifies the number of **Camera** object which is used for archive viewing	Set of natural- numbers	-	Depends on number of cameras registered in the system
	Name	Automatically	Displays the name of **Camera** object	Name of **Camera** objects registered in the system	-	Depends on number of **Camera** objects registered in the system
	Recording	Select value from the list	Specifies record corresponding to one data source in device	Name of recordings supported by device	-	Depends on number of recordings supported by device
	Video track	Select value from the list	Specifies the channel of video data within recording	Name of video tracks within recording	-	Depends on number of video tracks within recording
	Audio track	Select value from the list	Specifies the channel of audio data within recording	Name of audio tracks within recording	-	Depends on number of audio tracks within recording
6	**Connect**	Click the button	Check of existence the connection to the device, access to specifying the cameras list.	-	-	-
7	**Sync archive with file system**	Select/clear checkbox	Enable importing from edge storages to *Intel lect* file system	Boolean type	No	**Yes** – archive is imported. **No** – archive is not imported.

The Settings panel of the RS-RTP server object

The settings panel of the RS-RTP server object is shown in figures.

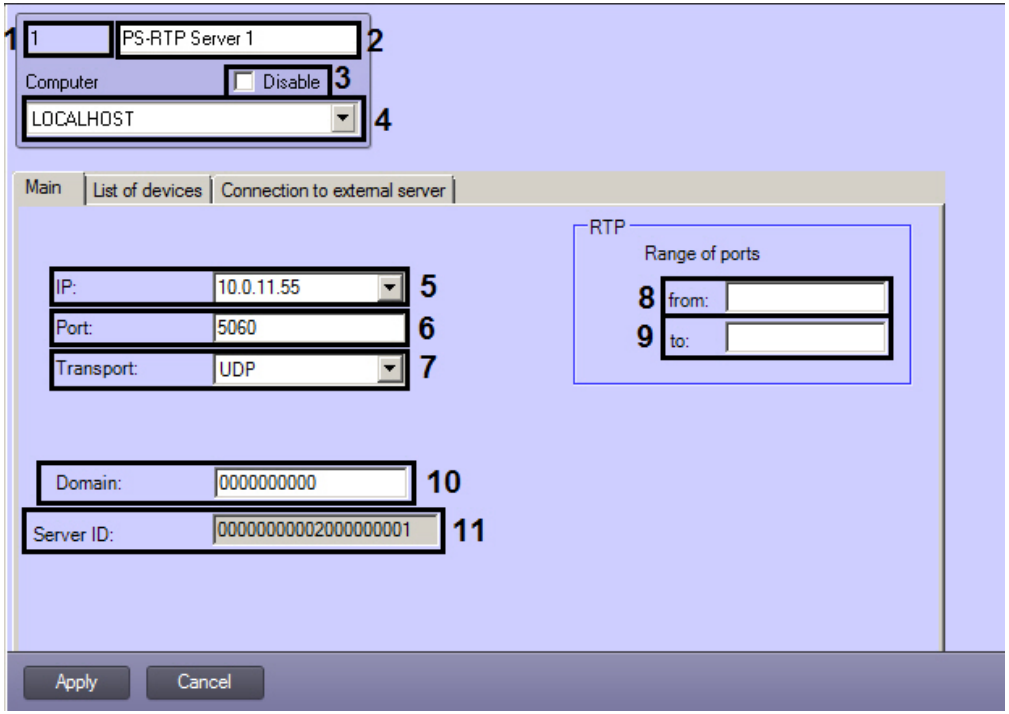

The **General** tab

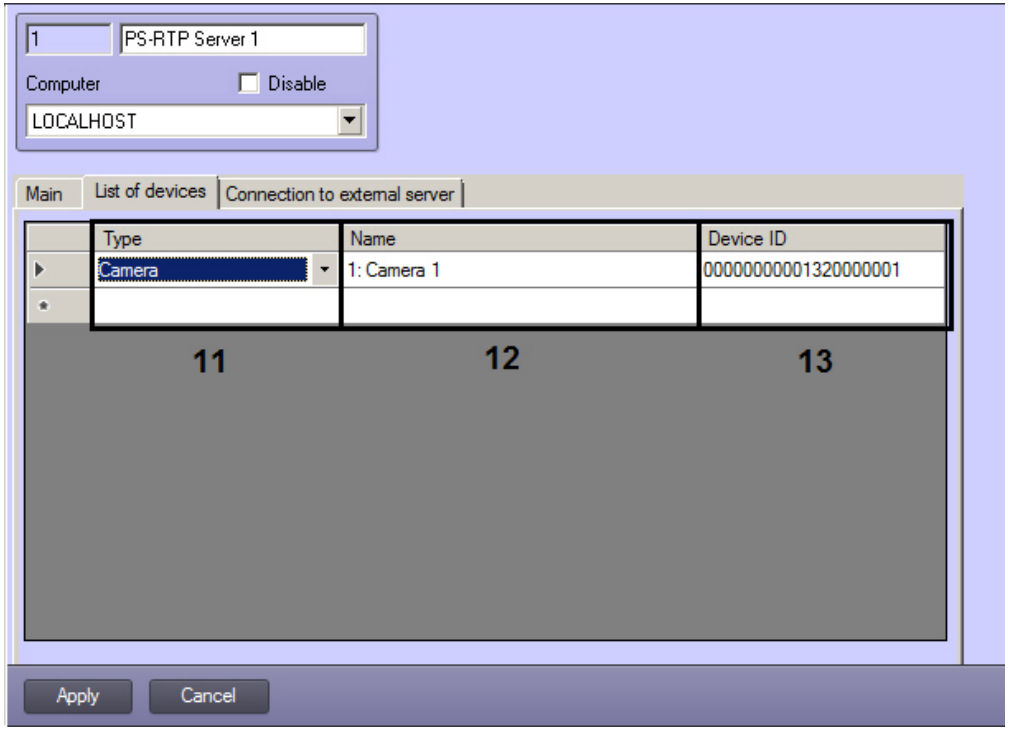

The **Device list** tab

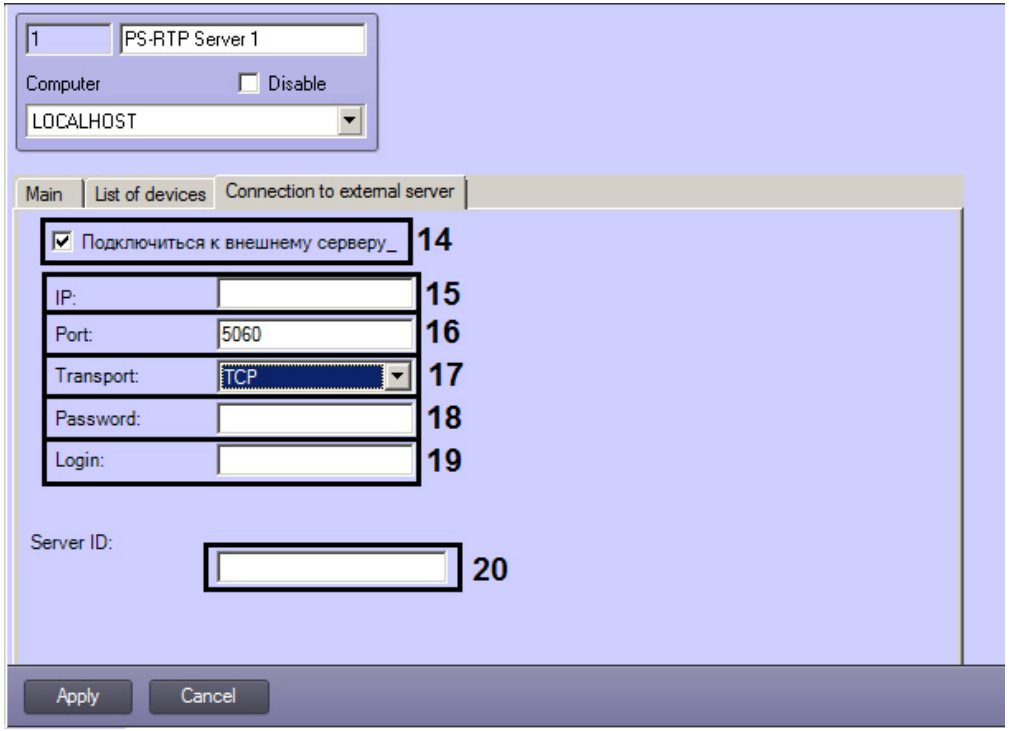

The **Connection to external server** tab

The table describes the parameters of the settings corresponding to the elements of the settings panel of the RS-RTP object.

#	Name	Field type	Description	Format	Default value	Value range
1	**ID**	Automatically	Shows id of **RS-RTP Server object** in the system	Natural number series	-	Depends on the number of **RS-RTP Server objects** in the system
2	**Name**	Enter the value in the field	Sets the name of **RS-RTP Server object**	Latin, Cyrillic and service characters	**RS-RTP server**	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	**Disable**	Checkbox	Sets the state of **RS-RTP Server object** (disabled or enabled)	Boolean type	No	**Yes** – **RS-RTP Server object** is disabled and is not in use. **No** – **RS-RTP Server object** is enabled and is in use.

4	**Computer**	Select in the list	Sets the parent **Computer** object in the digital system with distributed architecture to which the **RS-RTP Server object is assigned.**	Names of the **Compute r** objects registered in the system	The name of the parent **Computer** ob ject	Depends on the number of **Computer objects** in the digital surveillance system with distributed architecture.
The **General** tab						
5	**IP:**	Select in the list	Sets IP address of network interface using which the third-party software will control registered in Intellect devices via the GB2818 protocol	IP address	Depends on the parameters of network connection	Depends on the parameters and number of network connections
6	**Port:**	Enter the value in the field	Number of a port through which the third party software will be connected via the GB2818 protocol	Natural number series	5060	0-65535
7	**Transport:**	Select value in the list	Data transfer protocol	Supported transport protocols	UDP	UDP, TCP
8	**Server ID**	Automatically	ID of Intellect Server that is in use by the third-party software to connect to RS-RTP Server via the GB2818 protocol	-	-	-
9	**From:**	Enter the value in the field	Lower value of the RTP port range	Natural number series	-	0-65535
10	**To:**	Enter the value in the field	Upper limit of the RTP port range	Natural number series	-	0-65535
The **Device list** tab						
11	**Type**	Select value in the list	Type of object to be controlled via the GB2818 protocol	Names of types of objects in *Intellect* objec t tree	-	Depends on the number of objects created in *Intellect* object tree
12	**Name**	Select value in the list	Name of object to be controlled via the GB2818 protocol	Names of objects in *Inte llect* object tree	-	Depends on the number of objects created in *Intellect* object tree
13	**Device ID**	Automatically	ID of the device that will be in use in the third-party software to control objects via the GB2818 protocol	-	-	-
The **Connection to edge server** tab						
14	**Edge server connection**	Checkbox	Checks if *Intellect* connects to edge supserver using the PS-RTP object via the GB2818 protocol	Boolean type	No	Yes – edge server connection is performed. No – edge server connection is not performed.
15	**IP:**	Enter the value in the field	IP address of supserver	IP address	-	000.000.000.000 – 255.255.255.255
16	**Port:**	Enter the value in the field	Port used to connect to edge server	Natural number series	5060	0-65535

17	**Transport:**	Select value in the list	Transport protocol used to connect to edge server	Supported transport protocols	-	TCP, UPD
18	**Login:**	Enter the value in the field	Username used to connect to edge server	Latin, Cyrillic and service characters	-	A line containing a sequence of any symbols
19	**Password:**	Enter the value in the field	Password used to connect to edge server	Latin, Cyrillic and service characters	-	A line containing a sequence of any symbols
20	**Server ID:**	Enter the value in the field	ID of supserver via the GB28181 protocol	Natural number series	-	00000000000000000000 - 99999999999999999999

The Interfaces tab

The **Interfaces** tab is designed to create and configure a user interface of the video surveillance and audio monitoring system.

Interfaces tab components

The **Interface** tab shows a tree of the system objects, corresponding to the user interface components, and a tools panel, which is used to configure the system object selected in the tree. The settings panels of the system objects used in the video surveillance and audio monitoring system are described in the following sections.

The Settings panel of the Display object

The **Display** object is designed to register virtual screens in the system which are used as a basis for interface components created in the Intellect system. The settings panel of the **Di splay** object is shown in the figure.

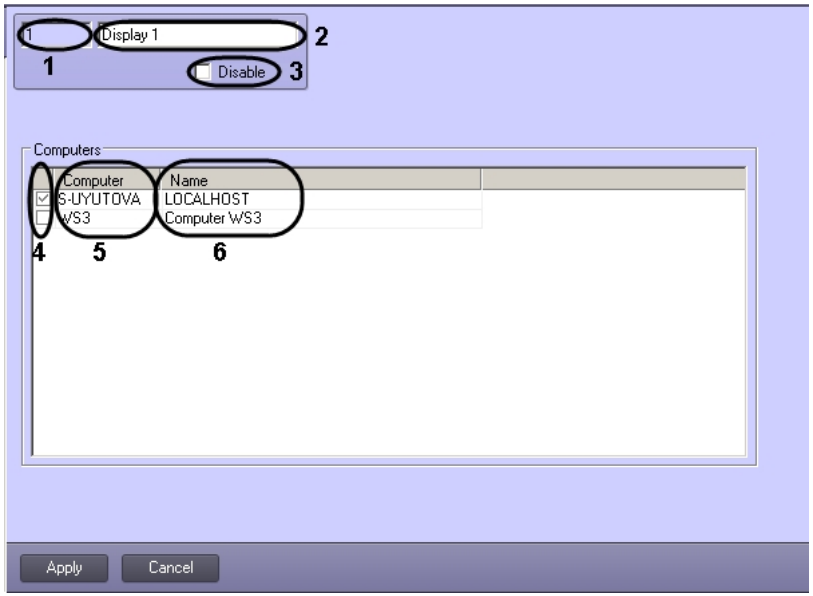

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Display** object .

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Display** object in the digital distributed video surveillance system.	Sequence of numbers	-	Depends on the number of **Display** objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the box	Defines the name of the **Display** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Screen	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the condition of the **Display** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	Not available	Yes – the **Display** object is disabled and is not in use No – the **Display** object is enabled and is in use.
Computer Group						
4	Select an element*	Is identified by the check mark	Contains a list of computers (videoserver, Remote Administrator Workstation, Remote Workstation) connected to the given videoserver (Remote Administrator Workstation). The check marks referred to the computers define whether or not the computers should display the **Monitor** objects based on the given **Display** object.	Boolean type	Not available	Yes – the computer will display the **Monitor** objec t, created on the basis of the given **Display** objec t. No – the computer will not display the **Monitor** o bject, created on the basis of the given **Display** o bject.
5	Computer	Automatically	Defines the computer name in the local network.	Computer name in the local network	Computer name in the local network	Depends on the number of objects in the local network. A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 60.
6	Name	Automatically	Gives the name to the computer used in the digital distributed video surveillance system	Name of the **Compu ter** object registered in the system	Name of the **Compu ter** object registered in the system	Depends on the number of objects in the digital distributed video surveillance system. A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Number of symbols – from 1 to 60.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Monitor object

The face of the settings panel for the **Monitor** object is shown in the figures.

The settings panel of the **Monitor** object. The **Basic settings** tab

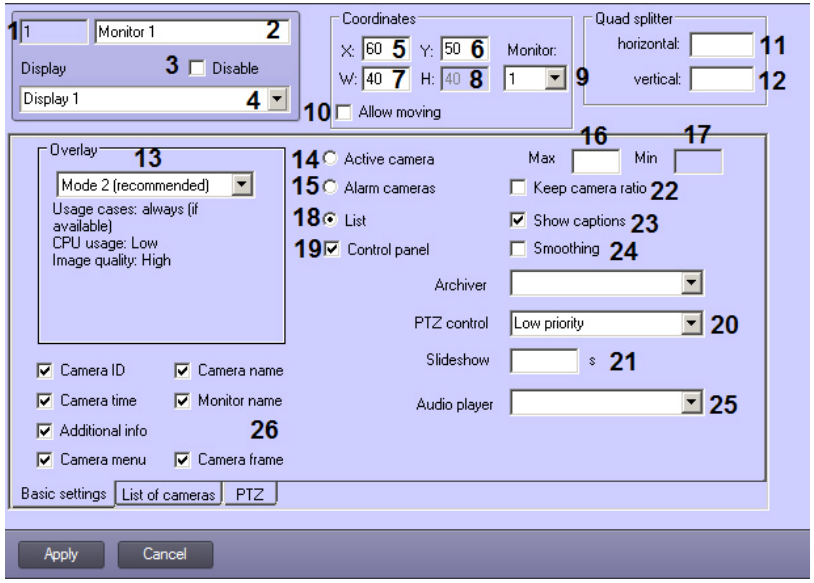

The settings panel of the **Monitor** object. The **List of cameras** tab

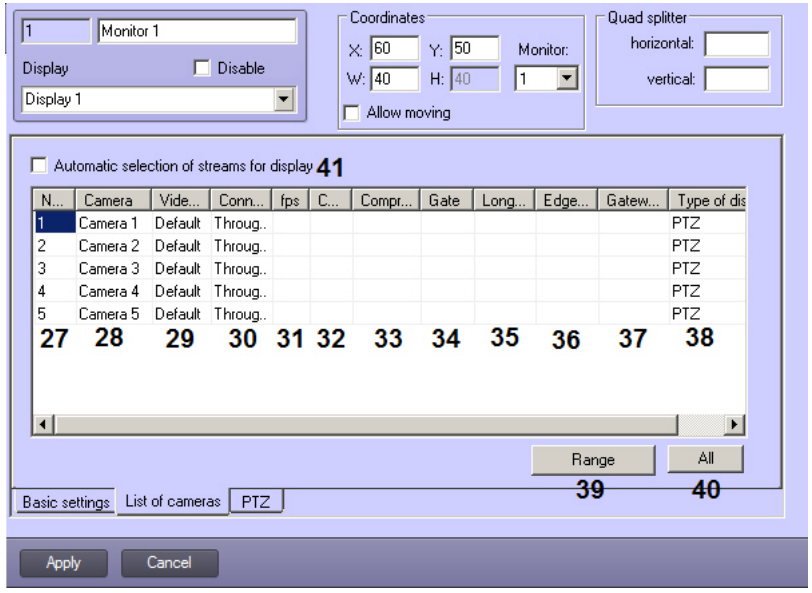

The settings panel of the **Monitor** object. The **PTZ** tab

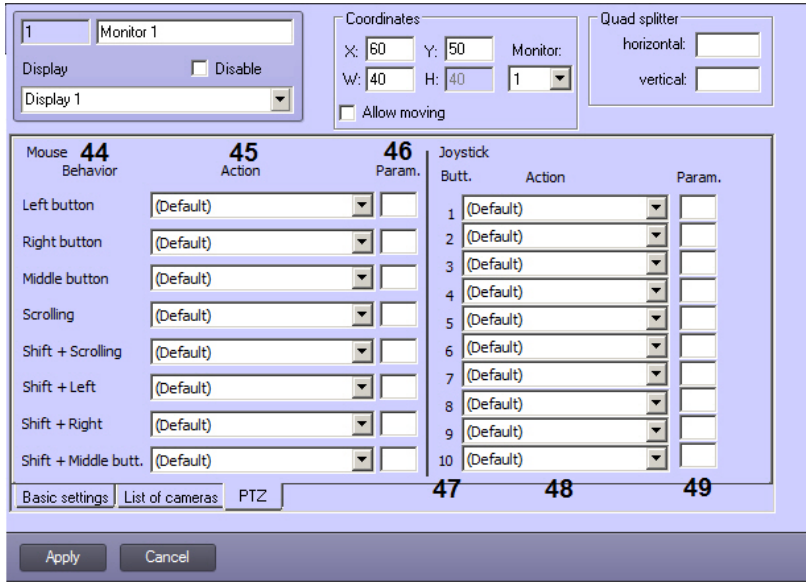

The table describes the setting parameters of the **Monitor** interface object.

№	Parameter	Method of setting the value	Parameter description	Symbols used	Default value	Value range
1	The **Identification number** field	Automatically	Displays the identification number of the **Monitor** interf ace object in the system.	Sequence of numbers	-	Depends on the number of the Monitor objects in the system.
2	The **Name** field	Enter the value in the field	Defines the name of the **Monitor** object in the system.	Latin, Cyrillic and service digits	Monitor	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	The **Disable** check box	Set the checkbox	Defines the mode of the Monitor object (enabled or disabled) in the system.	Boolean type	-	**Yes** – the **Monitor** object is disabled and is not in use **No** – the **Monitor** object is enabled and is in use
4	The **Display** drop-down list	Select in the list	Sets the parent **Display** object for the given **Monitor** o bject.	Names of the **Display** obje cts registered in the system	Name of the parent **Display** object	Depends on the number of the **Display** object s in the system.
The **Coordinates** group						
5	The **X** field	Enter the value in the field	Set the X coordinate in the horizontal axis for the upper-left corner of the **Monitor** interface box	% of the screen width	-	From 0 to M*100, where M is the number of the monitors installed

6	The **Y** field	Enter the value in the field	Set the Y coordinate in the vertical axis for the upper left corner of the **Monitor** interface box	% of the screen height	-	From 0 to M*100, where M is the number of the monitors installed
7	The **W** field	Enter the value in the field	Set the width of the **Monitor** interface box	% of the screen width	-	From 0 to 900 This restriction can be removed using the UnlimitMonitorSize registry key (see Registry keys reference guide).
8	The **H** field	Enter the value in the field	Set the height of the **Monitor** object if the control panel is not active	% of the screen width	-	From 0 to 900 This restriction can be removed using the UnlimitMonitorSize registry key (see Registry keys reference guide).
9	The **Monitor** drop-down list	Select in the list	Sets the monitor number, the coordinates to which are assigned	Sequence of numbers	1	From 1 to 9
10	The **Allow moving** checkbox	Set the checkbox	Allows hand shifting of the **Monitor** interface box if the control panel is active	Boolean type	-	Yes – hand shifting is allowed. No – hand shifting is prohibited.
Quad splitter group						
11	**horizontal** field	Enter the value in the field	Sets number of video surveillance windows in the horizontal direction to display then on the Monitor. If value is not specified (field is empty) then default grid of video surveillance windows depending on the selected layout is displayed	Natural numbers	-	>0
12	**vertical** field	Enter the value in the field	Sets number of video surveillance windows in the vertical direction to display then on the Monitor. If value is not specified (field is empty) then default grid of video surveillance windows depending on the selected layout is displayed	Natural numbers	-	>0
The **Basic settings** tab						
13	The **Overlay** drop-down list	Select in the list	Set the **Overlay mode** for processing video signals	Names of overlay modes	Method2 (Recommended)	**Method1** – video signals are processed as one stream **Method2** (Recommended) – video signals are processed independently from each other **None** – video signals are not processed by a video capture card
14	The **Active camera** switch	Set in the position	Set the display mode for an active camera box	Boolean type	-	**Yes** - The Active camera mode is enabled and is in use **No** - The Active camera mode is disabled and is not in use
15	The **Alarms cameras** switch	Set in the position	Set the display mode for alarm cameras' boxes	Boolean type	-	**Yes** - The **Alarms cameras** mode is enabled and is in use **No** - The **Alarms cameras** mode is disabled and is not in use
16	The **Max** field	Enter the value in the field	Specify the maximum number of video cameras, boxes of which are displayed on the Monitor in the **Alarms cameras** and List modes	Sequence of numbers	-	From 1 to 64 Depends on the number of cameras registered in the system

17	The **Min** field	Enter the value in the box	Specify the minimum number of video cameras, boxes of which are displayed on the Monitor in the **Alarms cameras** even on no-alarm	Sequence of numbers	-	From 1 to 64 Depends on the number of cameras registered in the system. 0 – on no-alarm camera boxes are not displayed in the Monitor box.
18	The **List** switch	Set in the position	Set the display mode according to the selected layout.	Boolean type	Yes	**Yes** - The List mode is enabled and is in use **No** - The List mode is disabled and is not in use
19	The **Control panel** checkbox	Set the checkbox	Activates the control panel for the Monitor in the **List** mode	Boolean type	-	**Yes** - The **Control panel** mode is enabled and is in use **No** - The **Control panel** mode is disabled and is not in use
20	The **Telemetry control** drop-down list	Select in the list	Set the prioritiy for the Telemetry control using the **Monitor** object	Names of the Telemetry control priorities	Low priority	**Forbidden** – option of the Telemetry control using the Monitor object is disabled **Low priority** – low priority of control **High priority** – high priority of control
21	The **Slideshow** field	Enter the value in the field	Set the period of automatic slideshow of camera boxes when the control panel is enabled	Period in seconds (s)	-	Whole number from 1 and bigger
22	The **Keep camera ratio** checkbox	Set the checkbox	Specifies the ratio of the width and height of the video in the surveillance windows on the Video surveillance monitor.	Boolean type	-	**Yes** – the ratio of the width and height of the video corresponds to the ratio of the camera. **No** – video fits the entire area of the Surveillance window, while the ratio may be affected.
23	The Show captions checkbox	Set the checkbox	Shows the captions for cameras of the **Monitor** interface box. In large distributed systems it is recommended to disable captions on those monitors where captions are not planned to be shown in order to decrease the number of redundant events.	Boolean type	Yes	**Yes** – The **Captions** submenu is available in the context menu of the Monitor interface box **No** – The **Captions** submenu is unavailable in the context menu of the Monitor interface box
24	**Smoothing** checkbox	Setting checkbox	Is used when it is required to display video with greater resolution on which the ladder effect appears while displaying in the small window *Note. When this feature is enabled, the CPU load of the computer where the display is performed increases. It is recommended to use only to display video from analog cameras or low-resolution video.*	Boolean type	No	**Yes** – smoothing is applied. **No** – smoothing is not applied
25	The **Audio player** drop-down list	Select in the list	Sets the **Audio player** object used to playback audio signals and export video with audio from the **Monitor** interface	Names of the **Audio player** objects registered in the system	-	Depends on the number of the audio players registered in the system

26	Group of checkboxes used to enable displaying elements of Surveillance windows	Set the checkboxes	Allows enabling and disabling display of various elements of the Surveillance window such as number, name, time, menu, camera frame and additional info on the camera as well as the name of video surveillance monitor	Boolean type	All checkboxes are set checked	**Yes** – the corresponding element is displayed in Surveillance windows of all cameras added to the Video surveillance monitor. **No** – the corresponding element is not displayed in Surveillance windows on the Video surveillance monitor.
The **List of cameras** tab						
27	The **Number** drop-down list	Select in the list	Set the number of the video camera to display on the Monitor	Sequence of numbers	-	Depends on the number of video cameras registered in the system
28	The **Camera** drop-down list	Select in the list	Set the name of the video camera to display on the Monitor	Name of the cameras registered in the system	-	Depends on the number of video cameras registered in the system
29	**Video stream** dro p-down list	Select value from the list	Set the number of video stream from camera which is to be displayed when receiving video stream straight from camera	Streams numbers	Default	1, 2, 3, 4 – video streams. Default – default video stream.
30	**Connection** drop-down list	Select value from the list	Set the way of receiving video from camera	Ways of receiving video	Through Server	**Direct** - the video stream is received straight from camera **Through Server** - the video stream is received from the Server, which camera is connected to
31	The **Fps** drop-down list	Select in the list	Set the fps for transmitting the video signal to the Monitor of the Client.	Sequence of numbers	-	1, 2, 3, 4, 6, 8, 12, 16, 20, 25, 30
32	The **Compression** drop-down list	Select in the list	Set the compression for transmitting the video signal to the Monitor of the Client. The given value leads to extra consumption of Server's resources.	Sequence of numbers	-	In the range of rising compression level 0,1,2,3,4,5 0 – the video signal is not compressed 5 – maximum compression of the video signal
33	**Compressor** drop-down list	Select value from the list	Specifies the procedure of video stream compression which is in use for video signal recompression for displaying on the Monitor. The value is to be selected in the **Compression** list if the compressor is specified.	List of available procedures	-	MJPEG, Motion Wavelet 3.5, Motion Wavelet 7.1
34	The **Gate** drop-dow n list	Select in the list	Set the **Gate** object via which the live and archive video from the selected camera is to be transmitted to the Monitor	Names of the **Gateway** obj ects registered in the system	-	Depends on the number of the **Gate** objects registered in the system
35	The Backup archive drop-down list	Select in the list	Set the Backup archive object the video archive from the selected camera of which is to be transmitted to the Monitor	Names of the Backup archive objects registered in the system	-	Depends on the number of the Backup archive objects registered in the system
36	The External storage	Select in the list	Set the External storage object the video archive from which is to be transmitted to the Monitor via the selected camera	Names of the External storage objects registered in the system	-	Depends on the number of the External storage objects registered in the system

37	The **Gateway for Backup archive** drop-down list	Select in the list	Set the **Gate** object via which the video archive of the **Backup archive** object is to be transmitted to the Monitor	Names of the **Gateway** objects registered in the system	-	Depends on the number of the **Gateway** objects registered in the system
38	The **Display type** dropdown list	Select value in the list	Sets the type of conversion performed in the Surveillance window on the Video surveillance monitor	Supported conversion types	PTZ	**PTZ** – virtual telemetry. **Panorama** – panoramic view.
39	The **Range** button	Click the button	Select all cameras registered in the system to display on the Monitor	-	-	-
40	The **All** button	Click the button	Access to complex selection and editing of cameras' parameters to display on the Monitor	-	-	-
41	**Auto select of streams for displaying** checkbox	Setting checkbox	Enables the function of auto select of video stream for displaying in the Monitor. Affects cameras for which the On default video stream is selected - see 25.	Boolean type	No	**Yes** - video stream for displaying is selected depending on the size of video image on the Monitor and required frame frequency **No** -video stream is selected depending on the **Video stream** and **Connection** settings (25-26) and depending on settings of the Server and video camera from which the stream is required.
42	**Mouse behavior**	-	The list of available actions with a mouse	-	-	-
43	**Action** drop-down list	Select value from the list	Specify reaction performed while executing the corresponding action using a mouse	Reaction list of the **PTZ device** object	(Default)	Reaction list of the **PTZ device** object
44	**Parameter** field	Enter the value in the field	Specify the value of reaction parameter if it's required	Depends on the selected action	-	Depends on the selected action. It is a preset number for reactions connected with presets, for other reactions it is speed if the selected reaction allows speed specifying as parameter. The speed value from the PTZ device object connected with Camera selected in the Monitor is in use if the parameter is not specified.
45	**Joystick** buttons column	-	List of joystick buttons	-	-	-
46	**Action** drop-down list	Select value from the list	Specify reaction which is to be performed while clicking the joystick button	List of reaction of **PTZ device** object.	(Default)	List of reaction of **PTZ device** object
47	**Parameter** field	Enter the value in the field.	Specify the value of reaction parameter if it is required.	Depends on the selected action	-	Depends on the selected action. It is a preset number for reactions connected with presets, for other reactions it is speed if the selected reaction allow speed specifying as parameter. The speed value from the **PTZ device** object connected with Camera selected in the Monitor is in use if the parameter is not specified.

The Settings panel of the Audio player object

The settings panel of the **Audio player** object is shown in the figure.

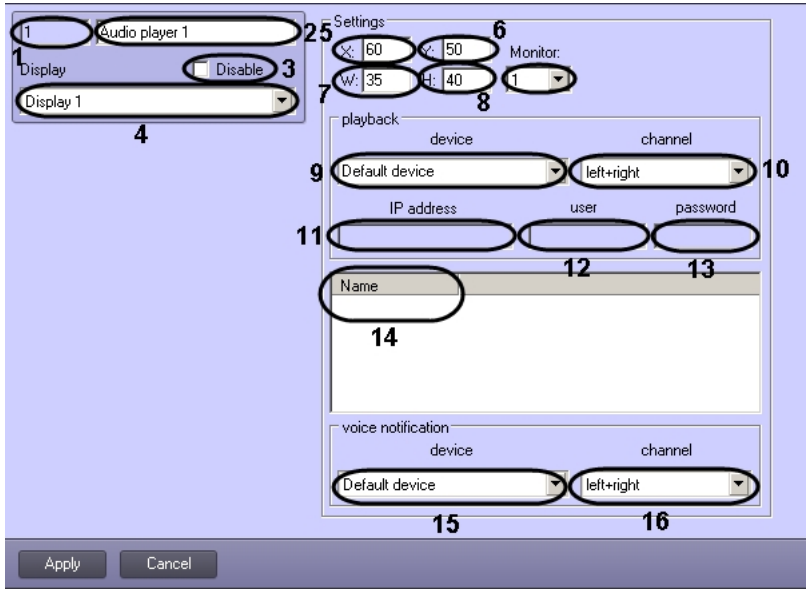

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Audio player** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	**Identification number**	Automatically	Displays the identification number of the **Audio player** object in the system.	Sequence of numbers	-	Depends on the number of **Audio player** objects in the system.
2	**Name**	Enter the value in the box	Defines the name of the **Audio player** object in the system.	Latin, Cyrillic and service characters	Audio player	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Check box **Disable**	Is identified by the check mark	Defines the status (enabled or disabled) of the **Audio player** object in the system.	Boolean type	Not available	**Yes** – the **Audio player** object is disabled and is not in use **No** – the **Audio player** object is enabled and is in use.
4	Dropdown list **Display**	Is selected from the list	Defines the parent **Display** object for the given **Audio player** object.	Names of the **Display** objects registered in the system	Name of the parent **Display** object.	Depends on the number of **Display** objects in the system.
Settings Group						

5	X	Enter the value in the field.	Defines the coordinate in the X horizontal axis for the upper left corner of the Audio player on the screen.	% of the screen width	-	From 0 to M*100, where M is the number of monitors installed.
6	Y	Enter the value in the box.	Defines the coordinate in the Y vertical axis for the upper left corner of the Audio player on the screen.	% of the screen height		From 0 to M*100, where M is the number of monitors installed.
7	W	Enter the value in the box.	Defines the Audio player window width.	% of the screen width	-	From 40 to M*100, where M is the number of monitors installed.
8	H	Enter the value in the box.	Defines the Audio player window height.	% of the screen width	Not defined	From 40 to M*100, where M is the number of monitors installed.
9	Dropdown list **Device**	Is selected from the list	Defines sound device for which audio signals shoul be transmited to playback.	Nemes of audio devices, registered in the system	Device by default	Depends on the number of devices in the system. Standard sound map is the default device.
10	**Channel**	Is selected from the list	Defines the chanal of audio signals' playback	Left+right, left,right	Left+right	Left+right audio signal is transmitted to left and right channels of sound device. Left – audio signal is transmitted to the left channel of the sound device. Right– audio signal is transmitted to the right channel of the sound device
11	**IP address**(is set for audio IP-device)	Enter the value in the field.	Set the IP-adress of the sound device	IP-adress	-	Depends on settings registered in the system of IP-devices
12	**User(is** set for audio IP-device)	Enter the value in the field.	Set the user name to connect to the sound device	-	-	Depends on settings of IP-device
13	**Password(is** set for audio IP-device)	Enter the value in the field.	Set user's password for connection to the sound device	-	-	Depends on settings of IP-device
Name table						
14	Dropdown list **Name**	Select the value from the list	Set the microphone, which audio signals should be recorded and/or played	Names of **Microphone** objects,registered in the system	-	Depends on number of Microphone objects in the system
15	Dropdown list **Device**	Select the value from the list	Set the voice notification device when alarms are registered by cameras	Names of voice detection devices, registered in the system	Device by default	Depends on voice notification devices, registered in the system. Standard sound map is the default device.
16	Dropdown list **Channel**	Select the value from the list	Set the channel of voice notification when alarms are registered by cameras	Left+right, left,right	Left+right	Left+right- audio signal is transferred to the left and right channels of the voice notification device.Left- audio signal is transferred to the left channel of the voice notification device.Right- audio signal is transferred to the right channel of the voice notification device

The Settings panel of the Telemetry control panel object

The settings panel of the **Telemetry control panel** object is shown in the figure.

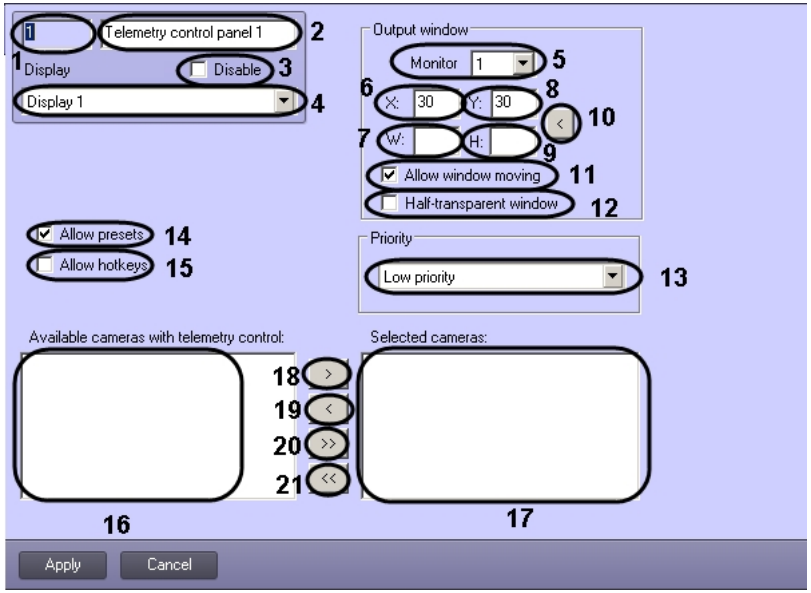

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Telemetry control panel** object.

№	Parameter	Method for setting the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Telemetry control panel** object in the system.	Sequence of numbers	-	1 or more Depends on the **Telemetry control panel** objects in the system.
2	Name*	Type-in the value in the field	Specifies the name of the **Telemetry control panel** object in the system.	Latin, Cyrillic and service characters	Telemetry control panel	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Checkbox is set	Sets the status of the **Telemetry control panel** object in the system.	Boolean type	-	**Yes** – the **Telemetry control panel** object is disabled and is not in use **No** – the **Telemetry control panel** object is enabled and is in use.
4	Display	Is selected in the list	Sets the parent Display object for the given **Telemetry control panel** object.	Names of the **Display** objects registered in the system	Name of the parent **Display** object.	Depends on the number of the **Display** objects in the system.

The **Coordinates** group						
5	Monitor	Is selected in the list	The number of monitor in OS for which coordinates are specifying	Numbers of monitors	1	1-16
6	X	Type-in the value in the field.	Sets the coordinate in the X horizontal axis for the upper left corner of the **Telemetry control panel** on the screen.	% of the screen width.	30	From 0 to M*100, where M is the number of monitors installed.
7	Y	Type-in the value in the field.	Sets the coordinate in the Y vertical axis for the upper left corner of the **Telemetry control panel** on the screen.	% of the screen height.	30	From 0 to M*100, where M is the number of monitors installed.
8	W	Type-in the value in the field.	Sets the width of the Telemetry control panel.	% of the screen width.	-	From 18 to M*100, where M is the number of monitors installed.
9	H	Type-in the value in the field.	Sets the height of the **Telemetry control panel**	% of the screen height.	-	From 34 to M*100, where M is the number of monitors installed.
10	Current settings*	Click the button	Sets the current coordinates of the **Telemetry control panel** in X, Y, W and H fields	-	-	-
11	Allow window's moving	Checkbox is set	Allows moving the **Telemetry control** using the mouse panel	Boolean type	Yes	**Yes** – allow moving the **Telemetry control panel** **No** – forbid moving **Telemetry control panel**
12	Half-transparent window	Checkbox is set	Displays the half-transparent **Telemetry control panel**	Boolean type	Yes	**Yes-** display the half-transparent **Telemetry control panel**. **No** – do not display the half-transparent **Telemetry control panel**.
13	Priority	Is selected in the list	Sets the priority of Telemetry control	Names of priorities for Telemetry control	Low	**Forbidden** – Telemetry control is forbidden. **Low** – control over PTZ device using the Telemetry control panel is performed after it controls devices with Standard or High ptiority **Standard** - control over PTZ device using the Telemetry control panel is performed after it controls devices with High ptiority. **High** - control over PTZ device using the Telemetry control panel is performed in the first place
14	Allow presets	Checkbox is set	Enables saving presets	Boolean type	Yes	**Yes** – presets saving is enabled. **No** – presets saving is disabled
15	Allow hotkeys	Checkbox is set	Enables Telemetry control using a keyboard	Boolean type	No	**Yes–** keyboard can be used for Telemetry control **No** – keyboard hotkeys are not used for Telemetry control

16	Available cameras with telemetry control	Automatically	Shows cameras with PTZ devices.	Names of the **Camera** objects registered in the system.	The list of all **Camera** objects registered in the system.	Depends on the number of PTZ devices.
17	Selected cameras	Click arrow keys	Shows cameras with PTZ devices that can be controlled using the **Telemetry control panel**	-	-	Depends on the number of PTZ devices.
18	One to the right*	Click the button	Moves specified PTZ device from the **Available cameras with telemetry contro**l list to the Selected cameras list	-	-	-
19	One to the left*	Click the button	Moves specified PTZ device from the **Selected cameras** list to the **Available cameras with telemetry control** list.	-	-	-
20	All to the right*	Click the button	Moves all PTZ devices from the **Available cameras with telemetry control** list to the Selected cameras list.	-	-	-
21	All to the left*	Click the button	Moves all PTZ devices from the Selected cameras list to the **Available cameras with telemetry control** list.	-	-	-

* The name of the element is not displayed in the settings panel of the given object

The Settings panel of the Long-term archive panel object

The **Long-term archive panel** object is designed to register and configure the **Long-term archive panel** interface object in the Intellect system, which allows the Operator configuring video data archiving.

The settings panel of the **Long-term archive panel** object is shown in the figure.

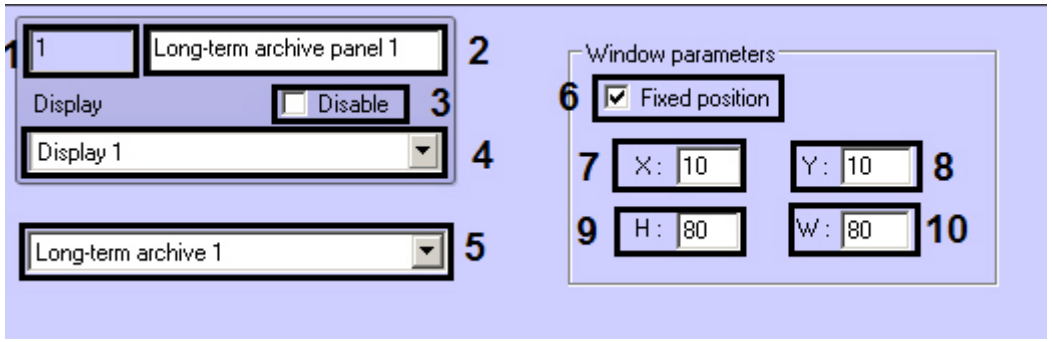

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Long-term archive panel** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range

1	Identification number*	Automatically	Displays the identification number of the **Long-term archive panel.**	Sequence of numbers	-	From 1 and above. Depends on the number of **Long-term archive panel** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the box	Defines the name of the **Long-term archive panel** obj ect.	Latin, Cyrillic and service characters	Long-term archive panel	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the status of the **Long-term archive panel** ob ject.	Boolean type	Not available	Yes – the **Long-term archive panel** is disabled and is not in use No – the Long-term archive panel is enabled and is in use.
4	Display	Is selected from the list	Defines the parent **Display** object of the digital distributed system, to which the given **Long-term archive panel** object refers.	Names of the **Display** objec ts registered in the system.	Name of the parent **Display**.	Depends on the number of **Display** objects in the digital distributed video surveillance system
5	Long-term archive*	Is selected from the list	Defines an Long-term archive, which the Operator will control with the **Long-term archive panel** interface object.	Name of the **Long-term archive** objects registered in the system.	-	Depends on the number of **Long-term archive** object s in the digital distributed video surveillance system.
6	Fixed position	Is set with a check mark	Defines, if the user can drag the **Long-term archive panel** over the screen with the mouse.	Boolean type	Not available	Yes – the **Long-term archive panel** may not be dragged. No – the **Long-term archive panel** may be dragged.
7	X	Enter the value in the box (Automatically, if the **Fi xed position** option is checked).	Defines a coordinate in the X horizontal axis for the upper left corner of the **Long-term archive panel** on the screen.	% of the screen width.	Not defined	From 0 to M*100, where M is the number of video monitors installed.
8	Y	Enter the value in the box (Automatically, if the **Fi xed position** option is checked).	Defines a coordinate in the Y vertical axis for the upper left corner of the **Long-term archive panel** on the screen.	% of the screen height.	Not defined	From 0 to M*100, where M is the number of video monitors installed.
9	W	Enter the value in the box (Automatically, if the **Fi xed position** option is checked).	Defines the width of the **Long-term archive panel**.	% of the screen width.	Not defined	From 0 to M*100, where M is the number of video monitors installed.
10	H	Enter the value in the box (Automatically, if the **Fi xed position** option is checked).	Defines the height of the **Long-term archive panel**.	% of the screen width.	Not defined	From 0 to M*100, where M is the number of video monitors installed.

- The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Map object

The **Map** object is designed to register and configure the **Map** interface object in the *Intellect* system, which allows creating and mapping the symbols of the installed devices in the controlled territory and to use the symbols to operate the devices. The settings panel of the **Map** object is shown in the figure.

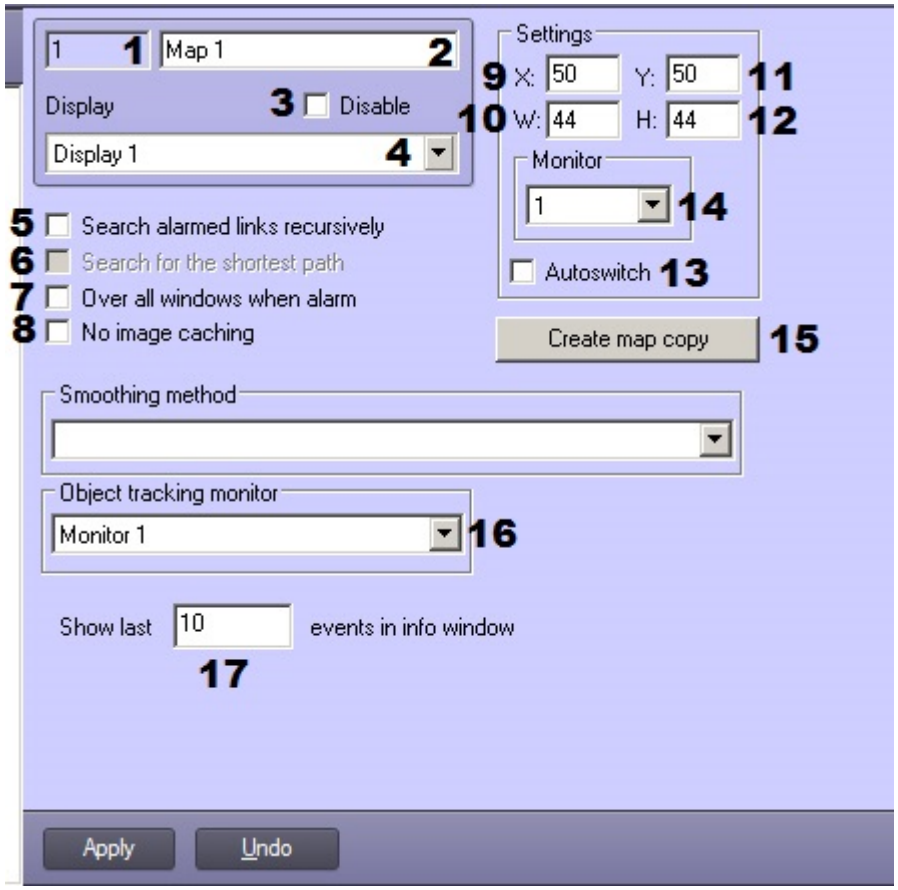

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Map** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	ID*	Automatically	Displays the ID of the **Map** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Map** objects in the digital distributed video surveillance system.

2	Name*	Enter the value in the field	Displays the name of the **Map** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Map	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	**Disable**	Set the checkbox checked	Sets the status of the **Map** object in the digital distributed video surveillance system.	Boolean type	No	**Yes** – the **Map** object is disabled and is not in use **No** – the **Map** object is enabled and is in use.
4	**Display**	Select in the list	Sets the parent **Display** object of the digital distributed system to which the given **Map** object refers.	Names of the **Display** objects registered in the system.	Name of the parent **Display** object.	Depends on the number of **Display** objects in the digital distributed video surveillance system
5	**Search alarmed links recursively**	Set the checkbox checked	Defines, if recursive search for the objects in the layers is possible. The recursive search means a search, where the transfer from one layer, containing an object, to another layer, containing a symbol, follows a gradual pattern of moving to the neighboring layers, using consecutive links.	Boolean type	No	**Yes** – a recursive search is enabled. **No** – a recursive search is disabled.
6	**Search for the shortest path**	Set the checkbox checked	Enables the search for the shortest path to the alarmed layer. If there are several paths from the active to the alarm layer, then the shortest path is defined automatically when the **Alarm** signal incomes (only one the **Link to layer** icon with the shortest path will blink in the active layer). Can be enabled only along with the **Search alarmed links recursively** option.	Boolean type	No	**Yes** – search for the shortest path is enabled **No** – search for the shortest path is disabled
7	**Over all windows when alarm**	Set the checkbox checked	Sets, if the window of the **Map** interface object can be displayed over all active applications in case of the **Alarm** signal incomes from any object of the **Map** interface object.	Boolean type	No	**Yes** - the window of the **Map** interface object will be displayed over all active applications in case of the **Alarm** signal incomes from any object of the **Map** interface object. **No** - the window of the **Map** interface object will not be displayed over all active applications in case of the **Alarm** signal incomes from any object of the **Map** interface object.
8	**No image caching**	Set the checkbox checked	Image caching is disabled. It is in use when images overlay each other.	Boolean type	No	**Yes** – caching is disabled. **No** – caching is enabled.
The **Settings** group						
9	**X**	Enter the value in the box	Sets a coordinate in the X horizontal axis for the upper left corner of the window of the **Map** interface object on the screen.	% of the screen width	Not set	From 0 to M*100, where M is the number of video monitors installed.
10	**Y**	Enter the value in the box	Sets a coordinate in the Y vertical axis for the upper left corner of the window of the **Map** interface object on the screen.	% of the screen height	Not set	From 0 to M*100, where M is the number of video monitors installed.

11	**W**	Enter the value in the box	Sets the width of the window of the **Map** interface object.	% of the screen width	Not set	From 0 to M*100, where M is the number of video monitors installed.
12	**H**	Enter the value in the box	Sets the height of the window of the **Map** interface object.	% of the screen width	Not set	From 0 to M*100, where M is the number of video monitors installed.
13	**Autoswitch**	Set the checkbox checked	Activates autoswitch to the **Alarm** source layer in the **Map** interface object.	Boolean type	No	**Yes** – in case of an alarm from an object, the system will switch to the source layer where the object is located. **No** – in case of an alarm from an object, the system will not switch to the source layer where the object is located.
14	**Monitor**	Select in the list	The number of monitor in OS for which coordinates are specified	Numbers of monitors	1	1-9
15	**Create map copy**	Click the button	Creates another **Map** object with all parameters identical to the given object	-	-	-
16	**Object tracking monitor**	Select in the list	Select the object tracking monitor. Find details in the Using absolute telemetry section of Installing and configuring security system components guide.	Names of available **Monitor** objects	-	Depends on the number of **Monitor** objects created in the system
17	**Show last ____ events in info window**	Enter the value in the box	Sets the number of events of the selected object to be shown in the info window on the Map.	Sequence of numbers	10	>=0

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Layer object

The **Layer** object is designed to create and configure the Map layers with the controlled objects in the Intellect system.

The settings panel of the **Layer** object is shown in the figure.

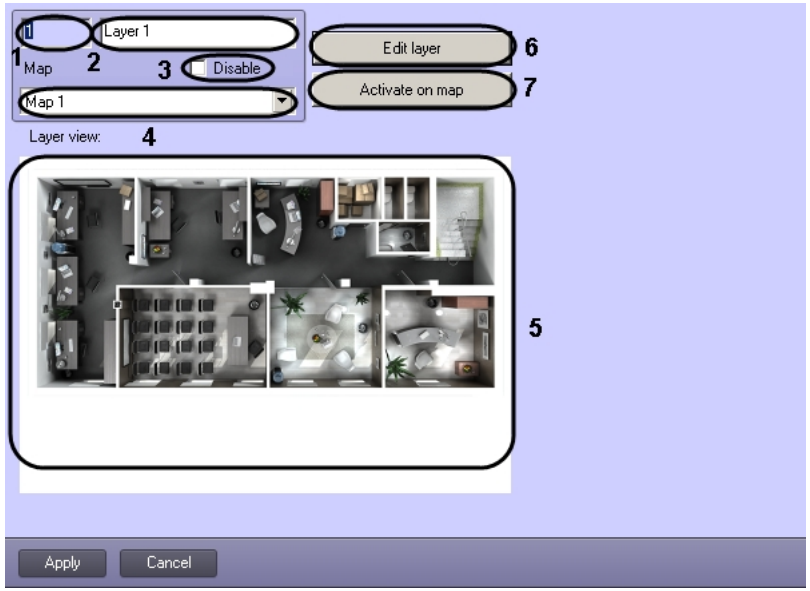

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Layer** object.

№	Parameter	Method for enter the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Layer** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Layer** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the box	Displays the name of the **Layer** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Layer	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Shows the status (enabled or disabled) of the **Layer** object in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Layer** object is disabled and is not in use **No** – the **Layer** object is enabled and is in use.
4	Map	Is selected from the list	Defines the parent Map object of the digital distributed system, to which the given **Layer** object refers.	Name of the **Map** objects registered in the system.	Name of the parent **Map** object	Depends on the number of **Map** objects in the digital distributed video surveillance system
5	Layer view	-	Shows the layout of the controlled territory.	-	-	-
6	Edit selected layer	Press the button.	Displays the panel, which allows to add/remove and configure the symbols of the devices installed in the controlled territory, using the territory layout.	-	-	-

7	Activate on map	Press the button.	Brings forward to the given layer over all other layers in the **Map** in terface object.	-	-	-

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Event viewer object

The **Event viewer** object represents an interface box showing text information about the events initiated by the distributed surveillance system.

The settings panel of the **Event viewer** object is shown in the figures.

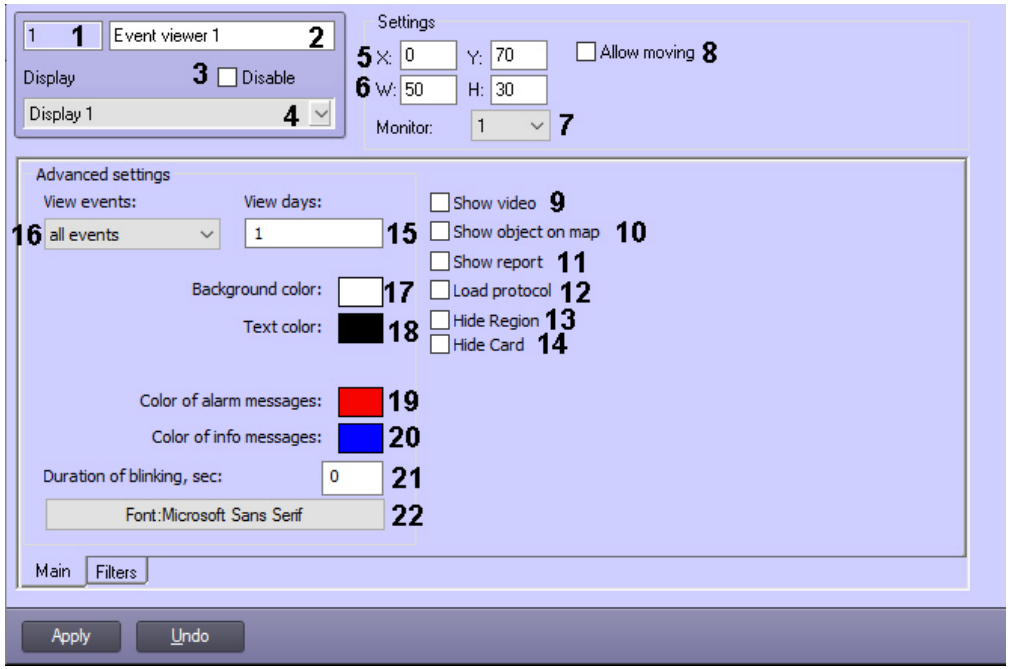

The **Main** tab

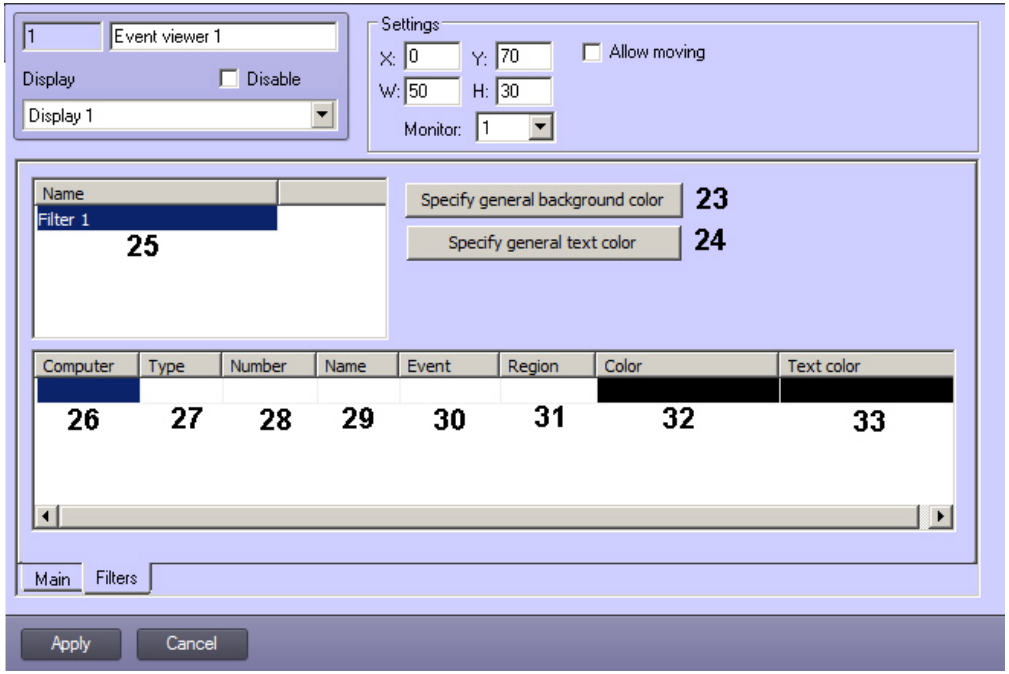

The **Filters** tab

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Event viewer** object.

№	Parameter	Method for setting the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Event viewer** object in the digital distributed video surveillance system.	Sequence of numbers	-	From 1 and above. Depends on the number of **Event Viewer** objects in the digital distributed video surveillance system.
2	Name*	Type-in the value in the field	Sets the name of the **Event viewer** object in the digital distributed video surveillance system.	Latin, Cyrillic and service characters	Event Viewer	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60.
3	Disable	Checkbox	Sets the status of the **Event viewer** object (enabled or disabled) in the digital distributed video surveillance system.	Boolean type	No	**Yes** – the **Event viewer** is disabled and is not in use. **No** – the **Event viewer** is enabled and is in use.
4	Screen	Select in the list	Specifies the parent **Display** object of the digital distributed video surveillance system, to which the given **Event viewer** object refers.	Names of **Display** o bject s registered in the system	Name of the parent **Display** o bject .	Depends on the number of **Display** object s in the digital distributed video surveillance system.

The **Settings** group						
5	X	Type-in the value in the field	Sets the coordinate in the X horizontal axis for the upper left corner of the window of the **Event viewer** interface object on the screen.	% of the screen width	Not set	From 0 to M*100, where M is the number of monitors installed.
	Y	Type-in the value in the field	Sets the coordinate in the Y vertical axis for the upper left corner of the window of the **Event viewer** interface object on the screen.	% of the screen height	Not set	From 0 to M*100, where M is the number of monitors installed.
6	W	Type-in the value in the field	Sets the window width of the **Event viewer** interface object.	% of the screen width	Not set	From 0 to M*100, where M is the number of monitors installed.
	H	Type-in the value in the field	Sets the window height of the **Event viewer** interface object.	% of the screen width	Not set	From 0 to M*100, where M is the number of monitors installed.
7	Monitor	Is selected in the list	The number of monitor in OS for which coordinates are specifying	Numbers of monitors	1	1-16
8	Allow moving	Checkbox	Allows the operator changing the position of the **Event Viewer** by clicking on it.	Boolean type	No	**Yes** – Operator can change the position of Event viewer. **No** – Operator cannot change the position of Event viewer.
9	Display video	Checkbox	Allows Operator viewing archive footage of the events, initiated by the Event Viewer as Record to disk using the **Event viewer** box.	Boolean type	No	**Yes** – Operator is allowed viewing the archive footage using the Event Viewer window. **No** – Operator is not allowed viewing the archive footage using the **Event viewer** window.
10	Display object on map	Checkbox	Allows Operator viewing objects, displayed in the **Event viewer** wind ow, on the map.	Boolean type	No	**Yes** - Operator is allowed viewing the objects, displayed in the Event Viewer window, on the map. **No** - Operator is not allowed viewing the objects, displayed in the Event Viewer window, on the map.
11	Display report	Checkbox	Allows Operator creating a printed form of the report and printing out the information about all events registered by the **Event viewer** with in the pre-set period of time.	Boolean type	No	**Yes** - Operator is allowed creating a printed form of the report and printing out the information about all events registered by the Event Viewer within the pre-set period of time. **No** - Operator is not allowed creating a printed form of the report and printing out the information about all events registered by the Event Viewer within the pre-set period of time.
12	Load protocol	Checkbox	Defines, whether or not the latest 1000 events registered by the **Eve nt viewer** with the latest system start, should be downloaded with the launch of Intellect™ software.	Boolean type	No	**Yes** - the latest 1000 events registered by the **Event viewer** with the latest system start, should be downloaded with the launch of Intellect™ software. **No** - the latest 1000 events registered by the **Event viewer** with the latest system start, should not be downloaded with the launch of Intellect™ software.
13	Hide Region	Set the checkbox	Hides the **Region** column in the **Event viewer**.	Boolean type	No	**Yes** – the **Region** column is not displayed **No** – the **Region** column is displayed

14	Hide Card	Set the checkbox	Hides the **Card** column in the **Event viewer**. See Card number displaying in the Event viewer window for access events section in Access Manager Module Settings and Operation Guide.	Boolean type	No	**Yes** – the **Card** column is not displayed **No** – the **Card** column is displayed
The **Advanced settings** group						
15	View days	Type-in the value in the field	Specifies the period over which events are to be displayed in the Event Viewer, if there are more than 10,000 events. If there are less events, then all events are displayed regardless of the value of this parameter.	Days	1	More than 1
16	View events	Select in the list	Sets the events for displaying in the window of the Event Viewer.	-	All events	**All events** – all events are displayed in the Event Viewer window **Last event** – one last event is displayed in the Event Viewer window **All last events** – all last events are displayed for all selected objects
17	Background color	Select in the list or on the **Select color** panel.	Sets the background color in the Event Viewer box	RGB, CMY or HSL.	White	Corresponds to the standard range of the selected color system.
18	Text color	Select in the list or on the **Select color** panel.	Sets the text color in the Event Viewer box	RGB, CMY or HSL.	Black	Corresponds to the standard range of the selected color system.
19	Color of alarm messages	Select in the list or on the **Select color** panel.	Sets the color of the alarm messages in the **Event viewer** window.	RGB, CMY or HSL.	Red	Corresponds to the standard range of the selected color system.
20	Color of info messages	Select in the list or on the **Select color** panel.	Sets the color of the information messages in the **Event viewer** window.	RGB, CMY or HSL.	Blue	Corresponds to the standard range of the selected color system.
21	Duration of blinking, sec:	Type-in the value in the field	Sets the duration of alarm message blinking in the **Event viewer** window.	seconds	Not set	More than 0
22	Font:<current font>	Click the button	Sets the font of information messages in the **Event viewer** window	Standard **Font** Windows dialog box	Depends on OS settings	-
The **Filters** tab						
23	Specify general background color	Click the button	Opens the window to select the message background color in the default filter	-	-	-
24	Specify general text color	Click the button	Opens the window to select the message text color in the default filter	-	-	-

25	Name	Specify the value in the field	Sets the filter name in the Event Viewer	Latin and Cyrillic alphabet, service digits	Filter 1, Filter 2, etc.	Depends on the number of created filters.
26	Computer	Select in the list	Sets the **Computer** object under which objects included in the filter are to be created.	Names of **Compute r** objects registered in the system	Not set	Depends on the number Computer objects in the distributed video surveillance system.
27	Type	Select in the list	Sets the types of objects to be displayed in the **Event viewer**. ***NOTE.*** *If the field is empty, the Event viewer displays all events for all objects in the system.*	Types of objects registered in the system.	Not set	Depends on the number of types of objects created in the digital distributed video surveillance system.
28	Number	Select in the list	Sets the identification number of the device. ***NOTE.*** *If the field is empty, the Event viewer displays all events for all objects of the selected type.*	Sequence of numbers	Not set	Depends on the number of created objects of the selected type in the digital distributed video surveillance system.
29	Name	Automatically	Specifes the name of the device selected in item 14.	Name of the objects of the selected type registered in the system	Name of specified system object	Depends on the number of objects of the selected type in the digital distributed video surveillance system.
30	Event	Select in the list	Specifies which event coming from selected devices is to be logged. ***NOTE.*** *If the field is empty, the Event viewer displays all events coming from specified devices.*	Names of event types for selected type of devices.	Not set	Depends on the type of object.
31	Region	Select in the list	Sets the region where the objects to log the events from are located.	Name of the region registered by the system.	Not set	Depends on the number of **Region** objects created in the digital distributed video surveillance system.
32	Color	Select in the list	Sets the messages highlight color in the Event Viewer	RGB, CMY or HSL.	White	Corresponds to the standard range of the selected color system.
33	Text color	Select in the list	Sets the messages text highlight color in the Event Viewer	RGB, CMY or HSL.	Black	Corresponds to the standard range of the selected color system.

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Operator protocol object

The settings panel of the **Operator protocol** object is shown in the figures.

The **Filters** tab

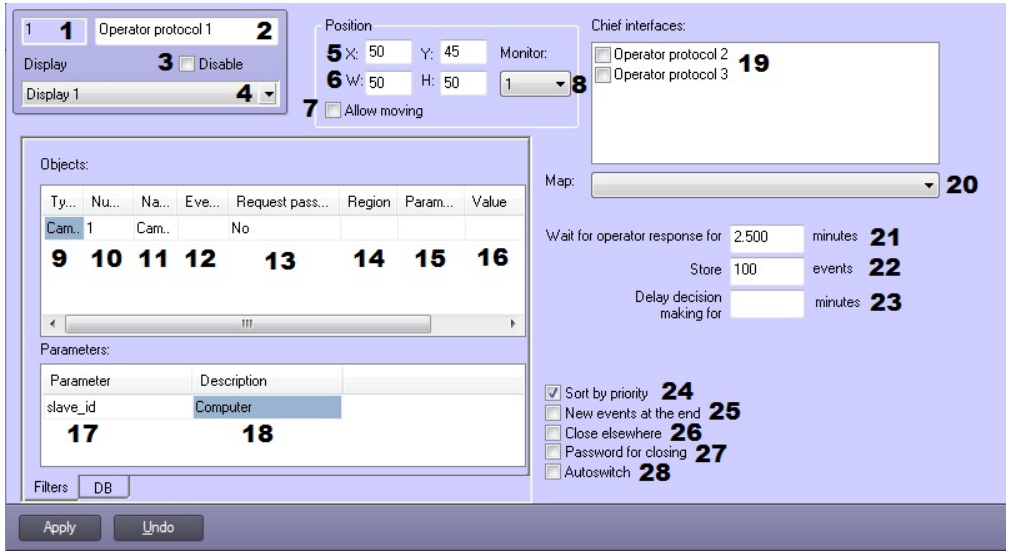

The **DB** tab

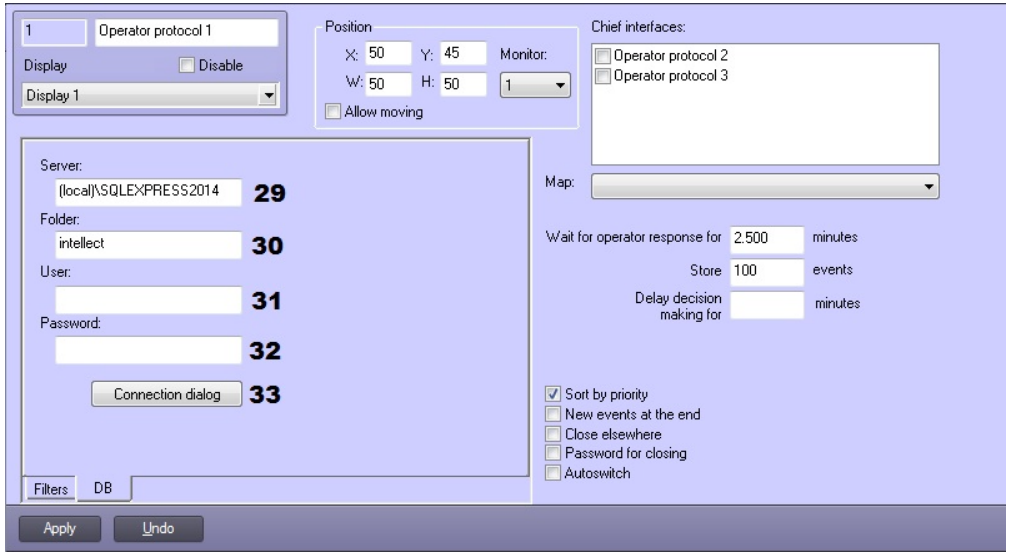

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Operator protocol**.

№	Parameter	Method for specifying the parameter	Parameter description	Symbol	Default value	Range of values
The **Filters** tab						
1	The **Identification number** field	Automatically	Shows the identification number of the **Operator protocol** object in the system	Sequence of numbers	-	Depends on the number of **Operator protocol** objects in the system
2	The **Name** field	Type-in the value in the field	Assigns the name to the **Operator protocol** object.	Latin, Cyrillic and service characters	Operator protocol	A line containing a sequence of any symbols (letters, digits, service, characters apart from > and < symbols), non case-sensitive Number of symbols – from 1 to 60.
3	The **Disable** checkbox	Chechbox is set	Shows the status (enabled or disabled) of the **Operator protocol** object in the system	Boolean type	No	**Yes** – the **Operator protocol** object is disabled and is not in use. **No** – the **Operator protocol** object is enabled and is in use.
4	The **Display** dropdown list	Is selected in the list	Assigns the parent **Display** object , to which the given Operator protocol object refers.	Name of the **Display** objects registered in the system.	Name of the parent **Display** object	Depends on the number of the **Display** objects in the system.
5	The **X** filed	Type-in the value in the field	Sets the coordinate in the X horizontal axis for the upper left corner of the **Operator protocol** interface object on the screen	% of the screen width	-	From 0 to M*100, where M is the number of monitors installed.
	The **Y** field	Type-in the value in the field	Sets the coordinate in the Y vertical axis for the upper left corner of the **Operator protocol** interface object on the screen	% of the screen height	-	From 0 to M*100, where M is the number of monitors installed.
6	The **W** filed	Type-in the value in the field	Sets the window width of the **Operator protocol** interface object	% of the screen width	-	From 0 to M*100, where M is the number of monitors installed.
	The **H** field	Type-in the value in the field	Sets the window height of the **Operator protocol** interface object	% of the screen height	-	From 0 to M*100, where M is the number of monitors installed.
7	The **Allow moving** check box	Chechbox is set	Allows hand shifting of the **Operator protocol** interface box	Boolean type	No	**Yes** – hand shifting is allowed. **No** – hand shifting is prohibited.
8	The **Monitor** dropdown list	Select in the list	Sets the system ID of the monitor for which the coordinates are set	IDs of the monitors in the OS	1	From 1 to 16
9	The **Type** drop drown list	Select in the list	Sets the type of objects which are to be displayed in the **Operator protocol** interface box	Available object types	-	Depends on the registered objects in the system. Only objects for which the INFORMATION or ALARM value is selected in the **Messages processing** column on the **Events** tab in the ddi.exe utility are available for selection (see The Events tab section).

10	The **Number** dropdrown list	Select in the list	Sets the number of object on which the events are to be displayed in the **Operator protocol** interface box	Sequence of numbers	-	Depends on the number of registered objects of the specified type
11	The **Name** dro pdrown list	Automatically	Sets the name of object on which the events are to be displayed in the **Operator protocol** interface box	Names of object s registered in the system	-	Depends on the objects registered in the system
12	The **Event typ e** dropdrown list	Select in the list	Sets events displayed in the **Operator protocol** interface box	Available events for the selected object	-	Depends on the object type
13	The **Request password** dro pdrown list	Select in the list	Defines the necessity of password to process the event	Boolean type	-	**Yes** – confirmation of the password is required to process the event; **No** – confirmation of the password is not required to process the event.
14	The **Region** dr opdrown list	Select in the list	Specifies the **Region** object corresponding to the monitored object	List of created **R egion** objects	-	Depends on the number of created **Region** objects
15	The **Paramete r** field	Type-in the value in the field	Sets the parameter of the monitored object.	Depends on the event type	-	Depends on the event type.
16	The **Value** fiel d	Type-in the value in the field	Sets the parameter value of the monitored object.	Depends on the event type	-	Depends on the event type
17	The **Paramete r** field	Type-in the value in the field	Sets the name of parameter, the value of which is to be displayed in the Operator protocol interface object	Latin, Cyrillic and service characters	-	Depends on parameters sent with event
18	The **Descripti on** field	Type-in the value in the field	Type-in the short description of the specified parameter	Latin, Cyrillic and service characters	-	-
19	The **Chief interfaces** dro pdown list	Checkbox is set	Sets the **Operator protocol** object to which the events are to be sent after the time specified in the **Wait for operator response for** field	List of available Operator protocol objects	-	Depends on the number of created **Operator protocol** objects in the system.
20	The **Map** drop down list	Select in the list	Sets the **Map** interface object to display the monitored object	List of available **Map** objects in the system	-	Depends on the number of the **Map** objects created in the system
21	The **Wait for operator response for** field	Type-in the value in the field	Sets the time after which the event type becomes **Not-processe d event** or the event is escalated	Min	2.5	0-600 Fractional values can be specified; integer and fractional parts are point-separated. For instance, to set 2 minutes 30 seconds time period specify 2.5.
22	The **Store events** field	Type-in the value in the field	Specifies the maximum events that can be displayed simultaneously in the list of current events	Sequence of numbers	100	Integer that is more than 0

23	The **Delay decision making for** field	Type-in the value in the field	Sets the time for which the operator can delay the event processing	Min	-	0-600 The value is not specified or 0 – the operator can not delay the event processing. Greater than 0 – the parameter sets the time for which the operator can delay the event processing. It is possible to specify fractional values, the separator of the integer and fractional part is a point. For example, to set a period of 2 minutes and 30 seconds 2.5 should be specified.
24	The **Sort by priority** check box	Checkbox is set	Enables sorting by priority. The descending sorting is performed in this order: Escalated, Alarm, Information and Standard (three latest event parameters can be set in the DDI file - see The Events tab).	Boolean type	Yes	**Yes** – sorting by priority is enabled. **No** – sorting by time events are received is enabled.
25	The **New events at the end** checkbox	Checkbox is set	Places new events at the end of the current events list	Boolean type	No	**Yes** – a new event is placed to the end of the list **No** – a new event is added to the beginning of the list
26	The **Close elsewhere** checkbox	Checkbox is set	Decides whether to delete the event from other Operator protocols when it is processed in one of the Operator protocol	Boolean type	No	**Yes** – when the event is processed in one of the Operator protocol, it is deleted from other Operator protocols **No** – when the event is processed in one of the Operator protocol, it stays unprocessed in other Operator protocols
27	The **Password for closing** checkbox	Checkbox is set	Defines the necessity to enter the password to process the event	Boolean type	No	**Yes** – event processing is to be confirmed with a password; **No** – password is not required for event processing.
28	The **Autoswitch** chechbox	Checkbox is set	Enables auto switch to the **Current events** tab in the **Operator protocol** window when a new event occurs.	Boolean type	-	**Yes** – auto switch is enabled **No** – auto switch is disabled
The **DB** tab						
29	The **Server:** field	Type-in the value in the field	Sets the name of DB server in which the required database is stored	Latin, Cyrillic and service characters	Name of Server used by system	-
30	The **Folder:** field	Type-in the value in the field	Sets the name of the database in which the events are to be stored	Latin, Cyrillic and service characters	Name of main database used by system	-
31	The **User:** field	Type-in the value in the field	Sets the user name for authorization in the database server	Latin, Cyrillic and service characters	-	-
32	The **Password:** field	Type-in the value in the field	Sets the password for authorization in the database server	Latin, Cyrillic and service characters	-	-

33	The **Connection dialog** button	Click the button	Opens the dialog box of database server connection	-	-	-

The Settings panel of the External window object

The **External window** object displays in the dialog box showing various applications in the pre-defined screen area. Applications in this context shall mean both applications of AxxonSoft and other manufacturers.

The settings panel of the **External window** object is shown in the figure.

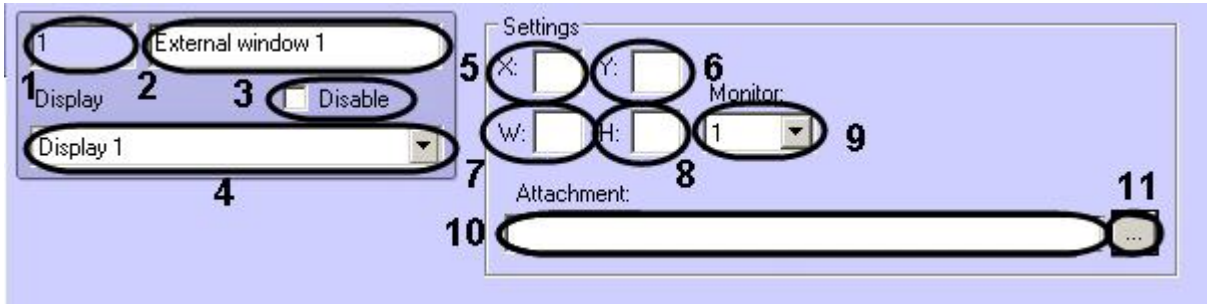

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **External window** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **External window** object.	Sequence of numbers	-	From 1 and above. Depends on the number of **External window** objects.
2	Name*	Enter the value in the field	Defines the name of the **External window** object.	Latin, Cyrillic and service characters	External window	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the status of the **External window** object (enabled or disabled).	Boolean type	Not available	**Yes** – the **External window** object is disabled and is not in use. **No** – the **External window** object is enabled and is in use.
4	Screen	Is selected from the list	Defines the parent **Display** object, to which the given **External window** object refers.	Names of the **Display** objects register-ed in the system	Name of the parent **Display** object.	Depends on the number of **Display** objects available.
Settings Group						
5	X	Enter the value in the field.	Defines the coordinate in the X horizontal axis for the upper left corner of the window of the **External window** interface object on the screen.	% of the screen width	Not defined	From 0 to M*100, where M is the number of monitors installed.

6	Y	Enter the value in the field.	Defines the coordinate in the Y vertical axis for the upper left corner of the window of the **External window** interface object on the screen.	% of the screen height	Not defined	From 0 to M*100, where M is the number of monitors installed.
7	W	Enter the value in the field.	Defines the window width of the **External window** interface object.	% of the screen width	Not defined	From 0 to M*100, where M is the number of monitors installed.
8	H	Enter the value in the field.	Defines the window height of the **External window** interface object.	% of the screen width	Not defined	From 0 to M*100, where M is the number of monitors installed.
9	Monitor	Select value from the list	Specifies the number of monitor which is in use for displaying window of external application	Number of Monitors	1	1-9
10	Application	Enter the value in the field	Defines the path to the application, which should be launched. ***Note.*** *All windows of application will be opened simultaneously if the application contains several windows.*	Latin, Cyrillic and service characters	Is not defined	A line containing a sequence of symbols (Latin and service characters, digits) not case-sensitive. Number of symbols – from 1 to 250.
11	Button «...»	Click the button	Displays standard dialog of open the file of Windows OS to specify path to application which is required to run.	-	-	-

*Name of the element is not shown in the given object settings panel.

The Settings panel of the Scene object

The settings panel of the **Scene** object is shown in the figure.

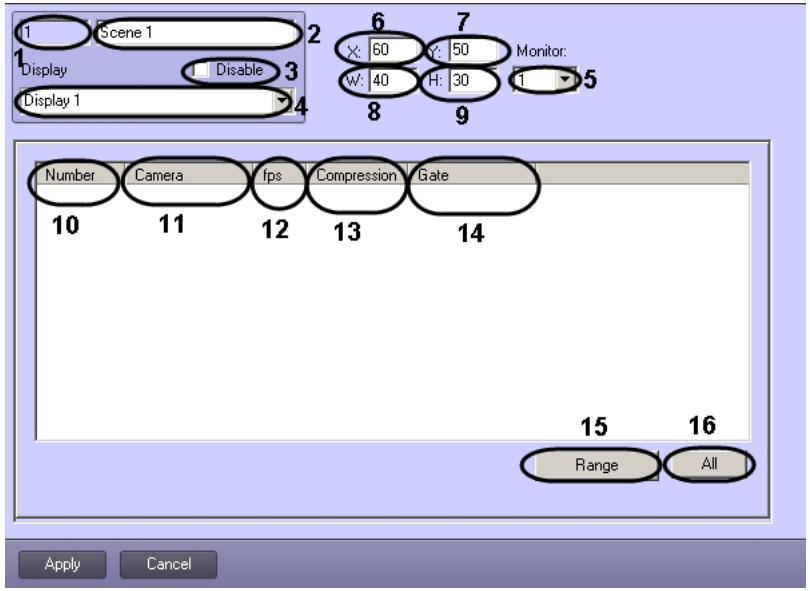

Elements of the settings panel of the **Scene** object are described in the table.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Scene** object.	Sequence of numbers	-	From 1 and above. Depends on the number of **Scene** object.
2	Name*	Enter the value in the field	Defines the name of the **Scene** object.	Latin, Cyrillic and service characters	Scene	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the status of the **Scene** object (enabled or disabled).	Boolean type	Not available	**Yes** – the **Scene** object is disabled and is not in use. **No** – the **Scene** object is enabled and is in use.
4	Screen	Is selected from the list	Defines the parent **Display** object, to which the given **Scene** object refers.	Names of the **Display** objects register-ed in the system	Name of the parent **Display** object.	Depends on the number of **Display** objects available.
5	Monitor	Is selected from the list	Is designed for video surveilance monitor selection on which the panoramic view window has to be displayed	Sequence of numbers	1	1..9
6	X	Enter the value in the field.	Defines the coordinate in the X horizontal axis for the upper left corner of the window of the **Scene** interface object on the screen.	% of the screen width.	Not defined	From 0 to 100
7	Y	Enter the value in the field.	Defines the coordinate in the Y vertical axis for the upper left corner of the window of the **Scene** interface object on the screen.	% of the screen height.	Not defined	From 0 to 100
8	W	Enter the value in the field.	Defines the window width of the **Scene** interface object.	% of the screen width.	Not defined	From 0 to 100
9	H	Enter the value in the field.	Defines the window height of the **Scene** interface object.	% of the screen width.	Not defined	From 0 to 100
10	Number	Is selected from the list	Set camera's number to be displayed	Latin, Cyrillic and service characters.	Is not defined	Depends on number of cameras registered in the system
11	Camera	Is selected from the list	Set camera's name to be displayed	Names of cameras registered in the system	-	Depends on number of cameras registered in the system
12	fps	Is selected from the list	Set fps to be transferred to the **Scene** object	Sequence of numbers	-	1, 2, 3, 4, 6, 8, 12, 16, 20, 25, 30
13	Compression	Is selected from the list	Set the video signal compression level to be transferred to the **Scene** object. With set value there is additional use of Server's resources	Sequence of numbers	-	In order of greater compression 0, 1, 2, 3, 4, 5 0 – no compression 5 – maximum compression
14	Gate	Is selected from the list	Set the **Gate** object from which the video archive and footage from the selected camera is to be received to the **Scene** object.	Names of the **Gate** objects registered in the system	-	Depends on the number of **Gate** objects registered in the system
15	Range	Click the button	Access to complex selection and editing the cameras parameters to be displayed on **Scene** object	-	-	-

16	All	Click the button	Selection of all cameras registered in the system to be displayed on the **Scene** object	-	-	-

The settings panel of the HTML Interface object

The **HTML Interface** object is designed for displaying content of web-pages and other files in the *Intellect* interface window. The settings panel of the **HTML Interface** object is shown in the figure.

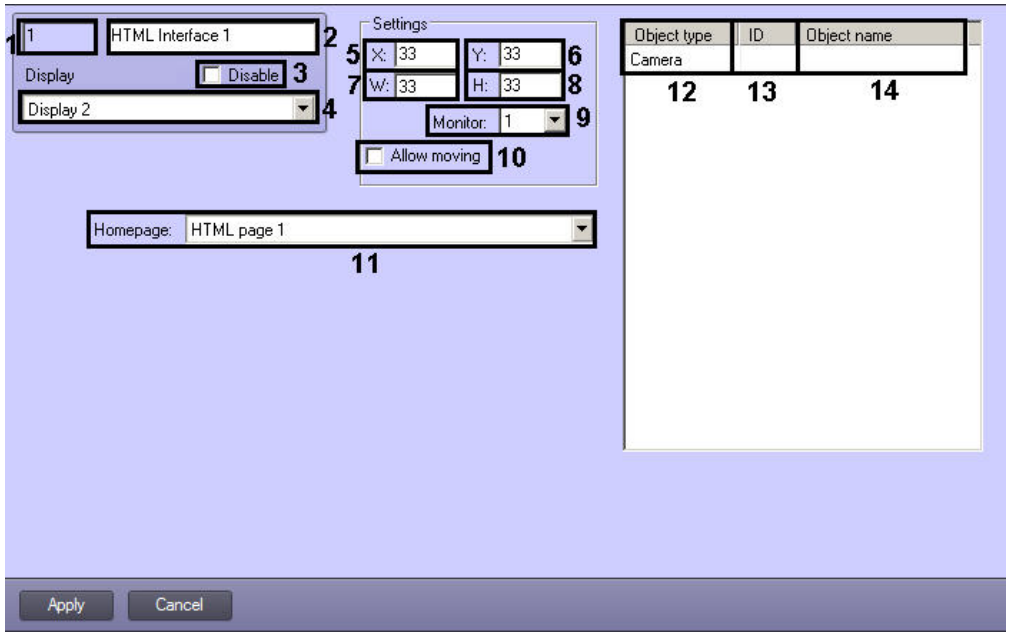

The table describes parameters of the settings corresponding to the elements of the settings panel of the **HTML Interface** object.

№	Parameter	Method for setting the parameter	Parameter description	Symbols used	Default value	Value range
1	The **Identification number** field	Automatically	Shows the identification number of the **HTML Interface** interface object in the system	Sequence of numbers	-	Depends on the number of **HTML Interface** objects in the system
2	The **Name** field	Enter the value in the field	Sets the name of the **HTML Interface** object in the system	Latin, Cyrillic letters and service characters	HTML interface	A line representing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60

3	The **Disable** c heckbox	Is set with the checkbox	Sets the status (enabled or disabled) of the **HTM L Interface** object in the system	Boolean type	No	**Yes** – the **HTML Interface** object is disabled and is not in use. **No** – the **HTML Interface** object is enabled and is in use
4	The **Display** dr op-down list	Select in the list	Sets the parent **Display** object for the given **HT ML Interface** object	Names of the **Display** obje cts registered in the system	Name of the parent **Display** object	Depends on the number of the **Display** objects in the system
			Settings group			
5	The **X** field	Enter the value in the field	Sets the "X" coordinate in the horizontal axis for the upper-left corner of the **HTML Interface** wi ndow	% of the screen width	-	From 0 to M*100, where M is the number of the computer monitor installed
6	The **Y** field	Enter the value in the field	Sets the "Y" coordinate in the vertical axis for the upper-left corner of the **HTML Interface** wi ndow	% of the screen height	-	From 0 to M*100, where M is the number of the computer monitor installed
7	The **W** field	Enter the value in the field	Sets the width of the **HTML Interface** window	% of the screen width	-	From 0 to M*100, where M is the number of the computer monitor installed
8	The **Monitor** d rop-down list	Select in the list	Sets the monitor number for displaying interface object	Sequence of numbers	1	Depends on the number of installed computer monitor.
9	The **Allow moving** check box	Is set with the checkbox	Sets possibility to change position of the **HTML Interface** object using mouse	Boolean type	No	Yes – it is possible to change position of the **HTML Interface** object using mouse. No – it is not possible to change position of the **HTML Interface** object using mouse.
10	The **H** field	Enter the value in the field	Sets the height of the **HTML Interface** window	% of the screen height	-	From 0 to M*100, where M is the number of the computer monitor installed
11	The **Homepag e** drop-down list	Select in the list	Sets start page for displaying in the **HTML Interface** window	Names of the **HTML page** objects registered in the system	-	Depends on the number of the **HTML page** objects in the system
12	**Object type** d ropdown list	Select value from the list	Sets the type of object the state of which is to be tracked using HTML interface	Types of objects created in the system	-	Depends on the objects created in the system
13	**ID** dropdown list	Select value from the list	Sets the ID of object the state of which is to be tracked using HTML interface	Natural number series	-	Depends on the objects created in the system
14	**Object name** field	Automatically	Displays the name of the object the state of which is to be tracked using HTML interface	Name of object of selected type with specified ID	-	Depends on the objects created in the system

The settings panel of the HTML page object

The HTML page object is designed for configuring web-pages displayed in the HTML Interface window. The settings panel of the HTML page object is shown in the figure.

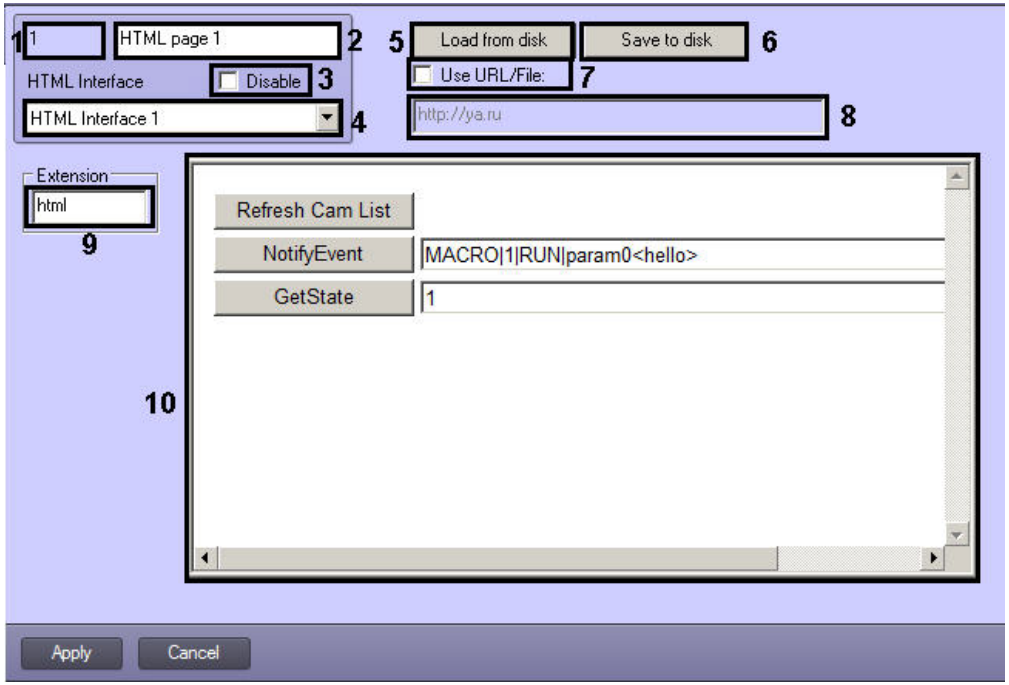

The table describes parameters of the settings corresponding to the elements of the settings panel of the **HTML page** object.

№	Parameter	Method for setting the parameter	Parameter description	Symbols used	Default value	Value range
1	The **Identification number** field	Automatically	Shows the identification number of the **HTML page** interface object in the system	Sequence of numbers	-	Depends on the number of **HTML page** objects in the system
2	The **Name** field	Enter the value in the field	Sets the name of the **HTML page** object in the system	Latin, Cyrillic letters and service characters	HTML page	A line representing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive Number of symbols – from 1 to 60
3	The **Disable** checkbox	Is set with the checkbox	Sets the status (enabled or disabled) of the **HTML page** object in the system	Boolean type	No	**Yes** – the **HTML page** object is disabled and is not in use. **No** – the **HTML page** object is enabled and is in use
4	The **HTML Interface** drop-down list	Select in the list	Sets the parent **HTML Interface** object for the given **HTML page** object	Name of the **HTML Interface** objects registered in the system	Name of the **HTML Interface** parent object	Depends on the number of the **HTML Interface** objects in the system

5	The **Load from disk** button	Click the button	Opens standard dialog of file opening to load file of web-page or some other type from disk.	-	-	-
6	The **Save to disk** button	Click the button	Opens standard dialog of file opening to save file of web-page or some other type to disk.	-	-	-
7	The **Use URL/File** checkbox	Is set with the checkbox	Enables or disables loading of web-page or file of other type by URL	Boolean type	No	Yes – the specified URL is opened while addressing to the HTML page No – the saved file of the HTML page is opened while addressing to the HTML page (see Link to the HTML page object).
8	The **Use URL/File** field	Enter the value in the field	The field is designed for specifying link to web-page or file which will be opened at addressing to the configured HTML page	Link in URL format	-	Number of symbols is not limited
9	The **Extension** field	Is filled in automatically	Display extension of the opened file	Extension of files supported by the Internet Explorer browser	html	From 0 to 16 symbols
10	Preview window	Is filled in automatically	Preview of web-page or file	-	-	-

The Programming tab

The Settings panel of the Security zone object

The **Security zone** panel is designed to define the common settings of the Intellect™ system. The settings panel of the **Security zone** object is shown in the figure.

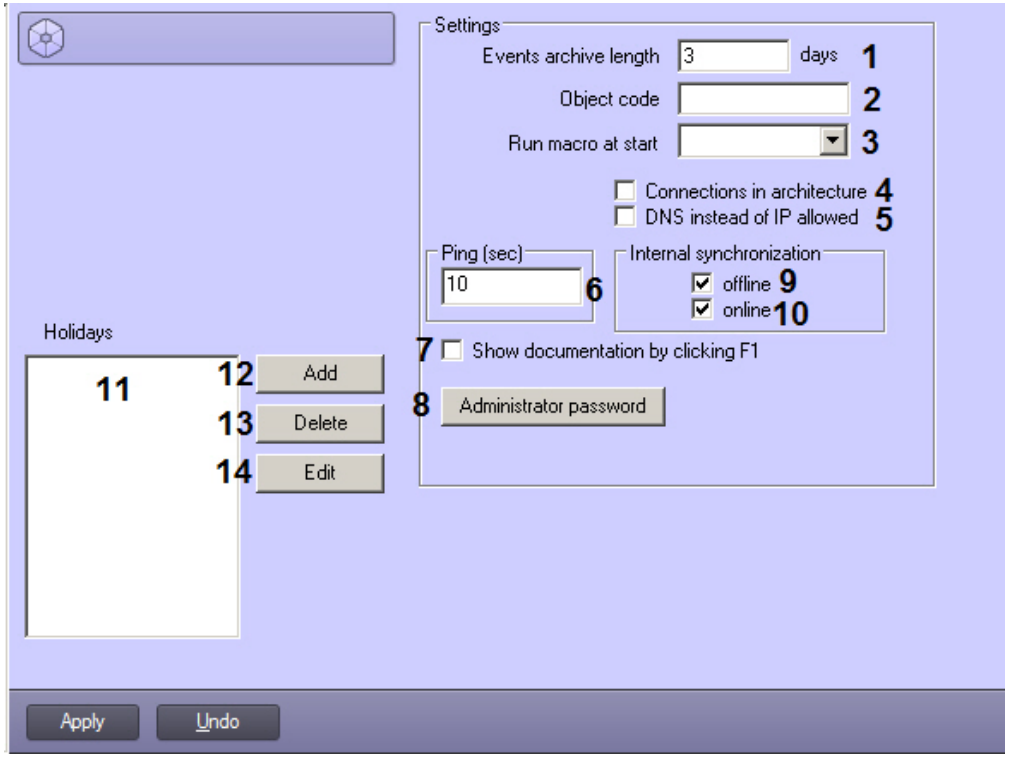

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Security zone** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
The **Settings** group						
1	Event database length	Type-in the value in the field	Sets the number of days for keeping the information about the events registered by the Intellect™ system and recorded in the Event log. This parameter influences on all computers in the distributed system.	Days	3	Not less than 0
2	Object code	Type-in the value in the field	Defines the number of the access control card, which is automatically displayed in the User settings panel, when the object is being created in the Facility code field.	Sequence of numbers	Not defined	More than 1

3	Run macro at start	Is selected from the list	Defines the macro command, which will be automatically launched with the Intellect™ system startup.	Names of the Macro command objects registered in the system	Not defined	Depends on the number of **Macro** command objects created in the digital distributed video surveillance system.
4	Connections in the architecture	Is identified by the check mark	Specifies computers with which the created **Computer** object is to exchange system configuration parameters data: with all computers in the video surveillance system with distributed architecture or only with the **Computer** object under which the object was created.	Boolean type	Not available	**Yes** – when creating a new computer the **Connection** checkbo xes in the **Architecture** tab are set checked for all computers in the architecture. **No** – when creating a new computer the **Connection** checkbo x in the **Architecture** tab is set checked only for the computer on which this new object is created.
5	DNS instead of IP allowed	Checkbox	Enables setting address of Server/Remote Administrator's workplace/Remote Client in the **Architecture** tab as DNS name - not only IP address.	Boolean type	No	**Yes** – DNS name (instead of IP address) of Server/Remote Administrator's workplace/Remote Client can be specified in the **Architecture** tab when configuring computer interoperability in distributed system. Validation of the specified address is disabled. **No** – IP address of Server/Remote Administrator's workplace/Remote Client is to be specified in the **Architecture** tab when configuring computer interoperability in distributed system.
6	Ping (sec.)	Type-in the value in the field	Sets Server-computer ping period.	Non-negative integer number	10	>=0
7	Show documentation by clicking F1	Set the checkbox	Enables opening documentation in the pdf format by clicking F1, when *Intellect* is started. Administrator's Guide is opened on the Server and Remote Administrator's workplace; Operator's Guide is opened on the Remote Client.	Boolean type	No	**Yes** – documentation is shown by clicking F1. **No** – feature of showing documentation by clicking F1 is disabled.
8	Administrator's password	Click the button	Gives a command to open a dialog box for assigning the Administrator's password.	-	-	-
The **Internal synchronization** group						
9	offline	Checkbox	Enables offline synchronization of events	Boolean type	Yes	**Yes** – offline synchronization is enabled. When the computer is reconnected, it gets all the events for the period there was no connection. **No** – offline synchronization is disabled. When the computer is reconnected, it does not get the events for the period there was no connection.
10	online	Checkbox	Enables online synchronization of events	Boolean type	Yes	**Yes** – online synchronization is enabled. Events are sent right after they happen according to computer interaction configuration parameters. **No** – online synchronization is disabled. Events are not sent.
Holidays group						
11	Date*	-	List of calendar days which will be defined as holidays in the *Intellect* soft ware	Date	Not specified	Date format:: DD-MM-YY

12	Add	Click the button	Opens the **Calendar** dialog box to set the date of new holiday	-	-	-
13	Delete	Click the button	Deletes the selected holiday date from the **Date** list	-	-	-
14	Change	Click the button	Opens the **Calendar** dialog box to change the selected holiday date in the list	-	-	-

*The name of the element is not displayed in the settings panel of the given object.

The Settings panel of the Macro object

The **Macro** object is designed to support automatic execution of a pre-defined sequence of commands upon occurrence of certain events, registered by the Intellect™ system. The settings panel of the **Macro** object is shown in the figure.

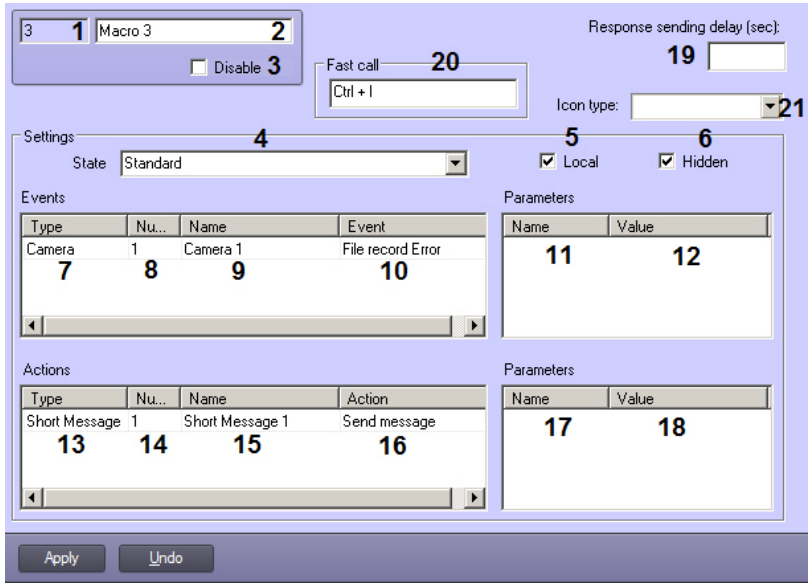

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Macro** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Macro** command object in the video surveillance system.	Sequence of numbers	-	Depends on the number of **Macro** comm and objects in the digital distributed video surveillance system.

2	Name*	Enter the value in the field	Defines the **Macro** command object name.	Latin, Cyrillic and service characters	Macro	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the **Macro** command object status (enabled or disabled).	Boolean type	Not available	**Yes** – the **Macro** command object is disabled and is not in use **No** – the **macro** command object is enabled and is in use.
			Settings Group			
4	State	Enter the value in the field	Defines the message displayed in the information board of the main menu of the Intellect system, when the given macro command is running.	Latin, Cyrillic and service characters	Not defined	1. **Standard** – no message will be displayed in the information board of the main menu of the Intellect system. 2. A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 60.
5	Local	Is identified by the check mark	Defines the computers, which will execute the given macro command (all computers of the digital distributed video surveillance system or only the given computer).	Boolean type	Not available	**Yes** – the given macro command will be executed by all computers of the digital distributed video surveillance system. **No** – the macro command will be executed only by the given computer.
6	Hidden	Is identified by the check mark	Defines, whether or not this macro command will be displayed in the main control panel of the Intellect system to be launched manually.	Boolean type	Not available	**Yes** – no macro command will be displayed in the main control panel of the Intellect system. **No** – the macro command will be displayed in the main control panel of the Intellect system.
			Events Subgroup			
7	Type	Is selected from the list	Defines the type of objects in the digital distributed video surveillance system, in which registration of events initiates macro command execution.	Types of objects registered in the system.	Empty field	Depends on the total number of types of objects created in the digital distributed video surveillance system.
8	Number	Is selected from the list	Defines the identification number of the object in the digital distributed video surveillance system, in which registration of events initiates macro command execution.	Sequence of numbers	Empty field	Depends on the total number of the given types of objects created in the digital distributed video surveillance system.
9	Name	Automatically	Displays the name of the selected object in the digital distributed video surveillance system.	Name of the objects of the same type registered in the system	Empty field	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 60.

10	Event	Is selected from the list	Defines the event, which, when registered for the pre-defined object, initiated macro command execution.	Events registered for the given type of objects.	Empty field	List of events is created separately for each type of object.
Parameters Subgroup ***NOTE.*** *The given subgroup is not active for some types of objects.*						
11	Name	Automatically	Defines an additional parameter for the selected type of object in the **Events** subg roup.	Latin, service characters and digits.	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 60.
12	Value	Enter the value in the field	Defines the value for the parameter of the **Name** column.	Latin, service characters and digits.	Empty field	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 250.
Action Subgroup						
13	Type	Is selected from the list	Defines the type of objects in the digital distributed video surveillance system, to which the command is forwarded, when the conditions defined in the **Events** subg roup for macro command initiation are met.	Types of objects registered in the system.	Empty field	Depends on the total number of types of objects created in the digital distributed video surveillance system.
14	Number	Is selected from the list	Defines the identification number of the object in the digital distributed video surveillance system, to which the command is forwarded, when the conditions defined in the **Events** subgroup for macro command initiation are met.	Sequence of numbers	Empty field	Depends on the total number of the given types of objects created in the digital distributed video surveillance system.
15	Name	Automatically	Displays the name of the selected object in the digital distributed video surveillance system.	Name of the objects of the same type registered in the system	Empty field	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 60.
16	Action	Is selected from the list	Defines the action, which the given device performs, when the conditions for the given macro command initiation are met.	Actions, registered by the system for the given type of objects.	Empty field	List of events is created separately for each type of object.
Parameters Subgroup ***NOTE.*** *The given subgroup is not active for all types of objects.*						
17	Name	Automatically	Defines an additional parameter for the selected type of object in the **Actions** sub group.	Latin, service characters and digits.	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 60.
18	Value	Enter the value in the field	Defines the value for the parameter of the Name column.	Latin, service characters and digits.	Empty field	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols – from 1 to 250.
Outside the groups						

19	Response sending delay (sec.)	Enter the value in the field	Sets time period (in seconds) that must pass after events specified in the **Events** column occur and before executing reactions specified in the **Actions** column. ***Note.*** *If the events reoccur before the specified time period expires, the reaction execution wait period is prolonged, i.e. reactions will be executed only once when events do not reoccur over the specified period.*	Integer number	-	>0
20	Fast call	Left-click in the field and click the required key combination	Sets a shortcut for a macro. ***Note****. When creating macros with the same combination of hot keys, the behavior is not defined: when clicking a key combination, one of these macros will work, but not both.*	Key combinations	No	Some keys of the main or numeric keyboard, as well as these keys in combination with Shift, Ctrl and Alt.
21	The **Icon type** dropdown list	Select in the dropdown list.	Sets a set of icons for displaying a macro on the map. *Note. Changing the icon appearance will take effect after restarting the map interface. To restart the interface, restart Intellect or log in once again under the corresponding Operator account.*	Available icon appearances on the map	-	Macro 1 - Macro 7, empty value.

*The name of the element is not displayed in the **User's rights** settings panel object.

The Settings panel of the Program object

The **Program** object creates specialized programs in the embedded environment of the INTELLECT™ software. The settings panel of the **Program** object is shown in the figure.

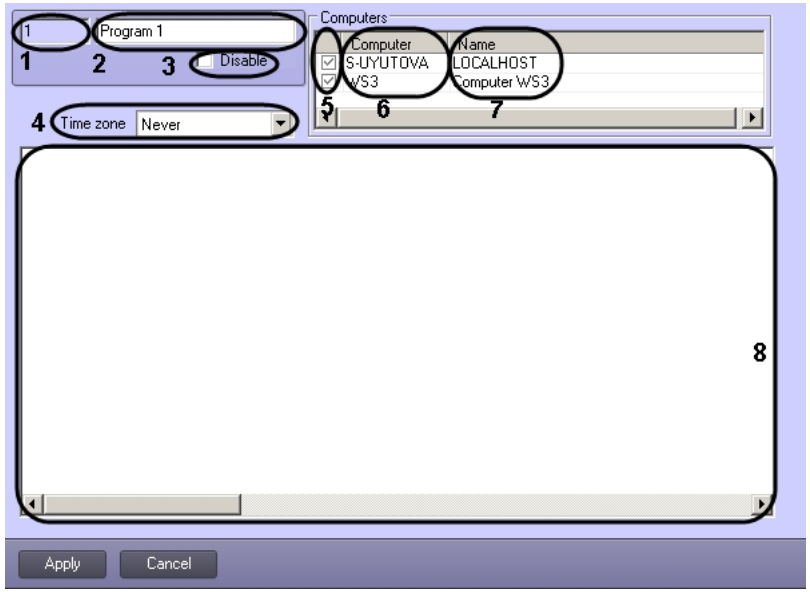

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Program** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range

1	Identification number*	Automatically	Displays the identification number of the **Program** object in the video surveillance system.	Sequence of numbers	-	Depends on the number of **Program** objects in the digital distributed video surveillance system.
2	Name*	Enter the value in the field	Defines the **Program** object name.	Latin, Cyrillic and service characters	Program	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive. Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Defines the status of the Program object (enabled or disabled).	Boolean type	Not available	**Yes** – the **Program** object is disabled and is not in use **No** – the **Program** object is enabled and is in use.
4	Time zone	Is selected from the list	Defines the time period during which the given program will operate.	Time zone registered by the system	Never	**Never** – this program will never be executed. **Always** – this program is always in the state of execution. List of created time zones – the program will be executed within a pre-defined time period.
Computers Group						
5	Select an element*	Is identified by the check mark	Defines the computer for the execution of the given program.	Boolean type	Not available	**Yes** – the program will be executed by the pre-defined computer. **No** – the program will not be executed by the computer.
6	Computer	Automatically	Defines the computer name in the local network.	Computer name in the local network.	Computer name in the local network.	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols - 60.
7	Name	Automatically	Defines the computer name	Name of the Computer object registered in the system	Name of the Computer object registered in the system	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Number of symbols - 60.
Out of the groups						
8	Text editor*	Enter the value in the field	Is used to enter the text of the executed program.	Latin, Cyrillic, service chara-cters and digits.	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive. Unlimited number of symbols.

*The name of the element is not displayed in the User's rights settings panel object.

The Settings panel of the Time zone object

The **Time zone** object defines the time parameters in the Intellect™ system for any actions, which are to be initiated within certain periods of time. The settings panel of the **Time zone** object is shown in the figure.

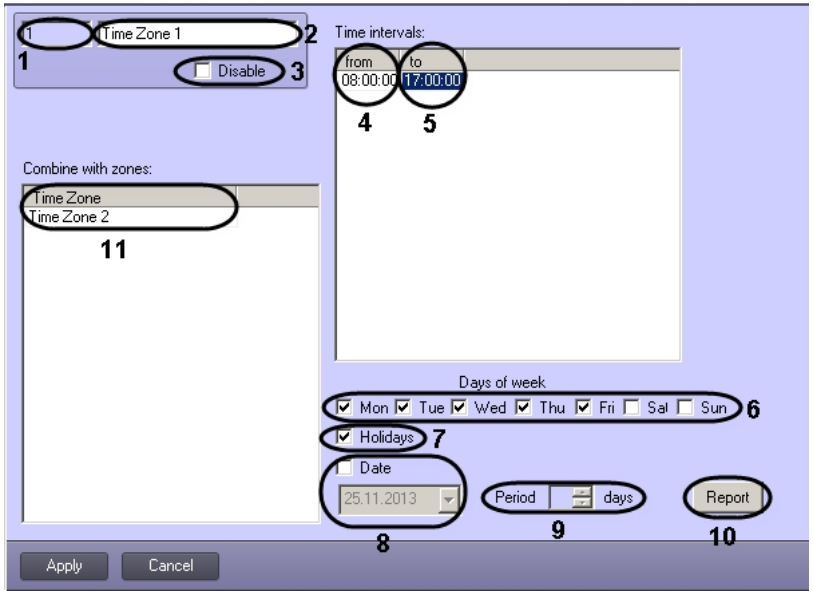

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Time zone** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Displays the identification number of the **Time Zone** object.	Sequence of numbers	-	Depends on the number of the **Time Zone** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Sets the **Time Zone** object name.	Latin, Cyrillic and service characters	Time Zone	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive. Number of symbols – from 1 to 60.
3	Disable	Checkbox	Sets the state (enabled or disabled) of the **Time Zone** object in the digital distributed video surveillance system.	Boolean type	No	**Yes** – the **Time Zone** object is disabled and is not in use. **No** – the **Time Zone** object is enabled and is in use.
The **Settings** group						
The **Time intervals** subgroup						
4	From	Enter the value in the field	Sets the initial point of the time interval.	Sequence of numbers	Not set	Time interval entry format: HH:MM
5	To	Enter the value in the field	Sets the end point of the time interval.	Sequence of numbers	Not set	Time interval entry format: HH:MM
Out of the subgroup						

6	Days of week	Checkbox ***NOTE.*** *Is not active, if the Days field is checked (item 8).*	Sets the days of the week, when the given time zone is active.	Boolean type	No	**Yes** – the time zone is active on the selected day. **No** – the time zone is not active on the selected day.
7	Holidays	Checkbox ***NOTE.*** *Is not active, if the Days field is checked (item 8).*	Gives a command to use the given time zone on holidays.	Boolean type	No	**Yes** – the given time zone is to be used on holidays. **No** – the given time zone is not to be used on holidays.
8	Days*	Checkbox	Defines, whether the given time zone should be used permanently or only within a pre-defined period of time.	Boolean type	No	**Yes** – the given time zone should be used within a pre-defined period of time. **No** – the given time zone should always be used.
	Date	Enter the value in the field	Sets the initial point, from which the use of the given time zone is to start.	Sequence of numbers	Not active	Data entry format: DD:MM:YY
9	Period	Select in the list	Specifies periodicity in days of N triggering of time zone starting from the specified date (i.e. time zone triggers each N day).	Sequence of numbers	Empty field	From 0 to 999999999999999
10	Report	Button	Displays the box with time-zones activity table	-	-	-
11	Time Zone	Select in the list	Sets the time zone that is to be combined with the given time zone	The names of the **Time Zone** objects registered in the system	-	Depends on the number of the **Time Zone** objects registered in the system

* The name of the element is not displayed in the settings panel of the object.

The Settings panel of the Script object

The **Script** object is designed to create specialized programs in JScript language. The settings panel of the **Script** is shown in the figure.

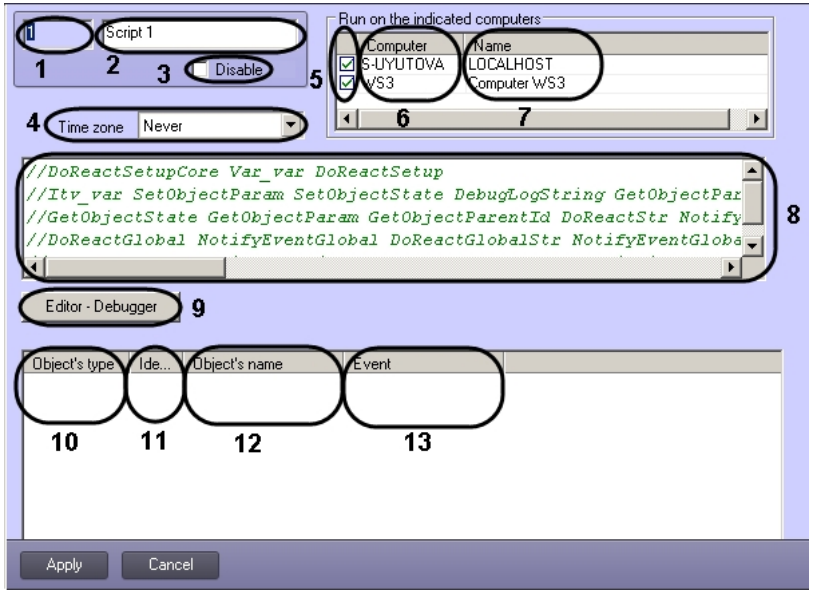

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Script** object.

Table 11.2—47

№	Parameter	Method for entering the parameter	Parameter description	Symbols used	Default value	Value range
1	Identification number*	Automatically	Shows the identification number of the **Script** object in the digital video surveillance system.	Sequence of numbers	-	Depends on the number of **Script** objects in the digital distributed video surveillance system
2	Name*	Specify the value in the field	Assigns the name to the **Script** object.	Latin, Cyrillic and service characters	Script	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive Number of symbols – from 1 to 60.
3	Disable	Checkbox is set	Sets the state (enabled or disabled) of the **Scri pt** object in the digital distributed video surveillance system.	Boolean type	Not available	**Yes** – the **Script** object is disabled and is not in use **No** – the **Script** object is enabled and is in use.
4	Time zone	Select in the list	Specifies the time period for the operation of the given program.	Time zone name registered in the system.	Never	**Never** – the program will never be executed. **Always** – the program is always executed. List of created time zones – the programs are executed during the time period as defined by the time zone.
The **Computers** group						

5	Select element*	Checkbox is set	Assigns the computer for the execution of the given script.	Boolean type	No	**Yes** – the script is executed on the computer. **No** – the script is not executed on the computer.
6	Computer	Automatically	Specifies the computer name in the local network	Computer name in the local network.	Computer name in the local network.	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive Number of symbols - 60.
7	Name	Automatically	Specifies the name of the computer in the digital distributed video surveillance system.	Name of the **Computer** object registered in the system.	Name of the **Computer** object registered in the system.	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive Number of symbols - 60.
No group						
8	Text editor*	Specify the value in the field	Specifies the text of the executed script.	Latin, Cyrillic and service characters	Not set	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive Unlimited number of symbols.
9	Editor - Debugger	Press the button	Gives a command to open a debugging window of the script.	-	-	-
10	Object's type	Select in the list	Sets the type of the object on receiving event from which the script is executed	Types of objects registered in the system	-	Depends on the number of the objects registered in the system
11	Identifier	Select in the list	Sets the identifier of the object on receiving event from which the script is executed	Identifiers of the objects of the selected type registered in the system	-	Depends on the number of the objects of the selected type registered in the system
12	Object's name	Automatically	Sets the name of the object on receiving event from which the script is executed	The name of the object of the selected type with the selected identifier	-	Depends on user's entering
13	Event	Specify the value in the field	Sets the event on receiving which the script is executed	Events supported by the object	-	Depends on events supported by the object. The name of the event is to be specified in upper case.

*The name of the element is not displayed in the settings panel of this object.

The Settings panel of the Region object

The **Region** object is designed to create zones, which break down secured areas into structural elements. The **Region** objects allow:

1. group hardware based on the attributes of a certain region;
2. execute certain operations concurrently with all objects of the same type belonging to the same region.

The settings panel of the **Region** object is shown in the figure.

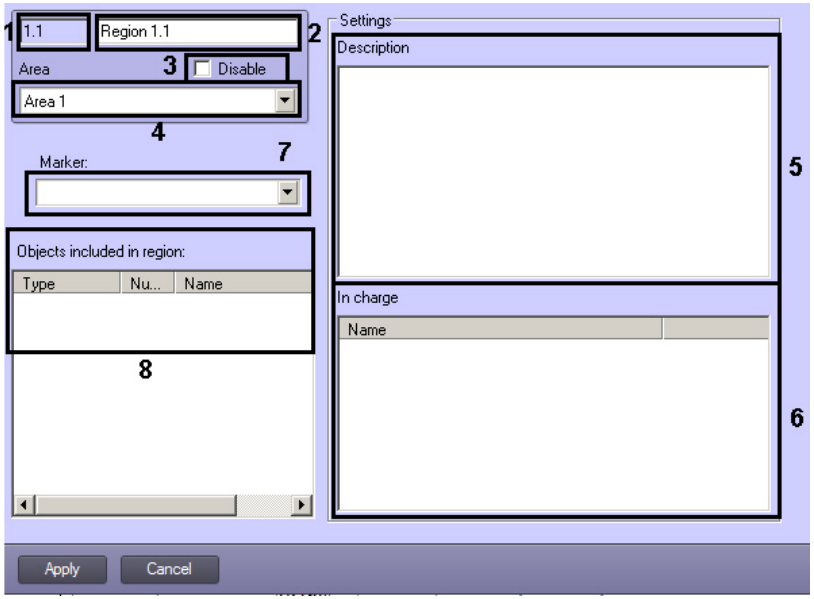

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Region** object.

№	Parameter	Method for entering the parameter	Parameter description	Sym-bols used	Default value	Value range
1	Identification number*	Automatically	Shows the identification number of the **Region** objec t in the digital video surveillance system.	Sequ-ence of numb-ers	-	Depends on the number of **Region** objects in the digital distributed video surveillance system
2	Name*	Enter the value in the field	Assigns the name to the **Region** object.	Latin, Cyrill-ic and servi-ce chara-cters	Region	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), case-insensitive Number of symbols – from 1 to 60.
3	Disable	Is identified by the check mark	Shows the status (enabled or disabled) of the **Regio n** object in the digital distributed video surveillance system.	Bool-ean type	Not available	**Yes** – the **Region** object is disabled and is not in use. **No** – the **Region** object is enabled and is in use.
4	Area	Is selected from the list	Assigns the parent **Area** object, to which the given **R egion** object refers.	Name of the Area object-s regist-ered in the system.	Name of the parent **Area** o bject	Depends on the number of **Area** objects in the digital system.
Settings Group						
5	Description	Enter the value in the field	Defines the description of the given region.	Latin, Cyrill-ic and servi-ce chara-cters	Not defined	A line containing a sequence of any symbols (letters, digits, service characters), case-insensitive Number of symbols – from 1 to 60.

6	Description	Is selected from the list	Defines the users registered by the system, responsible for the given region.	Latin, Cyrill-ic and servi-ce chara-cters	Not defined	Depends on the number of users registered by the system.
7	Marker	Select from the list	Specifies the set of signs which will be in use while displaying region on the interactive map	Available set of signs specified by means of the ddi.exe utility	Not specified	Depends on the number of available sets of signs
8	Objects included into region	Automatically	Displays the list of objects related to this region	Type, number and name of objects included into region	Not specified	Depends on the number of the objects related to this region

*The name of the element is not displayed in the settings panel of the given object

The Settings panel of the Rule of states transition object

The settings panel of the **Rule of states transition** object is shown in the figure.

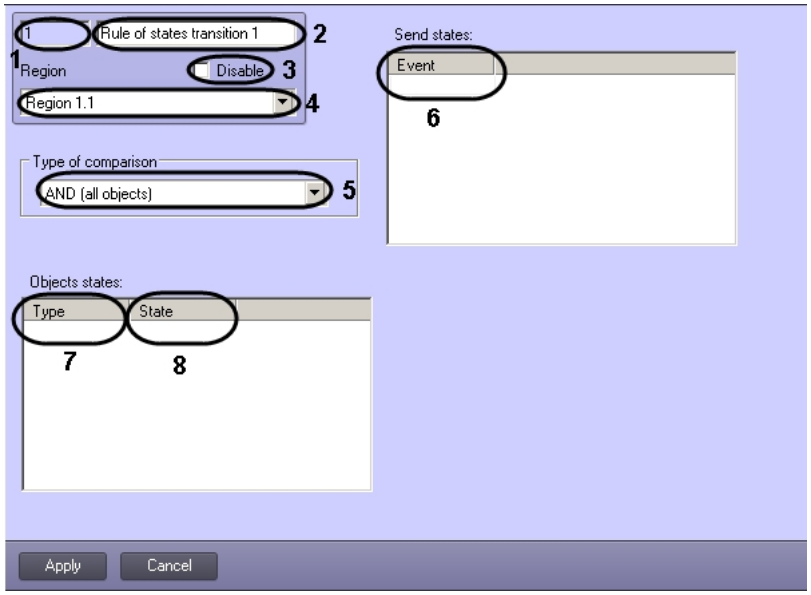

The table describes the parameters of the settings corresponding to the elements of the settings panel of the **Rule of states transition** object.

№	Parameter	Method for entering the parameter	Parameter description	Symbol used	Default value	Value range
1	The **Identification number** field	Automatically	Shows the identification number of the **Rule of states transition** object in the digital video surveillance system	Sequence of numbers	-	Depends on the number of **Rule of states transition** objects in the digital video surveillance system

2	The **Name** field	Type-in the value in the field	Assigns the name to the **Rule of states transition** object.	Latin, Cyrillic and service characters	Rule of states transition	A line containing a sequence of any symbols (letters, digits, service, characters apart from > and < symbols), case-insensitive Number of symbols – from 1 to 60.
3	The **Disable** checkbox	Checkbox	Shows the status (enabled or disabled) of the **Rule of states transition** object in the digital video surveillance system	Boolean type	No	**Yes** – the **Rule of states transition** object is disabled and is not in use. **No** – the **Rule of states transition** object is enabled and is in use.
4	The **Region** drop-down list	Is selected in the list	Assigns the Region parent object to which the **Rule of states transition** object relates	Name of the **Region** objects registered in the system	Name of the **Region** parent object	Depends on the number of **Region** objects registered in the digital system
The **Type of comparison** group						
5	The **Type of comparison** drop-down list	Is selected in the list	Sets the limitation of **Rule of states transition**	List of limitations	AND (all objects)	**AND** (all objects) - rule activates if all objects of selected types pass into the specified states **OR** (at least one object) - rule activates if at least one object passes into the one specified state
The **Send states**: group						
6	The **Event** drop-down list	Is selected in the list	Assigns the event generated by the **Region** object when the rule condition is met	List of events which the **Region** object can generate	-	Alarm end, Armed, Alarm accepted, Alarm in zone, Disarmed
The **Objects' state**: group						
7	The **Type** drop-down list	Is selected in the list	Assigns the type of objects needed for forming the rule of states transition	List of available types	-	Relay, sensor, camera
8	The **State** drop-down list	Is selected in the list	Assigns the state of objects of specified type when it is needed to change the **Region** state	List of states which objects of specified type can take	-	Depends on the selected object type

The Settings panel of the Macro event object

The **Macro event** object is designed for creating events in case of occurrence the chain of events in the specified time period. Settings panel of the **Macro event** object is presented in the figure.

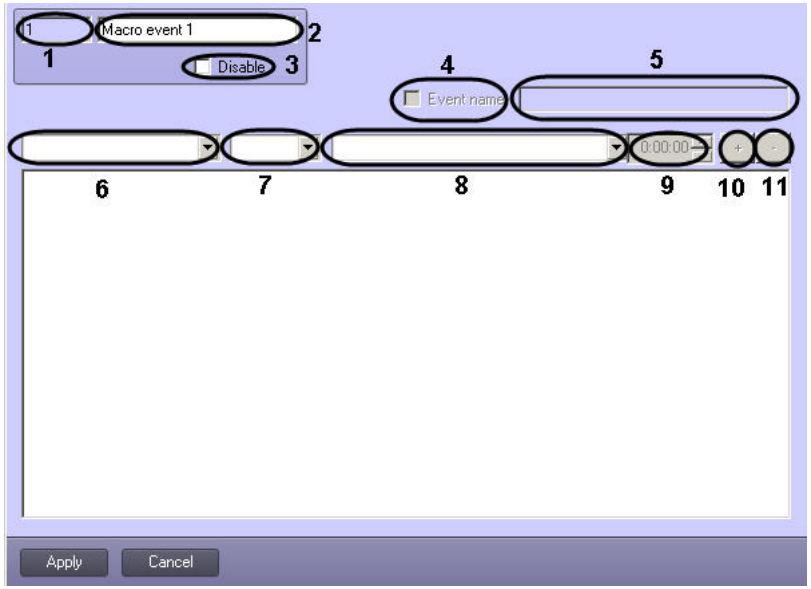

Description of settings parameters corresponding to the elements of **Macro event** object's settings panel is presented in the table.

№	Parameter	How to enter the parameter	Parameter description	Symbols used	Default value	Value range
1	**Identification number*** field	Automatically	Displays the identification number of the **Macro event** object	Sequence of numbers	-	Depends on the number of **Macro event** objects in the digital distributed video surveillance system
2	**Name*** field	Enter the value in the field	Defines the name of the **Macro event** object	Latin, Cyrillic and service characters	Macro event	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	**Disable** check box	Is set with a checkbox	Defines the condition of the **Macro event** object (enabled or disabled) in the digital distributed video surveillance system	Boolean type	No	Yes – the **Macro event** object is disabled and is not in use. No – the **Macro event** object is enabled and is in use.
4	**Event name** c heckbox	Is set with a checkbox	The checkbox defines whether the macro event is generated while the occurrence of the chained events or by expiration the time-out of waiting the event.	Boolean type	No	Yes – event is generated. No – event is not generated.
5	**Event name** fi eld	Enter the value in the field	Defines the name of macro event which is transmitted in the param0 parameter.	Latin, Cyrillic and service characters		A line containing a sequence of any symbols (letters, digits, service characters), not case-sensitive Not more than 120 symbols.
6	**Object type*** drop-down list	Enter the value in the field	Defines the objects type, events from which are to be controlled.	Object types created in the system	-	Depends on objects created in the system

7	**Number*** drop-down list	Select from the list	Sets the number of objects of selected type, event from which are to be controlled.	Identifiers of objects of selected type registered in the system	-	Depends on number of objects of selected type
8	**Event type*** drop-down list	Select from the list	Sets the event type of selected object which is to be controlled	List of events available for the object of selected type	-	Depends on the selected object type
9	**Time-out*** field	Enter the value in the field	Sets the time-out of waiting for occurrence the event of selected type.	HH:MM:SS	-	Time in HH:MM:SS format
10	**+** button	Click the button	Adds event to the chain	-	-	-
11	**-** button	Click the button	Removes event from the chain with all underneath events in the chain.	-	-	-

*Name of the element is not displayed on the object's settings panel.

The Users tab

The Users tab components

There are the following elements on the **Users** tab:

1. The tree of departments and users in them. The settings panels of the **User** and **Department** objects contain parameters used when configuring *ACFA Intellect* – that is why only the main settings are described in this document.
2. The list of user rights.

The Settings panel of the Department object

The settings panel of the **Department** object is shown in the figure.

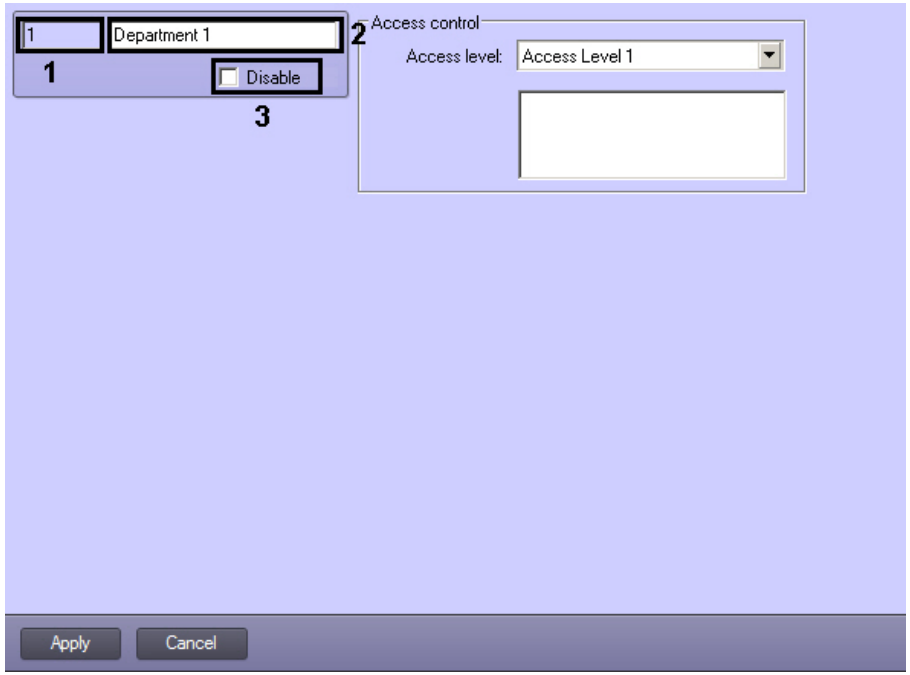

Basic elements of the settings panel of the **Department** object are described in the table.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	The **ID** field	Automatically	Displays the identification number of the **Department** object	Sequence of numbers	-	Depends on the number of the **Department** objects in the system
2	The **Name** field	Enter the value in the field	Sets the name of the **Department** object	Latin, Cyrillic and service characters	Department	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	The **Disable** chackbox	Set the checkbox	Defines the status of the **Department** object (enabled or disabled)	Boolean type	No	Yes – the **Department** object is disabled and is not in use. No – the **Department** object is enabled and is in use.

The Settings panel of the User object

The settings panel of the **User** object is shown in the figure.

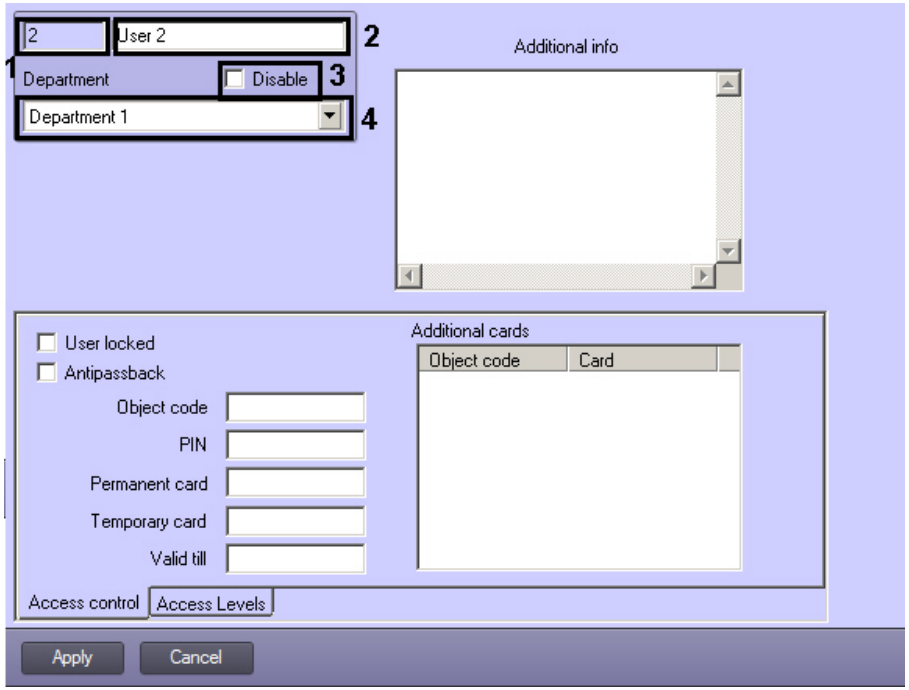

Basic elements of the settings panel of the **User** object are described in the table.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	The **ID** field	Automatically	Displays the identification number of the **User** object in the system	Sequence of numbers	-	Depends on the number of the **User** objects in the system
2	The **Name** field	Enter the value in the field	Sets the name of the **User** object in the system	Latin, Cyrillic and service characters	**User**	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60. Do not use **rs** as username when registering Operator accounts as this name is used by default in *Intellect Web Report System*.
3	The **Disable** checkbox	Set the checkbox	Defines the status of the **User** object (enabled or disabled) in the system	Boolean type	No	Yes – the **User** object is disabled and is not in use. No – the **User** object is enabled and is in use.
4	The **Department** drop-down list	Select the value in the list	Defines the **Department** parent object for **User** object	The names of the **Department** objects registered in the system	The name of the **Department** parent object	Depends on the number of the **Department** objects in the system

The Settings panel of the User permissions object

The settings panel of the **User permissions** object is shown in the figure.

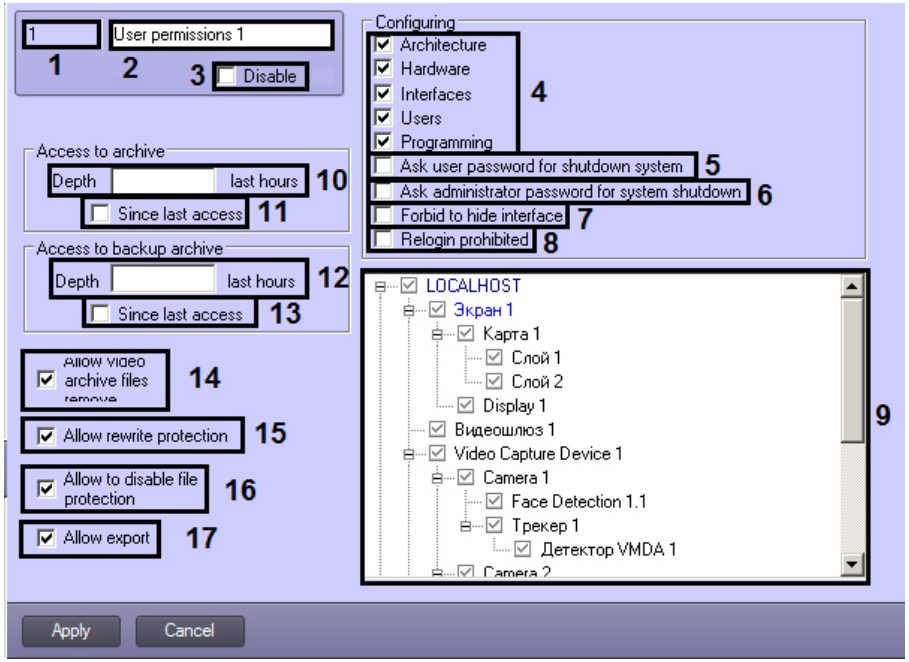

Elements of the settings panel of the **User permissions** object are described in the table.

№	Parameter	Method for setting the parameter value	Parameter description	Symbols used	Default value	Value range
1	The **ID** field*	Automatically	Displays the identification number of the **User permissions** object in the system	Sequence of numbers	-	Depends on the number of the **User permissions** objects in the system.
2	The **Name** field*	Enter the value in the field	Sets the name of the **User permissions** obj ect in the system	Latin, Cyrillic and service characters	User permissions	A line containing a sequence of any symbols (letters, digits, service characters apart from > and < symbols), not case-sensitive. Number of symbols – from 1 to 60.
3	The **Disable** checkbox	Set the checkbox	Defines the status of the **User permissions** object (enabled or disabled) in the system	Boolean type	No	Yes – the **User permissions** object is disabled and is not in use. No – the **User permissions** object is enabled and is in use.
The **Configuring** group						

4	The group of **Tabs*** checkboxes	Set the checkbox	Specifies the tabs of the System settings dialog box that can be accessed when the User gets the corresponding rights	Boolean type	All checkboxes are set unchecked	The following values are available for each tab: **Yes** – User is allowed to manage the objects in the tab. **No** – access to the tab is forbidden.
5	The **Ask user password for shutdown system** checkbox	Set the checkbox	Allows shutting down Intellect using the password of the authorized User	Boolean type	No	**Yes** – User with these rights is allowed to shut down Intellect **No** – User with these rights is not allowed to shut down Intellect
6	The **Ask administrator password for system shutdown** checkbox	Set the checkbox	Allows shutting down Intellect using the password of the Administartor	Boolean type	No	**Yes** – Intellect shuts down only when the Administrator password is in use **No** - Intellect shuts down in various ways
7	The **Forbid to hide interface** checkbox	Set the checkbox	Allows hiding interfaces in Intellect	Boolean type	No	**Yes** – interfaces cannot be hidden **No** – interfaces can be hidden
8	The **Relogin prohibited** checkbox	Set the checkbox	Allows changing the user in Intellect	Boolean type	No	**Yes** – User can be changed **No** – User cannot be changed
9	**The list of system objects***	Automatically	Displays the objects created in the system and allows setting the administration and monitoring rights	-	-	**-**
The **Access to archive** group						
10	The **Depth __ last hours** field	Enter the value in the field	Sets the number of last hours of video archive that can be viewed	Nonnegative integer	-	>=0 0 means that viewing the archive is prohibited
11	The **Since last access** checkbox	Set the checkbox	Sets the time to define the archive depth	Boolean type	No	**Yes** – hours available for viewing are counted since the User logged in **No** - hours available for viewing are counted since the current moment
The **Access to backup archive** group						
12	The **Depth __ last hours** field	Enter the value in the field	Sets the number of last hours of backup archive that can be viewed	Nonnegative integer	-	>=0 0 means that viewing the backup archive is prohibited
13	The **Since last access** checkbox	Set the checkbox	Sets the time to define the backup archive depth	Boolean type	No	**Yes** – hours available for viewing are counted since the User logged in **No** - hours available for viewing are counted since the current moment
No group						
14	The **Allow video archive files remove** checkbox	Set the checkbox	Defines whether video archive files can be removed from the Monitor interface	Boolean type	No	**Yes** – The "Remove video from the feature menu" item is available in the Monitor **No** – removing video from the feature menu is not available
15	The **Allow rewrite protection** checkbox	Set the checkbox	Sets possibility of rewrite protecting of files	Boolean type	Yes	**Yes** – operator added to these permissions can protect archive records against loop recording **No** – operator cannot protect archive records against loop recording

16	The **Allow to disable file protection** checkbox	Set the checkbox	Sets possibility to disable rewrite protection of files	Boolean type	Yes	**Yes** – operator added to these permissions can reset rewrite protection of files **No** – Operator can't reset rewrite protection of files
17	The **Allow export** checkbox	Set the checkbox	Sets possibility to export protected records	Boolean type	Yes	**Yes** – Operator added to these permissions can export video recordings. **No** – Operator cannot export video recordings.
18	The **Terminate session when inactive __ minutes** checkbox and field	Set the checkbox, enter the value in the field	Sets the time period (in minutes) when the operator is inactive - at the end of this period the session is to be terminated	Boolean type, integer	No	**Yes** – when the operator is inactive for the specified time period, session is not automatically terminated. To continue operation, log in the system specifying the username and password. **No** – session is not automatically terminated when the operator is inactive.
19	The **ONVIF** dropdown list	Select the value in the list	Sets user permissions to use the ONVIF Server	Supported types of permissions	-	Administrator Operator User
20	The **Permission import** button	Click the button	Sets possibility to import user permissions to use the ONVIF Server	-	-	-

* The name of the object is not displayed on the settings panel

Appendix 2. Utilities

The utility for reading video capture card code and dongle

The purpose of the CodeReader.exe utility

The CodeReader.exe utility is designed to read the dallas code of the cryptochip (chip) of the video capture card, which determines the card type, HID of computer and the number of the Guardant dongle.

> **Note.**
> For proper operation of the utility INTELLECT™ is to be shut down.

Starting and shutting-down the utility

To start the CodeReader.exe utility, do one of the following:

1. Start the utility from the Windows taskbar. Click **Start,** then **All Programs**, then **Intellect,** then **Tools,** then **Read hardware codes**. The CodeReader.exe utility is available for the following types of INTELLECT™ installation: Server and Remote Admin Workstation.

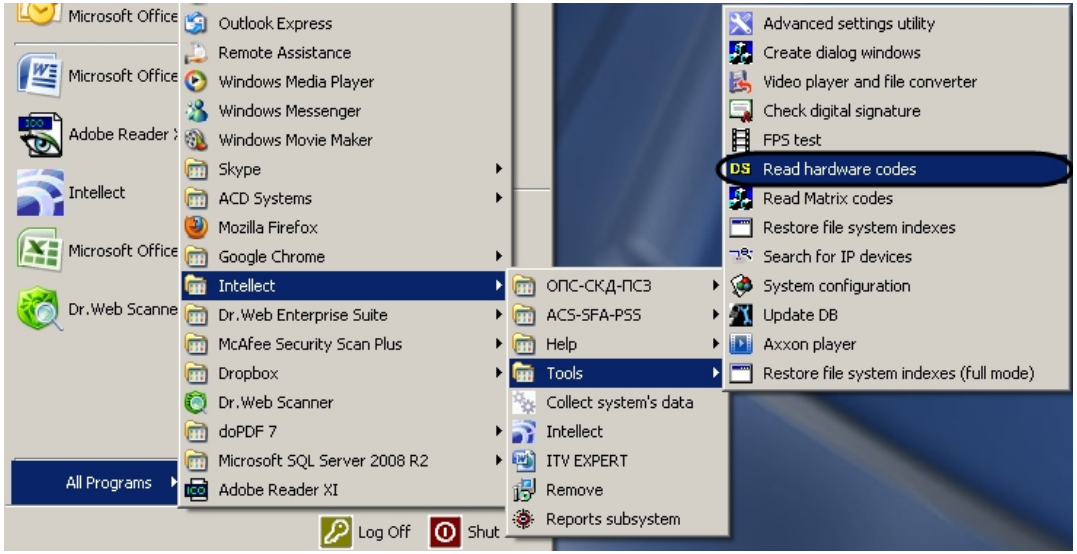

2. Start the utility from the **Tools** folder of the *Intellect* folder. Example: C:\ Program Files\Intellect\Tools\CodeReader.exe.

The Code Reader dialog box will open.

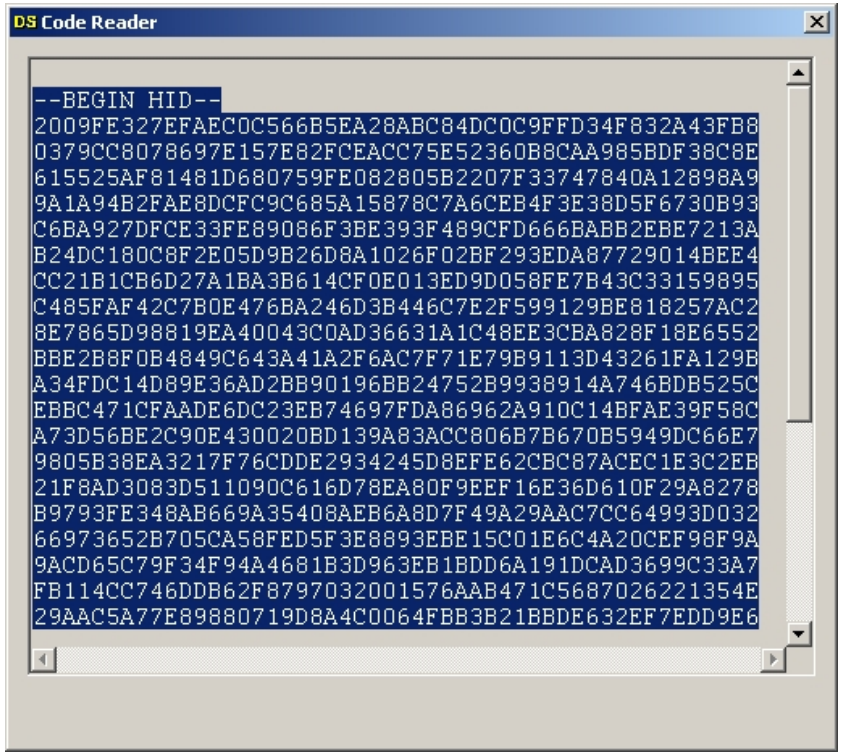

To shut down the CodeReader.exe utility, click the ✕ button.

Using the CodeReader.exe utility

The CodeReader.exe utility allows determining the type of installed video capture card by its dallas code(s), HID of computer , as well as the number of the Guardant dongle. To read this information, start the utility (see the Starting and shutting-down the utility section). The type of video capture card, its dallas code(s) and the number of the Guardant dongle and HID will be displayed in the Code Reader dialog box .

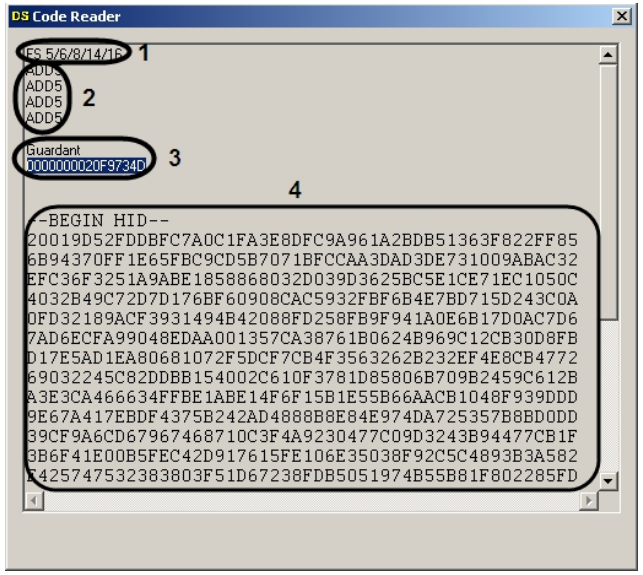

The number of dallas codes depends on the number of chips on the video capture card. Figure shows that the FS6 card with 4 chips has been used.

Converter.exe utility for converting video and audio archives

The purpose of the Converter.exe utility

The Conveter.exe utility is designed to play video and audio archives, and to convert them to standard formats: MPEG, DivX, etc.

Besides video and audio playback, Converter.exe utility is used for:

1. converting audio and video files;
2. copying the files from the archive to another folder with no data loss.

> **Note.**
> If video and audio were synchronized at the time of recording, the converted video file will contain sound track.

The utility can be started from the **Tools** folder of the Intellect program folder or from the **Start** menu: **Start -> Programs -> Intellect -> Utilities -> Playback and Conversion**.

The utility dialog box is shown in the figure.

Starting and shutting-down the Converter.exe utility

To start the Converter.exe utility, do one of the following:

1. Start the utility from the Windows taskbar. Click **Start**, then **Programs**, then **Intellect**, then **Utilities**, then **Playback and Conversion**. The Converter.exe utility is available from the **Start** menu with the following installation types of the Intellect software: Server, Remote administrator workstation, Remote client.

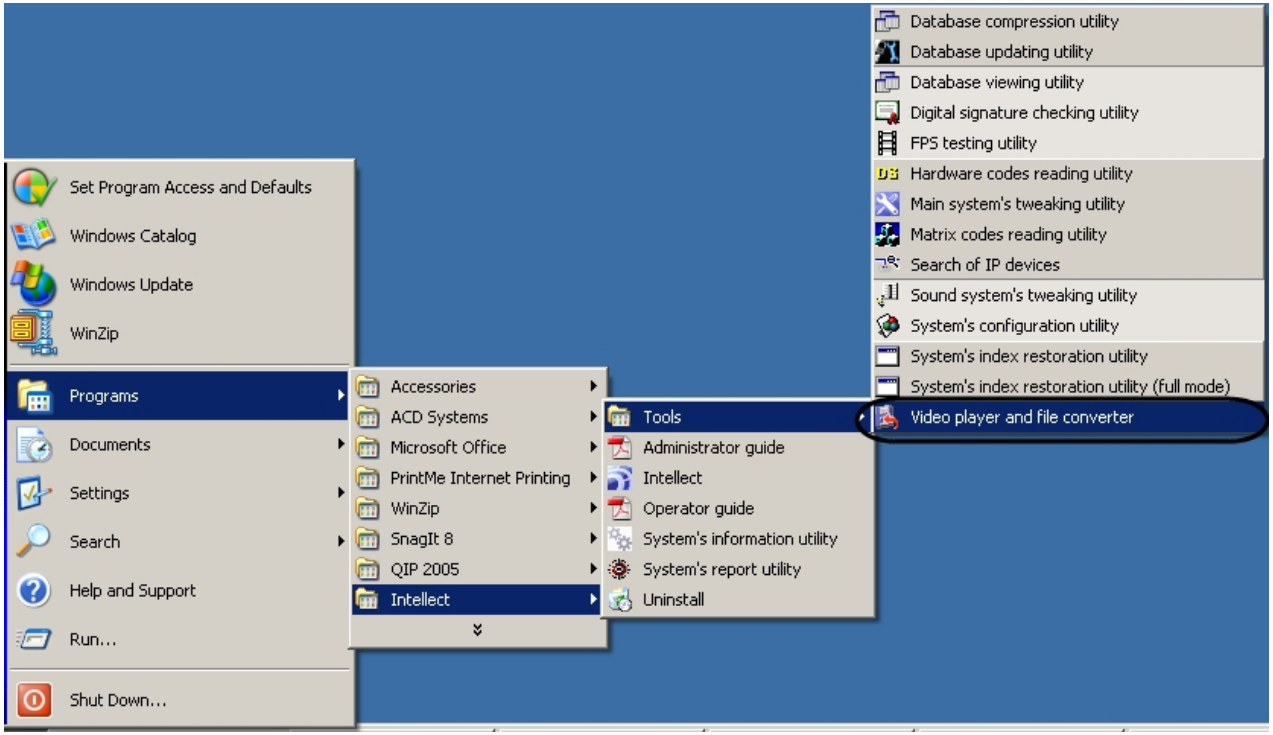

2. Start the utility from the Tools folder of the Intellect program folder. Example: C:\Intellect\Tools\converter.exe.

Archive Converter dialog box will open.

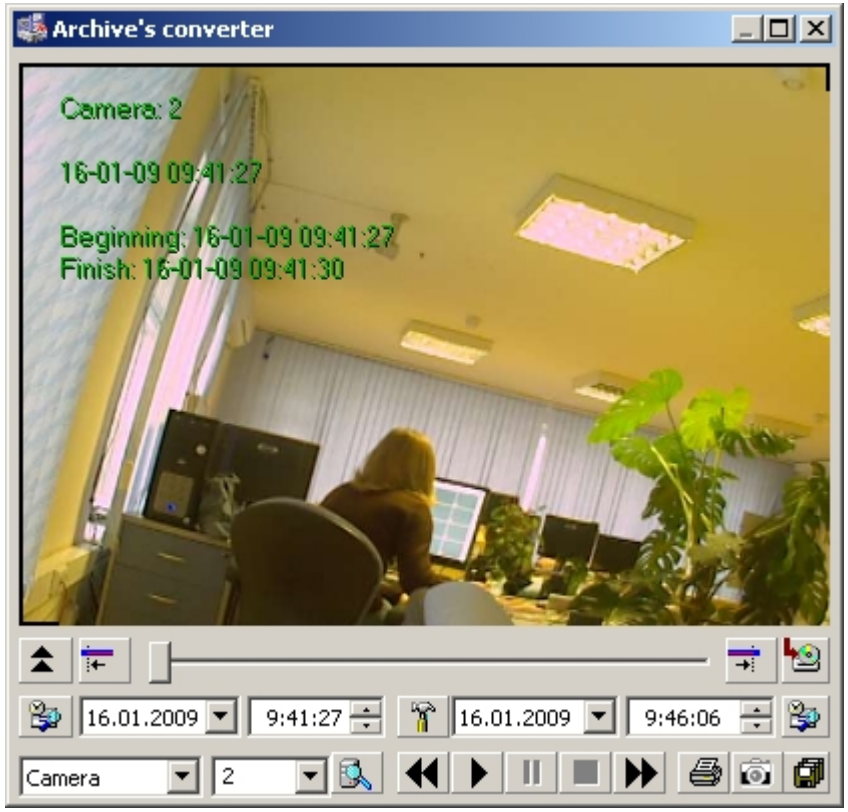

To close the Converter.exe utility, either click the cross button in the top right corner of the dialog box, or press Alt+F4 on the keyboard.

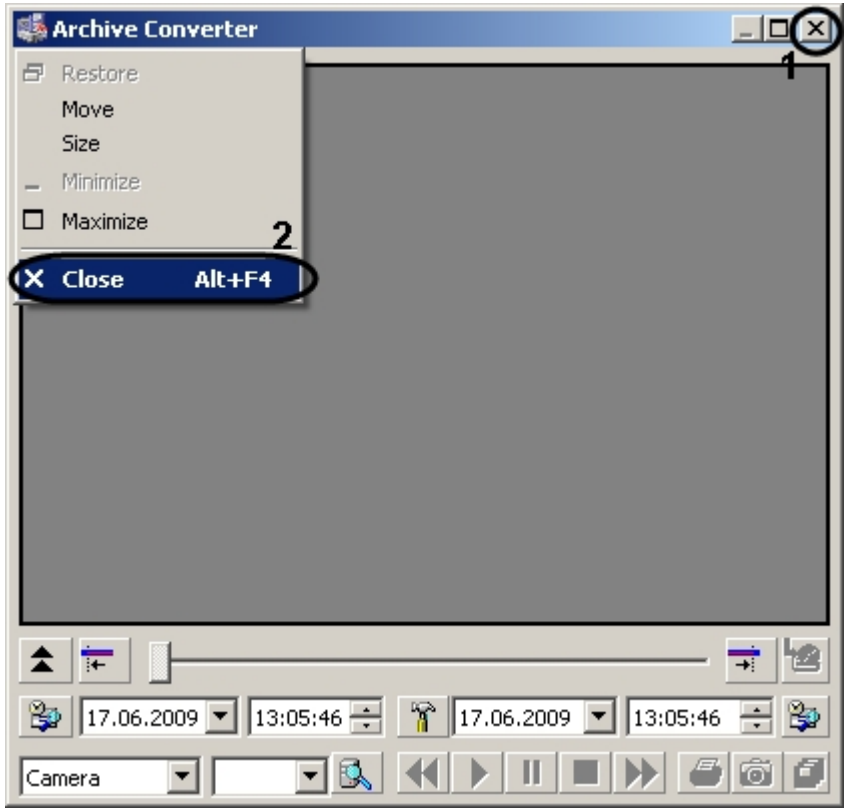

Converter.exe interface

The Archive's Converter dialog box

The dialog box of the converter.exe utility is shown in the figure.

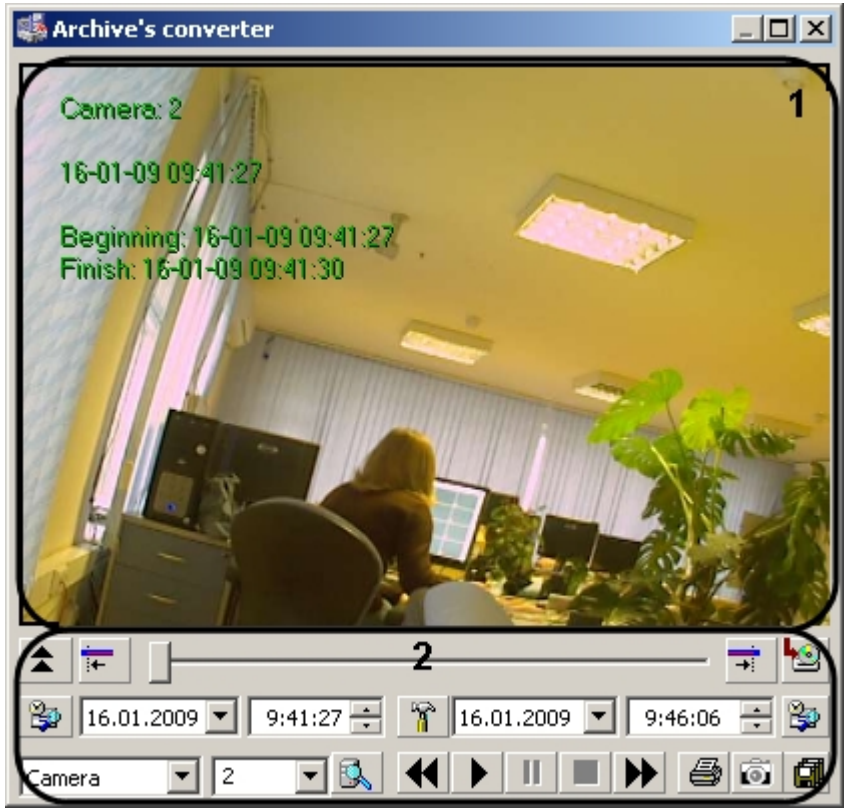

The Archive's Converter dialog box comprises of the following elements:

1. The screen to play back recordings (1);
2. The control panel for video and audio recordings playback (2).
   The elements of the control panel are described in the table.

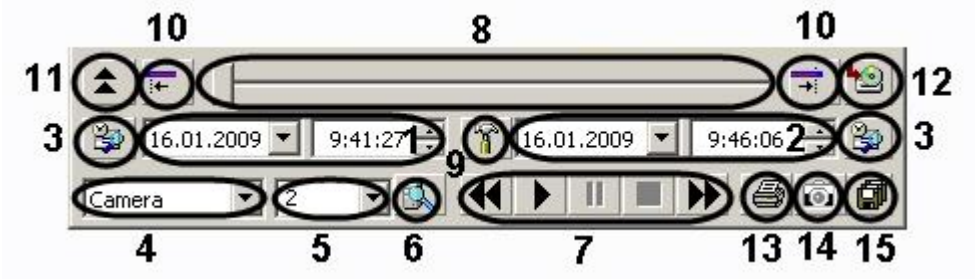

№	Element name	Description

1	Recording start date and time	Fields for entering the approximate start date and time of the video or audio recording
2	Recording end date and time	Fields for entering the approximate end date and time of the video or audio recording
3	Go to first / last frame	Buttons for quick moving of the slider to the beginning or the end of the recording
4	Device	Drop-down list field for selecting the device (camera, microphone), for which the recording should be found in the archive
5	Device number	Drop-down list field for selecting the number of the device, for which the recording should be found in the archive
6	Search	Button for starting the search of recordings in the archive of the chosen device. The recordings are searched in the entire archive of the device. After the search is completed it is posible to specify the approximate beginning ang end date and time for required recording.
7	Playback panel	The panel consists of standard functions (left to right): fragment back, play, pause, stop, fragment forward.
8	Time scale	The scale allows monitoring the playback progress and moving between the frames. To move between the frames, drag the slider or use the playback panel buttons in a per frame playback mode.
9	Export setup	The button for opening the Export Setup dialog box
10	Exported recording limits	The buttons for setting up the first and the last frames of the recording fragment to be exported
11	Hide/show the list	The button for hiding and showing the list of selected recordings
12	Add to list	The button for placing the selected recording (recording fragment) on the list
13	Print frame	The button prints the current frame
14	Frame export	The button exports the current frame in a specified format. A dialog box opens for selecting the folder on the disk and entering the file name.
15	Export to AVI or archive	The button for starting the export of the recording (fragment) in the specified format. A dialog opens for selecting the device name, which made the recording. On export start, a folder is created for saving the exported recordings (by default, C:\Backup).

The Export Settings dialog box

To open the **Export Settings** dialog box, click the button in the **Archive's Converter** window. The **Export Settings** dialog box will open, allowing to specify export parameters.

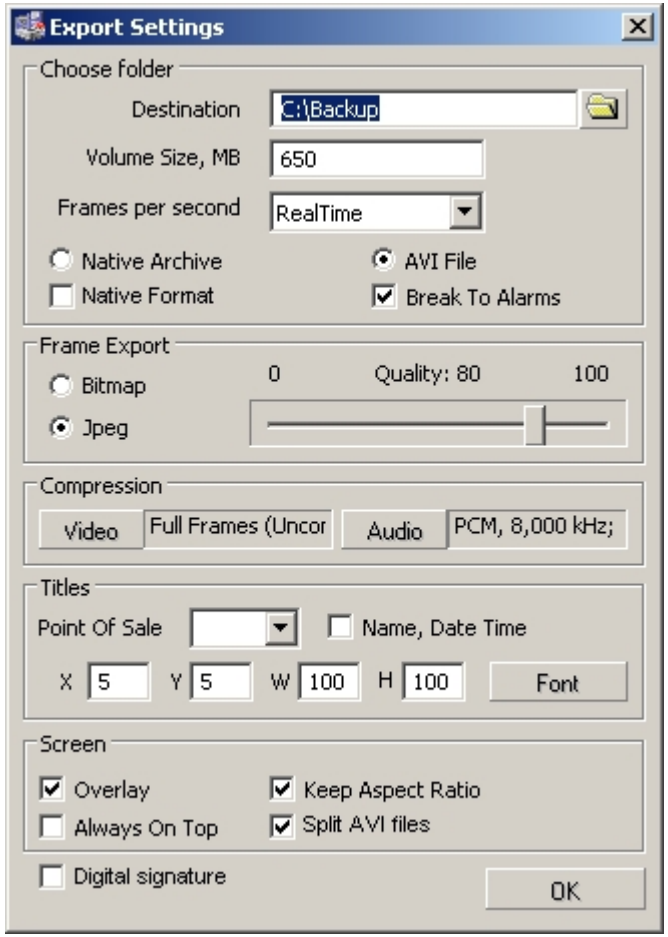

No	Parameter name	Field type	Description	Format	Default value	Value range
The **Choose folder** group						
1	Destination	Type-in the value	Type-in the folder on the disk to store the exported files (by default the **Backup folder** is created on disk C:)	-	-	-

2	Volume Size, MB	Type-in the value	Type-in the maximum value of the volume (file) size containing one or more recordings. If the size of recording for export exceeds the set one, then it will not be split. When the recording is added to the volume, the size of recording is expected to equal the mean value of sizes of all added recordings. A new recording is added to the volume if it does not exceed the volume size. A real size of recording can differ from the assumed one, therefore the volume size can exceed the assumed one. If the **Break To Alarms** checkbox is checked, each volume will contain one recording only. The field is disabled if the **Native Archive** parameter is activated.	MB	650	0 to 2000 MB
3	Frames per second	Select in a drop-down list	Type-in the amount of scaling of the video recording	fps	RealTime	0.5; 1; 3; 5; 15; 30; RealTime
4	Native Archive AVI File	Select a radio-button	If the **Native Archive** radio-button is selected, then archive fragments will be exported keeping the creation time, but with no AVI conversion. If the **AVI File** radio-button is selected, then the fragment is converted to the AVI format using the specified codec.	-	AVI File	1. Native Archive 2. AVI File
5	Break To Alarms	Checkbox	The checkbox is for selecting the way of storing the archive export fragments to volumes (files of specified size): the recordings for each alarm will be saved to separate volumes (files).	-	Unchecked	Unchecked – the file (volume) will contain a fragment of the size specified in the Volume Size, MB field. Checked – the volume will contain a fragment related to one alarm only.
6	Native Format	Checkbox	If the **Native Format** checkbox is checked, then video recordings are exported to AVI file without recompression, i.e. in the same format as in Intellect archive. To playback these AVI files on the computer without Intellect software package installed, install components from Intellect distributive beforehand: 1. \Redist\VC2005_SP1\vcredist_x86.exe 2. \Redist\CamMonitor\CamMonitorInstaller.exe ***Note.*** *To playback AVI files use Windows Media Player.*	-	Unchecked	Unchecked – Intellect archive is exported to AVI file with recompression. Checked - Intellect archive is exported to AVI file without recompression.
The **Frame Expor**t group						
7	Bitmap Jpeg	Select a radio-button	If the Bitmap radio-button is selected, then the file is saved in Bitmap format. If the Jpeg radio-button is selected, then the file is saved in Jpeg format.			
8	Quality	Set the slider	The parameter specifies the quality level of the exported file. The value of 100% results in no quality loss.	%	80	0 to 100
The **Compression** group						
9	Video	Click the button	The button is for selecting and setting up the video codec used to compress video recordings. If the **Native Archive** radio-button is selected or the **Native Format** checkbox is checked, then this button is disabled.	-		-

10	Field next to the Video button	Not to be edited	The field shows the info on selected video codec. If the **Native Archive** radio-button is selected, then this field is disabled.	-	Full Frame (Uncompr-essed), Quality: 0	The list of codecs found by the utility.
11	Audio	Click the button	The button is for selecting and setting up the quality of the exported audio. The **Native Archive** radio-button is selected, then this button is disabled.	-	-	-
12	Field next to the Audio button	Not to be edited	The field shows the selected audio format.	-	PCM, 8000 kHz; 16 bit; Mono	The list of quality levels detected.
The **Screen** group						
13	Overlay	Checkbox	If the **Overlay** checkbox is checked, there is **Overlay II** conversion	-	Checked	Checked – use Overlay II for conversion Unchecked – do not use Overlay II for conversion
14	Always On Top	Checkbox	If the **Always On Top** checkbox is checked, then **Converter** window is always over all other windows	-	Unchecked	Checked – the window is displayed on top. Unchecked – the window is not displayed on top.
15	Keep Aspect Ratio	Checkbox	If the **Keep Aspect Ratio** checkbox is checked, the aspect ratio of **Converter** window is fixed.	-	Unchecked	Checked – 3:2 ratio is kept when the size of the dialog box is changed. Unchecked – 3:2 ratio is not kept when the size of the dialog box is changed.
16	Split AVI files	Checkbox	Activates export of selected video recordings to the separate AVI files. ***Note.*** *If the checkbox is not checked, video recordings from one camera are exported to one AVI file.*	-	Checked	Checked - video recordings are exported to the separate AVI files. Unchecked - video recordings are exported to one AVI file.
17	Digital signature	Checkbox	Activates adding digital signature that is used for checking frame authenticity to exported frames. ***Note.*** *Checking frame authenticity is performed using SignCheck.exe utility (see The SignCheck.exe utility for checking the authenticity of exported frames and video recordings section)*	-	Unchecked	Checked – digital signature is added. Unchecked - digital signature is not added.

If a microphone was selected as a device in the dialog box of Converter.exe utility, only the **Audio** button and the **Screen** group are enabled.

A dialog box for choosing the video codec

The Video button in the **Export Setup** dialog box opens a dialog box for choosing a video codec to be used for video compression.

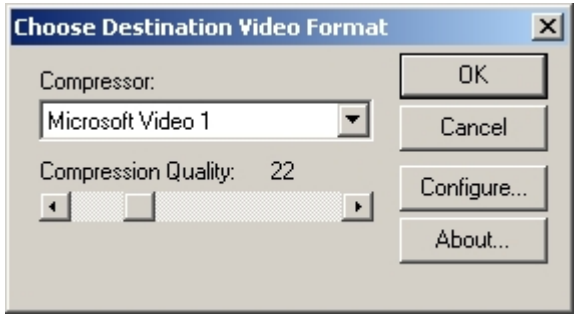

No	Parameter name	Field type	Description	Format	Default value	Value range
1	Compression program	Select from drop-down list	The button allows selecting and setting up the video codec used to convert and compress the video image.	Codec name	Full frames (no compre-ssion)	All video codecs recognized by the operating system
2	Compression quality	Drag the slider	The slider allows setting the compression level. The zero position of the slider represents the highest compression and lowest quality. Changing this parameter is enabled if the codec is selected in the **Compression Program** field.	%	0	0 to 100
3	Setup ...	Click the button	The button opens the settings panel of the video codec. See the codec manual for details.	-	-	-
4	About	Click the button	The button opens an information box with codec details.	-	-	-

Note.
If AVI format is used, the resultant file size should not exceed 2 GB.

A dialog box for choosing the audio format

The **Sound** button in the **Export Setup** dialog box opens a dialog box for choosing an audio format.

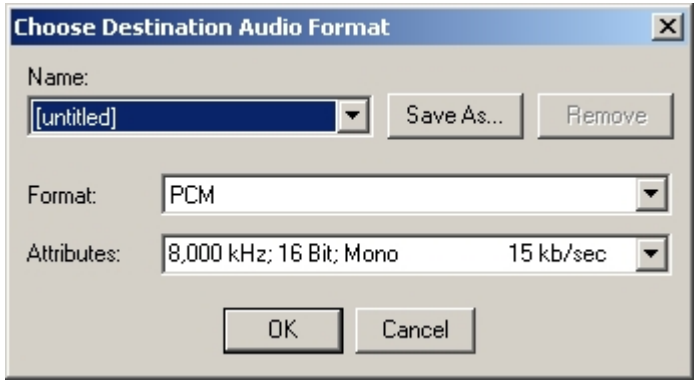

No	Parameter name	Field type	Description	Format	Default value	Value range
1	Name	Select from drop-down list	The field allows choosing the name for the selected audio format.	Format name	Untitled	Untitiled CD Quality Radio Quality Telephone Quality Compact disk
2	Format	Select from drop-down list	The field for selecting the format	Format name	PCM	The list of audio formats used by the utility.
3	Attributes	Select from drop-down list	The list of sound characteristics: playback/recording frequency (8000 kHz), digitizing level (8, 16, etc bits), channel type (mono/stereo)	Parame-ter values	PCM, 8000 kHz, Mono	The list of characteristics, recognized by the operating system
4	Save as…	Click the button	The button allows creating a unique name for the selected format. To save a format under a unique name: 1. Select **Untitled** in the **Name** field. 2. Select the values in the **Format** and **Attributes** fields. 3. Click the **Save As** button 4. Enter a unique name in the **Save This Format As** field and click **OK**. The newly created name will appear in the **Name** drop-down list.	String	-	-

Using the Converter.exe utility

General description of the Converter.exe utility

The Converter.exe utility is designed to convert and play back audio and video recordings from the archive and save them to a specified folder.

Using the Converter.exe utility includes:

1. Starting the utility (see Starting and shutting-down the Converter.exe utility).
2. Selecting an archive (see Selecting an archive to be played or converted).
3. Finding a recording in the selected archive (see Selecting an archive to be played or converted).
4. Playback of the recording (see Recording playback).
5. Finding the required recording fragment or frame (see Searching for a video recording).
6. Setting the export or conversion parameters (see Converting video and audio archives to AVI files).
7. Exporting the fragment or printing the frame (see Exporting recordings and frames).
8. Shutting-down the Converter.exe utility (see Starting and shutting-down the Converter.exe utility).

Selecting an archive to be played or converted

To search an archive for a recording, do the following:

1. Select the device the recording was made by, and its number (1).
2. Click the **Search** button (2).

3. Select the location of the archive (folder with archives for specific date and time) on an appropriate disk.

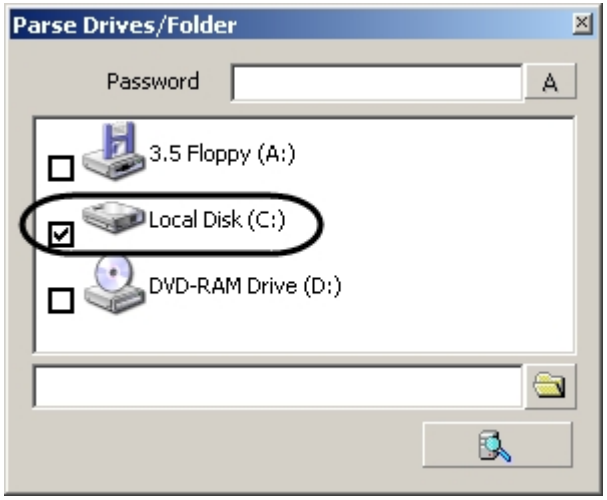

4. Click the button.
5. Specify the time limits in the date/time fields (3).

The first frame of the required recording will be displayed in the video playback screen.

Note.
In case of searching for an audio recording, no visible signs of finding the recording will be shown. To check that a recording was found, play it.

Note.
Speed of records search directly depends on their number. The search process can take a lot of time if the archive depth is rather big and reading is performing from the network disk.

Note.
If video files that are to be opened were not recorded, but copied, then start the Convert.exe utility to open the archive (see The Convert.exe utility for correcting modification dates of video archives section):

- If the archive is created in the same time zone as it is viewed, then start the utility with the fullmode parameter:
  convert.exe fullmode
- If the archive is created in different time zone than it is viewed, then move the archive to the current time zone by starting the utility with the following parameters in the command prompt:
  convert.exe fullmode TZ +hh:mm
  where +hh:mm is the time shift between the current time zone and the time zone of the archive.

Otherwise the folders with video files fail to open.

Searching for a video recording

After the approximate time interval is selected using the date/time fields, and the required archive is found, it may be necessary to find a particular fragment or frame to be played or exported.

Searching for a fragment in a recording

To find the required video fragment in the selected recording, do the following:

1. Click the **Play** ( ) button in the playback control panel.
2. When the required fragment appears, click the **Pause** ( ) button.
3. Click the **Fragment Start** ( ) button to make the current frame the start of the fragment.
4. Click the **Play** ( ) button in the playback control panel.
5. When the required fragment ends, click the **Fragment End** ( ) button to make the current frame the end of the fragment. All subsequent frames will be omitted.

The resultant recording fragment will then be available for conversion or export, maintaining the format and the creation date.

Searching for a frame in a recording

To find a particular frame in the selected recording, do the following:

1. Click the **Play** ( ) button in the playback control panel.
2. When the required frame appears, click the **Pause** ( ) button to enter the per frame playback mode.

   Note.

   If the recording is to be played back in the per frame playback mode starting with the first frame, then click the **Pause** ( ) button instead of the **Play** ( ) button.

3. Keep clicking the **Fragment Forward** ( ) and **Fragment Back** ( ) buttons, to browse the frames until the required frame appears on the screen.

The resultant frame may be printed or used as a starting frame for a fragment (see Searching for a fragment in a recording section).

Note.

To quit the per frame playback mode, click the **Pause** ( ) button once more.

Recording playback

The recording selected by date and time, can be played in Converter.exe player using the playback control panel.

The panel contains five control buttons (left to right on the figure): **Fragment Back, Play, Pause, Stop, Fragment Forward**, allowing to play, pause, stop and browse the fragments.

1. When the **Stop** button is down (clicked), clicking the **Fragment Forward** or **Fragment Back** buttons moves to the next or previous fragment.

2. Clicking the **Play** button plays the fragment from beginning to end. If the recording contains several fragments, the **Play** button should be clicked to play each of them.
3. To play the whole recording consisting of several fragments, in one go, click the **Play** button, then click it again and hold for 3 seconds. The button then changes its appearance from to .
4. To play the recording in the per frame mode: a) click **Play**, b) click **Pause**, c) keep clicking **Fragment Forward** or **Fragment Back** to view frames one by one.
5. To view the fragment in accelerated mode click the **Play** button and then click the **Fragment forward** to accelerate twice relatively the previous speed. The current playback speed is displayed in titles above video image.
6. To view the record section in jog mode click the **Play** button and then click the **Fragment backward** to slow down twice relatively the previous speed. The current playback speed is displayed in titles above video image.

Converting video and audio archives to AVI files

Video and audio archives are converted into AVI format according to Converter.exe settings, using the **Export Setup** dialog box. The level of compression of the exported recording is determined by the following parameters:

1. **Frames Per Second** parameter – setting the value of scaling of the recording;
2. **Video** button – selection of the video codec, in case of video archive export;
3. **Sound** button – set the sound quality parameters (frequency, bitrate, etc), in case of audio archive export.

Note.
If AVI format is used, the resultant file size should not exceed 2 GB.

Exporting recordings and frames

Export of the recordings is one of the main functions of the Converter.exe utility. There are two ways of exporting records from an archive:

1. Export to AVI option converts (compresses) a recording and breaks it down into volumes (files of the size specified in the Export Setup dialog box).
   To export the recording as AVI, do the following:
   a. Find the recording in an archive (see the Selecting an archive to be played or converted section).
   b. In the **Export Setup** dialog box, select the **Export to AVI** radio-button.
   c. Click the **Video** or **Sound** button to specify the conversion parameters. Click the **OK** button.
   d. Click the **Exportto AVI/Archive** button ( ) to start exporting.
   e. Enter the name of the device folder to save the recording to (1), then click **Continue** (2).

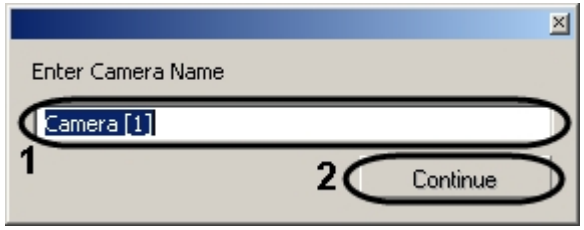

The export progress will be shown in the title bar of the Converter.exe window.

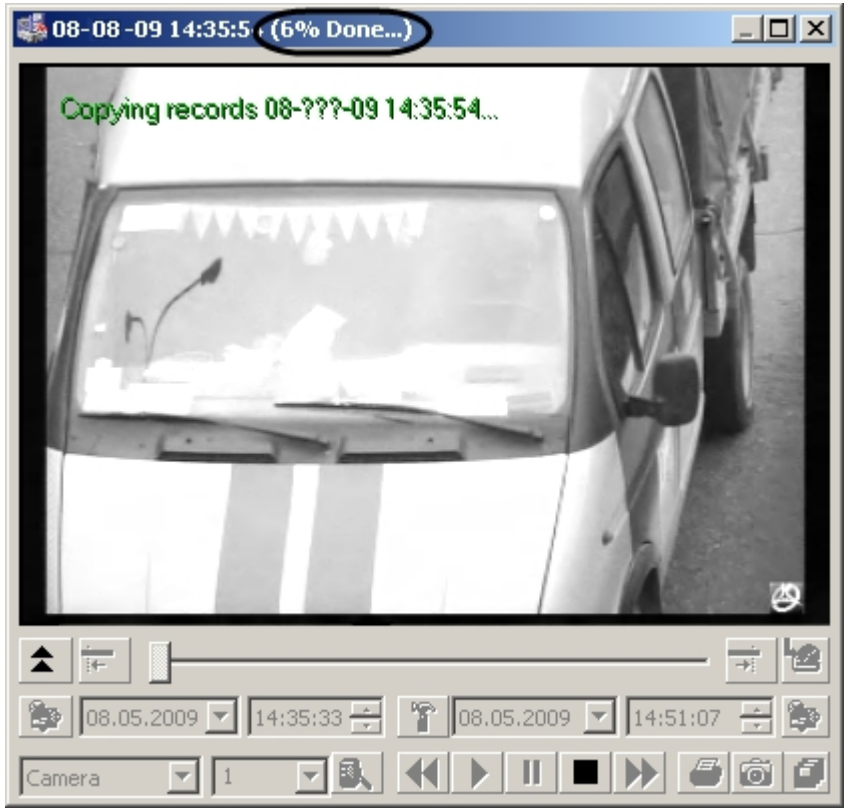

The title bar will read **Complete**, when exporting is completed. To verify the results, open the Backup folder and find the file named after the device from which archive the recording was exported.

2. The Export to Archive option allows copying the files from an archive to another location on the disk with no conversion, maintaining the recording creation date and an option for breaking it down into volumes.
   To export a recording in the same format as it is stored in the archive, do the following:
   a. Find the recording in the archive (see the Selecting an archive to be played or converted section).
   b. In the **Export Setup** dialog box, select the **Export to Archive** radio-button.
   c. Specify volume size in the **Export Setup** dialog box. Click the **OK** button.
   d. Click the **Export to AVI/Archive** button ( ) to start exporting.

Note.
If AVI format is used, the resultant file size should not exceed 2 GB.

The Converter.exe utility allows exporting frames into bitmap and JPEG formats. Do the following:

1. a. Find the required frame (see the Searching for a frame in a recording section).
   b. In the **Export Setup** dialog box, specify the parameter values in the **Frame Export** group. Click the **OK** button.

c. Click the **Export Frame** button ( ).
d. Specify the location to save the exported file to in the **Save A**s dialog window.

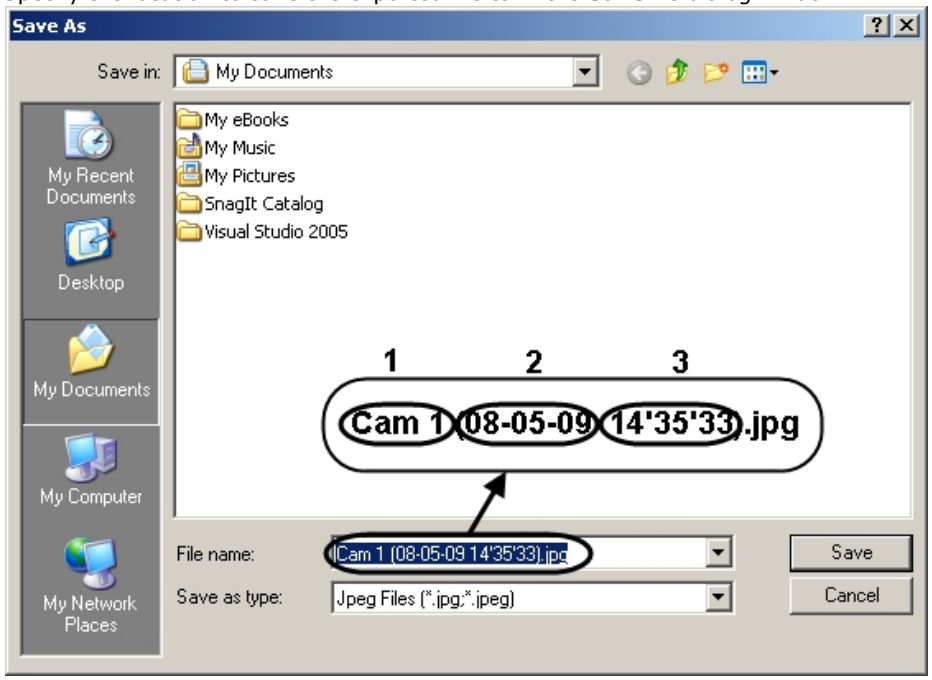

The file name will be generated automatically in the following format: 1) name and number of the camera where the frame comes from; 2) creation date; 3) creation time. The file extension corresponds to the file format selected in the **Export Setup** dialog box.

e. Click the **Save** button.

Using a command prompt to work with the Converter.exe utility

Video and frames can be exported with the help of a command prompt using the following commands:

Converter.exe Disc:\File,Number_Cam,StartDate StartTime,StopDate StopTime,CameraName

Converter.exe Disc:\File,Number_Cam,StartDate StartTime,,CameraName

Note.
If **StopDate and StopTime** parameters are not specified, then ‘,’ is to be specified instead.

The table describes the command parameters.

Parameter	Description

Disk	Disk for storing exported files
File	Name of a catalogue or file. ***Note 1.*** *If the catalogue or file specified in the command does not exist, it will be created automatically.* ***Note 2.*** *To export archive (video record in the original format) only catalogue name is to be specified.*
Number_Cam	Number of a camera which performs the recording
StartDate	Date of record start (dd-mm-yy)
StartTime	Time of record start (hh:mm:ss)
StopDate	Date of record end (dd-mm-yy). ***Note.*** *Parameter is not in use while exporting the separate frames*
StopTime	Time of record end (hh:mm:ss) ***Note.*** *Parameter is not in use while exporting the separate frames*
CameraName	Name of the camera that is to be displayed in the titles on the exported video, as well as the name of the folder created in the specified export folder used for storing exported files.

The example of using the command prompt to export files is shown in the figure.

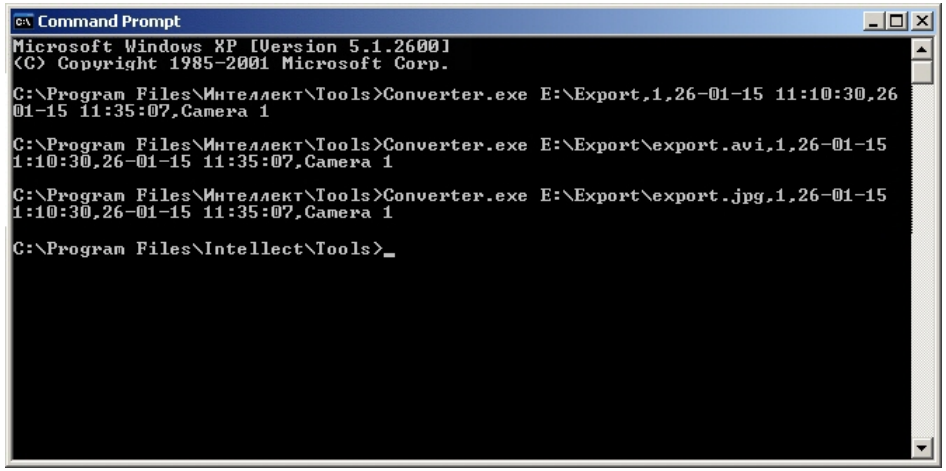

As a result the “export” folder containing the exported files is created on the local disk “E”.

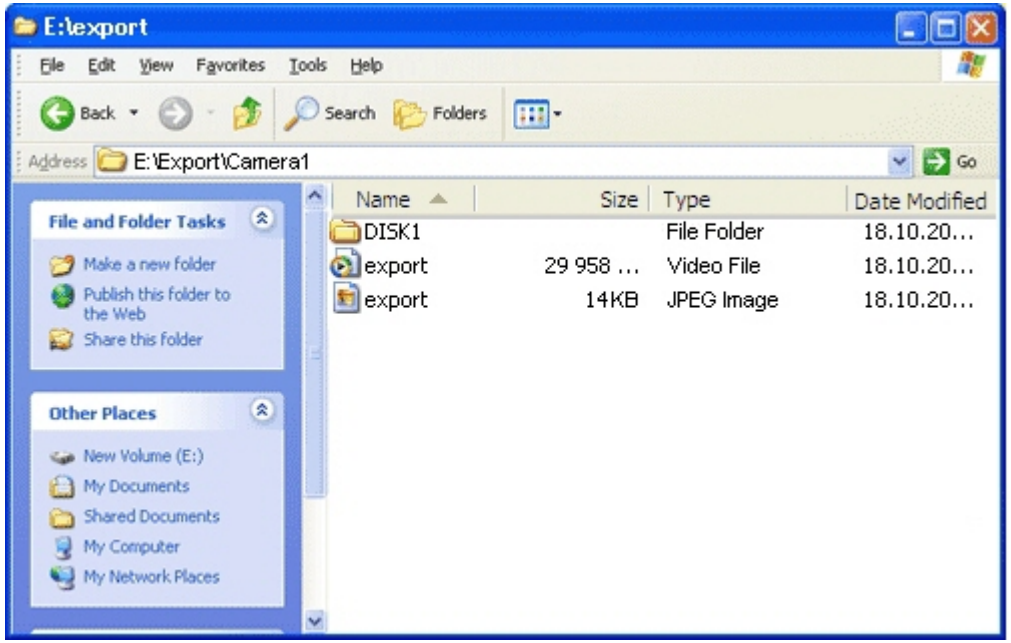

Printing a frame

To print a frame, do the following:

1. Find the required frame (see the Searching for a frame in a recording section).
2. Click the **Print Frame** button ( ).
3. A standard dialog box for printing and printer setup will be opened.

Exporting video with titles

Video with titles is exported as follows:

1. Run the Converter.exe utility(see Starting and shutting-down the Converter.exe utility).
2. Call for **Export Settings** dialog window in the opened window of Converter.exe utility and set its groups **Choose folder**, **Frame Export**, **Compression** and **Screen** (see. Interface description of The Export Settings dialog box).
3. Set the titles displaying in the **Titles group** in the dialog window **Export Settings**; table shows parameters description of the given.

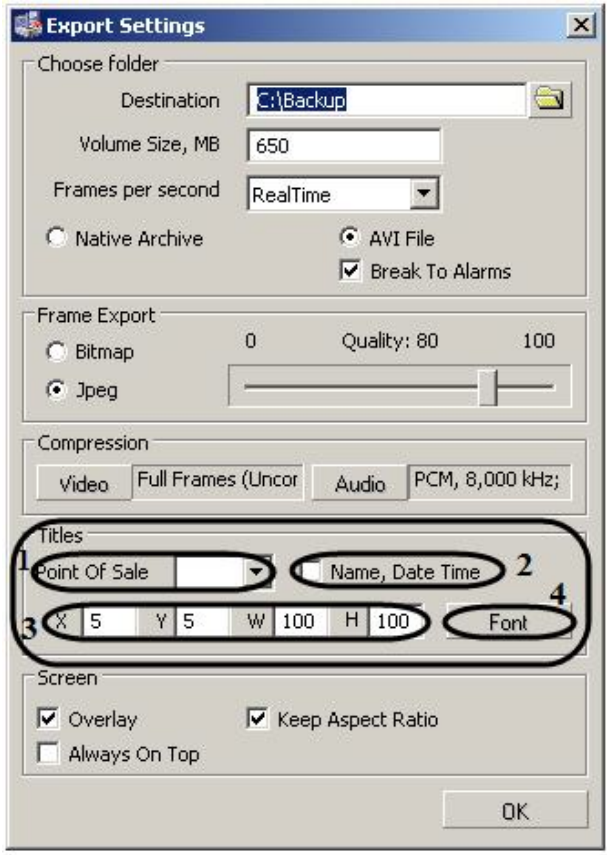

№	Parameter name	Parameter description	Value range
1	Point of sale dropdown list	Name of cash terminal, titles from which should be laid over the video recording while viewing and exporting the frames and recordings with the help of Converter.exe utility.	Empty value– titles from all the titrates overlay function . no - overlay function is off. Number of cash terminal (from one and above) – function of displaying the titles concerning the given cash terminal.
2	Checkbox **Name, Date, Time**	When the given checkbox is activated , lines, containing name and number of a camera, date and time of creation of the given video frame , will be laid over the video recording.	Yes – lines, containing name and number of a camera, date and time of creation of the given video frame , will be laid over the video recording. No – lines, containing name and number of a camera, date and time of creation of the given video frame , will not be laid over the video recording.
3	Editing text fields **X, Y, W, H**	Coordinates and area size , taken by titles in the video recording. Is expressed in percentage relative to the screen size of video recording playback.	From 0 and above. Depends on the screen size of video recording playback.

4	Font button	Font selection of titles displaying.	-

Note.
If the cash terminal is selected, its value will not be saved with the repeated run of Converter.exe utility. On default displaying titles from all the titers is set.

4. To apply the settings it is necessary to click **OK** button. To cancel settings one should click the cross mark in the upper right corner of **Export Settings** dialog window.
5. Dialog window of Converter.exe utility for exporting the required file will open in result (see. Exporting recordings and frames).

Export of video recordings with titles is completed.

Tweaki.exe utility for advanced setup of the Intellect software system

The purpose of tweaki.exe utility

The tweaki.exe utility is designed for configuring the *Intellect* system by editing the sections of the Windows registry, where the setup parameters for the *Intellect* core and modules are stored:

- For 64-bit systems, the sections are HKLM\SOFTWARE\Wow6432Node\ITV and HKCU\SOFTWARE\Wow6432Node\ITV.
- For 32-bit systems, the sections are HKLM\SOFTWARE\ITV and HKCU\SOFTWARE\ITV.

Attention!
Specifying invalid values of the registry keys may lead to system failure.

The Tweaki.exe utility provides the following functionality:

1. Setup of Intellect system start-up (see The Settings panel of the Windows section);
2. Enabling the debug mode (see Selecting and enabling the debug mode of Intellect software);
3. Advanced setup of the video surveillance monitor (see The Settings panel of the Video subsystem section);
4. Advanced setup of events logging (see The Settings panel of the Intellect section);
5. Advanced setup of video signal processing by Server (see The Settings panel of the Video subsystem section);
6. Advanced setup of distributed architecture (see Extended setup of the distributed architecture);
7. Changing netnames and IP-addresses in the configuration database (see Changing computer names and IP-addresses in the configuration database of the Intellect system);
8. Limiting the RAM used by MS SQL server (see Limiting memory usage by an MS SQL server);
9. Advanced setup of audio or video recording to an archive (see The Settings panel of the Video subsystem section);
10. Re-indexing audio and video archives (see Re-indexing the audio and video recordings archive);
11. Selecting the analog video out operation mode The Settings panel of the Video subsystem section);
12. Testing the operability of video capture cards (see Testing video capture cards);
13. Advanced setup of PTZ devices (see The Settings panel of the PTZ section);
14. Displaying versions of Intellect modules (see The Settings panel of the Version section);
15. Advanced setup of Face-Intellect (see The Settings panel of the Face-Intellect section);
16. Advanced setup of POS-Intellect (see The Settings panel of the POS-Intellect section).

Starting and shutting-down the Tweaki.exe utility

To start the tweaki.exe utility, do one of the following:

1. Start the utility from the Windows taskbar. Click **Start => All Programs => Intellect => Tools => Advanced settings utility**. The tweaki.exe utility is available from the **S tart** menu with the following installation types of Intellect: Server, Remote administrator workstation, Remote client.
2. Start the utility from the **Tools** folder of the *Intellect* program folder: C:\Intellect\Tools\Tweaki.exe.

The **Intellect Advanced Setup** dialog box appears after running the tweaki.exe utility.

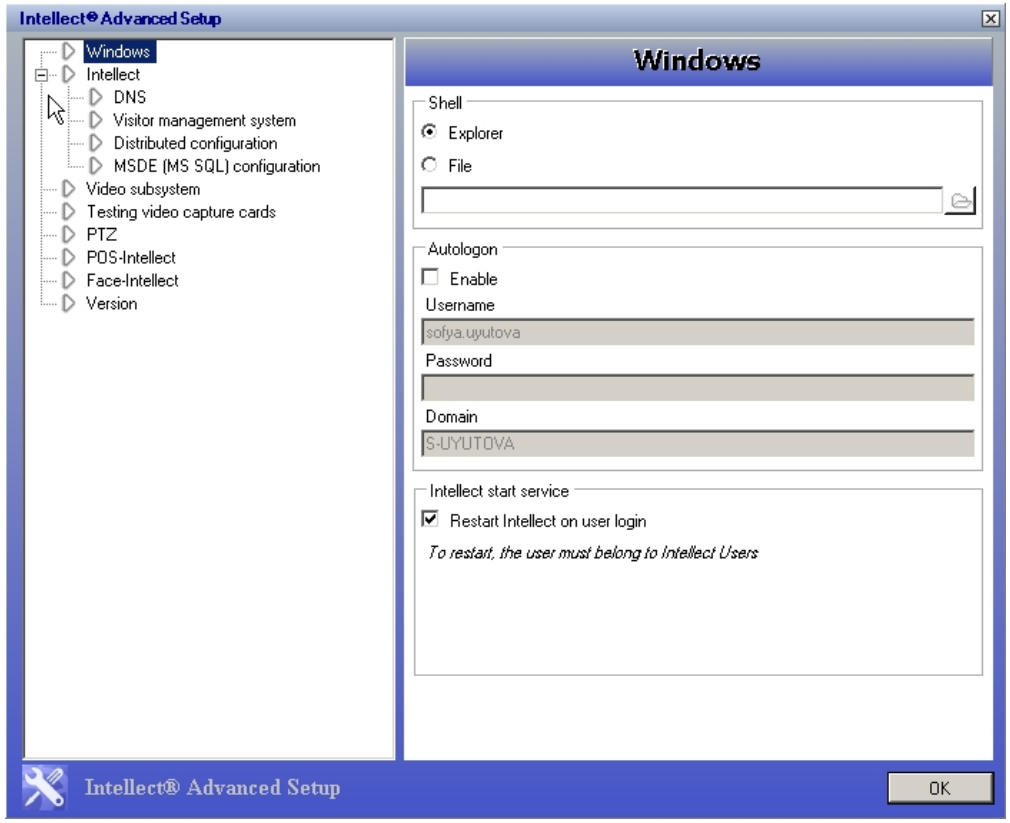

To shutdown the tweaki.exe utility and save the changes click **OK** . To shutdown the tweaki.exe utility without saving the changes, click .

Interface of the Tweaki.exe utility

The user interface of the tweaki.exe utility consists of two interrelated elements:

1. Tree of sections (1).
2. Settings panel for each section (2).

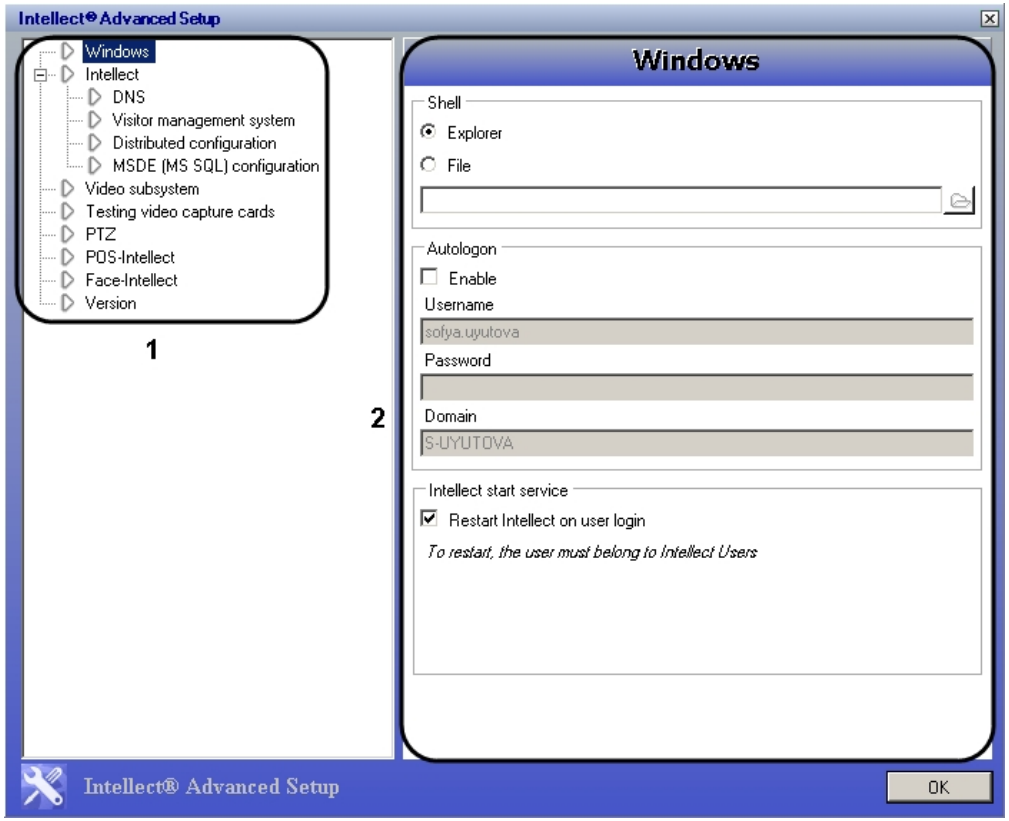

Sections tree of the tweaki.exe dialog box has static structure and is used for navigation in the utility. To access the settings panel for the required section, left-click the corresponding tree tab.

The Settings panel of the Windows section

The **Windows** section is used to set Windows running Windows OS. The settings panel for the **Windows** section is shown in the figure.

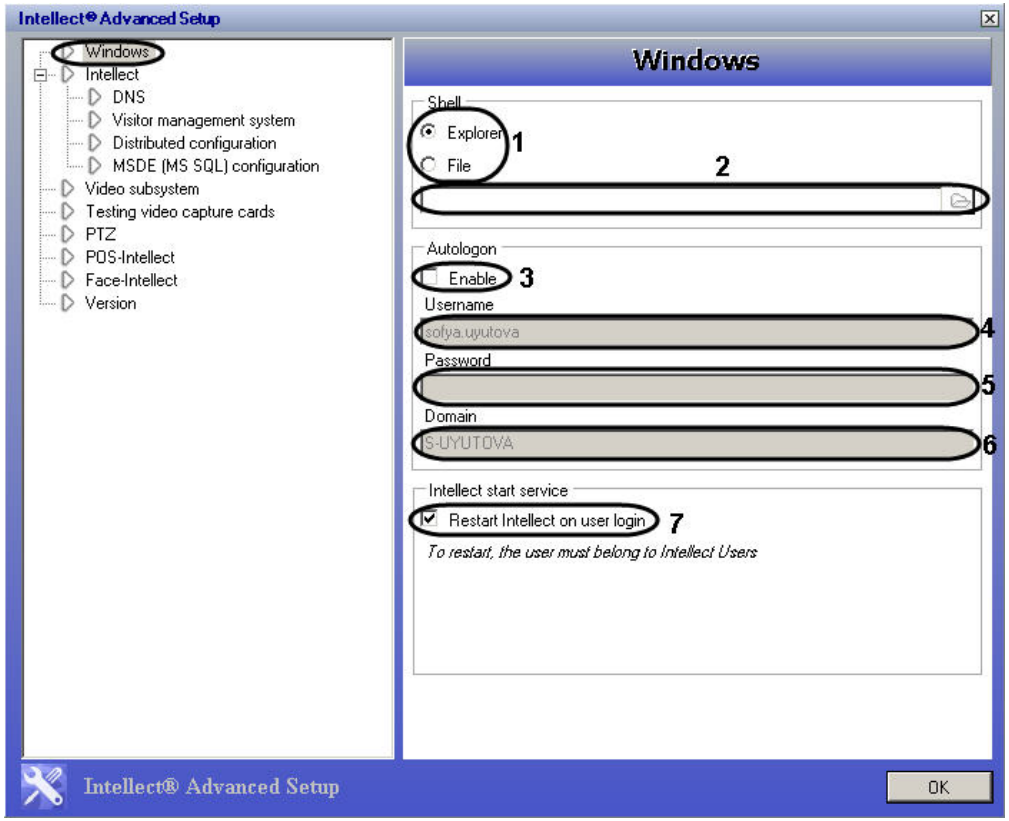

The parameters of the **Windows** setting panel are described in the table.

No	Parameter name	Field type	Description	Representation	Default value	Value range
The **Shell** group						
1	The **Explorer/ File** switch	Set in the position	Selection of Windows working shell ***Attention!*** *Disable UAC to run the Intellect software package as the shell. Configuration of the local security policy is required for full disabling of UAC in the Windows 8 and Windows 8.1 OS – see OS settings for correct operation of Remote Admin Workstation or Server* *To disable UAC and run the Intellect software as the shell, set to 0 the "Enable LUA" registry key in the HKEY_LOCAL_MACHINE\Software\Microsoft\Windows\CurrentVersion\Policies\System section.*	-	Explorer	**Explorer** – Microsoft Explorer is loaded as working Windows OS shell (corresponds to standard Windows OS settings) **File** – Intellect starts as a working shell of Windows OS.

2	The **File** field with button. Active for the **File** switch position	Button is pressed	Opens standard Windows window «Open» to select shell file of OS Windows. Full path to the file is displayed in the field.	-	-	The intellect.exe or slave.exe executive file is selected as a shell
The **Autologon** group						
3	The **Enable** checkbox	Checkbox	Activates automatic log on of the user to OS Windows	Boolean type	No	Yes – automatic log on of the user is activated No– automatic log on of the user is not activated
4	The **Username** field	Type-in the value	Set the username for logging on the OS Windows	-	-	Up to 64 characters. Depends on the settings of Windows user account (stored locally or on domain server)
5	The **Password** field	Type-in the value	Set the password for logging on the OS Windows	-	-	8 to 14 characters Depends on the settings of Window's user account (stored locally or on domain server)
6	The **Domain** field	Automatically	Displays the name of domain server (if there is any), where data concerning user account is stored (user name and password)	-	-	Depends on domain net settings (net settings of OS Windows correspondingly)
7	**Restart Intellect on user login** checkbox	Setting checkbox	Specifies the way of restart the Intellect software installed as a service on user login	Boolean type	Yes	**Yes** - the *Intellect* software installed as a service restarts under the current user if it belongs to the IntellectUsers group. **No** - The *Intellect* software installed as a service doesn't restart under the current user even for users belonging to the IntellectUsers group.

The Settings panel of the Intellect section

The **Intellect** section is used for *Intellect* advanced setup. The settings panel for the **Intellect** section is shown in the figure.

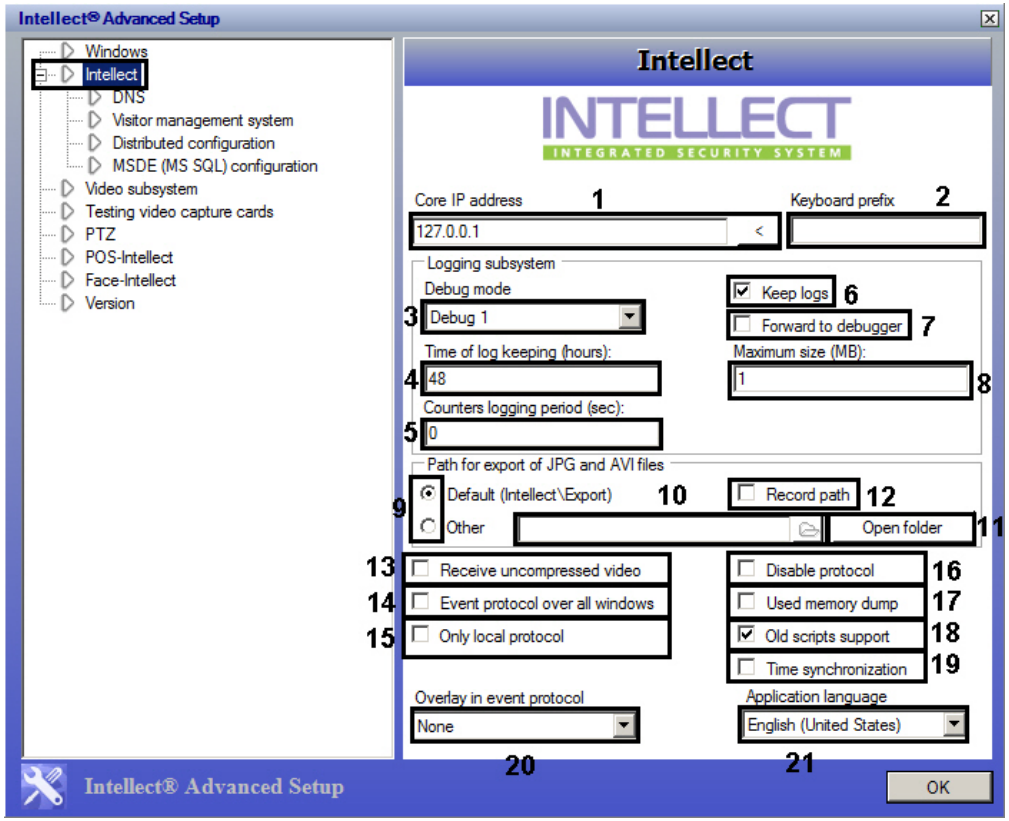

The parameters of the Intellect settings panel are described in the table.

No	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Core IP address** field with < button. Is set on the Client	Type-in the value in the field/use the < button	Set the IP address of the Intellect server to which the slave.exe module is connected by default. In case of pressing < button, IP address of the local computer is set.	IP address	127.0.0.1	Depends on net settings of the Server. In case of connection failure dialog window requiring IP address is displayed
2	The **Keyboard prefix** field	Type-in the value in the field	Set the prefix for a special key-board. When a button is pressed on this key-board the Intellect detects when the button was pressed on this very key-board	Symbol	-	Usually, a tilde (~), code 126
The **Logging subsystem** group						

3	The **Debug mode** dropdown list	Drop-down list item	Set the mode of the *Intellect* **Debug window** displaying	List of available modes of **Debug window** displaying	None	**Disabled** – **Debug window** is not displayed. **Debug 1** – **Debug window** is displayed and a log-file containing recordings about modules errors is created. **Debug 2** – **Debug window** is displayed and a log-file containing recordings about modules errors and alerts is created. **Debug 3** – **Debug window** is displayed and a log-file containing recordings about all the modules events is created. **Debug 4** – **Debug window** is displayed and a log-file containing recordings about all the modules events, and also additional menu that is individual for each module (used by programmers) are created.
4	The **Log-storing time (hours)** field	Type-in the value in the field	Set the time of keeping log files	Sequence	48 hours	> 0
5	The **Counters logging time (sec)** field	Type-in the value in the field	Assigns the time interval in seconds for logging processor load, memory usage, and disk usage.	Sequence	0	Positive whole numbers and zero. If the value 0 is specified, sensor data is not included in the log file.
6	The **Save logs** checkbox	Checkbox	Enables logs saving	Boolean type	Yes	**Yes** – logs are saved. **No** – logs are not saved.
7	The **Redirect to debugger** checkbox	Checkbox	Enables the debugger	Boolean type	None	**Yes** –the debugger is in use. **No** – the debugger is not in use.
8	The **Maximum size (MB)** field	Type-in the value in the field	Defines the maximum size of RAM that log files can use. Log files are archived after that size is reached.	Sequence	100 MB	>= 100 Values less than 100 Mb are ignored.
The **JPG** and **AVI** files export path group						
9	The **Default (Intellect\Exp-ort)/Other** switch	Set in the position	Set the folder for exported files from *Intellect* video archive	-	Default (Intellect\Export)	Default (Intellect\Export) – exported to the C:\Users\%current user name%\Documents\Intellect\export\ folder Other – exported to the selected folder
10	The **Other** field with the button	Click the button/type-in the value in the field	Set the pathname to the folder, where files from video archive are to be exported when the switch is set in the **Other** position	Pathname	-	-
11	The **Open folder** button	Click the button	Opens the current folder to export the files	-	-	-
12	The **Record path** checkbox	Checkbox	The checkbox forbids export catalogue change while exporting the archive period as well as exporting the archive from AviExport utility.	Boolean type	No	**Yes** – export catalogue change is forbidden. **No** – export catalogue change is allowed.
No group						
13	The **Receive uncompressed video** checkbox	Checkbox	Enables receiving uncompressed video from the Server. As a rule is set on the Client	Boolean type	No	**Yes** – Client receives uncompressed video from the Server **No** – Client receives compressed video from the Server

14	The **Event viewer over all windows** checkbox	Checkbox	Enable displaying the Event viewer window over all windows.	Boolean type	No	**Yes** – the Event viewer window is displayed over all windows. **No** – the Event viewer window is displayed if a corresponding screen is selected
15	The **Only local protocol** ch eckbox	Checkbox	Enables logging the events registered in the given computer to the Events protocol database. ***Note.*** *This parameter can be set on the settings panel of the* ***Computer*** *object – see Configuring events logging section.*	Boolean type	No	**Yes** – events registered in the given computer are recorded to the Events protocol database **No** – all required events are recorded to the Events protocol database
16	The **Disable protocol** check box	Checkbox	Disables events logging to the Event viewer database on this computer. ***Note.*** *This parameter can be set on the settings panel of the* ***Computer*** *object – see Configuring events logging section.*	Boolean type	No	**Yes** – events are not logged to the Event viewer database **No** – events are logged to the Event viewer database
17	The **Used memory** dump checkbox	Checkbox	Enables logging .dmp file with a copy of main memory with incorrect shutting down at least one of the system modules to the Intellect root folder	Boolean type	No	**Yes** – memory dump is created **No** – memory dump is not created
18	The **Support old scripts** ch eckbox	Checkbox	Set the support of program tools in *Intellect*	Boolean type	No	**Yes** – both scripts and programs are supported **No** – only scripts are supported
19	The **Time synchronization** checkbox	Checkbox	Set time synchronization of all computers in the distributed system with system time of this computer. Time is automatically synchronized at midnight every 24 hours or when INTELLECT™ is started on the Server that is the source of time synchronization.	Boolean type	No	**Yes** – synchronization is enabled **No** – synchronization is disabled
20	The **Overlay in Event** view er dropdown list	Drop-down list item	Set the overlay mode for processing the video signals that can be viewed with the help of the Event viewer object	Names of overlay modes	Overlay 2	**None** – video signals are not processed by video card **Overlay 1** – video signals are processed as a single video stream **Overlay 2** – video signals are processed independently from each other
21	The **Application language** dropdown list	Drop-down list item	Assigns the *Intellect* Software System's interface language	Names of installed languages	-	Depends on the set of installed languages. The process of installing languages is described in Intellect Software System's interface language.

The Settings panel of the DNS section

The **DNS** section is used for setting the automatic connection between the Client and reserve Servers in case of connection loss with the main Server. In the **DNS** section it is necessary to specify netnames and IP-addresses of reserve Servers as they are not listed in the Windows registry by default.

The settings panel for the **DNS** section is shown in the figure.

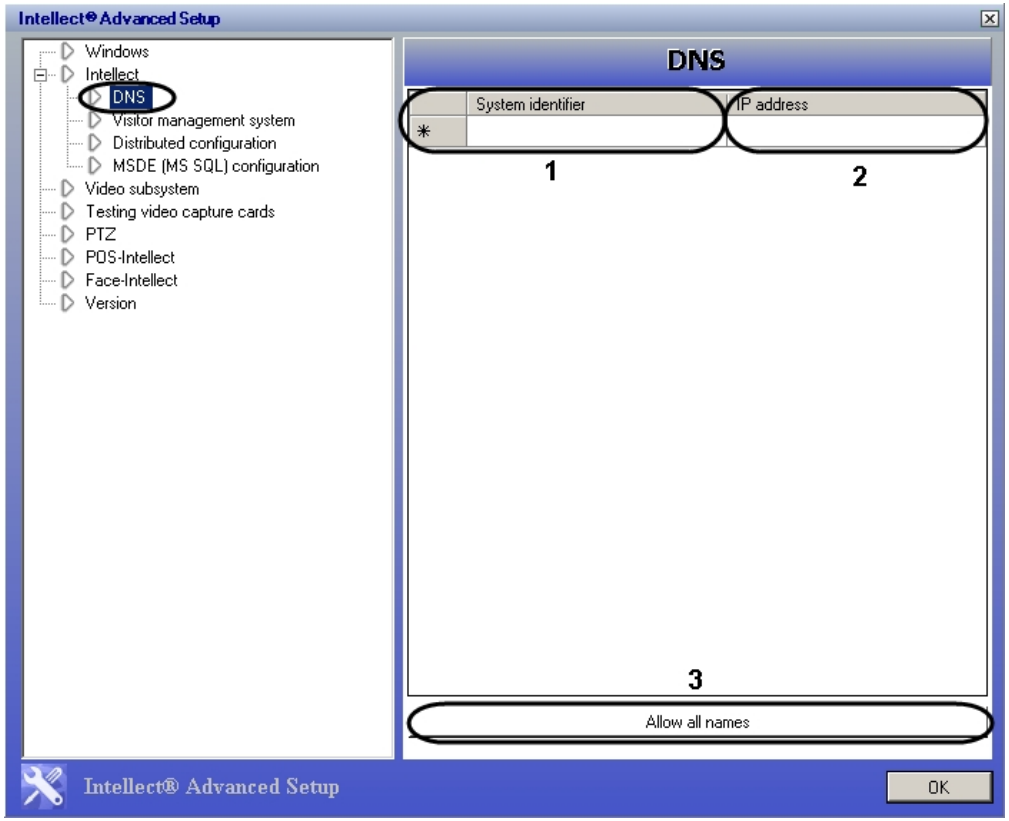

The parameters of the DNS settings panel are described in the table.

№	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **System identifier** column	Type-in the value in the field	Set the netname of the reserve video Server if the connection with main Server is lost	-	-	Depends on net settings of reserve video server
2	The **IP-address** column	Type-in the value in the field.	Set the IP-address of the selected reserve video Server	IP-address	-	Depends on net settings of reserve video Server
3	The **Allow all names** button	Click the button	Computer's IP-addresses, set in the **System identifier** column, are automatically added to the **IP-address** column, if these addresses are enabled and identified	-	-	-

The Settings panel of the Visitor management system section

The **Visitor management system** section is designed for creating common photo database of the *Visitor management system* module (is not included into *Intellect* base

configuration). In this section it is necessary to specify netnames of computer where the photos are to be stored. Photos are to be stored in the **Person** folder (<Intellect >\Bmp\Person).

> **Note.**
> The **Person** folder is automatically created when the *Visitor management system* module is installed.

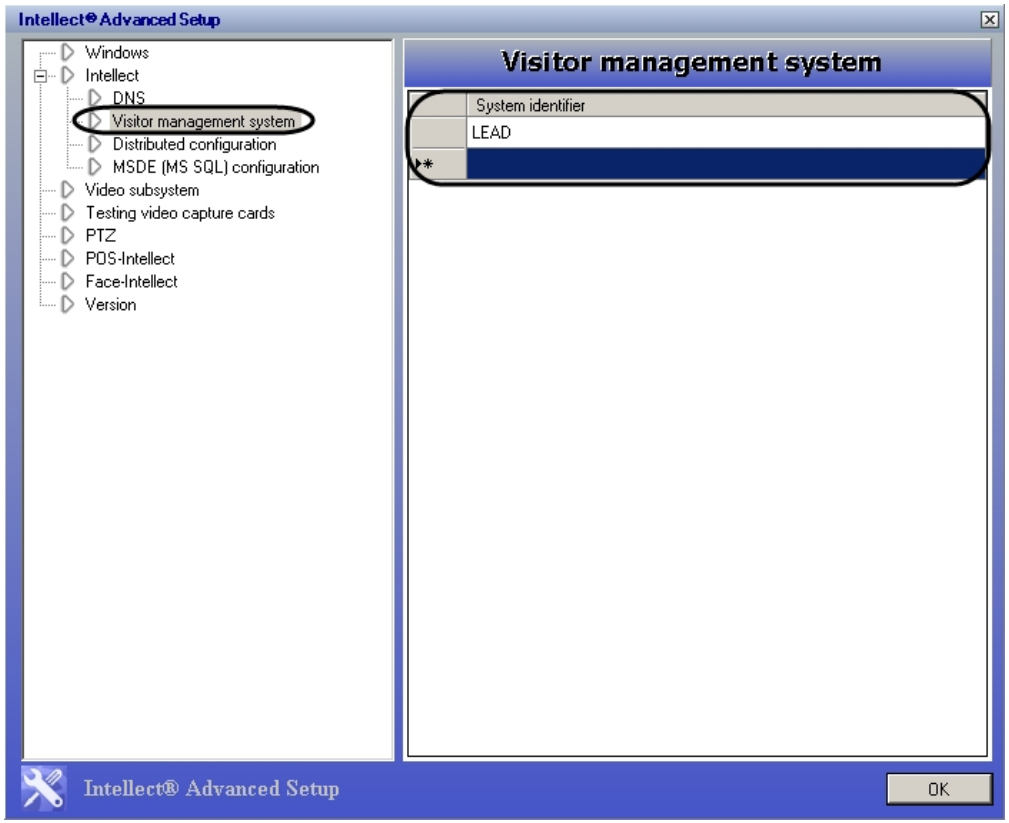

The Settings panel of the Distributed configuration section

The **Distributed configuration** section is for *Intellect* commom database adjustment when real computer netnames do not coincide with the names in the database (for instance when the computer with the database is replaced). The section is also used for adjusting IP-address of selected computer in the database.

The settings panel for the **Distributed configuration** section is shown in the figure.

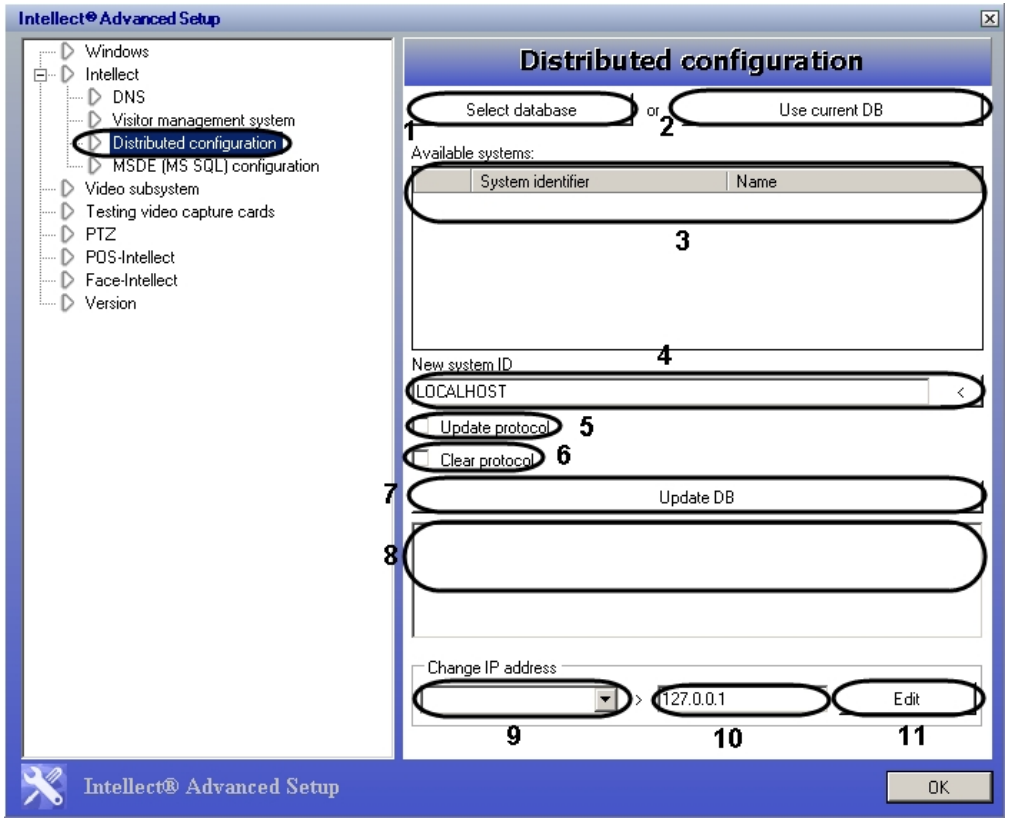

The parameters of the settings panel are described in the table.

№	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Select database** button	Click the button	Opens the standard **Data Link Properties** dialog box to choose the database, where netname and/or IP-address are to be changed.	-	-	-
2	The **Use current DB** button	Click the button	Selection of main *Intellect* database			
3	The **Available systems** table	Automatically	Displays the list of netnames of computers that are in selected database	-	-	Netnames of computers connections between which are set on the **Architecture** tab

4	The **New system ID field** with button	Button is clicked and value is selected from the list/ typed in the field.	Specifies a new netname of a computer selected in the **Available systems** table	-	-	Depends on the current net settings of the required computer. If the network name is longer than 15 characters, then first 15 characters are to be specified as the network name in this field.
5	The **Update protocol** checkbox	Checkbox	Replaces the computer's netname in the **Events protocol** table of the selected main Intellect database	Boolean type	None	Yes– computer's netname is replaced in the **Events protocol** table No – computer's netname is not replaced in the **Events protocol** table
6	The **Clear protocol** checkbox	Checkbox	Clears the event log from the **Events protocol** table of the selected main Intellect database	Boolean type	None	No – the list of registered events is not cleared. Checked – the list of registered events is cleared.
7	The **Update DB** button	Click the button	Runs the process of updating the selected database in accordance with given settings	-	-	-
8	The **Update protocol** field	Automatically	Displays updating process of the selected database	-	-	Depends on the structure of the selected database and the given settings
The **Change IP address** group						
9	The dropdown list with IP-addresses	Select from the list	Specifies IP-address that is to be changed in the selected database	IP-addresses of computers in the selected database	-	Depends on the number of computers connections between which are set on the **Architecture** tab
10	Field of setting IP-address	Type-in the value in the field	Specifies a new IP-address to be changed in the selected database	IP-address	127.0.0.1	Depends on the current net settings of the required computer
11	The **Change** button	Click the button	Changes the IP-address of the required computer in the selected database	-	-	-

The Settings panel of the MSDE (MS SQL) configuration section

The **MSDE (MS SQL) configuration** section is designed for setting the limits of RAM space for MS SQL Server operation with databases of SQL format. This limitation enhances the performance of the system.

The settings panel for the **MSDE (MS SQL) configuration** section is shown in the figure.

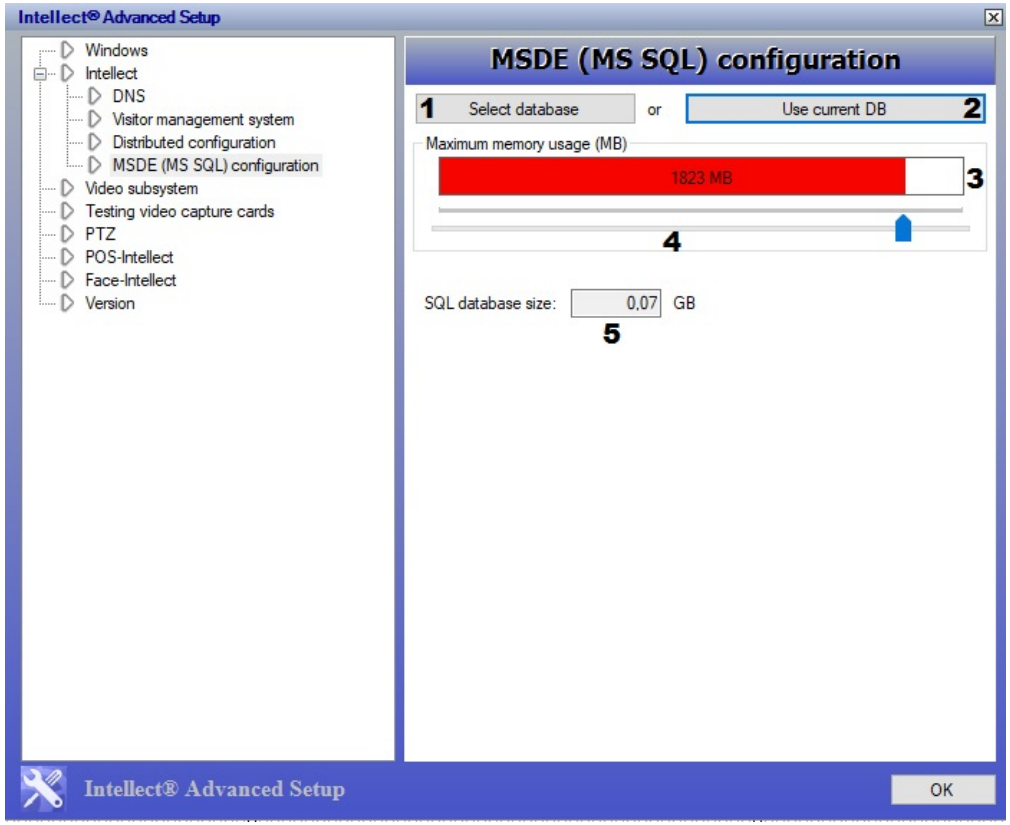

The parameters of the settings panel are described in the table.

№	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Select database** button	Click the button	Opens the standard **Data Link Properties** dialog box for choosing the database of MS SQL format the RAM space for which is to be limited.	-	-	-
2	The **Use current DB** button	Click the button	Selects the main Intellect database	-	-	-
3	The **Maximum memory usage (MB)** indicator	Automatically	Displays the relative (red strip) and absolute (in MB) space of RAM for SQL Server operation	%, MB	-	Depends on full space of RAM; not more than 2048.

4	The **Maximum memory usage (MB)** slider	Set in the position	Specifies the required space of RAM for SQL Server operation	-	Corresponds to the indicator's state.	Depends on full space of RAM; not more than 2048. If more memory is to be allocated to SQL server, then use *SQL Server Management Studio* – see Limiting memory usage by an MS SQL server.
5	The **SQL database size** field	Automatically	Displays the current size of the selected database	Positive real number with amount precision - two decimals	-	Depends on the capacity of storage where the database is.

The Settings panel of the Video subsystem section

The **Video subsystem** section is designed for advanced setup of the video subsystem in order to enhance the performance of the Intellect system.

The settings panel for the **Video subsystem** section is shown in the figure.

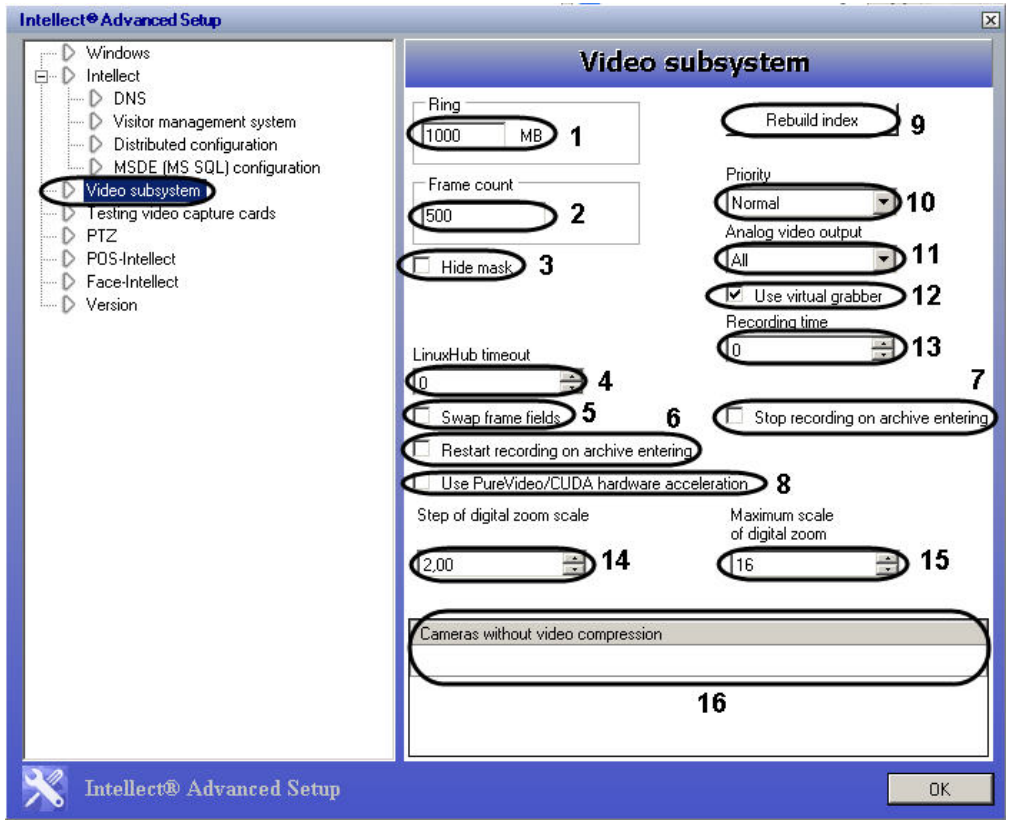

The parameters of the settings panel are described in the table.

No	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Ring** field	Type-in the value	Sets free disk space; when the limit is reached the earliest recordings will be deleted on loop (see General information on video archiving). If 2 or more disks are in use for video archiving, archiving on current disk is performed till there is FreeMbCritical of free disk space (1000 Mb by default, see the info on the key in Regis try keys reference guide). Free space set by the **Ring** parameter is used for recording temporary files. This means that when the limit set by the **Ring** parameter is reached, the maximum size of the temporary file is **FreeMbCritical**. Video can contain less frames than set by the **Frame count** parameter.	MB	1000	Depends on the disk space
2	The **Frame count** field	Type-in the value	Sets the maximum number of frames in one recording file.	frame	500	10 to 999. It is not recommended to change the default value.
3	The **Hide mask** ch eckbox	Checkbox	Prohibits displaying video hidden with the motion detector mask. Video area marked with motion detector mask will be grey-filled. This feature supports only uncompressed video from FS or FX video capture cards.	Boolean type	No	No — video hidden with the mask is displayed Yes – video hidden with the mask video is not displayed
4	The **LinuxHub timeout** list	Type-in the value/select from the list	Sets the maximum timeout for *Intellect* system to maintain the response of LinuxHub server	sec	30	0 to 400000
5	The **Swap frame fields** checkbox	Checkbox	Switches *Intellect* from basic to additional driver if there are video artifacts while using basic driver	Boolean type	None	No – Intellect operates with basic driver Yes – Intellect operates with additional driver
6	The **Restart recording on archive entering** checkbox	Checkbox	Enables restarting record on archive entering.	Boolean type	None	Yes – patch that has been recorded on archive entering is stopped and a new one starts. As a result the user who enters the archive sees a freeze frame corresponding to that on exiting. No – recording is not stopped on archive entering
7	The **Stop recording on archive entering** checkbox	Checkbox	The **Pause** button is pressed on archive entering	Boolean type	None	Yes – the **Pause** button is pressed on archive entering, archive navigation using arrow keys. No – the Pause button is not pressed on archive entering.
8	The **Use PureVideo/CUDA hardware acceleration** chec kbox	Checkbox	Enables **PureVideo/CUDA** support on the Server while decompressing video from IP devices if PureVideo HD card of the 2nd or 3rd generation (Nvidia VP2 and VP3) is installed. Used to reduce Server load due to resources of graphics processor	Boolean type	Yes	No –PureVideo/CUDA is not in use Yes –PureVideo/CUDA is in use
9	The **Rebuild index** button	Click the button	Deletes the database index file. After deleting the index, restart the Intellect system for a new index to be created.	-	-	-
10	The **Priority** drop down list	Select the value from the list	Sets the priority of all *Intellect* video system processes	Names of priority processes	Below normal	Realtime, High, Above normal, Normal, Below normal, Low.

11	The **Analog video output** dropdown list	Select the value from the list	Selects analog output operation mode.	Names of availiable modes	All	All - video signals from all the analog outputs are displayed on one screen One – video signal from one analog output is displayed on one screen
12	The **Use virtual grabber** checkbox	Checkbox	Allows access to virtual **Video Capture Devices** settings (grabber) in *Intellect* *Note. **Desktop Experience Feature** is to be enabled when using a virtual video capture device on server OS and avi files.*	Boolean type	No	Yes – the **Virtual** value is available from the **Type** dropdown list on the settings panel of the **Video Capture Device** objects No – the **Virtual** value is not available for the **Video Capture Device** objects
13	The **Recording time** list	Type-in the value/select from the list	Sets the length of the file in seconds, restricting fragment's size not by number of frames but by time of its recording.	Time in sec	0	Unlimited
14	The **Step of digital zoom scale** field	Setting the value in the field / select the value from the list	Specifies the fractional step of video image zooming	Real numbers with the fixed point	2,00	Maximum value depends on the maximum scale of digital zoom (see. №17). Minimum value is 1,00.
15	The **Maximum scale of digital zoom** field	Setting the value in the field / select the value from the list	Specifies the maximum value of digital zoom of video image	Numbers	16	1-16
16	The **Camera without video compression** table	Type-in the value in the field	Specifies the numbers of cameras connected to the video capture cards with compression. There is no compression for these cameras, i.e. the compressor settings in Intellect are ignored.	Camera's serial number	-	Depends on the number of cameras registered in the system

Note.
Setting the non-zero value to the **Recording time** parameter does not exclude the **Frame count** parameter. If the values for both parameters are set, then the file recording will be performed in accordance with the value which comes first. For instance, if the value of **Recording time** is equal to 10 seconds and **Frame count** is equal to 500 frames (by default) and in ten seconds the fragment consists of 80 frames, then 80-frame file is recorded.

The Settings panel of the Testing video capture cards section

The **Testing video capture cards** section is designed to test the connection of the cameras to the video capture card.

Note.
To use this functionality *Intellect* is to be logged off. Otherwise there is "Cards not found" message.

The settings panel for the **Testing video capture cards** section is shown in the figure.

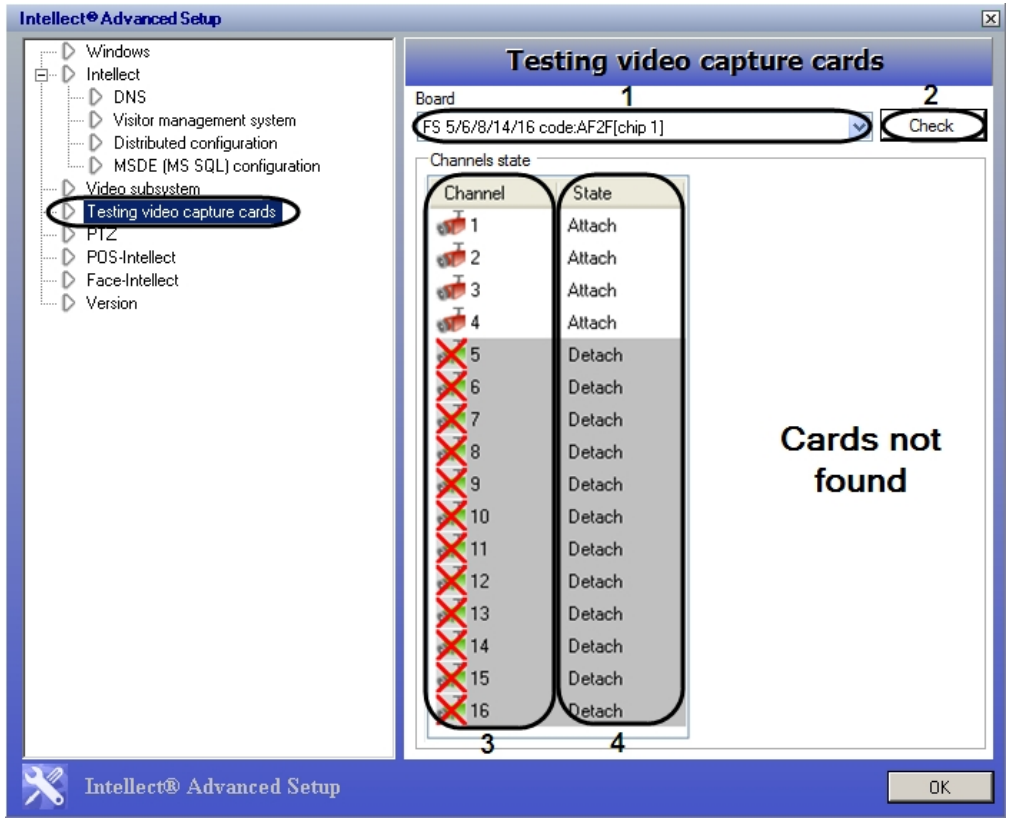

The parameters of the settings panel are described in the table.

No	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Board dropdown** list	Dropdown list	Specifies the video capture card which camera connections are to be checked	List of video capture cards	-	Depends on the number of installed video capture cards
2	The **Check** button	Click the button	Starts the testing process of the video capture card. The *Intellect* system is to be closed at the time of testing.	-	-	-
The **Channels** state table						
3	The **Channel** colu mn	Automatically	Displays the channels numbers of the selected video capture card	-	-	From 1 to 16

4	The **State** column	Automatically	Displays the state of camera connections to the channels of the selected video capture cards			Attach – camera is attached Detach – camera is detached

The Settings panel of the PTZ section

The **PTZ** section is used for setting the telemetry control elements.

The settings panel for the **PTZ** section is shown in the figure.

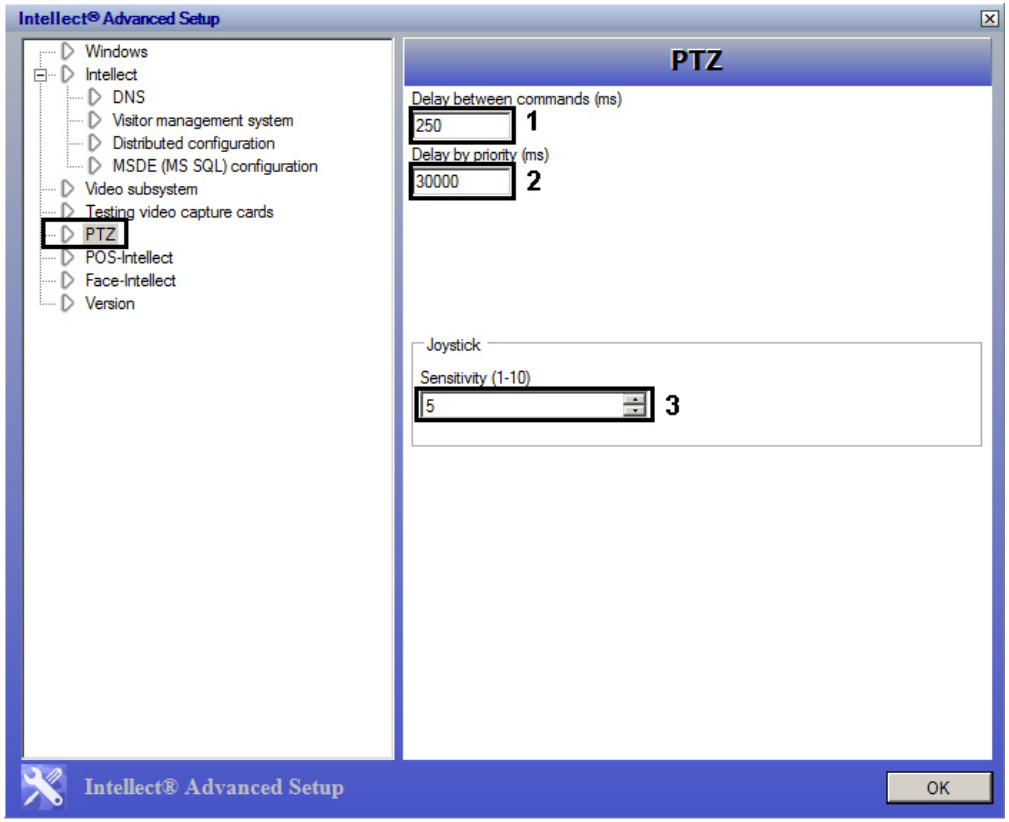

The parameters of the **PTZ** settings panel are described in the table.

No	Parameter name	Field type	Description	Representation	Default value	Value range
1	The **Delay between commands (ms)** field	Type-in the value	Sets the delay time between executing the commands for PTZ devices This parameter is not supported by IP cameras.	ms	250	No limitations. It is not recommended to change the default value.

2	The **Delay by priority (ms)** field	Type-in the value	Sets the delay time before switch from the PTZ control to a user with lower or equal priority.	ms	30000	No limitations. It is not recommended to change the default value.
The **Joystick** group						
3	The **Sensitivity (1-10)** field	Enter the value in the field	Sets sensitivity of the joystick: the less value the more sensitivity. If value of parameter is small then camera will react on even small deviations of the joystick. If value of parameter is great the camera will stay fixed until significant deviation of joystick	Sensitivity in conditional units	5	1-10

The Settings panel of the POS-Intellect section

The POS-Intellect section is designed for setting the POS module for controlling cashier operations (is not included in INTELLECT™ basic version). Detailed information about POS-Intellect configuring using the tweaki.exe utility is presented in The settings panel for the POS sections using the tweaki.exe utility section in the POS-Intellect software package. Administrator's Guide documentation.

The Settings panel of the Face-Intellect section

The **Face-Intellect** section is designed for setting the FACE module for face recognition and search (is not included in INTELLECT™ basic version). Detailed information about Face-Intellect configuring using the tweaki.exe utility is presented in The settings panel for the Face-Intellect sections using the tweaki.exe utility section in the Face-Intellect software package. Administrator's Guide documentation.

The Settings panel of the Version section

The **Version** section provides information about INTELLECT™ software modules: versions, paths to executable files and .dll libraries, file sizes and dates of creation and modification.

The settings panel for the **Version** section is shown in the figure.

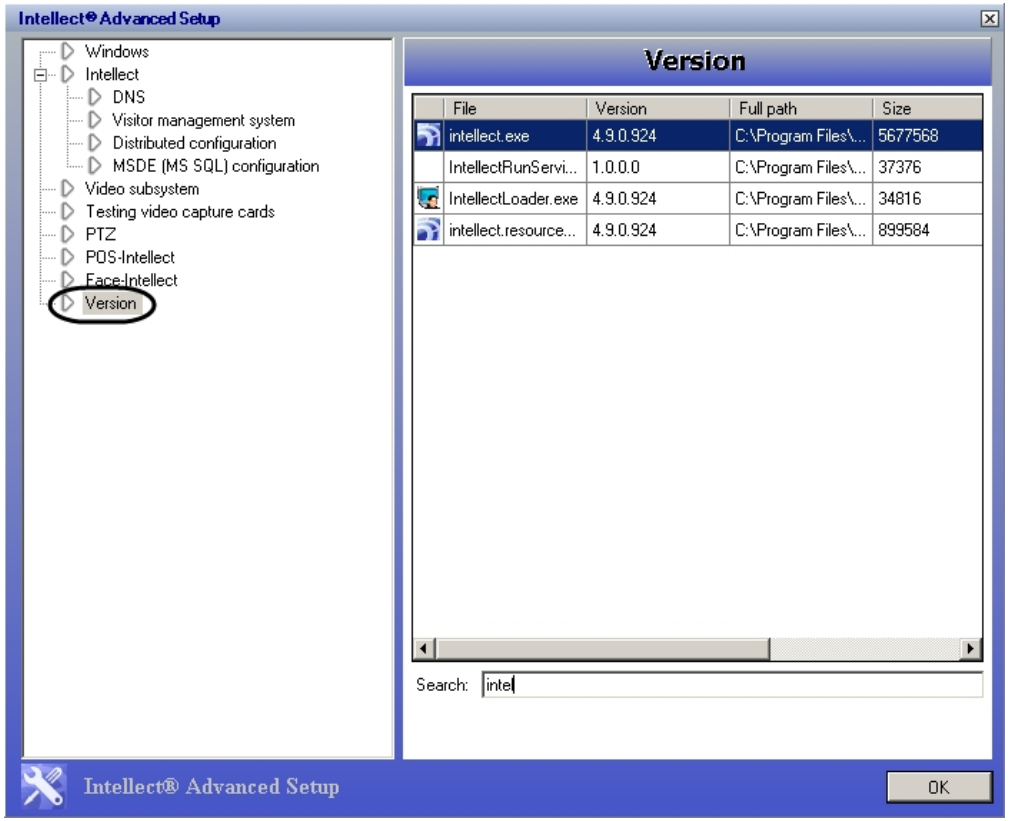

Typical tasks concerning system extended settings

Selecting and enabling the debug mode of Intellect software

On the page:

- Enabling debug mode
- Configuring log keeping

Debug mode is a special operation mode when the Debug Window is open, and is designed for analyzing the progress of Intellect software operation and for prompt debugging in case errors occur. Log files are created in this mode - they are stored on the disk for a specific time period.

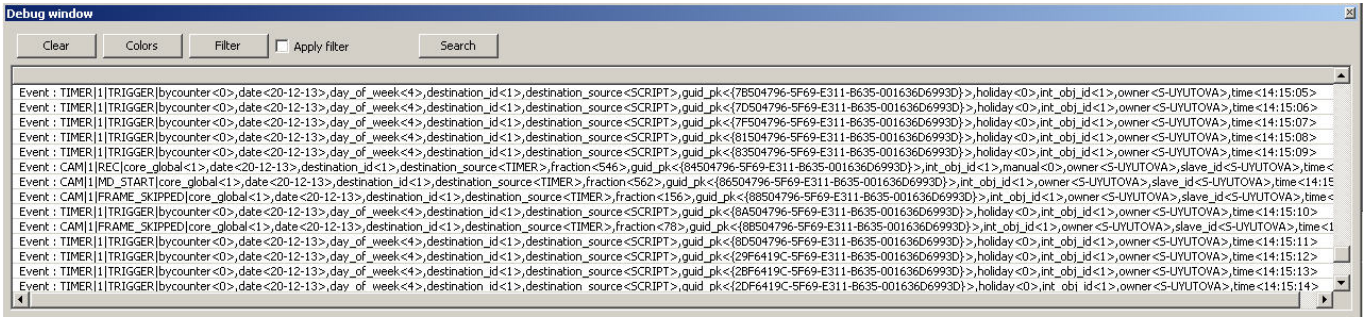

Enabling debug mode

By default, debug mode is disabled. To enable debug mode, do the following:

1. Shut down *Intellect* software.
2. Start the Tweaki.exe utility (see the Starting and shutting-down the Tweaki.exe utility)
3. Select the **Intellect** node in the tree on the left side of the utility dialog box.
4. Change the parameter **Debug Mode** from **None** to **Debug 1, Debug 2, Debug 3** or **Debug 4** (see The Settings panel of the Windows section).
5. Click the **OK** button.
6. Start *Intellect* system.
   The **Debug window** item will appear in the *Intellect* main control menu.
   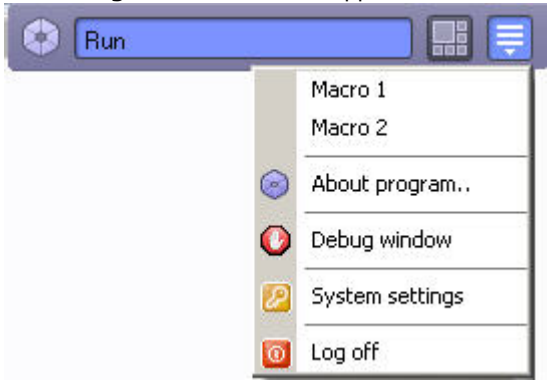

7. Select **Debug window** in the main control menu to open the **Debug window**. The selected item will be marked with a tick.

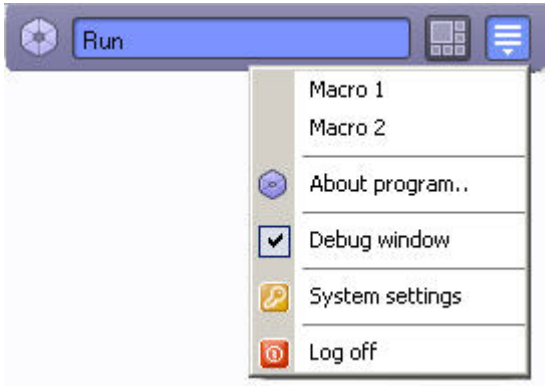

To hide the **Debug window**, select the **Debug window** item in the menu once more.

> **Note**
> The debug mode slows the system down and uses a lot of system resources. We strongly recommend to enable debug mode for debugging purposes only and to disable it when all the settings are completed.

> **Note**
> Find details in the The Debug window section of Programming Guide (JScript).

Configuring log keeping

One can set log keeping parameters both on the Intellect setting panel in the Tweaki.exe utility and using some registry keys:

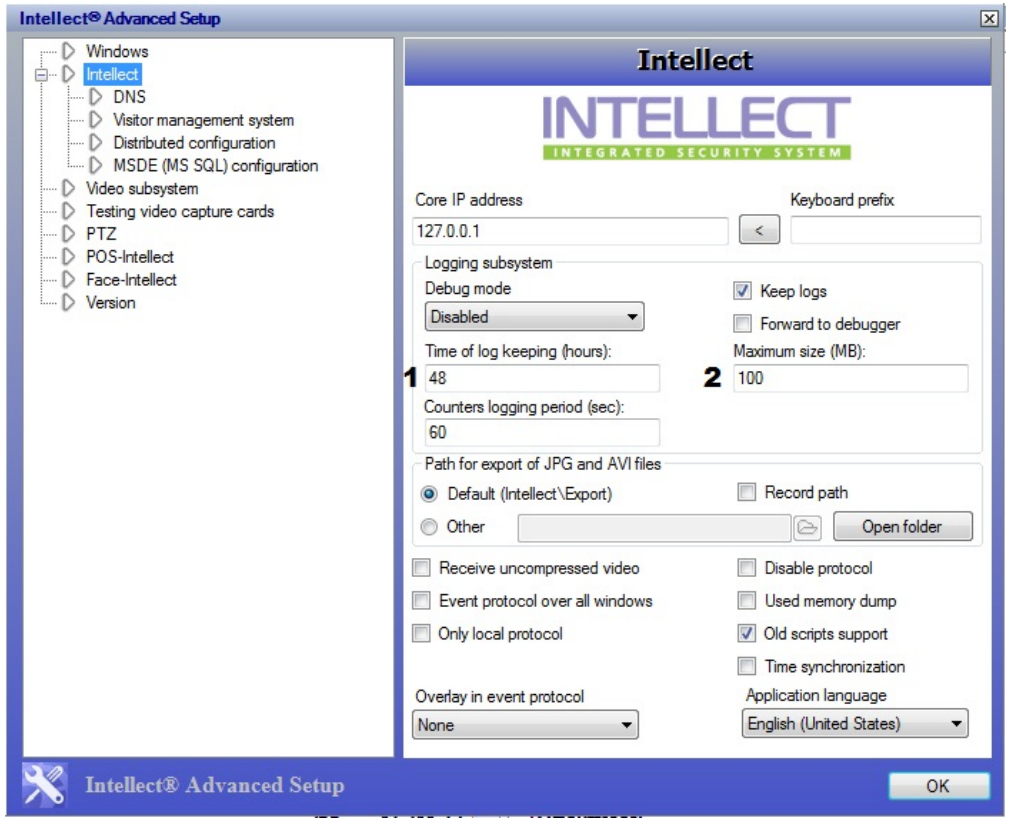

1. The **Time of log keeping (hours)** parameter means the same as DebugTime registry key. It specifies the number of hours for keeping log files. 48 hours by default.
2. The **Maximum size (MB)** parameter means the same as DebugSize registry key. It specifies the number of megabytes provided for log. 100 MB by default.
3. The DebugZipDays registry key enables the logs archiving in the .gz format and specifies the time period for their keeping. 2 days by default.

Log files are rewritten when one of these parameters is at its maximum.

Find more about registry keys in Registry keys reference guide.

Example.

The **Time of log keeping (hours)** is 720 hours (1 month) and the **Maximum size (MB)** is 100 MB.

One week later the size of log file is 100 MB. It starts being rewritten though the log is kept less than it was specified.

And if DebugZipDays has the value equal to the time period in days to keep logs, then logs are not rewritten - they are archived in the *.gz format and are kept for so long as it was specified in DebugZipDays parameter.

Extended setup of the distributed architecture

Extended setup of the distributed architecture is performed in the **DNS** section; it is intended to create reserve connections between the Client and other cores (Servers) in case of loosing connection with the main core. Reserve connections are to be set up for each Client individually.

To create a reserve connection between the Client and a core, do the following:

1. Stop the *Intellect* software if it was running.
2. Start the Tweaki.exe utility (see the Starting and shutting-down the Tweaki.exe utility).
3. Select the **DNS** node in the tree on the left side of the utility dialog box.
4. Specify the core computer name and IP-address in the table.
5. Click **OK.**

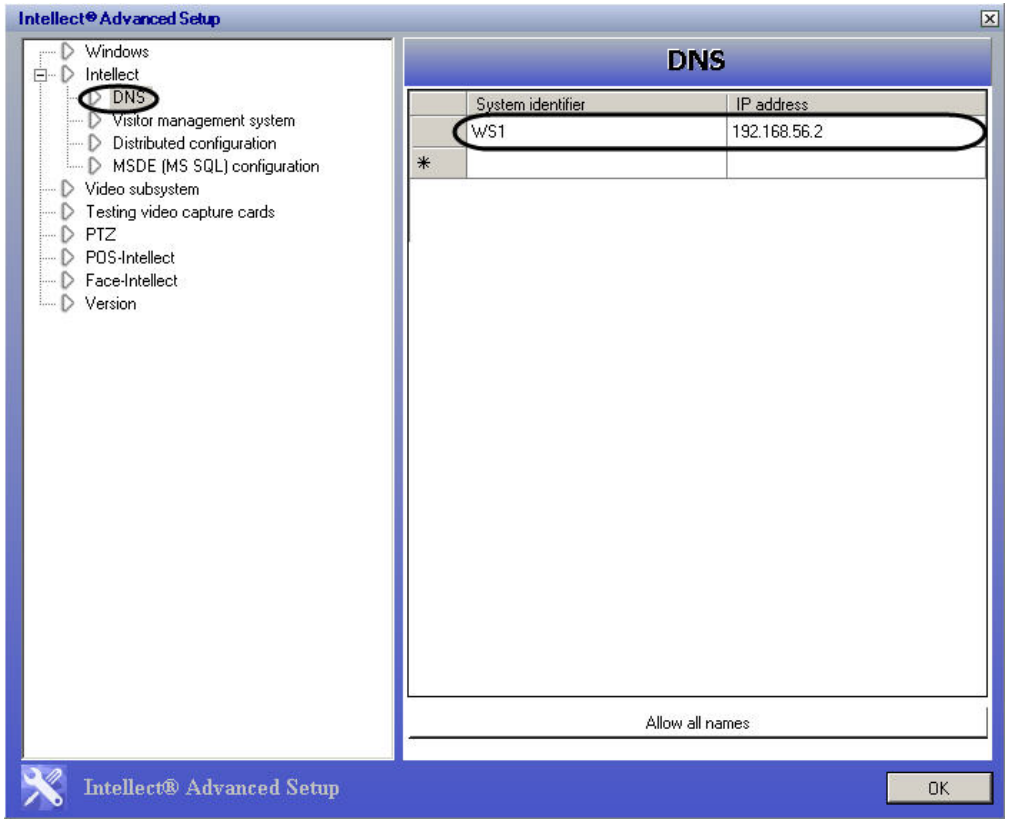

Changing computer names and IP-addresses in the configuration database of the Intellect system

The **Distributed configuration** node allows changing the computer name and/or IP-address in the *Intellect* database.

To change the computer name in the configuration database, do the following:

1. Close the *Intellect* software if it is open.
2. Start the Tweaki.exe utility (see the Starting and shutting-down the Tweaki.exe utility)
3. Select the **Distributed configuraion** in the tree on the left side of the utility dialog box (1).

4. Select the database containing the computer name to be changed (2) with **Select database** or **Use current DB** buttons.
   In result the **Available Slaves** table will show all computer names registered in the selected database (4).

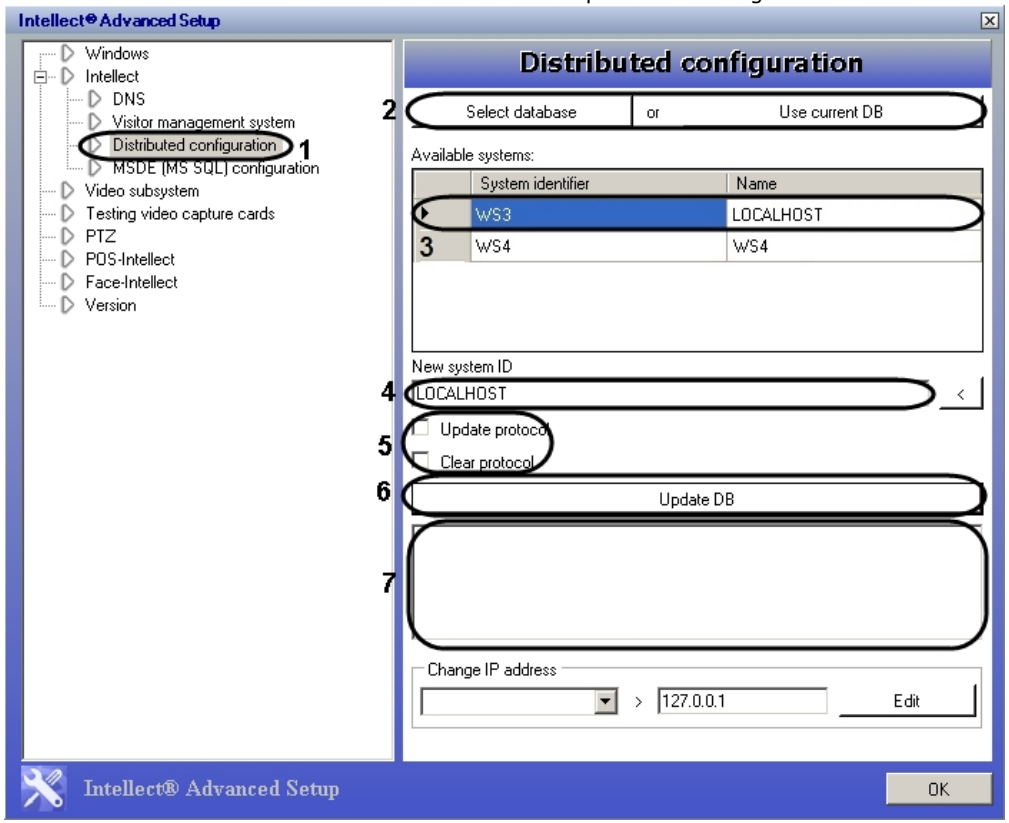

5. To select the computer name to be changed in the **Available Slaves** table, right-click an appropriate row. The row will be highlighted.
6. Click the button next to the **New Slave ID** field to see the drop-down list of available computer names. Select the required computer name in the list. The selected name will appear in the **New Slave ID** field (4). Name can also be entered in the field manually.
7. Check one of the following checkboxes: **Check the Protocol** checkbox to replace the computer name in the events log, or the **Clear Protocol** checkbox to delete all records in the log. Only one of two checkboxes should be checked (5).
8. Click the **Update DB** button (6). The progress of replacing computer names for a new one will be displayed in the field below the **Update** button (7).

To change the IP-address in the configuration database, do the following:

1. Do steps 1-4 of the previous instructions (1).
2. Select the IP-address to be replaced from the **From** drop-down list (2).
3. Enter a new IP-address into the **To** field, or leave the default LOCALHOST value (3).
4. Click the **Change** button (4).

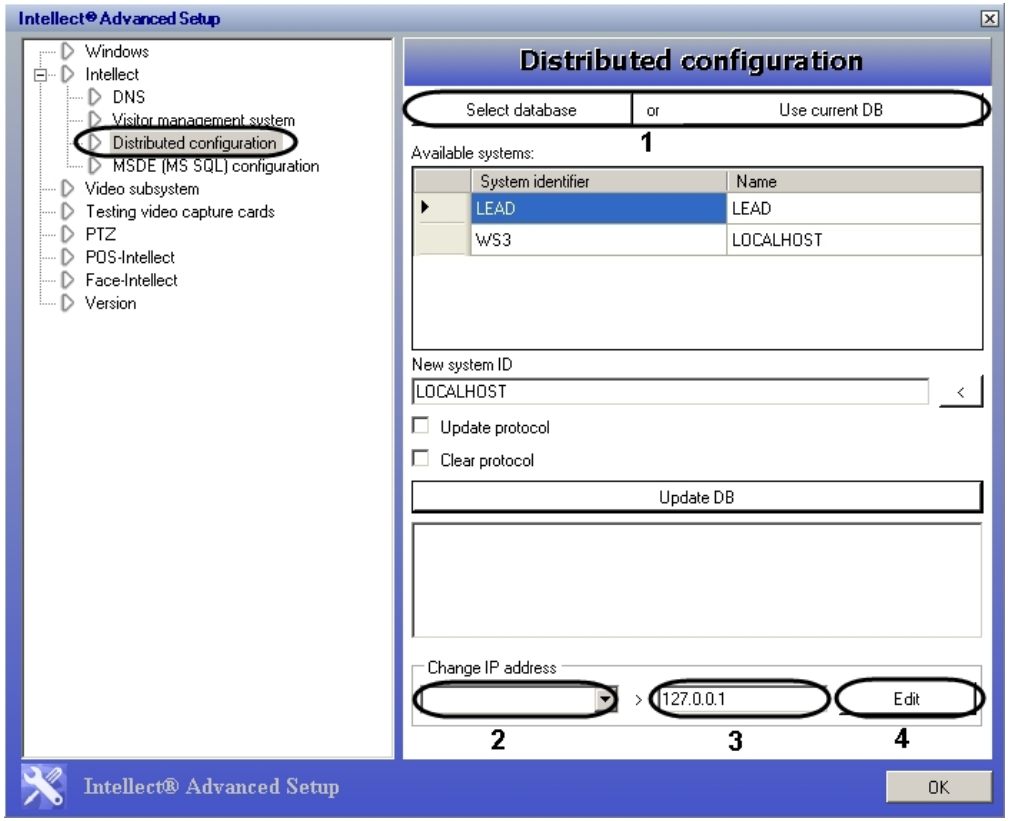

The IP-address in the **From** field and in the database will be changed.

Limiting memory usage by an MS SQL server

A certain amount of disk space is allocated for the SQL server for storing its data, functions and other internal structures. Allocated RAM is determined by default by the total RAM resources available for the SQL server in the system. The Tweaki.exe utility allows limiting the amount of RAM allocated for the SQL server. Do the following:

1. Close the *Intellect* software if it is open.
2. Start the Tweaki.exe utility (see Starting and shutting-down the Tweaki.exe utility section).
3. Select the **Configure MSDE (MS SQL)** node in the tree on the left side of the utility dialog box (1).
4. Select the MS SQL database to limit the allocated RAM by doing one of the following (2) using **Select database** or **Use current DB** buttons.
   The **Maximum memory usage (MB)** group will display the amount of space allocated for the selected database (3).

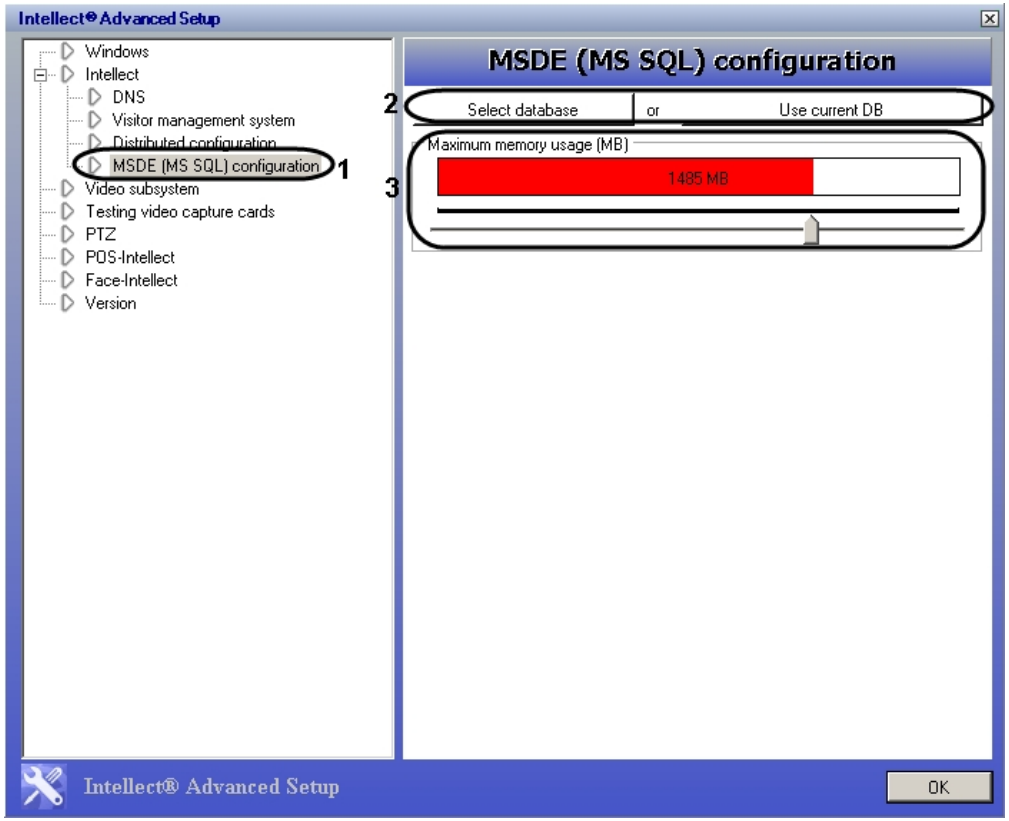

5. Drag the slider to a position representing the required amount of memory to be allocated for the SQL server (3).
6. Click the **OK** button.

In the advanced settings utility not more than 2048 MB can be allocated to SQL server. If more memory is to be allocated to SQL server, then use *SQL Server Management Studio*. For this do the following:

1. Run *SQL Server Management Studio* tool.
2. Right-click the Server DB.
3. Select the **Properties** item in the appeared menu.
4. Select the **Memory** page in the appeared **Server Properties** box (1).

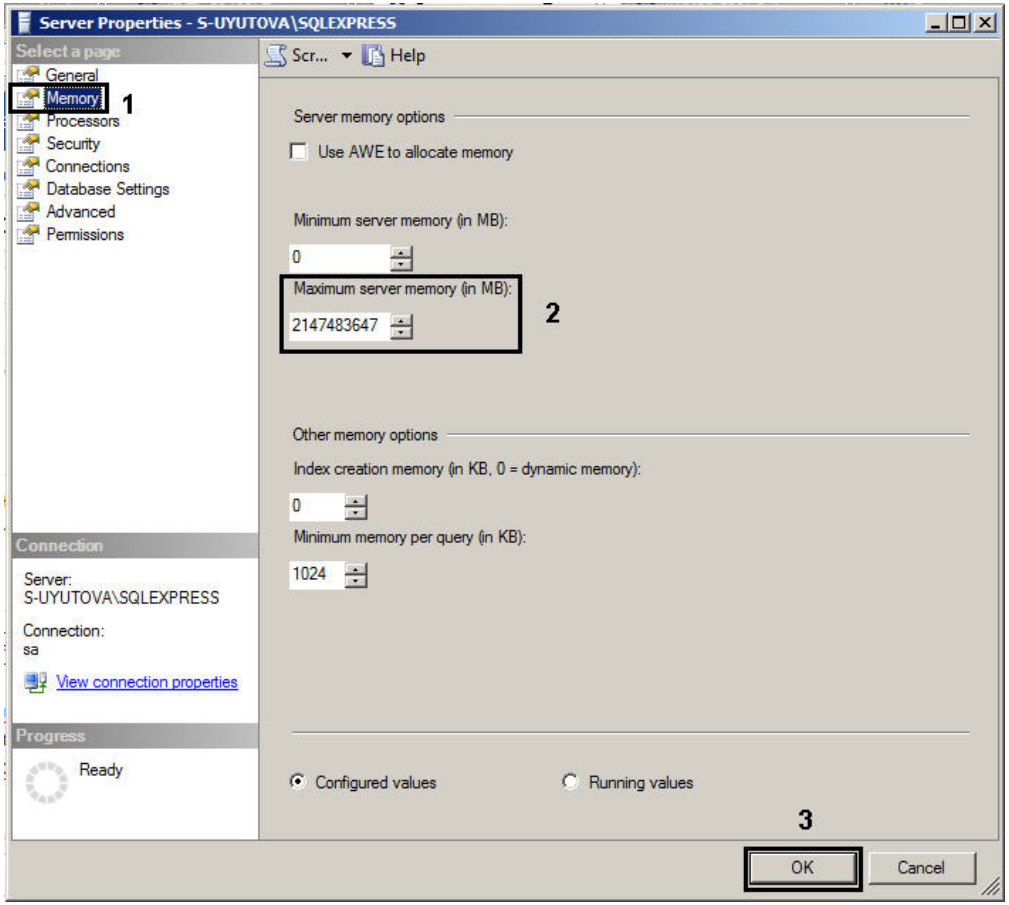

5. Specify the required server memory in MB in the **Maximum server memory (in MB)** field (2).
6. Click the **OK** button (3).

Re-indexing the audio and video recordings archive

To re-index the audio and video archives, do the following:

1. Close the Intellect software if it is open.
2. Start the Tweaki.exe utility (see the Starting and shutting-down the Tweaki.exe utility).
3. Select the **Video Subsystem** node in the tree on the left side of the utility dialog box (1).

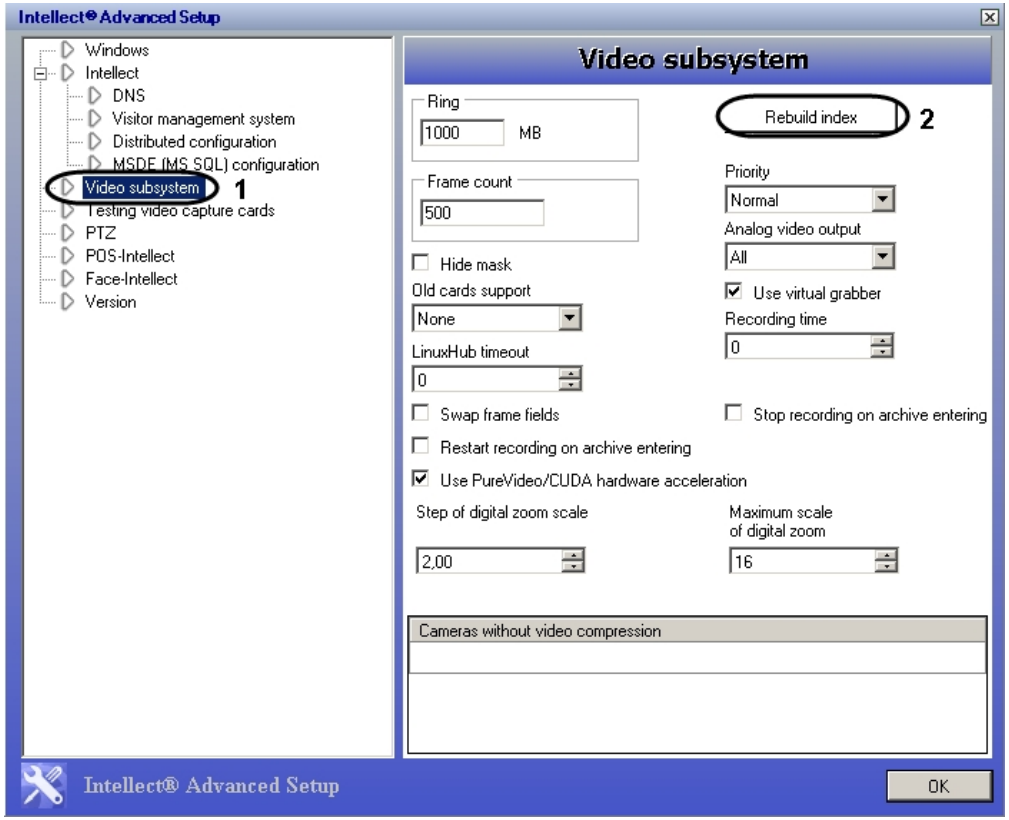

4. Click the **Rebuild Index** button to delete the INDEX folder with .idx files containing the indexes to the video recording files in the archive (2).

> **Note.**
> Pressing the button **Rebuild index** sets the value of parameter IndexRebuilding=1 in the register's branch of OS Windows: HKLM\SOFTWARE\ITV\INTELLECT\VIDEO for 32-bit system (HKLM\SOFTWARE\Wow6432Node\ITV\INTELLECT\VIDEO for 64-bit). Afterarchive reindexing the value of the parameter IndexRebuilding=0 is automatically set. Whwn Intellect software is run together with IndexRebuilding=1 parameter, the archive is reindexed without any attmpt to reas it from *.idx files.

5. Click **OK**.
6. Start the *Intellect* system again. A new INDEX folder will be created in the video archive folder, containing new indexes.

This completes re-indexing of the database.

Enabling the Pure video/CUDA hardware acceleration

It is possible to enable the PureVideo/CUDA hardware acceleration when video signals are decompressed from IP devices. In this case decompression may be carried out by Server's graphics processor and this reduces the load on CPU.

> **Attention!**
> It is recommended to update the driver of the card that supports the PureVideo/CUDA hardware acceleration. Drivers are available for downloading at the official web page of

Nvidia (www.nvidia.com).

Note.
Detailed information about the PureVideo/CUDA hardware acceleration is given in reference manual of Nvidia company.

The PureVideo/CUDA hardware acceleration functionality is implemented correctly when Server meets the following requirements of the software platform:

1. Is managed by OS Windows XP/Vista/7
2. The PureVideo HD video card of the second or third generation is installed (Nvidia VP2 and VP3)

Note.
Widespread models of video cards that support the PureVideo/CUDA:

1 Nvidia GeForce GTX 295;

2 Nvidia GeForce GTX 285;

3 Nvidia Quadro NVS 450;

4 Nvidia GeForce 9800 GT;

5 Nvidia Quadro NVS 420;

6 Nvidia Quadro NVS 295.

Note.
In the *Intellect* software package the PureVideo/CUDA hardware acceleration is applied only for video signals' decompression in H264 codec.

Note.
If the resolution more than 1920x1088 is set in the camera, then the PureVideo/CUDA hardware acceleration is not used for *video signals' decompression*.

To enable the PureVideo/CUDA hardware acceleration, do the following:

1. Shutdown the *Intellect* software package if it was run on the computer.
2. Run the Tweaki.exe utility (See the Starting and shutting-down the Tweaki.exe utility section).
3. Select the **Video subsystem** section in the tree in the upper left corner of the utility's dialog box (1).

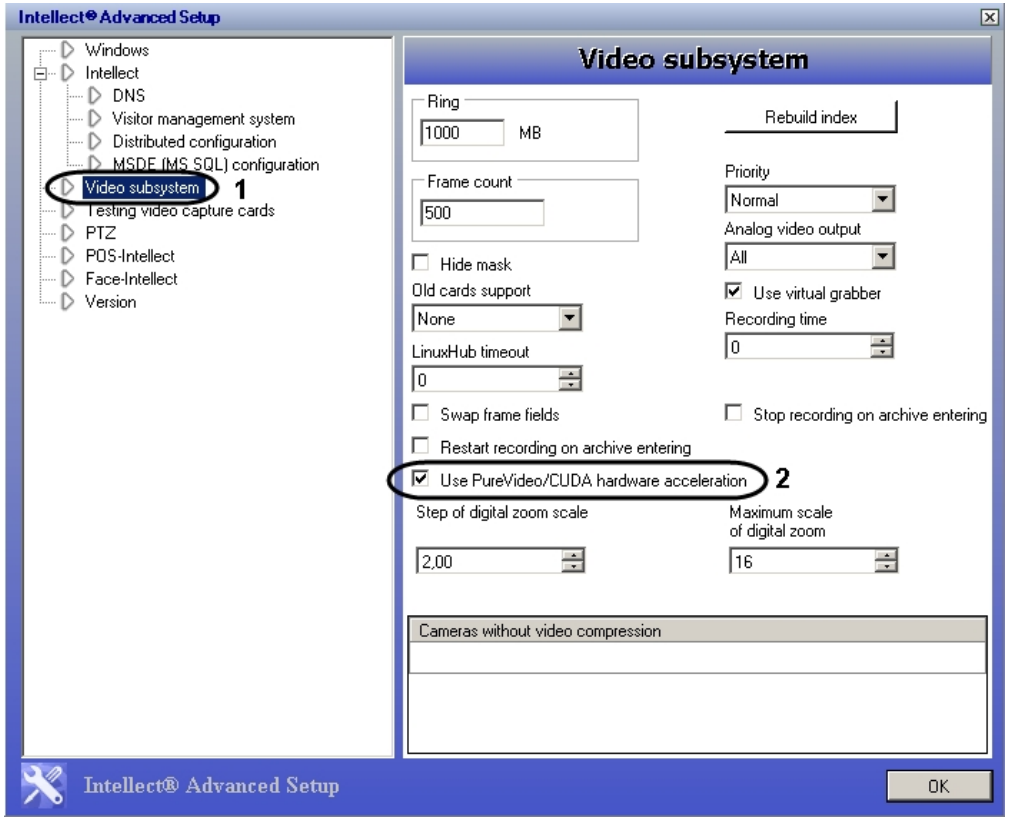

4. Set the **Enable PureVideo/CUDA hardware acceleration** checkbox (2).
5. Click the **OK** button.
6. Go to the settings panel for the **Camera** object.

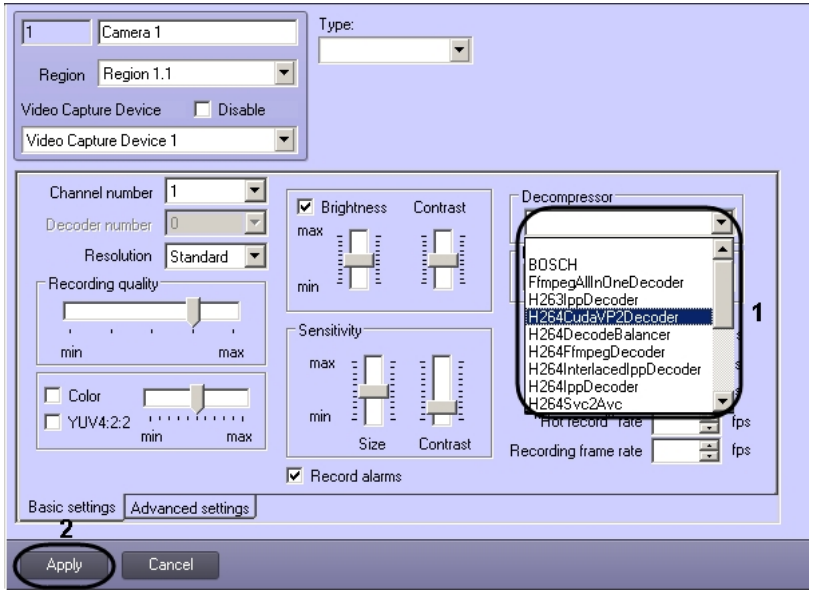

7. In the **Decompressor** drop-down list select the **H264CudaVP2Decoder** value (1).
8. Click the **Apply** button (2).

The PureVideo/CUDA hardware acceleration is now enabled.

Testing video capture cards

To test a video capture card, test its channels using the **Testing video capture cards** module of the Tweaki.exe utility. Do the following:

1. Shut down the *Intellect* software if it is started.
2. Start the Tweaki.exe utility (see the Starting and shutting-down the Tweaki.exe utility section)
3. Select the **Testing video capture cards** node in the tree on the left side of the utility dialog box.

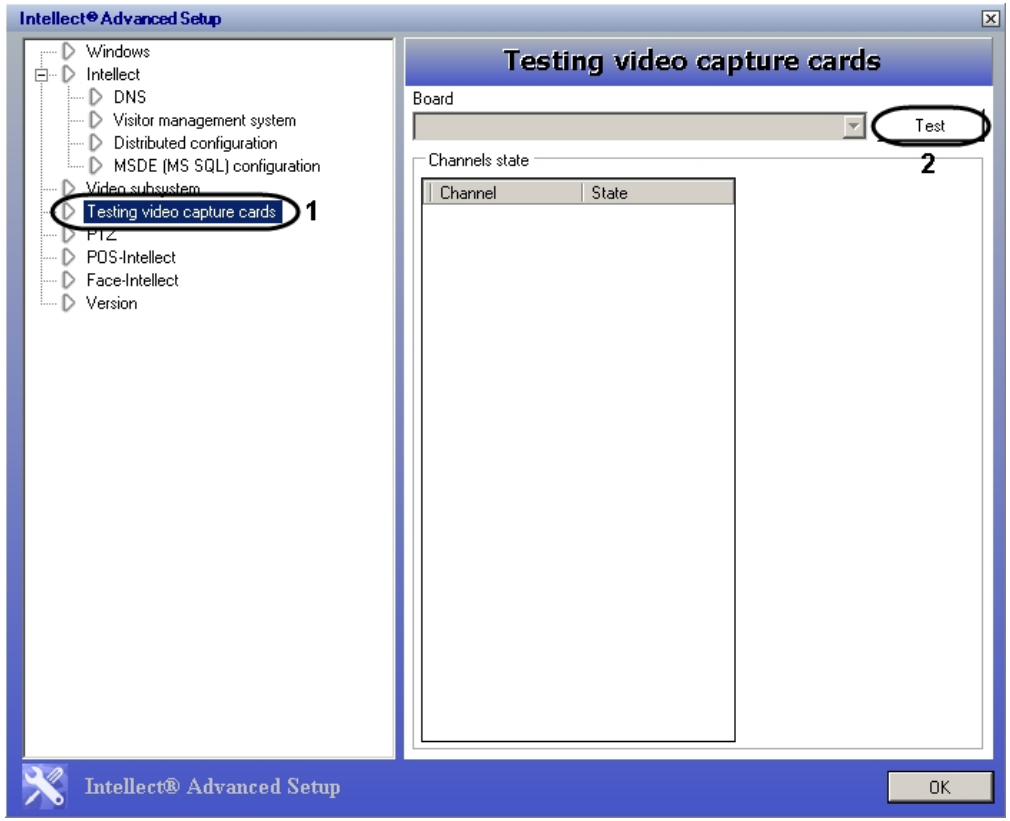

The **Board** field will display the name of the video capture card, and the **Channels state** table will show the information about each channel of the card (number and status). The confirmation of successful testing will be displayed to the right of the **Channels state** table.

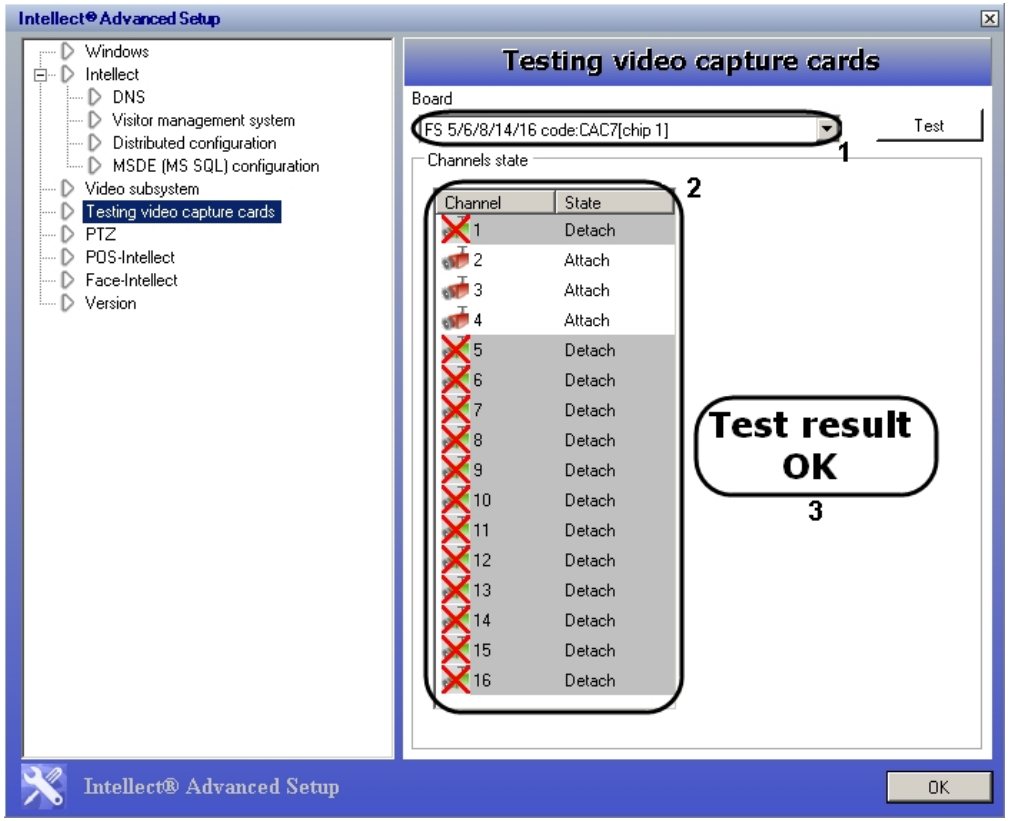

The utility for collecting configuration data on servers and RWS for the Technical Support

The purpose of the Support.exe utility

The Support.exe utility is designed for collecting information about the configuration and operating status of the hardware, OS Windows and the INTELLECT™ system. The utility generates an archive that can be used by AxxonSoft Technical Support Service for troubleshooting purposes. In case of system malfunction or errors in the INTELLECT™ system, do the following:

1. Go to the AxxonSoft tech support server: https://support.axxonsoft.com/
2. Register a new account on the tech support server or log in the registered account.
3. Create an issue for tech support. Attach an archive generated by Support.exe utility.

Information on the issue progress will be sent to the email specified at registration.

Starting and shutting-down the Support.exe utility

To run Support.exe utility, use one of the following methods:

1. From the **Start** menu of OS Windows: **Start -> All programs -> Intellect -> System's information gathering utility**

2. From the **Tools** folder of the Intellect program folder: <Intellect>\Tools\Support.exe

After running the Support.exe , Support –system's information gathering utility dialog box will be displayed on the screen.

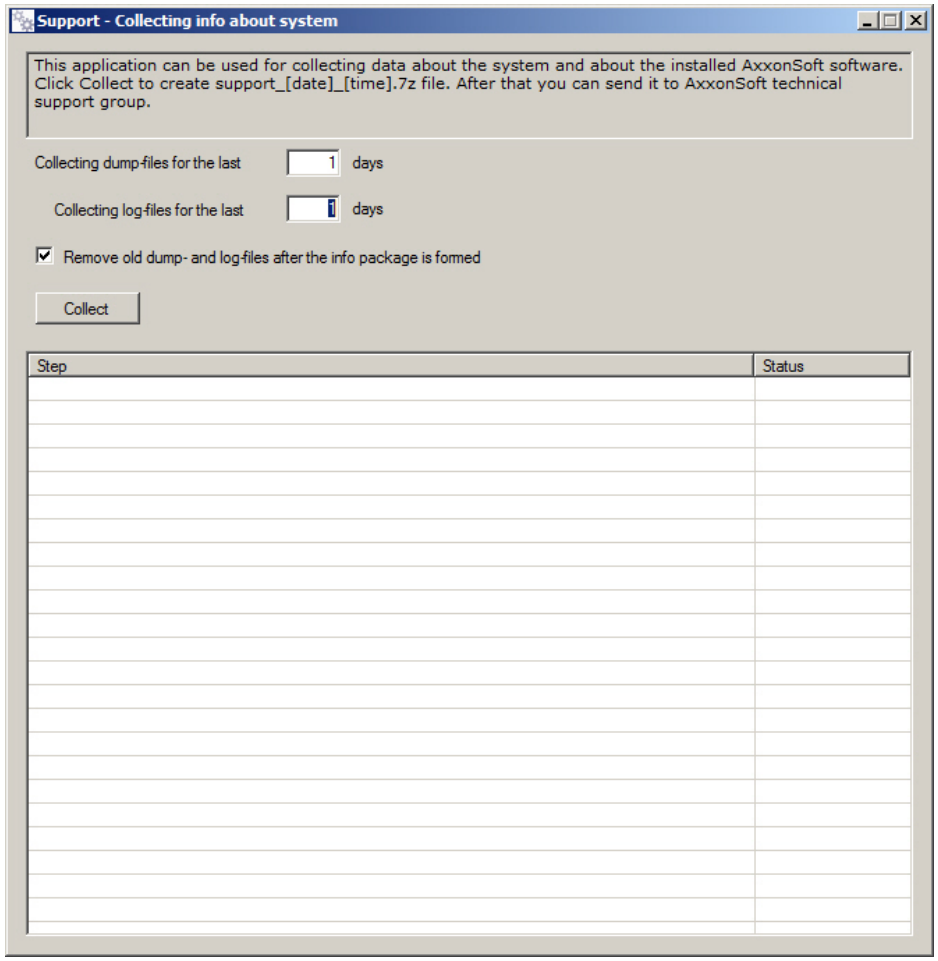

To close the Support.exe utility, click the **Close** button ( ).

The Support interface description

Support.exe utility interface includes the following elements:

1. Short directions for using the Support.exe (1).
2. A group of settings for specifying data set collection time period and deleting dump and log-files after collecting the data set (2).
3. Process button to run the process of gathering information (3).

4. Filed of displaying the information (4).
5. Tale of displaying the process of gathering information, it includes two columns Step ans Status. In the **Step** column there is displayed short characteristic of undergoing process while the information is being gathered. In the **Status** column there is displayed process-bar and time, spent on information gathering (5).

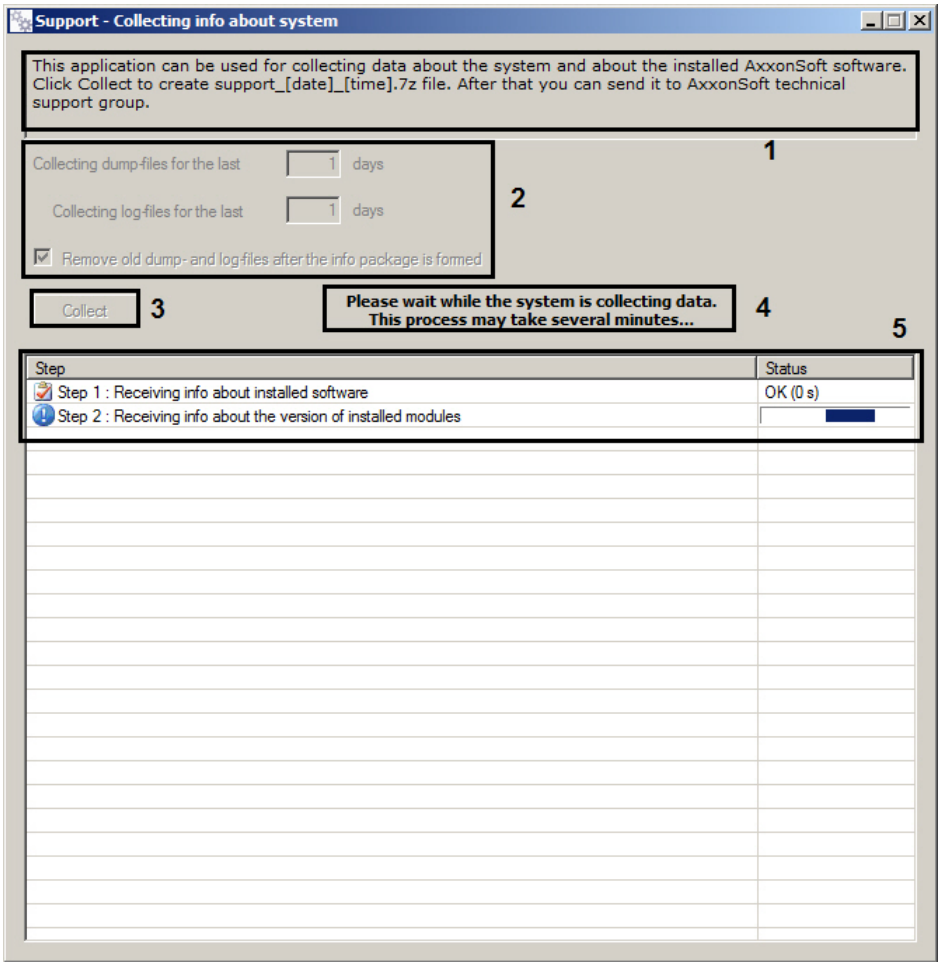

To close the Support.exe utility, click the **Close** button ( ).

Collecting information about videoservers and remote workstations using the Support.exe utility

To collect the information using the Support.exe utility, do the following:

1. Start the utility.
2. If necessary set the dump and log files collection parameters:
    a. In the **Collect dump files for ___ days** field specify the number of days for which dump files are to be included into the data set for technical support (1).

b. In the **Collect log files for ___ days** field specify the number of days for which log files are to be collected into the data set for technical support (2).
c. If old dump and log files are to be deleted after system data collection, set the **Delete old dump and log files after data set collection** checkbox checked (3).

3. Click the **Collect** button (4).
The data collection process will start. Upon completion, the "Completed!" message will be displayed in the **Step** column (5), while the information area will show the link to the newly generated file – support.7z.

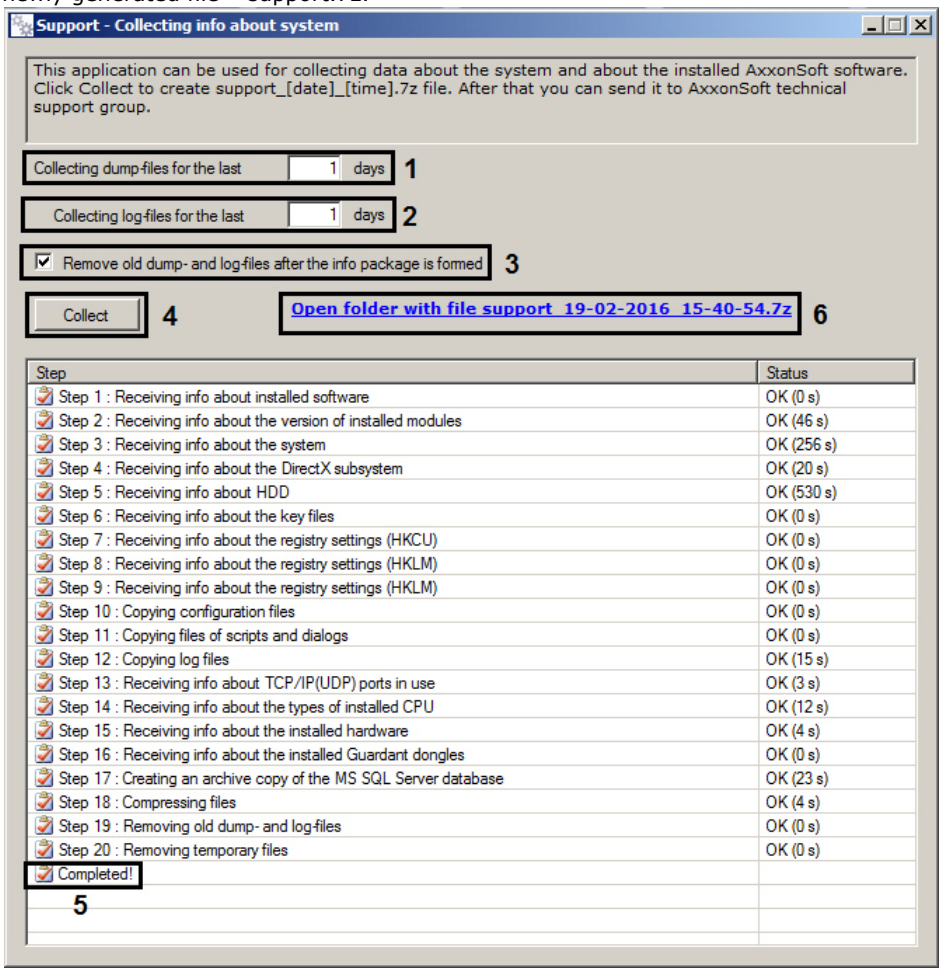

4. Follow the **Open Folder with Support.7z File** link to view the archive (6).
The archive is saved in C:\Users\%current user name%\Documents\Intellect\.

The Fps.exe utility for productivity estimation

The purpose of the Fps.exe utility

Productivity measurement fps.exe utility is used to estimate productivity of video processing.

Estimation is done in the following way:

1. Segmentation of the given video fragment for a set of frames in jpeg format.

   Note.
   If the video fragment is not set, the utility generates pattern set of frames. When necessary the utility may store the created set for fames to the selected directory.

2. Compression and/or decompression of the created frame set.
3. Calculation of productivity parameters- number of processed fps with defined resolution and colour.

Note.
Compression is not available on the Cilent. Playback of a previously recorded video, or a video being received over the network in real time, is available.

Starting and shutting-down the Fps.exe utility

To start fps.exe, do one of the following procedures:

1. Start the utility from the Windows taskbar. Click **Start**, then **Programs**, then **Intellect**, then **Tools**, then **FPS testing utility**.
   The fps.exe utility is available from the **Start** menu with the following installation types of the Intellect software: Server, Remote administrator workstation, Remote client.
2. Start the utility from the **Tools** folder of the Intellect program folder: <Intellect>\Tools\fps.exe .

After starting the fps.exe utility there will be a dialog window **Video processing FPS tester**.

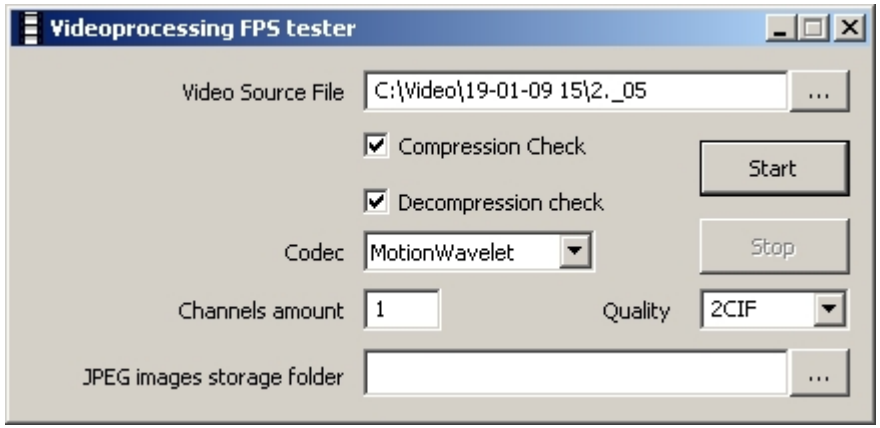

To close fps.exe utility click in the right upper corner of the utility's dialog window.

Using the Fps.exe utility

To check productivity of video processing, do the following:

1. Start the fps.exe utility (see Starting and shutting-down the Fps.exe utility).
2. To set the file of video fragment click button in the field Images storage folder and in the **Open** standard Windows dialog window, that will open, select with a double mouse click the required file (1).

Note.
To emulation the pattern set of framen, the field **Video Source File** is not entered.

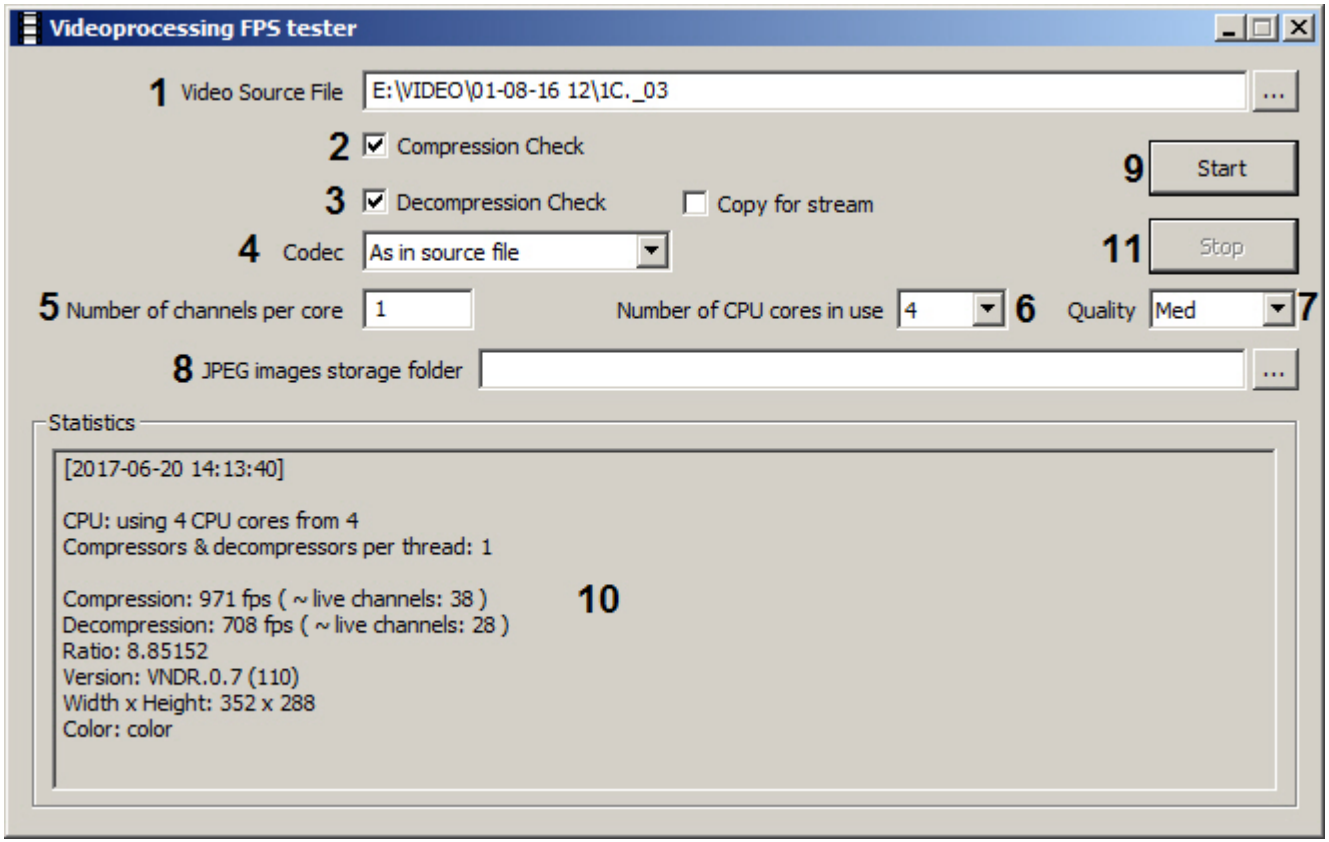

3. Activate **Compression check** checkbox to check how many fps the given computer can compress (2).
4. Activate **Decompression check** checkbox to check how many fps the given computer can decompress(3).
5. Select thr requiret compressor version from the dropdown list **Codec** (4).
6. Enter the required number of emulated cameras in the field **Channels amount** (5).

Note.
This setting is actual only with emulation of pattern set of channels.

7. In the **Number of CPU cores in use** field specify the number of CPU cores to be used for performance check (6).
8. Select the required value of frames compression from the dropdown list **Quality** (inversely to compression level) (7).
9. When necessary set the directory, where frames extracted from the video would be decompressed with the help of button ... of the field **Jpeg images storage folder** (8).
10. To start video processing tester click **Start** button (9).
11. As the result parameters of video processing productivity will be displayed in the title bar of the utility window (10).

Productivity parameter	Description of parameter
Compression	total number of frames that can be compressed in one second
Decompression	total number of frames that can be decompressed in one second
Ratio	compression ratio
Version	selected version of the compressor
Width	frame width
Height	frame height
Color	if the frame is in color
CPU	number of CPU cores in use
Compressors $ decompressors per thread	number of compressor instances per CPU

12. If step 8 is compeleted, the frames for testing video processing will be recorded to thefiles jpeg storage folder.

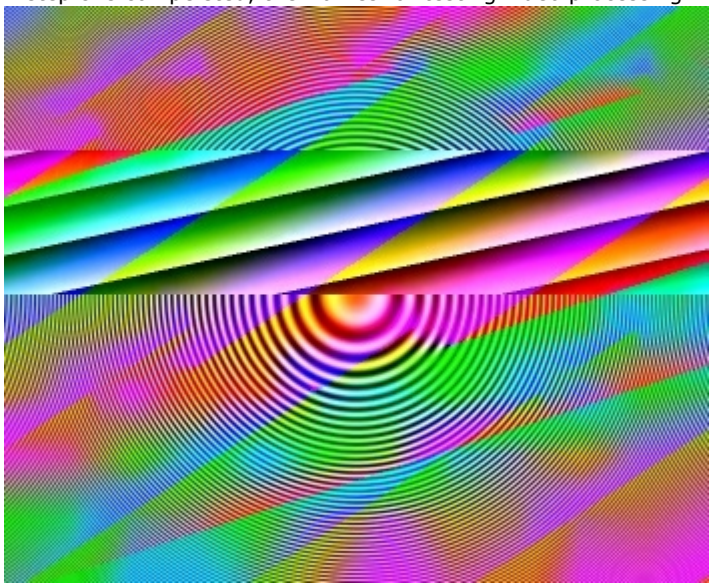

13. To stop the testing process, click the **Stop** button (11).

Testing productivity of video processing is completed.

The SignCheck.exe utility for checking the authenticity of exported frames and video recordings

Starting and shutting-down the SignCheck.exe utility

To start the SignCheck.exe utility, do one of the following:

1. Start the utility from the Windows taskbar. Click **Start**, then **Programs**, then **Intellect**, then **Tools**, then **Check of the Digital Signature**.
   The SignCheck.exe utility is available from the **Start** menu with the following installation types of the Intellect software: Server, Remote administrator workstation, Remote client.

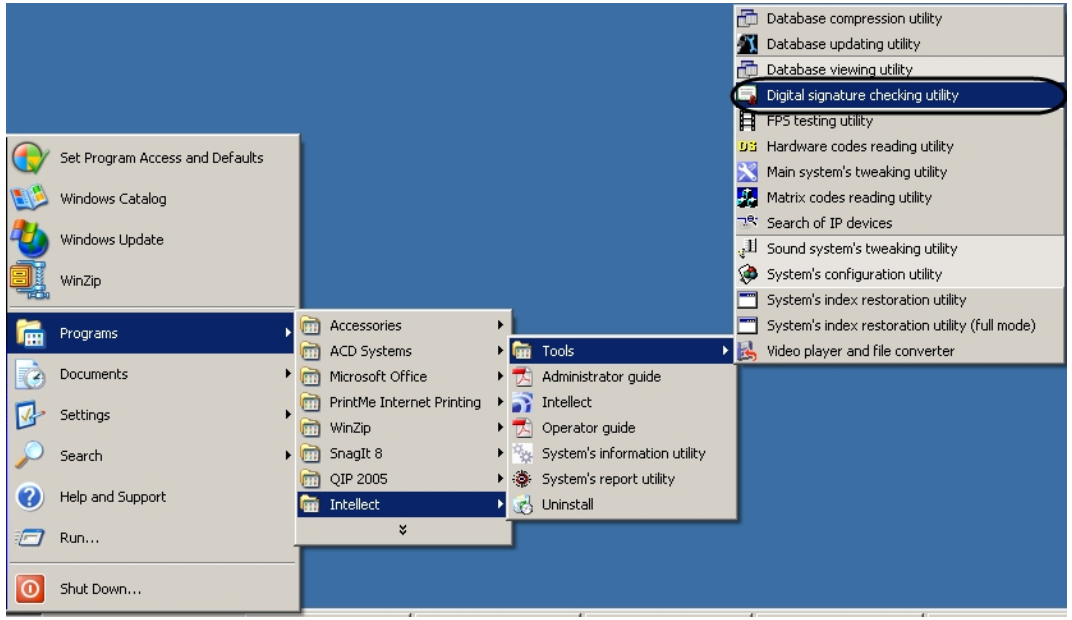

2. Start the utility from the **Tools** folder of the Intellect program folder. Example: C:\Intellect\Tools\SignCheck.exe.

The SignCheck dialog box will open.

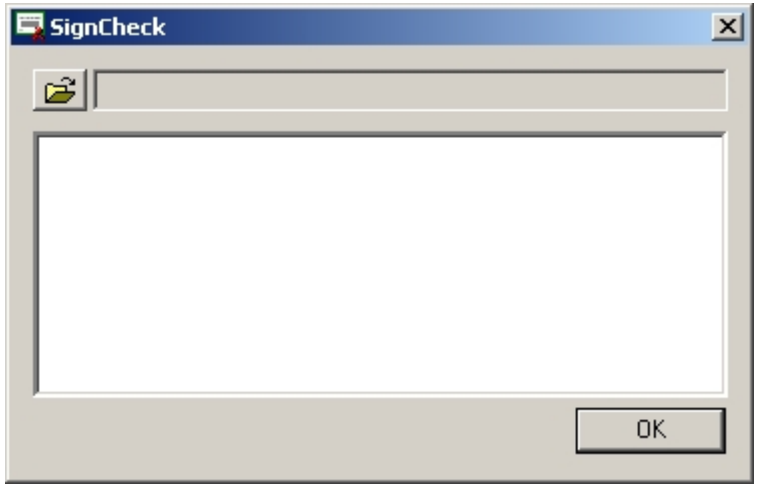

To close the SignCheck.exe utility, click the **Close** button ( ).

The purpose of the SignCheck.exe utility

The SignCheck.exe utility is designed for checking the authenticity of a frame exported into BMP or JPEG format using the Converter.exe utility.

Using the SignCheck.exe utility

To verify the frame authenticity, do the following:

1. Start the utility (see Starting and shutting-down the SignCheck.exe utility section).
2. Select the file with exported frame to check, using the button and a standard dialog box for opening files.

The SignCheck window will show the information about the selected frame.

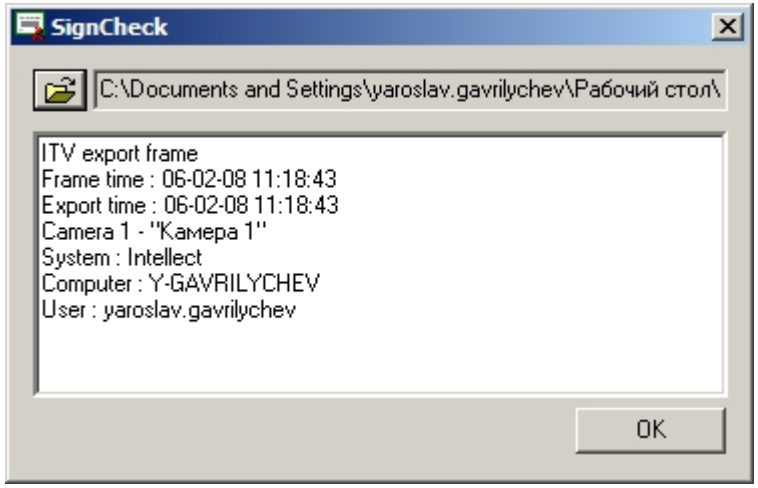

The following information is displayed:

1. AxxonSoft export frame – digital signature title
2. Frame time – date and time stamp of this frame in the recording
3. Export time – date and time of exporting this frame to a file
4. Camera – ID of the camera from which the recording was made
5. System – the software that made the recording
6. Computer – name of the computer this software is installed on
7. User – user name of this computer.

If the frame cannot be authenticated, or the digital signature is missing, the "Verification failed" message will be displayed.

The Convert.exe utility for correcting modification dates of video archives

The purpose of the Convert.exe utility

The Convert.exe utility is designed for restoring changed creation dates of video archive files. For example, file creation dates may be changed (corrupted) while transferring an archive

from one computer to another. This may lead to incorrect playback of the archive.

Starting and shutting-down the Convert.exe utility

Start the utility from the Tools folder of the *Intellect* program folder. Example: C:\Intellect\Tools\Convert.exe.

The Convert.exe utility is available from the **Start** menu with the following installation types of the *Intellect* software: Server, Remote administrator workstation.

The Convert.exe utility dialog box will open.

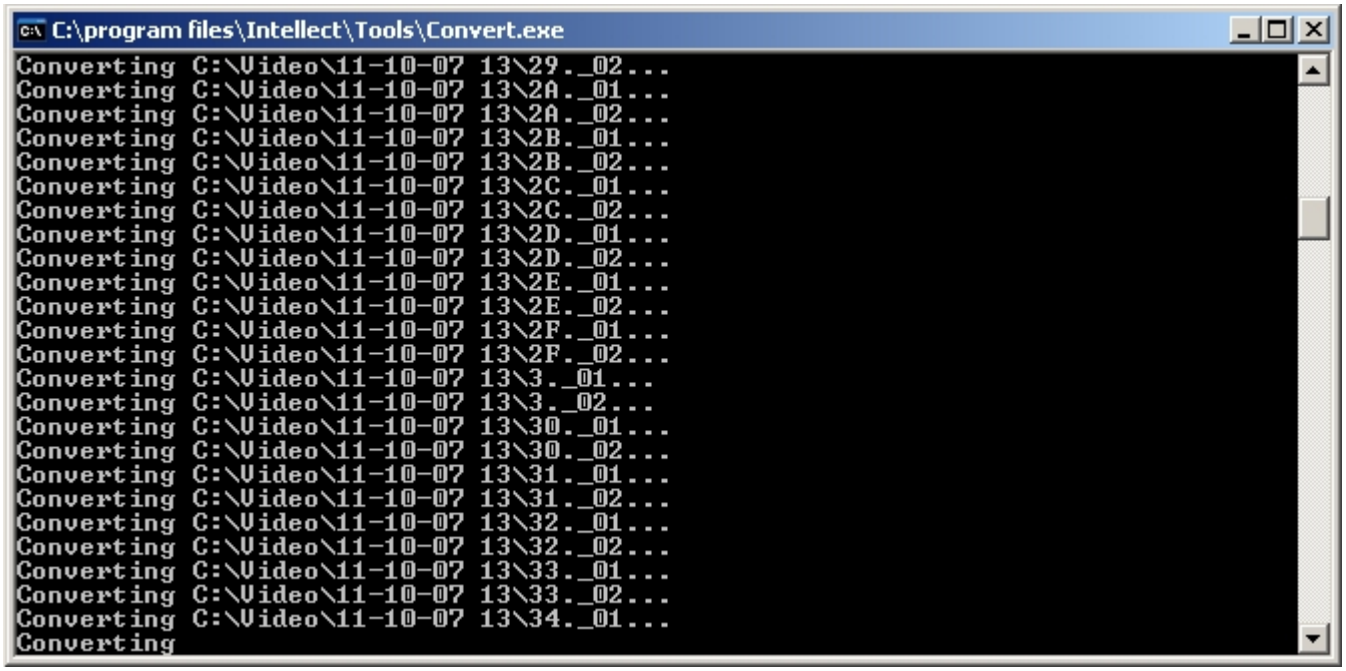

To shutdown the Convert.exe utility, click the **Close** button ( ).

Restoring changed creation dates using the Convert.exe utility

The Convert.exe utility allows restoring the creation date of a video archive file.To make the restoration, start the utility (see the Starting and shutting-down the Convert.exe utility sect ion). A console window will open starting the process of searching the Video folder on each of the available disks. Then, replacing of modification date for creation date will start automatically. This process will take some time depending on the archive size. For example, restoring dates in a 500 MB archive will take about 10 seconds. When all dates are replaced, the Convert.exe window will close by itself.

Working with the Convert.exe utility using the command prompt

One can work with the Convert.exe utility using Windows command prompt. The following startup parameters are in use:

1. TZ +hh:mm – changing date of file creation and modification for hh hours and mm minutes.
2. PATH – specifies the path to the archive folder with files date of creation (modification) of which is to be restored.
3. FULLMODE – running the utility in order to correct the date of creation and modification.

4. FORMAT is similar to FULLMODE. It also converts archive files to a format optimized for high-resolution archiving. The execution time of the FORMAT operation is comparable the the time required for a full conversion of the archive on the disk, because it requires reading every frame and creating a backup copy of the files while they are being converted. After the format of the archive or record has been updated, the execution time of subsequent conversions in FULLMODE will become the same as during an ordinary conversion.

Examples of commands for working with the Convert.exe utility using the command prompt:

1. Convert.exe PATH "H:\Video\03-09-12 15" FULLMODE
   Running this command the Convert.exe utility will restore the date of file creation and modification in H:\Video\03-09-12 15 folder.
2. Convert.exe TZ +01:00
   Running this command the time of file creation and modification will change for an hour. For instance, the "17-09-12 13" folder will be renamed as "17-09-12 14".

Note.
These examples assume using a command prompt in <Intellect>\ Tools folder.

The ddi.exe utility for editing database templates and external settings files

The ddi.exe utility is designed for editing external system settings files (*.ddi) and the templates of the main database (intellect.dbi and intellect.ext.dbi).

The ddi.exe utility is started from the **Start -> All Programs -> Intellect -> Tools -> System configuration** menu.

The ddi.exe utility is available from the **Start** menu with the following installation types of Intellect: Server, Remote administrator workstation, Remote client.

The utility can also be started from the **Tools** folder of the Intellect program folder.

After the changes are made to *.ddi and/or *.dbi files, update the main database. For this use the idb.exe utility (see The idb.exe utility for converting databases, selecting database templates and making backup copies of databases section).

Note.
If changes were made to .ddi or .dbi files using the ddi.exe utility and these files were installed along with Intellect, then these files will be deleted while deleting with configuration upload. .ddi and .dbi files added manually will be saved.

Editing intellect.dbi and intellect.ext.dbi database templates using the ddi.exe utility

To edit the template of the main database, open it using the **File -> Open** menu. The template files are stored in the root of the Intellect program folder.

Note.
To open the recently used file, select the **Last files** item in the **File** menu or open the context menu in the **Names** tab.

Note.
The **Paste from file** item in the **File** menu allows opening several files by adding tables, described in other dbi files, to the open dbi file.

Intellect.dbi file contains the list of main tables and fields of the database. User-defined tables and fields are stored in a separate file – intellect.ext.dbi. This file is made separate from the main file, to eliminate the need to re-insert user-defined tables and fields into the main file, in case of Intellect system update. The contents of these files are merged upon Intellect start-up.

To view the database template, open the **DBI** tab in the top left corner of the window. The list of the tables of the main *Intellect* database will be displayed in the left panel. The right panel will show the list of fields of the selected database.

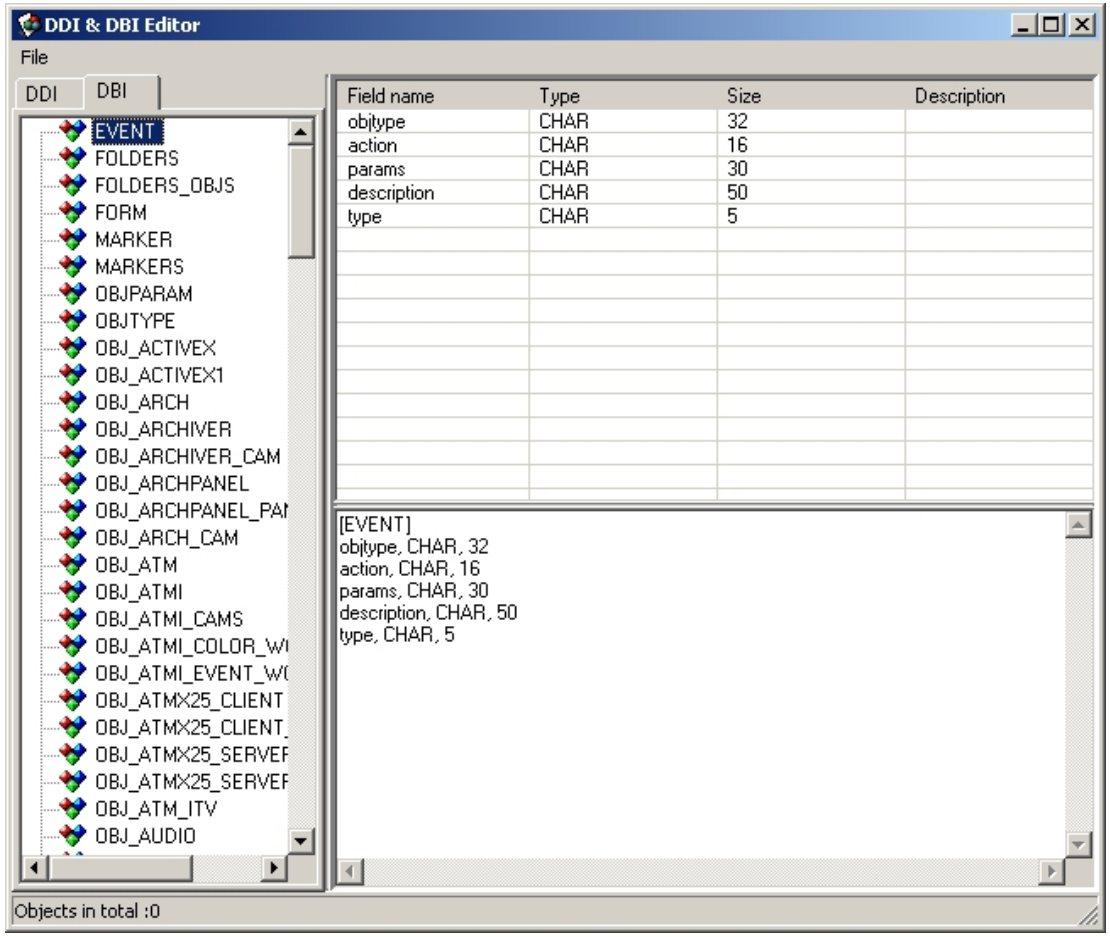

To delete, add, edit or copy object fields, use the table on the left of the utility box.

The following parameters of the table fields are displayed:

1. **Field name** – the name of the field in the database.
2. **Type** – data type of the field contents. Available types:
    a. BIT – checkboxes taking logical values Yes and No;
    b. CHAR – fields with a few symbols;
    c. DATETIME – date and time in the following format: date – dd-mm-yyyy, time – hh:mm:ss;
    d. DOUBLE, INTEGER, SMALLINT – numerical fields of corresponding types;
    e. TEXT – fields with the text.
3. **Size** – maximum number of units of the specified format in a field.
4. **Description** – field name shown in the interface.

The database is to be refreshed after the changes were made.

Editing the external setting file (intellect.ddi) using the ddi.exe utility

To edit the external settings file (intellect.ddi), open it using the **File** -> **Open** menu. This file is stored in the root of the *Intellect* program folder.

> **Note.**
> To open the recently used file, select the **Last files item** in the **File** menu or open the context menu in the **Names** tab.

> **Note.**
> The **Paste from file** item in the **File** menu allows opening several files by adding tables, described in other dbi files, to the open dbi file.

The external settings file contains the information about objects and events loaded into the system configuration, graphical symbols for various object states on the map, and the transition rules from one object state to another.

The purpose of editing can be software localization or expanding/limiting its functionality (for example, removing unused objects from the system).

> **Note.**
> Changing the external settings file may lead to system failure. Create a backup copy of the file before editing it.

The database is to be refreshed after the changes were made.

General information on editing the external setting file

To start using the utility, open the **DDI** tab in the top left corner of the utility dialog box.

The left side of the dialog box will display all system objects loaded into the configuration. The right side of the dialog box shows the properties panel for the selected object. This panel consists of several tabs: **Names, Events, Reactions, Icons, States**, and **Transition rules**.

To delete, add, edit or copy object properties, right-click a cell in the tab or the list of system objects to open the context menu.

To edit the object properties, use the tables on the right of the ddi.exe utility box.

The Names tab

This tab contains the table with three fields:

1. **Object** – object ID in the system.
2. **Name** – the name of the object in the system.
3. **Group name** – the name of the group the object will be assigned to upon creation. If this field is left blank, no group will be created.

By default all objects, the description of which the ddi file contain, are displayed in the table. To find an object, type-in the object name or ID in the **Search by name** field. As a result the table will contain all object names in the system that exactly or partially match the word typed in this field.

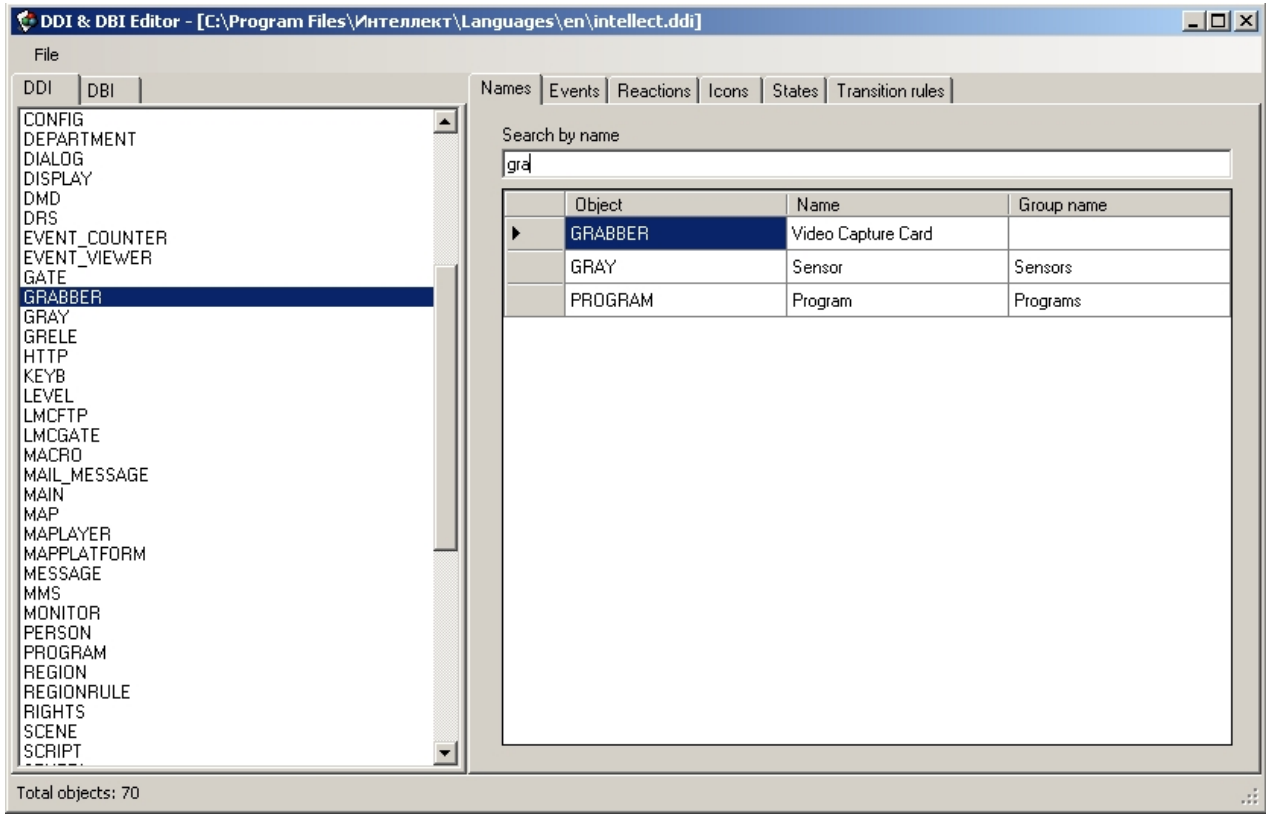

This tab contains the table with three fields:

1. **Object** – object ID in the system.
2. **Name** – the name of the object in the system.
3. **Group name** – the name of the group the object will be assigned to upon creation. If this field is left blank, no group will be created.

By default all objects, the description of which the ddi file contain, are displayed in the table. To find an object, type-in the object name or ID in the **Search by name** field. As a result the table will contain all object names in the system that exactly or partially match the word typed in this field.

The Events tab

This tab contains the list of system events that the selected object can create. Each event has the following editable parameters:

1. **Name** – event identifier.
2. **Description** – short description of the event.
3. **Processing messages** – type of window to open on event occurrence: alarm window or information window.
4. **Support audio** – attached .wav files to be played when the event occurs.
5. **Disable network connection** – local event only. If this checkbox is set checked, other computers on the net will not be notified when the event occurs.
6. **Disable logging** –by default, all events are logged. Set the checkbox checked not to log the event.

7. **Windows log** – set the checkbox checked to log the event to Windows log. If the event is not logged, then it cannot be logged to Windows log.

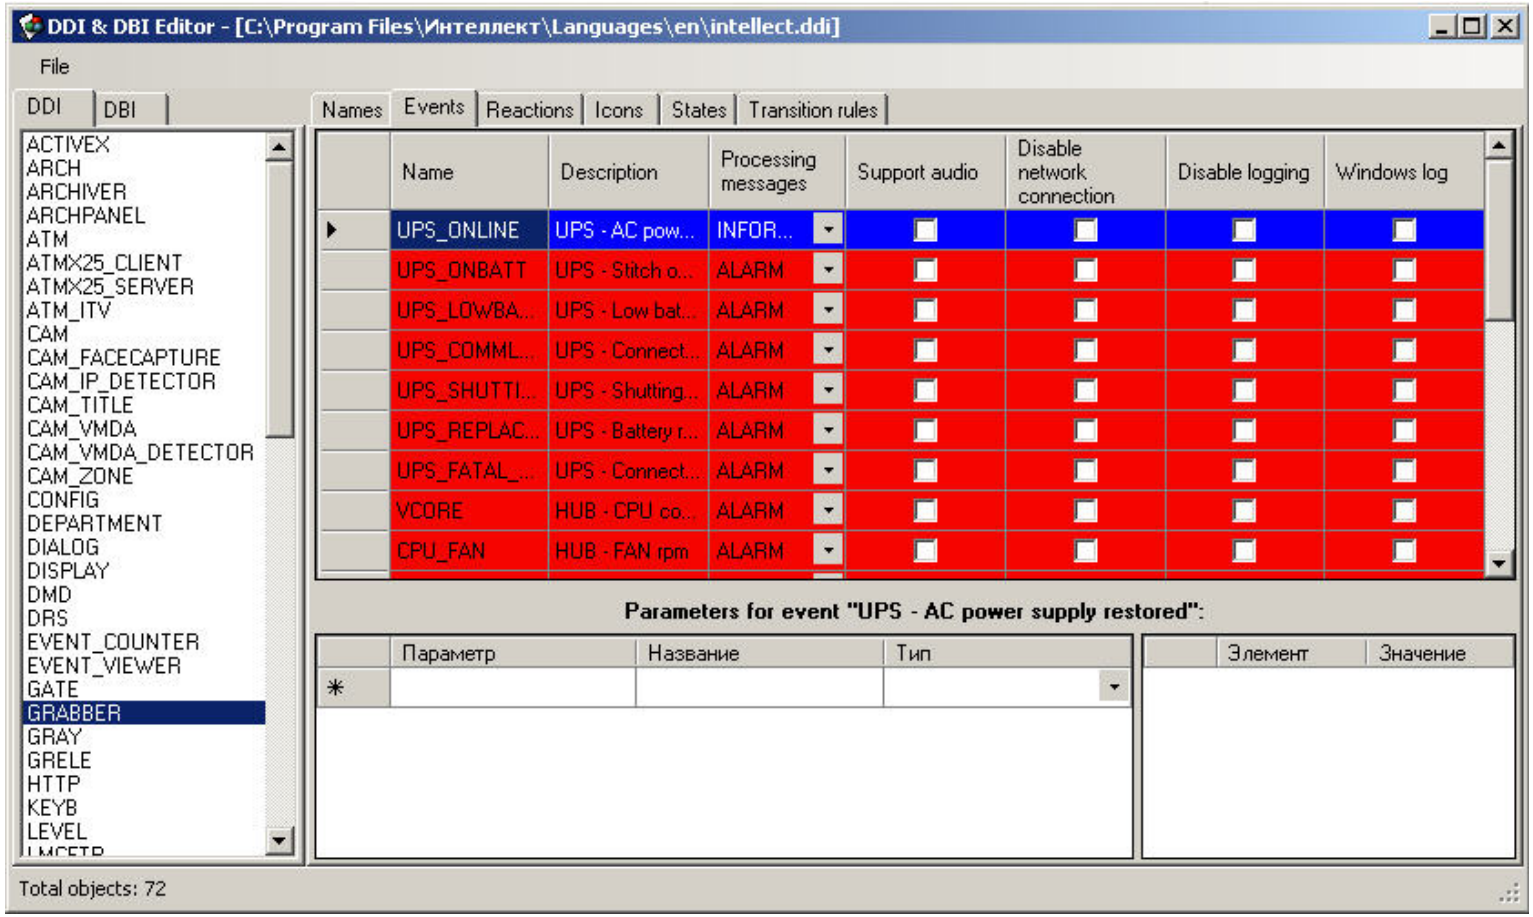

Note.
You can create only the events that are available for the selected object (created at the stage of system programming). Initially all of them are in the intellect.ddi file.

The Reactions tab

This tab lists all reactions that the object can make in response to events. Each reaction has the following properties:

1. **Reaction** – reaction ID.
2. **Description** – short description of the reaction.
3. **Arming** – additional property of the reaction, arming a region.

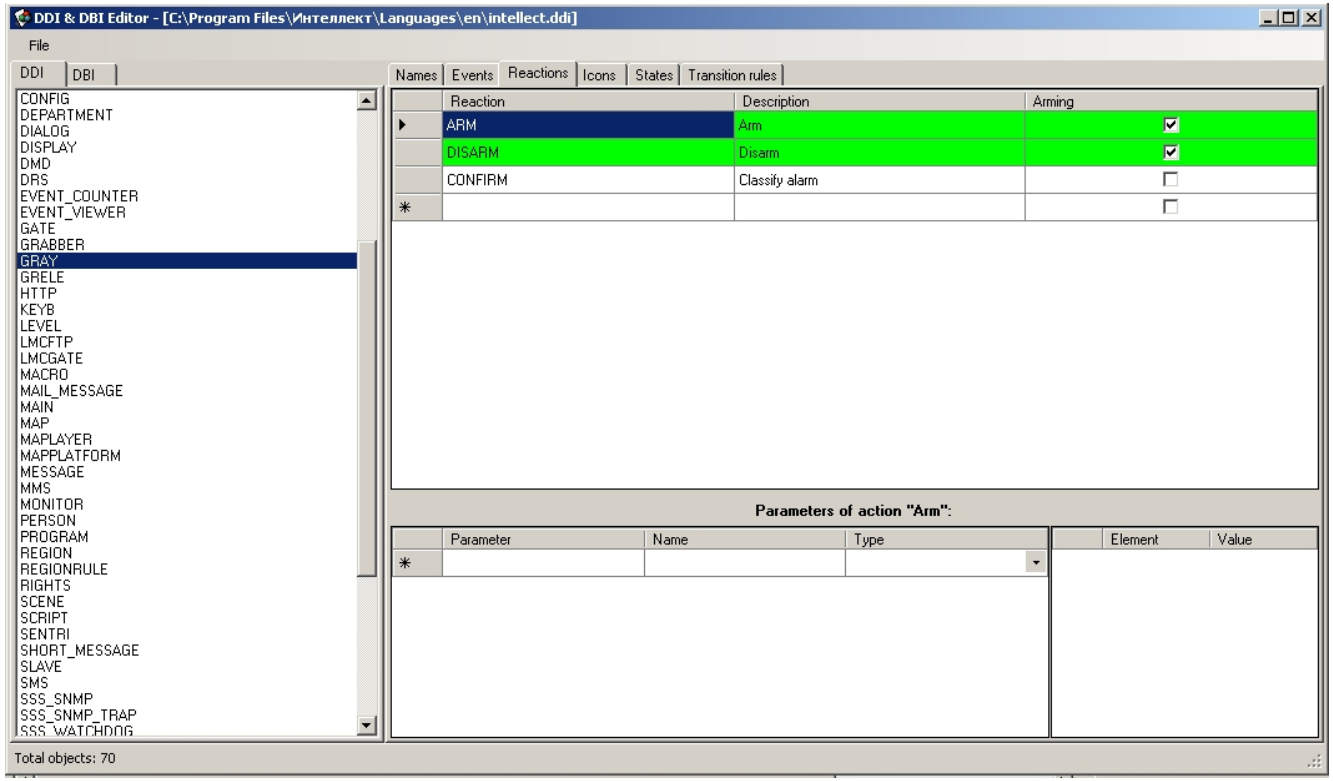

Note.
You can create only the reactions that are available for the selected object (created at the stage of system programming). Initially all of them are in the intellect.ddi file.

The Icons tab

This tab lists the graphical symbols (icons) that represent the selected object on the map. The part of the name used for identifying the file in the .bmp, .jpg or .png format is specified in the **File name** column. Image files are to be stored in the **Bmp** folder in the *Intellect* program folder (for example, C:\ Program Files\Intellect\Bmp).

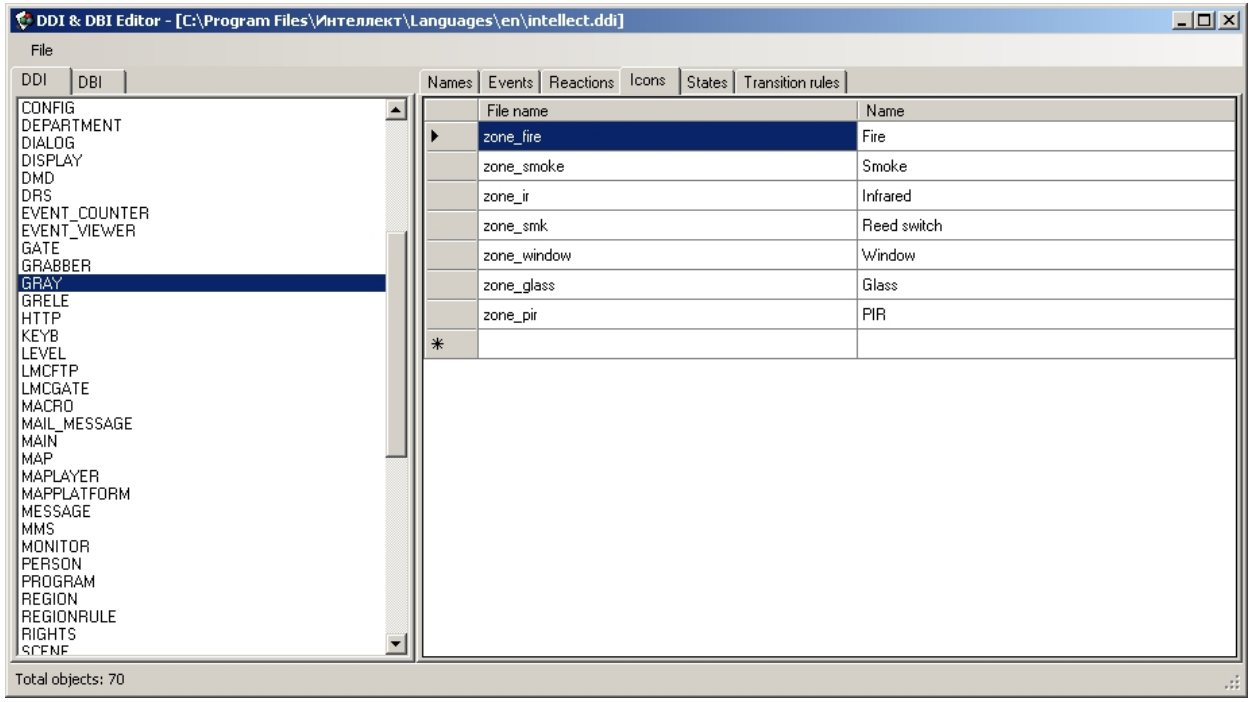

If default icons are to be in use for the same states of objects of the same type, the def icon should be specified on this tab (**By default**). See The States tab section for more information.

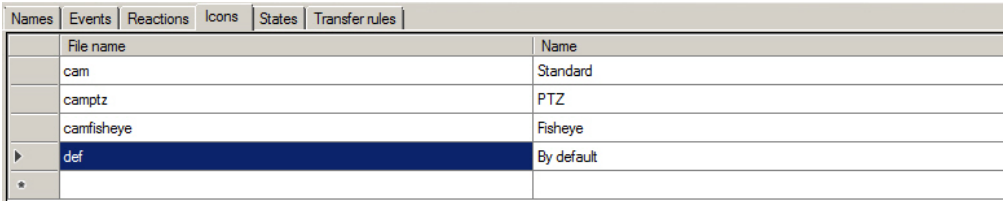

The States tab

This tab lists all states of the selected object. The states have the following properties:

1. **Name** – state ID.
2. **Image** – part of the name in the .bmp format that represent the object state on the map. For example, if the zone_fire file name was selected in the **Icons** tab, and the image of the selected ARMED state is arm, then the zone_fire_arm.bmp file will be in the **Bmp** folder.

The default icon for the states can be set. For this, set the def icon (**By default**) on the **Icons** tab. For example, if there is no zone_fire_arm.bmp icon for the ARMED state, then the def_arm.bmp icon will be searched. This avoids duplicating icons if one state for the different types of the object icon should be displayed identically.

Note.

If the file ID is not set in the **Icons** tab, then the file name will consist of the object ID and part of the file name specified in the Image column.

Note.
If the object is displayed on the map as a polygon, circle or line, then the color of these figures can be set for each state.

For this specify the color in the R:G:B:A format after the icon name (separated by **&**) in the **Image** column or specify the color only in this format instead of the icon name. Here are the examples of the **Image** column contents:

255:0:0 – red color is set for the state.

alarm&255:0:0 – icon and red color are set for the state.

1. **Description** – short description of the state.
2. **Flicker when alarm** – option of displaying object state - flickering.

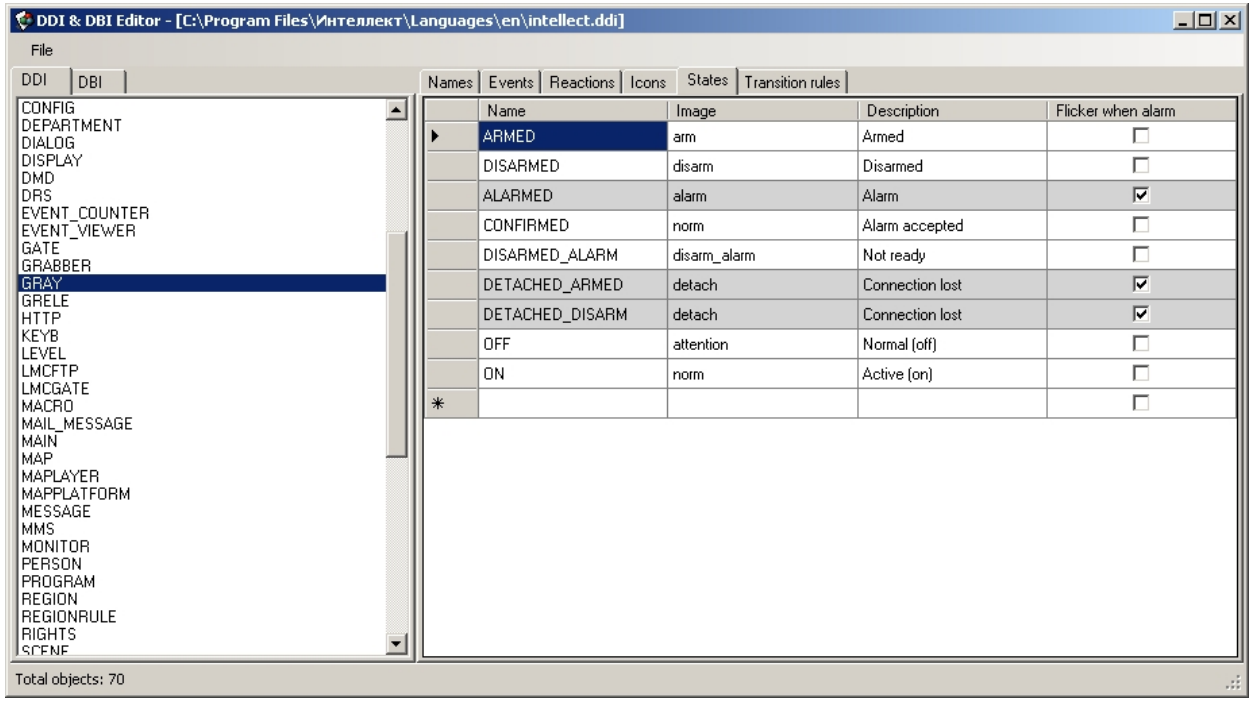

The Transition rules tab

Transition rules connect the events generated by objects, and the states of these objects. Each rule consists of the starting state of the object, an event, and an ending state that the object will take after the event.

The table lists the transition rules from one object state to another. Each rule has the following properties:

1. **Event** – identifier of the event triggering the transition.
2. **Transition from state** – identifier of the object state before the event took place. If this field is left blank, the rule will apply to all starting states.
3. **Transition to state** – identifier of the resultant state of the object.

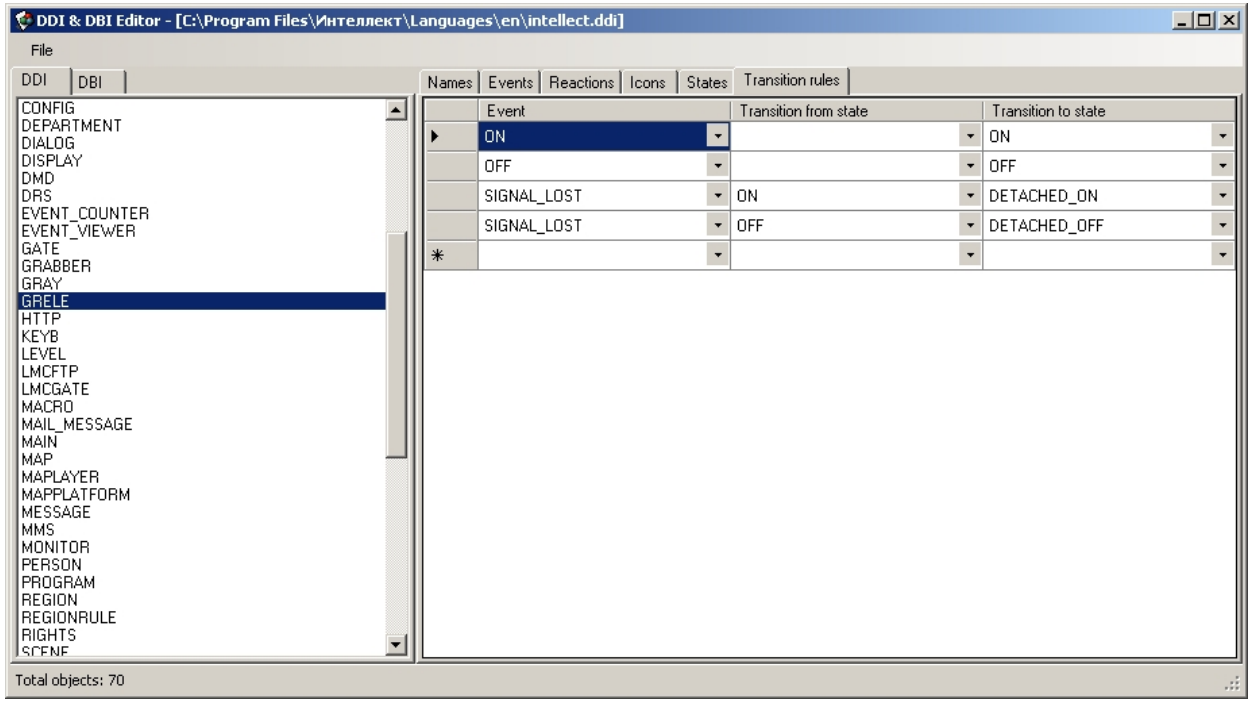

The Arpedit.exe utility for creating user dialog windows

The Arpedit.exe utility is designed for creating dialog boxes. It allows tailoring Intellect™ system to particular monitoring and security tasks of the customer.

The Arpedit.exe utility is in the "Arpedit" folder (<Installation directory> \Intellect\Tools\ Arpedit). Detailed information on the utility is given in User's Manual for ArpEdit which is located in the same folder.

The idb.exe utility for converting databases, selecting database templates and making backup copies of databases

The purpose of the idb.exe utility

The idb.exe utility is designed for database administration in INTELLECT™ software. It provides the following functionality:

1. Converting MS Access databases to MS SQL format.
2. Connecting to the Intellect database.
3. Setting up the database synchronization.
4. Creating backup copies of a database.
5. Restoring a database from its backup copy.

6. Changing the database template (see Interface elements of the idb.exe window).
7. Separating the events log into an individual database.

Running and shutting-down the utility

Shut down the INTELLECT™ system before running the idb.exe utility.

The idb.exe utility is run from the Intellect installation directory. For example: «C:\ Program Files \Intellect\idb.exe».

The idb.exe dialog box will open.

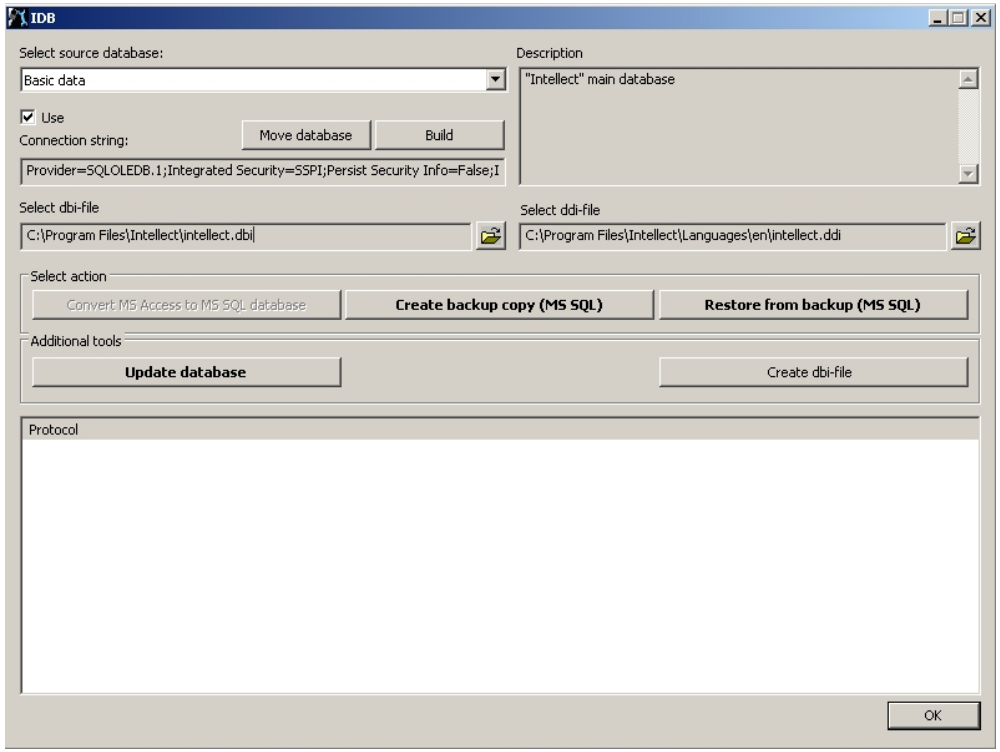

To confirm the changes and shut down the utility, click the **OK** button. To shut down the utility without saving the changes, click the **Close** button ( ).

Interface elements of the idb.exe window

The figure below shows the idb.exe dialog box.

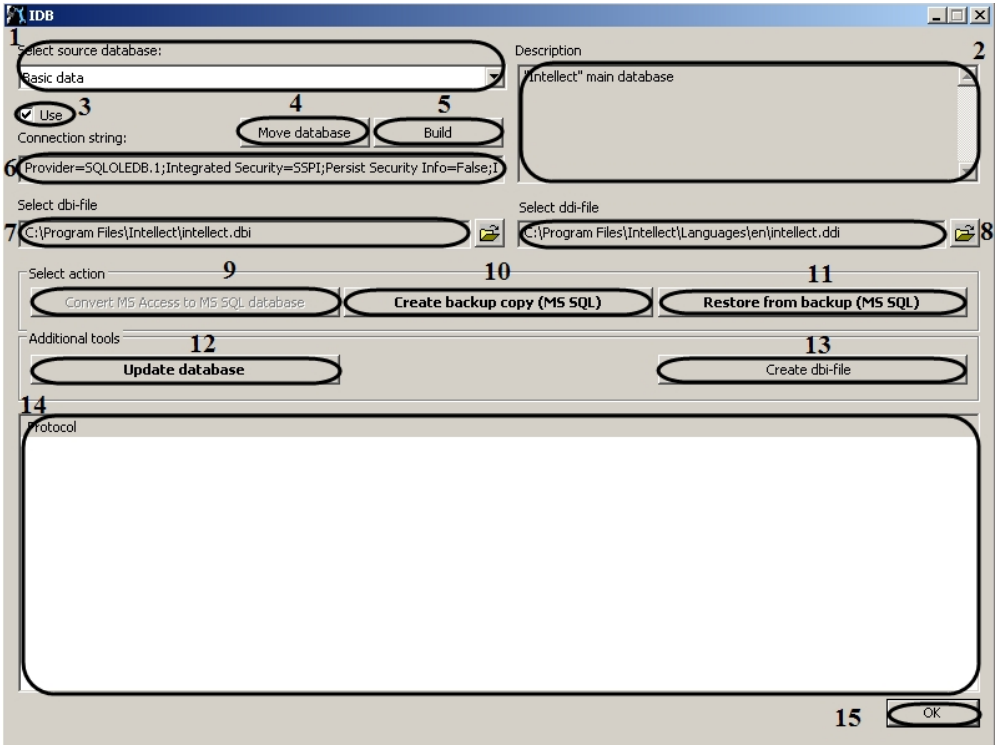

The table describes the elements of the idb.exe utility.

№	Element name	Description	Default value	Allowed values
1	Select source database	A drop-down list for selecting the database: local, events log, or remote.	Basic data	**Basic data** – local configuration database **Synchro source** – remote database for synchronization **Protocol** – events log database Other values are used with vertical solutions.
2	Description	An information field showing the description of the selected source database.	Base for a configuration system Intellect	**Base for a configuration system Intellect** – Main configuration database of the Intellect system **Remote database for synchronization** **Events log database** Other values are not used.
3	Use	A checkbox for enabling/disabling database usage. When checked, the Build button becomes enabled which is used for setting up the connection to the database.	Checked	**Checked** – database connected **Unchecked** – database not connected

4	Move database	The button used to transfer MS SQL Server database files (.mdf and .ldf) to the specified folder. The user must have the rights to create files in this folder. When the files are moved, the database is automatically attached. *Note. It is possible to transfer only the local DB (Basic data data source). When using a remote DB (Synchro sourse data source), files can not be moved.*	Enabled	**Enabled** – idb.exe utility is connected to an MS SQL database **Disabled** – idb.exe utility is not connected to an MS SQL database
5	Build	A button for opening the **Data Link Properties** dialog box for database connection setup. This button is enabled if the **Use** checkbox is checked.	Enabled	**Enabled** – idb.exe utility is connected to the database **Disabled** – idb.exe utility is not connected to the database
6	Connection string	An information field showing the summary about the database connection	Depends on database connection parameters and server/workstation configuration	Shows the following parameters: Provider, Integrated Security, Persist Security Info, Data Source. The Provider parameter can take the following values: SQLOLEDB.1 – MS SQL database Microsoft.Jet.OLEDB.4.0 – MS Access database; other values are not used. The Integrated Security parameter can take the following values: SSPI – authentication on MS SQL server using Windows account information; parameter not shown – authentication on MS SQL server using login/password, or MS Access database is used. The Persist Security Info parameter can take the following values: True – allow saving the password for automatic connection to the database; False – do not allow saving the password for automatic connection to the database; The Data Source parameter can take the following values: the name of an MS SQL server used for controlling the database; full pathname of the .mdb file of an MS Access database.
7	Select .dbi file	An information field and a button for selecting and displaying a database structure file (.dbi). The updated database will have the structure specified in this file.	C:\Program Files\Intellect\intellect.dbi	Full pathname of the .dbi file
8	Select .ddi file	An information field and a button for selecting and displaying the name of the .ddi file with system objects, events and actions.	C:\Program Files\Intellect\Languages\ru\intellect.ddi	Full pathname of the .ddi file

9	Convert MS Access to MS SQL database	A button for starting the conversion of an MS Access database to MS SQL format. This button is enabled if the utility is connected to an MS Access database.	Disabled	**Enabled** – idb.exe utility is connected to an MS SQL database **Disabled** – idb.exe utility is not connected to an MS Access database
10	Create backup copy (MS SQL)	A button for starting the process of creating a backup copy of the database. This button is enabled if the utility is connected to an MS SQL database.	Enabled	**Enabled** – idb.exe utility is connected to an MS SQL database **Disabled** – idb.exe utility is not connected to an MS SQL database
11	Restore from backup (MS SQL)	A button for restoring the database from a backup.	Enabled	**Enabled** – idb.exe utility is connected to an MS SQL database **Disabled** – idb.exe utility is not connected to an MS SQL database
12	Update database	A button for starting the process of updating the database structure. The structure is updated according to the .dbi file specified in the Select .dbi File field.	Enabled	**Enabled** – idb.exe utility is connected to the configuration database **Disabled** – idb.exe utility is not connected to the configuration database
13	Create dbi-file	A button for creating a database structure file (.dbi template).	Enabled	**Enabled** - .dbi file creation is allowed.
14	Protocol	An information area displaying the progress of database processing: converting, structure updating, creating backup copy, etc.	Empty	An information area displaying the progress of the database processing. A blue "i" marks the notifications about successful completion of each processing step. A red "!" marks the notifications about the errors in a processing step. A blue tick marks the completion of the processing.
15	OK	A button for saving the database connection parameters and shutting-down the idb.exe utility.	Enabled	**Enabled** – saving database connection parameters and shutting-down the utility is allowed. **Disabled** – the utility is still processing the database.

Using the idb.exe utility

The idb.exe utility allows the administration of the databases of the Intellect system. Instructions on how to use the utility for administering databases are given in INTELLECT™ software database management section.

> **Note.**
> The Windows Firewall/ICS service is to be enabled to use the idb.exe utility.

Working with idb.exe utility with the use of keys

It is possible to run idb.exe utility with keys. For this click **Start -> Run**. Type the path to idb.exe utility and the required key after / in the appeared window.

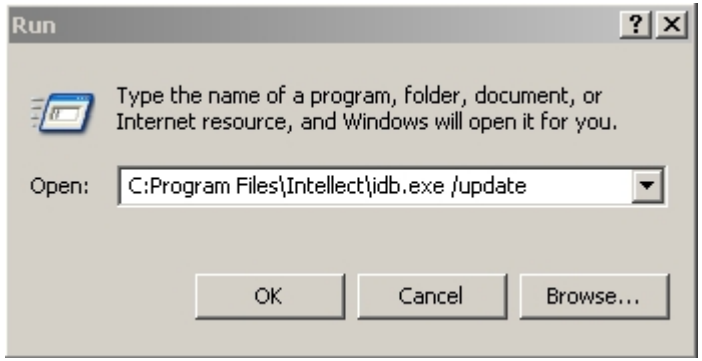

To display keys, supported by the utility, use the command «idb.exe /?».

idb.exe utility supports the run with the following keys:

1. «/update» - the key of running the hidden updating of database (uses intellect.dbi file).
2. «/sync» - the key of database synchronization with the source of data.
3. «/backup» - the key of running the process of creation the backup copy of Intellect database. The backup copy is created to the address «C:\Documents and Settings\USER2\My documents\AxxonSoft\Intellect\Data\intellect.sql.bak». It is used when the idb.exe utility is connected to MS SQL database.
4. «/restore» - the key of running the database recover from the previously created backup copy. It is used when the idb.exe utility is connected to MS SQL database.
5. «/set_cs key=value» - the key of saving the connection string to the system registry (summary on parameters of connection to database).
6. «sql_convert:db_name mssql2000|mssql2005» - the key of running the database conversion process from MS Access to MS SQL format. It is used when the idb.exe utility is connected to MS Access database.

Example. To convert MS Access to MS SQL database using the key, do the following:

1. Use the **Run** command (Start -> Run), specify the key: C:\Program Files*Intellect*\idb.exe /sql_convert.
2. Click the **OK** button. As a result the dialog box of the idb.exe utility is displayed.
3. Select MS Access database in the **Select data source** dropdown list
4. Click the **Convert MS Access to MS SQL** database button.
5. As a result the box suggesting to select MS SQL server is displayed. Click the **OK** button to continue.

6. As a result the **Data Link Properties** box is displayed. Un this box you are to:
    a. select the **Server name** in the dropdown list;
    b. specify the user name and password to log in the Server;
    c. set the **Allow saving password** checkbox checked;
    d. click the **Test Connection** button;
    e. click the **OK** button to save the changes.

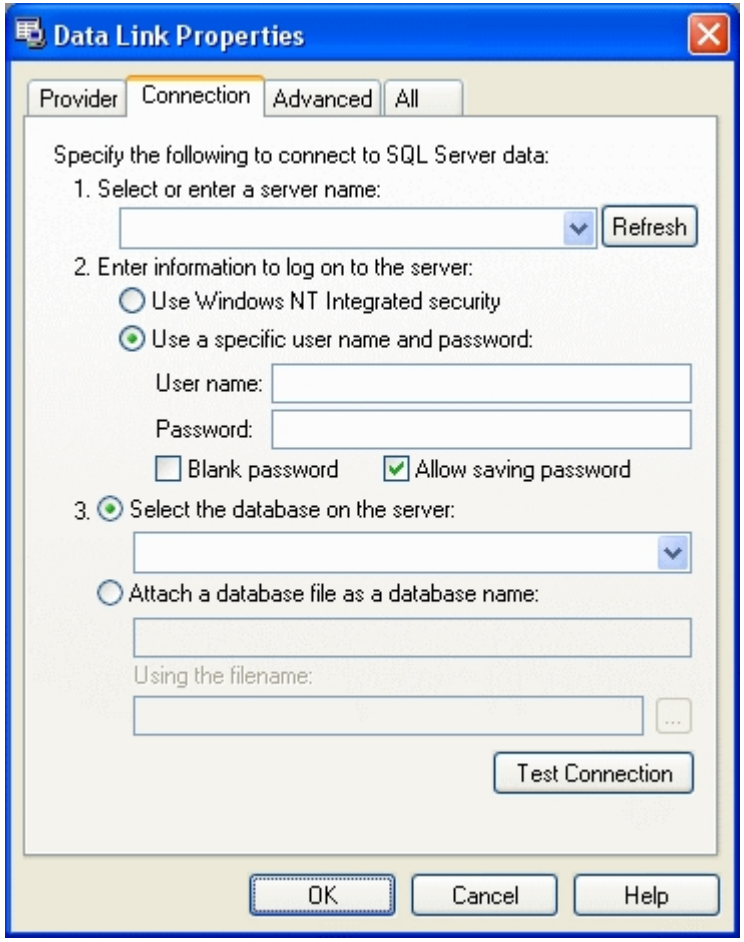

7. As a result the dialog box suggesting to enter the database name is displayed.

8. Enter the database name or leave the name suggested by the system. Click the **OK** button.
9. As a result the process of converting **MS Access into MS SQL database** starts. The progress of the process is displayed in the **Protocol** table of the idb.exe utility.
10. When the database is converted, shut down the idb.exe utility (see Running and shutting-down the utility section).

MS Access database is now converted to the MS SQL format.

Extracting event protocol into an individual database

Important!
If *Time&Attendance* module is in use (the module is a part of *ACFA-Intellect* subsystem) use the RemoteProtocolConnector utility to extract event protocol into a separate database – see *Intellect Web Report System. User Guide* (the most relevant version of this document is available in AxxonSoft documentation repository).

External event protocol is created with the help of the idb.exe utility.

The protocol database is to be created beforehand with the help of MS SQL Server program. For this:

1. Open Microsoft SQL Server Management Studio Express;
2. Select the Databases;

3. Right-click and select the **New Database...**;
4. Specify the protocol database name in the **Database name** line in the **New Database** box;

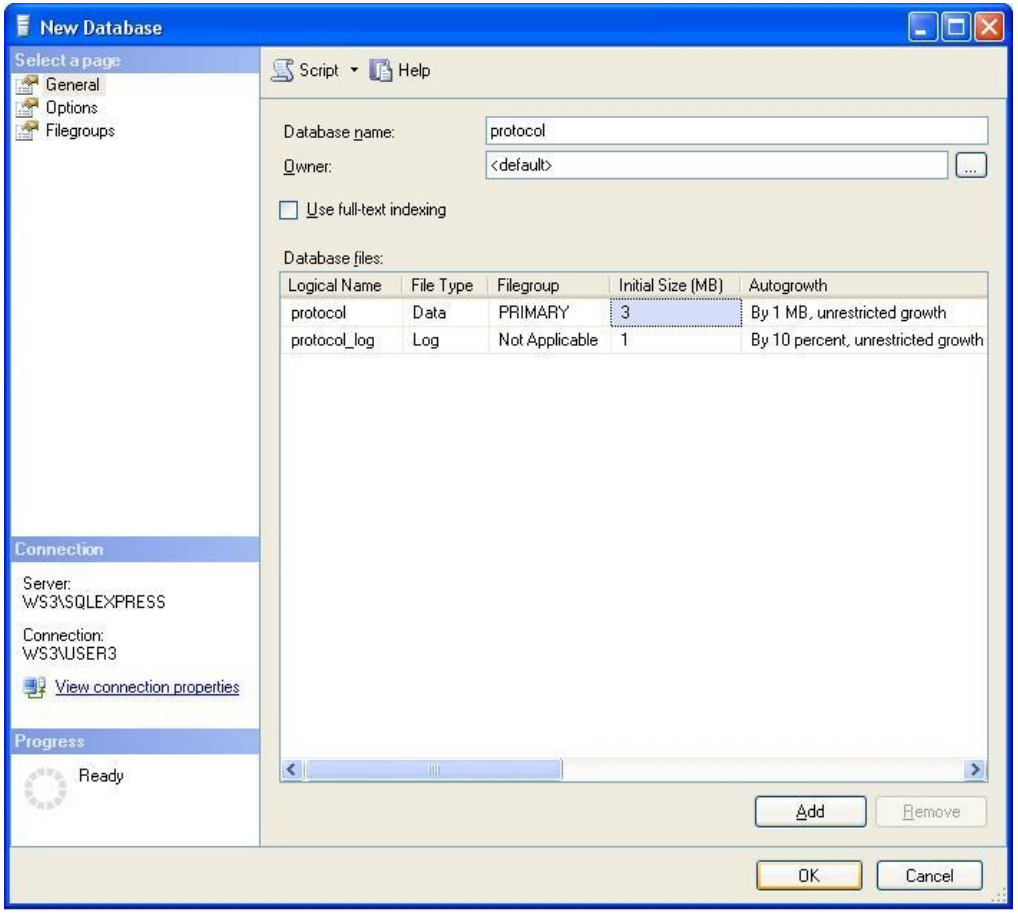

5. To create a new protocol database, click **OK**;
6. Shut down Microsoft SQL Server Management Studio Express by clicking the button in the upper right corner of the box.

As a result the protocol database is created.

To enable external event protocol, do the following:

1. Run the idb.exe utility (see Running and shutting-down the utility section).
2. Select the **Protocol administration** database in the **Select source database:** dropdown list.

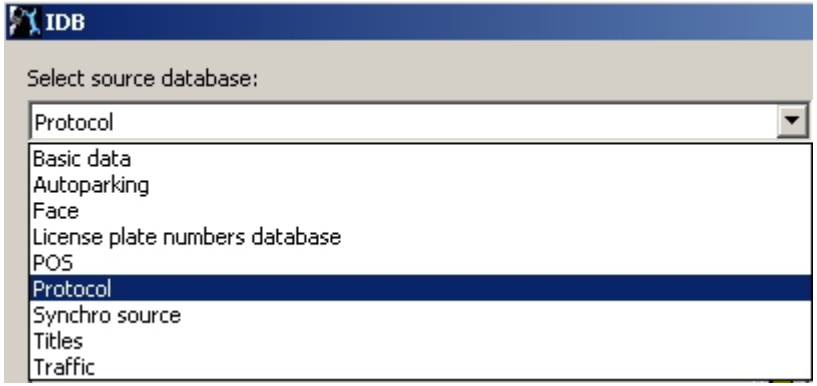

3. To enable the **Protocol database**, set the **Use** checkbox (1).

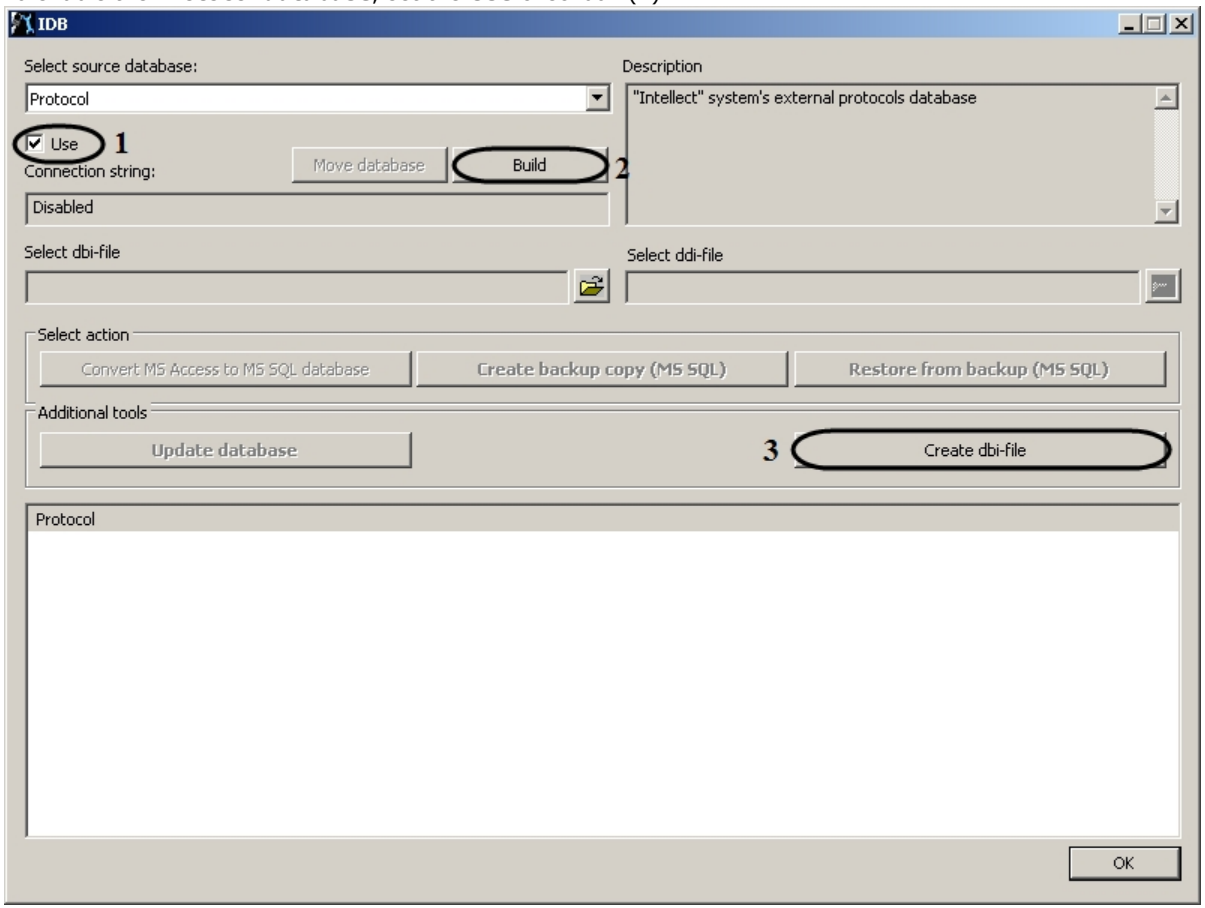

4. As a result the **Build** button becomes active (2). To connect to the **Protocol** database, click the **Build** button.
5. As a result the **Data link properties** dialog box appears. Go to the **Provider** tab.
6. Select the **Microsoft OLE DB Provider for SQL Server** item in the **OLE DB Provider(s)** list (1).

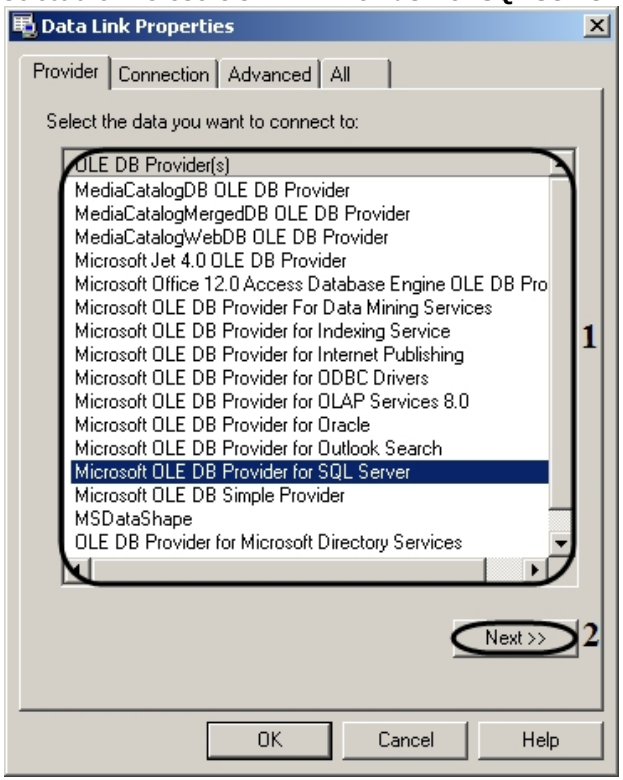

7. Click the **Next** button (2).
8. There is an auto switch to the **Connection** tab.
9. Do the following in the **Connection** tab:
    a. Select a server name in the **Select or enter a server name** dropdown list (1).

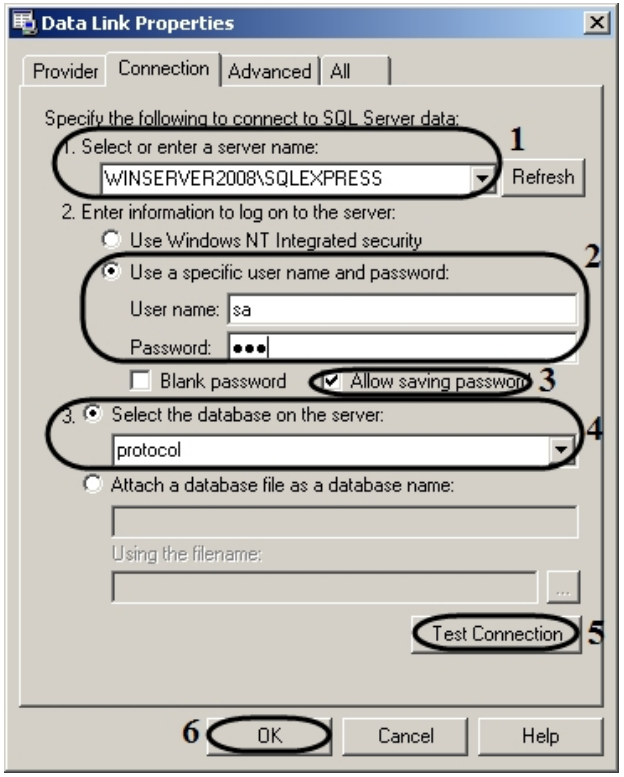

b. Specify the user name in the **User name** field and specify the password in the **Password** field (2).
c. Set the **Allow saving password** checkbox (3).
d. Select the protocol database in the **Select the database on the server** dropdown list (4).
e. Click the **Test connection** button (5)
f. If connection to MS SQL server succeded, then the **Test connection succeeded** message appears.

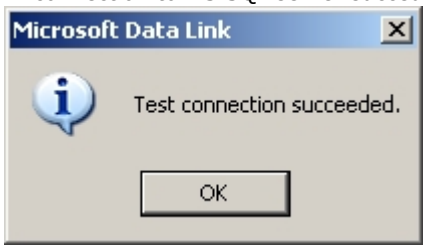

g. Click the **OK** button in the message box; the box closes automatically.

10. Select the dbi file. Click the button next to the **Select dbi file information** field.
11. As a result the **Open box** appears.
12. Select the C:\Program Files\Intellect\intellect.dbi file

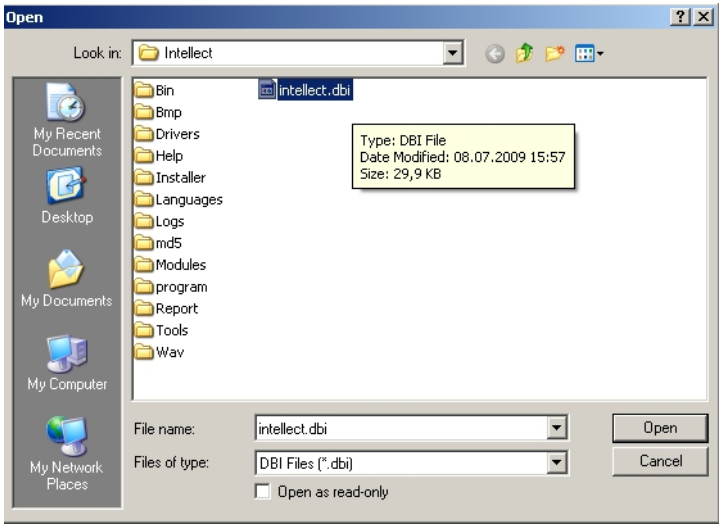

13. To update the database in accordance with the intellect.dbi file specified in the **Select dbi file** field, click the **Update database** button.

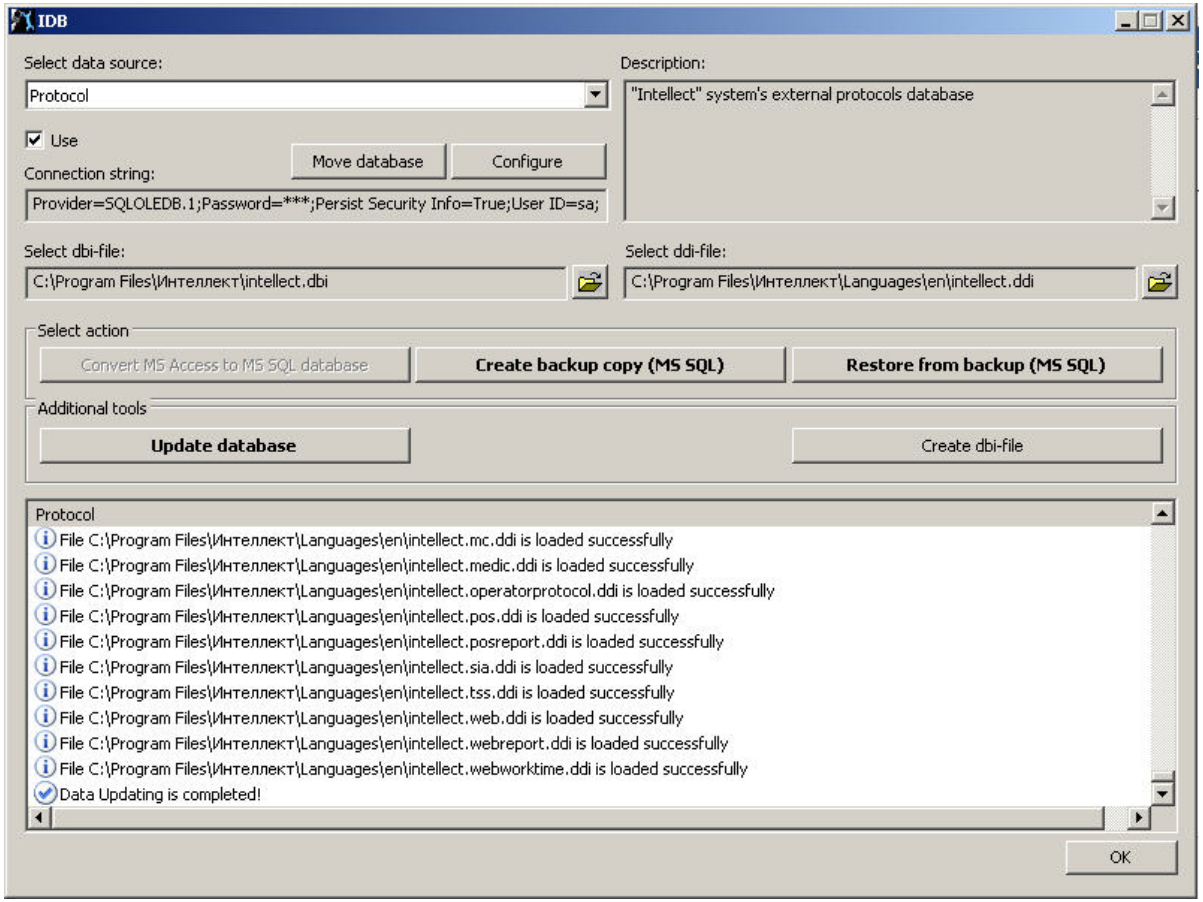

14. As a result database updating will start. Information about this process is displayed in the **Protocol** table.
15. Database is updated, when there is the **Database updating is finished** message in the **Protocol** table.
16. To save INTELLECT™ connection parameters to the Protocol database, click the **OK** button. As a result the box closes automatically.

External event protocol is created and enabled.

Creating the database backup copy

To create the MSSQL database backup copy, use the idb.exe utility. To create the backup copy, do the following:

1. Run the idb.exe utility (see Running and shutting-down the utility section).
2. Select the **Basic data** MSSQL database in the **Select data source:** dropdown list.
3. Click the **Create backup copy (MS SQL)** button.
4. As a result the **Save as** box appears. Select the address and type-in the name of saving backup copy.

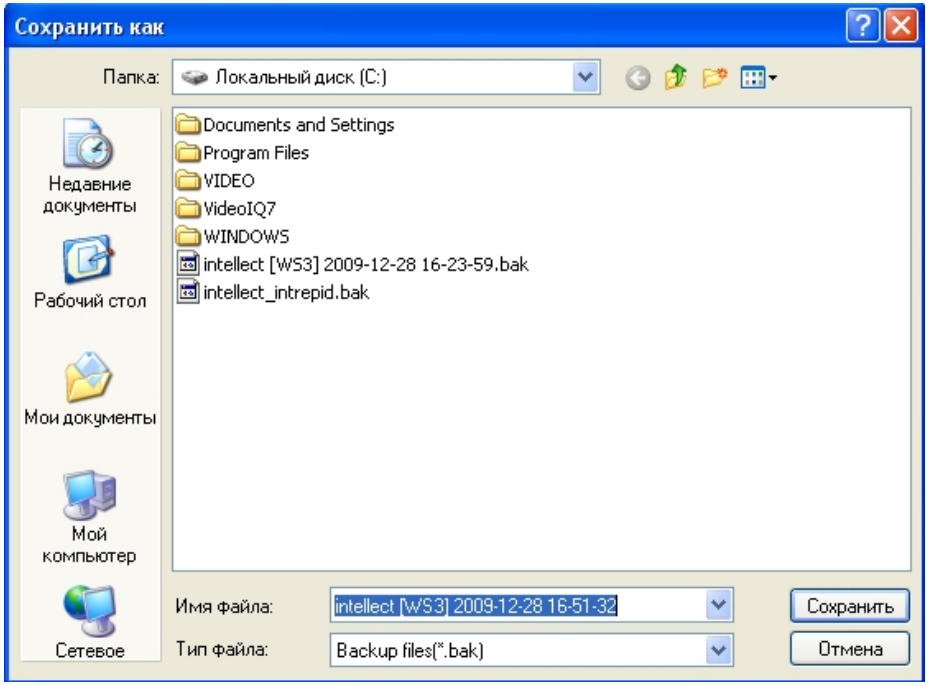

Note.
While creating the MS SQL database backup copy, the created backup copy will be saved on the computer where the database server is installed, in case of *Intellect* sof tware and database server are located on different computers connected through the networks. To save created backup copy on the computer where the *Intellect* softw are is installed, do the following:

a. Create the folder available through the networks on the computer where the *Intellect* software is installed. Provide access to the created folder from the computer where the database server is installed.
b. Specify the path to the created folder in the **Save as** window.

5. As a result the process of backup copy creation starts. Information on this process is given in the **Protocol information** table.

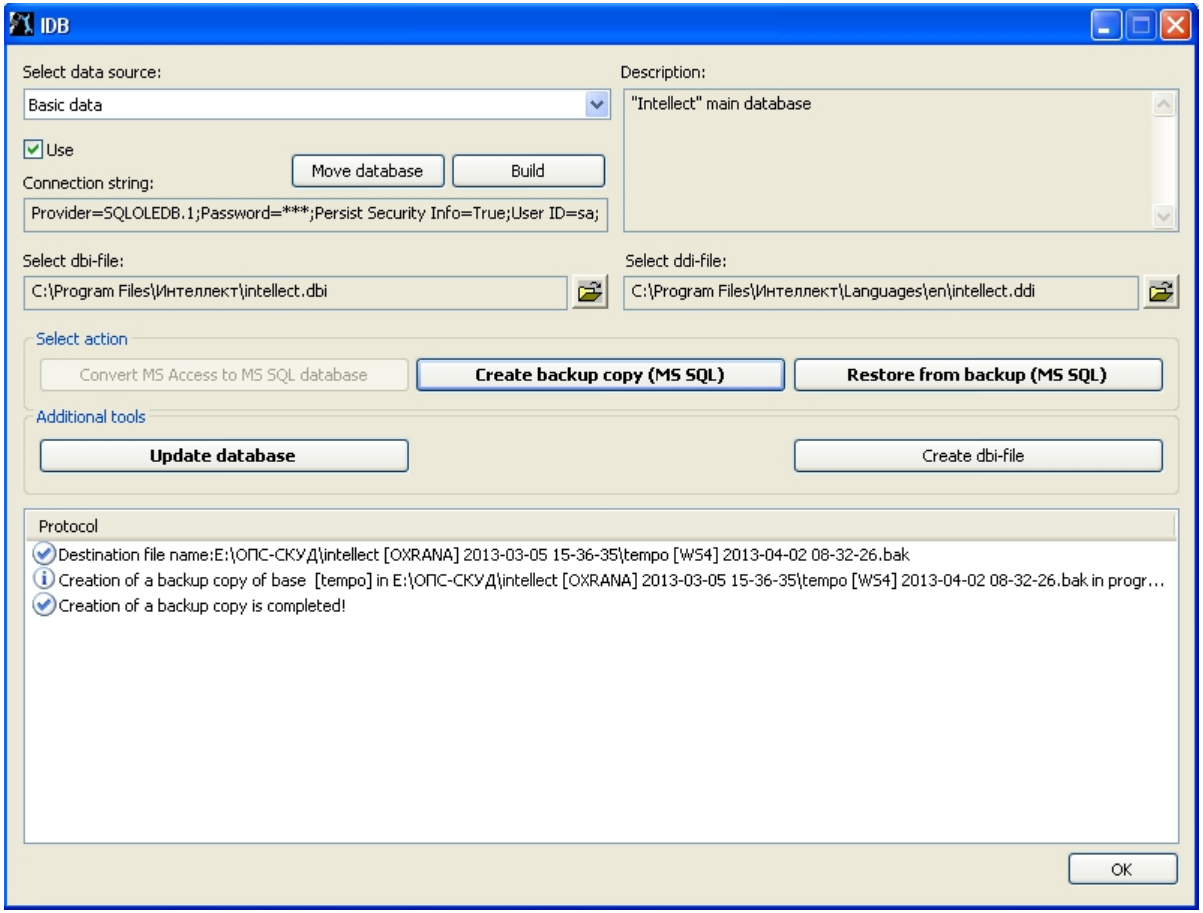

6. The backup copy is created when the **Creation of a backup copy** is completed! message appears in the **Protocol** table.

> **Note.**
> The backup copy (MS SQL) can be created using the macro.

7. Click the **OK** button. The box closes automatically.

The MSSQL database backup copy is created.

By default the database backup copy is created at: C:\Documents and Settings\<user name>\My documents\ITV\Intellect\Data\intellect.sql.bak. If one cannot change the folder for storing the database backup copy while the backup copy creation, do the following:

1. Call the **Run** function (**Start - > Run**). Type-in the regedit in the opened box.
2. Click the **OK** button. As a result the **Registry editor** box opens.
3. Create the string parameter with the BackupFolder name in the «HKLM\SOFTWARE\ITV\INTELLECT» registry thread (see Adding string parameters to the registry section).
4. Set the value of the BackupFolder parameter – type-in the address of the folder for storing the database backup copy(e.g. C:\ Documents and Settings\AVP\Desctop\Backup).

If the database copy is to be stored on the network disk, then the UNC path to the network folder (with the recording access) is to be specified on the disk in the **\\ServerName\ShareName** format. Take into account the fact that all network resources that require additional authentication are to be enabled using the same username as for running the SQL Server service. To find out and/or change the user that runs the SQL Server service, do one of the following:

a. Using the SQL Server Configuration Manager utility.
b. Run **Start – Control panel – Administrative tools – Services**, right-click the **SQL Server** service and select the **Properties** item in the feature menu. Go to the **Log On** tab.

5. As a result the string parameter of the key with the specified value is created.

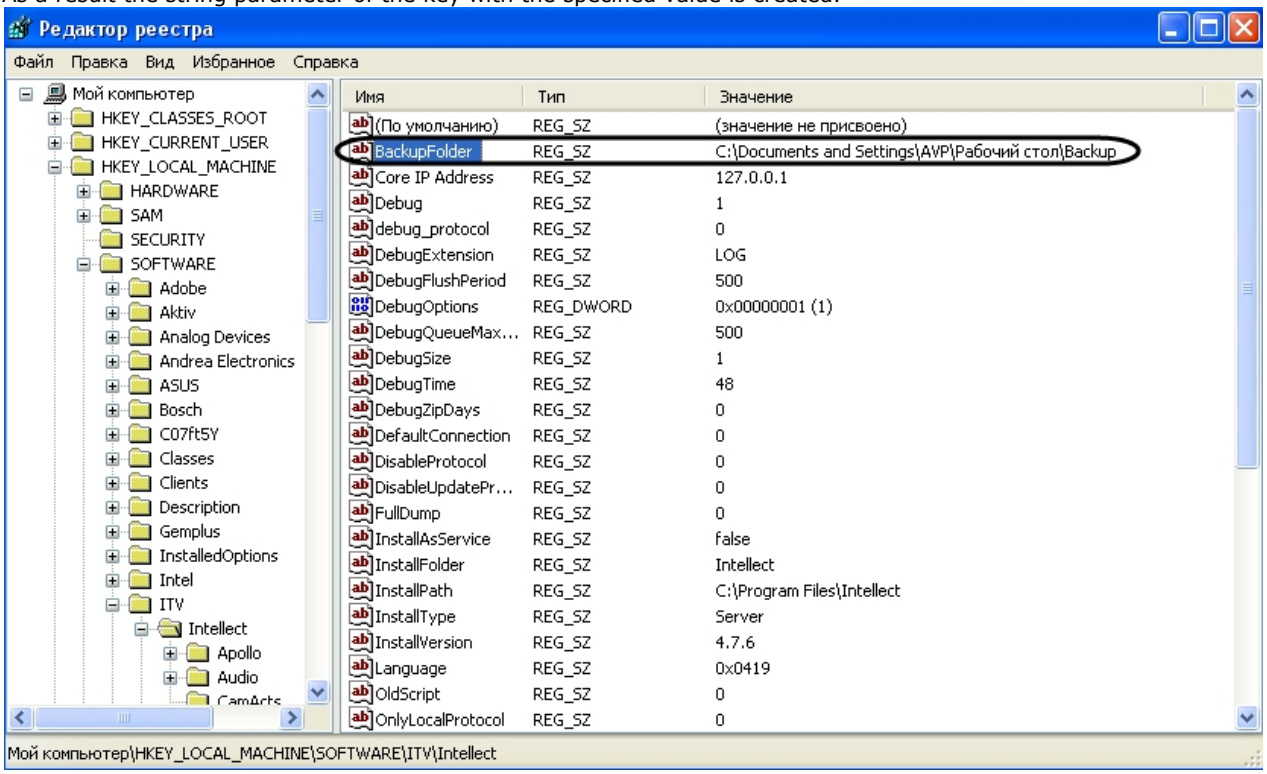

6. Call the **Run** function (**Start - > Run**). Type-in the «C:\Program Files\Intellect\idb.exe /backup» key in the opened box.
7. Click the **OK** button.

As a result the intellect.sq.l.bak database backup copy is created in the folder specified as the value of the BackupFolder parameter («C:\ Documents and Settings\AVP\Desctop\Backup»).

Restoring database from backup copy

The database backup copy is created using the idb.exe utility (see the Creating the database backup copy section).

Database restoring from backup copy is also performed using the idb.exe utility the following way:

1. Open the idb.exe utility (see the Running and shutting-down the utility section).
2. From the **Select data source**: drop-down list select MS SQL-Basic data database.
3. Click the **Restore from backup (MS SQL)** button (1).

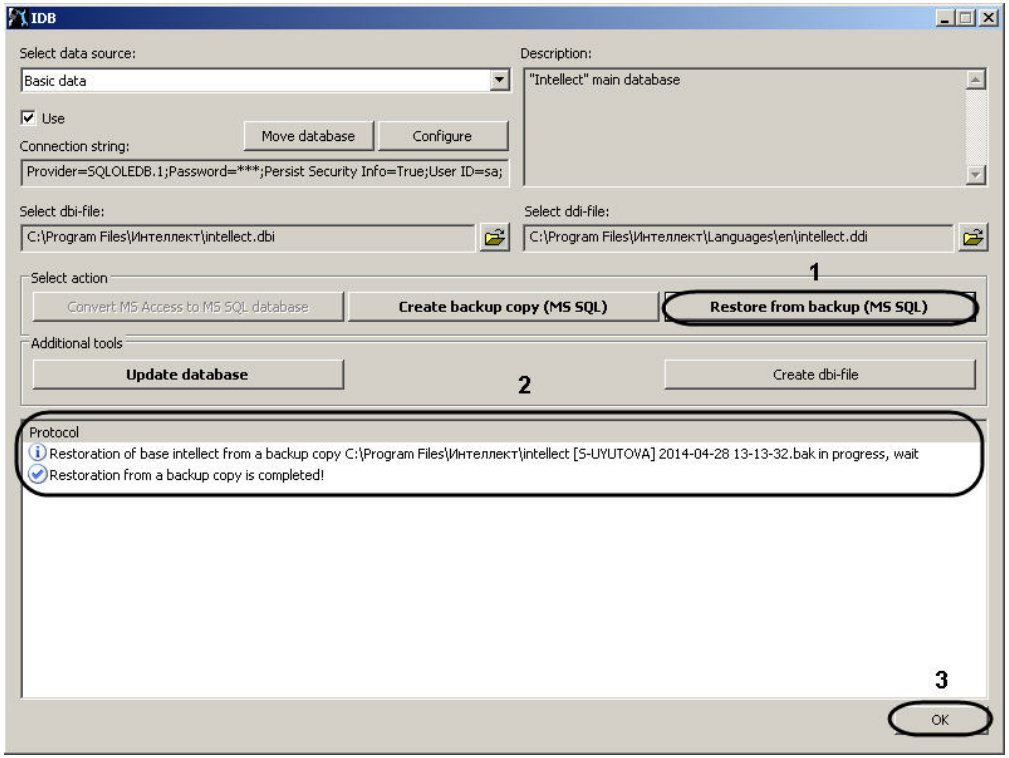

4. Using the standard dialog of files opening select the created earlier file with database backup copy.
5. As a result the process of database restoring from backup copy will start. Information about process is displayed in the **Protocol** informational table (2).
6. Restoring is completed when the **Restoration from a backup copy is completed**! message will be displayed in the Protocol table.
7. To complete working click the **OK** button. As a result the window will be automatically closed (3).

Database restoring from backup copy is completed.

The HubSearch.exe utility for searching IP-devices

The purpose of the HubSearch.exe utility

The HubSearch.exe utility is designed for searching IP-devices, such as Wave Hub, Matrix LH and Matrix LS and also for changing net settings(for example changing the IP address, address mask etc.) of a found device.

Starting and shutting-down the HubSearch.exe utility

To start the HubSearch.exe use one of the following ways:

1. Run the utility from Windows start menu. Foe this click **Start** -> **Programs** -> **Intellect** -> **Tools** -> **Search of IP devices**.
   The HubSearch.exe utility is available from the **Start** menu with the following installation types of the Intellect software: Server, Remote administrator workstation, Remote client.
2. Run the utility from Tools folder of Intellect installation catalogue. For example: C:\Program Files\Intellect\Tools\ Hub\HubSearch.exe.

In result dialog window of the HubSearch.exe utility will open.

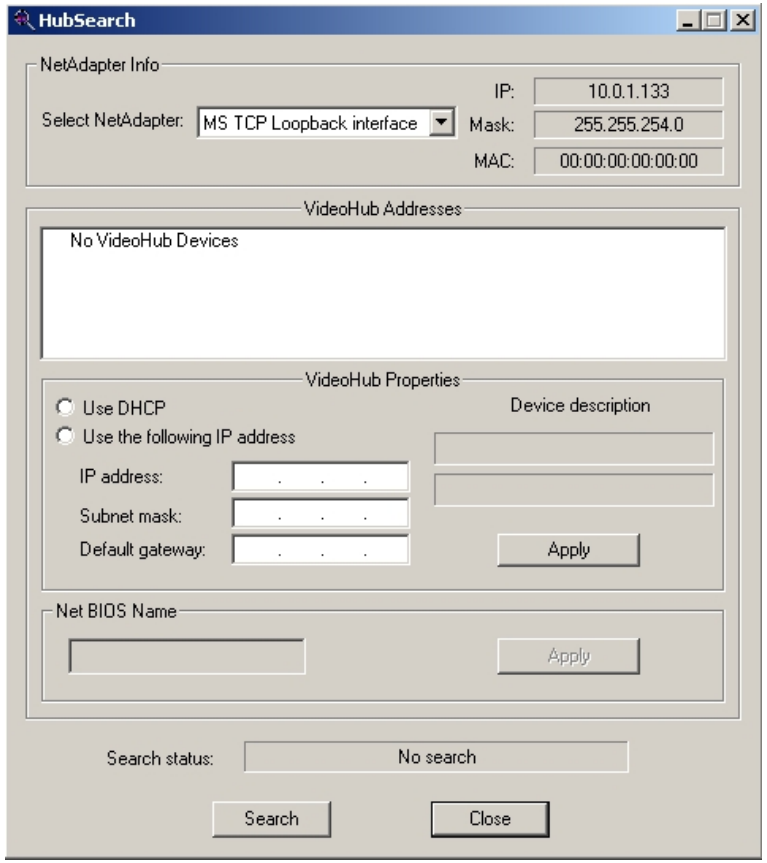

To close the HubSearch.exe utility use one of the following ways:

1. Click the button in left upper corner of Close dialog window (1);
2. Press a combination of keys Alt+F4 (2);
3. Click the **Close** button at the bottom of dialog window (3).

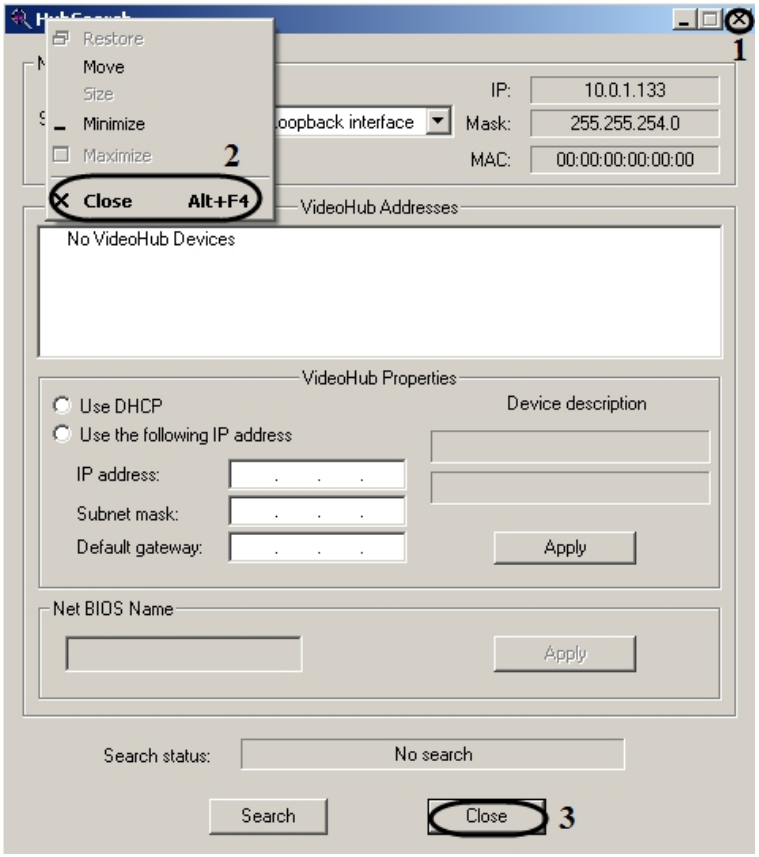

Interface elements of HubSearch.exe utility window

User interface (dialog window) of HubSearch.exe utility is shown in the figure.

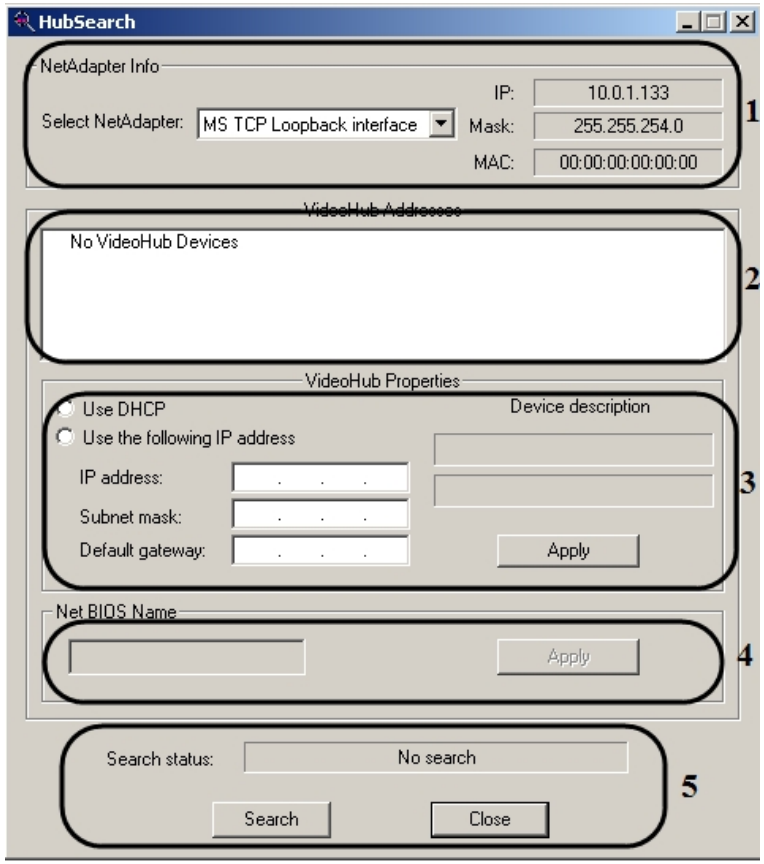

The table shows the content of HubSearch.exe utility user interface.

Group №	group	Element's name	description
1	NetAdapter Info	Dropdown list Select **NetAdapter**	Selection of net adapter
		Display-only field **IP**	Displays IP-address of computer's netcard
		Display-only field **Mask**	Displays mask of computer's netcard
		Display-only field **MAC**	Displays MAC-address of computer's netcard
2	VideoHub Addresses	Field **VideoHub Addresses**	Displays found devices
3	VideoHub Properties	Switch **Use DHCP**	Enables protocol of dynamic site configuration
		Switch **Use the following IP address**	Enables net settings
		Field **IP address**	Set IP address of the device

		Field **Subnet mask**	Set address mask of the device
		Field **Default gateway**	Set the gate
		2 Display-only fields **Device Description**	Displays parameters of the device
		Button **Apply**	Is used for applying the new settings
4	Net BIOS Name	Field **Net BIOS Name**	Set the netname of the device
		Button **Apply**	Is used for applying the new settings
5	Search status	Display-only field **Search status**	Displays status of device search
		Button **Search**	Serves to start the search
		Button **Close**	Closes dialog window

Using the HubSearch utility

Using the HubSearch.exe utility is done in the following way:

1. Run the HubSearch.exe utility.
2. To search for device click **Search.**

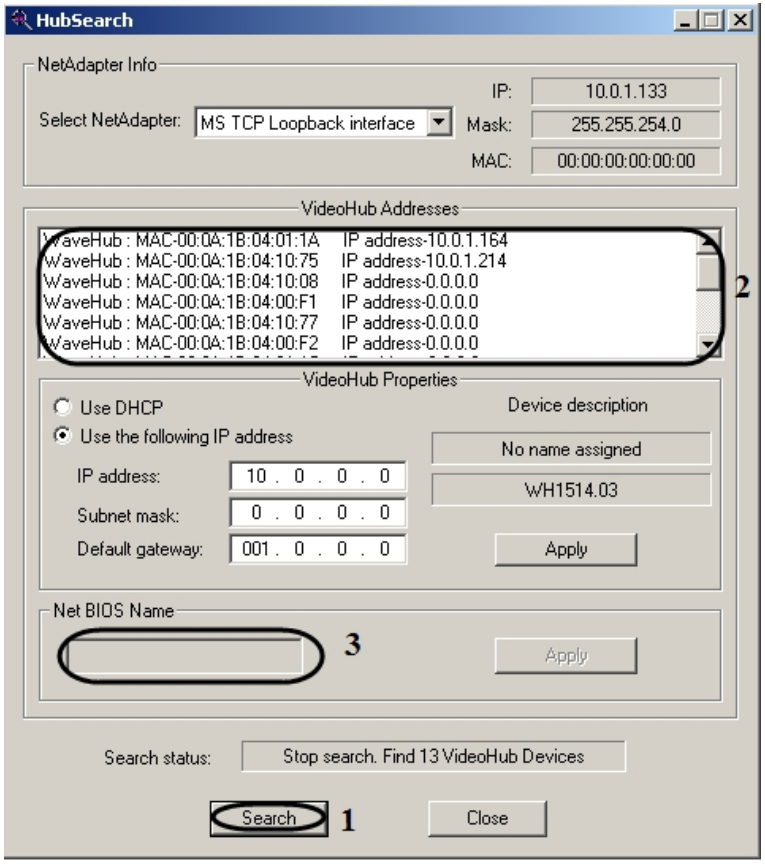

3. From the list **VideoHub Addresses** select the requires net device (2)
4. When protocol of site dynamic configuration is used, set the switch to the position **Use DHCP**. To change net settings set the switch to the position **Use the following IP address**
5. Click **Apply** button of **VideoHub Properties** group to save the changes.
6. If necessary change the net name of the device in the field **Net BIOS Name** (3).
7. Click **Apply** button of **Net BIOS Name** group to save the changes(1).
8. Close the HubSearch.exe utility(see. section Starting and shutting-down the HubSearch.exe utility).

Work with HubSearch.exe utility is completed.

The MatrixCodeReader.exe utility

The purpose of MatrixReader.exe utility

The MatrixCodeReader.exe utility is designed for getting dallas-codes of video capture cards' cryptochips on Matrix devices.

Starting and shutting-down the MatrixCodeReader.exe utility

To start the, MatrixCodeReader.exe do one of the following:

1. Start the utility from the Windows taskbar. Click **Start**, then **Programs**, then **Intellect**, then **Tools**, then MatrixCodeReader.exe.
   The MatrixCodeReader.exe utility is available from the Start menu with the following installation types of the Intellect software: Server, Remote administrator workstation, Remote client.
2. Run the utility from the folder «Tools\Hub» of Intellect installation directory catalogue. For example: «C:\Program Files\Intellect\Tools\ Hub\ MatrixCodeReader.exe».

MatrixCodeReader.exe dialog window will be displayed in result.

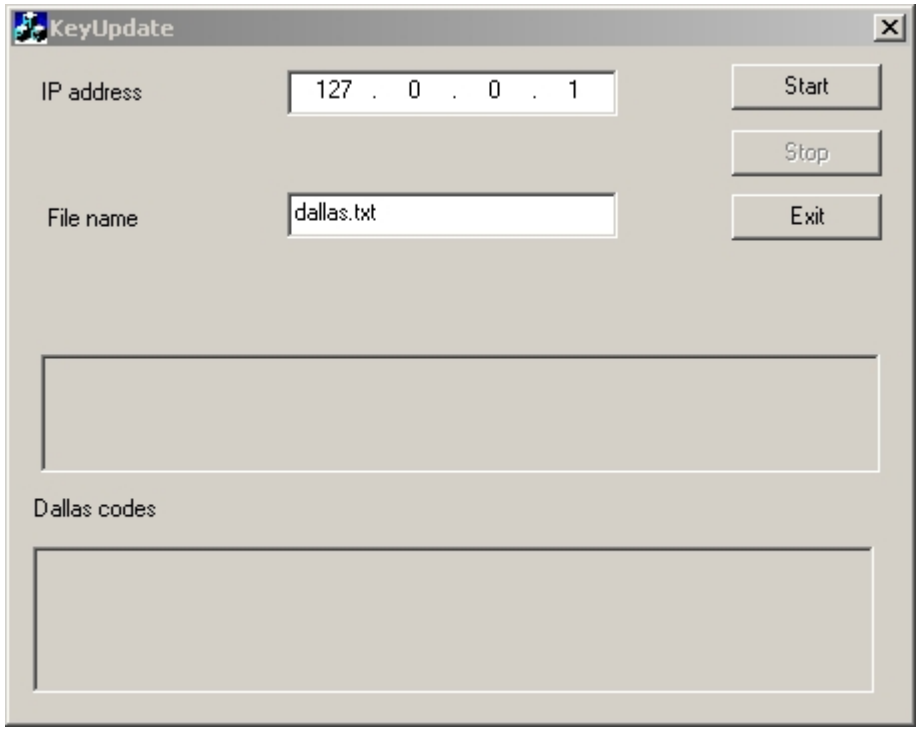

To close MatrixCodeReader.exe do one of the following:

1. Click the button in right upper corner of Close dialog window (1);
2. Press a combination of keys «Alt»+«F4» (2);
3. Click **Exit** button in the dialog window (3).

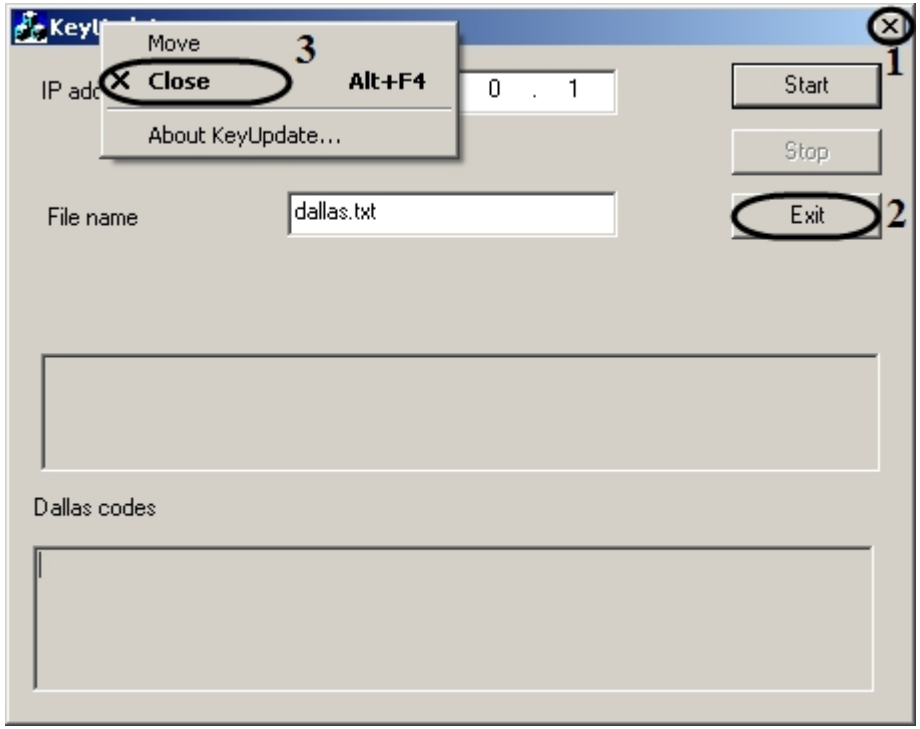

Interface elements of the MatrixCodeReader.exe

The user interface of MatrixCodeReader.exe is shown in the figure.

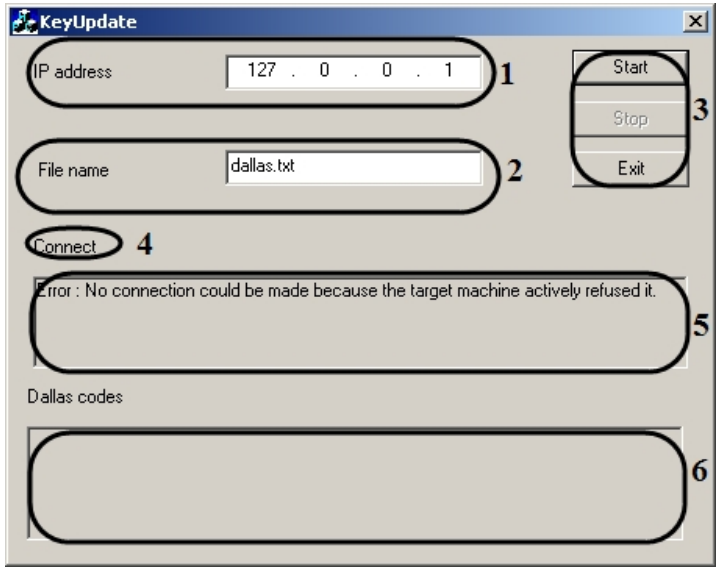

MatrixCodeReader.exe user interface has the following elements:

1. Entry field **IP address** of device's IP address (1).
2. Entry field **File name** of file's name, containing dallas-code of video capture card's cryptochip. Is set by default(2).
3. Start button of running and receiving the dallas-code, Stop button and Exit buttin to quit the utility (3).
4. State line (4). May contain the following information.
    a. Empty line, when the utility is run

    b. Connection at the beginning or when an error has occured

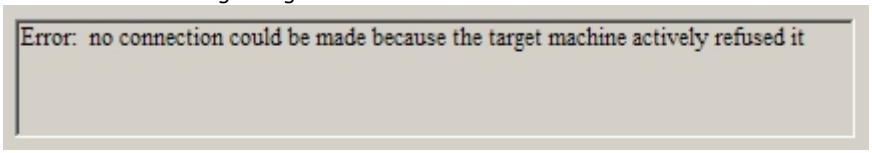

    c. Update finished successfully

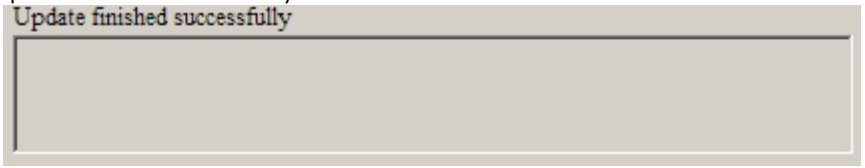

5. Area of error's displaying (5).

6. Area of displaying the dallas-code (6).

Using the MatrixCodeReader.exe

Use the MatrixCodeReader.exe as follows:

1. Run MatrixCodeReader.exe (see Starting and shutting-down the MatrixCodeReader.exe utility)
2. Enter IP of the device in the field IP-address (1)
3. Click **Start** (2)
4. Dallas codes of the boards will appear in the area Dallas codes in result (3)
5. Finish work with MatrixCodeReader.exe (see Starting and shutting-down the MatrixCodeReader.exe utility).

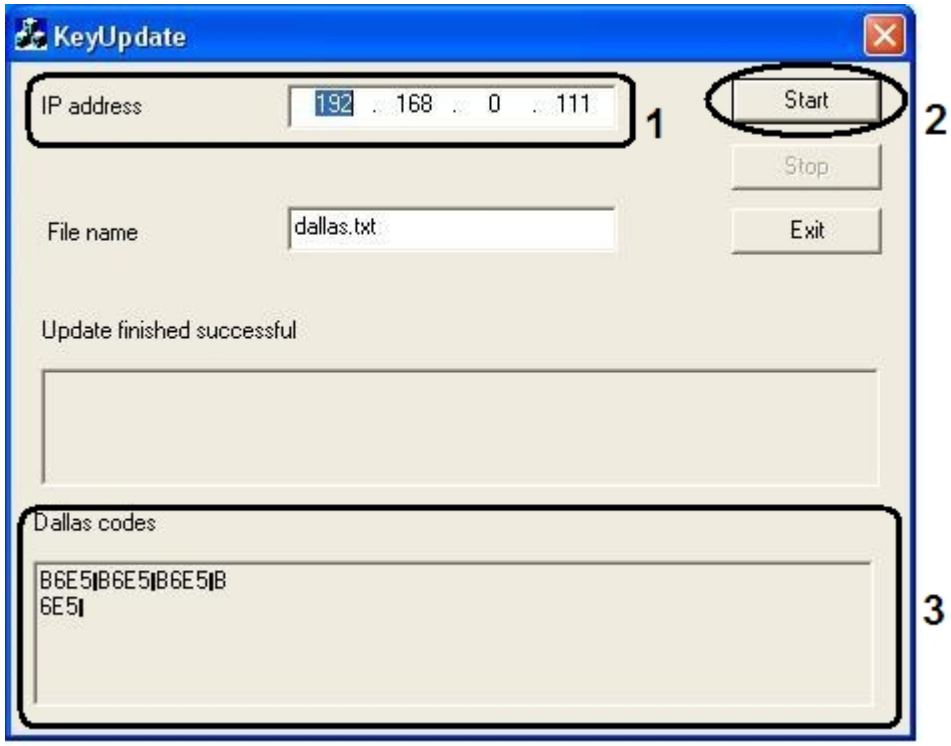

Work with MatrixCodeReader.exe is over.

The Boards.exe utility

The purpose of the Boards.exe utility

Boards.exe utility is designed for viewing the list of all devices of audio digitization and audio input channels available on a Server and the list of available sample rates.

Starting and shutting-down the Boards.exe utility

Boards.exe is run from Tools folder of Intellect program installation directory. For example: C:\Program Files\Intellect\Tools\ Boards.exe.

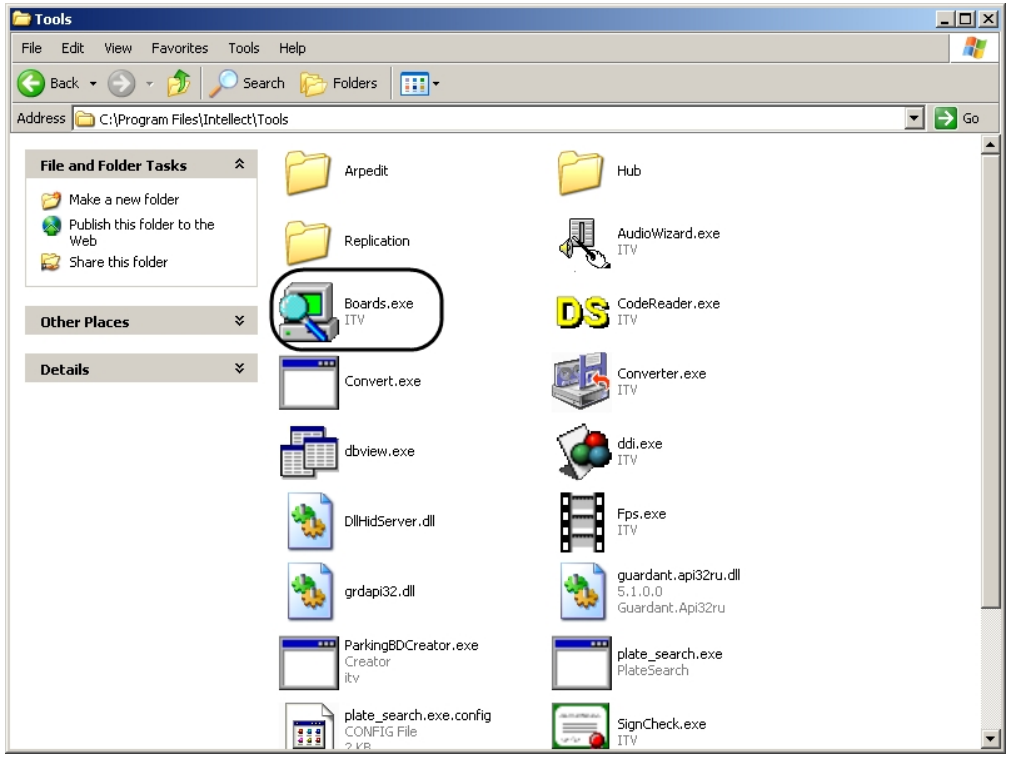

Boards.exe dialog window will be displayed in result.

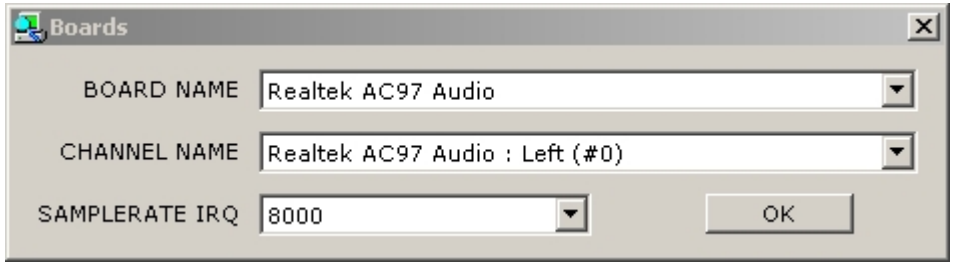

One can quit Boards.exe using one of the following ways:

1. Press a combination of keys Alt+F4(1).
2. Click the button in right upper corner of Close dialog window (2);
3. Click **OK** after changes (3).

Interface elements of Boards.exe

User interface (dialog window) of Boards.exe is shown in the figure.

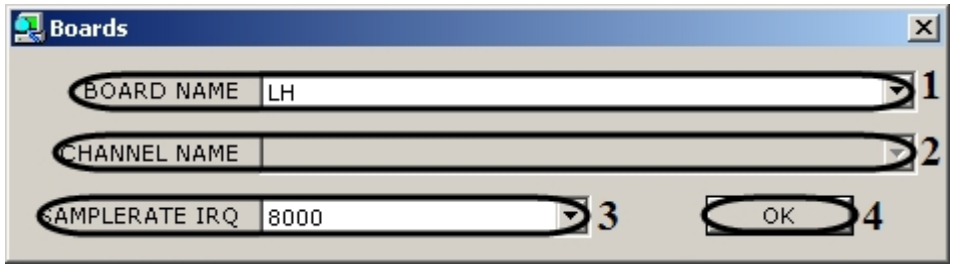

Boards.exe user interface has the following elements that are shown in the table.

Element №	Element of user interface	Description
1	Dropdown list «Board Name»	Set the type of sound digitization device. Depends on type and number of devices of audio signal digitization installed on the Server.
2	Dropdown list «Channel Name»	Set the number of audio input channel in accordance with RCA-F pin number, to which microphone is connected. Depends on board type of audio signal digitization.
3	Dropdown list «Samplerate IRQ»	Set the sample rate by the device. Influences on quality of played back and recorded audio signal and size of audio recording. For video capture cards' ADC – 8000, 16000, 32000.
4	Button «OK»	Is used for shutting-down the Boards.exe.

Note.
For video capture cards' ADC of AxxonSoft company: 0 – Left channel; 1 – Right channel.

The more the level of digitization, the better the quality of audio signal and consequently the more efficiency of audio control.

Using the Boards.exe

Using the Boards.exe utility is done in the following way:

1. Run Boards.exe (see section Starting and shutting-down the Boards.exe utility).
2. Select the name of the board from the dropdown list **Board Name**.

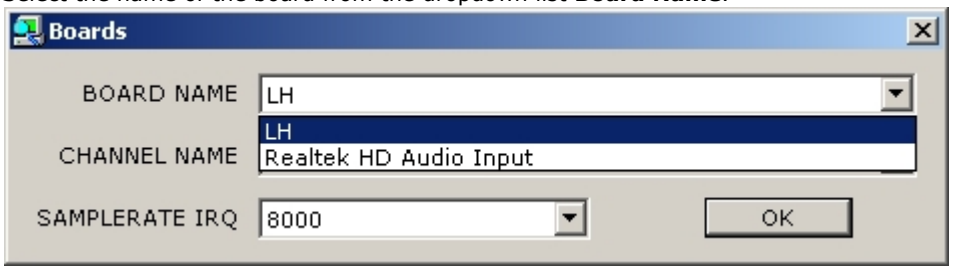

3. Select the channel name from the dropdown list **Channel Name**.

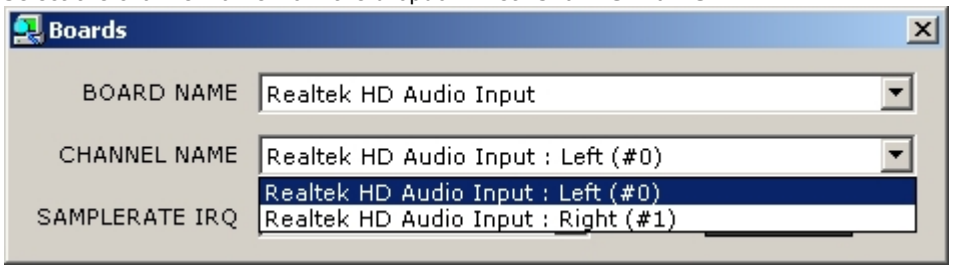

4. Select the rate of audio signal digitization from the dropdown list **SamplerAte IRQ**.

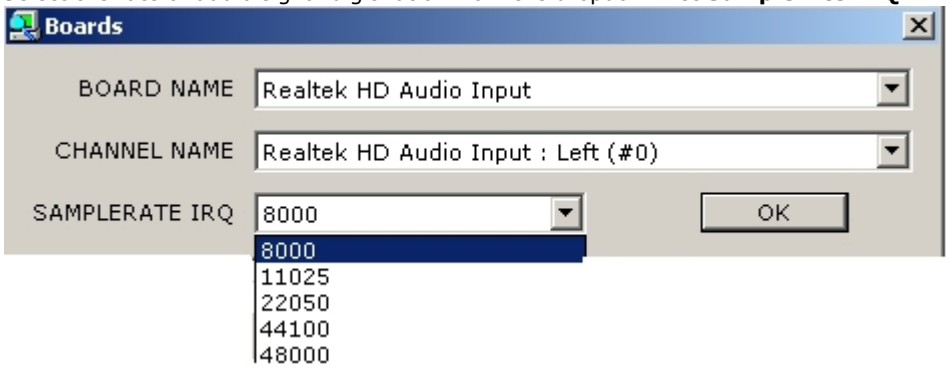

5. Click **OK**. The utility window will automatically close.

Work with Boards.exe is completed.

Configuration check tool

The Configuration check tool is designed for checking the settings of all created objects in the INTELLECT™ software and restoring the correct configuration if any changes occurred. Restoring is performed from the configuration template which can be created at any moment in accordance with current settings.

Starting and shutting down the Configuration check tool

To start the Configuration check tool, do the following:

1. Go to the **Interfaces** tab of the **System settings** dialog box.



2. Create the **Configuration check** object on the base of the **Display** object.

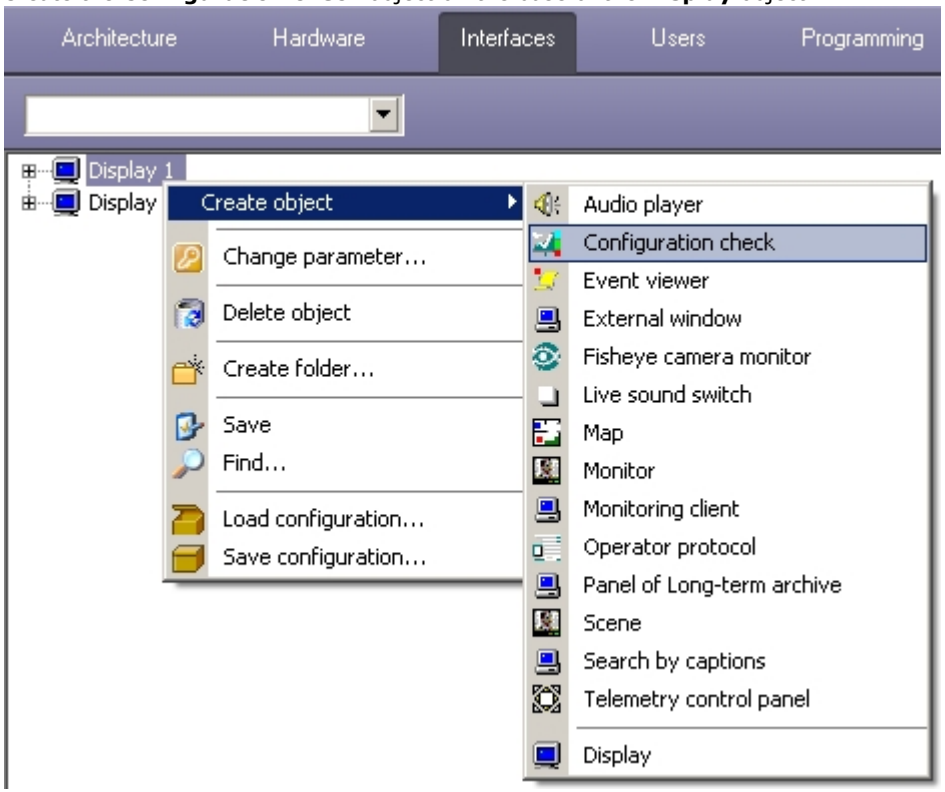

3. Go to the settings panel for the **Configuration check** object.

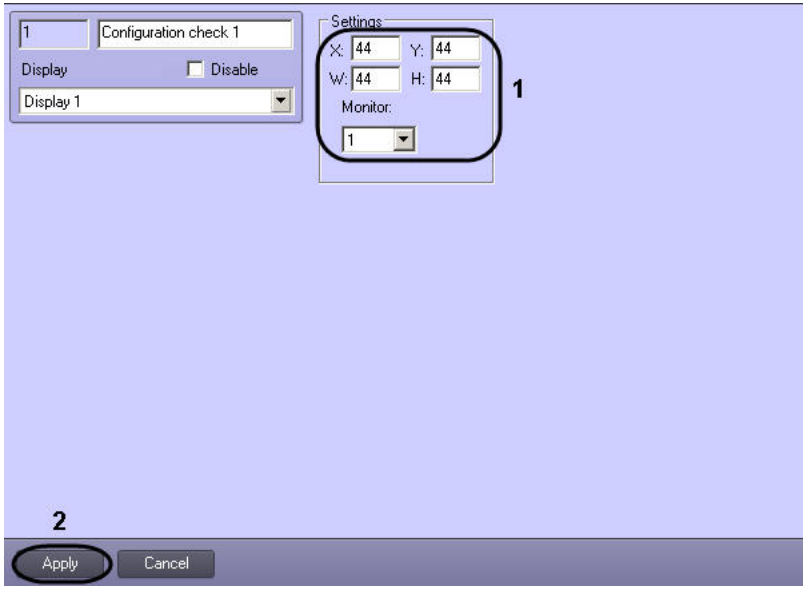

4. To configure the position of the **Configuration check** object, set the coordinates of upper left corner in **X:**, **Y:** fields and values of window's width and height in **W**:, **H:** fields, and select the computer monitor for which the coordinates are set (1).
5. To save the changes, click the **Apply** button (2).

As a result the **Verifying configuration** tool dialog box is displayed.

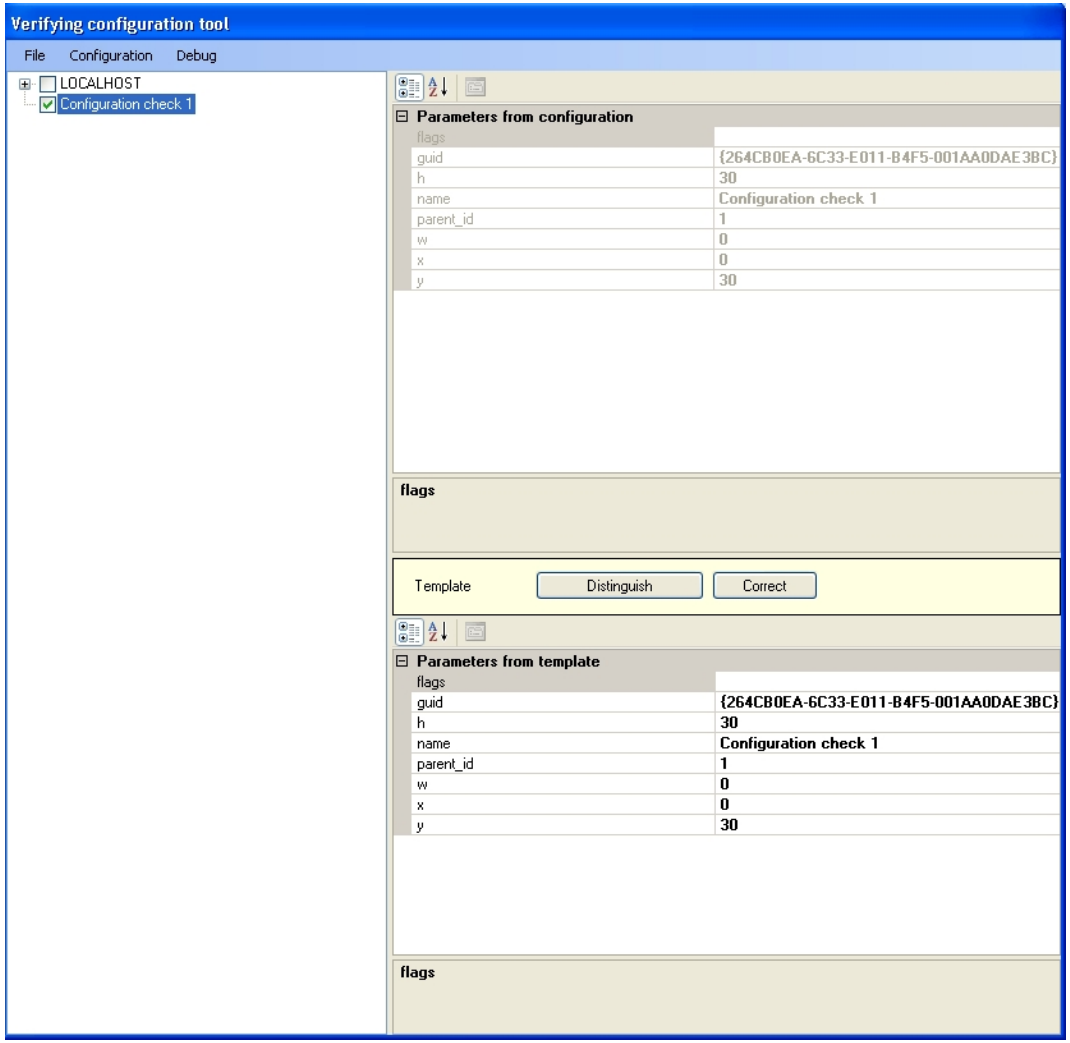

To shut down the tool, click the button on the main control panel of INTELLECT™ software and select the **Close all** menu item;

Configuration check tool interface description

The dialog box of the Configuration check tool has four main interface elements:

1. The toolbar (1).
   The tool's control menu is located here.
2. The objects tree of INTELLECT™ software (2).
   The objects tree of INTELLECT™ software is displayed here. Clicking the left mouse button on any object in the objects tree, the configuration of its parameters is displayed in parameters field (points 3-4).
3. The field of object parameters from INTELLECT™ configuration (3).
   The current configuration is displayed in this field. These parameters are not available for editing.
4. The field of object parameters from a template (4).

Parameters of the selected object from the configuration template field are displayed here. These parameters are available for editing.

> **Note.**
> At the first start of the Configuration check tool, the current configuration of selected object is displayed in this field.

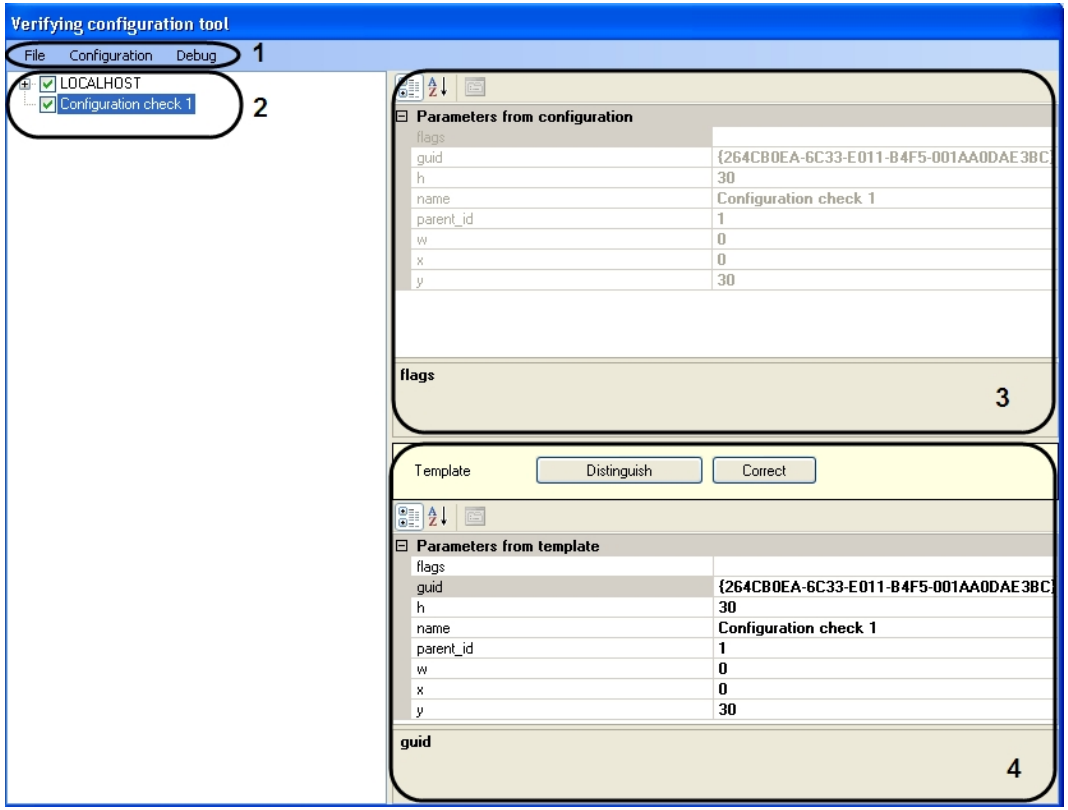

Using the Configuration check tool

To start the operation, start the Configuration check tool (see the Starting and shutting down the Configuration check tool section).

Creating a template

To create a template in the Configuration check tool, do the following:

1. In the objects tree, set the checkboxes next to those objects which parameters configuration will be included in a template.

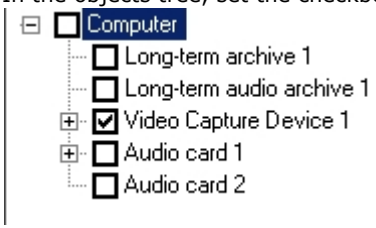

2. Click the left mouse button upon the object which parameters configuration is to be edited.

> **Note.**
> The set checkbox next to the required object is an obligatory term in order to edit the parameters.

As a result there is a list of object parameters with values, available for editing in the parameters from template field.

> **Note.**
> In the parameters from INTELLECT configuration field there is a list of object parameters with values set in INTELLECT software. They can not be edited.

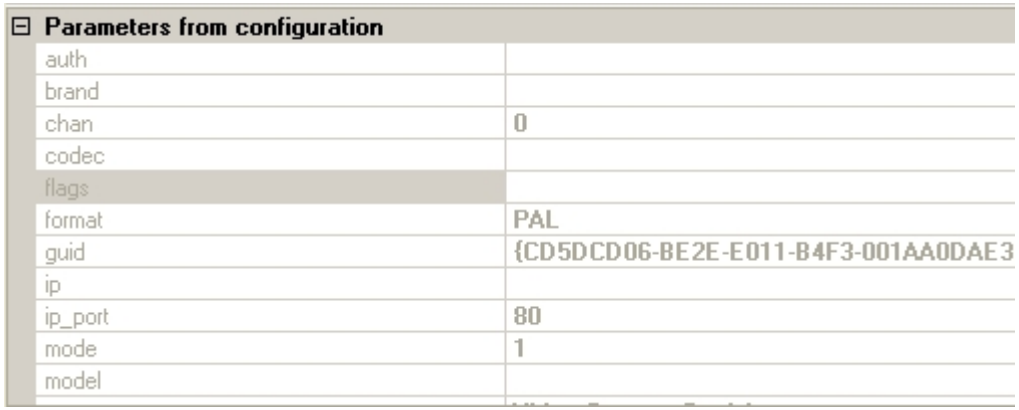

> **Note.**
> At the first start of the Configuration check tool, the current configuration of selected object is displayed in this field.

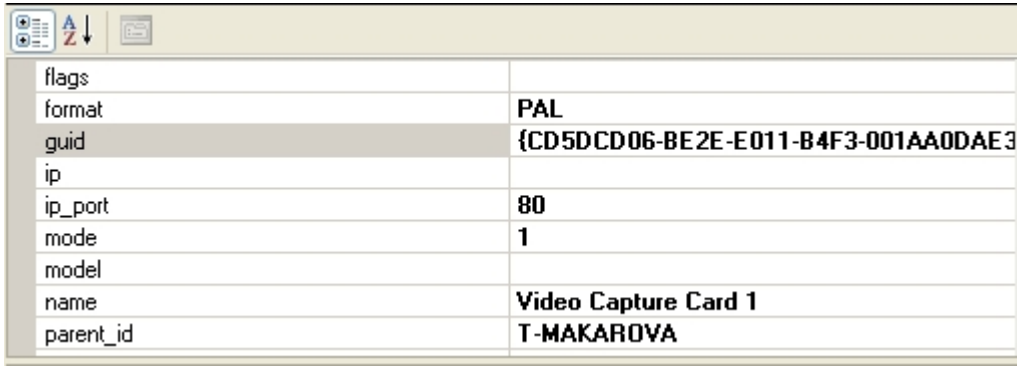

3. Edit the object parameters. To edit the selected parameter, click the left mouse button upon the corresponding line with its value and edit it.
4. Repeat steps 3-4 for all objects, which parameters configurations are to be edited.
5. Go to the **File** menu of the control panel and select the Save template item.

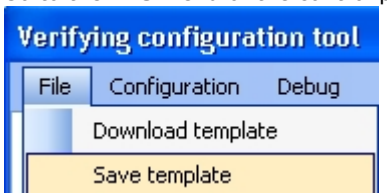

6. Name a file and select the storage directory in the appeared window.

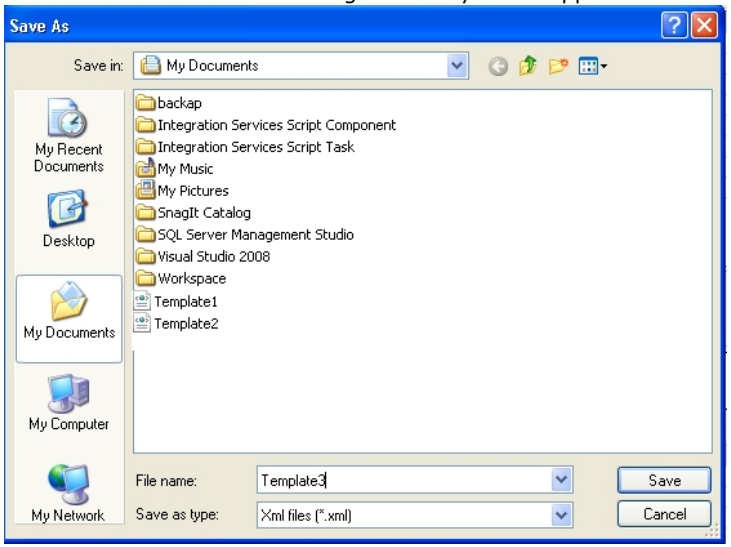

7. Click the **Save** button.

The template is now created.

Downloading and editing the template

To download and edit the template, do the following:

1. Go to the **File** menu on the control panel and select the **Download template** item.

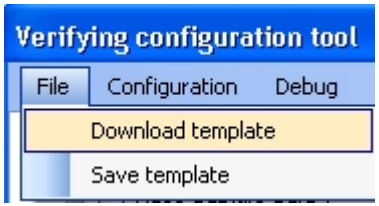

2. Select a template file in the appeared window and click the **Open** button.

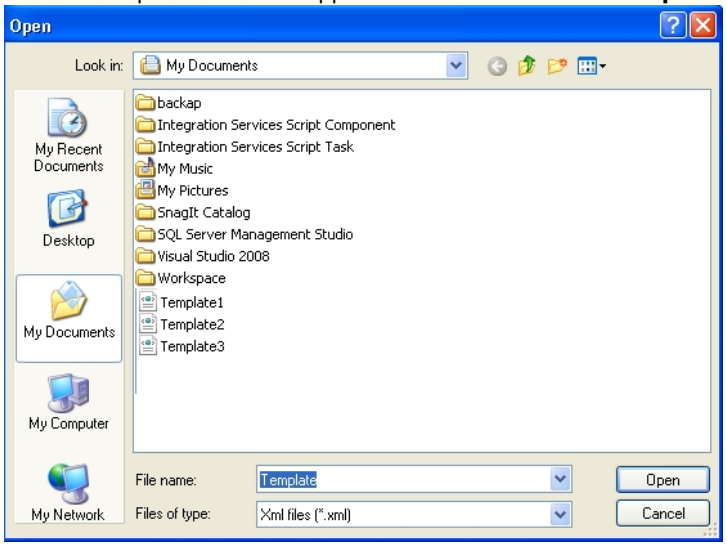

The objects tree is displayed as a result. The active checkbox is next to the objects which configuration has been saved in the template.

3. To edit the template, repeat steps 1-7 of the **Creating a template** section.

The template is now downloaded and edited.

Verifying and correcting the configuration

To verify the current configuration of objects in INTELLECT software and restore it from the template, do the following:

1. Download the template for which the object configuration is to be verified in INTELLECT software (see the Downloading and editing the template section).
2. Go to the **Configuration** menu on the control panel and click the **Verify** button.

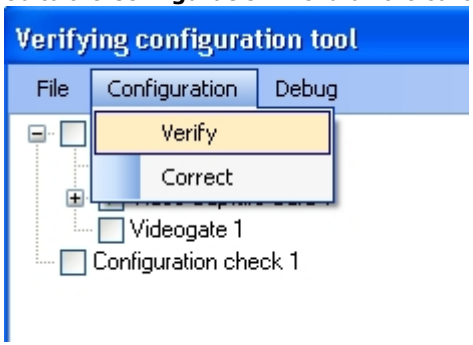

As a result the objects which current configuration in INTELLECT software differs from that one in the template will be marked red in the objects tree.

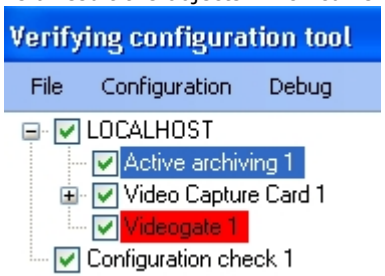

3. To view object parameters in the template which values are different from those ones in the INTELLECT software, click the left mouse button upon the object marked red in the objects tree and go to the parameters from the template field.
4. Click the **Distinguish** button in the **Template** field.



As a result the parameters which values are different from those ones in INTELLECT software are moved to the **Differences** list.

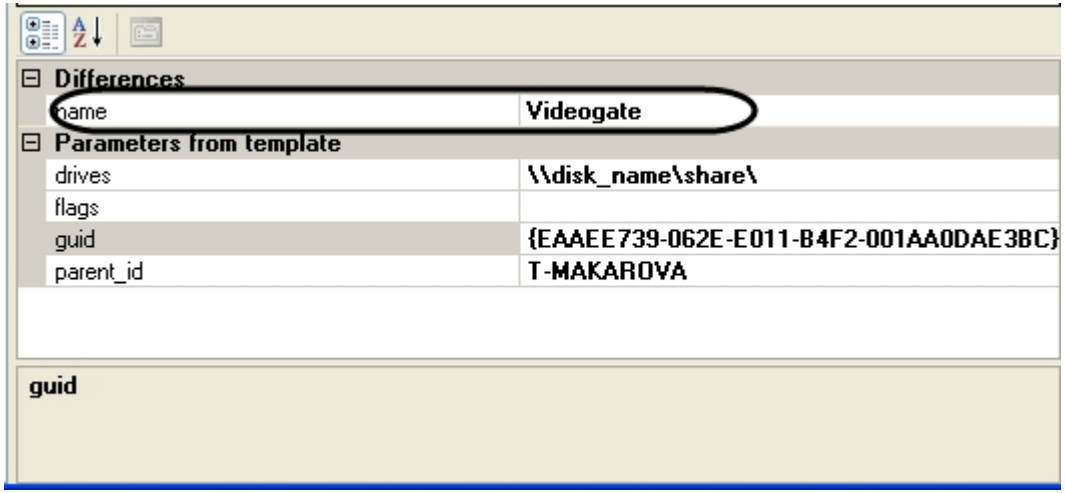

5. Correction (if necessary) of these parameter in INTELLECT software for those ones from the template may be performed in two ways:
   a. Click the **Correct** button in the Template field.



   b. Go to the **Configuration** menu on the control panel and select the **Correct** item.

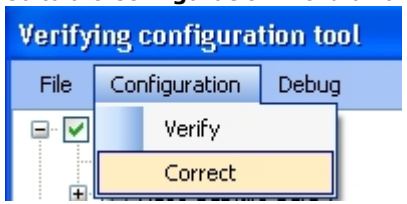

The parameter configuration from INTELLECT templates is now verified and corrected.

Index.exe utility for reindexing archive files

The purpose of Index.exe utility

Index.exe utility reindexes archive files with big data array without restarting the INTELLECT™ software.

> **Note.**
> Another way to perform reindexing of archive files is to shut down the *Intellect* software and delete the INDEX folder in the VIDEO folder on the disk with archive. Indexes will be rebuild automatically after the *Intellect* startup. This method is equal to using of the index.exe utility.

Starting and shutting down the utility

To start reindexing utility run *index.exe* executive file in the **Modules64** folder that is in the catalogue of the INTELLECT™ software installation, for example, «C: \Program Files\Intellect \Modules64».

As a result the window of *index.exe* utility is displayed

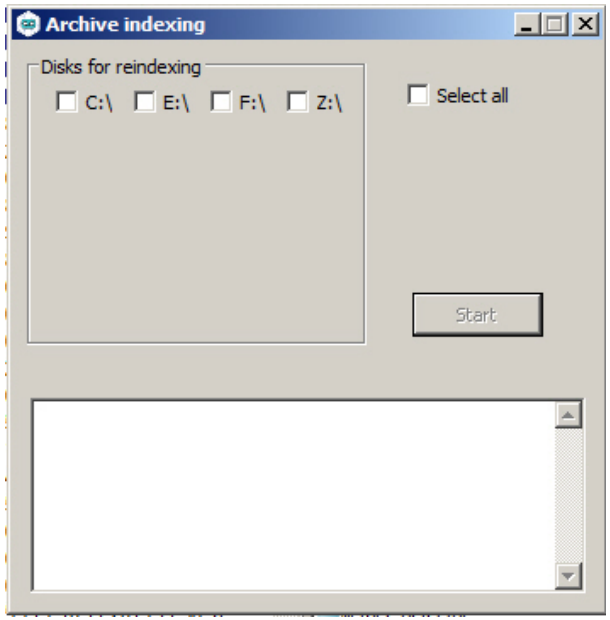

To stop working with *index.exe* utility click «Close» - .

Using the Index.exe utility

> **Attention!**
> Before you start working with the utility check the value of IndexRebuilding parameter in HKLM/SOFTWARE/ITV/INTELLECT/Video for 32-bit systems (HKLM/SOFTWARE/Wow6432Node/ITV/INTELLECT/Video for 64-bit) section of OS Windows registry: by default it should be 0. If the parameter value differs from the value by default, you should change it to 0, otherwise the utility will not idex the archive.

To reindex archive files after its changing (for example, after copying new video recordings to one or several archive disks), do the following:

1. Start *index.exe* utility (see Starting and shutting down the utility section).
2. In appeared window select archive disks for reindexing by setting checkbox next to required disks (1). Check **Select All** to set all checkboxes (2).
3. To start reindexing click the **Start** button (3).

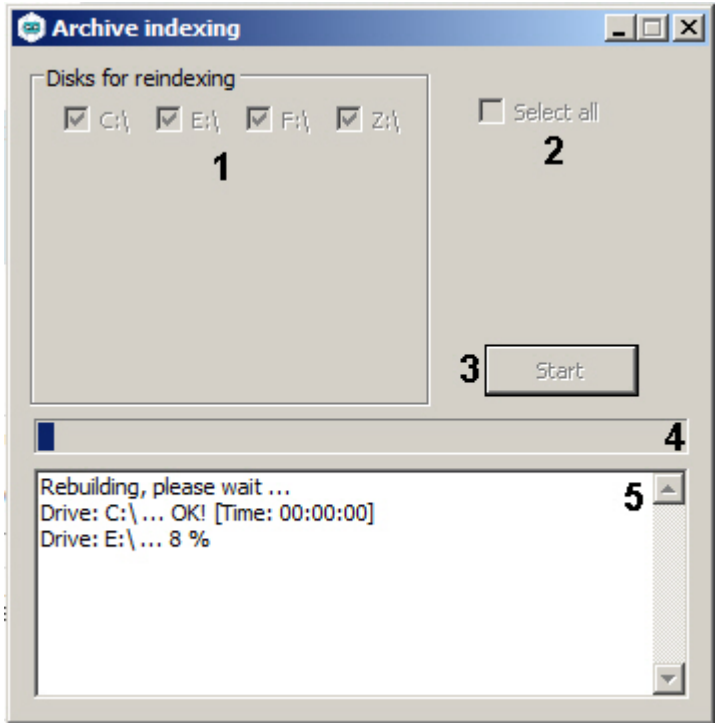

> **Note.**
> At the time of reindexing all the elements of utility window are not active.

4. Rebuilding process is displayed by progress bar (4) and in the text field (5).
5. When you finish reindexing, shut the window of utility.

Reindexing of archive files is completed.

To reindex archive files without using the dialog box, in the command line start *index.exe* utility with parameters, for instance, index.exe C, D command will reindex archive files on disks C and D. To reindex archive files on all disks, use the all parameter.

The shedule.exe utility for creating a replication query file

The purpose of the shedule.exe utility

The shedule.exe utility is designed for creating a query file on the Server-Receiver while replicating the archive on unconnected Servers (see Replicating archive from unconnected servers using the removable storage section).

Starting and shutting-down the schedule.exe utility

To start the utility start the schedule.exe file in the Tools\Replication folder of the INTELLECT™ installation directory. For example:

C:\Program Files\Intellect\Tools\Replication\shedule.exe .

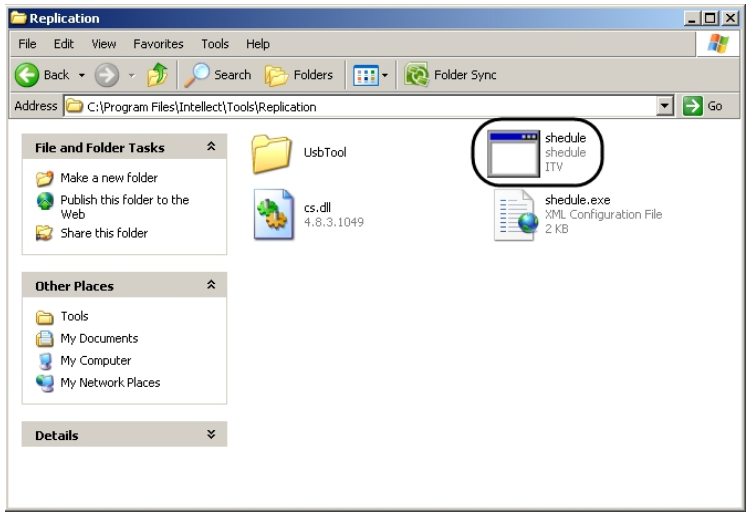

As the result the dialog window of the schedule.exe utility is opened.

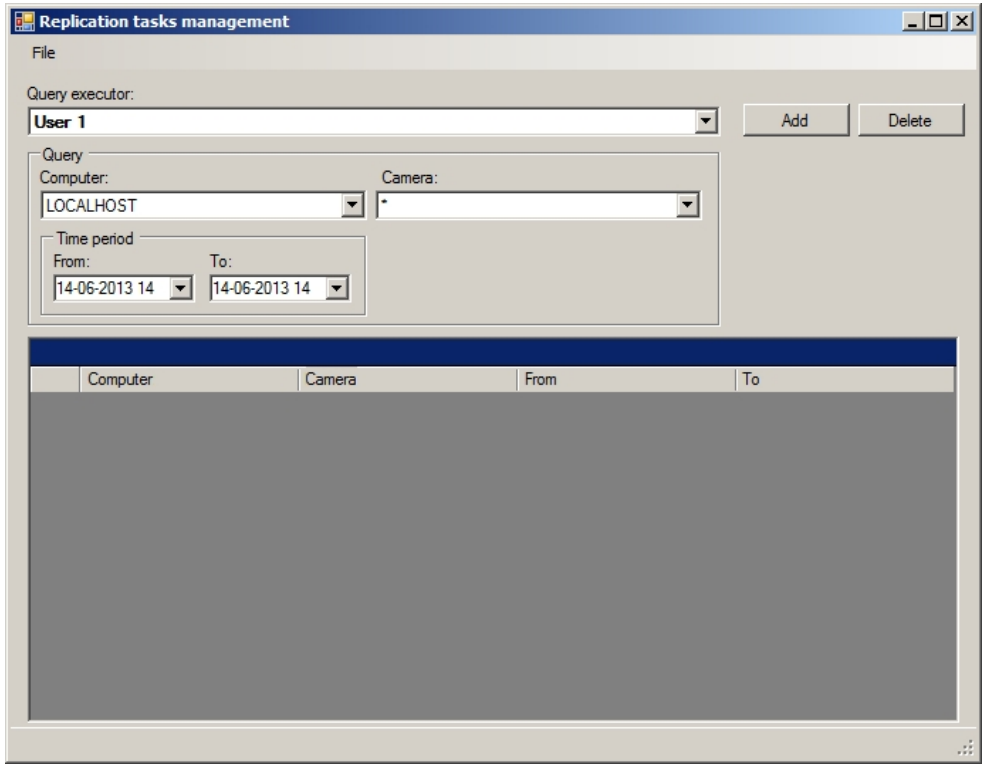

Note.
The error message is displayed at opening the schedule.exe utility when users or the **Camera** objects are not created in the INTELLECT™ software under the **Computer/LOCALHOST** object corresponding to the Receiver. It is needed to create required objects and restart the system.

To close the *schedule.exe* utility, click the button or select **Exit** in the **File** menu.

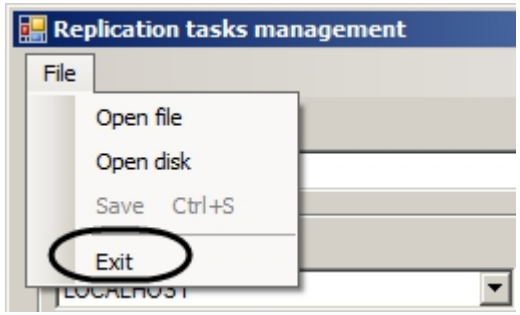

Using the schedule.exe utility

Creating the query file for replication

To create the query file do the following:

1. Connect the removable storage to the Receiver.
2. Select the user registered the INTELLECT™ software in the **Query executor** drop-down list (1).

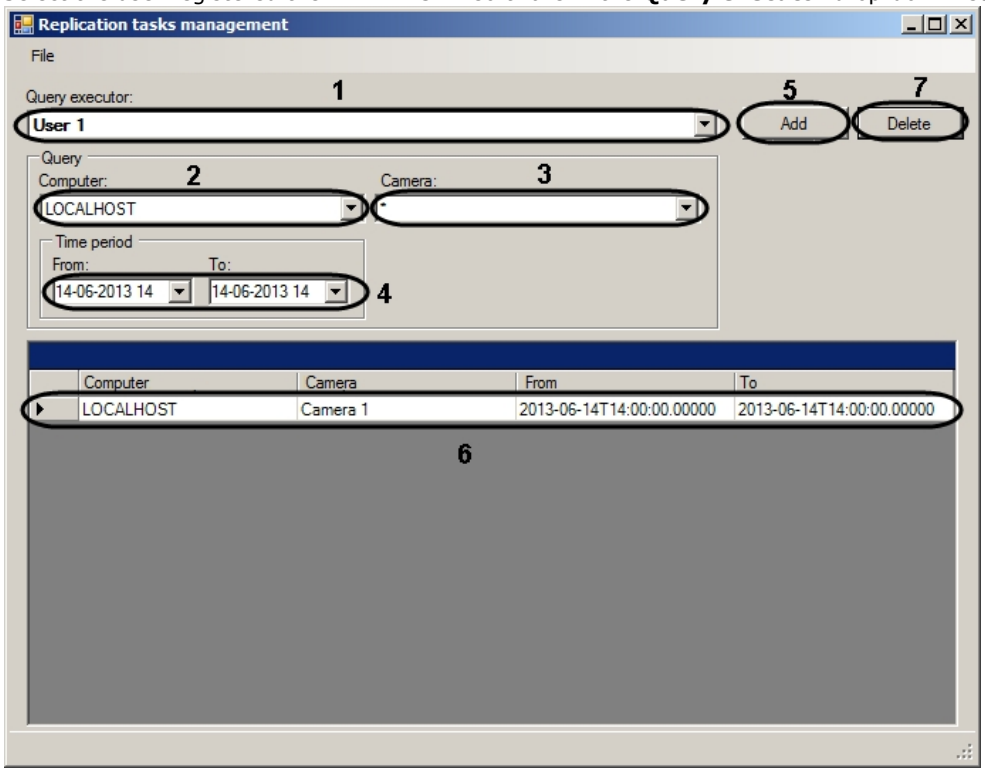

3. Select the **Computer** object corresponding to the Data source in the **Computer** drop-down list (2).
4. In the corresponding drop-down list select the **Camera** object the archive of which is to be copied (3).
5. Specify the time period for which the archive from selected camera is to be copied in the **From**: and **To**: fields using the mask or calendar that is displayed by clicking the button (4).
6. Click the **Add** button (5).
   The task is added to the list (6).

> **Note.**
> Select the task and click the **Delete** button to delete it from the list (7).

7. Repeat steps 2-6 for all required Sources.
8. Save the query file.

The query file is now created.

Saving the query file

To save the query file do the following:

1. Select **Save** in the **File** menu.

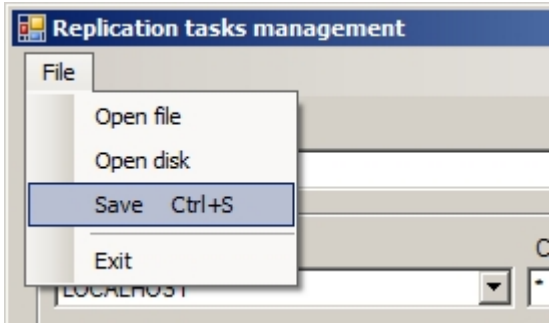

2. Select the removable disk where the query file is to be saved in the drop-down list of the opened dialog box (1).

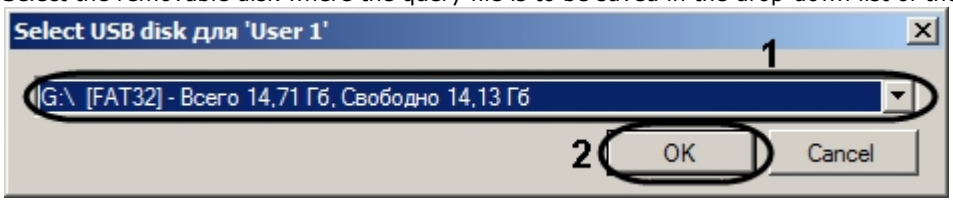

> **Note.**
> The Removable disks are not found message will be displayed if the removable storage is not found while saving the query file.

> **Note.**
> If there is the IntellectBackup folder on the removable storage, then the dialog box asking to delete this folder is displayed. Click the **OK** button .

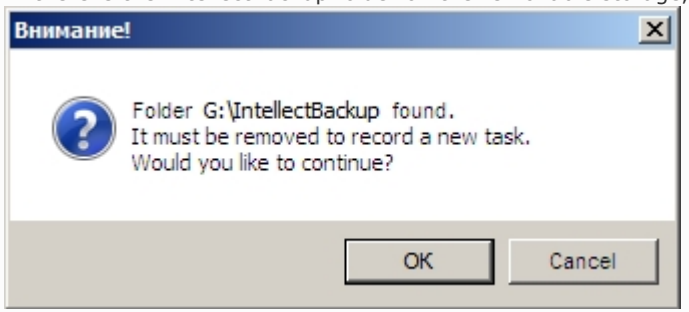

3. Click the **OK** button (2). The query file is saved on the selected disk.

The query file is now saved.

Opening the query file

To open the query file do one of the following:

1. Specify the disk where the query file is. For this:
2. Select **Open disk** in the **File** menu.

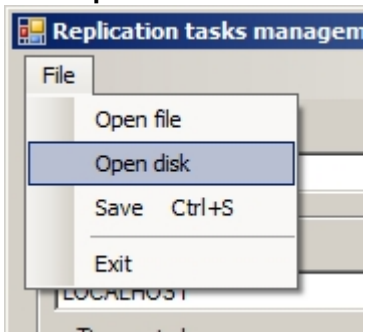

3. Select the query file in the drop-down list (1).

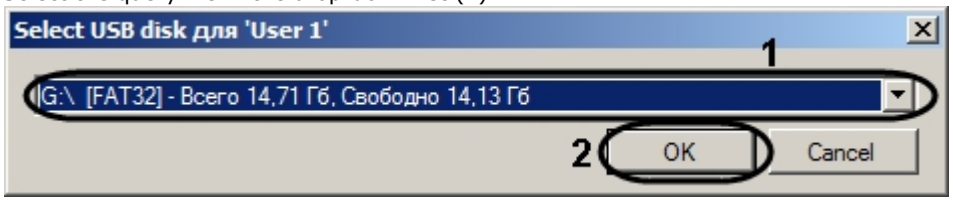

> **Note.**
> The Removable disks are not found message will be displayed if the removable storage is not found while openning the query file.

4. Click the **OK** button (2).
   The utility detects and opens the query file which is in the root of selected disk.
5. Select the query file manually. For this:
6. Select **Open file** in the **File** menu.

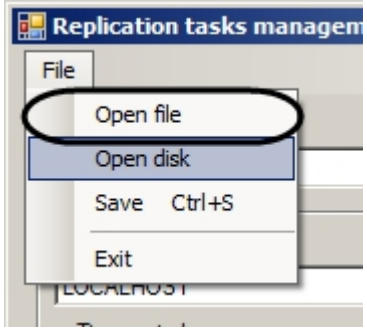

7. Select the *itv_task.xml* file containing the query parameters using the standard opening dialog.

The query file is now opened.

The AxxonPlayer.exe utility for viewing and converting the video archive

Purpose of the AxxonPlayer.exe utility. Hardware requirements

On the page:
• Purpose of the AxxonPlayer.exe utility • Hardware requirements for the AxxonPlayer.exe utility

Purpose of the AxxonPlayer.exe utility

The AxxonPlayer.exe utility is designed for viewing and converting the video archive recorded with the INTELLECT™ software package. The utility also allows viewing files in .mkv and .avi formats with or without audio.

Note.
There is a specific menu item used to open files in .avi and .mkv formats located in the folder – **Folder with video files** (see Opening video files by specifying the path in the utility section. The **File** menu item is used to open a separate archive file or a file in .avi or .mkv format.

Hardware requirements for the AxxonPlayer.exe utility

For proper operation of the AxxonPlayer.exe utility the graphics card installed on the computer is to support Direct3D or OpenGL 1.2 functionality.

Starting the AxxonPlayer.exe utility

To start the AxxonPlayer.exe utility, do one of the following:

1. Run the executive file in the Tools folder from the INTELLECT™ software installation directory: <Intellect>\Tools\ AxxonPlayer.exe.
2. Select in the menu **Start -> All Programs -> Intellect -> Tools -> AxxonPlayer**.

The Axxon Player window opens after starting the AxxonPlayer.exe utility.

The AxxonPlayer.exe utility is now started.

Opening video files

There are three ways to open video files with the AxxonPlayer.exe utility:

1. Double left-click on the archive file (file of *._* type) in the VIDEO folder.

   Note
   To open files by double clicking they should be associated with the "ITV player" utility. To perform it, run the AxxonPlayer from the admin login at least once.

2. Specifying the path using which the access to archive files is to be performed in the utility.
3. Using the command prompt.

Note.
If video files that are to be opened were not recorded, but copied, then start the Convert.exe utility to open the archive (see The Convert.exe utility for correcting modification dates of video archives section):

- If the archive is created in the same time zone as it is viewed, then start the utility with the fullmode parameter:
  convert.exe fullmode
- If the archive is created in different time zone than it is viewed, then move the archive to the current time zone by starting the utility with the following parameters in the command prompt:
  convert.exe fullmode TZ +hh:mm
  where +hh:mm is the time shift between the current time zone and the time zone of the archive.

Otherwise the folders with video files fail to open.

Note.
Select the folder that is the source for files to be played back in the .mkv and .avi formats.

Opening video files by specifying the path in the utility

The following ways are to be used to specify the path to archive files:

1. **Disk** – access is performed to all files stored on the specified disk;
2. **Folder** – access is performed to all files stored in the specified folder;
3. **File** – a separate archive file or a file in .avi or .mkv format will be played back.
4. **Folder with video files** – files in .avi or .mkv format stored in the specified folder will be played back.

To open archive files which are to be viewed with the AxxonPlayer.exe utility, do the following:

1. Click the button in the Axxon Player window.

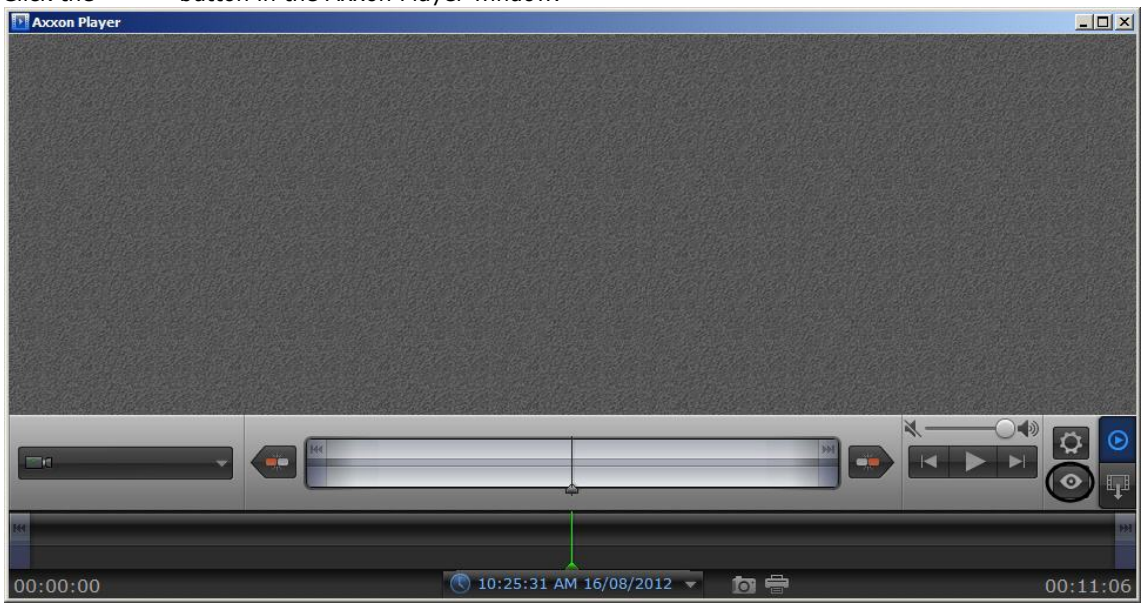

The playback settings panel is opened.

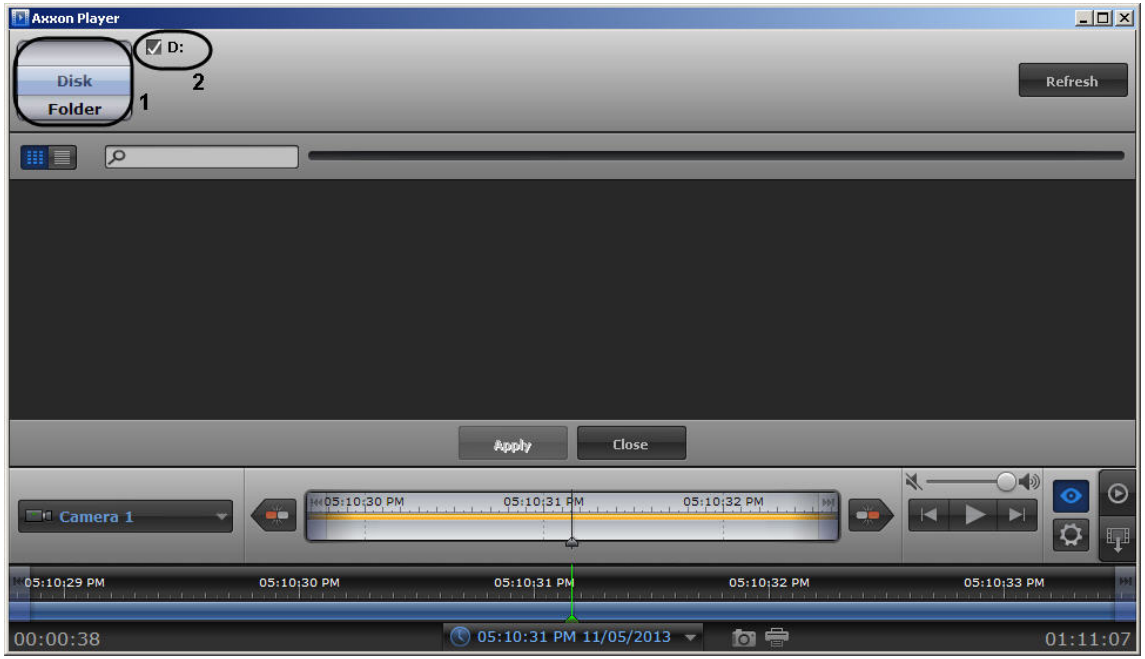

2. Select the way of opening the file: **Disk, Folder** or **File** (1).
3. Specify the path to video files:
    a. If the **Disk** way is selected then set checkboxes next to those disks on which the INTELLECT™ software archive is stored (2).
    b. If the **Folder** way is selected then click the ... button and specify the folder from which the archive is to be viewed using the standard Windows dialog.

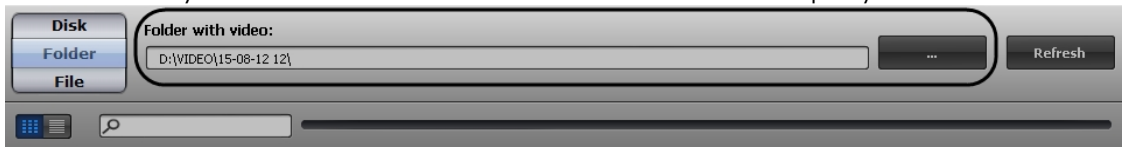

    c. If the **File** way selected then click the ... button and specify the archive file using the standard dialog of file opening

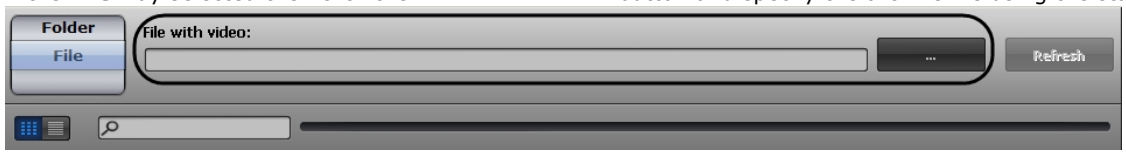

    d. If the **Folder with video files** way is selected then click the ... button and specify file in .avi and .mkv format using the standard Windows dialog.

4. Click the **Refresh** button. The of list video cameras on which the archive is available by specified path is displayed in the playback window (1)

5. Select video cameras the archive from which is to be viewed (1). To select more than one camera at a time left-click them holding the Ctrl button pressed.

> **Note.**
> Names of the selected video cameras are highlighted with blue. All found cameras are selected on default.

> **Note.**
>
> Click the button to switch over the mode of list viewing by rows (one camera in a row).

> **Note.**
> Enter the part of camera name in the **Search** field to search required camera (2).

6. Click the **Apply** button (3).

Playback setting panel is closed. Video images from selected cameras stored in the archive on specified path are displayed in the utility window.

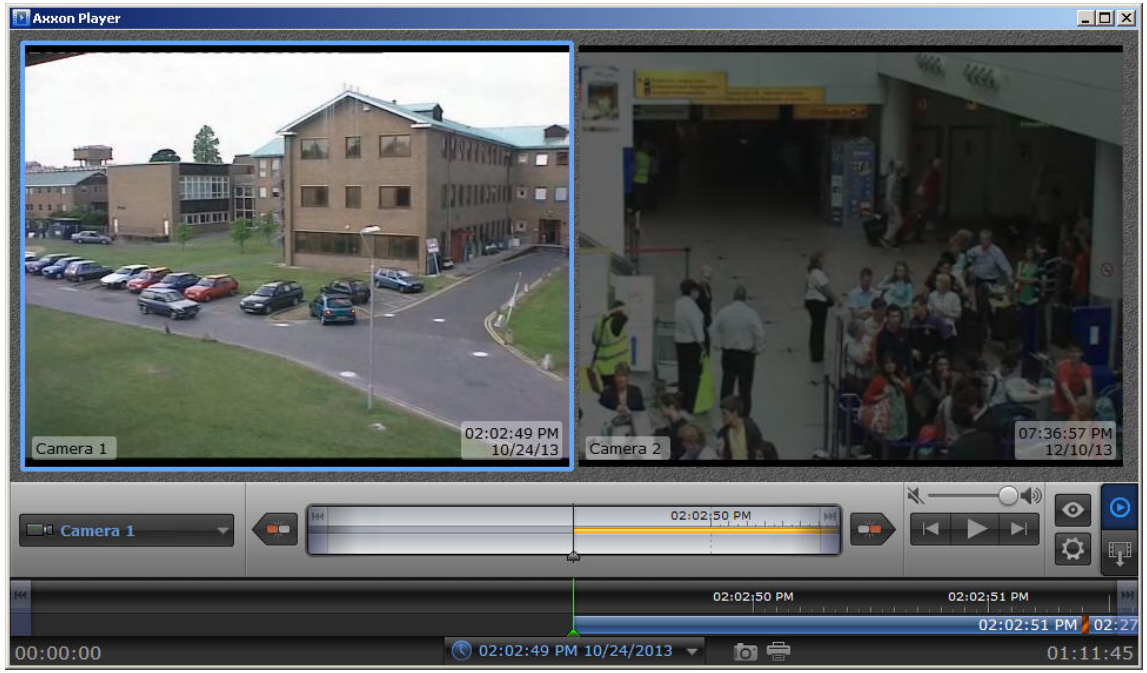

If several cameras are selected for archive playback, it is possible to make the image from one camera fullsized in the utility window. Double click the video image to switch over the full-screen mode. Double click the video image again to return the mosaic mode.

Opening the archive files specifying the path is completed.

Opening video files using the command prompt

It is possible to open video files using the “AxxonPlayer.exe” utility from the command prompt.

To open video files input the following in the command prompt:

Axxon_player.exe --source "File/Folder path". For example, Axxon_player.exe --source "H:\VIDEO\05-05-12 18\15._01".

To select all available disks with the archive use the “all” value of the “source” parameter: Axxon_player.exe --source "all".

To display the window of the Axxon_Player.exe utility over other windows use the “topmost” parameter with “1” value when opening video files using the command prompt. For opening in a normal mode use “0” value of this parameter. For instance, the Axxon_player.exe --source "H:\VIDEO\05-05-12 18\15._01" --topmost "1" command starts the utility in the displaying over other windows mode. By default the “topmost” parameter has “0” value.

To start the Axxon_Player.exe utility in a single mode prohibiting simultaneous opening several windows of the utility, use the “single” parameter of the command prompt with “1” value. To start using several windows of the utility use **0** value of this parameter. For instance, using the Axxon_player.exe --source "H:\VIDEO\05-05-12 18\15._01" --single "1" command the Axxon_Player.exe utility starts with prohibition of simultaneous opening of several utility windows. By default the “single” parameter has “1” value.

To enable the option of titles displaying above video image while playing use the “titles” parameter of the command prompt with value 1.To disable titles displaying while playing the video image use value 0 for this parameter. On default the titles parameter is 1.

Configuring the interface of the Axxon_Player.exe utility

To configure the interface of the Axxon_Player.exe utility do the following:

1. Go to the setting panel of the Axxon_Player.exe utility. For this click the button (1).

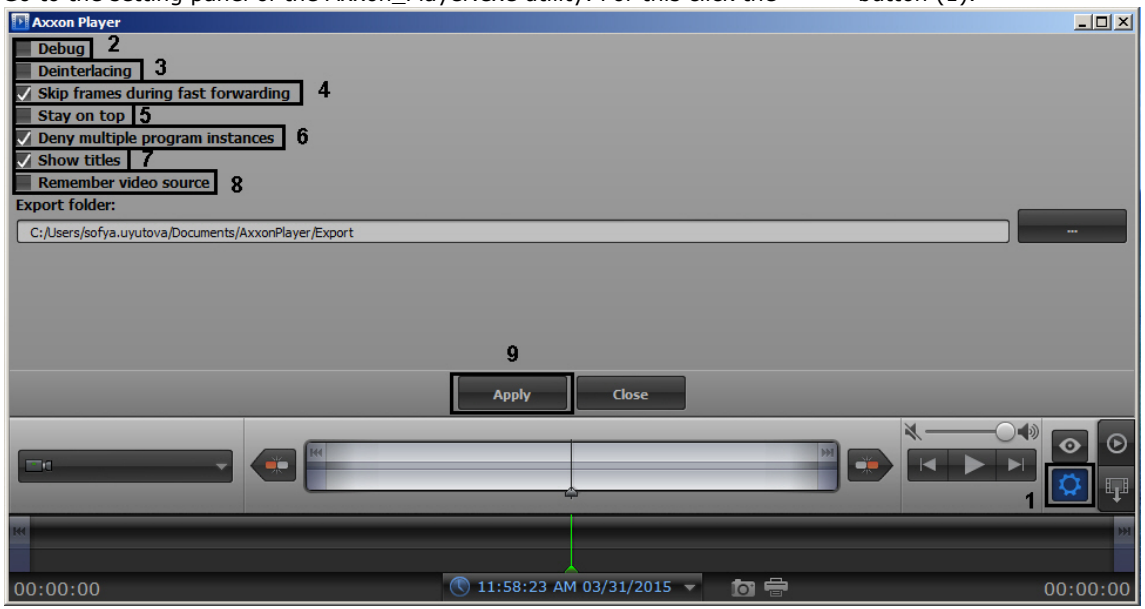

2. To display a semi-transparent debug window over each image set the **Debug** checkbox (2).
3. To enable deinterlacing set the **Deiterlacing** checkbox (3). To disable deinterlacing remove this checkbox. Deinterlacing allows avoiding artifacts in the video image.

   Image with artifacts:

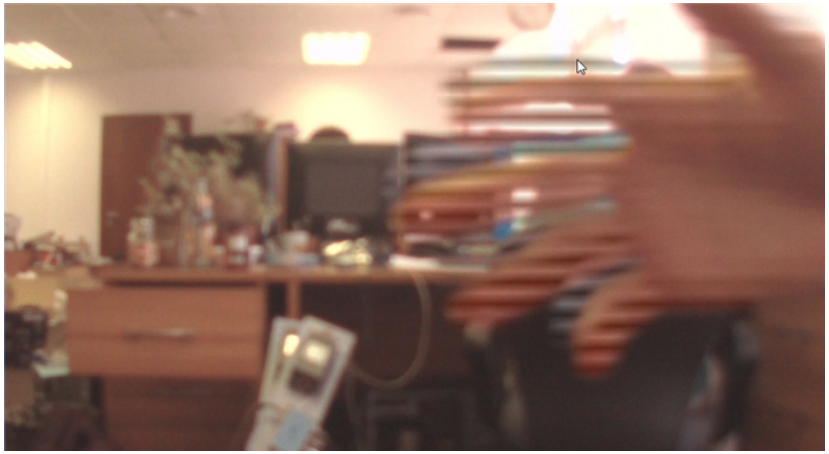

Image with no artifacts:

4. To enable the option of frames skipping when there is fast playback set the **Skip frames durin fast forwarding** checkbox (4). This functionality is used to reduce the Server load.
5. To display the utility window over other windows set the **Stay on top** checkbox (5).
6. To disable the simultaneous opening of several utility windows set the **Deny multiple program instances** checkbox (6).
7. Set the **Show titles** checkbox to display titles above video image while playing the video record (7). Options of titles displaying such as font, color and place are specified by Settings.xml file which is located in the folder with video archive (in the VIDEO folder). This file is formed by the **Captioner** object (see the Configuring captions display on a video image section).

> ⚠ **Attention!**
> To use the Settings.xml file the search of archive files is to be performed by disk or by folder where the Settings.xml file is located (see the Opening video files by specifying the path in the utility section).

8. If resources of video (disks, folders, files) are to be remembered and selected when the utility is run, then set the **Remember video source** checkbox checked (8). If the checkbox is set unchecked, then video is not shown when the utility is run, but when the path to the folder or file with video is selected, the previously specified path is shown. If the checkbox is set checked, then when the utility is run video is shown starting from the frame at which the viewing was previously stopped.
9. Click the **Apply** button (9).

Deinterlacing configuration is now completed.

Viewing video using the AxxonPlayer.exe utility

The Playback control panel

Archive playback control using the AxxonPlayer.exe utility is performed in the utility window on the playback control panel.

Click the button to go to the playback control panel.

Elements description of the playback control panel is given below:

1. Start the archive playback on cameras on which there are records on specified date. Synchronic archive playback is available.
2. Playback stop.
3. Playback speed up in two times relatively the current speed if the playback launched (maximum ×16 speed up is available).

   Go to the next frame if the playback stopped.
4. Playback speed down in two times relatively the current speed if the playback launched (maximum ×16 speed down is available).

   Go to the previous frame if the playback stopped.
5. Go to the current record beginnig.

6. Go to the current record ending.
7. Go to the archive ending in the main time scale. Go to the archive ending of selected camera on additional time scale.
8. Go to the archive beginning in the main time scale. Go to the archive beginning of selected camera on additional time scale.
9. 

Select active camera for archive playback in full-screen mode if several cameras selected for archive playback.
10. Saving the frame. Frame is saved in C:\Users\%current user%\Documents\AxxonPlayer\Screenshots directory.
11. Printing the frame.
12.

Specifying time and date for archive record to be played.
13. Volume adjustment

Time and archive marks in the both scales are to be taken into consideration while controlling playback. Their description is given in the table below.

Mark	Description
Time mark for archive absence (5)	This mark means that there is no compressed archive. The more interval without archive, the thicker the mark is.
Time mark 1 (1)	Time period from archive begin to the current moment.
Time mark 2 (2)	Time period from the current period to archive ending.
Time mark 3 (3)	Time of recording start.
Time mark 4 (4)	Time of recording finish.

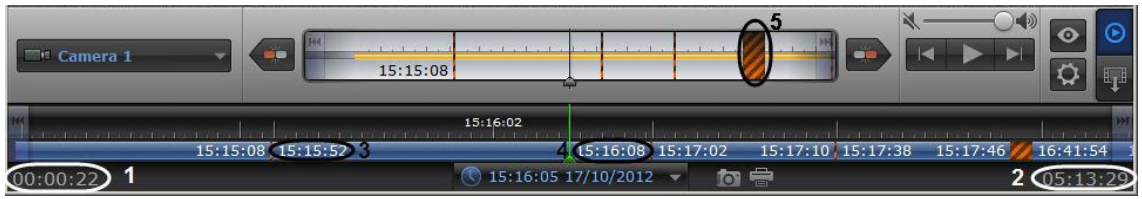

Archive navigation using the calendar

Archive navigation can be performed using the Calendar tool. This tool is designed to specify the date the archive on which is to be played back.

To specify date of archive viewing do the following:

1. Click the or button to access the Calendar tool (1).

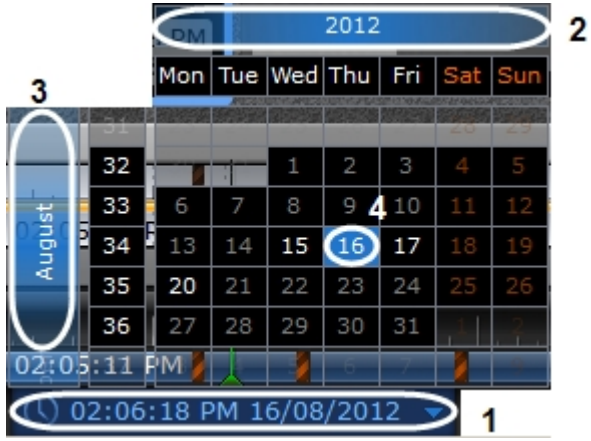

2. Specify the year by dragging the calendar field left or right (2).
3. Specify the month by dragging the calendar field up or down (3).
4. Select the needed day by left-clicking the mouse (4). Days for which records are stored in archive are highlighted with white.

Going to the first archive record at the specified date is performed when the required date is selected in the calendar.

Date specifying for archive viewing is completed.

Archive navigation using the time scale

Archive navigation can be performed using the time scales.

Time scales contain color indicators of records presence per period – tracks.

There are following time scale types in the AxxonPlater.exe utility:

1. Main time scale (1). This scale displays tracks from all cameras selected to view.
2. Additional time scale (2). This scale displays tracks from the active camera.

Archive navigation is performed in two ways:

1. By dragging the scale relatively the indicator. When the indicator is matched to the point on the time scale then there is going to the moment on the record corresponding to this point.
2. By left-clicking the mouse on required period on the time scale.

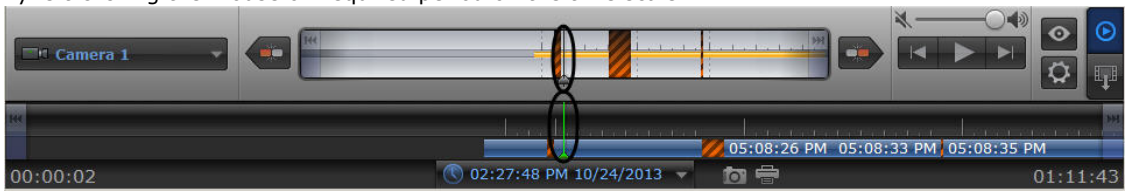

Going in the main and additional scale is sincronized.

It is possible to size time scales. Zoom in and zoom out of time scales are performed using the scroll wheel in required area of the time scale.

Scaling the video image

It is possible to scale viewing video images in the “AxxonPlayer.exe” utility.

Zoom in and zoom out of video image size are performed using the scroll wheel in the camera area.

Navigation over the blowup video is performed using the mouse cursor moving with holding the middle mouse button (wheel) pressed.

Saving the frame from the command prompt

It is possible to export frame from archive using the command prompt. The following parameters of axon_player.exe executive file are used:

— help – reference on parameters of executive file;

— source arg – specifying the video file/catalogue;

— channels arg – specifying the video camera id for frame export;

— destination arg – specifying the catalogue for frame export;

— time – specifying the time of export frame in YYYY-MM-DD HH:MM:SS.ZZZ format.

Example.

« --source "D:\VIDEO" --destination "D:\CmdExportFolder" --channels "1 3 5" --time "2011-11-02 15:40:11.123"»

or

«--source "D:\VIDEO" --destination "D:\CmdExportFolder\UserFrame.jpg" --channels "1" --time "2011-11-02 15:40:11.123"»

File names like "dd-MM-yyyy hh-mm-ss-zzz channelID.jpg" are assigned automatically in the first case. In the second case file names are specified by the user and it is possible to save the frame in jpg, bmp or png formats.

If the **channels** parameter is not specified, then all existing channels are to be saved both for the video and images.

Watermarks

If a video file was exported using AviExport utility (see The AviExport utility section in Operator's Guide), a watermark will be displayed on the video while viewing it using the AxxonPlayer utility:

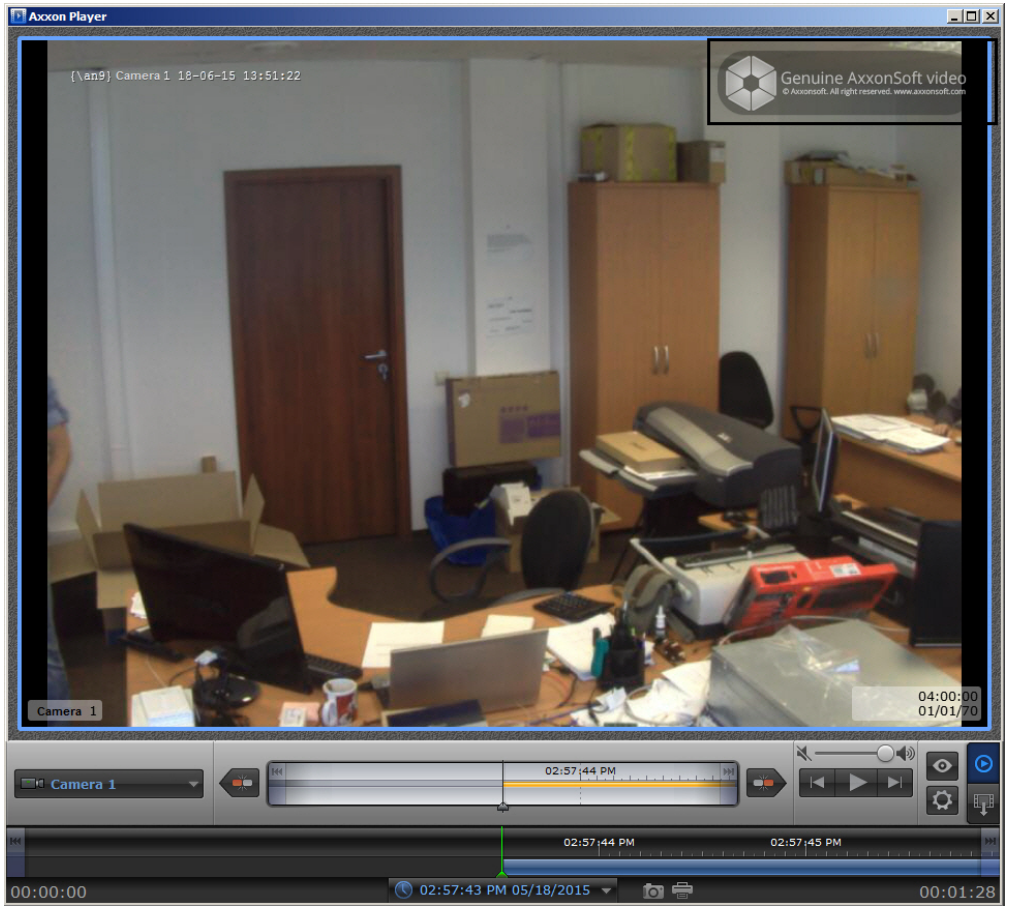

Note.
A watermark is not added to the video if video was exported in the original format and codec was not changed.

Exporting the Intellect video archive using the AxxoPlayer.exe utility

Order of video archive export

Exporting the INTELLECT™ software archive using the AxxonPlayer.exe is performed in the following order:

1. Specify the path to the folder to which archive files are to be exported (see Specifying the export folder).
2. Go to the export panel (see Going to the export panel).
3. Create the export task (see Creating the export task).
4. Start the archive export (see Running the archive export).

Specifying the export folder

To specify the export folder do the following:

1. Click the button. The settings panel of the AxxonPlayer.exe utility is opened (1).

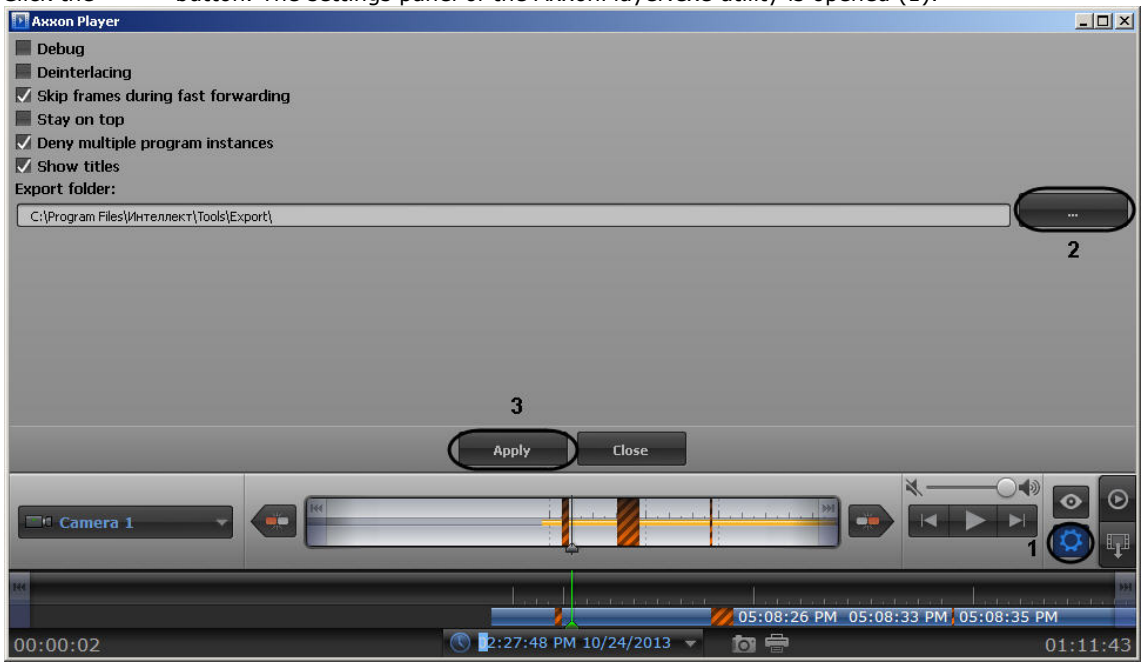

2. Click the  button and select the export folder using the standard dialog of path selection to the Windows OS folder (2).
3. Click the **Apply** button (3).

Specifying the export folder is completed.

Going to the export panel

To go to the export panel click the button.

Creating the export task

To create the export task do the following:

1. Select the **New export task** value in the list. The value selection is performed by dragging the list items up or down until the aligning with the list center.

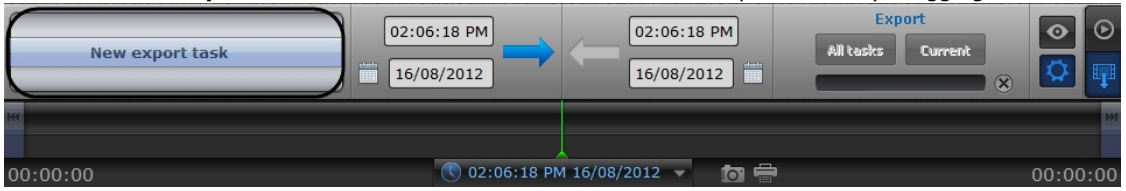

2. Select the image from the required camera and drag it to the list using the left mouse button.

Cameras are to be added to the export list (1).

> **Note.**
>
> To remove the cameras from the list click the button.

3. Specify the start export date by one of the following ways:
   a. Enter the required value in the field manually (2).
   b. Click the button and use the Calendar tool (3). Calendar operation procedure is equal to the archive navigation procedure (see Archive navigation using the calendar chapter).

c. Click the button (4) and specify the start value of export by dragging the time scale relatively the indicator (8).

4. Specify the end export date by one of the following ways:
   a. Enter the required value in the field manually (5).
   b. Click the button and use the Calendar tool (6). Calendar operation procedure is equal to the archive navigation procedure (see Archive navigation using the calendar chapter).
   c. Click the button (7) and specify the end value of export by dragging the time scale relatively the indicator (8).

Export task creation is completed.

Running the archive export

To run the export do the following:

1. Click the **All tasks** button for export of all created tasks (1)

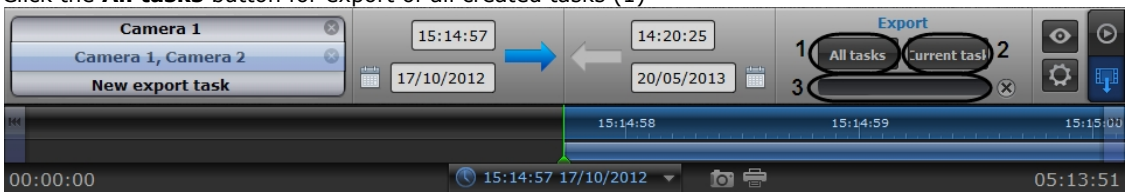

2. Click the **Current** button to run the export of task selected in the task list (2).

The export state is displayed by the indicator of process display (3). Archive files will be copied to the export catalogue in the «drive_<Disk letter with the «Intellect» software archive>» after the export completion, e.g. «drive_D».

Note.

Click the button to stop the export. None of files will be exported.

Export of video archive is completed.

Setting the export parameters in the command prompt

It is possible to set the export parameters from the Windows command prompt. The following parameters of the axon_player.exe executive file are used:

— help – reference output by parameters of executive file;

— source arg – specify the video file/catalogue;

— channels arg – specify the video camera id for export through the space button ;

— destination arg – specify the export catalogue;

— from arg – specify the start export time in YYYY-MM-DD HH:MM:SS.ZZZ format;

— to arg – specify the end export time in YYYY-MM-DD HH:MM:SS.ZZZ format.

Example of line for export: «--source "D:\VIDEO" --channels "1 3 5" --destination "D:\CmdExportFolder" --from "2011-11-02 15:40:05.123" --to "2011-11-02 15:40:17.123"»

The Cam_title_updater.exe utility to convert titles database

Purpose of the Cam_title_updater.exe utility

The Cam_title_updater.exe utility is used to convert titles database to a new format when updating to Intellect 4.10.x from older versions.

Starting and quitting the Cam_title_updater.exe utility

Start the Cam_title_updater.exe utility as follows:

1. Start -> All Programs -> Intellect -> Tools -> Update titles DB.
   OR
2. <*Intellect* installation folder>\Modules using Cam_title_updater.exe file.

The Cam_title_updater.exe overview is shown below.

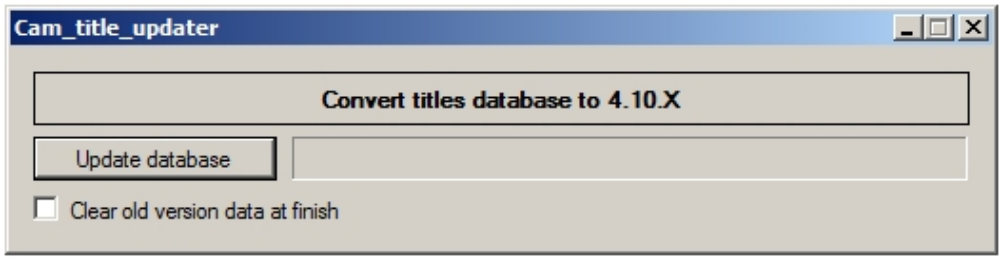

Updating titles database using the Cam_title_updater.exe utility

Start titles database update as follows:

1. Start the Cam_title_updater.exe utility (see Starting and quitting the Cam_title_updater.exe utility).

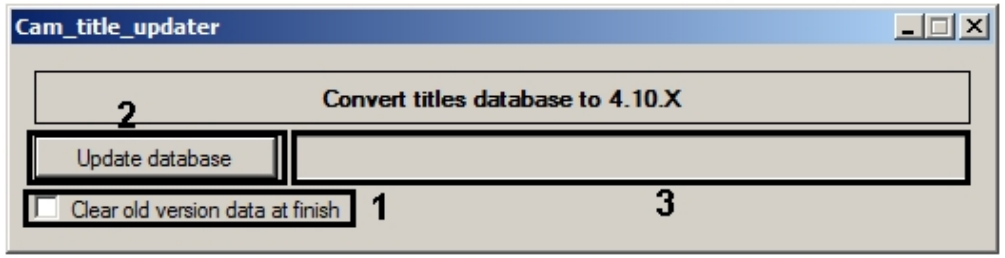

2. If it is required to delete titles in the old format when conversion to a new format is finished, set the Clear old version data at finish checkbox checked (1).
3. Click the **Update database** button (2).
4. The conversion process will be shown by means of process display (3).

> **Note.**
> To stop converting click the **Cancel** button. The data that has already been converted when clicking the button will be available.

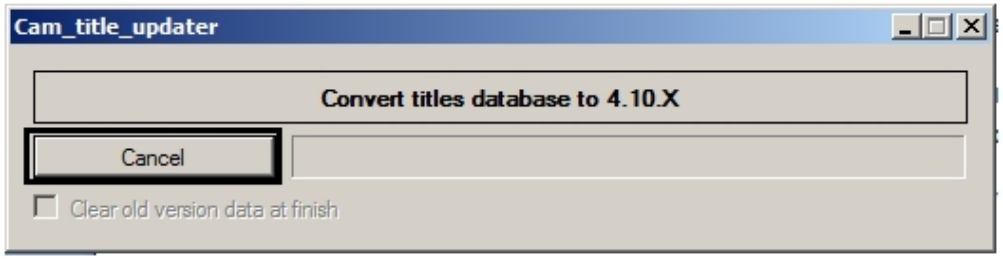

When the titles database is updated there will be the **Finished!** message.

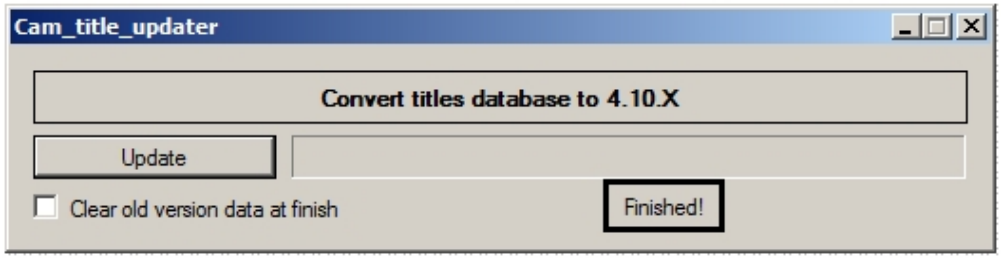

Note.
Every time the **Update** button is clicked the process of updating titles database is started.

The titles database is now updated.

Appendix 3. Relevant information on using Windows operating system

Working with Windows OS registry

General information about Windows OS registry

Windows system registry is a database containing the settings of the operating system (hardware, software, users). When system parameters of the operating system are changed, the system registry is updated.

The registry can be edited by the regedit.exe program included in the standard set of service programs in Windows. The information is stored in two hidden files in a Windows folder: system.dat and user.dat . The registry is a hierarchical tree structure, the branches of which constitute the keys that contain values or subkeys. The registry has six main branches described in the table.

Branch name	Description
HKEY_CLASSES_ROOT	Contains the information of software configuration, including the links from file extensions to programs, drag-and-drop parameters, printer settings and COM port settings.
HKEY_CURRENT_USER	Contains user settings of the system. This section is created and populated from the HKEY_USERS section upon user logon.
HKEY_LOCAL_MACHINE	Contains the parameters of the computer, its drivers and other hardware. The data in this section is shared by all users of the computer.

HKEY_USERS	Contains the information about all users registered on the computer. There are two types of parameters – shared by all users, and specific to each user.
HKEY_CURRENT_CONFIG	Contains the information about current hardware configuration.
HKEY_DYN_DATA	Points to a subsection in the HKEY_LOCAL_MACHINE section related to Plug and Play devices. This section changes upon adding or removing devices to or from the computer.

The branch structure is visually similar to the structure of the user folders, allowing nested branches. Figure shows the main elements of the registry.

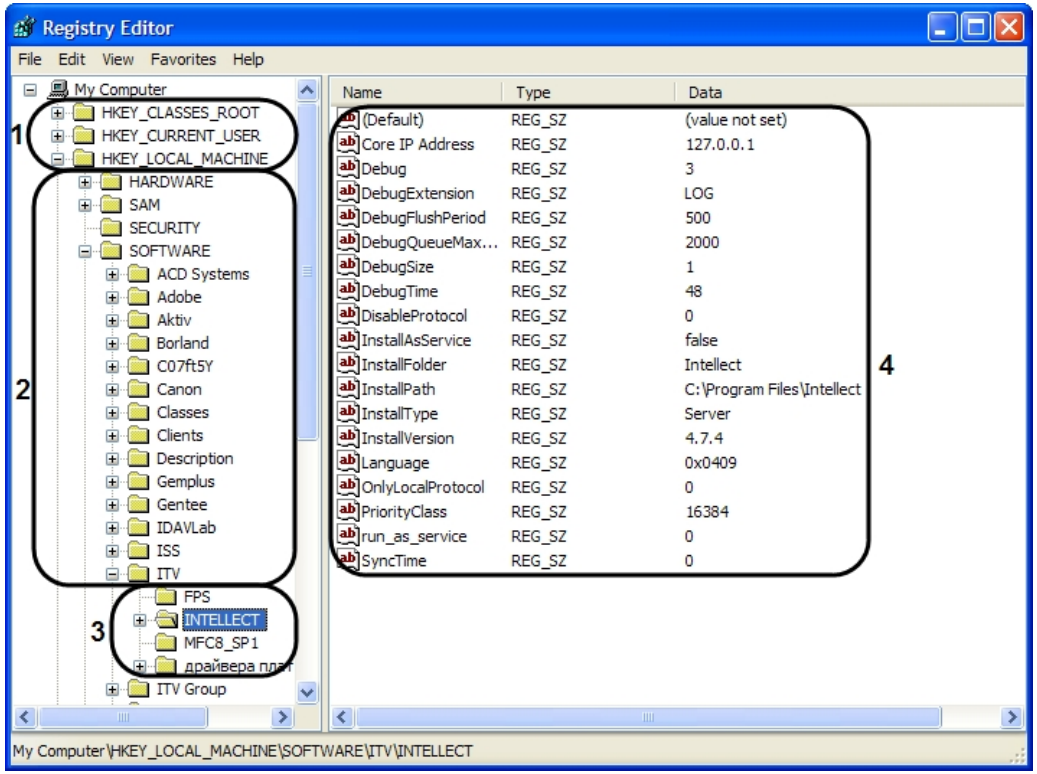

1. Branches;
2. Keys;
3. Subkeys;
4. Parameters;

Each parameter has three components: name, type and value. A key can have only one parameter with no name, which serves as a default value of the key. It is recommended to assign meaningful names to parameters, indicating its purpose.

The values in the registry can be of particular types. The most commonly used types are described in the table.

Data type	Description	Purpose
REG_DWORD	4 bytes in hexadecimal or decimal format.	Many service or driver parameters are of this type. Example: 0x00000240(576) — decimal value is given in parenthesis.
REG_BINARY	Binary data of an arbitrary form. Maximum length – 16 bytes.	Most data on hardware components is stored as binary. In the regedit.exe window it is displayed in hexadecimal format, for example 01 00 00 00.
REG_SZ	A string ending with a null symbol.	Example: C:\Windows
REG_MULTI_SZ	Multi-line text. An array of strings ending with a null each. An array itself ends with two nulls.	Lists and other records in readable format are of this type. The records are separated by commas and other symbols in the editor.
REG_EXPAND_SZ	Data string of variable length ending with a null.	Undisclosed links to environment variables are of this type.
REG_FULL_RESOURCE_DESCRIPTOR	A sequence of nested arrays.	This type is designed for storing the list of device resources and drivers.

Using the registry editor

Starting and shutting-down the editor

Several programs allow editing the system registry. The regedit.exe utility is included in the standard set of Windows service programs.

To start the editor, do the following:

1. Open the **Run** dialog box by clicking **Start**, then **Run**, or by pressing WIN+R keys on the keyboard.

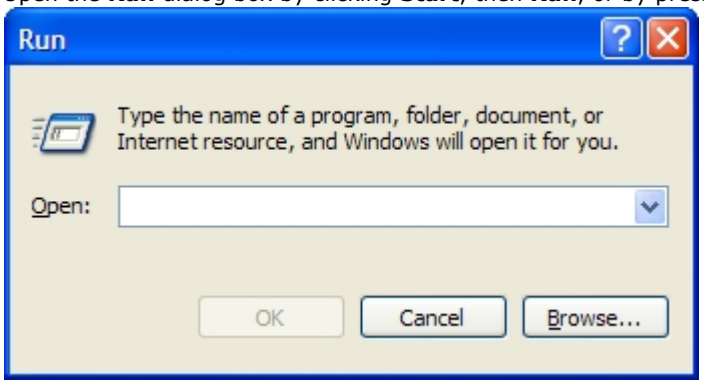

2. Enter “regedit” in the **Open** field of the dialog box.
3. **Click OK.**

The registry editor window will open.

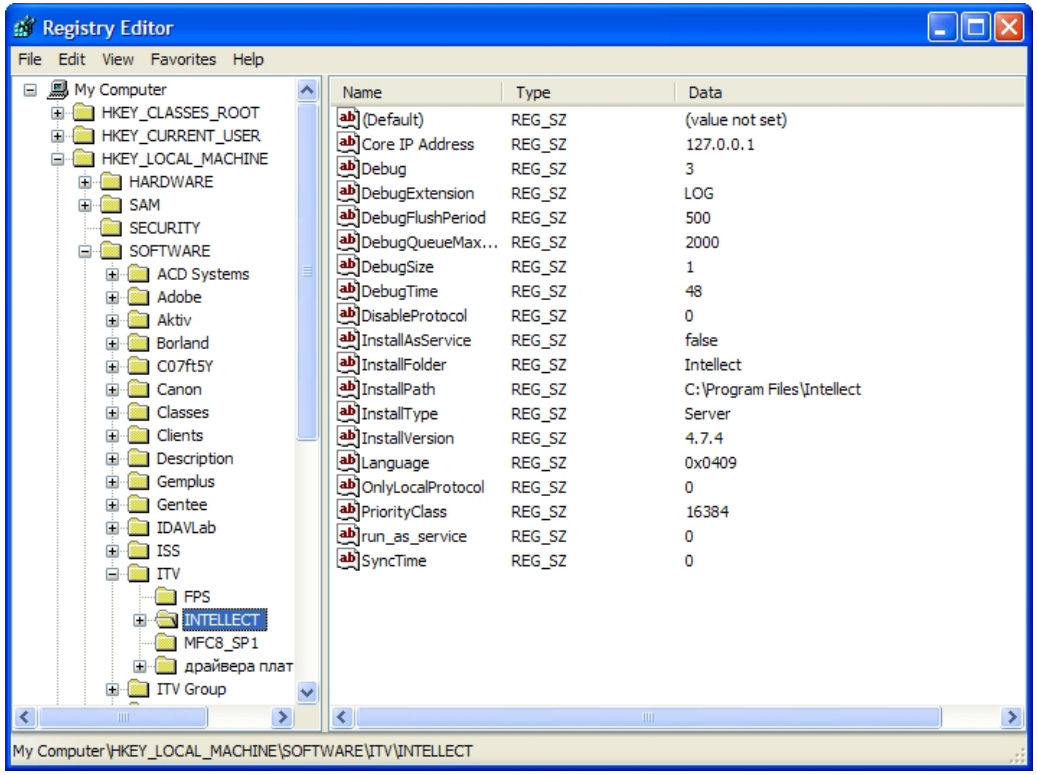

To close the registry editor, click the button, or select **Exit** from File menu.

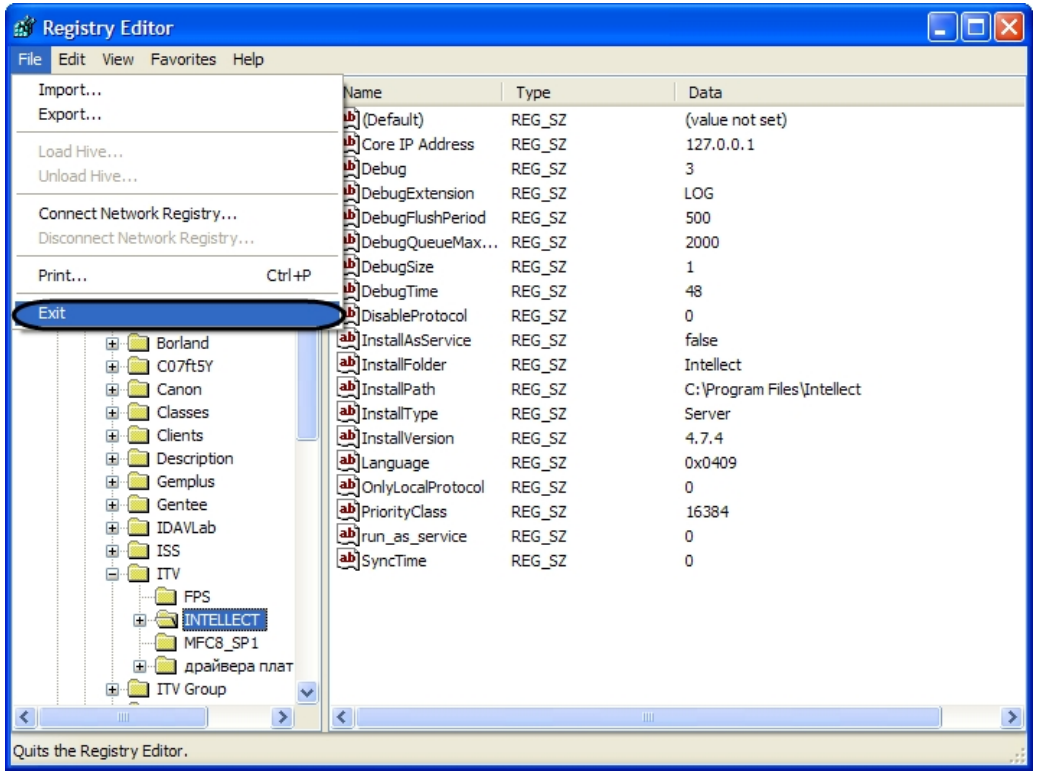

Interface elements of the registry editor

Figure shows the elements of the registry editor window.

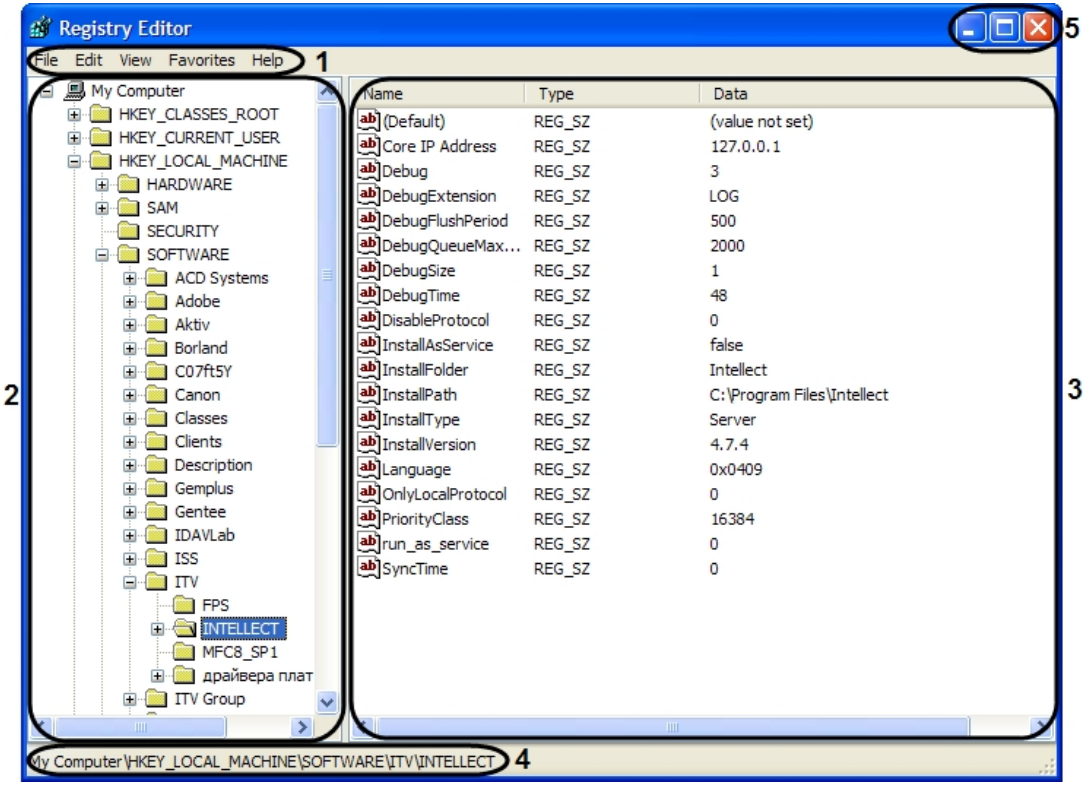

1. Main menu. Contains the commands and settings.
2. Registry tree. Displays the structure of the registry.
3. Parameters table. Displays the parameters of the selected key.
4. Information line. Displays the pathname of the selected object.
5. Control buttons (left to right): Minimize, Restore, Close.

Navigating the registry tree

The registry structure is shown on the left of the window in a tree similar to the folders tree in Explorer. The tree contains six main branches, each of which contains keys, subkeys and parameters shown in the right panel of the window.

To enter a lower level folder (key), click the plus icon next to the parent folder.

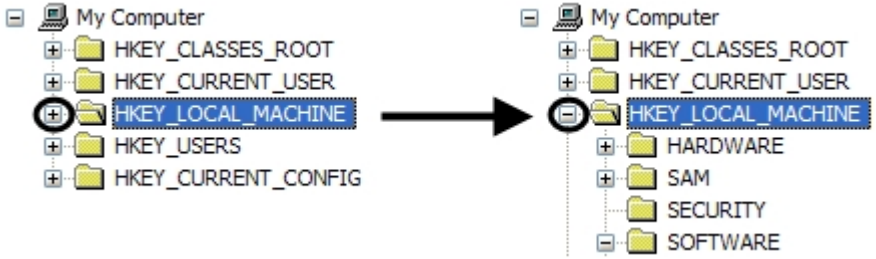

To contract the branch, click the minus icon next to it.

Adding string parameters to the registry

To add a string parameter to a key, do the following:

1. Select the required branch and click the plus icon. All folders (keys) inside this branch will be displayed.
2. Find a key to add a parameter to. The table on the right will display existing parameters of this key.

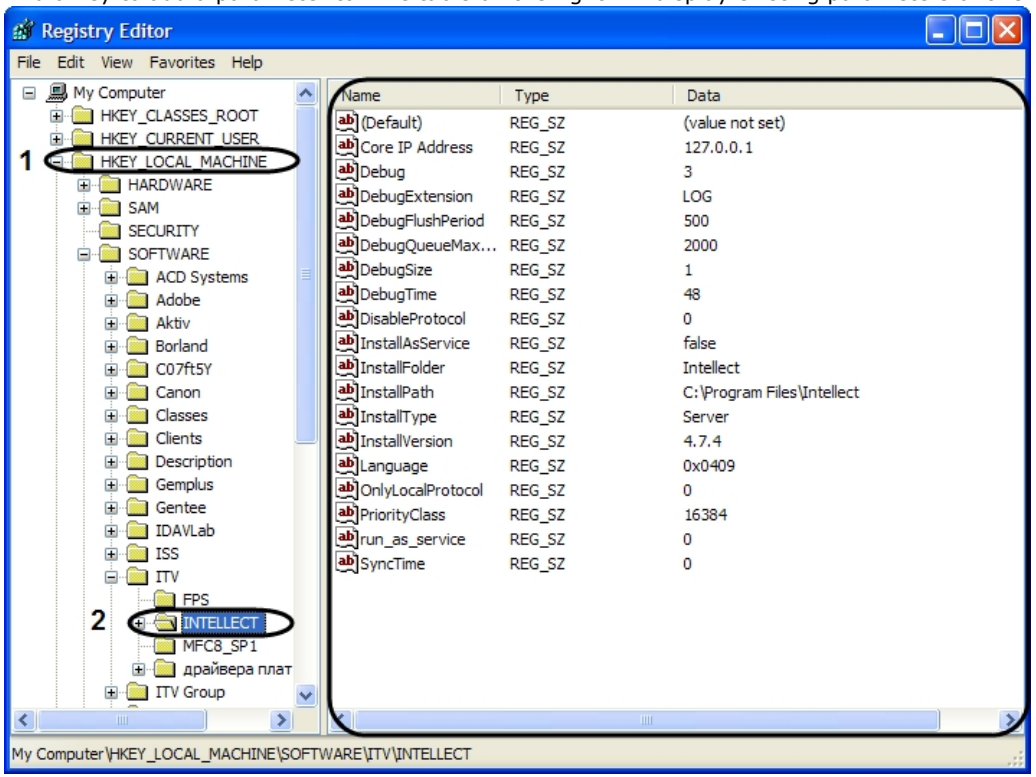

3. In the main menu, select **Edit**, then **New**, then **String Value**.

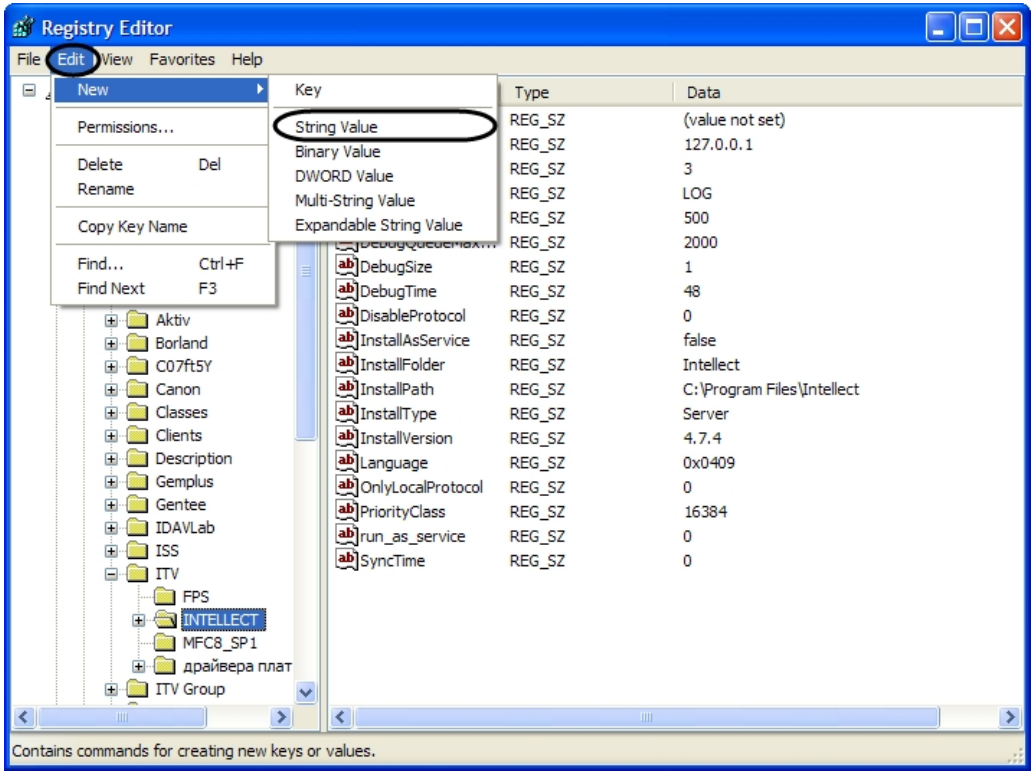

4. A new string parameter will be created.

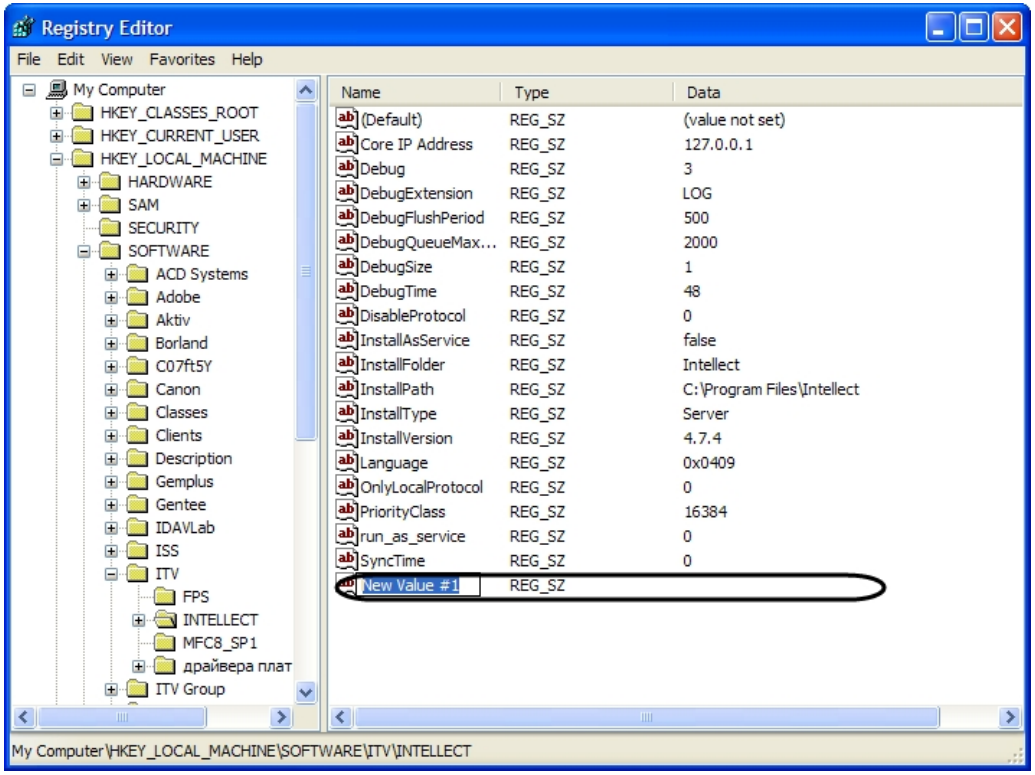

5. Assign a name to the new parameter. Enter the name in the highlighted name field, which by default reads “New Value #1”, and click anywhere in the editor window. The entered name will be saved.

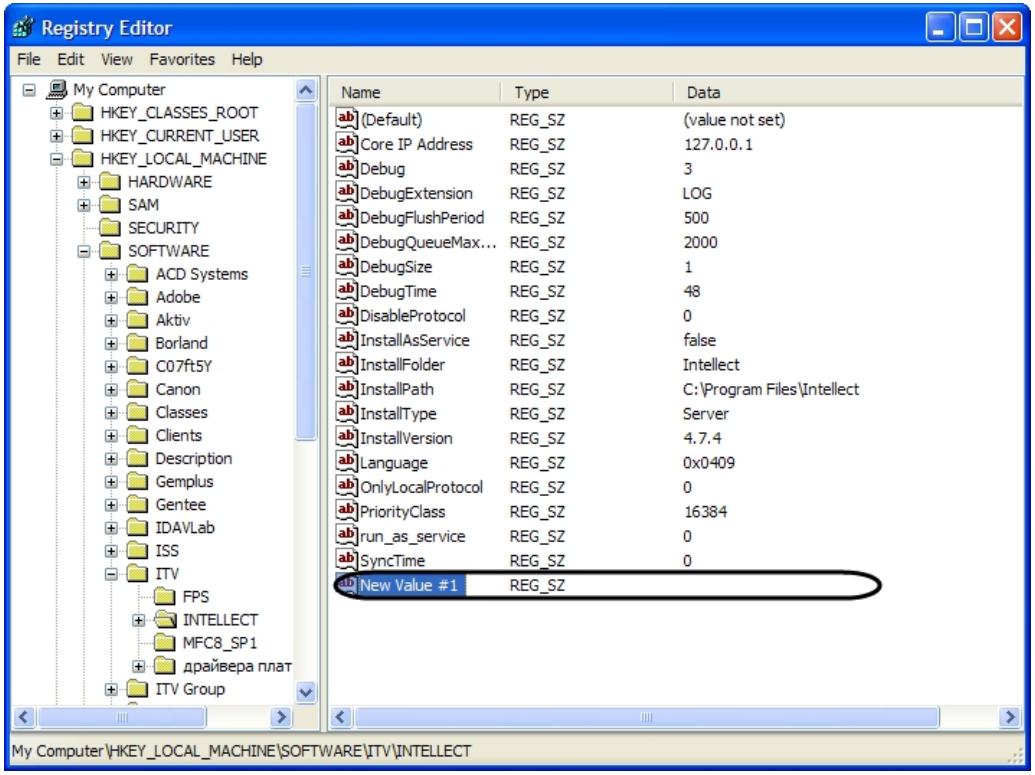

6. Specify the value of the new parameter. Double-click the parameter name. The **Edit String** dialog box will open.

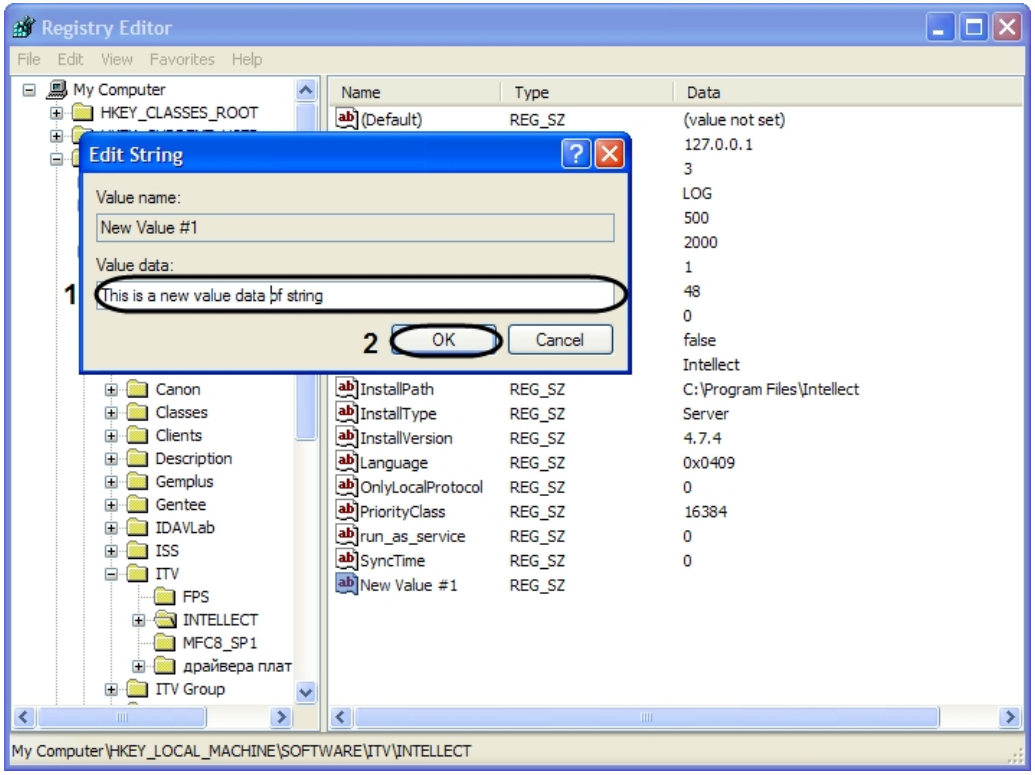

Enter the value into the **Value Data** field (1) and click **OK** (2).

A string parameter with a specified value will be created. To edit the value, repeat step 5.

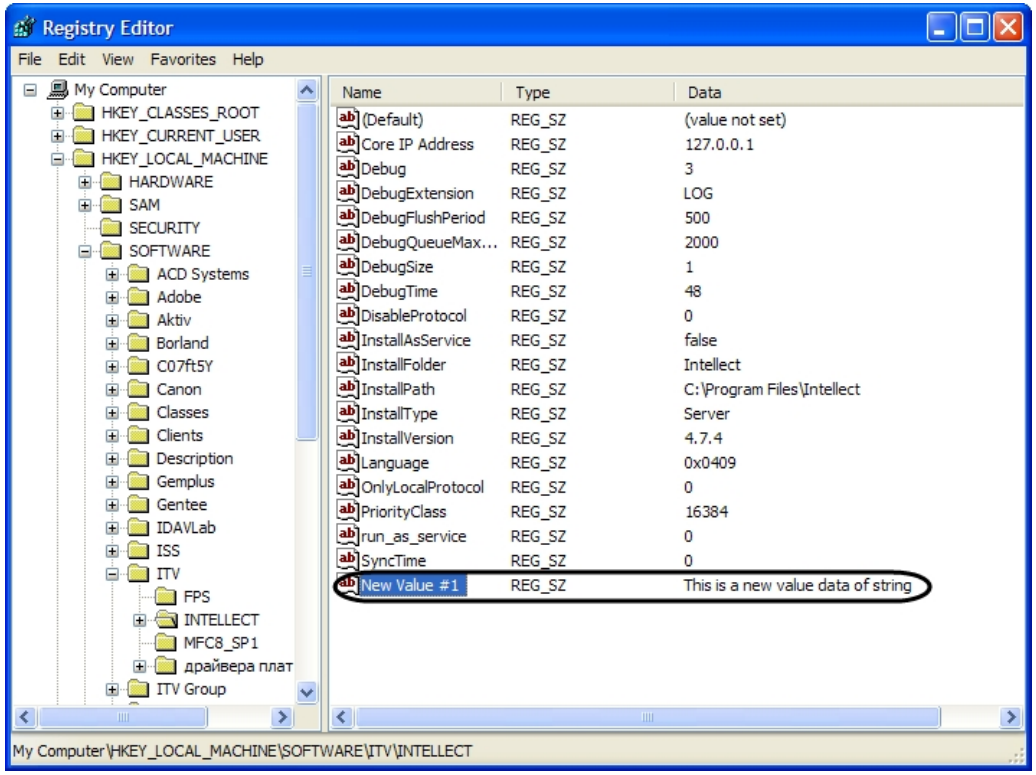

Modifying the value of string parameters in Windows OS registry

To modify the value of a string parameter, do the following:

1. Select the required branch and click the plus icon. All folders (keys) inside this branch will be displayed.
2. Find a key containing the parameter to be edited. The table on the right will display the existing parameters of this key.

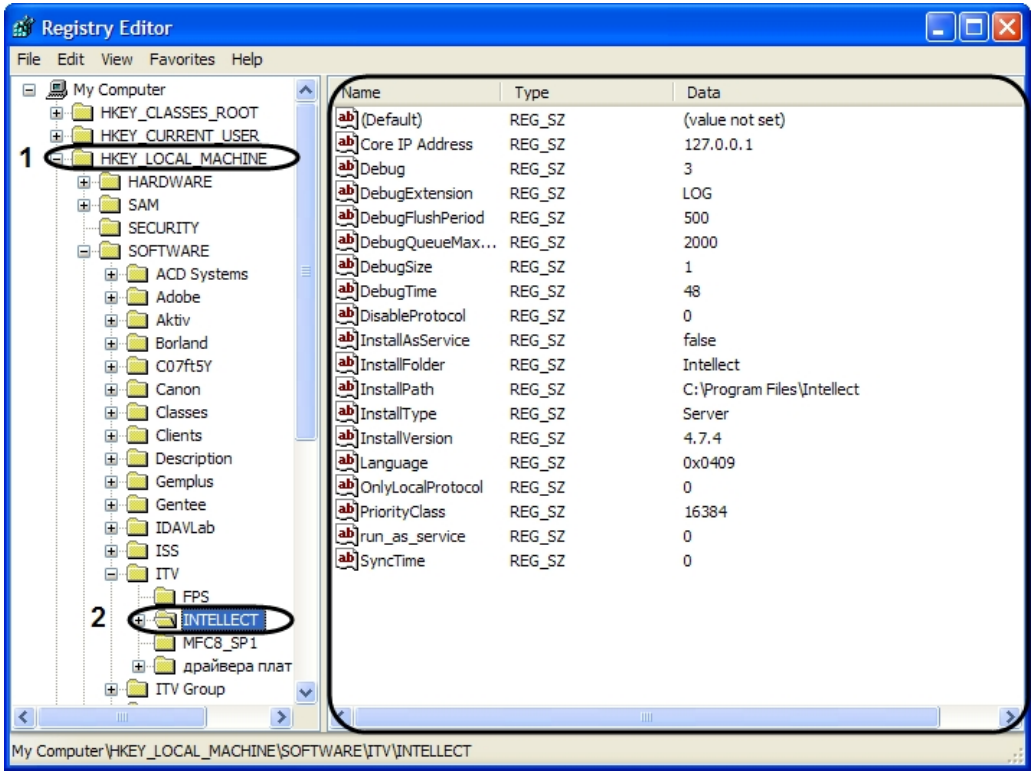

3. Select the parameter to be modified.

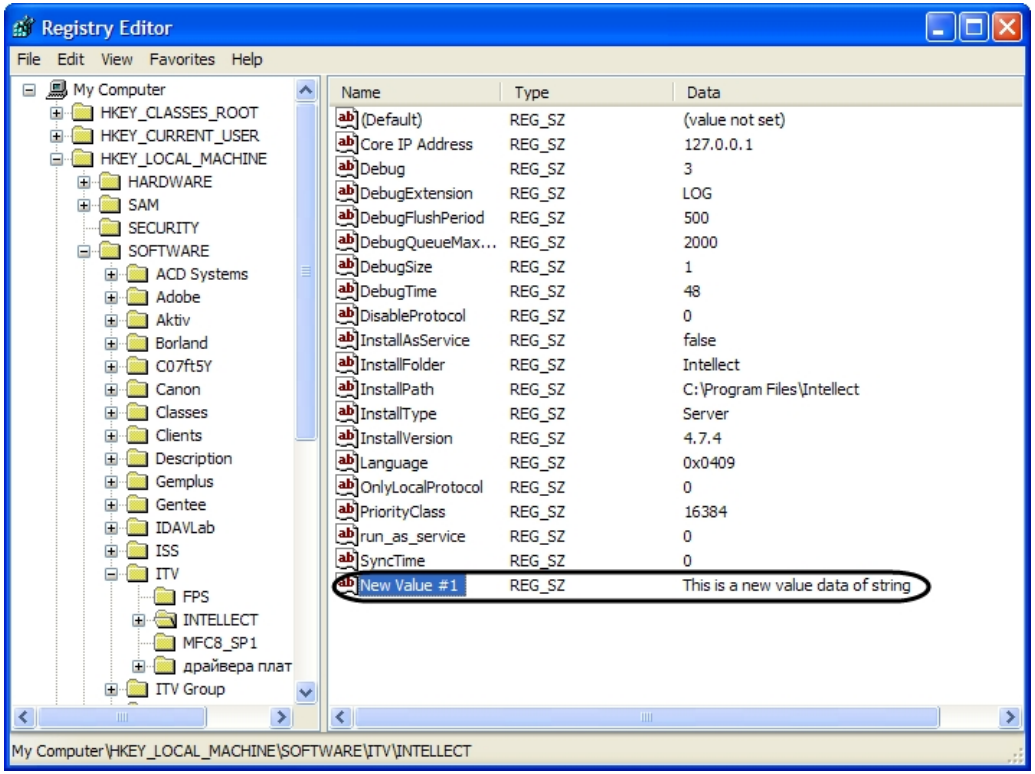

4. In the menu, select **Edit**, then **Modify**.

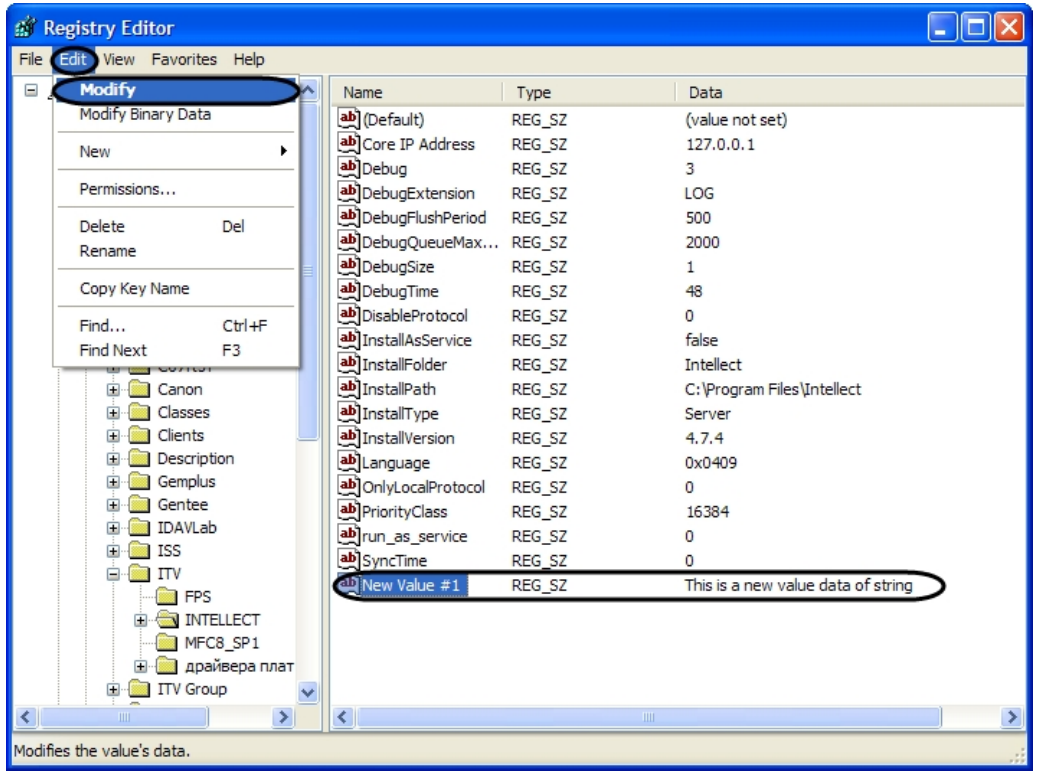

The **Edit String** dialog box will open.

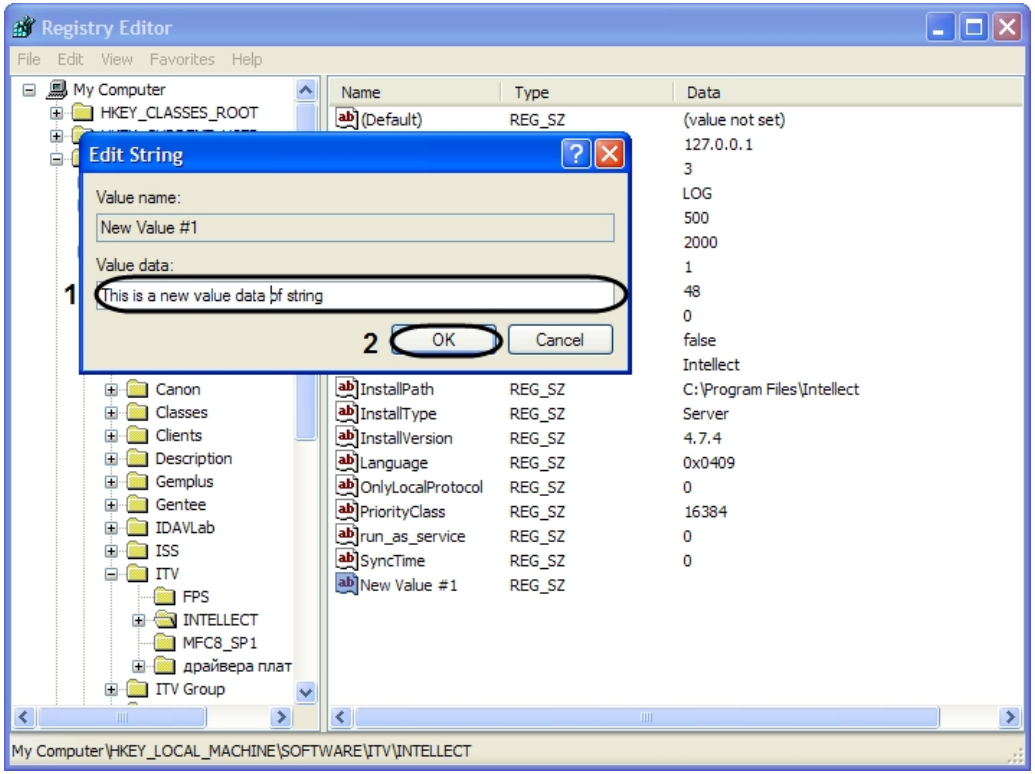

5. Modify the value of the parameter. Delete the old value and enter a new one into the **Value Data** field (1). Click **OK** (2).

The value of the parameter will be changed.

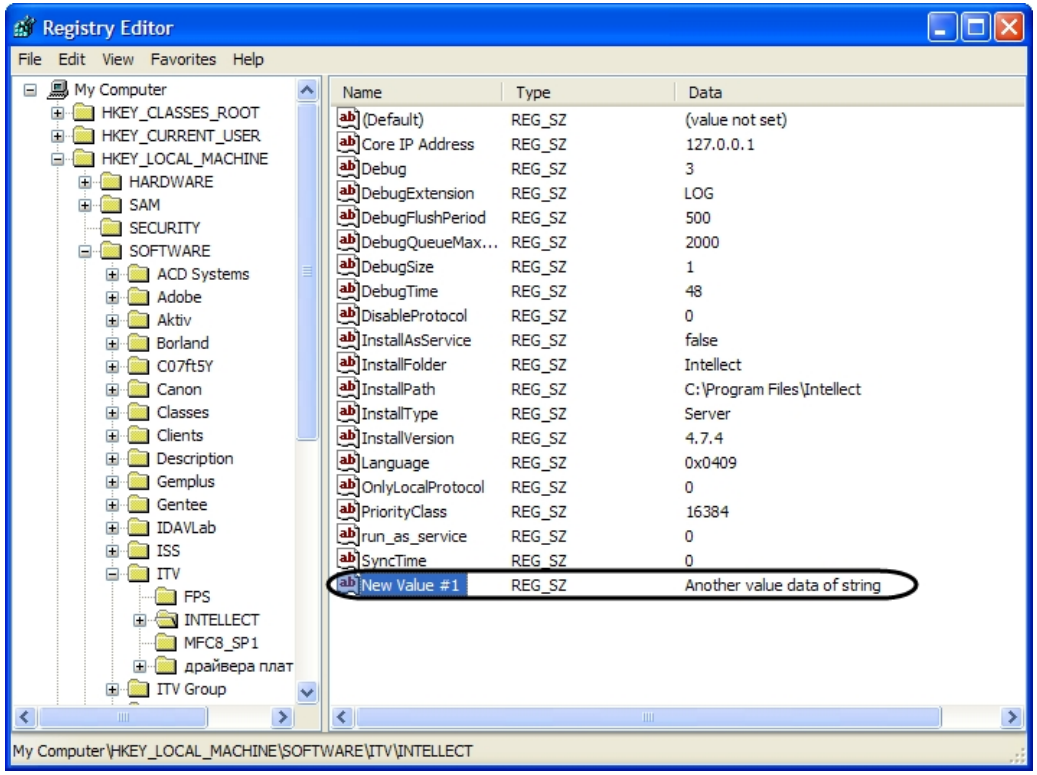

Deleting parameters from the Windows OS registry

To delete a string parameter from the registry, do the following:

1. Select the required branch and click the plus icon. All folders (keys) inside this branch will be displayed.
2. Find a key containing the parameter to be deleted. The table on the right will display the existing parameters of this key.

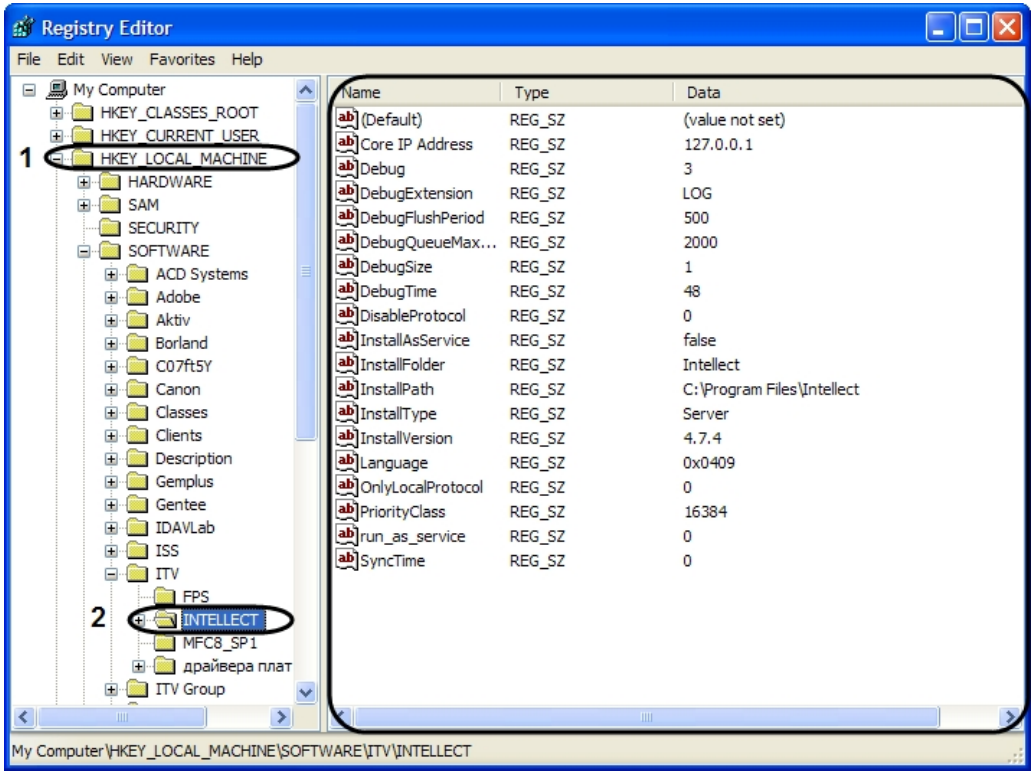

3. Select the parameter to be deleted.

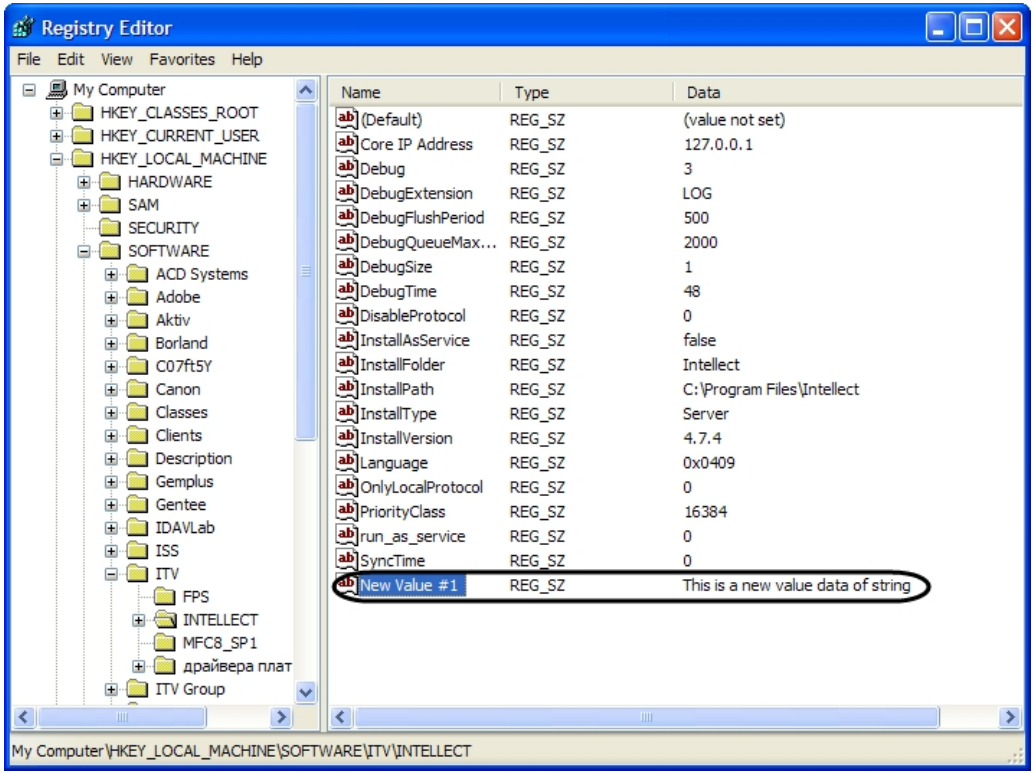

4. In the menu, select **Edit**, then **Delete**.

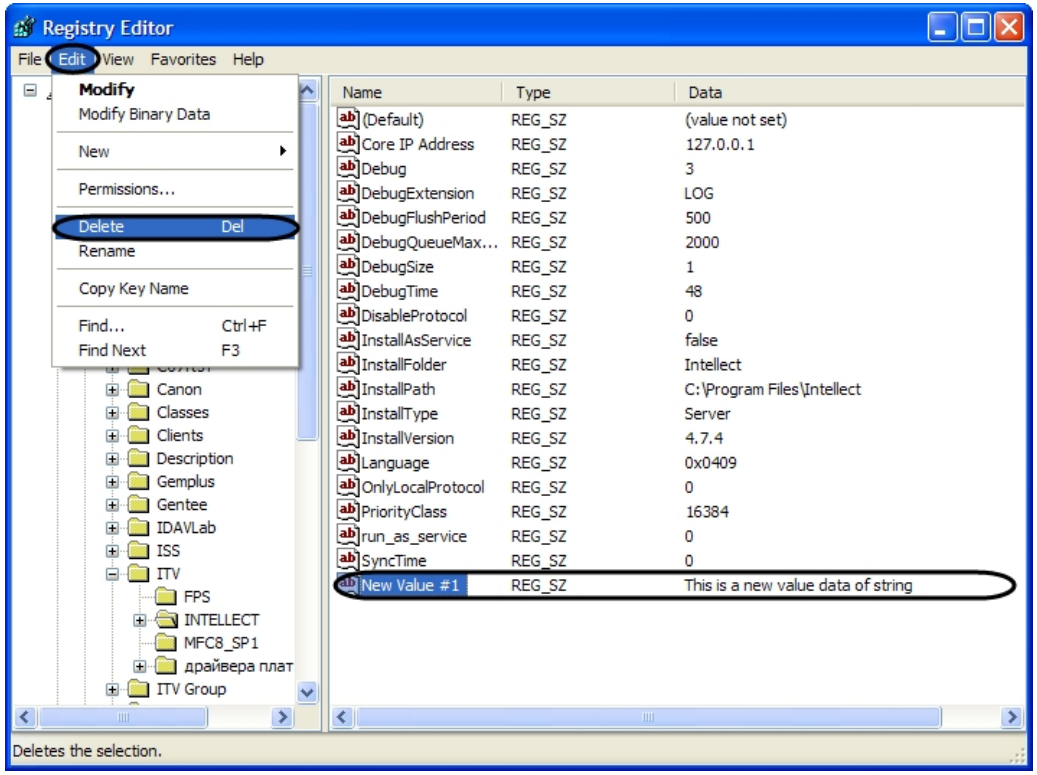

The string parameter will be deleted from the registry.

Note.
The **Edit** menu can also be opened as a context menu by right-clicking the required parameter.

Configuring network drives visibility when UAC is enabled in Windows OS

To configure archive storing to network drives when UAC is enabled in *Intellect,* create the EnableLinkedConnections key in the registry. For this do the following::

1. Open subsection of HKEY_LOCAL_MACHINE \ SOFTWARE \Microsoft \Windows \CurrentVersion \Policies \System registry.
2. Create a new DWORD value.

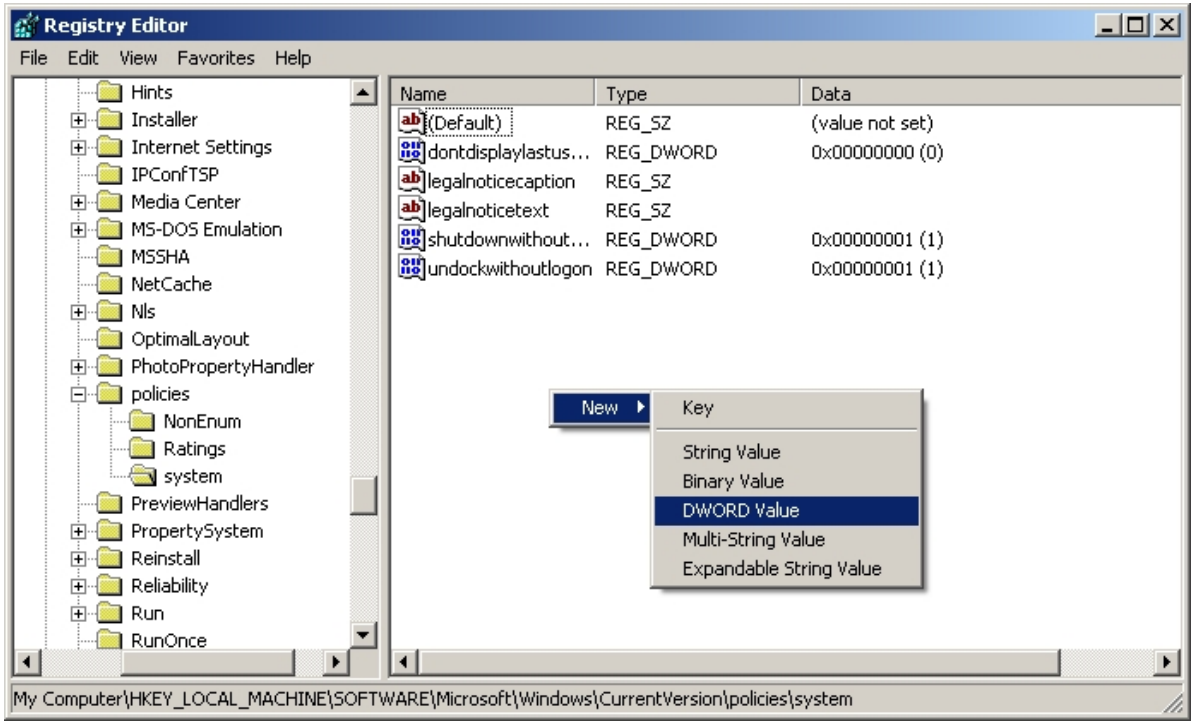

3. Set EnableLinkedConnections name to the new value and click Enter.

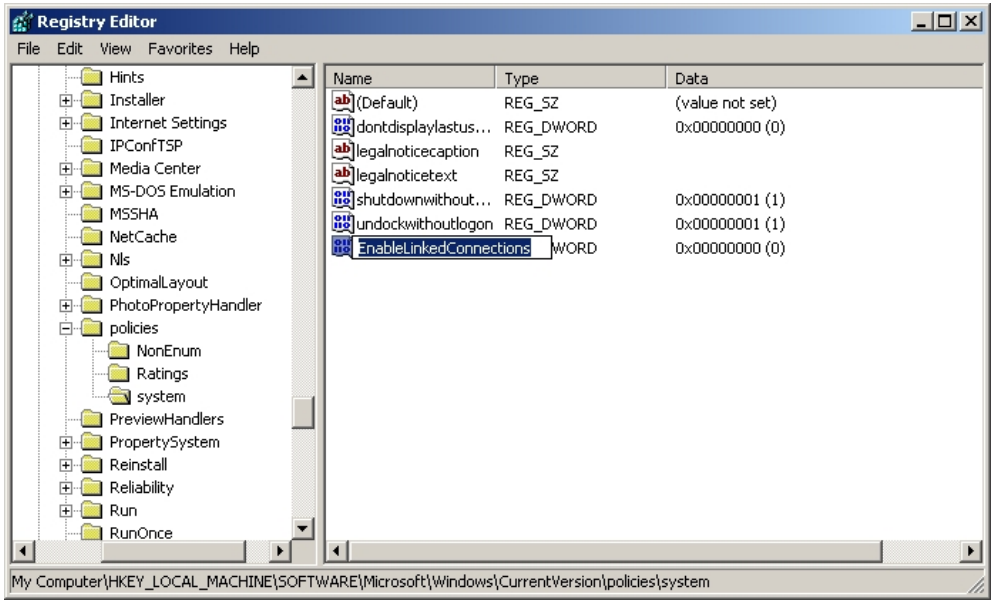

4. Set value=1 to the EnableLinkedConnections parameter. Click the **OK** button.

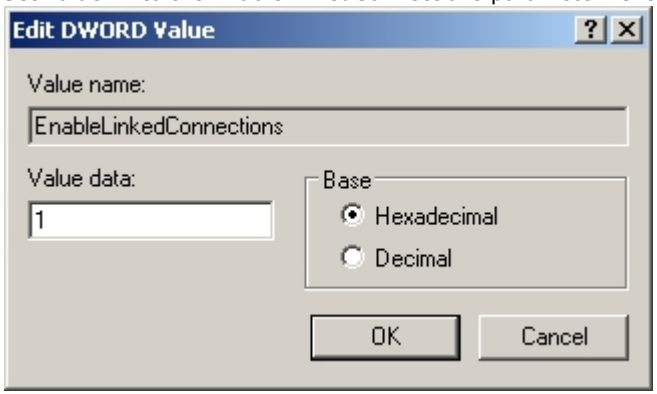

5. Exit the registry editor and restart your computer.

The EnableLinkedConnections registry key is created.

Connecting network disks in Windows Vista and Windows 7 OS

In some cases net disks are not displayed in Intellect software settings in Windows Vista and Windows 7 OS when UAC is on. In order to net disks appear in Intellect settings, connect them in Windows OS under administrator, the following way:

1. Call a command prompt. Select **Run** in **Start** menu and enter «cmd» in entry field and click **OK**.
2. Enter «net use Z: \\Address\Folder» in the command prompt; **Z** is letter of Roman alphabet that will represent net disk in the system, **Address** is IP-address of net disk, **Fold er** is a name of folder.

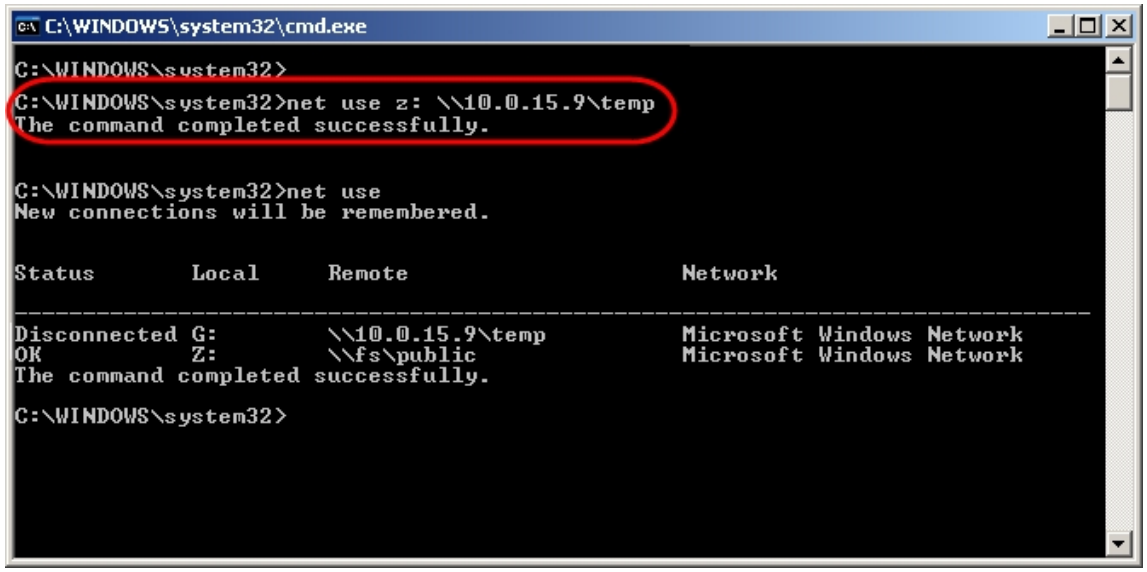

Net disk appears in *Intellect* settings after beeing connected.

Setting up serial (COM) ports in Windows

To view and edit the settings of COM ports, start the **Device Manager**. Right-click the **My Computer** icon on the **Desktop** and select **Properties** in the drop-down menu. The **System Properties** window will open. Open the **Hardware** tab and click the **Device Manager** button.

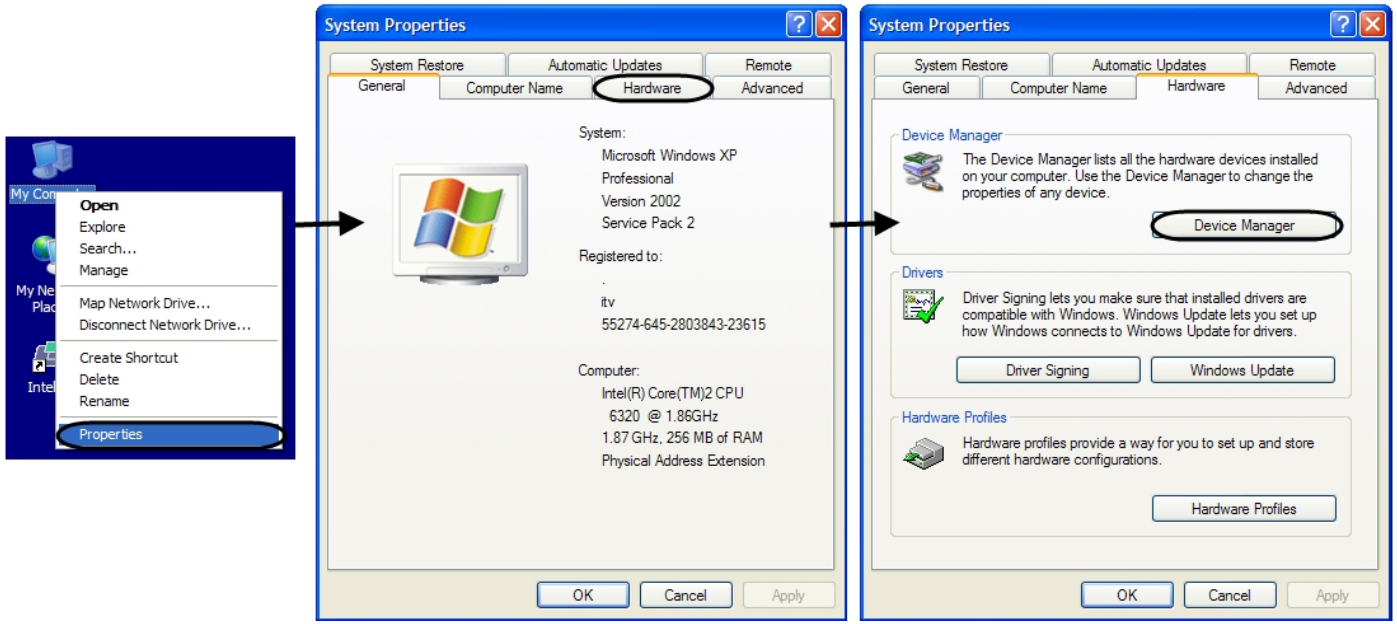

The **Device Manager** window will open. Expand the **Ports (COM & LPT)** branch and select the COM port to which the device to be set up is connected. Then, right-click the required COM port in the tree to open the drop-down menu and select **Properties**. The settings of the port will open in a dialog window. Go to the **Port Settings** tab to view and edit the **Bits per Second** and the **Parity** parameters.

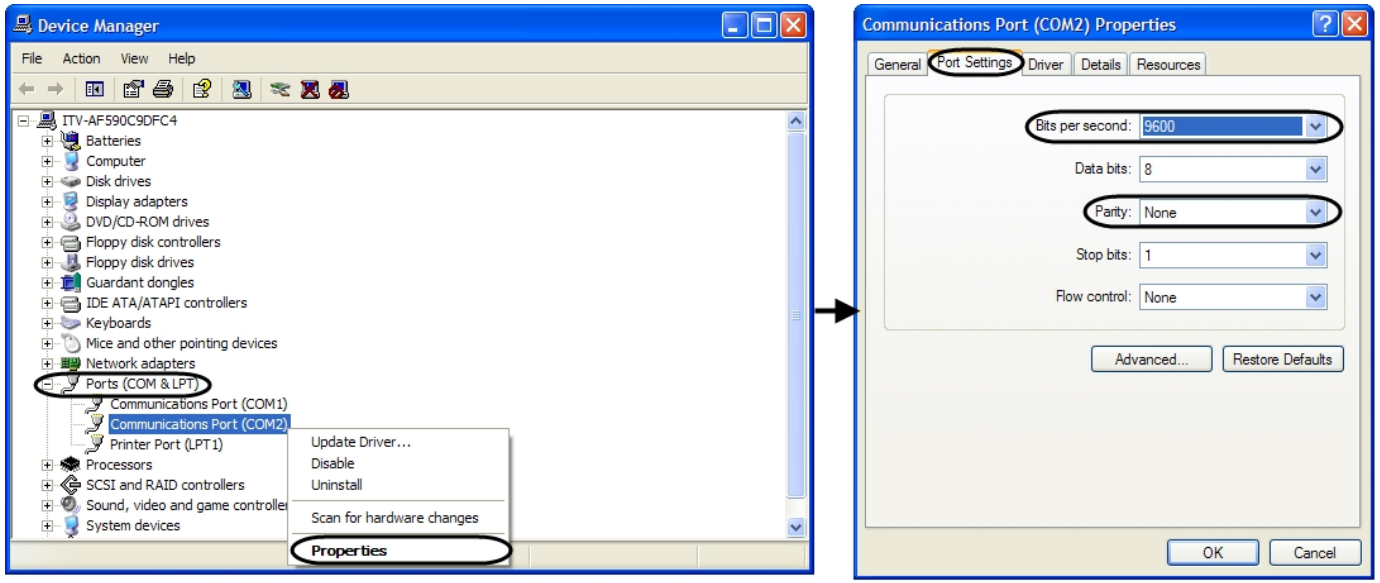

Working with Windows OS services for operating Intellect™ installed as a Service

General information on Intellect™ operation as a Service

INTELLECT™ installed as a Service, is started before user authorization in Windows OS and before Windows applications are launched (including the Explorer application which is used for starting up such applications as Windows OS and various other applications installed on the Server).

> **Note.**
> In INTELLECT™ installed as a Server user can log off INTELLECT™ and service remains started and INTELLECT™ restart is possible.

64-bit modules are not available when installing *Intellect* as a Service. 32-bit modules will be started after *Intellect* is installed as a Service. See also Configuring of using 64-bits modules.

While installing the Intellect software as a service the IntellectUsers user group will be created and the user who performed the installation will be added to this group. To add other users to the IntellectUser group use the Windows OS means.

> **Note.**
> To start *Intellect* as another user admin rights must be assigned to this user or rights are to be advanced as described in the OS settings for correct operation of Remote Admin Workstation or Server section.

> **Note.**
> Detailed information about user groups and about working with them see in the http://windows.microsoft.com web-site.

When the user from the IntellectUsers group enters a system, the Intellect software restarts under this user. If the Intellect software launch under the user name is not needed, i.e. the Intellect software is to be launched under the SYSTEM user name, restart is to be disabled using the Tweaki.exe utility – see The Settings panel of the Windows section part.

> **Note.**
> When INTELLECT™ is started under some user (not under SYSTEM), then if user is changed and the first user has not logged off, INTELLECT™ will not restart – it will be started under the first user.

If INTELLECT™ is installed as a Service and database connection is performed via Windows account information, then for operation under the user different from the user who installed INTELLECT™ this user is to have SQL server permissions.

Configuring the restart of the ITV Intellect Core Server service

If the ITV Intellect Core Server service is to be restarted, do the following:

1. Go to the Windows Control Panel in the **Start** menu.
2. Select **Administrative Tools -> Services**. The list of services registered in the system is displayed.
3. Select the **Properties** item in the context menu of the Intellect Core Server service.
4. The context menu is called with the right click on the name of the service.
5. Go to the **Recovery** tab in the displayed box (1).

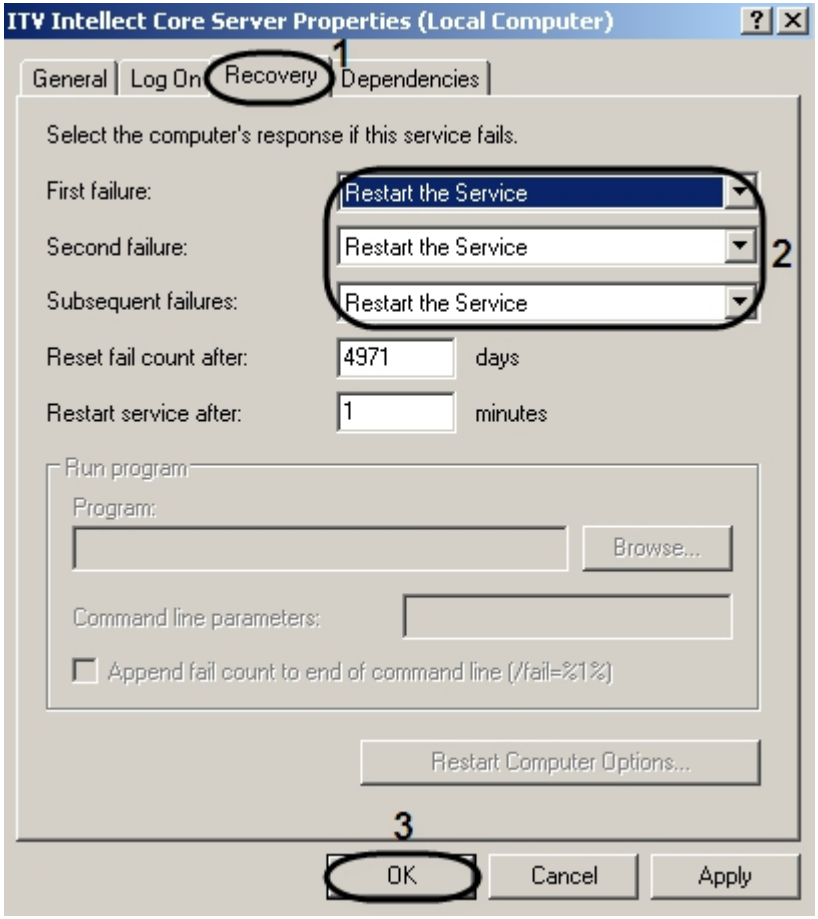

6. In the corresponding drop-down lists select the actions to be performed in case of the first, second and subsequent system failures (2).
7. To save the changes, click the **OK** button (3).

The restart of the ITV Intellect Core Server service is now configured.

Using network disks of INTELLECT™ installed as a Service

If it is necessary to use network disks for working with archive in Intellect™ that is installed as a Service you should add them by setting UNC path, the following way:

1. Go to the last line in the list of disks and click the “” key.

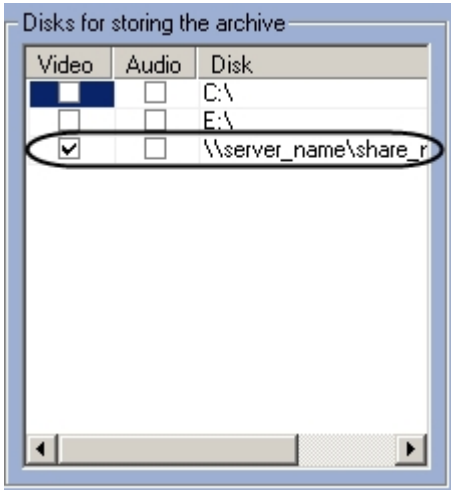

2. Set a path to the network disk in appeared line in the **Disk** column. UNC path is set in "\\server_name\share_name" format where the "server_name" is the name of file server and the "share_name" is the network name of public folder.
3. Set the check box for created disk in the **Video** column.

Note.
If network disk is added not by setting the UNC path, then recording on it is unavailable in **Intellect is installed as a Service** mode.

Attention!
If INTELLECT™ is installed as a Service on Windows XP OS, it is impossible to record on network disks.

Recording on network disks in INTELLECT™ installed as as a Service is performed only in case when INTELLECT™ is started under some user (not under SYSTEM) and the user is logged in the system. When the user who belongs to the IntellectUsers group logs in the system, INTELLECT™ is restarted automatically on behalf of this user. Both network disks and UNC path are available for recording. If the user logs off the system, INTELLECT™ will restart under system account and all network disks are unavailable.

Enabling INTELLECT™ as a Service startup

If INTELLECT™ was not installed as a Service and you want to make it such, do one of the following:

1. Reinstall INTELLECT™ and set the **Install Intellect as a service** checkbox (see Installing and removing INTELLECT™ software section).
2. Use the command prompt. In this case do the following:
    a. Run the Windows cmd.exe command prompt:
        i. Under the administartor account with disabled UAC.
        ii. As administrator under the administartor account or user account with enabled UAC.
    b. Go to the INTELLECT™ installation directory.
    c. Run "IntellectRunService.exe -i" command in the Windows command prompt. As a result the **ITV Intellect Core Server** service is registered in the system.

Disabling INTELLECT™ as a Service startup

To disable the startup of INTELLECT™ as a Server, do the following:

1. Restart INTELLECT™. In this case do the following:

a. Remove INTELLECT™ (see Removing INTELLECT™ software section).
b. Install INTELLECT™ without setting the Server checkbox (see Installing INTELLECT™ software section).

2. Use the command prompt. In this case do the following:
   a. Run the Windows cmd.exe command prompt:
      i. Under the administartor account with disabled UAC.
      ii. As administrator under the administartor account or user account with enabled UAC.
   b. Go to the INTELLECT™ installation directory.

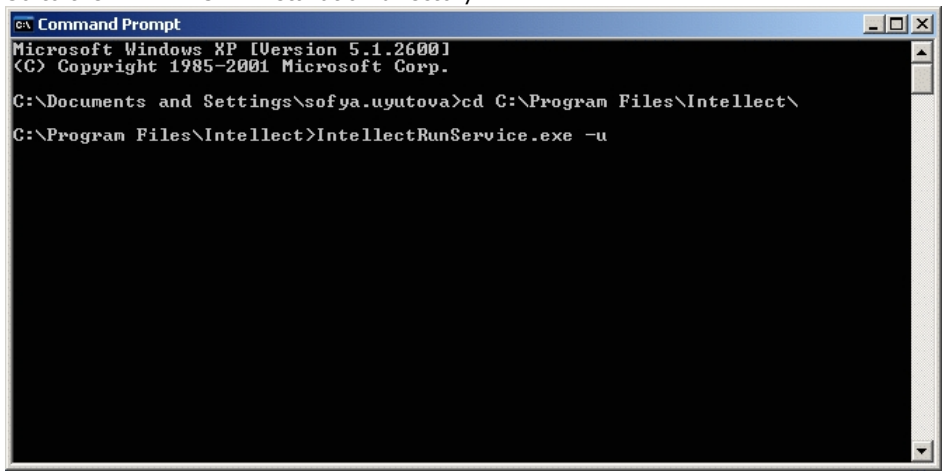

   c. Run IntellectRunService.exe –u command with the Windows command prompt.

INTELLECT™ as a Service startup is now disabled.

The list of TCP ports used in INTELLECT™

On the page:

- Intellect base
- ATM-Intellect and Monitoring
- Auto-Intellect
- Face-Intellect
- POS-Intellect
- ACFA subsystem

The list of TCP ports used in INTELLECT™ is given in the table. MS SQL Server also uses TCP port 1433 and UDP port 1434 (by default) for database synchronization.

Note
MS SQL can use dynamical ports to synchronize databases.

To specify which ports are in use go to the **Start -> All programs -> Microsoft SQL Server Express 2014** -> **Configuration Tools** -> **SQL Server Configuration Manager** -> **SQL Server Network Configuration** -> **Protocol for SQLEXPRESS** -> **TCP/IP** -> **IP Adresses** menu and check which type and number of port are specified in the **IPAII** parameter.

Configure using of fix ports according to the manual on the http://technet.microsoft.com/en-gb/library/ms177440.aspx Microsoft web-site if using the dynamical ports is

unacceptable.

Ports 8085 and 8087 are used to connect clients to Web Server 2.0 module.

Note.
This data is necessary for setting security system and firewall on the Server. The **Corresponding module to which connection is made** parameter is set for client-server modules. If there is the "-" sign in this column, this means connection to the INTELLECT.EXE kernel.

Intellect base

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	ARCHIVER.RUN	Archive	21007	-
2	ARCHPANEL.RUN	Long-term archive panel	22118	-
3	ATM	ATM	21090	-
4	AUDIO.RUN	Microphone	21008	-
5	AUDIO.RUN	Microphone	20903	VIDEO.RUN
6	AUDIO.RUN	Microphone	20904	VIDEO.RUN
7	AUDIO.RUN	Long-term audio archive	20911	-
8	CAM_TITLE.RUN	Captioner	21077	-
9	CAM_TITLE.RUN	Captioner	20900	VIDEO.RUN
10	CONFCHEKUTIL.RUN	Configuration check	22220	-
11	DIALOG.RUN	Operator query panel	21058	-
12	DRS.RUN	Data replication service	22175	-
13	EVENT_COUNTER.RUN	Event counter	22153	-
14	EVENT_VIEWER.RUN	Event viewer	21055	-
15	IIDK_TEST.EXE	IIDK interface	21030	-
16	JAVA.EXE	Web-server 2.0	22212	-
17	KEYB.RUN	Keyboard	21005	-
18	LDAPIMPORT.RUN	LDAP service	22252	-
19	LIVEPLAYER.RUN	Live sound switch	22199	-
20	MAP.RUN	Map	21051	-
21	MC_CLIENT.RUN	Intercom Control Monitor	22179	-

22	MESSAGE.RUN	Alarm Message Window	21056	-
23	MMS.RUN	Mail Message Service	21031	-
24	OPERATORPROTOCOL.RUN	Operator protocol	22215	-
25	PLAYER.RUN	Audio player	20910	AUDIO.RUN
26	PLAYER.RUN	Audio player	21060	-
27	SLAVE.EXE	Computer	21111	-
28	SMS.RUN	Short Message Service	21035	-
29	STREAMINGSERVER.RUN	rtsp Server	22228	-
30	TELEMETRY.RUN	Telemetry Controller	21010	-
31	TELEMETRY_PANEL.RUN	Telemetry control panel	22101	-
32	TITLEVIEWER.RUN	Search by captions	20978	CAM_TITLE.run
33	TITLEVIEWER.RUN	Search by captions	22112	-
34	VIDEO.RUN	Video Capture Device	21050	-
35	VIDEO.RUN	Video stream archiever	20901	-
36	VIDEO.RUN	Video stream gate	20902	-
37	VMDADB.RUN	VMDA metadata storage	22219	-
38	VMS.RUN	Voice Message Service	21032	-
39	VNS.RUN	Voice notification service	21004	-
40	WEBSERVER.RUN	Web-server	21034	-
41	WINDOW.RUN	External window	21053	-
42	OPCIE.RUN	HTML Interface	22141	-

ATM-Intellect and Monitoring

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	VIDEOSRV.EXE	IIDK interface	21030	-
2	VIDEOSRV.EXE	VideoServer	20900	VIDEO.RUN
3	VIDEOSRV.EXE	ATM machine	22174	-
4	VIDEOSRV_C.RUN	ATM-Intellect Pro	22001	-
5	VIDEOSRV_E.RUN	Search in archive	22003	-
6	VIDEOSRV_M.RUN	Monitoring	22222	-
7	VIDEOSRV_R.RUN	Monitoring reports	22223	-

8	VIDEOSRV_S.RUN	ATM-Intellect Workstation	22002	-
9	VIDEOSRV.EXE	ATM-Intellect Pro	7777	VIDEOSRV.EXE
10	EVENTATM.EXE (Integration with ATM through XFS)	-	8888	VIDEOSRV.EXE
11	TELLMEDLL.DLL (Integration with ATM through the SKS software)	-	8888	VIDEOSRV.EXE
12	VMON_ITV.DLL (Integration with ATM through the “Gold Crown” software)	-	8888	VIDEOSRV.EXE
13	STATEUPS.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
14	BATDISCH.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
15	POWEROFF.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
16	POWERON.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
17	VPIPECLIENT.EXE (Internet FPSU operation)	-	7777	VIDEOSRV.EXE
18	VPIPECLIENT.EXE (Internet FPSU operation)	-	8555	VPIPESERVER.EXE
19	VIDEOSRV.EXE	ATM-Intellect Pro	7777	VPIPESERVER.EXE
20	VIDEOSRV.EXE	ATM-Intellect Workstation	7777	VIDEOSRV.EXE
21	VIDEOSRV.EXE	ATM-Intellect Workstation	7777	CPDVAlarmServer.exe
22	CPDVNETSERVER.EXE	CPDV	24345	VIDEOSRV.EXE
23	CPDVNETSERVEREX1.EXE	CPDV	7755	VIDEOSRV.EXE
24	VIDEOSRV.EXE	Agent of Control	7777	VIDEOSRV.EXE
25	STATEUPS.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
26	BATDISCH.EXE (UPS operation)	-	8888	VIDEOSRV.EXE

27	POWEROFF.EXE (UPS operation)	-	8888	VIDEOSRV.EXE
28	POWERON.EXE (UPS operation)	-	8888	VIDEOSRV.EXE

Note.
If CPDV is in use, then between CPDV communication server and *ATM-Intellect Workstation* the 20 and 21 TCP ports are used to provide FTP operation.

Auto-Intellect

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	DT_SERVER.RUN	Traffic Detector	22151	-
2	DT_SERVER.RUN	Traffic Detector	20900	VIDEO.RUN
3	DT_SERVER.RUN	Traffic Detector	22152	-
4	DT_VIEWER.RUN	Traffic Monitor	22152	-
5	ITV_VEHICLE_DETECTOR.RUN	Vehicle Detector	22182	-
6	LPRDB.RUN	External Plates DB	22100	-
7	RADAR.RUN	Speed traps server	22157	-
8	ROSSI_FLOW.RUN	Potok recognition server	22119	-
9	TRAFFIC_PROCESSOR.RUN	Vehicle Processor	22181	-
10	URMLPR.RUN	LPR channel	22137	-
11	URMLPR.RUN	LPR channel	20900	VIDEO.RUN
12	VEHICLE_TRACER.RUN	Vehicle Tracer	22187	-

Face-Intellect

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	FACE_MONITOR.RUN	Face Monitor	21919	-
2	FACE_RECOGNITION_PROXY.RUN	Face Search Server	22207	-
3	FACE_RECOGNITION_WEB_PROXY.RUN	Web access to face search	22214	-
4	FIR_MONITOR.RUN	Recognized Faces Monitor	22135	-
5	FIR_MONITOR.RUN	Recognized Faces Monitor	20985	FIRSERVER.RUN
6	FIR_MONITOR.RUN	Recognized Faces Monitor	20900	VIDEO.RUN

7	FIRSERVER.RUN	Face Recognition Server	22136, 10000	-
8	WEBVIEWER.RUN	Web-interface viewing module	22216	-

POS-Intellect

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	ALERTNURSES.RUN	Alert nurse	22196	-
2	POS.RUN	POS terminal	21012	-
3	POSAGGREGATOR.RUN	POS Replicator	22245	-
4	POSVIEWER.RUN	Receipt viewer	22111	-
5	POSVIEWER.RUN	Receipt viewer	20977	POS.RUN

ACFA subsystem

№	Module name	Name of the corresponding object in INTELLECT™	Connection port	Corresponding module to which connection is made
1	abc.run	ABC	22031	-
2	abc_cr.run	ABC control reader *	22235	-
3	agency_person.run	Visitor Management System	21057	-
4	aiu.run	"777 ROVALANT" system *	22145	-
5	aiu3.run	Rovalant 777 ISS *	22217	-
6	anson.run	Anson ACS *	22267	-
7	APDA.run	Tempo Reale ACS *	22188	-
8	apollosdk.run	ApolloSdk	22204	-
9	Bagulnik2.run	Bagulnik2 *	22195	-
10	biosmart.run	BioSmart *	22236	-
11	bolid.run	"Bolid" (COM server)	21025	-
12	castle.run	Castle server	22183	-
13	castle_cr.run	CASTLE control reader *	22231	-
14	chrysantemum.run	PRHK *	22198	-
15	DB_Import.run	Data import	21022	-
16	Dunai2.run	Dunai 2 *	22255	-
17	dunai3.run	Dunai 3 *	22255	-

18	Elsys.run	Elsys *	22206	-
19	forsec.run	ForSec *	22166	-
20	forteza.run	Forteza *	22237	-
21	Galaxy.run	Galaxy Dimension	22189	-
22	galaxy2.run	Honeywell ACS/SGPS	22239	-
23	gate_cr_z2.run	Z2 control reader *	21222	-
24	Hid.run	VertX / Edge ACS	22220	-
25	hunter.run	HUNTER PRO SFA	22256	-
26	intrepid.run	Intrepid Interface Module	22172	-
27	Intrepid2.run	Intrepid Grunt	22229	-
28	Intrepid3.run	Intrepid II System	22240	-
29	keyking.run	KeyKing ACS	22244	-
30	keywatcher.run	KeyWatcher ACS *	22258	-
31	keywatcher_interface.run	KeyWatcher ACS Interface *	22259	-
32	kodos.run	Kodos server *	22130	-
33	kodos_cr.run	KODOS control reader *	22155	-
34	kronverk.run	Kronverk *	22139	-
35	ksu_cr.run	KSU control reader *	22212	-
36	legos2.run	"Octagram" ACS/SFA *	22190	-
37	Magistrator.run	Magistrator *	22161	-
38	nac.run	"NAC" ACS *	21020	-
39	nc.run	HoneyWell N1000	21052	-
40	ncg9.run	Controller NCG-9	22266	-
41	net.run	"Net" system *	22185	-
42	nskat.run	SKAT ACS *	22248	-
43	opc_wrapper.run	OPC Wrapper	22263	-
44	Optex.run	Optex System	22232	-
45	orion.run	Bolid (SDK Orion) *	22173	-
46	paradox.run	Paradox SFA/ACS	22192	-
47	parsec_pr_x08.run	PR-x08 control reader *	22226	-
48	Paxton_NET2.run	ACS Paxton NET2	22233	-

49	pelco.run	PELCO	22234	-
50	perco.run	"Perco" ACS *	21019	-
51	PercoS20.run	Perco S20 controller *	22246	-
52	PhotoIdentification.run	Photo Identification	22163	-
53	pl.run	Polon Alfa System	22242	-
54	pnet3.run	ParsecNET 3 ACS/SFA *	22264	-
55	ravelin.run	Gate Parking ACS	22227	-
56	RifString.run	RifString system *	22197	-
57	Rosslare.run	Rosslare ACS *	22203	-
58	rovalant_a6_a16.run	"ROVALANT (A6, A16)" system *	22165	-
59	rubeg8_isb.run	Rubeg 8 ISS *	22256	-
60	rubezh.run	Rubeg SFA *	22261	-
61	rubicon.run	Rubicon SFA *	22209	-
62	rusguard.run	"RusGuard" ACS *	22250	-
63	salto.run	SALTO Server	22208	-
64	satel.run	"Satel"	21998	-
65	securiton.run	"Securiton" ACS *	22247	-
66	sintegral.run	Strelec-Integral SFA *	22257	-
67	sphinx.run	Sphinx server	22177	-
68	strelec.run	"Strelec" SFA *	22162	-
69	topol.run	Topol PSS *	22241	-
70	trombon.run	Trombone SFA	22224	-
71	tss2.run	"TSS" ACS/SFA *	22218	-
72	unipos.run	"UniPos" 7002	22184	-
73	nipos5xxx.run	UniPos ACFA 5100-5200	22211	-
74	vers_rs.run	VERS ACS*	22126	-
75	WorkTime.run	Work Time Accounting	22133	-
76	xabc.run	Fortecia ACS *	22260	-
77	zline.run	"ZLine" SFA *	22243	-
78	account_manager.run	Access Manager	22291	-

* These integrations are not included into the English version of ACFA subsystem and are given here for information only.

Configuring Windows Firewall

If the Intellect software works when the Windows firewall is enabled, then the firewall is to be configured in the following way:

1. Add all processes connected to the Intellect software working to the exceptions list (of allowed programs and components). At standard settings the firewall requires the permission to start the process at first attempt of the module launch.
   Attempt of the module launch is performed at creation the corresponding object in the hardware tree. It is needed to allow the access to the network when the request appears. If the access request is not displayed at the module launch attempt, add the needed processes to the allowed list manually.
2. While the *Intellect* software working in the distributed environment it is needed to add the SQLservr.exe and sqlbrowser.exe processes to the exceptions list (of allowed programs and components) on the Server with which the database synchronization is performed.

Note.
Detailed information on Windows Firewall configuration is presented in the Microsoft web-site: http://windows.microsoft.com/

Disable the Data execution prevention (DEP) function for Intellect software package

Attention!
Disabling Data Execution Prevention (DEP) should be made only on the recommendation of AxxonSoft technical support specialists.

To disable the DEP function for the Intellect software package, do the following:

1. Go to the **Start – Control panel – System** menu.
2. In the opened window go to the **Additional** tab and click the **Parameters** button in the **Performance** group.
3. In the **Performance Options** opened window go to the **Data executing prevention** tab (1).

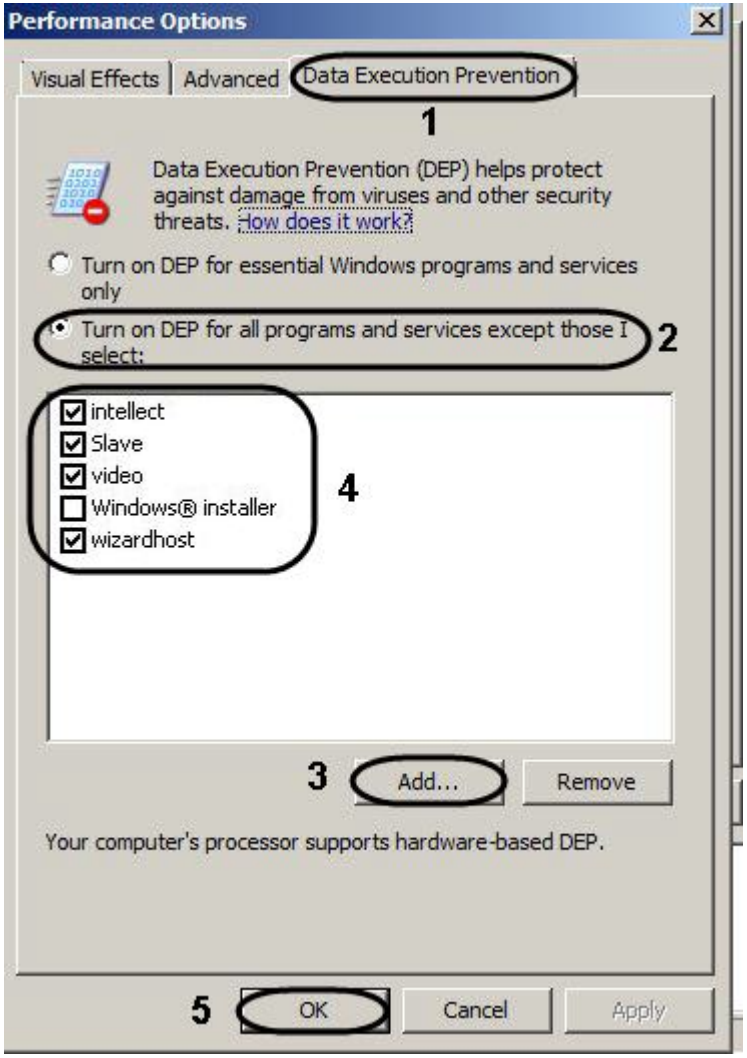

4. Set a switch in **Turn on DEP for all programs and services except those I select:** (2).
5. Click the **Add...** button and using the standard diolog of files opening specify the path to the intellect.exe executable file which is located in the Intellect installation directory.
6. **Intellect** item will appear in the programs list. Ensure that the checkbox is set opposite of this item (4).
7. Repeat 5-6 staps for Modules\video.run, slave.exe and Modules\wizardhost.exe files.

> ⚠ **Attention!**
> To add the video.run file go to the Modules folder in the files opening dialog and enter the name of this file with resolution in the **File Name** field. Click the **Open** butto n.

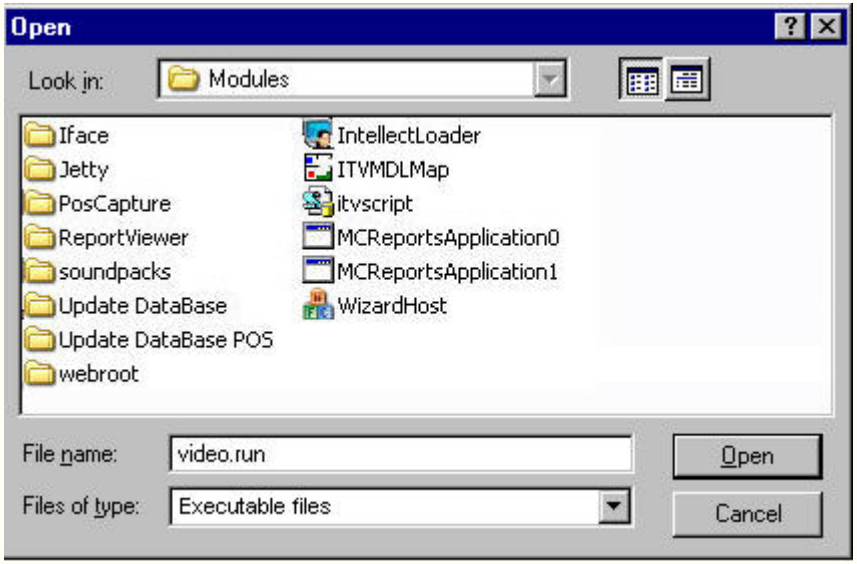

8. Click the **OK** button in the **Performance Options** window(5).
9. Click the **OK** button in the **System** window.

Disabling of DEP for Intellect is completed.

> **Note.**
> It is also possible the full DEP disabling on the computer. For full DEP disabling perform the **bcdedit.exe /set {current} nx AlwaysOff** command using the Windows command line from the <Windows>\system32 directory.

Configuring the best performance mode

On video Servers and Clients with installed *Intellect* Windows OS is to be set to the best performance mode:

1. Go to **Start – Control panel – System**.
2. In the appeared window go to the **Advanced** tab and click the **Settings** button in the **Performance** group.
3. Go to the **Visual effects** tab in the appeared **Performance Options** window (1).

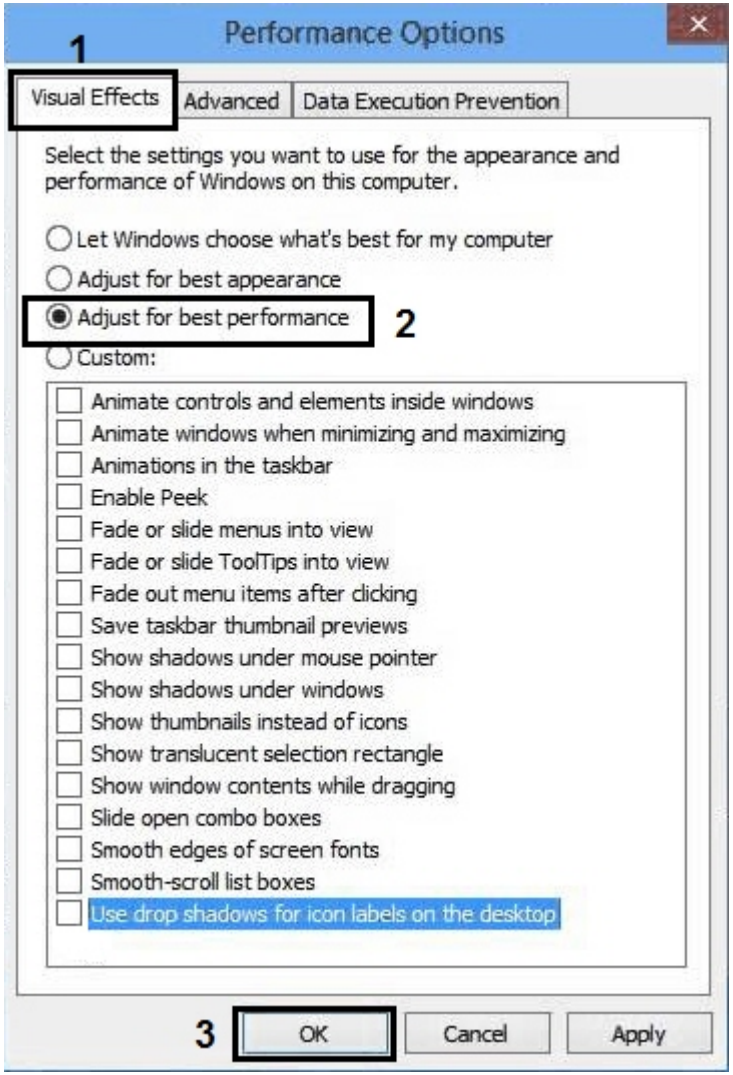

4. Set the switch to **Adjust for best performance** position (2).
5. Click the **OK** button (3).

The best performance has been adjusted.

Limiting RAM for Elasticsearch service

When installing *Intellect* in order to ensure the correct start of the Elasticsearch service, RAM allocated to this service is automatically limited on 32-bit systems. If more RAM that Elasticsearch provides is required, do the following:

1. In the Windows command line go to the Elasticsearch installation directory, to the bin folder (by default, c:\ProgramData\elasticsearch-5.2.2\bin\).
2. Run the elasticsearch-service.bat batch file with "manager intellect-title-indexer" parameters:

   elasticsearch-service.bat manager intellect-title-indexer

3. As the result the **Elasticsearch 5.2.2 (intellect-title-indexer) Properties** window appears.

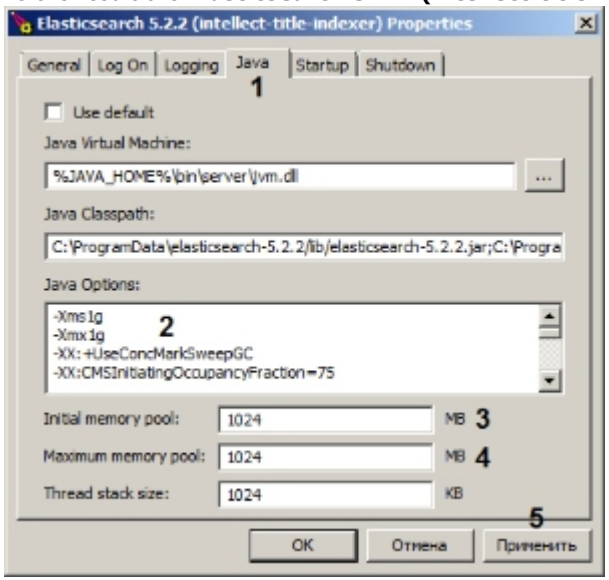

4. Go to the **Java** tab (1).
5. Reduce the value of the **Xms** (memory pool at the start of Java virtual machine) and **Xmx** (maximum memory pool for Java virtual machine) parameters (2). For instance, set them to 1 GB as follows:
   -Xms1g
   -Xmx1g
6. In the **Initial memory pool** field, specify the size (in megabytes) of the memory pool at the start of Java virtual machine (3).
7. In the **Maximum memory pool** field, specify the maximum memory pool size (in megabytes) for Java virtual machine (4).
8. Click the **Apply** button (5).

RAM for the Elasticsearch service is now limited.

Appendix 4. INTELLECT™ software database management

INTELLECT™ software database functions

INTELLECT™ software database provides:

1. Data storage:
   a. data on registered system objects and their settings;
   b. departments and user accounts and rights;
   c. on registered system events;
   d. on changes in servers and Remote Admin Workstations configuration;
   e. on changes in registered system object specifications and their settings;

f. data on network names and IP-addresses of distributed system servers, Remote Admin Workstations, Remote Clients and their interaction parameters;
2. Data replication from different servers and Remote Admin Workstations.

The main and the single default database of the INTELLECT™ software is the Configuration database. The Configuration database is used to realize all the above-listed functions.

INTELLECT™ software can be configured to store the registered system events not in the default Configuration database, but in the Events log database.

Guidelines on INTELLECT ™ system database use

To provide effective and steady performance of the INTELLECT ™ system, take into account the recommendations on database use below:

1. Store the Configuration database on the MS SQL server. If MS Access is used to store the database, it is strongly recommended to install the MS SQL server and to convert the database from MS Access to MS SQL format.
2. Servers and Remote Admin Workstation databases should be synced with the administering server database.
3. If long-term centralized storage is necessary for registered system events, then it is recommended to apply INTELLECT™ software configuration at servers and Remote Admin Workstations in order to store events that are not in the Configuration database, but in the Events log database.

Converting the database from MS Access to MS SQL format

Intellect™ software version 4.10.0 is default configured to operate with the database MS SQL server format. MS Access format databases have been used in previous Intellect™ software versions. If the system needs configuration parameters, stored in MS Access format after INTELLECT™ software has been updated to version 4.10.0, it is strongly recommended to convert the database into MS SQL server format.

To convert the database from MS Access to MS SQL server format, follow the steps:

1. Set up MS SQL server software, if it has not been set up before.
2. Make sure that the MS SQL server software is on.
3. Launch the idb.exe utility in the root of the INTELLECT™ software installation directory (for example, C:\Program Files (x86)\Intellect). The idb.exe utility dialog box is displayed.

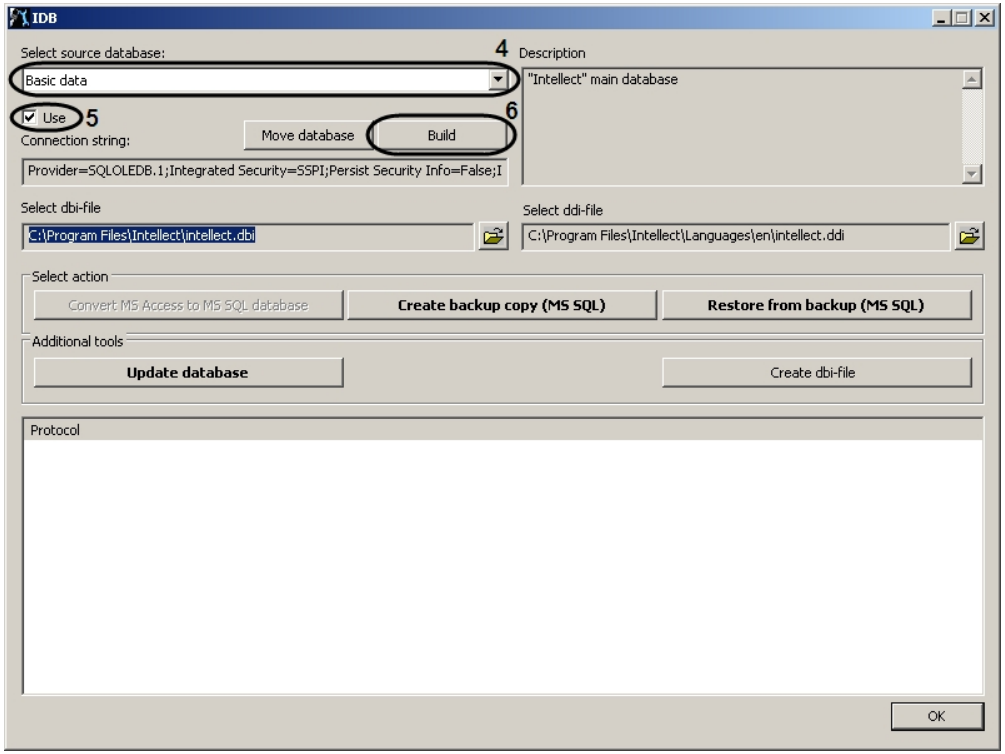

4. Choose the **Basic data** item from the **Select data source** list.
5. Check the **Use** checkbox, if not checked before.
6. Click **Build**.
7. The **Data link properties** dialog box is displayed. Go to the **Provider** tab in the **Data link** properties dialog box.

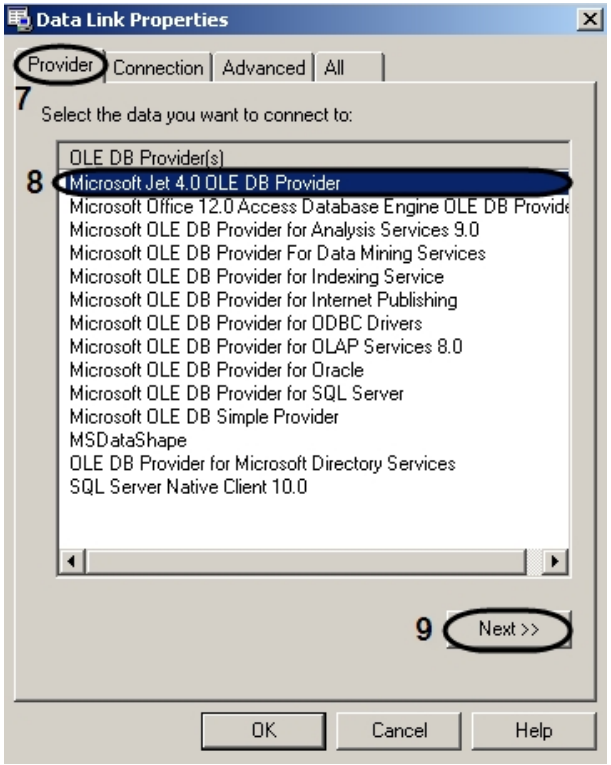

8. Select **Microsoft Jet 4.0 OLE DB** Provider from the **OLE DB Providers** list.
9. Click **Next**.
10. As soon as **Next** is clicked, the dialog box automatically takes you to **Connection** tab.

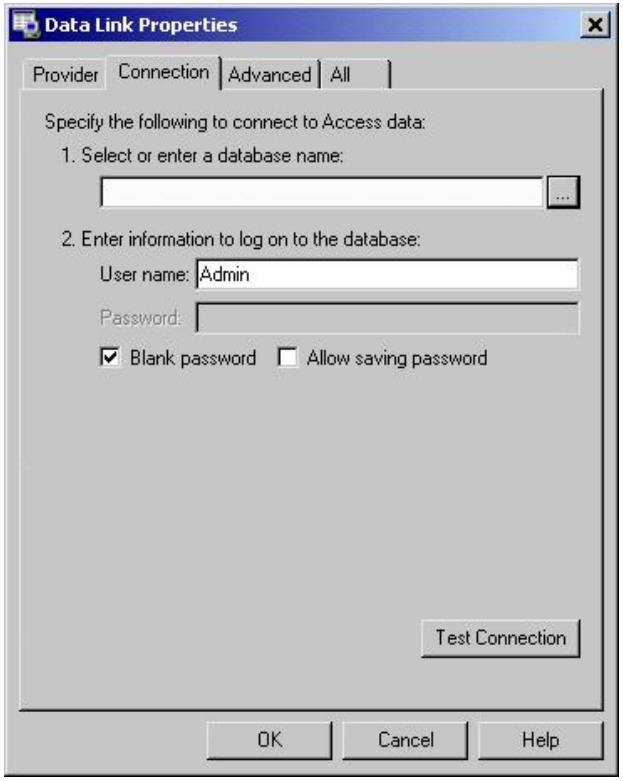

11. Type the complete path to the database file in the **1. Select or enter a database name** or select the necessary file from the file opening dialog box, which is displayed by the **...** button.
12. Enter the user name (login) for database access in the **User** field. If database access is not protected, leave the field empty.
13. If access to the database is protected, remove the default **Blank password** check and enter the database access password into the **Password** field.
14. Click **Test Connection**.
15. If MS Access database connection was completed, the **Test connection succeeded** message is displayed.

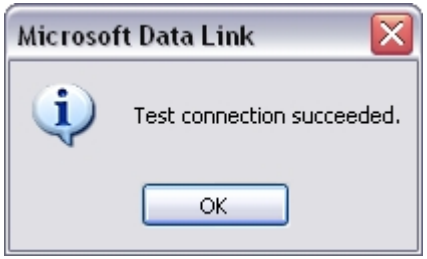

Click **OK** to close the window.

16. If the MS Access database name and/or authentication parameters of database connection were entered incorrectly, the relevant error message will pop up.

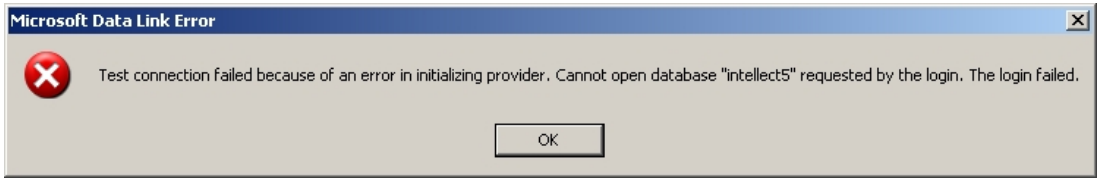

Click **OK** to close the window. Then enter the correct password and try the MS SQL server connection again.

17. Click **OK** in the **Data link properties** dialog box. The window closes.
18. Update the database structure. To do that click the **Convert MS Access to MS SQL** button in the idb.exe utility dialog box.
19. The **Select MS SQL server** message appears.

Click **OK** to close the window.

20. The **Data link properties** dialog box is displayed. In the **1.Select or enter a server name** select from the list or type the name of the MS SQL server, which will be used to convert the database.

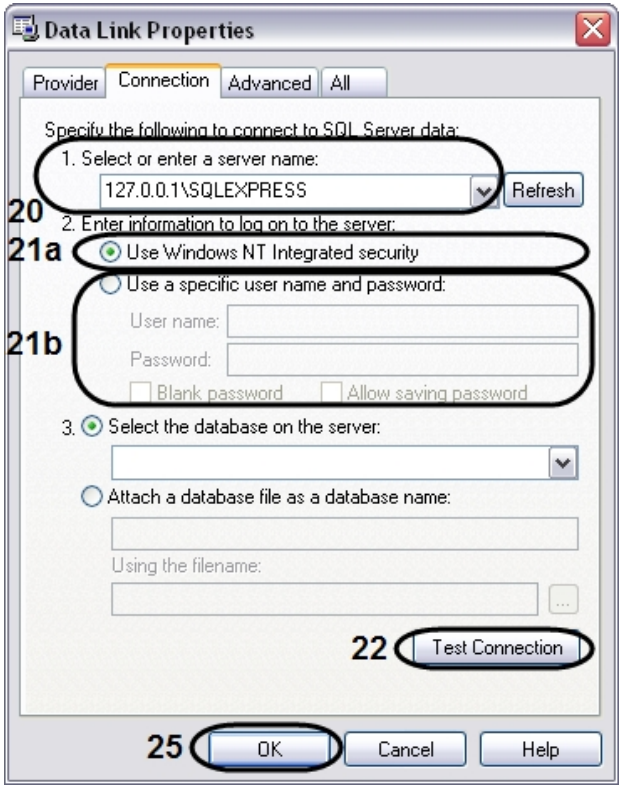

21. The **Enter information to log on to the server** box is checked to enter the type and authentication parameters of MS SQL server connection. MS SQL server authentication is performed through the user account, authorized in Windows OS, or the user name (login) and password, that protect the MS SQL server connection.
    The method and parameters of authentication at the MS SQL server are set during MS SQL server installation.
    Different settings need to be entered, with different authentication techniques for MS SQL server connection:
    a. If MS SQL server authentication is performed through the user account in Windows OS, switch to the **Windows NT account** box and check it.

> **Note.**
> If converting is performed via remote MS SQL server, it is necessary to log in computer with MS SQL server the user's current account from computer that performs the conversion.

    b. If MS SQL server authentication is performed through the user login and password, follow the sequence:
        i. switch to to the **Next user name and password** position.
        ii. in the **User** field: enter the user name (login) to connect MS SQL server.
        iii. if access to the MS SQL server is password protected, remove the default **Blank password** check and enter the database access password into the **Password** fie ld.
22. Click **Test Connection**.
23. If MS SQL server connection was completed, the **Test connection succeeded** message is displayed.

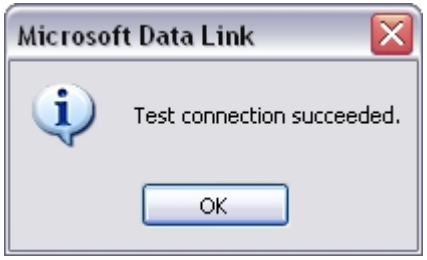

Click **OK** to close the window.

24. If the MS SQL server name and/or authentication parameters of the MS SQL server connection were misentered, the relevant message will appear.

Click **OK** to close the window. Then enter the correct password and try MS SQL server connection again.

25. Click **OK** in the **Data link properties** dialog box.
26. The **Enter database name** message will appear.

Enter the name to be used for database storage on the MS SQL server in the top field. It is default recommended to use INTELLECT as the database name.

> **Note.**
> If the MS SQL server has a database with the same name, as has been entered in the **Enter the database name** field, it will be overwritten.

Confirm the entry of the database name by clicking **OK** and close the window.

27. Then the database conversion process starts from MS Access to the MS SQL server format, and the relevant steps appear in the **Protocol** table in the idb.exe utility dialog box.

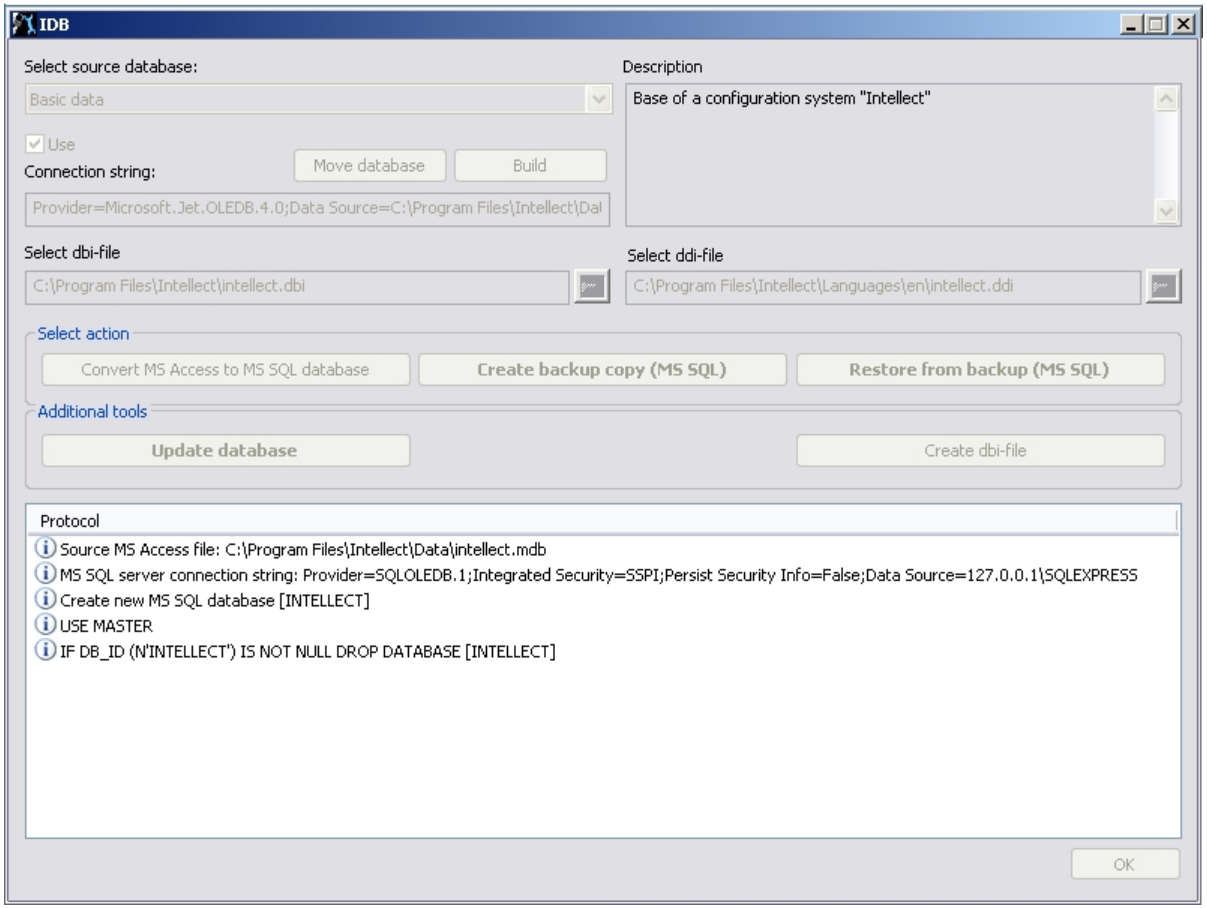

28. After the database conversion process is completed the request message appears: "Reset current connection to MS SQL?".

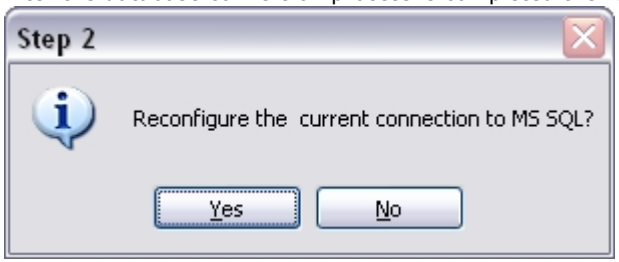

Click the **Yes** button, if you want to set up INTELLECT™ software to operate with a MS SQL server format database, converted from MS Access format. Otherwise click **No**. When the conversion process is successfully completed, the **Completed!** step appears in the **Protocol** table in the idb.exe utility window.

29. Click **OK** in the bottom right corner of the idb.exe utility window.

Converting the database from MS Access to MS SQL format is completed.

INTELLECT™ software database connection

When INTELLECT™ software is installed, it is configured to operate with the INTELLECT MS SQL server database.

Note.
If the current database is stored in MS Access format, it needs to be converted to MS SQL format before INTELLECT™ software connection setup.

Note.
If Turkish Windows OS language pack and English localization of INTELLECT™ are in use, then connected database is to have the Latin1_General_100_CI_AS value of the **Collation** parameter.

In most cases, the default value of the parameter should be used. Ensure that you have the correct language settings in the operating system.

To connect the INTELLECT™ software Configuration database, do the following:

1. Make sure that MS SQL Server software operates.
2. Start the idb.exe utility in the root of the INTELLECT™ software installation directory (for example, C:\Program Files (x86)\Intellect). The idb.exe utility dialog box is displayed.

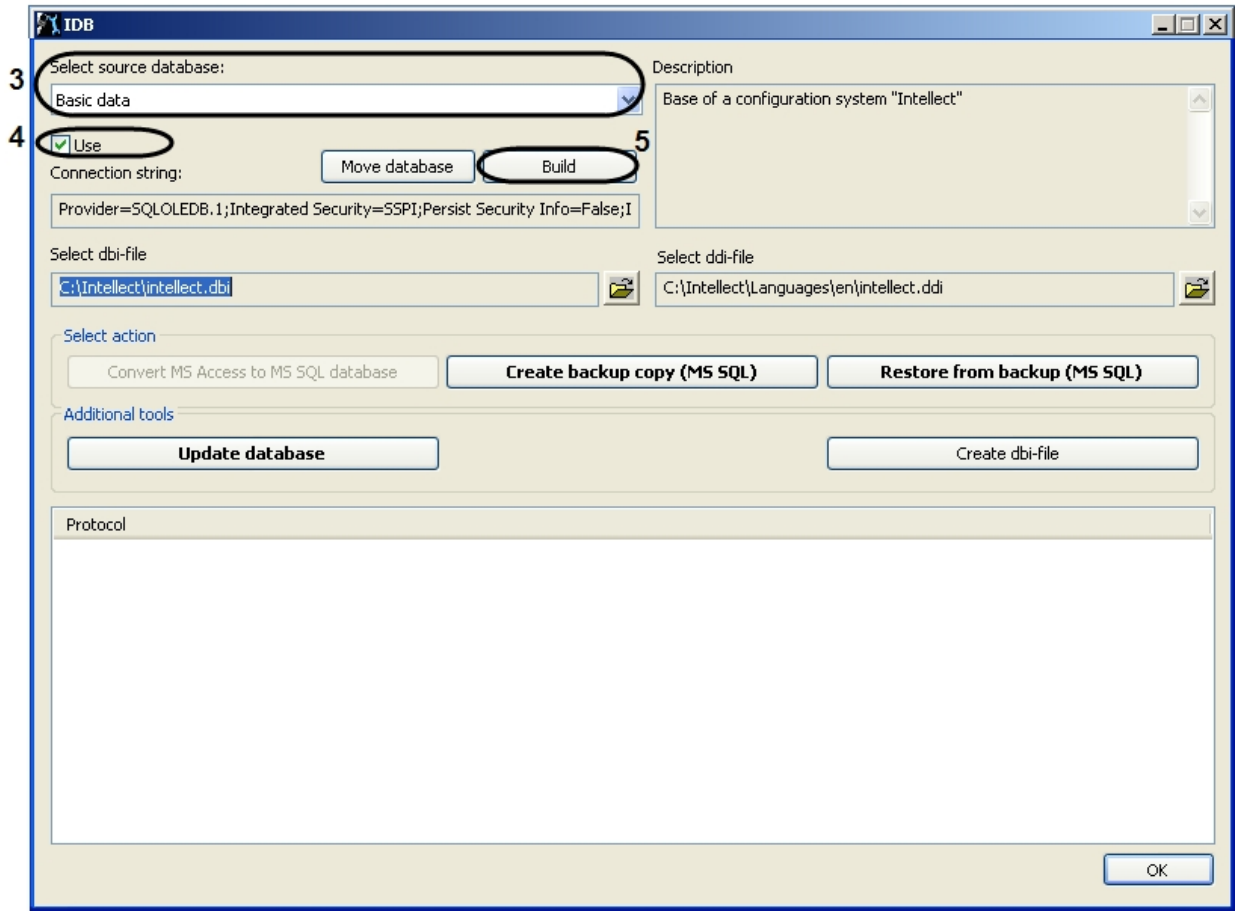

3. Choose the **Basic data** item in the **Select source database** list.
4. Set the **Use** checkbox, if not set before.
5. Click the **Build** button.
6. The **Data Link Properties** dialog box is displayed. Go to the **Provider** tab in the **Data Link Properties** dialog box.

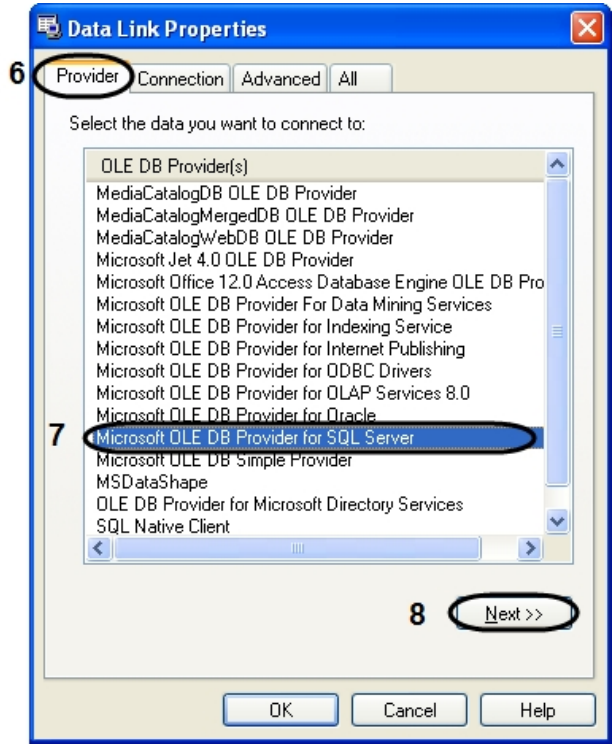

7. Select **Microsoft OLE DB Provider for SQL Server** in the **OLE DB Provider(s)** list.
8. Click the **Next** button.
9. As soon as the **Next** button is clicked, go to the **Connection** tab is automatically performed.

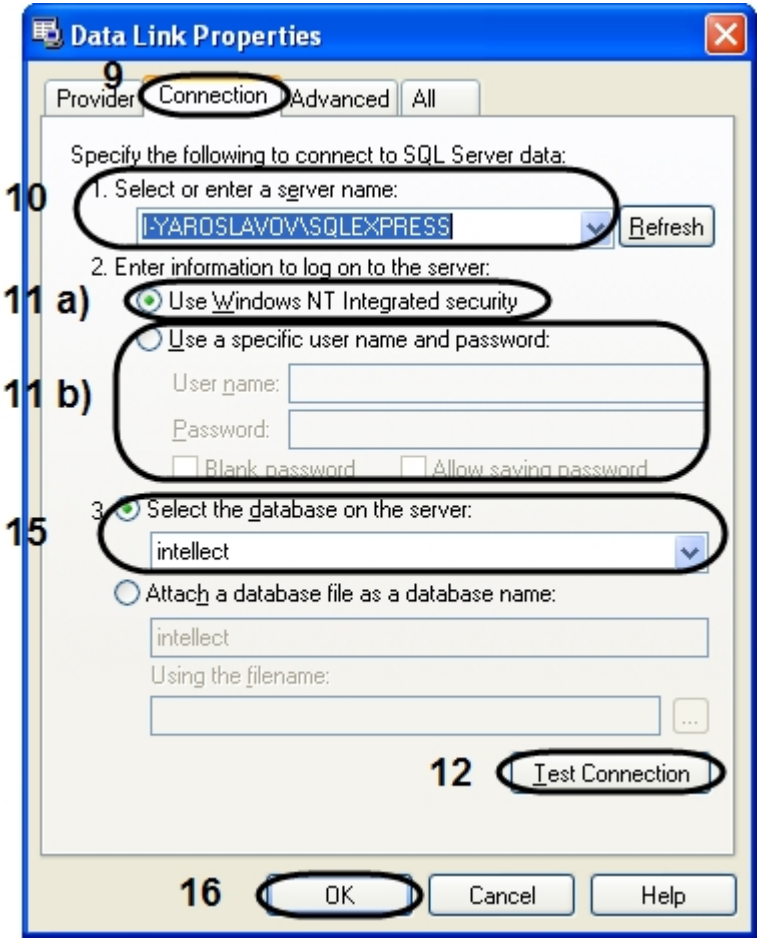

10. In the **1.Select or enter a server name** line select in the list or type-in the name of MS SQL server which is used to store the database to be connected

> **Note.**
> In case of dynamic host configuration protocol (DHCP) use for the local database, set «127.0.0.1» IP address (without using computer names and "local" value) in the **1.Select or enter a server name**. Set «127.0.0.1» value when the static IP address is use. Otherwise there is disconnection of INTELLECT™ software with its local database when network cable is disconnected.
> If INTELLECT™ is connected to remote database configuration at IP address (e.g., 192.168.0.68\SQLEXPRESS), you cannot change and save INTELLECT™ software settings when there is a network connection break. If event protocol is extracted into an individual database, use any functioning way to specify a server name.

11. The **2.Enter information to log on to the server** group is used to specify the type and authentication parameters of the MS SQL server connection. MS SQL server authentication is performed through the user account, authorized in Windows OS, or by user name (login) and password that protect the MS SQL server connection.
The method and parameters of authentication at the MS SQL server are set during MS SQL server installation.
Different parameters are to be specified with different authentication techniques for MS SQL server connection:
    a. If MS SQL server authentication is performed through the user Windows OS account, switch to the **Use Windows NT Integrated security** position.

> **Note.**
> If converting is performed via the remote SQL server, the computer with MS SQL server installed must show the current user account. And the user is logged on under this account at the computer that performs the database connection.

b. If MS SQL server authentication is performed through the user login and password, do the following:
   i. Switch to the **Use a specific user name and password**;
   ii. Specify the user name (login) to connect to the MS SQL server in the **User name** field.
   iii. If access to the MS SQL server is protected with a password, set the **Blank password** checkbox unchecked and specify the database access password in the **Password** field.

12. Click the **Test Connection** button.
13. If MS SQL server is successfully connected, then the **Test connection succeeded** message is displayed.

Click the **OK** to close the box.

14. If the MS SQL server name and/or authentication parameters of the MS SQL server connection were erroneous, the error message will appear.

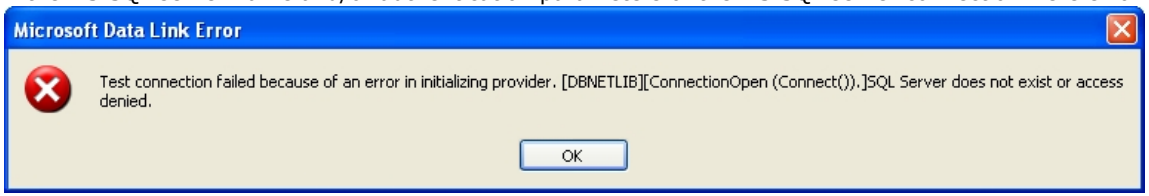

Click the **OK** button to close the box. Then specify the correct password and try the MS SQL server connection again.

15. Select the name of the database to be connected in the **Select the database on the server** list.
16. Click the **OK** button in the **Data Link Properties** dialog box. The box closes.
17. It is strongly recommended to update the database structure after this. For this click the **Update database** button in the idb.exe utility dialog box.

> **Important!**
> If the Event Viewer is in the individual database (see Extracting event protocol into an individual database), then the Event Viewer database structure will be updated when updating the main database structure. So it is recommended to check connection to the Event Viewer database before updating the main database structure in order to prevent any errors.

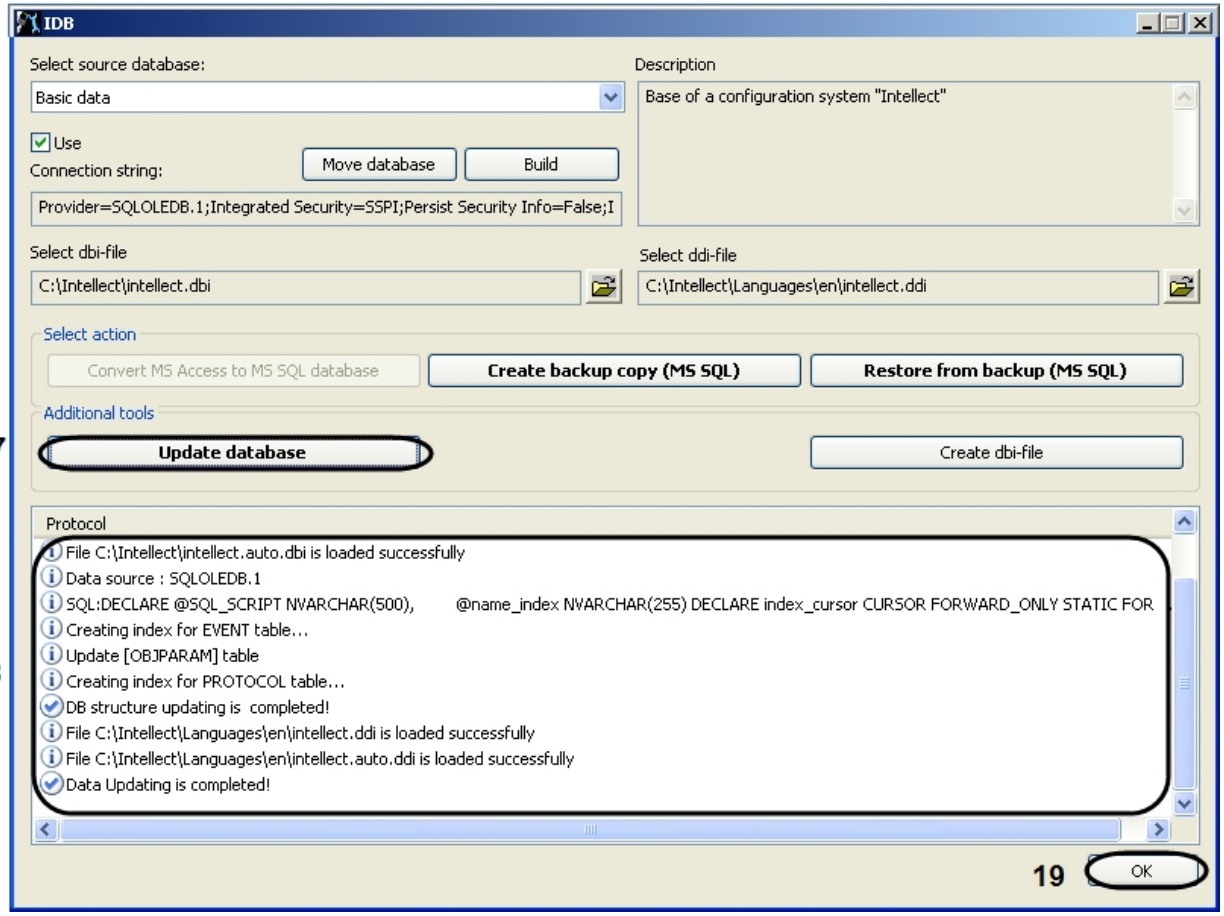

18. As a result the database structure update process starts, and the corresponding messages appear in the **Protocol** table.
    When the conversion process is successfully completed, the **Data Updating is completed!** message appears in the **Protocol** table of the idb.exe utility.
19. Click the **OK** in the bottom right corner of the idb.exe utility.

INTELLECT™ software database is now connected.

Viewing INTELLECT™ software database

To view the database stored on MS SQL server, do the following:

1. Download (x86, x64) and install *SQL Server Management Studio 2014* (see Microsoft documentation).
2. Start SQL Server Management Studio utility. Click **'Start' => 'All Programs' => 'Microsoft SQL Server 2014' => 'SQL Server Management Studio'**.
3. Specify parameters of connection to MS SQL server in the **Connect to Server** box.

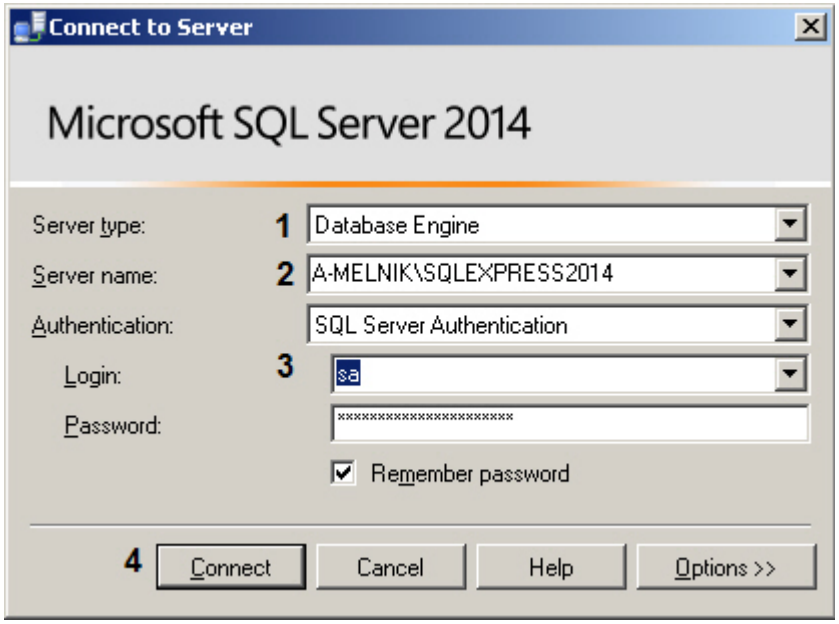

a. Select the **Database Engine** type in the **Server type** list (1).
b. Select the name of MS SQL server to wich it is necessary to connect in the **Server name** list (2).
c. Select authentication type used for connecton to MS SQL server in the **Authentication** list (3).

> **Note.**
> The type of authentication that was selected while creating MS SQL server is specified.

> **Note.**
> If SQL Server Authentication type is used, then select the user in the **Login** list and type-in the required password in the **Password** field (3).

4. Click **Connect** to connect to MS SQL server. If the connection is successful, then the **Object Explorer** box is displayed.

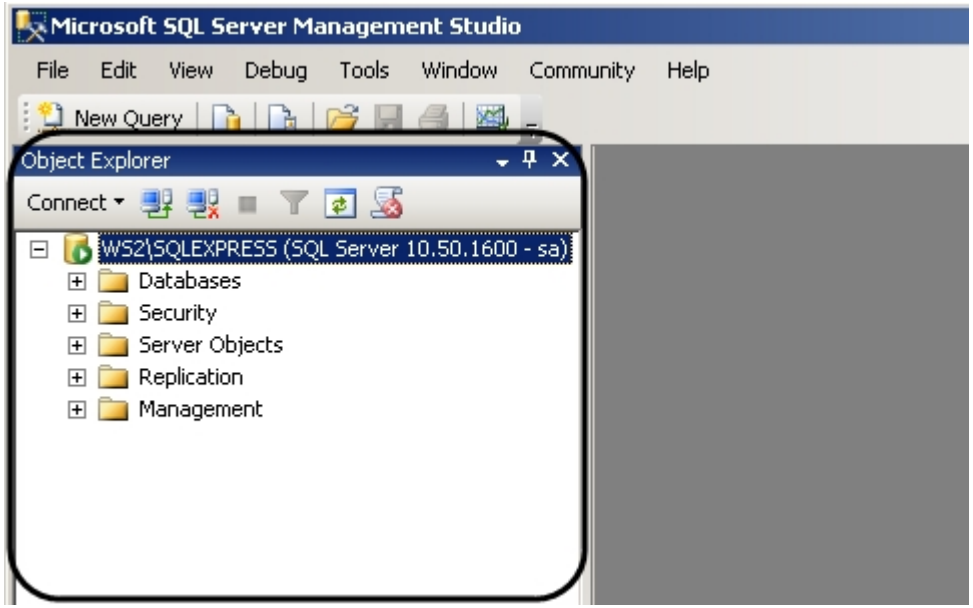

5. Open the embedded list of the Databases catalogue in the Object Explorer box and go to the required database.

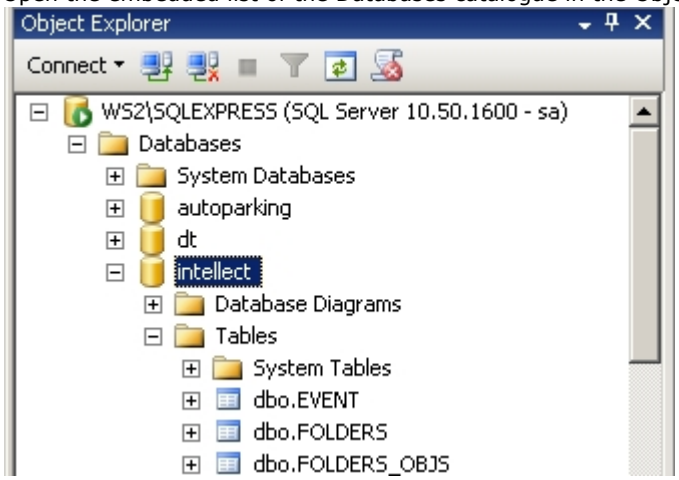

6. Select the table for viewing in the **Tables** catalogue.
7. Select **Select Top 1000** Rows item in the context menu of the table.

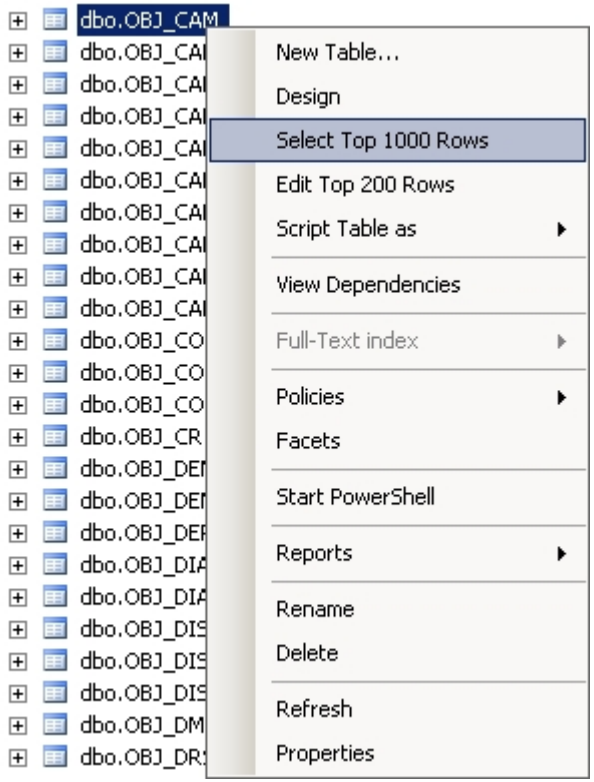

As a result the box with SQL Query on top of it and the table data selected by the query will be displayed.

Note.
Using **Select Top 1000 Rows** command one can query the latest rows stored into the table. Not more than 1000 rows respond to a query.

Note.

One can change the quantity of rows and set of fields requested in the table by editing SQL Query. To start modified SQL Query click Execute on the toolbar.

SQLQuery4.sql -...llect (sa (60))* | SQLQuery3.sql ...aster (sa (59))

```
/****** Script for SelectTopNRows command from SSMS  ******/
SELECT TOP 1000 [activity]
      ,[alarm_rec]
      ,[arch_days]
      ,[audio_id]
      ,[audio_type]
      ,[blinding]
      ,[bosch_ptz_protocol]
      ,[bright]
      ,[color]
      ,[compression]
      ,[compressor]
      ,[config_id]
      ,[contrast]
      ,[decoder]
      ,[decompressor]
      ,[flags]
      ,[fps]
```

Results | Messages

	activity	alarm_rec	arch_days	audio_id	audio_type	blinding	bosch_ptz_protocol	bright	color	compression	compressor	config_id	contrast
1	NULL	1	NULL			NULL		5	0	2			5
2	NULL	0	NULL			NULL		5	0	2			5
3	NULL	1	NULL			NULL		5	0	2			5
4	NULL	0	NULL			NULL		5	0	2			5
5	NULL	1	NULL			NULL		5	0	2			5
6	NULL	1	NULL			NULL		5	0	2			5
7	NULL	1	NULL			NULL		5	0	2			5
8	NULL	0	NULL			NULL		7	0	2			5

Query executed successfully. | WS2\SQLEXPRESS (10.50 RTM) | sa (59) | master | 00:00:00 | 8 rows

If one need to create his own query, then select **Script Table as => SELECT To => New Query Editor Window** in the context menu and type-in SQL Query in the box.

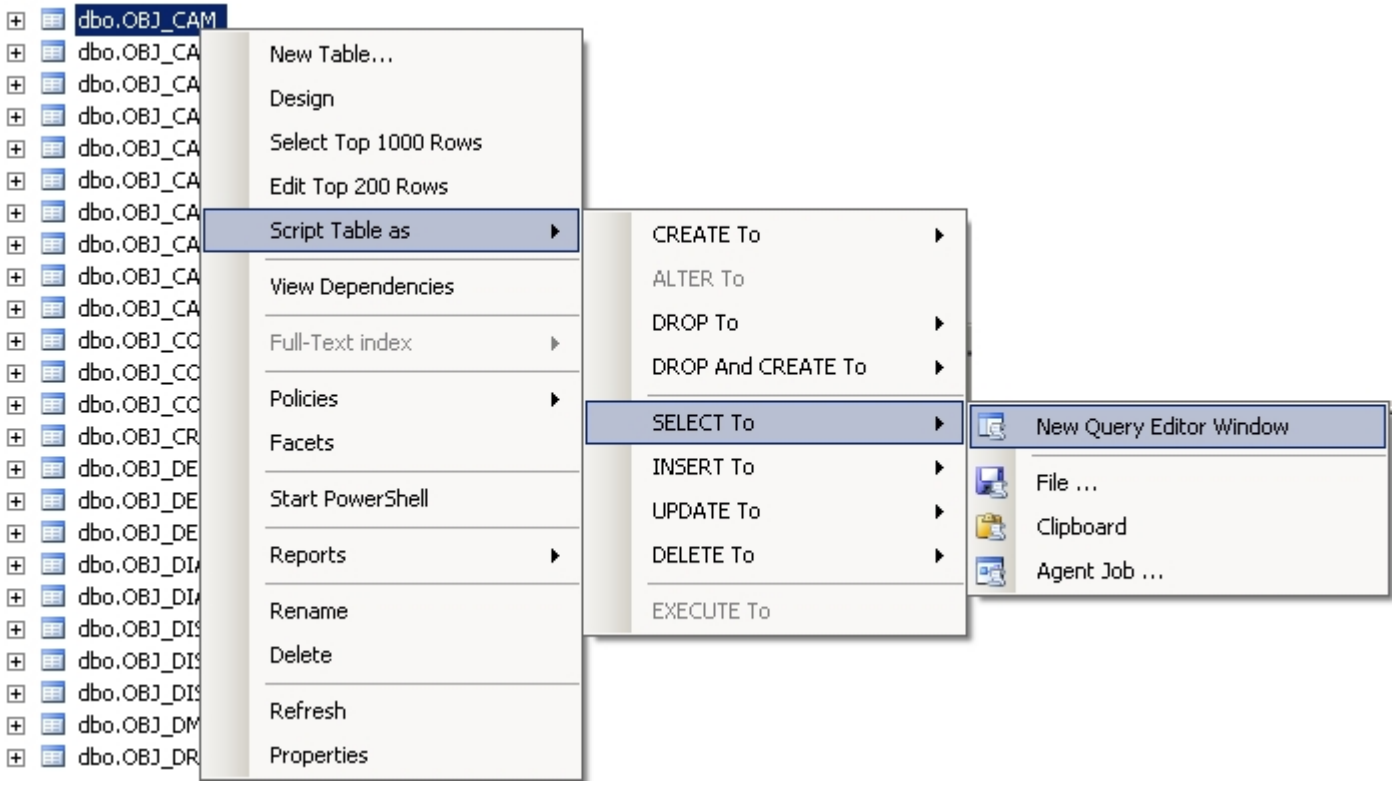

Note.

To execute the query click Execute on the toolbar.

Example.
Select all video cameras created on the basis of Video Capture Device 2.

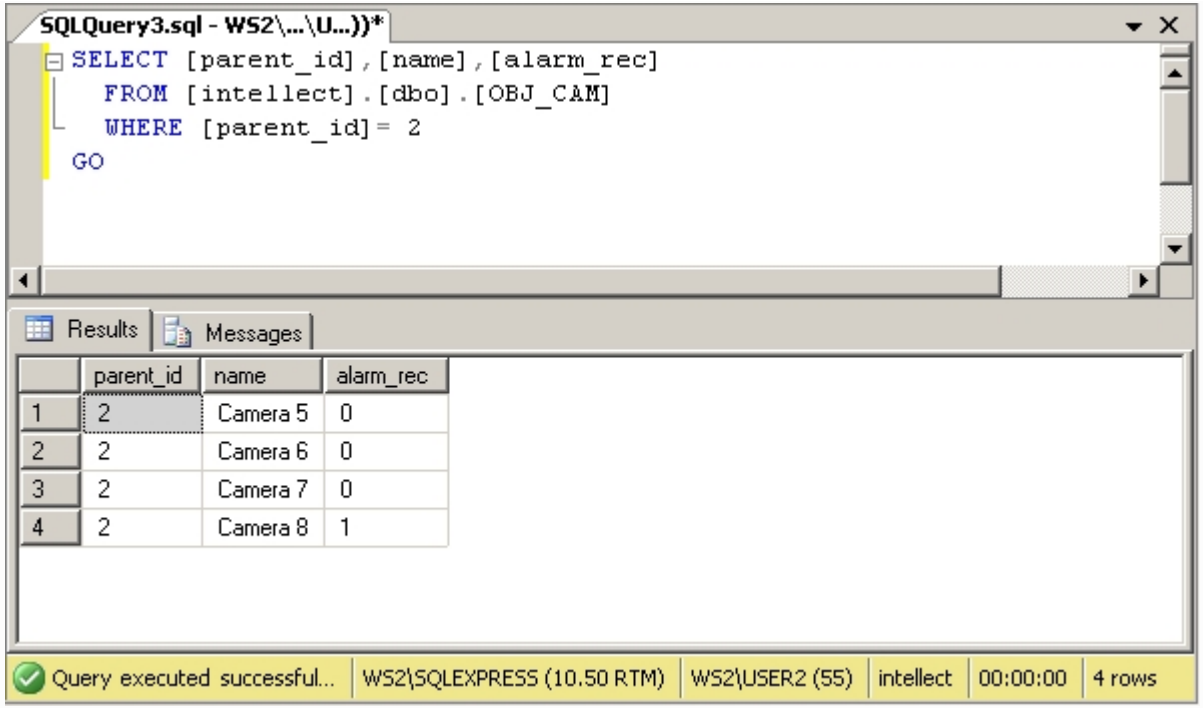

Viewing INTELLECT™ software database is now completed.

Note.
To view databases of other formats, the SQL Server Management Studio utility can also be used. For this install the package of ODBC drivers and OLE DB provider that can be found at http://www.microsoft.com. To connect to database Server, use sp_addlinkedserver stored procedure. Its description and examples of use are at http://msdn.microsoft.com.

Moving Intellect configuration database to the latest version of MS SQL Server

To move configuration database to the latest version of MS SQL Server after INTELLECT™ update do the following:

1. Run the idb.exe utility from the Intellect installation directory (e.g., C:\Program Files (x86)\Intellect). The dialog box of the idb.exe utility is opened.
2. To create backup copy of Intellect configuration database click **Create backup copy (MS SQL)** (1). In opened window select the folder where the configuration backup copy is to be created.

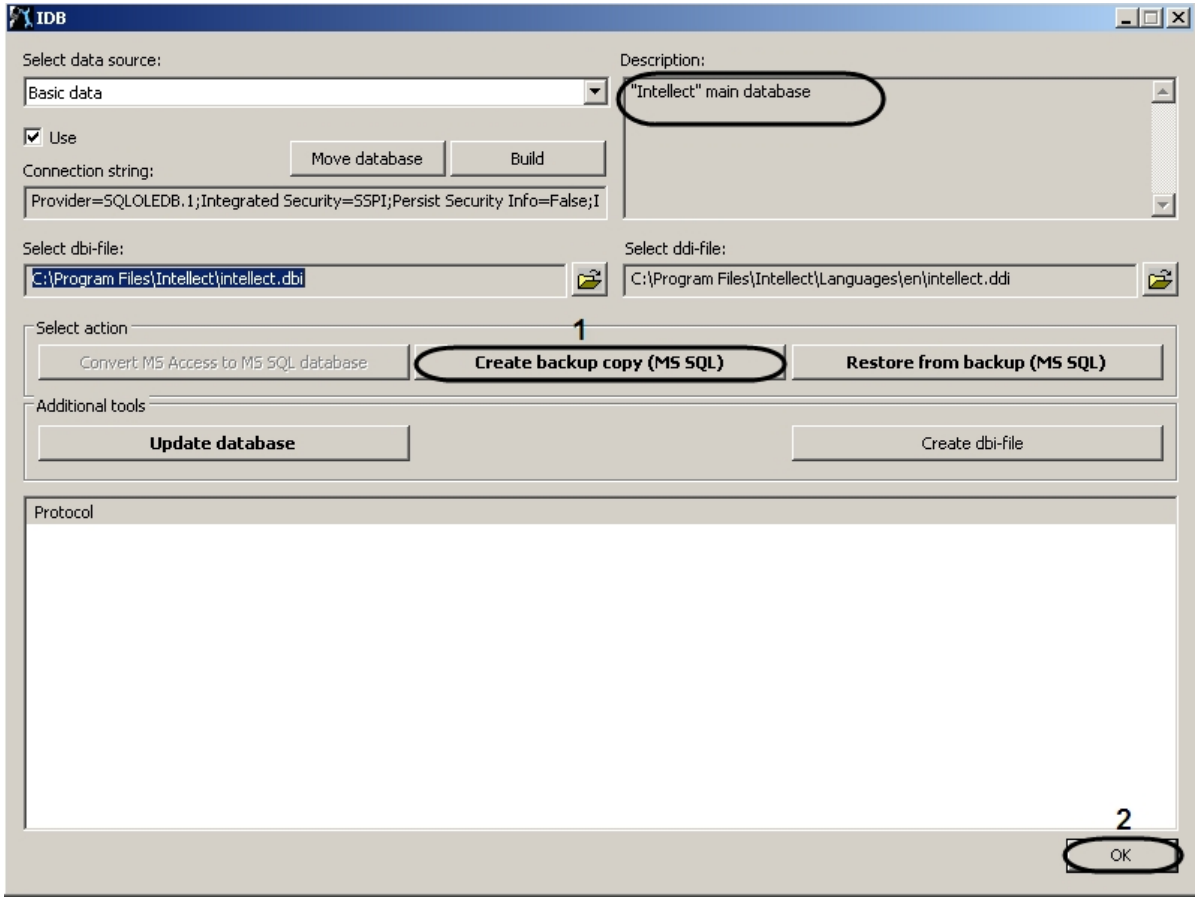

Note.
Configuration backup copy is a file with bak. extension.

3. If the configuration backup copy is created without any errors (see the protocol of the idb.exe utility), then click **OK** (2). If there are some errors, then repeat 2 step or use MS SQL Server 2005 tools for creating database backup copies.
4. Remove previous version of MS SQL Server from computer.
5. Install a new version of MS SQL Server with SQL Server Management Studio (see Microsoft documentation).
6. Create an empty database.
    a. Run the SQL Server Management Studio utility. Click **Start => All Programs => Microsoft SQL Server => SQL Server Management Studio**.
    b. Select **New Database** in the context menu of the **Databases** directory.

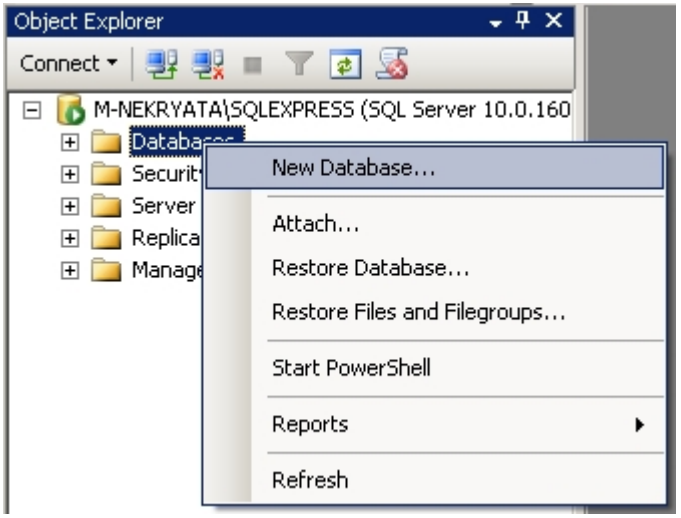

As the result the **New Database** window opens.

c. Type in a name of a new database in the **Database name** field (1).

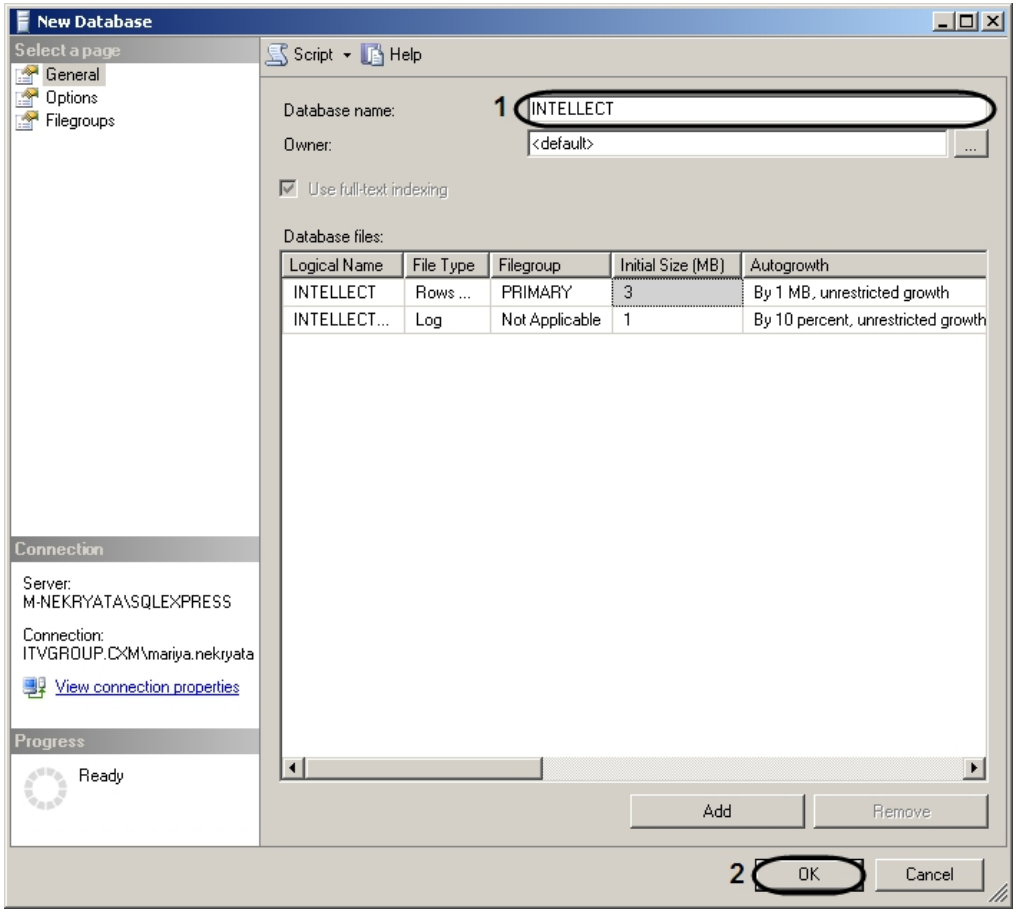

d. Click **OK** (2).

7. Connect created database to Intellect using the idb.exe utility (see 1-16 steps in *INTELLECT™ software database connection* section).
8. To restore Intellect configuration database click **Restore from backup (MS SQL)** (1). Select configuration backup copy in opened window.

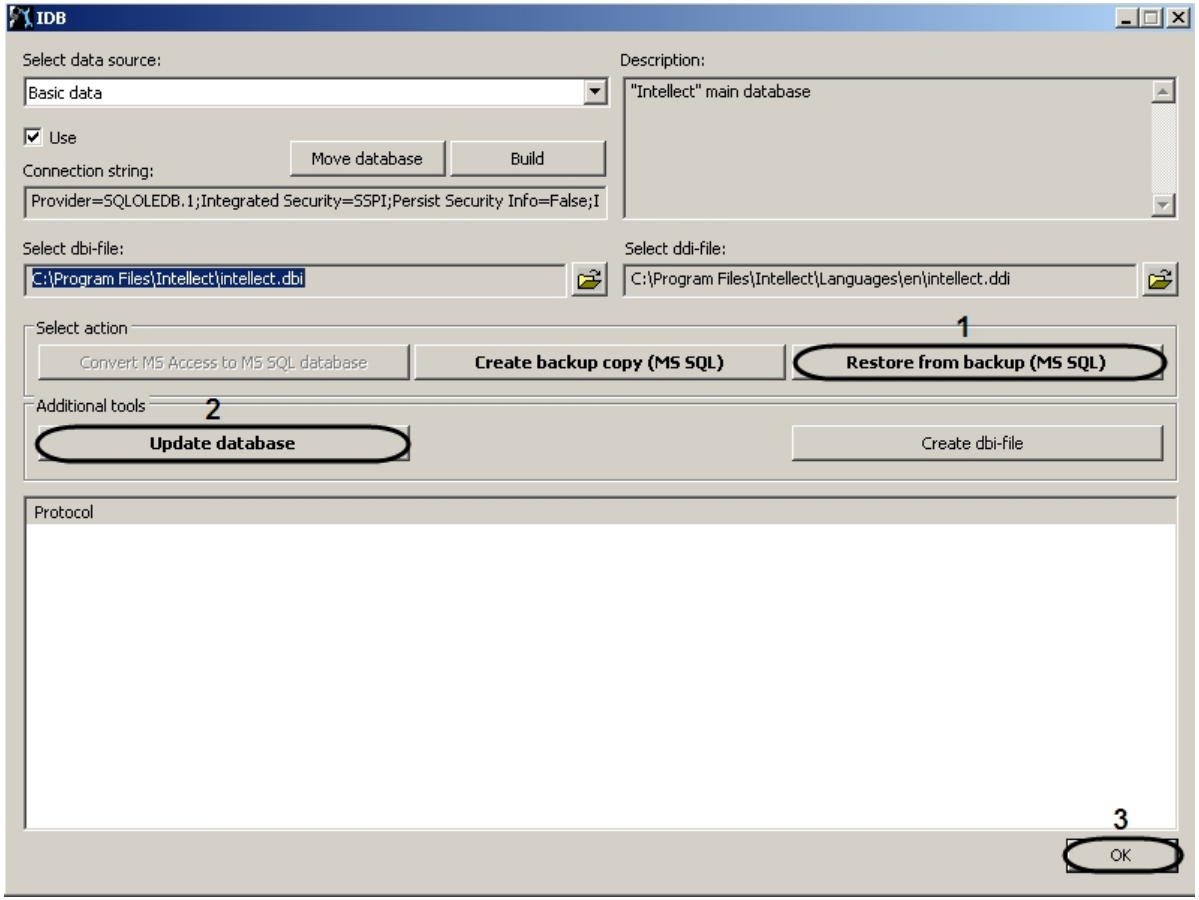

9. To update database click **Update database** (2).
10. Click **OK** to shut down the idb.exe utility (3).

Moving Intellect configuration database is completed.

Database synchronization setup

When INTELLECT™ software is applied by a large-scale system with distributed architecture, servers and Remote Admin Workstations databases should be synced. Database synchronization allows to store data both centrally (on a single server or Remote Admin Workstation) and in a distributed manner (data replication from different servers and Remote Admin Workstation databases of the video surveillance system). Database synchronization provides parallel operation with servers and Remote Admin Workstations databases and their automatic updating after they have been modified.

INTELLECT™ software databases on servers and Remote Admin Workstations are not synced by default. Usually INTELLECT™ software is configured to sync all databases with a single centralized administering server database.

Note.

If one or more databases are stored in MS Access format, they need to be converted to MS SQL format before the synchronization setup.

To sync the INTELLECT™ software "Configuration" database with the administering server database (or any other one), follow the procedure:

1. Make sure that MS SQL Server software is.
2. Start the idb.exe utility from the root of the INTELLECT™ software installation directory (for example, C:\Program Files (x86)\Intellect). The idb.exe utility dialog box will be displayed.

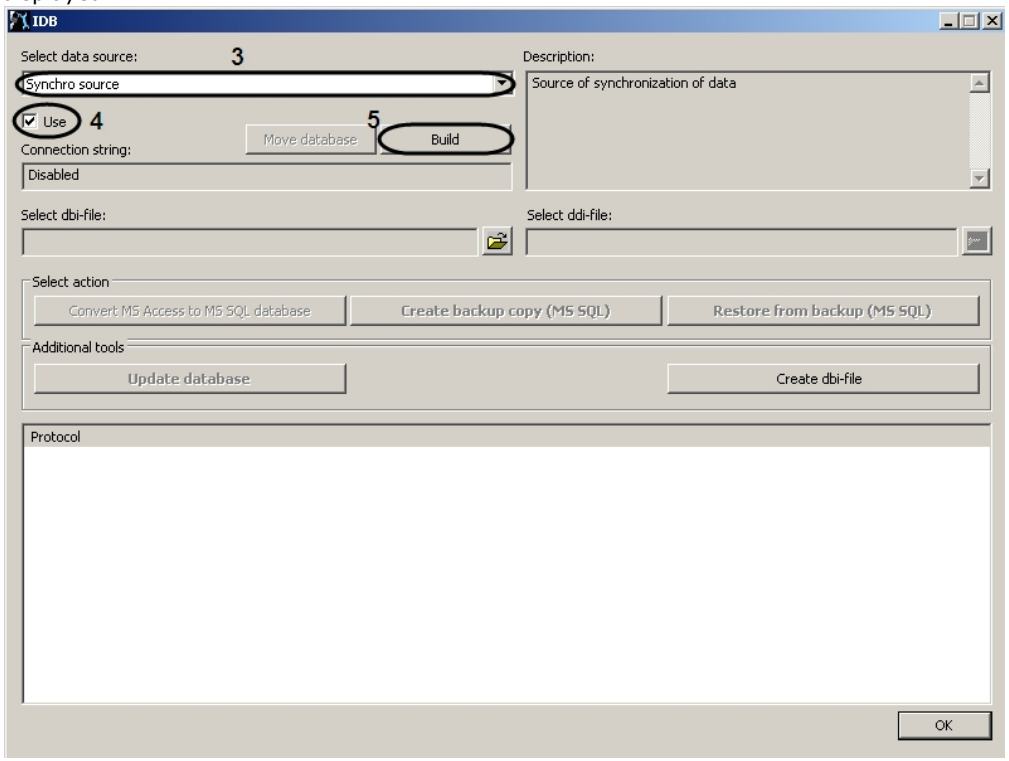

3. Select the **Synchro source** item from the **Select source database** list.
4. Set the **Use** checkbox.
5. Click **Build**.
6. The **Data link properties** dialog box is displayed. Go to the **Provider** tab in the **Data link properties** dialog box.

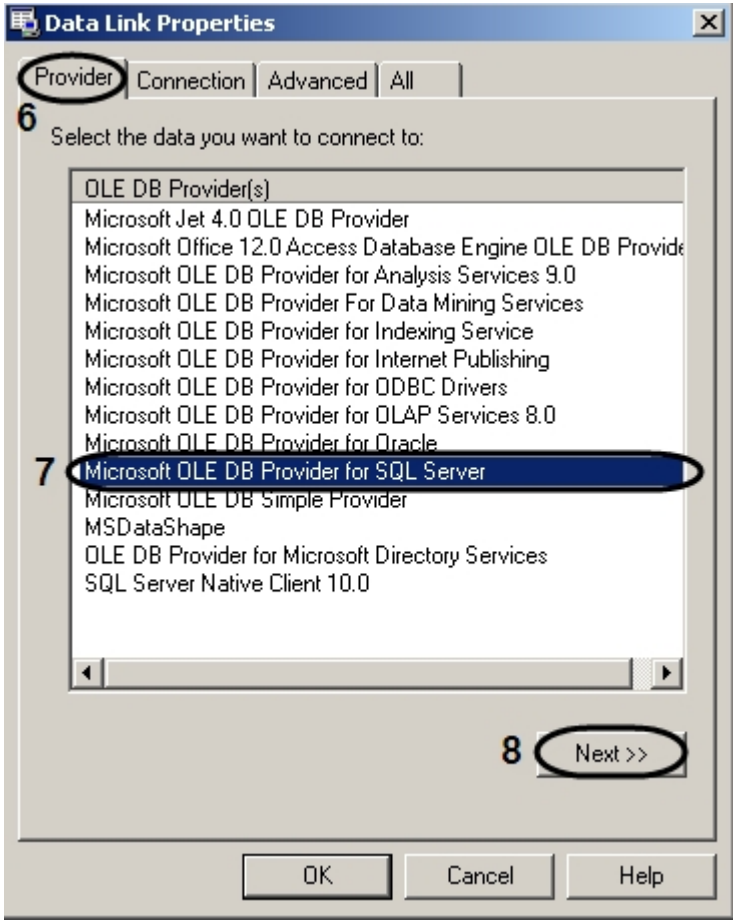

7. Select **Microsoft OLE DB Provider for SQL Server** from the **OLE DB Provider(s)** list.
8. Click **Next**.
9. As soon as the **Next** button is clicked, there is automatic going to the **Connection** tab.

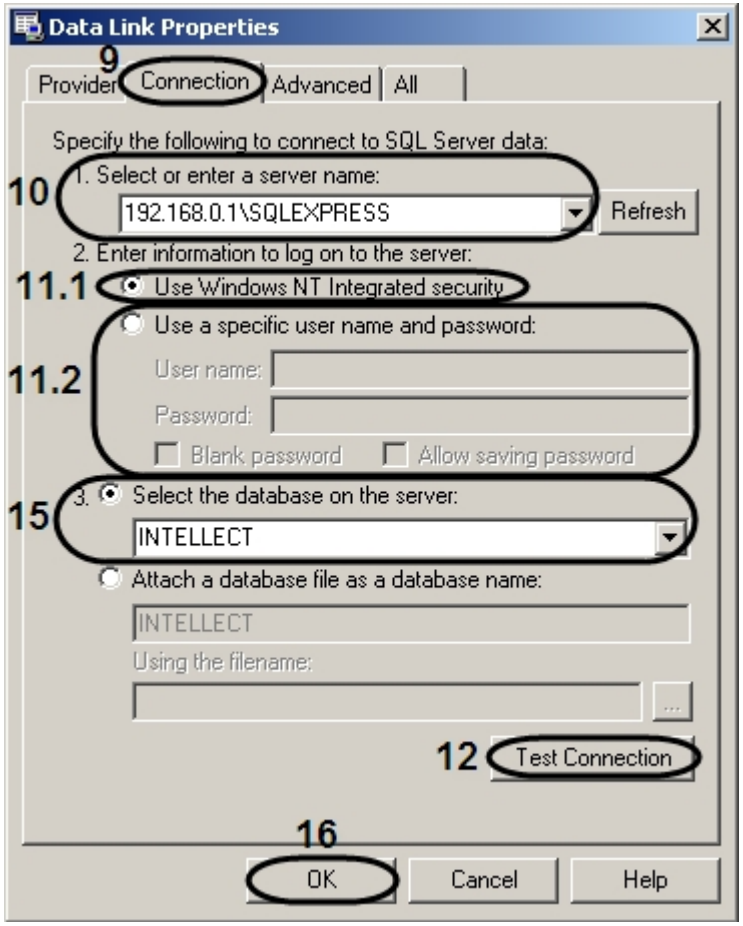

10. In the **1.Select or enter a server name** select from the list or input manually the address of MS SQL server containing the database that is to be used as a source to sync with the current database.
11. The **2.Enter information to log on to the server** group is used to enter the type and authentication parameters of the MS SQL server connection. MS SQL server authentication is performed through the user account, authorized in the Windows OS, or by user name (login) and password that protect the MS SQL server connection. The method and parameters of authentication at the MS SQL server are set during MS SQL server installation.
    Different parameters need to be entered, with different authentication techniques for MS SQL server connection:
    a. If MS SQL server authentication is performed through a user's Windows OS account, switch to to the **Use Windows NT Integrated security** position. The user's current account on the computer, from which the synchronization is performed, should be logged into the computer with MS SQL server and the database to be synced with.
    b. If MS SQL server authentication is performed through user login and password, follow the sequence:
        i. switch to the **Use a specific user name and password** position;
        ii. in the **User name** field: enter the user name (login) to connect to the MS SQL server.
        iii. if access to the MS SQL server is password protected, remove the **Blank password** checkbox and enter the database access password into the **Password** field.
12. Click **Test Connection**.
13. If the MS SQL server was successfully connected, the "Test connection succeeded" message is displayed.

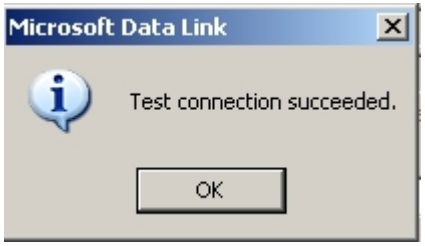

Click **OK** to close the window.

14. If the MS SQL server name and/or authentication parameters of MS SQL server connection were entered inaccurately, the error message will appear.

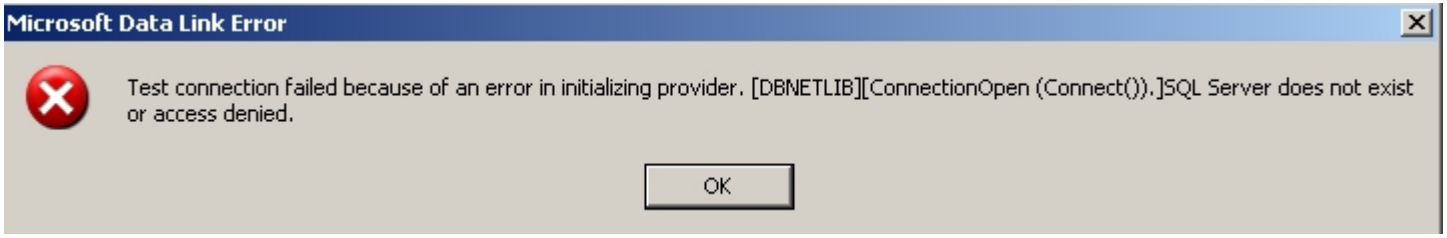

Click **OK** to close the window. Then enter the correct password and try MS SQL server connection again.

15. From the **Select the database on the server** list choose the name of the database to be synced with the current base.
16. Click **OK** in the **Data link properties** dialog box. The window will close.
17. Click **OK** in the right bottom corner of the idb.exe utility window.

Database synchronization setup is completed.

Requirements for TCP/IP network working of database synchronization functionality

Stored procedures for adding or deleting a large number of cameras

If lots of **Camera** objects are to be created or deleted, this can be done using dbo.spCopyCamera and dbo.spDeleteCameras stored procedures correspondingly. Run stored procedures in SQL Server Management Studio as follows:

1. Run SQL Server Management Studio (see Viewing INTELLECT™ software database).

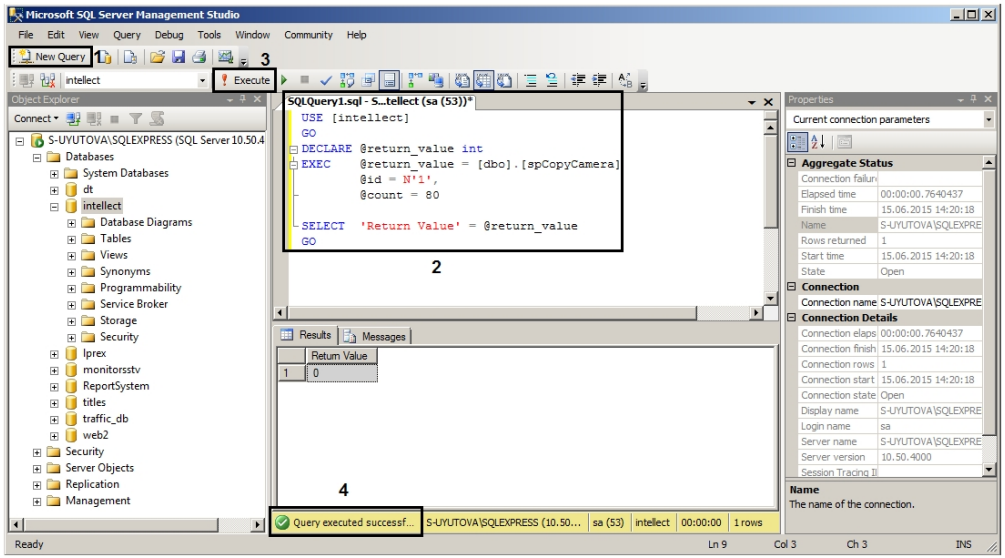

2. Click the **New Query** button (1).
3. Specify the SQL query (2, see examples below).
4. Click the **Execute** button (3). If the query is executed successfully, then the corresponding message appears at the bottom of the window (4).

You can find examples of using stored procedures below.

1. Take Camera 1 as an example and create 80 cameras with the same settings as Camera 1 has.

```
USE [intellect]
GO
DECLARE @return_value int
EXEC    @return_value = [dbo].[spCopyCamera]
            @id = N'1',
            @count = 80

SELECT  'Return Value' = @return_value
GO
```

2. Delete cameras from 3 to 33.

```
USE [intellect]
GO

DECLARE @return_value int

EXEC    @return_value = [dbo].[spDeleteCameras]
            @fromId = 3,
            @toId = 33

SELECT  'Return Value' = @return_value

GO
```

Appendix 5. Updating Java time zones for proper operation with archive in iOS client

Issues affecting the ability to access archive video from the iOS client may occur due to changes in Russian time zones.

These issues are due to discrepancies in how Windows and Java handle time zones. The inconsistency is only indirectly related to Intellect and will be solved in the next official Java release.

As a temporary workaround, perform the following actions:

1. Quit *Intellect*.
2. Update Java to the latest version from the official website http://www.oracle.com/.
3. Download the update tzdata2014i.1.4.9, or newer, for Java time zones

   Note.
   See the official site for details on the update http://www.oracle.com/technetwork/java/javase/tzdata-versions-138805.html?ssSourceSiteId=ocomen).
   Download the utility for updating time zones at http://www.oracle.com/technetwork/java/javase/downloads/tzupdater-download-513681.html
4. Update Java time zones with the help of tzdata2014i.1.4.9 (or newer). To do this, you must:

   a. Copy tzupdater.jar from downloaded tzupdater-1_4_9-2014i.zip to the folder JRE_HOME /bin (where JRE_HOME represents your Java install directory).
   b. In the command line, run the following command with administrator rights:
      java -jar tzupdater.jar -u -v

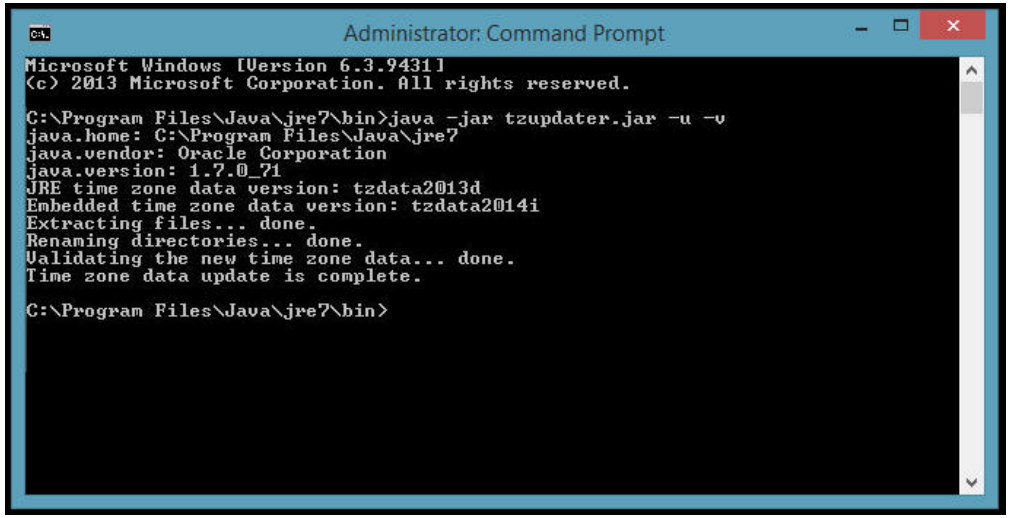

If the update is successful, you will view a message: "Time zone data update is complete ".