



Guide for configuring and working with the Kaba Exos 9300 integration module

ACFA PSIM 1.1

Last update 10/22/2024

Table of Contents

1 Introduction into the Guide for configuring and working with the Kaba Exos 9300 integration module	3
1.1 Purpose of the document	3
1.2 General information about the Kaba Exos 9300 integration module	3
2 Supported software and licensing of the Kaba Exos 9300 integration module....	4
3 Configuring the Kaba Exos 9300 integration module.....	5
3.1 Configuring the parent object of the Kaba Exos 9300 integration module.....	5
4 Working with the Kaba Exos 9300 integration module	7
4.1 General information about working with the Kaba Exos 9300 integration module	7
4.2 Managing the parent object of the Kaba Exos 9300 integration module	7
4.3 Managing the passage way of the Kaba Exos 9300 integration module	7
4.4 Managing the Device, Registration Unit, Frontserver, Port, Sub Device, Input, Output objects of the Kaba Exos 9300 integration module	8

1 Introduction into the Guide for configuring and working with the Kaba Exos 9300 integration module

On the page:

- Purpose of the document
- General information about the Kaba Exos 9300 integration module

1.1 Purpose of the document

The *Guide for configuring and working with the Kaba Exos 9300 integration module* is a reference and information manual and is intended for configuration specialists and operators of the *Kaba Exos 9300* integration module. This module is a part of the access control system (ACS) implemented on the basis of *ACFA PSIM*.

The Guide has the following information:

1. General information about the *Kaba Exos 9300* integration module.
2. Configuring the *Kaba Exos 9300* integration module.
3. Working with the *Kaba Exos 9300* integration module.

1.2 General information about the Kaba Exos 9300 integration module

The *Kaba Exos 9300* integration module is a part of the ACS implemented on the basis of *ACFA PSIM* and is used to monitor and control the devices of the *Kaba Exos 9300* ACS (manufacturer—dormakaba Canada Inc). You cannot configure the hardware of the *Kaba Exos 9300* integration module in *ACFA PSIM*.

Before working with the *Kaba Exos 9300* integration module, you must do the following:

1. Install the *Kaba Exos 9300* ACS hardware on the protected facility (see the *Kaba Exos 9300* ACS official reference documentation).
2. Configure the *Kaba Exos 9300* ACS in the manufacturer's software (see the official reference documentation).
3. Connect the *Kaba Exos 9300* ACS to the Server.

2 Supported software and licensing of the Kaba Exos 9300 integration module

Manufacturer	dormakaba Canada Inc Address: 901 Burns St., E. Whitby, Ontario Canada L1NOE6 Phone: 888-539-7226 Website: https://www.dormakaba.us Email: eadorders.ca@dormakaba.com
Type of integration	SOFT-SOFT

Supported software

Software	Purpose
Kaba Exos 9300 version 4.3.1. Compatibility with other versions of the Kaba Exos 9300 software isn't guaranteed	Access Control Software

Module licensing


Kaba Exos Passage Way is licensed as ACFAReader.

3 Configuring the Kaba Exos 9300 integration module


3.1 Configuring the parent object of the Kaba Exos 9300 integration module

To configure the *Kaba Exos 9300* parent object, do the following:

1. Go to the settings panel of the **Kaba Exos 9300** object that is created on the basis of the **Computer** object on the **Hardware** tab of the **System settings** window.

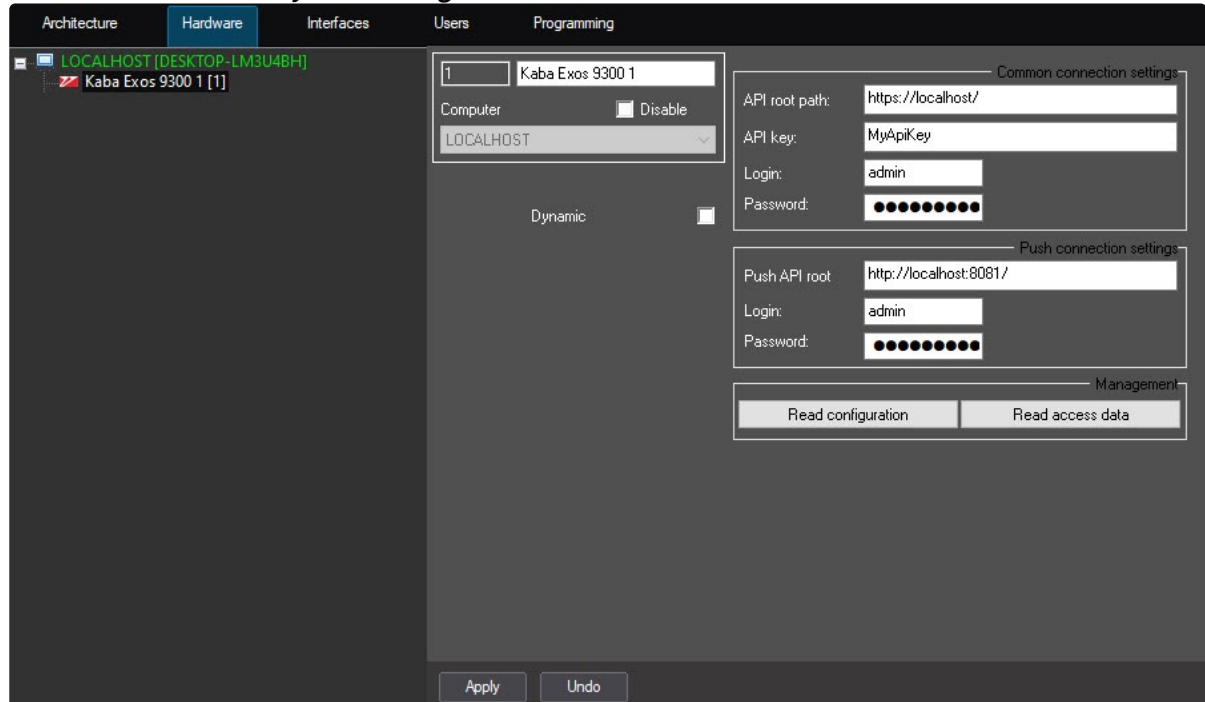

2. Enter the common connection settings specified in the manufacturer's software.
 - a. In the **API root path** field, enter the host name of the *Kaba Exos 9300* connection.
 - b. In the **API key** field, enter the API key of the *Kaba Exos 9300*.
 - c. In the **Login** field, enter the username of the *Kaba Exos 9300*.
 - d. In the **Password** field, enter the user ID of the *Kaba Exos 9300* as the password.
3. Enter the push connection settings specified in the manufacturer's software.
 - a. In the **Push API root** field, enter the host name of the *Kaba Exos 9300* push connection containing the connection port number written with a colon.
 - b. In the **Login** field, enter the username of the *Kaba Exos 9300*.
 - c. In the **Password** field, enter the user ID of the *Kaba Exos 9300* as the password.
4. Click the **Apply** button to save the connection settings.
5. Click the **Read configuration** button to read the configuration.
A hardware tree will be built:

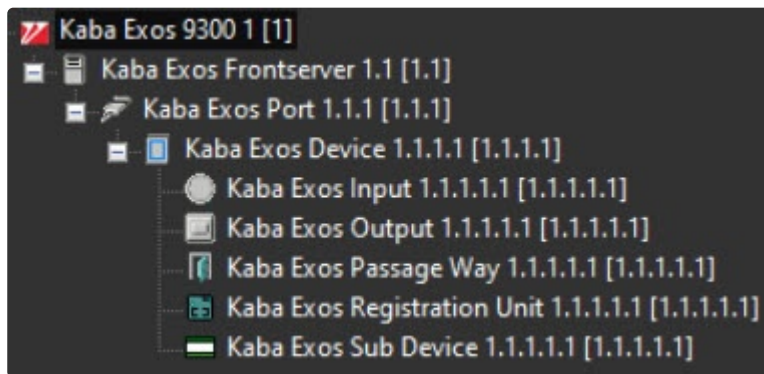

6. Click the **Read access data** button to read the user access data of the *Kaba Exos 9300* and save it to the *Access Manager*.

Configuration of the *Kaba Exos 9300* parent object is complete.

4 Working with the Kaba Exos 9300 integration module

4.1 General information about working with the Kaba Exos 9300 integration module

The following interface objects are used to work with the *Kaba Exos 9300* integration module:

1. **Map.**
2. **Event Viewer.**



For the information on configuring these interface objects, see the *Axxon PSIM Administrator's Guide*.

For the information on working with these interface objects, see the *Axxon PSIM Operator's Guide*.

4.2 Managing the parent object of the Kaba Exos 9300 integration module


You cannot manage the parent object of the *Kaba Exos 9300* integration module in the **Map** window.

The parent object can have the following states:

	Connected
	Disconnected

4.3 Managing the passage way of the Kaba Exos 9300 integration module

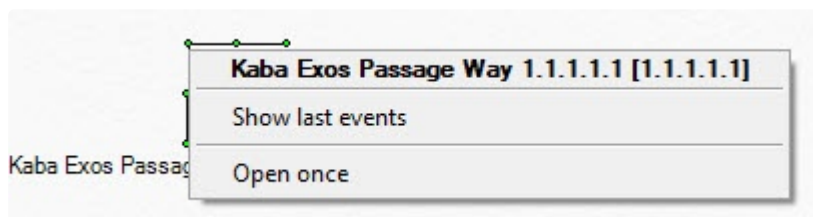

You can manage the passage way of the *Kaba Exos 9300* integration module in the **Map** window using the menu of the **Kaba Exos Passage Way** object.



Command to manage the passage way of the *Kaba Exos 9300* integration module:

- Open once—open the passage way once.



The passage way of the *Kaba Exos 9300* integration module can have the following states:

	Disconnected
	Connected

4.4 Managing the Device, Registration Unit, Frontserver, Port, Sub Device, Input, Output objects of the Kaba Exos 9300 integration module

You cannot manage the **Kaba Exos Device, Kaba Exo Registration Unit, Kaba Exos Frontserver, Kaba Exos Port, Kaba Exos Sub Device, Kaba Exos Input, Kaba Exos Output** objects of the *Kaba Exos 9300* integration module in the **Map** window.

The objects can have the following states:

	Connected
	Disconnected